

# OPP Board Serial Interface Interface Document

(Project: BrdSerIntf)

Project # : Not applicable

P/N: Not applicable

Rev 0.8

This program is free software: you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation, either version 3 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program. If not, see <<http://www.gnu.org/licenses/>>.

	<b>PREPARED:</b>	<b>APPROVAL: LEAD ENGINEER</b>	<b>APPROVAL: ENGINEERING MANAGER</b>
<b>NAME</b>	Hugh Spahr		
<b>DATE</b>			

## Revision History

Version	Primary Author(s)	Description of Version	Date Completed
0.1	Hugh Spahr	Initial version	11/08/13
0.2	Hugh Spahr	Added save/erase configuration	12/21/13
0.3	Hugh Spahr	Added pictures of cards to locate headers. Added wiring diagram for solenoid card.	01/04/14
0.4	Hugh Spahr	Added new commands for Gen2 hardware	09/28/15
0.5	Hugh Spahr	Removed CRC from Inventory command	11/19/15
0.6	Hugh Spahr	Added Incandescent commands. Added num pixels to set neopixel color table command.	12/04/15
0.7	Hugh Spahr	Removed first OPP hardware commands to make the document more readable. (If need to see those commands, version 0.6 is the last version that includes them.) Fixed bit position description for Neopixel and incandescent commands to be more logical. Added wing board wiring pictures.	12/28/15
0.8	Hugh Spahr	Added INCAND_SET_ON_OFF command.	01/26/16
0.9	Hugh Spahr	Added CONFIG_IND_SOL, CONFIG_IND_INP, and SET_IND_NEO	02/02/16

## Table of Contents

<b>1Purpose.....</b>	<b>5</b>
<b>2Product Overview.....</b>	<b>5</b>
<b>3Applicable Documents.....</b>	<b>5</b>
<b>4Terms, Definitions &amp; Acronyms.....</b>	<b>5</b>
<b>5Serial Interface Overview.....</b>	<b>5</b>
<b>5.1Addressing.....</b>	<b>6</b>
<b>6Serintf.h.....</b>	<b>6</b>
<b>7Commands.....</b>	<b>8</b>
<b>7.1Get Serial Number, 0x00.....</b>	<b>8</b>
7.1.1Gen2 example.....	8
<b>7.2Get Product ID, 0x01.....</b>	<b>8</b>
7.2.1Gen2 example.....	9
<b>7.3Get Version, 0x02.....</b>	<b>9</b>
7.3.1Gen2 example.....	9
<b>7.4Set Serial Number, 0x03.....</b>	<b>9</b>
7.4.1Gen2 example.....	9
<b>7.5Reset, 0x04.....</b>	<b>9</b>
7.5.1Gen2 example.....	9
<b>7.6Go Boot, 0x05.....</b>	<b>10</b>
7.6.1Gen2 example.....	10
<b>7.7Configure Solenoid Board, 0x06.....</b>	<b>10</b>
7.7.1Gen2 example.....	10
<b>7.8Kick Solenoids, 0x07.....</b>	<b>11</b>
7.8.1Gen2 example.....	11
<b>7.9Read Gen2 Inputs, 0x08.....</b>	<b>11</b>
7.9.1Gen2 example.....	11
<b>7.10Configure Inputs Board, 0x09.....</b>	<b>12</b>
7.10.1Gen2 example.....	12
<b>7.11Save Cfg, 0x0b.....</b>	<b>12</b>
7.11.1Gen2 example.....	12
<b>7.12Erase Cfg, 0x0c.....</b>	<b>12</b>
7.12.1Gen2 example.....	13
<b>7.13Get Gen2 Cfg, 0x0d.....</b>	<b>13</b>
<b>7.14Set Gen2 Cfg, 0x0e.....</b>	<b>13</b>
<b>7.15Change Neopixel Cmd, 0x0f.....</b>	<b>13</b>
<b>7.16Change Neopixel Color, 0x10.....</b>	<b>14</b>
<b>7.17Change Neopixel Color Table, 0x11.....</b>	<b>14</b>
<b>7.18Set Neopixel Color Table, 0x12.....</b>	<b>14</b>
<b>7.19Incandescent Command, 0x13.....</b>	<b>15</b>
<b>7.20Inventory Command, 0xf0.....</b>	<b>15</b>
7.20.1Gen2 example.....	15

**7.21End of Message, 0xff..... 15**

**8CRC 8 Generation..... 16**

**9Board Connector Positions ..... 16**

9.1Solenoid Wing..... 16

9.2Incandescent Wing..... 17

9.3Input/Neo Wing..... 18

9.4Interface Wing..... 19

9.5RS232 Interface..... 20

**10Wiring..... 21**

10.1Solenoid Card Wiring..... 21

10.2Input Card Wiring..... 21

## 1 Purpose

The OPP Board Serial Interface provides a description of the serial interface for the Open Pinball Project board serial interface. The serial interface document includes the following wing boards:

- Gen2 Solenoid Driver Wing (Product ID 1013)
- Gen2 Incandescent Wing (Product ID 1014 and 1017)
- Gen2 Input/Neo Wing for support of Neopixels (Product ID 1015)
- Gen2 Interface Wing (Product ID 1016)

## 2 Product Overview

BrdSerIntf contains the serial interface for OPP boards. This document describes the APIs

## 3 Applicable Documents

None

## 4 Terms, Definitions & Acronyms

<b>API</b>	Application Program Interface
<b>EOM</b>	End of Message (0xff)
<b>ICD</b>	Interface Control Document
<b>OPP</b>	Open Pinball Project
<b>PWM</b>	Pulse Width Modulation
<b>MPF</b>	Mission Pinball Framework

## 5 Serial Interface Overview

BrdSerIntf port for second generation cards is 115.2 kbps, 8, N, 1. Since the two generations of cards run at different baud rates, they can not be combined on a single serial chain. During the setup, a command is sent to get an inventory of cards that are on the serial interface chain. The cards are daisy chained together in the same way that FDDI or token ring boards are linked together. The host sends to the first card receiver which transmits to the second card's receiver. This continues until the last card where a jumper is installed so that the transmitter of the last card is connected to the host receiver.

Each card is given an address which is automatically discovered during the setup command. The host uses the address to send individual commands to cards.

All commands use card addresses to indicate the destination of the command, and EOM to indicate the end of the command. The exception to this is the inventory command where cards receive the command, and wait to see the end of message. The card then inserts its address before the transmitting the EOM.

After the inventory command is run, the cards are configured. The host then sends a Get Gen2 Cfg message to discover the wing board configuration for each card. The configuration of the boards is saved in non-volatile memory so they operate independently of the host. The cards do all of the real time processing themselves without the intervention of the host. The host only polls the cards to get status, such as if a solenoid input switch was activated.

Gen2 commands append a CRC8 to the end of transfers which matches the CCITT-CRC8. The generator polynomial is  $x^8+x^2+x+1$  with an initial value of 0xff. This is true for all commands except for the initial inventory command.

## 5.1 Addressing

The most significant four bits of the address indicate card type, while the least significant four bits of the address byte indicate the instance of the card. The first card starts from 0, and each card increases its address by one.

Gen2 cards have the most significant bits set to 2 (CARD\_ID\_GEN2\_CARD).

Examples:

First second gen card: 0x20

Third second gen card: 0x22

## 6 Serintf.h

The serial interface file contains the structures used to interface with the solenoid driver boards and input boards. If programming using the C programming language, this file can be included to get the necessary defines.

```
/* Each command starts with the Card ID except for inventory and EOM. Next comes
 * the command, then any data.
 */
typedef enum
{
    RS232I_GET_SER_NUM          = 0x00,
    RS232I_GET_PROD_ID         = 0x01,
    RS232I_GET_VERS             = 0x02,
    RS232I_SET_SER_NUM          = 0x03,
    RS232I_RESET                = 0x04,
    RS232I_GO_BOOT              = 0x05,
    RS232I_CONFIG_SOL           = 0x06,      /* For each solenoid, CFG_SOL_TYPE,
                                           * Initial kick, and Duty Cycle.
                                           */
    RS232I_KICK_SOL             = 0x07,      /* Value, mask */
    RS232I_READ_SOL_INP         = 0x08,      /* Data */
    RS232I_CONFIG_INP           = 0x09,      /* For each input, CFG_INP_TYPE */
    RS232I_READ_INP_BRD         = 0x0a,      /* Data, data */
    RS232I_SAVE_CFG             = 0x0b,
    RS232I_ERASE_CFG            = 0x0c,
    RS232I_GET_GEN2_CFG         = 0x0d,      /* For each wing, GEN2_WING_TYPE */
    RS232I_SET_GEN2_CFG         = 0x0e,      /* For each wing, GEN2_WING_TYPE */
    RS232I_CHNG_NEO_CMD         = 0x0f,
    RS232I_CHNG_NEO_COLOR       = 0x10,
    RS232I_CHNG_NEO_COLOR_TBL   = 0x11,
    RS232I_SET_NEO_COLOR_TBL    = 0x12,
    RS232I_INCAND_CMD           = 0x13,
    RS232I_CONFIG_IND_SOL       = 0x14,
    RS232I_CONFIG_IND_INP       = 0x15,
    RS232I_SET_IND_NEO          = 0x16,
    RS232I_NUM_CMDS,

    RS232I_INVENTORY            = 0xf0,      /* Each card adds byte for card type */
}
```

```

    RS232I_EOM                                = 0xff,
} RS232I_CMD_E;

#ifndef RS232I_INSTANTIATE
extern
#endif
const U8                                CMD_LEN[RS232I_NUM_CMDS]
#ifdef RS232I_INSTANTIATE
={ 4, /* RS232I_GET_SER_NUM */                4, /* RS232I_GET_PROD_ID */
  4, /* RS232I_GET_VERS */                    4, /* RS232I_SET_SER_NUM */
  0, /* RS232I_RESET */                      0, /* RS232I_GO_BOOT */
  24, /* RS232I_CONFIG_SOL */                2, /* RS232I_KICK_SOL */
  1, /* RS232I_READ_SOL_INP */               16, /* RS232I_CONFIG_INP */
  2, /* RS232I_READ_INP_BRD */               0, /* RS232I_SAVE_CFG */
  0, /* RS232I_ERASE_CFG */                  4, /* RS232I_GET_GEN2_CFG */
  4, /* RS232I_SET_GEN2_CFG */               6, /* RS232I_CHNG_NEO_CMD */
  6, /* RS232I_CHNG_NEO_COLOR */            4, /* RS232I_CHNG_NEO_COLOR_TBL */
  97, /* RS232I_SET_NEO_COLOR_TBL */        5, /* RS232I_INCAND_CMD */
  4, /* RS232I_CONFIG_IND_SOL */            2, /* RS232I_CONFIG_IND_INP */
  2, /* RS232I_SET_IND_NEO */
}
#endif
;
/* Note: This is the length of the cmd excluding card ID and cmd at the
 * beginning and CRC8 at the end.
 */

typedef enum
{
    CARD_ID_CARD_NUM_MASK                    = 0x0f,

    CARD_ID_TYPE_MASK                        = 0xf0,
    CARD_ID_SOL_CARD                        = 0x00,
    CARD_ID_INP_CARD                        = 0x10,
    CARD_ID_GEN2_CARD                       = 0x20,

} RS232I_CARD_ID_E;

typedef enum
{
    USE_SWITCH                              = 0x01,
    AUTO_CLR                                = 0x02,
} RS232I_CFG_SOL_TYPE_E;

typedef enum
{
    DUTY_CYCLE_MASK                         = 0x0f, /* lsb 4 bits are duty cycle */
    MIN_OFF_MASK                            = 0x70,
} RS232I_DUTY_E;
/* Min off time is 0-7 times the initial kick time. If initial kick
 * is 20 ms and min off is 5, the solenoid will be forced off for 100 ms
 */

typedef enum
{
    STATE_INPUT                             = 0x00,
    FALL_EDGE                               = 0x01,
    RISE_EDGE                               = 0x02,

```

```

} RS232I_CFG_INP_TYPE_E;

typedef enum
{
    WING_UNUSED                = 0x00,
    WING_SOL                   = 0x01,
    WING_INP                   = 0x02,
    WING_INCAND                = 0x03,
    WING_SW_MATRIX_OUT        = 0x04,
    WING_SW_MATRIX_IN         = 0x05,
    WING_NEO                   = 0x06,
} RS232I_GEN2_WING_TYPE_E;

typedef enum
{
    NEOCMD_BLINK_SLOW          = 0x00,
    NEOCMD_BLINK_FAST          = 0x20,
    NEOCMD_FADE_SLOW           = 0x40,
    NEOCMD_FADE_FAST           = 0x60,
    NEOCMD_ON                   = 0x80,    /* overrides other cmds */
    NEOCMD_MASK                 = 0xe0,
    NEOCMD_COLOR_TBL_MASK      = 0x1f,
} RS232I_GEN2_NEO_CMD_E;

typedef enum
{
    INCAND_ROT_LEFT            = 0x00,
    INCAND_ROT_RIGHT           = 0x01,
    INCAND_LED_ON               = 0x02,
    INCAND_LED_OFF              = 0x03,
    INCAND_LED_BLINK_SLOW       = 0x04,
    INCAND_LED_BLINK_FAST       = 0x05,
    INCAND_LED_BLINK_OFF        = 0x06,
    INCAND_LED_SET_ON_OFF       = 0x07,

    INCAND_SET                  = 0x80,
    INCAND_SET_ON               = 0x01,
    INCAND_SET_BLINK_SLOW       = 0x02,
    INCAND_SET_BLINK_FAST       = 0x04,
} RS232I_GEN2_INCAND_CMD_E;

```

## 7 Commands

The following section describes all the commands and gives examples. All second generation a CRC8 to the end of the command/response except for the inventory command.

### 7.1 Get Serial Number, 0x00

CardAddr + 0x00 + Serial number (4 bytes) + CRC8

#### 7.1.1 Gen2 example

Example: Host queries the gen2 card (addr 0x22) for its serial number. The card responds with the serial number 0x01234567.

Gen2 Cmd: 0x22 | 0x00 | 0x00 | 0x00 | 0x00 | 0x00 | 0xc6 | 0xff



Gen2 Resp: 0x22 | 0x00 | 0x01 | 0x23 | 0x45 | 0x67 | 0x06 | 0xff

## 7.2 Get Product ID, 0x01

CardAddr + 0x01 + Product ID (4 bytes) + CRC8

Note: Gen2 cards always return the configuration of the wing boards that identifies the capabilities of the board.

### 7.2.1 Gen2 example

Example: Host queries the first Gen2 card (addr 0x20) for its product ID. Card responds the Port A has a NeoPixel board, Port B is an input board, and Port C and D have Solenoid boards.

Gen2 Cmd: 0x20 | 0x01 | 0x00 | 0x00 | 0x00 | 0x00 | 0xf6 | 0xff

Gen2 Resp: 0x20 | 0x01 | 0x06 | 0x02 | 0x01 | 0x01 | 0x46 | 0xff

## 7.3 Get Version, 0x02

Get the firmware version that is running on a card. The firmware version is broken into a byte representing the major version, minor version, sub version and engineering version.

CardAddr + 0x02 + Firmware Version (4 bytes) + CRC8

### 7.3.1 Gen2 example

Example: Host queries the third Gen2 card (addr 0x22) for its version number. The card responds that it is running version 1.5.6.0 (major version 1, minor version 5, subversion 6, and engineering version 0).

Command: 0x22 | 0x02 | 0x00 | 0x00 | 0x00 | 0x00 | 0x50 | 0xff

Response: 0x22 | 0x02 | 0x01 | 0x05 | 0x06 | 0x00 | 0xf8 | 0xff.

## 7.4 Set Serial Number, 0x03

CardAddr + 0x03 + Serial number (4 bytes) + CRC8

### 7.4.1 Gen2 example

Example: Host sets the serial number of the first Gen2 card (addr 0x20) to 32 (0x20 in hex). If the serial number has already been set, the card responds with the current serial number of the card. If the serial number can be programmed, it responds with the serial number found in the command.

Command: 0x20 | 0x03 | 0x00 | 0x00 | 0x00 | 0x20 | 0xd2 | 0xff

Response: 0x20 | 0x03 | 0x00 | 0x00 | 0x00 | 0x20 | 0xd2 | 0xff

## 7.5 Reset, 0x04

CardAddr + 0x04 + CRC8

### 7.5.1 Gen2 example

Example: Reset the fifth Gen2 card (addr 0x24). This resets the card and an inventory command must be resent to reconfigure the card's address.

Command: 0x24 | 0x04 | 0x31

Response: No response since the card resets

## 7.6 Go Boot, 0x05

CardAddr + 0x05 + CRC8

### 7.6.1 Gen2 example

Example: Reset the Gen2 card (addr 0x20). This resets the card and keeps the card in the bootloader so that the card firmware can be updated.

Command: 0x20 | 0x05 | 0x62

Response: No response since the card resets. After the reset the card remains in the bootloader. Cards should only be updated when connected directly to a host without any other cards on a chain.

## 7.7 Configure Solenoid Board, 0x06

Each solenoid is configured using three bytes. The first byte is the type of solenoid which is a bit field. (0x01, USE\_SWITCH and 0x02, AUTO\_CLR). If the solenoid is configured to use the switch input, when the switch input is closed, the solenoid fires. If the solenoid is configured to auto clear, the host can kick the solenoid using the kick which is automatically cleared, and the solenoid can be kicked another time without sending a command to clear the kick.

The second byte is the initial kick for the solenoid in milliseconds. If the initial kick is supposed to be 100 ms, the byte should be 0x64.

The third byte is broken into the duty cycle to “hold” the solenoid active, and the minimum off time. The period for the hold is 16 ms. The least significant four bits indicate the amount of “on” time during the 16 ms period. To keep the solenoid on for 50%, during the hold period, the four bits should be set to 0x08. This is 8 ms/16 ms or 50%. For 25% hold, set the value to 0x04. This is 4 ms/16 ms or 25%. The maximum hold strength is 87.5%.

The minimum off time is calculated using the least significant three bits of the most significant nibble of the third byte.  $((3^{\text{rd}} \text{ byte} \& 0x70) \gg 4)$ . These three bits are multiplied by the initial kick time to determine the minimum off time for the solenoid. If the solenoid is using the switch contact, and the initial kick time is 105 ms, and the minimum off time is 315 ms, and the duty cycle is 75%, the configuration bytes would be 0x01 0x69 0x3c.

Note: Unused solenoids should have their parameters configured to 0x00 | 0x00 | 0x00 to disable them. With Gen2, only wing boards configured/populated as solenoids will use the solenoid parameters. Solenoid parameters for wing boards that aren't solenoid wings will be ignored.

### 7.7.1 Gen2 example

CardAddr + 0x06 + Solenoid Parameters (16 sets of parameters, 3 bytes each or 48 bytes total) + CRC8

Example: Configure the first Gen2 card (addr 0x20). The first four solenoids are configured as flippers, the next four are configured as pop bumpers, the next four are not used, and the last four are configured as VUKs. The flippers are configured with an initial kick of 48 ms and 25% hold. The pop bumpers have initial kicks of 48 ms and no hold. The VUK have initial kicks of 100 ms and no hold.

Command: 0x20 | 0x06 | 0x01 | 0x30 | 0x04 | 0x01 | 0x30 | 0x04 | 0x01 | 0x30 | 0x04 | 0x01 | 0x30 | 0x04 | 0x01 | 0x30 | 0x00 | 0x01 | 0x30 | 0x00 | 0x01 | 0x30 | 0x00 | 0x01 | 0x30 | 0x00 | 0x00 | 0x00 | 0x00 | 0x00 | 0x00 | 0x00 | 0x00 | 0x00 | 0x00 | 0x01 | 0x64 | 0x00 | 0x01 | 0x64 | 0x00 | 0x01 | 0x64 | 0x00 | 0xc4

Response: The card removes the command from the communication stream.

## 7.8 Kick Solenoids, 0x07

Command for the host to kick the solenoids. The solenoid bits are active high. The mask bits allow individual or groups of solenoids to be turned on and off. If the solenoid is configured to auto clear, after the solenoid kicks, the bit is automatically cleared so a second command isn't needed to kick it again. Solenoids to kick bytes and mask are 16 bit quantities.

### 7.8.1 Gen2 example

CardAddr + 0x07 + Solenoids To Kick (2 bytes) + Mask (2 bytes) + CRC8

Example: Kick the third Gen2 card (addr 0x22). Solenoid wing cards are on Port A and Port D. Turn on first and last solenoids for Port A wing card. Turn off second solenoid on Port D wing board.

Command: 0x22 | 0x07 | 0x00 | 0x09 | 0x20 | 0x09 | 0x44

Response: The card removes the command from the communication stream.

## 7.9 Read Gen2 Inputs, 0x08

Gen2 cards use a single command to read inputs. It returns the inputs from both solenoids and input wing boards. Solenoid wing boards only populate the low nibble of the port byte.

Each solenoid card returns a byte listing if any new inputs have occurred since the last read input command. The command contains a blank data byte to be filled out by the card. Bits are numbered from right to left with bit 0 being 0x01.

### 7.9.1 Gen2 example

CardAddr + 0x08 + Data (4 bytes) + CRC8

Example: Read first Gen2 card (addr 0x20). Card has solenoids on Port A and Port D, and input boards on Port B and Port C. Solenoid on Port A has bits 0, 1, 3, solenoid on Port D has bit 2 set, input card on port B has 0, 1, 4, and 5 set, and input card on port C has 0, 3, 4, and 7 set.

Command: 0x20 | 0x08 | 0x00 | 0x00 | 0x00 | 0x00 | 0x8d

Response: 0x20 | 0x08 | 0x04 | 0x99 | 0x33 | 0x0b | 0xb1

## 7.10 Configure Inputs Board, 0x09

Each input is configured using one byte. Switches are typically active low since the input line has a pull up resistor, and the switch connects the input to ground. STATE\_INPUT returns the current value of the input. FALL\_EDGE returns a single '1' with the read input board command when the input changes from a high to low value. The '1' is held until the input is read. The next read input will return a '0' unless the input transitions from low to high, then low again. RISE\_EDGE returns a single '1' with the read input board command when the input changes from a low to high value. The '1' is held until the input is read. The next read input will return a '0' unless the input transitions from high to low, then high again.

Note: Unused inputs should have their parameters configured to 0x00. With Gen2, only wing boards configured/populated as inputs will use the input parameters. Input parameters for wing boards that aren't input wings will be ignored.

### 7.10.1 Gen2 example

CardAddr + 0x09 + Input Parameters (32 sets of parameters, 1 byte each or 32 bytes total) + CRC8

Example: Configure the first Gen2 card (addr 0x20) with input wing boards on Port B and Port C. Port B 8 inputs are STATE\_INPUTS, and Port C first 4 inputs are FALL\_EDGE, and last four inputs are RISE\_EDGE.

Command: 0x20 | 0x09 | 0x00 | 0x00 | 0x00 | 0x00 | 0x00 | 0x00 | 0x00 | 0x00 | 0x00 | 0x00 | 0x00 | 0x00 | 0x00 | 0x00 | 0x01 | 0x01 | 0x01 | 0x01 | 0x02 | 0x02 | 0x02 | 0x02 | 0x00 | 0x00 | 0x00 | 0x00 | 0x00 | 0x00 | 0x7f

Response: The card removes the command from the communication stream.

## 7.11 Save Cfg, 0x0b

CardAddr + 0x0b + CRC8

Save the current configuration to the card. The next time the card is powered, it will automatically be configured without need another configuration command.

### 7.11.1 Gen2 example

Example: Save the configuration to the first Gen2 card (addr 0x20)

Command: 0x20 | 0x0b | 0x48

Response: The card removes the command from the communication stream.

## 7.12 Erase Cfg, 0x0c

CardAddr + 0x0c + [CRC8 (Gen2 only)]

Clear the saved configuration. The next time the card is powered, it will need to be configured. Note: This command does not disable the current configuration.

### 7.12.1 Gen2 example

Example: Erase the configuration to the first Gen2 card (addr 0x20)

Command: 0x20 | 0x0c | 0x5d

Response: The card removes the command from the communication stream.

### 7.13 Get Gen2 Cfg, 0x0d

CardAddr + 0x0d + 0x00 + 0x00 + 0x00 + 0x00 + 0x49

Get the Gen2 configuration of the wing boards. Note: Wing boards are not discovered, but must be programmed using the Set Gen2 Cfg command. The configuration can be made persistent by using the Save Cfg command.

Example: Get the configuration to the second Gen2 card wing boards (addr 0x21). Card responds the Port A has a NeoPixel board, Port B is an input board, and Port C and D have Solenoid boards.

Command: 0x21 | 0x0d | 0x00 | 0x00 | 0x00 | 0x00 | 0x49

Response: 0x21 | 0x0d | 0x06 | 0x02 | 0x01 | 0x01 | 0xf9

### 7.14 Set Gen2 Cfg, 0x0e

CardAddr + 0x0e + Input Parameters (4 sets of parameters, 1 byte each or 4 bytes total) + CRC8

Set the Gen2 configuration of the wing boards. Note: The configuration can be made persistent by using the Save Cfg command.

Example: Set the configuration to the second Gen2 card wing boards (addr 0x21) with Port A as a NeoPixel board, Port B as an input board, and Port C and D as Solenoid boards.

Command: 0x21 | 0x0e | 0x06 | 0x02 | 0x01 | 0x01 | 0x5f

Response: The card removes the command from the communication stream.

### 7.15 Change Neopixel Cmd, 0x0f

CardAddr + 0x0f + NeoCmd + Offset + Mask (4 bytes) + CRC8

Change the Neopixel command to the masked Neopixels. The offset is the number of Neopixels from the start of the chain to change the command, and the mask can change up to 32 contiguous Neopixels. To change the first 8 Neopixels, the offset equals 0, and the first byte of the mask would be 0x000000ff.

Example: Set the Neopixel command to fast blink (0x20) on the first Gen2 board to light the fifth through fifteenth Neopixel. This command would be written either using an 0 offset and using an offset within the mask, or starting with offset 4, and masking the first ten bits.

Command: 0x20 | 0x0f | 0x20 | 0x00 | 0x00 | 0x00 | 0x7f | 0xf0 | 0xc8 or  
0x20 | 0x0f | 0x20 | 0x04 | 0x00 | 0x00 | 0x07 | 0xff | 0x60

Response: The card removes the command from the communication stream.

## 7.16 Change Neopixel Color, 0x10

CardAddr + 0x10 + NeoColor + Offset + Mask (4 bytes) + CRC8

Change the Neopixel color index to the masked Neopixels. Colors are indexed (0-31) into the color table to determine the actual color. The offset is the number of Neopixels from the start of the chain to change the command, and the mask can change up to 32 contiguous Neopixels. To change the first 8 Neopixels, the offset equals 0, and the first byte of the mask would be 0xff.

Example: Set the Neopixel color index to 5 on the first Gen2 board to light the fifth through fifteenth Neopixel. This command would be written either using an 0 offset and using an offset within the mask, or starting with offset 4, and masking the first ten bits.

Command: 0x20 | 0x10 | 0x05 | 0x00 | 0x00 | 0x00 | 0x7f | 0xf0 | 0x54 or  
0x20 | 0x10 | 0x05 | 0x04 | 0x00 | 0x00 | 0x07 | 0xff | 0xfc

Response: The card removes the command from the communication stream.

## 7.17 Change Neopixel Color Table, 0x11

CardAddr + 0x11 + Index + ColorBytes (3 bytes) + CRC8

Change a single entry in the Neopixel color table. Neopixels color entries are ordered: green byte, red byte, blue byte.

Example: Change the Neopixel color table entry index 12 to have green full on (0xff), red half on (0x80), and blue quarter on (0x40).

Command: 0x20 | 0x11 | 0x0c | 0xff | 0x80 | 0x40 | 0x76

Response: The card removes the command from the communication stream.

## 7.18 Set Neopixel Color Table, 0x12

CardAddr + 0x12 + ColorBytes (32 sets of parameters, 3 bytes each or 96 bytes total) + numPixels + CRC8

Change all the Neopixel color table entries. I picked random color values that are all different. I have no idea what colors these are except 0x00 0x00 0x00 is off, and 0xff 0xff 0xff is white. The number of pixels is a single byte at the end of the command with 64 pixels set in this command. Note: This

command takes nearly 10 ms to send, so it should be used sparingly or probably only when setting up the non-volatile memory configuration.

Command: 0x20 | 0x12 | 0x0c | 0x00 | 0x00 | 0x00 | 0xff | 0xff | 0xff | 0x40 | 0x00 | 0x00 | 0x80 | 0x00 | 0x00 | 0xc0 | 0x00 | 0x00 | 0xff | 0x00 | 0x00 | 0x00 | 0x40 | 0x00 | 0x00 | 0x80 | 0x00 | 0x00 | 0xc0 | 0x00 | 0x00 | 0xff | 0x40 | 0x40 | 0x00 | 0x80 | 0x80 | 0x00 | 0xc0 | 0xc0 | 0x00 | 0xff | 0xff | 0x00 | 0x00 | 0x40 | 0x40 | 0x00 | 0x80 | 0x80 | 0x00 | 0xc0 | 0xc0 | 0x00 | 0xff | 0xff | 0x40 | 0x00 | 0x40 | 0x80 | 0x00 | 0x80 | 0xc0 | 0x00 | 0xc0 | 0xff | 0x00 | 0xff | 0x40 | 0x40 | 0x40 | 0x80 | 0x80 | 0x80 | 0xc0 | 0xc0 | 0xc0 | 0xff | 0x80 | 0x40 | 0x80 | 0x40 | 0xff | 0x40 | 0xff | 0x80 | 0x40 | 0x7d

Response: The card removes the command from the communication stream.

## 7.19 Incandescent Command, 0x13

CardAddr + 0x13 + IncandCmd + Mask (4 bytes) + CRC8

Change the incandescent wing boards to turn on/off bulbs, make them blink slow/fast, or rotate the bulbs that are on. The mask contains the affected bulbs with the first byte received for wing 0. Blinking and on/off are independent so a bulb can be set to blink and on at the same time. The bulb being lit overrides the blinking. The rotate commands allow lane shifting to be easily implemented where all the lanes would be set to blink, and the completed lanes are set to lit. Pushing the flipper button would send a rotate command to rotate the on/off state of the inlane bulbs. The set on/off command clears all blinking masks, and uses the mask to turn bulbs on/off. (A one bit turns a bulb on while a zero bit turns a bulb off. This was implemented so MPF only needs to send a single command to turn set the state (on/off) of all the bulbs.)

The INCAND\_SET sub-command sets the state (both the on/off and the blink/no blink) in one command. It uses the INCAND\_SET bitfields to configure the bulb settings.

Example: On the first wing board light bulbs 0-3, and on the third wing board, light bulbs 0, 2, 4, 6.

Command: 0x20 | 0x13 | 0x02 | 0x00 | 0x55 | 0x00 | 0x0f | 0x0d

Example: Set all the bulbs on wing 3 to be on and blink rapidly. (In this case the bulbs will appear on, but if the bulb is commanded off using INCAND\_LED\_OFF, it will start blinking).

Command: 0x20 | 0x13 | 0x85 | 0xff | 0x00 | 0x00 | 0x00 | 0xab

Response: The card removes the command from the communication stream.

## 7.20 Configure Individual Solenoid, 0x14

CardAddr + 0x14 + SolIndex + SolenoidCfg (3 bytes) + CRC8

Change the configuration of a single solenoid. The index contains the index of the solenoid [0-15]. The solenoid configuration uses the same values as the configure solenoid command above.

Example: Configure the first Gen2 card (addr 0x20). Configure the third solenoid (wing 0, last solenoid) as a flipper.

Command: 0x20 | 0x14 | 0x03 | 0x01 | 0x30 | 0x04 | 0x9d

Response: The card removes the command from the communication stream.

## 7.21 Configure Individual Input, 0x15

CardAddr + 0x15 + InputIndex + InputCfg (1 byte) + CRC8

Change the configuration of a single input. The index contains the index of the input [0-31]. The input configuration uses the same values as the configure input command above.

Example: Configure the first Gen2 card (addr 0x20). Configure the ninth input (wing 1, 2<sup>nd</sup> input, or P1[1]) for falling edges.

Command: 0x20 | 0x15 | 0x08 | 0x01 | 0xd2

Response: The card removes the command from the communication stream.

## 7.22 Set Individual Neopixel, 0x16

CardAddr + 0x15 + PixelIndex + ColorTblIndex (1 byte) + CRC8

Change the color of a single Neopixel. The pixel index is the index of the neopixel. The color table index [0-31] is the index in the color table of the color to set the Neopixel.

Example: Configure the first Gen2 card (addr 0x20). Configure the third neopixel, to use the fifth color table entry.

Command: 0x20 | 0x16 | 0x02 | 0x04 | 0xf6

Response: The card removes the command from the communication stream.

## 7.23 Inventory Command, 0xf0

The inventory command is used to figure out the number of cards and the position of the cards. When a card receives the inventory command, it listens and remembers the card addresses which match its card type. When it receives the end of message, it inserts its card address and increments the last matching card type address that it saw.

### 7.23.1 Gen2 example

Example: Send the inventory command and find out that there are three Gen2 cards.

Command: 0xf0 | 0xff

Response: 0xf0 | 0x20 | 0x21 | 0x22 | 0xff



## 7.24 End of Message, 0xff

End of message is needed at the end of an inventory command. It can also be used at the end of any command chain.

## 8 CRC 8 Generation

Gen2 commands append a CRC8 to the end of transfers which matches the CCITT-CRC8. The generator polynomial is  $x^8+x^2+x+1$  with an initial value of 0xff. The following lists Python code can also be found in the repository at Python\CalcCrc8\CalcCrc8.py

```
#!/usr/bin/env python
#
#=====
## @mainpage
#
#
#          0000
#        00000000
#      PPPPPPPPPPPP 000 000 PPPPPPPPPPPPPP
#      PPPPPPPPPPPPPP 000 000 PPPPPPPPPPPPPP
#      PPP      PPP 000 000 PPP      PPP
#      PPP      PPP 000 000 PPP      PPP
#      PPP      PPP 000 000 PPP      PPP
#      PPP      PPP 000 000 PPP      PPP
#      PPP      PPP 000 000 PPP      PPP
#      PPPPPPPPPPPPPP 000 000 PPPPPPPPPPPPPP
#      PPPPPPPPPPPPPP 000 000 PPP
#          PPP 000 000 PPP
#          PPP 000 000 PPP
#          PPP 000 000 PPP
#          PPP 000 000 PPP
#          PPP 00000000 PPP
#      PPPPP      0000      PPPPP
#
# This program is free software: you can redistribute it and/or modify
# it under the terms of the GNU General Public License as published by
# the Free Software Foundation, either version 3 of the License, or
# (at your option) any later version.
#
# This program is distributed in the hope that it will be useful,
# but WITHOUT ANY WARRANTY; without even the implied warranty of
# MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the
# GNU General Public License for more details.
#
# You should have received a copy of the GNU General Public License
# along with this program. If not, see <http://www.gnu.org/licenses/>.
#
#=====
##
# @file      CalcCrc8.py
# @author    Hugh Spahr
# @date      6/19/2014
#
# @note      Open Pinball Project
# @note      Copyright 2015, Hugh Spahr
#
# @brief Calculate the CRC8 of a message. Calculates using nibbles and
```

```
# bytes.

#=====

import sys
import os

## Main
#
# Read passed in arguments.
#
# @param argv          [in]    Passed in arguments
# @return None
def main(argv=None):

    end = False

    if argv is None:
        argv = sys.argv
    for arg in argv:
        if arg.startswith('-?'):
            print "python CalcCrc8.py [OPTIONS]"
            print "    -?                Options Help"
            end = True
    if end:
        return 0

    CRC8Lookup = [0x00, 0x07, 0x0e, 0x09, 0x1c, 0x1b, 0x12, 0x15, \
                   0x38, 0x3f, 0x36, 0x31, 0x24, 0x23, 0x2a, 0x2d]

    CRC8ByteLookup = \
        [ 0x00, 0x07, 0x0e, 0x09, 0x1c, 0x1b, 0x12, 0x15, \
          0x38, 0x3f, 0x36, 0x31, 0x24, 0x23, 0x2a, 0x2d, \
          0x70, 0x77, 0x7e, 0x79, 0x6c, 0x6b, 0x62, 0x65, \
          0x48, 0x4f, 0x46, 0x41, 0x54, 0x53, 0x5a, 0x5d, \
          0xe0, 0xe7, 0xee, 0xe9, 0xfc, 0xfb, 0xf2, 0xf5, \
          0xd8, 0xdf, 0xd6, 0xd1, 0xc4, 0xc3, 0xca, 0xcd, \
          0x90, 0x97, 0x9e, 0x99, 0x8c, 0x8b, 0x82, 0x85, \
          0xa8, 0xaf, 0xa6, 0xa1, 0xb4, 0xb3, 0xba, 0xbd, \
          0xc7, 0xc0, 0xc9, 0xce, 0xdb, 0xdc, 0xd5, 0xd2, \
          0xff, 0xf8, 0xf1, 0xf6, 0xe3, 0xe4, 0xed, 0xea, \
          0xb7, 0xb0, 0xb9, 0xbe, 0xab, 0xac, 0xa5, 0xa2, \
          0x8f, 0x88, 0x81, 0x86, 0x93, 0x94, 0x9d, 0x9a, \
          0x27, 0x20, 0x29, 0x2e, 0x3b, 0x3c, 0x35, 0x32, \
          0x1f, 0x18, 0x11, 0x16, 0x03, 0x04, 0x0d, 0x0a, \
          0x57, 0x50, 0x59, 0x5e, 0x4b, 0x4c, 0x45, 0x42, \
          0x6f, 0x68, 0x61, 0x66, 0x73, 0x74, 0x7d, 0x7a, \
          0x89, 0x8e, 0x87, 0x80, 0x95, 0x92, 0x9b, 0x9c, \
          0xb1, 0xb6, 0xbf, 0xb8, 0xad, 0xaa, 0xa3, 0xa4, \
          0xf9, 0xfe, 0xf7, 0xf0, 0xe5, 0xe2, 0xeb, 0xec, \
          0xc1, 0xc6, 0xcf, 0xc8, 0xdd, 0xda, 0xd3, 0xd4, \
          0x69, 0x6e, 0x67, 0x60, 0x75, 0x72, 0x7b, 0x7c, \
          0x51, 0x56, 0x5f, 0x58, 0x4d, 0x4a, 0x43, 0x44, \
          0x19, 0x1e, 0x17, 0x10, 0x05, 0x02, 0x0b, 0x0c, \
          0x21, 0x26, 0x2f, 0x28, 0x3d, 0x3a, 0x33, 0x34, \
          0x4e, 0x49, 0x40, 0x47, 0x52, 0x55, 0x5c, 0x5b, \
          0x76, 0x71, 0x78, 0x7f, 0x6a, 0x6d, 0x64, 0x63, \
          0x3e, 0x39, 0x30, 0x37, 0x22, 0x25, 0x2c, 0x2b, \
```


```
0x06, 0x01, 0x08, 0x0f, 0x1a, 0x1d, 0x14, 0x13, \  
0xae, 0xa9, 0xa0, 0xa7, 0xb2, 0xb5, 0xbc, 0xbb, \  
0x96, 0x91, 0x98, 0x9f, 0x8a, 0x8d, 0x84, 0x83, \  
0xde, 0xd9, 0xd0, 0xd7, 0xc2, 0xc5, 0xcc, 0xcb, \  
0xe6, 0xe1, 0xe8, 0xef, 0xfa, 0xfd, 0xf4, 0xf3 ]
```

```
while (not end):  
    print "Enter message [ex: 0x11 0x22 0x33]:"  
    msg = sys.stdin.readline()  
    msgBytes = msg.split()  
    if (len(msgBytes) != 0):  
        msgInts = []  
        for indByte in msgBytes:  
            # If separators used from brdIntf document, ignore them  
            if indByte != '|':  
                msgInts.append(int(indByte, 16))  
        crc8 = 0xff  
        crc8Byte = 0xff  
        for indInt in msgInts:  
            crc8 = (((crc8 << 4) & 0xf0) ^ CRC8Lookup[ \  
                (((crc8) ^ (indInt)) >> 4) & 0x0f])  
            crc8 = (((crc8 << 4) & 0xf0) ^ CRC8Lookup[ \  
                (((crc8 >> 4) & 0x0f) ^ (indInt)) & 0x0f])  
            crc8Byte = CRC8ByteLookup[crc8Byte ^ indInt];  
        print "CRC8 = 0x%02x" % crc8  
        print "CRC8Byte = 0x%02x" % crc8Byte  
    else:  
        end = True  
return (0)
```


```
if __name__ == "__main__":  
    sys.exit(main())
```

## 9 Board Connector Positions

### 9.1 Solenoid Wing

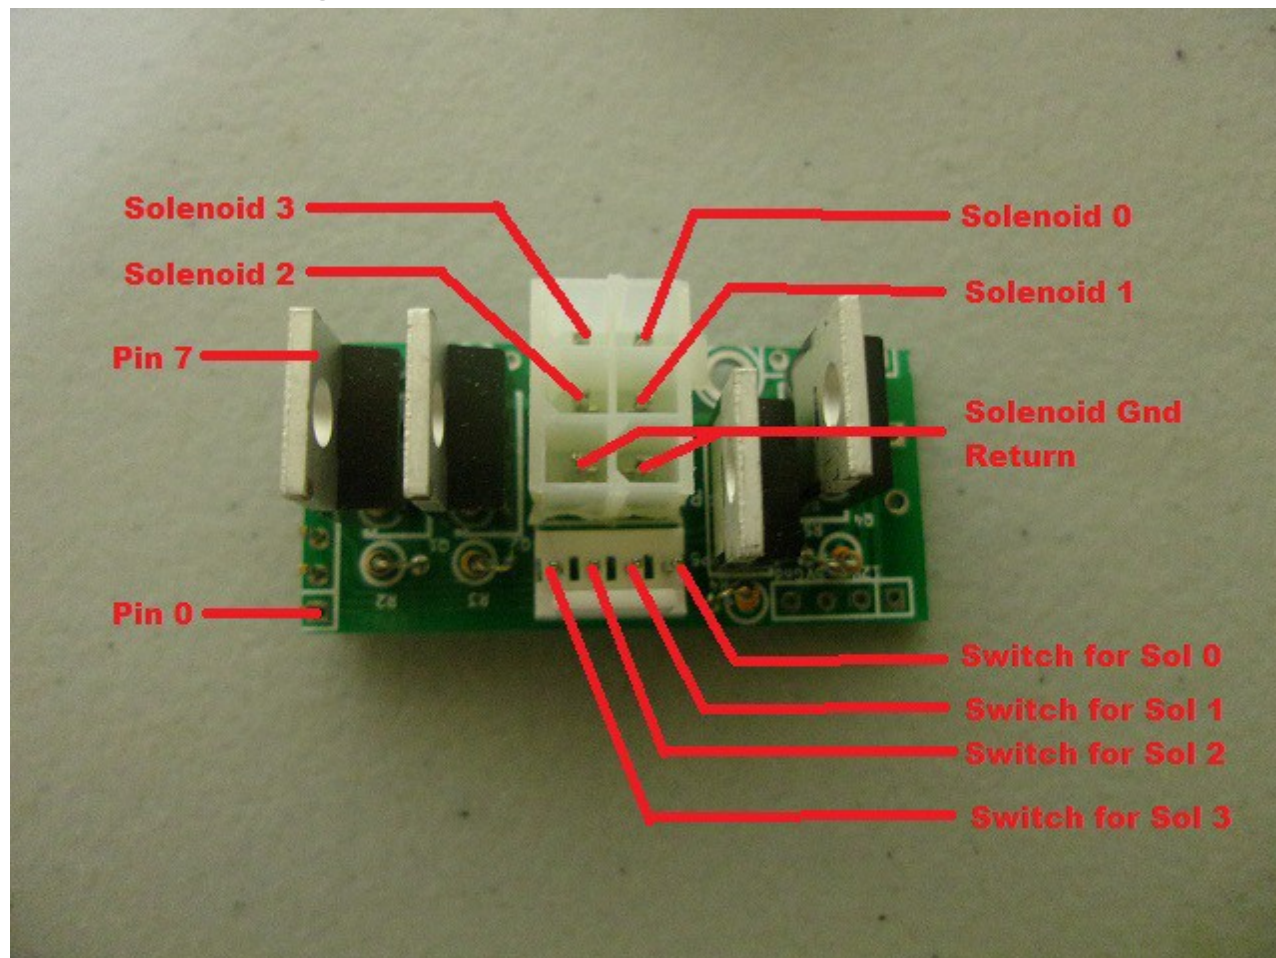


## 9.2 Incandescent Wing

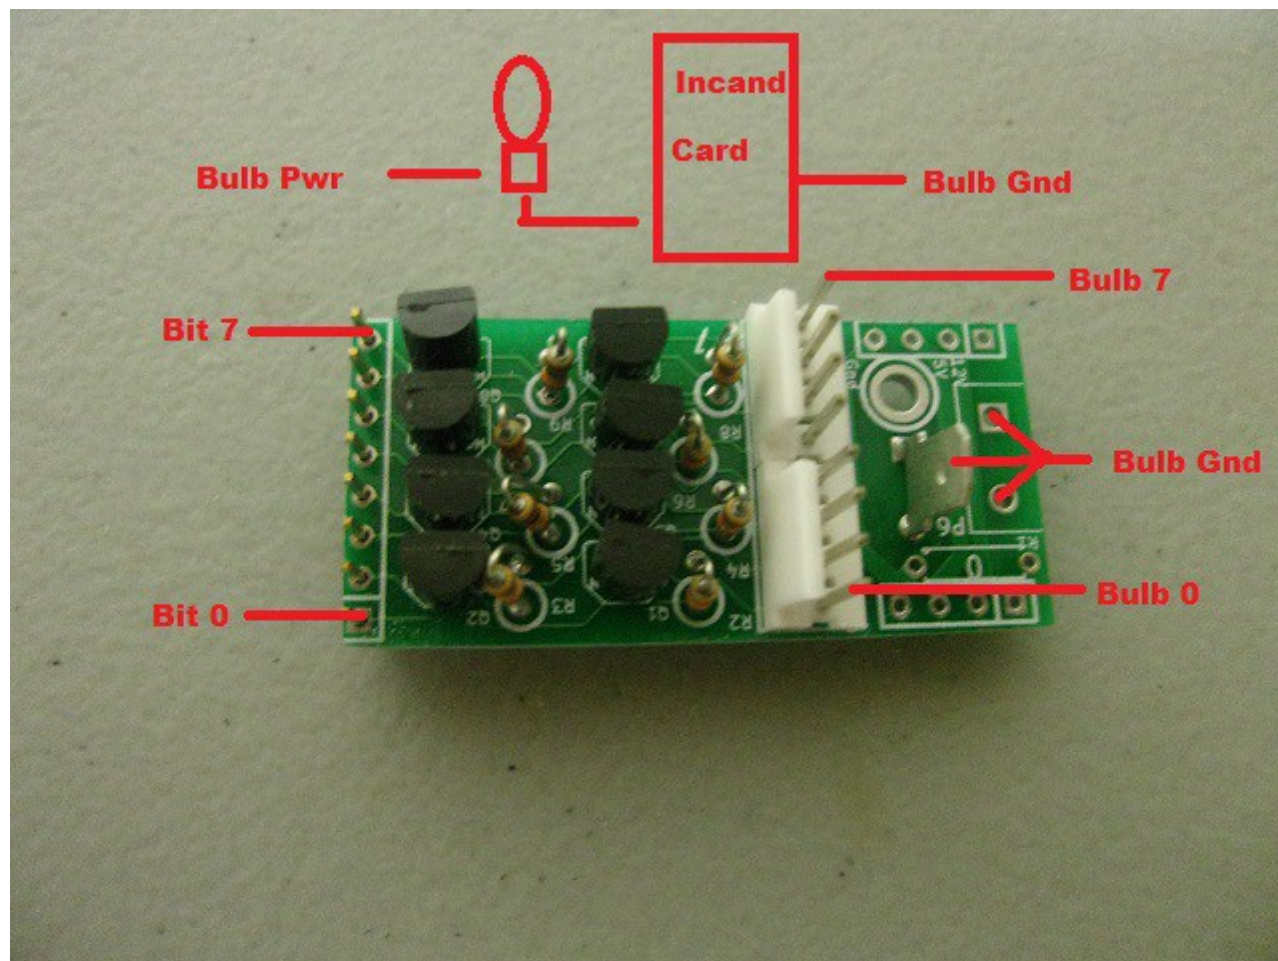





### 9.3 Input/Neo Wing

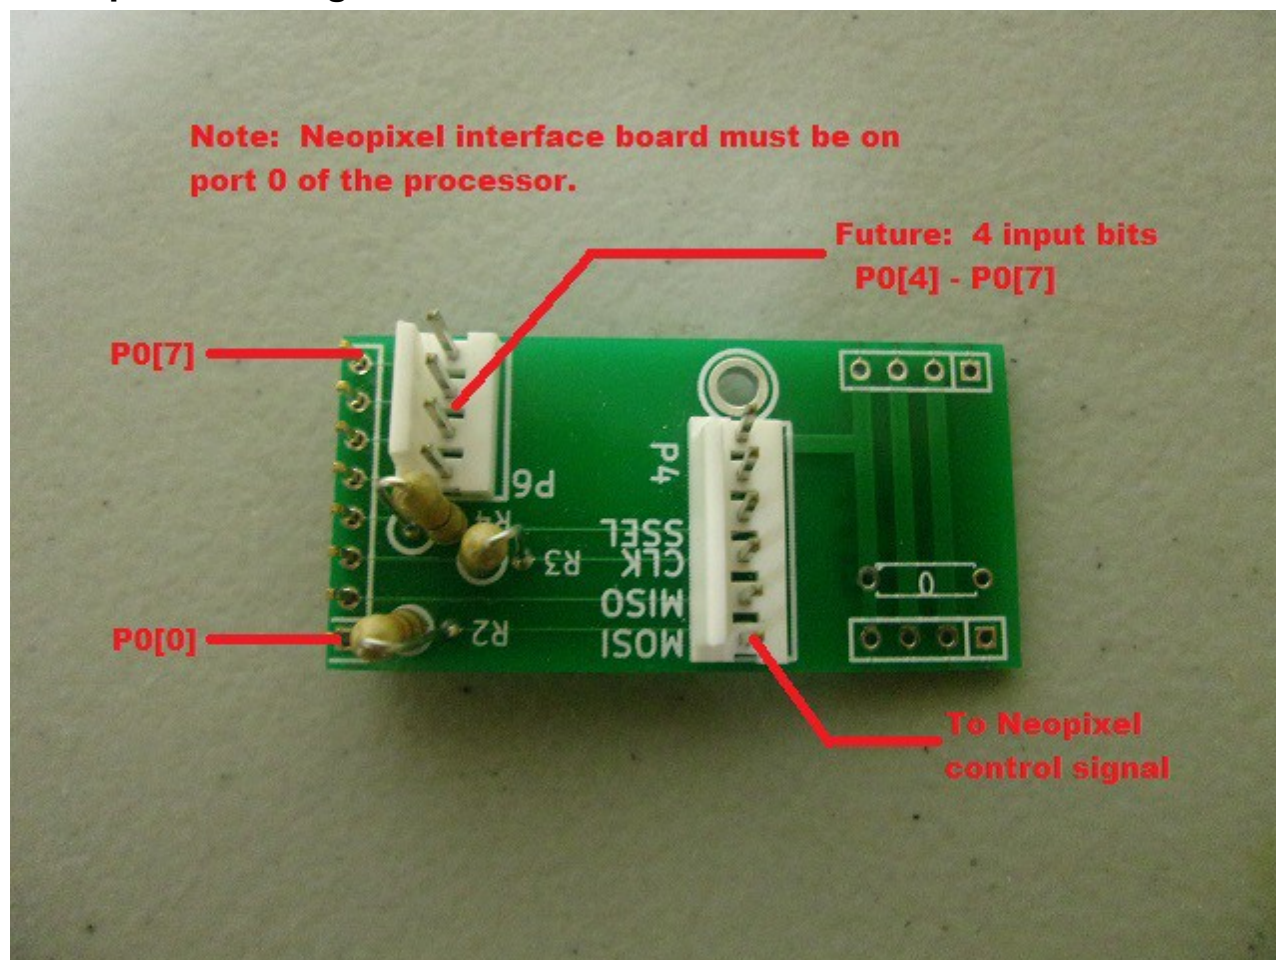

## 9.4 Interface Wing

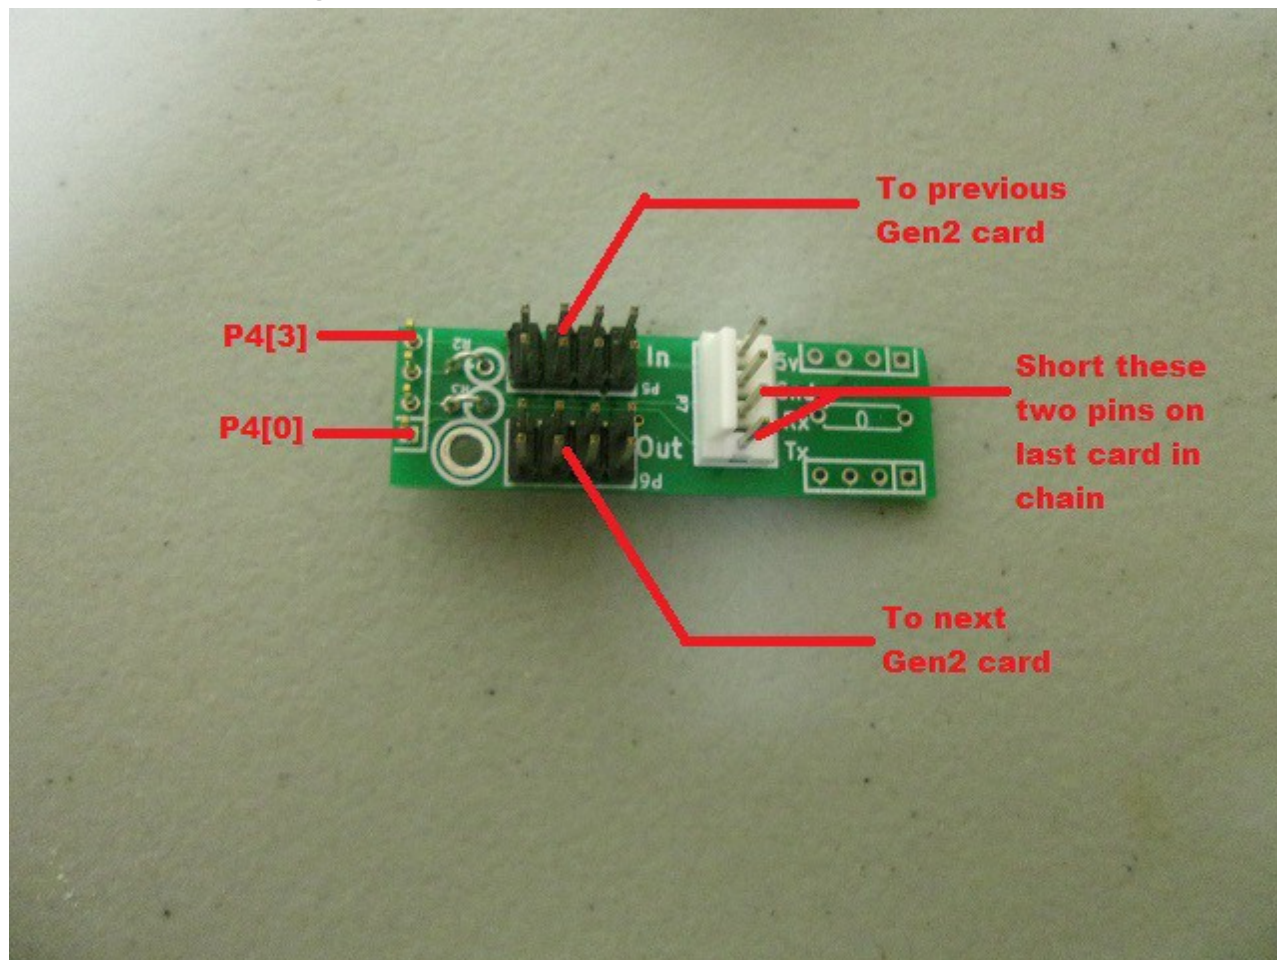


## 9.5 RS232 Interface

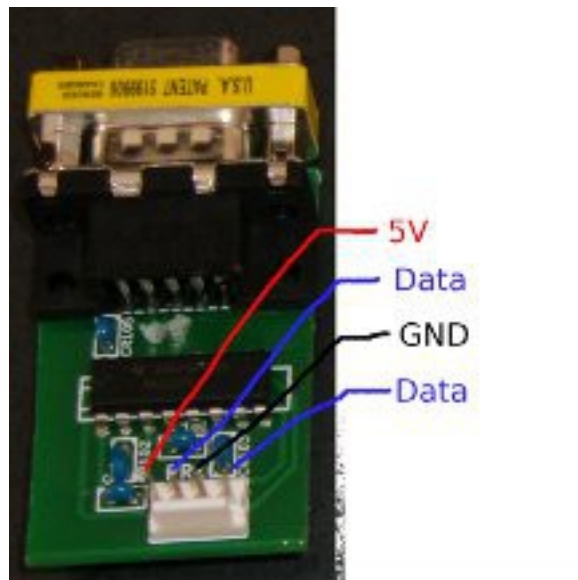



## 10 Wiring

### 10.1 Solenoid Card Wiring

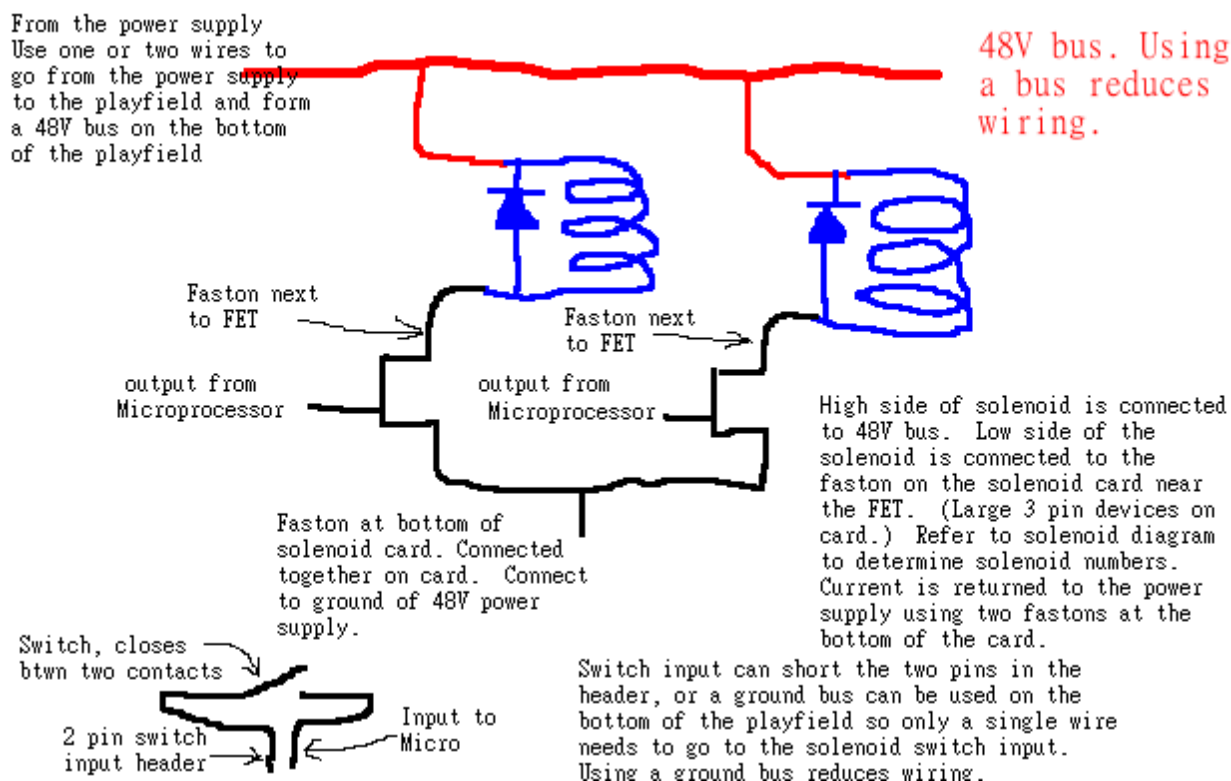

### 10.2 Input Card Wiring

Switch input wiring is the same as the solenoid switch input wiring. Each connector has a ground pin and a pin that is an input to the processor. The processor detects that the switch is closed by looking for a low (grounded) input. The processor has an internal pull up so when the pin is not connected, it is seen as high.