

# ACDC DAQ Programers Manual

Jonathan Eisch, Miles Lucas, Eric Oberla and Others

## Contents

<b>1</b>	<b>Introduction</b>	<b>1</b>
<b>2</b>	<b>Commands</b>	<b>3</b>
2.1	0xF - Sync Usb . . . . .	4
2.1.1	Bit Fields . . . . .	4
2.1.2	Source . . . . .	4
2.1.3	Destination . . . . .	4
2.2	0xD - Align LVDS . . . . .	5
2.2.1	Bit Fields . . . . .	5
2.2.2	Source . . . . .	5
2.2.3	Destination . . . . .	5
2.3	0xA - Toggle LED . . . . .	6
2.3.1	Bit Fields . . . . .	6
2.3.2	Source . . . . .	6
2.3.3	Destination . . . . .	7
2.4	0x7 - Set Self-trigger Lo . . . . .	8
2.4.1	Bit Fields . . . . .	8
2.4.2	Source . . . . .	8
2.4.3	Destination . . . . .	9

## 1 Introduction

This document is intended to document the commands sent to the ACC and ACDC cards.

It includes source listings of the source and destinations for each command as they were when this documentation was written. New implementations may have been written since, but that is outside the scope of this document.

Table 1: List of Instructions	
Bits	Description
0x0	Do nothing
0x1	Set dealy-locked loop VDD control voltage
0x2	Calibration pulse switch enable
0x3	Set pedestal
0x4	Reset DLL
0x5	Reset internal trigger
0x6	Set self trigger mask
0x7	Set self trigger instructions
0x8	Set trigger threshold
0x9	Adjust ring oscillation frequency
0xA	Enable/disable on-board LEDs
0xB	(DC) Central card FIFO toggle
0xB	(CC) Central card done
0xC	(CC) Central card read mode
0xD	(CC) Align/setup SERDES
0xE	(CC) USB trigger
0xF	(CC) Sync USB

The command protocol for each 32-bit instruction set is shown in [Figure 1](#).




Figure 1: Command protocol

This is parsed on the front-end board like this

```
--parse 32 bit instruction word:
INSTRUCT_PSEC_MASK      <= xINSTRUCT_WORD(24 downto 20);
INSTRUCTION             <= xINSTRUCT_WORD(19 downto 16);
INSTRUCTION_OPT         <= xINSTRUCT_WORD(15 downto 12);
INSTRUCT_VALUE          <= xINSTRUCT_WORD(11 downto 0);
```

[Table 1](#) lists all the instruction flags passed by software.

The instruction for setting self-trigger instructions has many optional instructions, listed in [Table 2](#).

Table 2: Optional instructs for 0x7 - set self-trigger instructions

Bits	Description
0x0	enable
0x1	wait for system trigger
0x2	Measure rate only
0x3	Trigger sign

## 2 Commands

2.1	0xF - Sync Usb . . . . .	4
2.1.1	Bit Fields . . . . .	4
2.1.2	Source . . . . .	4
2.1.3	Destination . . . . .	4
2.2	0xD - Align LVDS . . . . .	5
2.2.1	Bit Fields . . . . .	5
2.2.2	Source . . . . .	5
2.2.3	Destination . . . . .	5
2.3	0xA - Toggle LED . . . . .	6
2.3.1	Bit Fields . . . . .	6
2.3.2	Source . . . . .	6
2.3.3	Destination . . . . .	7
2.4	0x7 - Set Self-trigger Lo . . . . .	8
2.4.1	Bit Fields . . . . .	8
2.4.2	Source . . . . .	8
2.4.3	Destination . . . . .	9

## 2.1 0xF - Sync Usb

This command does something regarding to syncing the usb

### 2.1.1 Bit Fields




Figure 2: Command 0xF bit fields

Bit Range	Name	Description
19-16	<b>0xF</b>	Command marker
0	En	Boolean to enable or disable usb sync

### 2.1.2 Source

acdc-daq:src/DAQinstruction.cpp

```

void SuMo::sync_usb( bool SYNC) {
    createUSBHandles();
    if(SYNC != false) { //enable USB_SYNC
        usb.sendData(( unsigned int)0x000F0001);
        if(mode == USB2x) usb2.sendData(( unsigned int)0x000F0001
        ↪ );
    } else { //disable USB_SYNC
        usb.sendData(( unsigned int)0x000F0000);
        if(mode == USB2x) usb2.sendData(( unsigned int)0x000F0000
        ↪ );
    }
    closeUSBHandles();
}

```

### 2.1.3 Destination

## 2.2 0xD - Align LVDS

This command aligns the LVDS system between the central card and any acdc boards. The LVDS system is the RJ-45 connection.

### 2.2.1 Bit Fields




Figure 3: Command 0xD bit fields

Bit Range	Name	Description
19-16	<b>0xD</b>	Command marker

### 2.2.2 Source

acdc-daq:src/DAQinstruction.cpp

```
void SuMo::align_lvds()
{
    createUSBHandles();
    usb.sendData((unsigned int)0x000D0000); //toggle align
    ↪ process
    if(mode == USB2x) usb2.sendData((unsigned int)0x000D0000);
    closeUSBHandles();
}
```

### 2.2.3 Destination

## 2.3 0xA - Toggle LED

This command toggles the LED on all connected boards.

### 2.3.1 Bit Fields




Figure 4: Command 0xA bit fields

Bit Range	Name	Description
28-25	Board Address	The address of the board. Default is 0xF
19-16	<b>0xA</b>	Command marker
0	Enable	Boolean to enable or disable the leds

### 2.3.2 Source

acdc-daq:src/DAQinstruction.cpp

```

void SuMo::toggle_LED (bool EN)
{
    unsigned int boardAdr_all = 15;

    createUSBHandles();
    unsigned int send_word = 0x000A0000;
    send_word = send_word | boardAdr_all << boardAdrOffset;

    if (EN != false) {
        usb.sendData(send_word | 0x1);
        if (mode == USB2x) usb2.sendData(send_word | 0x1);
    }
    else {
        usb.sendData(send_word);
        if (mode == USB2x) usb2.sendData(send_word);
    }
    closeUSBHandles();
}

```

### 2.3.3 Destination

--

## 2.4 0x7 - Set Self-trigger Lo

This command sends certain trigger commands

### 2.4.1 Bit Fields

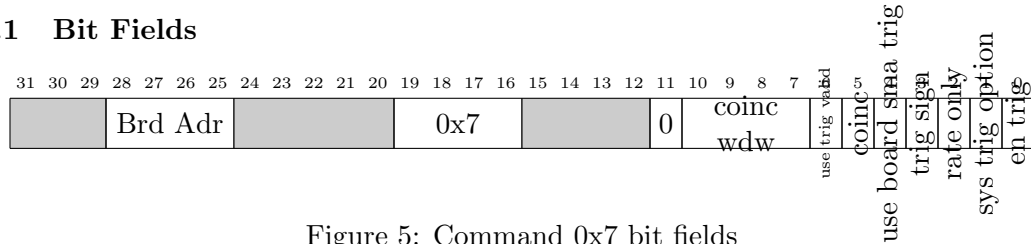


Figure 5: Command 0x7 bit fields

Bit Range	Name	Description
28-25	Board Address	The address of the board. Default is 0xF
19-16	<b>0xA</b>	Command marker
0	Enable	Boolean to enable or disable the leds

### 2.4.2 Source

acdc-daq:src/DAQinstruction.cpp

```

void SuMo::set_self_trigger_lo(
    bool ENABLE_TRIG,
    bool SYS_TRIG_OPTION,
    bool RATE_ONLY,
    bool TRIG_SIGN,
    bool USE_BOARD_SMA_TRIG,
    bool USE_COINCIDENCE,
    bool USE_TRIG_VALID_AS_RESET,
    unsigned int coinc_window,
    unsigned int boardAdr,
    int device)
{
    const unsigned int hi_cmd = 0x00070000;
    unsigned int send_word = hi_cmd | 0 << 11
        | USE_TRIG_VALID_AS_RESET << 6
        | USE_COINCIDENCE << 5
        | USE_BOARD_SMA_TRIG << 4
        | TRIG_SIGN << 3 | RATE_ONLY << 2
        | SYS_TRIG_OPTION << 1 | ENABLE_TRIG
        | coinc_window << 7

```



```
    | boardAdr << boardAdrOffset;
    //printf("%i\n", send_word);

    createUSBHandles();

    if(device == 0)                usb.sendData((unsigned int)
        ↪ send_word);
    if(device == 1 && mode == USB2x) usb2.sendData((unsigned int)
        ↪ send_word);

    closeUSBHandles();
}
```

### 2.4.3 Destination

---