

This file has been cleaned of potential threats.

If you confirm that the file is coming from a trusted source, you can send the following SHA-256 hash value to your admin for the original file.

4ace21a93c5f1498e01d81b1a0190a37bf87d6f03d5737faff3beb49cf09d157

To view the reconstructed contents, please SCROLL DOWN to next page.

3.2inch RPi Display

User Manual



【Product Description】


- ◆ 3.2" TFT display, Hardware resolution 320X240
- ◆ Resistance touch screen
- ◆ 3 buttons for easy extension
- ◆ Support Raspberry Pi **Pi3B+** / **Pi3** / **Pi2** / **ZERO** and other full series versions
- ◆ This product has passed **CE** and **RoHS** certification

【Product Parameters】


- ◆ Size: 3.2(inch)
- ◆ SKU: MPI3201
- ◆ Resolution: 320X240 (pixel)
- ◆ Drive IC: ILI9341
- ◆ Touch: Resistance touch screen
- ◆ Active Area: 48.6x64.8(mm)
- ◆ Dimensions: 84.91*56.54(mm)
- ◆ Weight: 120(g)

【Hardware Description】

- ◆ Product dimensions:

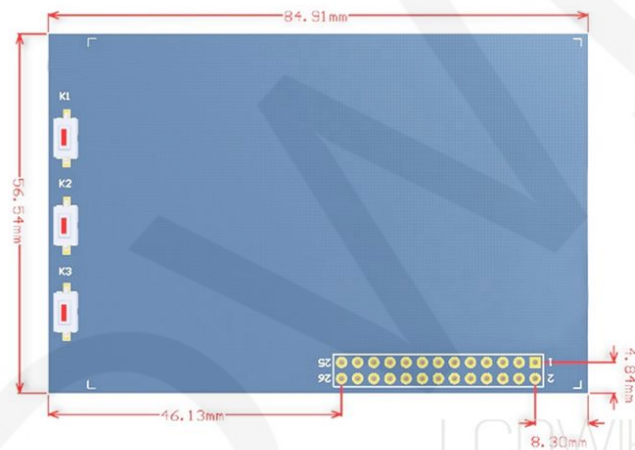

- ◆ Interface Definition:

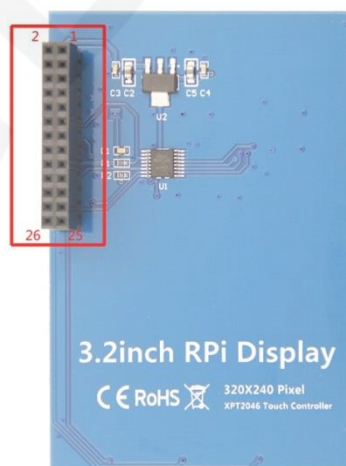

Pin	Marking	Description
1, 17	3.3V	3.3V Power input
2, 4	5V	5V Power input
3, 5, 7, 8, 10, 12, 13, 15, 16	NC	NC
6, 9, 14, 20, 25	GND	GND
11	TP_IRQ	Touch panel interrupt detected low level if touch panel is pressed
18	LCD_RS	Instruction/data register selection
19	LCD_SI / TP_SI	SPI data entry for LCD display/touch panel
21	TP_SO	SPI data output on the touch panel
22	RST	restoration
23	LCD_SCK / TP_SCK	SPI clock signal on LCD display/touch panel
24	LCD_CS	LCD select signal, low level select LCD
26	TP_CS	Touch panel select signal, low level select touch panel

【How to use with Raspbian】

◆ Step 1, Install Raspbian official image file

1) Download the latest image from the official download.

<https://www.raspberrypi.org/downloads/raspbian/>

2) Install the system according to the official tutorial steps.

◆ Step 2, Install the driver for the LCD

1) Connect the **3.2inch RPi Display** with the **Raspberry Pi** and plug it in



- 2) Log into the command line interface for **Raspberry Pi** (Initial user name: pi, Password: raspberry) , Get the latest drive from **GitHub** (the **Raspberry Pi** needs to connect to the Internet), Execute the following commands:

```
sudo rm -rf LCD-show
git clone https://github.com/goodtft/LCD-show.git
chmod -R 755 LCD-show
cd LCD-show/
sudo ./LCD32-show
```

After execution, the system will be restarted. If the display and touch are normal, the installation is successful.