



ADLINK
TECHNOLOGY INC.

SEMA[®] 3.0

Software Installation Guide

Manual Rev.: 1.01

Revision Date: May 18, 2016

Part No.: 50-10034-1010

Revision History

Revision	Date	Changes
1.00	2015/12/09	Initial release
1.01	2016/05/18	Changes for SEMA 3.0 R7 including: <ul style="list-style-type: none">- Installation of new Graphical User Interface (GUI)- Installation of new Command Line Interface (CLI) Minor editorial changes.

Copyright 2016 ADLINK Technology, Inc.

Disclaimer

The information in this document is subject to change without prior notice in order to improve reliability, design, and function and does not represent a commitment on the part of the manufacturer. In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages. This document contains proprietary information protected by copyright.

All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of ADLINK Technology, Inc.

Trademark Information

Product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective companies.

Table of Contents

Revision History.....	2
1 OS Support.....	5
2 Installation.....	6
2.1 Windows:.....	6
2.2 Linux:	12
3 Setting Up Services.....	13
3.1 Windows.....	13
3.2 Linux	15
3.3 Configuring the EAPI Service	17
3.4 Configuring the MQTT Service	19
4 Firewall	20
4.1 Windows.....	20
4.2 Linux	24
5 Security Connection	25
Getting Service.....	26

1 OS Support

Currently, the following operating systems are supported:

- Windows (win32/64)
 - Microsoft® Windows® 7
 - Microsoft® Windows® 8/8.1
- Linux® (3.2.x or higher) 64/32

2 Installation

This chapter describes the installation of the SEMA[®] release package which includes:

- SEMA[®] Extended EAPI and driver software
- SEMA[®] Graphical User Interface (GUI) Application
- SEMA[®] Command Line Interface (CLI) Application


2.1 Windows:

Launch the install file in the release package corresponding to your operating system.

1. Execute the install file, and click *Install*.




2. Select Yes to allow to install.

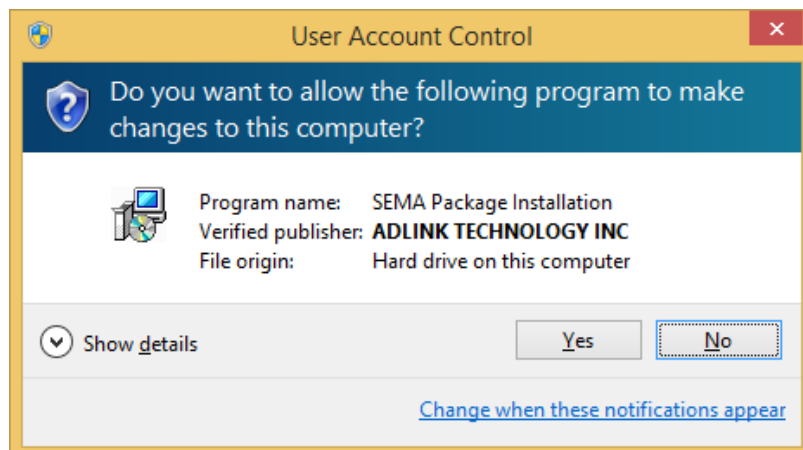

3. Select "I agree to the licenes terms and conditions" and click *Install* when prompted to install Microsoft Visual C++ 2012.



32-bit:

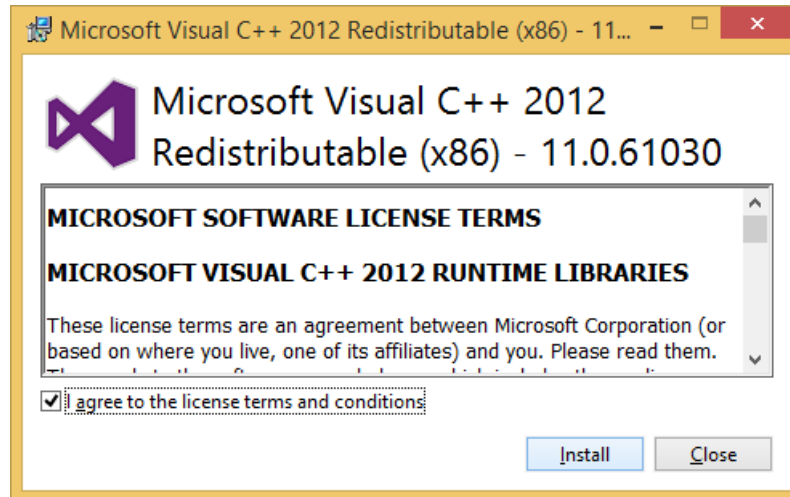


64-bit:




4. Click *Next* to proceed with SEMA installation. Click *Next* again if you don't wish to change the install path. The default path is *C:\Program Files\SEMA*.

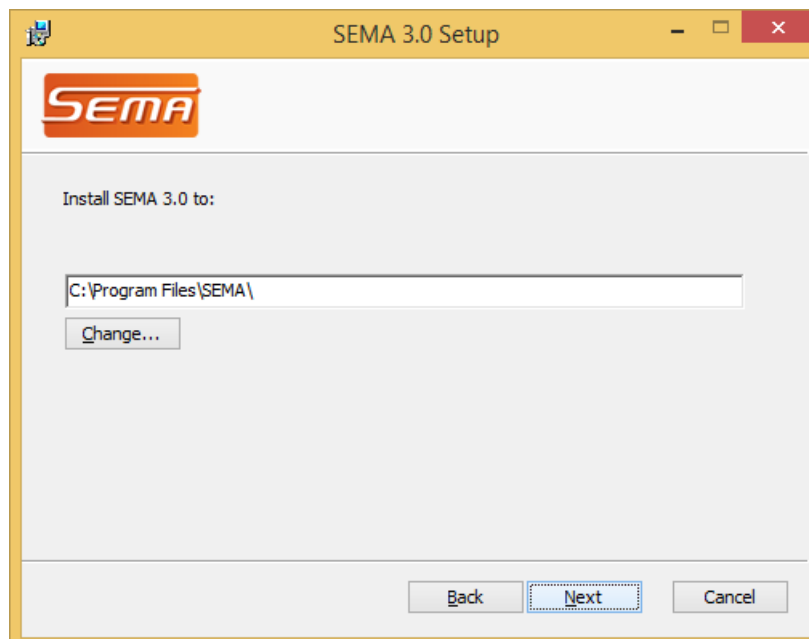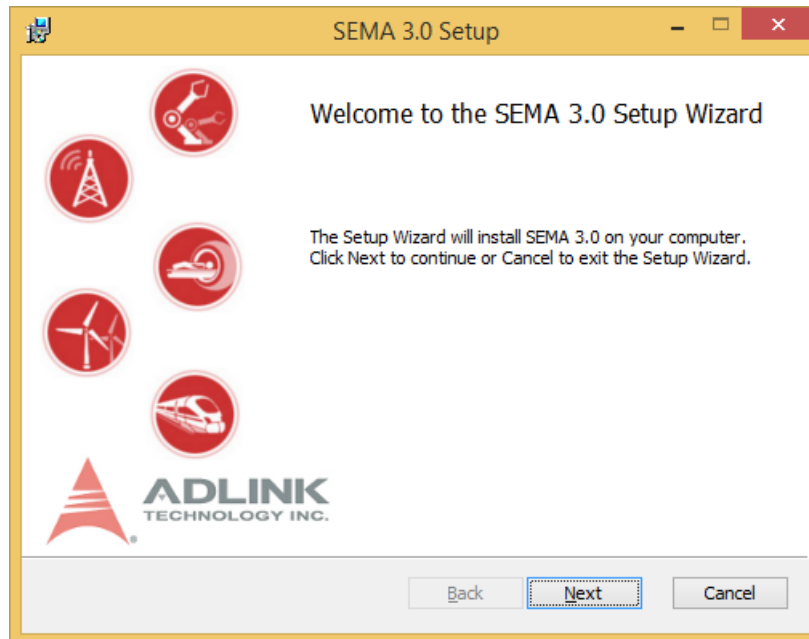

5. Select *Yes* to install SEMA GUI, or select *No* if you don't wish to install it. Click *Next*.

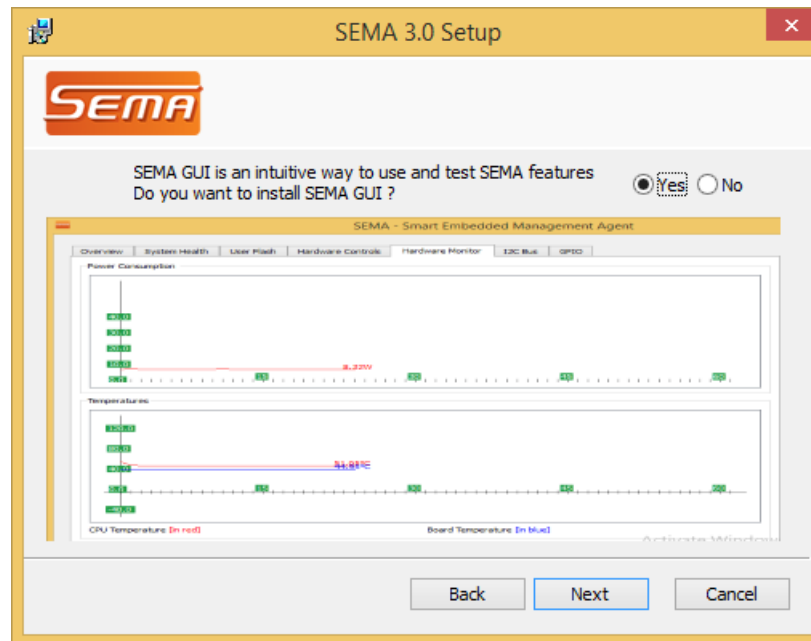



6. Click *Install* to begin the installing SEMA. Then click *Finish* to close the Setup Wizard.

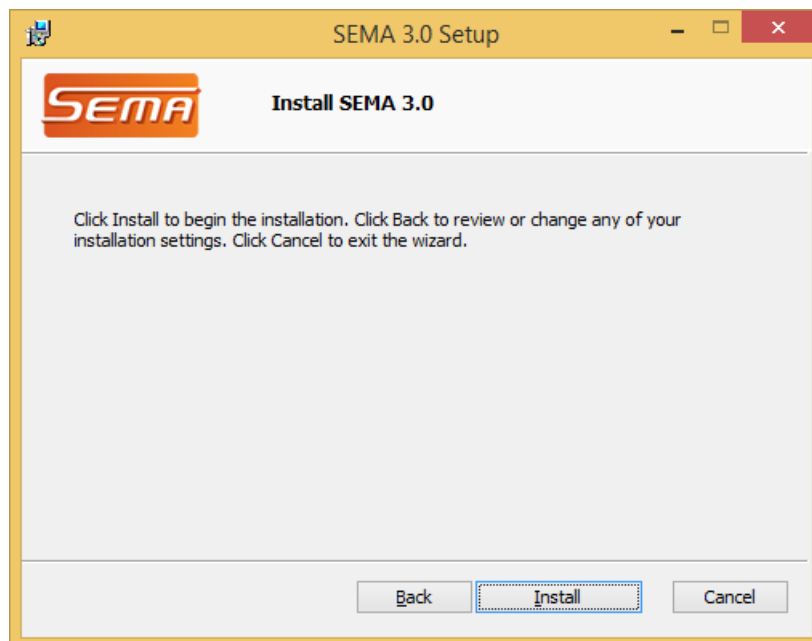


```
C:\Windows\system32\cmd.exe

Install SemaSMB drivers
Detect Windows Version
Found Windows 7/8
C:\Program Files\SEMA

Removing old drivers
No devices were removed.
Device node created. Install is complete when drivers are installed...
Updating drivers for root\sema from C:\Program Files\SEMA\driver\x64\SemaSMB.inf
.
```

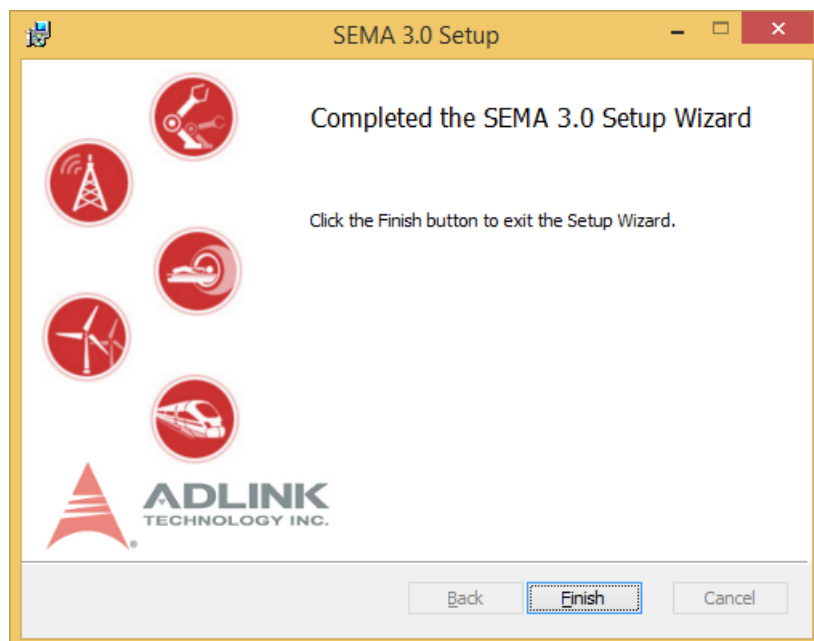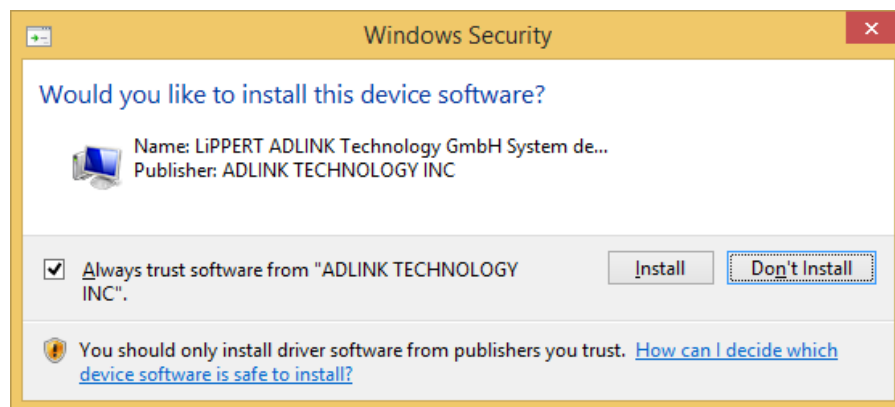

7. SEMA setup has successfully completed. Click *Close*.

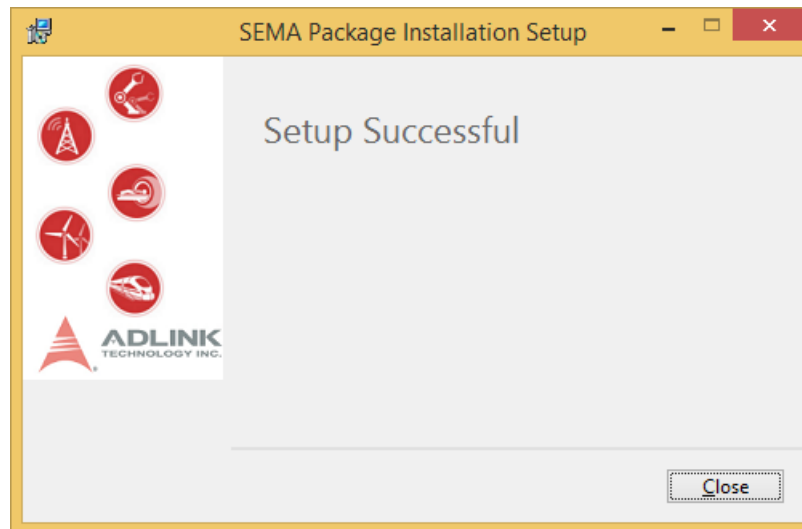

In Windows, the program files will be located at *C:\Program Files\SEMA* by default. The configuration files and keys for SSL connections will be located at *C:\SEMA*. The shortcut for SEMA GUI will be placed on the desktop if it was installed. The SEMA CLI is also available after installation of the SEMA release package.

2.2 Linux:

Launch the install file in the release package corresponding to your operating system.

Step 1: To view the file mode, use the **ls** command, or mark the file as executable with the **chmod** command.

```
root@sema-64-14:/home/sema/Downloads# ls -al SEMA_x64
-rwxr-xr-x 1 sema sema 33403624 May  6 10:54 SEMA_x64
root@sema-64-14:/home/sema/Downloads#
```

Step 2: Now you can execute the installer in the terminal.

```
root@sema-64-14:/home/sema/Downloads# ./SEMA_x64
Verifying archive integrity... All good.
Uncompressing install SEMA3.0(R7) Installer 100%
Do you want to install SEMA GUI (Graphical User Interface) (Y/n) Y
Adding SEMA bin folder to PATH at startup ... DONE
Copying libraries files ... DONE
Setting up ldconfig ... DONE
Copying config files ... DONE
root@sema-64-14:/home/sema/Downloads#
```

In Linux, the program files will be located at `/usr/local/SEMA`. The configuration file and keys for SSL connections will be located at `/etc/SEMA/`.

When installing, you can choose whether or not to install SEMA GUI.

If you choose 'yes', the SEMA GUI files will be located at `/usr/local/SEMA/bin`. You can execute SEMA GUI by using `SEMA_GUI.sh`.

```
root@sema-32-15:/usr/local/SEMA/bin# ./SEMA_GUI.sh
```

The SEMA CLI is also available after installation of the SEMA release package.

3 Setting Up Services


This section explains how to install SEMA services that can be automatically started when the computer boots. There are two services in SEMA installation package.

- **EAPI Server (eapi_serverd)**: A service that responds to SEMA EAPI remote procedure calls to get SEMA information of the device. If users don't need to run SEMA EAPI remotely, installation of this service can be skipped.
- **MQTT Server (sema_mqttd)**: A service that collects SEMA information and pushes the data to the SEMA Dashboard. If users don't need to run the SEMA Dashboard, installation of this service can be skipped.


3.1 Windows

Setting up the EAPI Server

1. To open a command prompt as an administrator:
 - i. Click *Start > All Programs > Accessories*.
 - ii. Right-click *Command prompt*, and then click *Run as administrator*.

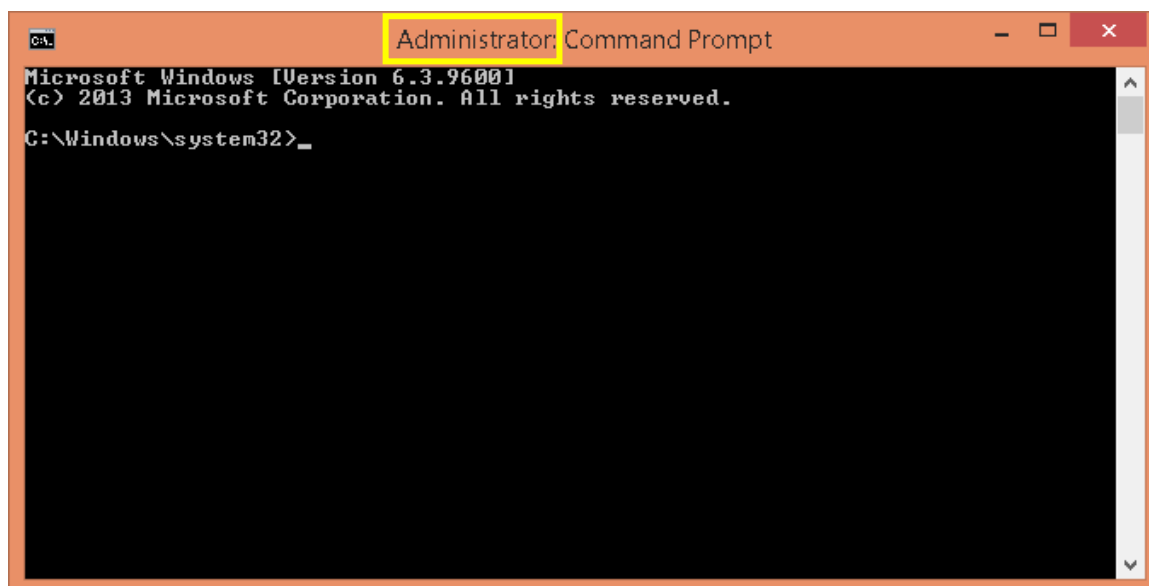


2. Access the directory where the SEMA executable file is located.

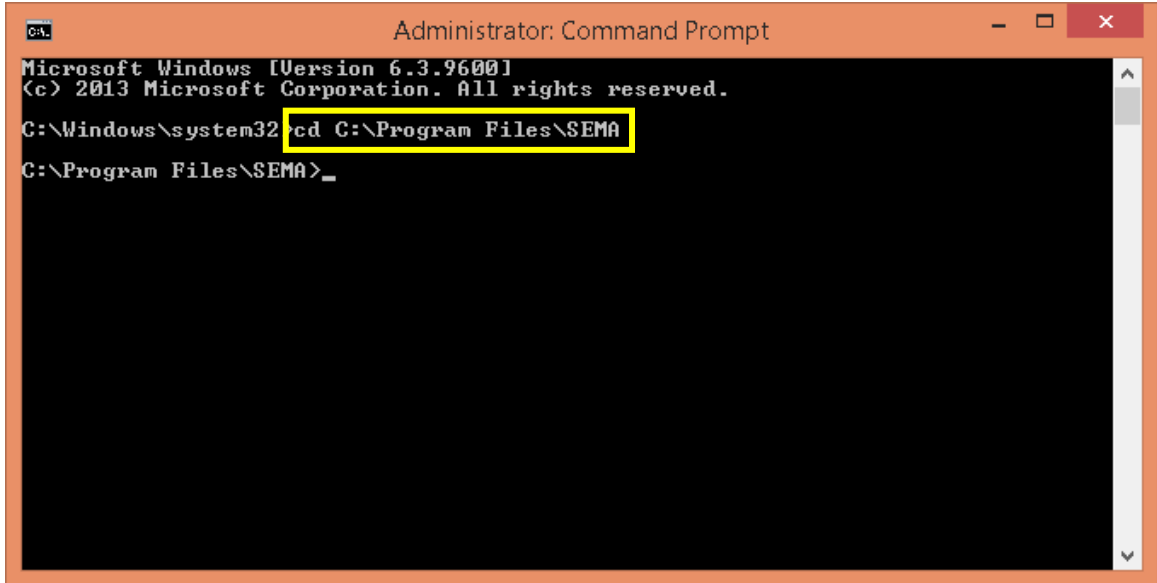

```
Administrator: Command Prompt
Microsoft Windows [Version 6.3.9600]
(c) 2013 Microsoft Corporation. All rights reserved.
C:\Windows\system32>cd C:\Program Files\SEMA
C:\Program Files\SEMA>
```

3. Run *eapi_serviced.exe* from the command prompt with *-i* as a parameter.

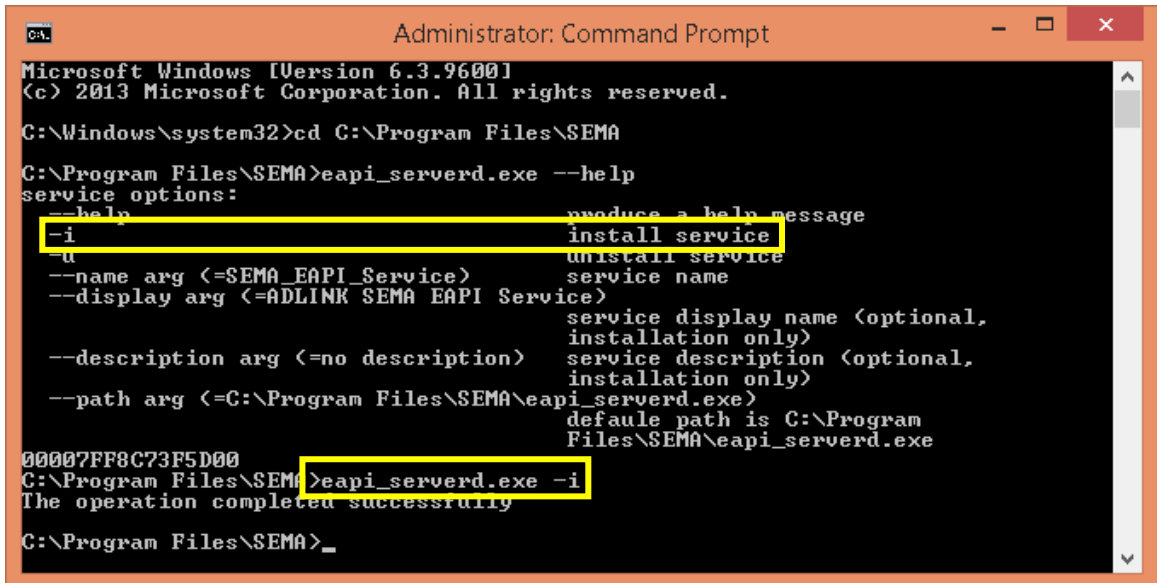

```
Administrator: Command Prompt
Microsoft Windows [Version 6.3.9600]
(c) 2013 Microsoft Corporation. All rights reserved.
C:\Windows\system32>cd C:\Program Files\SEMA
C:\Program Files\SEMA>eapi_serverd.exe --help
service options:
--help                produce a help message
-i                    install service
-u                    uninstall service
--name arg (<=SEMA_EAPI_Service)  service name
--display arg (<=ADLINK SEMA EAPI Service)  service display name (optional,
installation only)
--description arg (<=no description)  service description (optional,
installation only)
--path arg (<=C:\Program Files\SEMA\eapi_serverd.exe)  default path is C:\Program
Files\SEMA\eapi_serverd.exe
00007FF8C73F5D00
C:\Program Files\SEMA>eapi_serverd.exe -i
The operation completed successfully
C:\Program Files\SEMA>
```


Setting up the MQTT Server

Use the method above to set up **sema_mqttd**.

Start/Stop EAPI/MQTT Server services

To start or stop services in Windows:

1. Open the *Control Panel* (icons view), click on the Administrative Tools icon, double click on the *Services* shortcut.
2. Right click the *ADLINK SEMA EAPI Service* or *ADLINK SEMA MQTT Service*, and click *Start/Stop*.

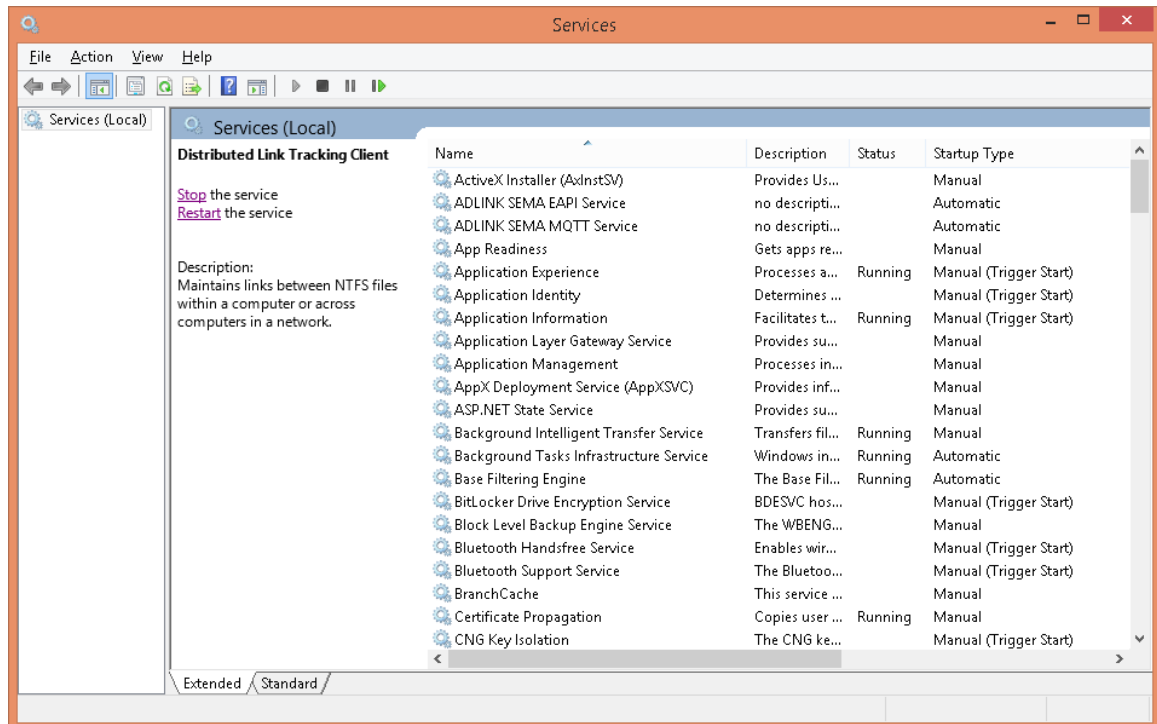

3.2 Linux

Starting the EAPI Server and MQTT Server services manually

Using the *exec* command

```
$ exec /usr/local/SEMA/bin/eapi_serverd
```

```
$ exec /usr/local/SEMA/bin/sema_mqttd
```

Starting the EAPI Server and MQTT Server services automatically on startup

1. Set up startup scripts in `/etc/rc.local` (e.g. `vim /etc/rc.local ..`)
2. Add command `/usr/local/SEMA/bin/eapi_serverd` to script
3. Add command `/usr/local/SEMA/bin/sema_mqttd` to script
4. Reboot

Stopping the EAPI Server and MQTT Server services

Find the PID of `eapi_serverd` and `sema_mqttd` using the **top** program.

```
top - 10:27:37 up 21:46, 1 user, load average: 0.00, 0.00, 0.00
Tasks: 105 total, 1 running, 104 sleeping, 0 stopped, 0 zombie
Cpu(s): 0.1%us, 0.1%sy, 0.0%ni, 99.6%id, 0.2%wa, 0.0%hi, 0.0%si, 0.0%st
Mem: 4002912k total, 306824k used, 3696088k free, 21144k buffers
Swap: 4004732k total, 0k used, 4004732k free, 202456k cached
```

PID	USER	PR	NI	UIRT	RES	SHR	S	%CPU	%MEM	TIME+	COMMAND
2030	root	20	0	12056	3788	3016	S	0.0	0.1	0:00.80	sshd
2026	root	20	0	74720	3496	2632	S	0.0	0.1	0:00.72	eapi_serverd
1129	root	20	0	13892	2944	2276	S	0.0	0.1	0:00.59	master
1390	root	18	-2	3356	1848	596	S	0.0	0.0	0:00.08	udevd
1391	root	18	-2	3356	1848	596	S	0.0	0.0	0:00.05	udevd
2035	root	20	0	5120	1660	1424	S	0.0	0.0	0:00.10	bash
998	root	20	0	36988	1496	1016	S	0.0	0.0	0:00.10	rsyslogd
1	root	20	0	2896	1396	1200	S	0.0	0.0	0:01.86	init
1139	root	20	0	6032	1312	732	S	0.0	0.0	0:02.98	crond
2050	root	20	0	2680	1140	904	R	0.7	0.0	0:00.65	top
1052	root	20	0	9004	1080	540	S	0.0	0.0	0:00.04	sshd
420	root	16	-4	2700	1004	368	S	0.0	0.0	0:01.29	udevd
978	root	16	-4	12884	776	572	S	0.0	0.0	0:00.06	auditd
1350	root	20	0	2832	772	496	S	0.0	0.0	0:00.00	dhclient
1392	root	20	0	2004	508	448	S	0.0	0.0	0:00.00	mingetty
1380	root	20	0	2004	504	448	S	0.0	0.0	0:00.02	mingetty
1382	root	20	0	2004	504	448	S	0.0	0.0	0:00.01	mingetty
1386	root	20	0	2004	504	448	S	0.0	0.0	0:00.00	mingetty
1394	root	20	0	2004	504	448	S	0.0	0.0	0:00.00	mingetty
1384	root	20	0	2004	500	448	S	0.0	0.0	0:00.01	mingetty
2	root	20	0	0	0	0	S	0.0	0.0	0:00.00	kthreadd
3	root	RT	0	0	0	0	S	0.0	0.0	0:00.03	migration/0
4	root	20	0	0	0	0	S	0.0	0.0	0:00.00	ksoftirqd/0
5	root	RT	0	0	0	0	S	0.0	0.0	0:00.00	stopper/0

Use the **kill** command, for example:

```
$ kill -9 2026
```


3.3 Configuring the EAPI Service

File path in Windows

C:\SEMA\config\conf.xml

File path in Linux

/etc/SEMA/config/conf.xml

```
<?xml version="1.0"?>
- <Server>
  <id>ADLINK_SEMA3.0.0</id>
  - <security>
    <!-- true for SSL , false for non-SSL connection -->
    <SSL>true</SSL>
    <!-- the files must be located at the same folder as EAPI_Server -->
    <certificate>server.crt</certificate>
    <privatekey>server.key</privatekey>
    <dhfile>dh512.pem</dhfile>
    <passwd>202CB962AC59075B964B07152D234B70</passwd>
  </security>
  <ipversion>IPV4</ipversion>
  <port>9999</port>
  <maxconnection>10</maxconnection>
  <logsize>4096</logsize>
  <loglevel>warning</loglevel>
</Server>
```

Setting	Description
id	The id string to identify the target device for the SEMA Dashboard
security\SSL	true: enable SSL socket false: disable SSL socket
security\certificate	The location of certification
security\privatekey	The location of private key
security\dhfile	The location of dhfile
security\passwd	The password to connect to EAPI server. MD5 encrypted
ipversion	IPV4: use ipv4 IP address IPV6: use ipv6 IP address
port	The port number to listen for the client connection.
maxconnection	The maximum number of connection at a time.
logsize	The maximum log size (in kB)

Setting	Description
loglevel	The detail level of log information "trace" "debug" "info" "warning" "error" "fatal"
watchdog\enable	Not support currently
watchdog\resettime	Not support currently

3.4 Configuring the MQTT Service

If users have installed the SEMA Dashboard Server, the target device must be configured using the file mqtt.xml.

File path in Windows

C:\SEMA\config\mqtt.xml

File path in Linux

/etc/SEMA/config/mqtt.xml

```
<?xml version="1.0"?>
- <mqtt>
  <sn>ADLINK_SEMA</sn>
  - <connection>
    <ip>172.16.6.180</ip>
    <port>1883</port>
    <timeout>10</timeout>
    <ping>10</ping>
    <cache>1000</cache>
  </connection>
  - <configure>
    - <Push_Interval>
      <timeout>60</timeout>
      <unit>second</unit>
    </Push_Interval>
    <Register>0</Register>
    - <log>
      <level>warning</level>
      <size>4096</size>
    </log>
  </configure>
  - <static_message>
    <ip/>
    <mac/>
    <disk>0</disk>
  </static_message>
</mqtt>
```

Open the file mqtt.xml in a text editor, set the IP address, port and cache.

Setting	Description
ip	The SEMA Dashboard Server's IP address
port	The SEMA Dashboard Server port. Default value is 1883
cache	The number of data items that can be stored temporarily offline. Default value is 1000

4 Firewall


By default, most of programs/ports are blocked by the firewall to help keep your computer secure. To enable a SEMA remote API call, users must unblock the port number to allow SEMA communication through the firewall. SEMA uses ports 9999 and 1883 by default. Please ensure the firewall is setup correctly.

Note: Make sure that ports 9999 and 1883 are not banned by the IT infrastructure.



4.1 Windows

To add an app to the list of allowed apps, follow the procedure below.



1. Open Windows Firewall by clicking the *Start* button and then clicking *Control Panel*. In the search box, type *firewall*, and then click *Windows Firewall*.
2. In the left pane of Windows Firewall, click *Allow a program or feature*.

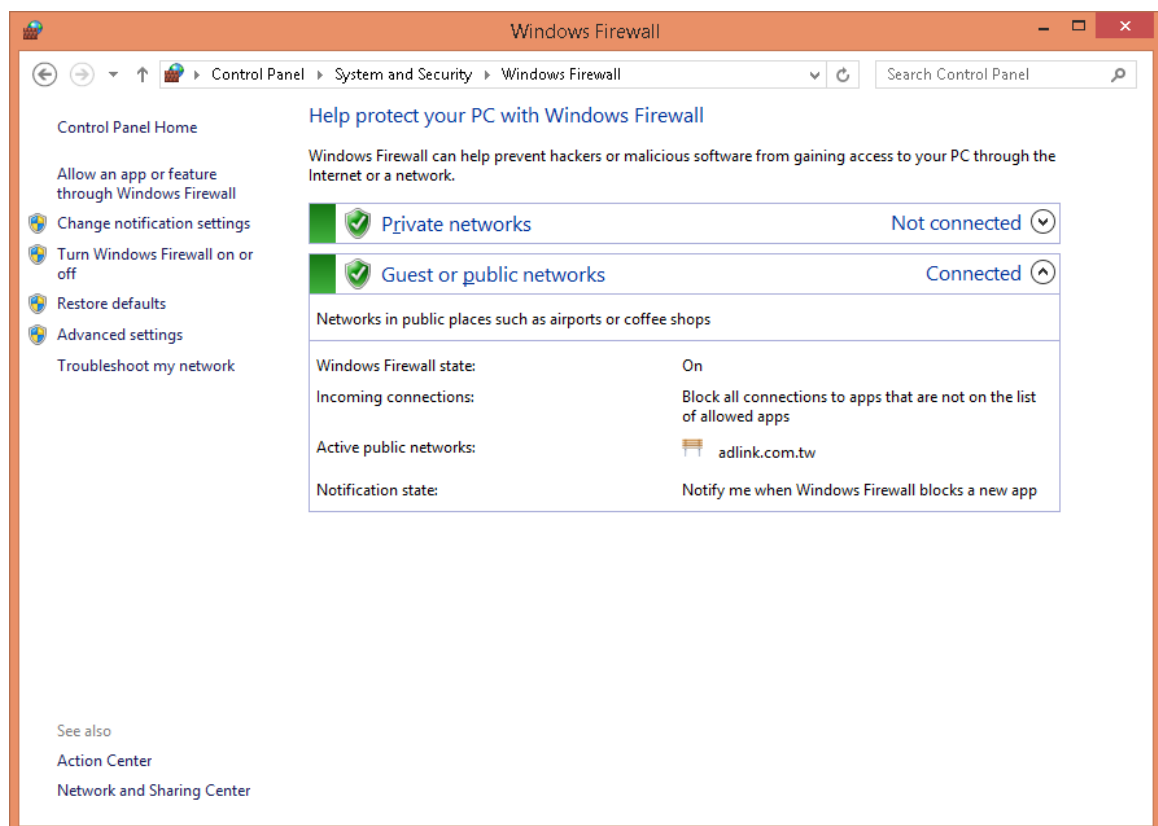


3. Click *Change settings*, and then click *Allow another app*.

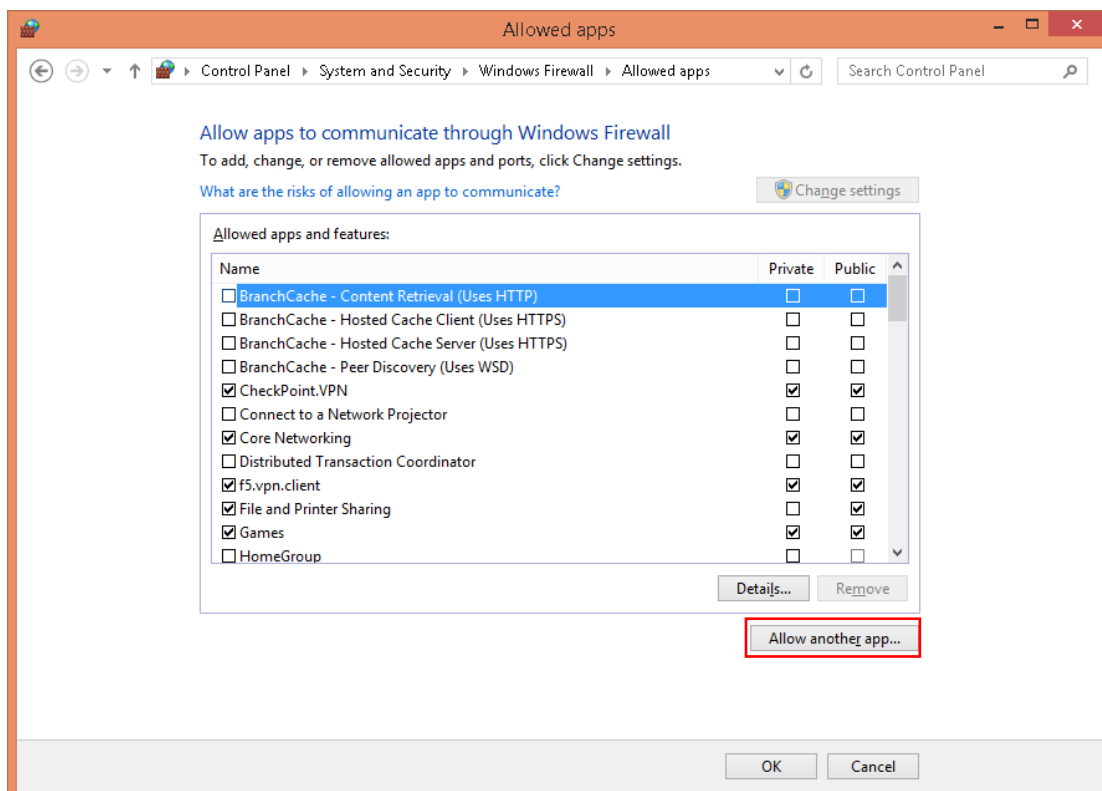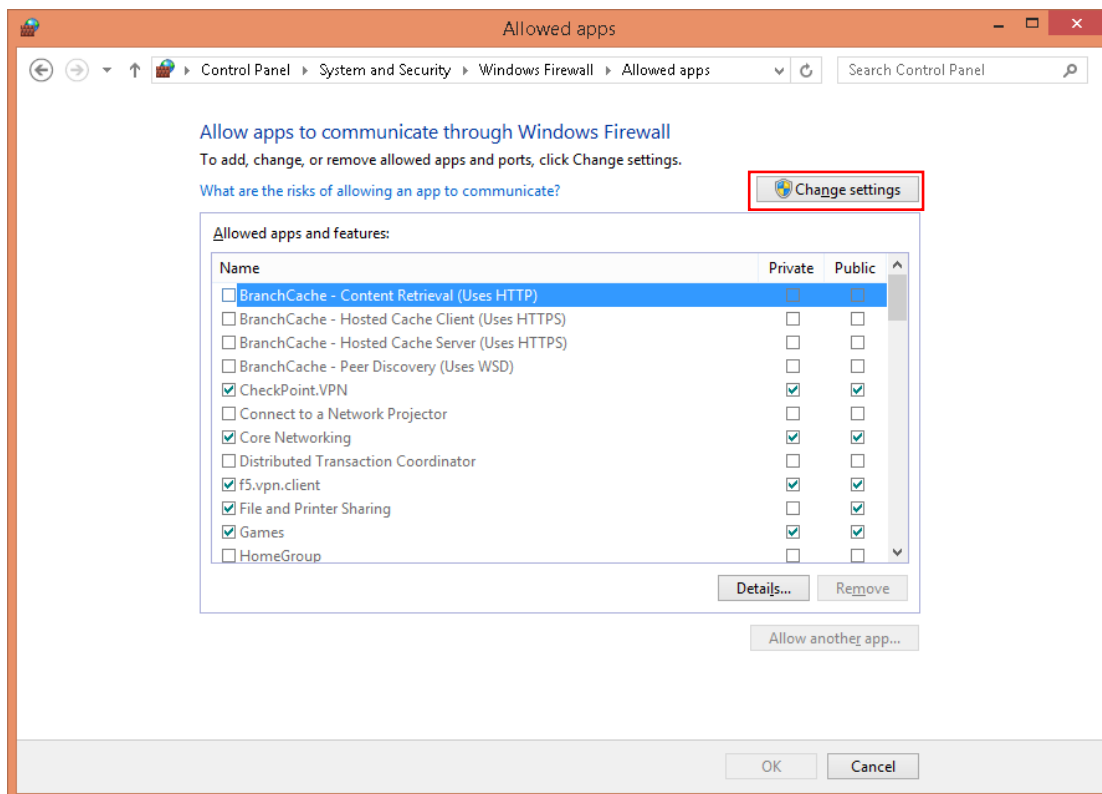

4. Browse to the program *eapi_serverd* and click *Open* to add it to the list of allowed apps.

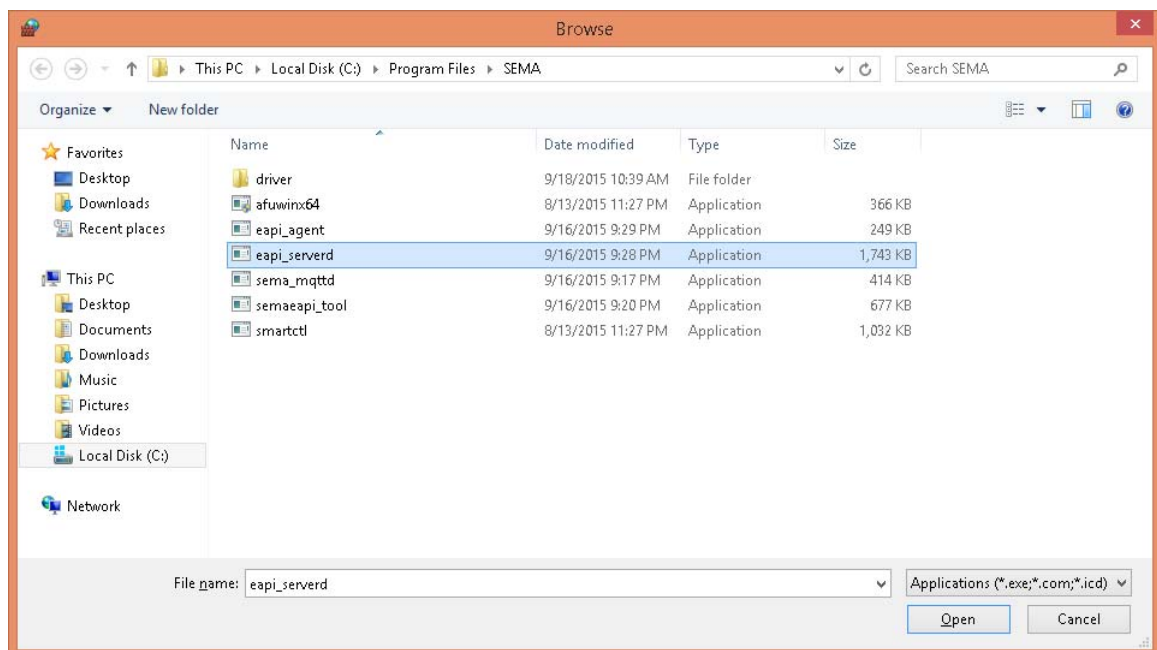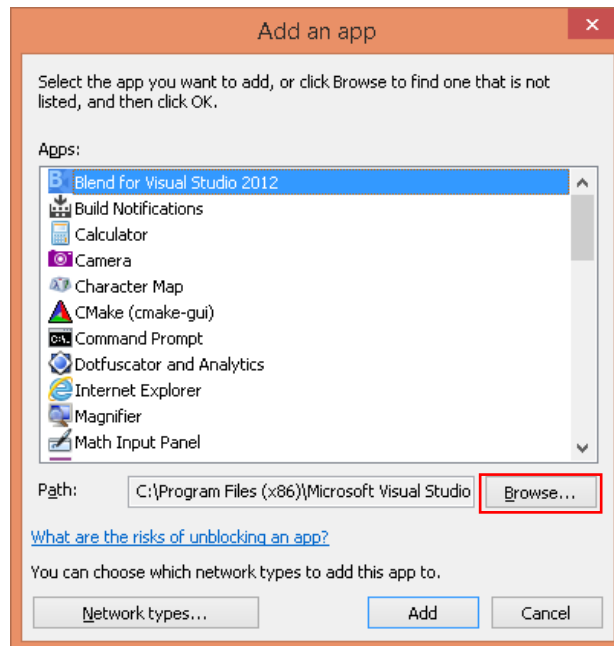

5. Select the check box next to the program *eapi_serverd* to allow it, then select the network locations you want to allow communication on, and then click **OK**.

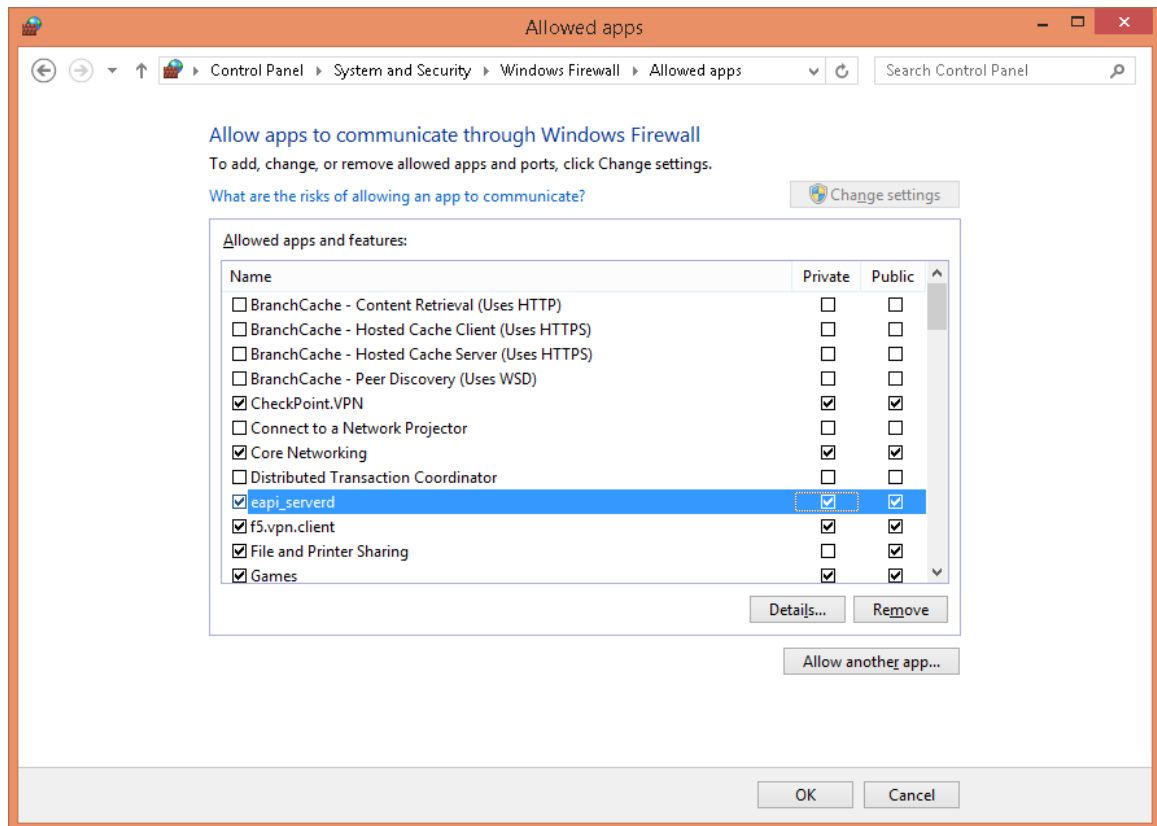

6. Follow steps 3 to 5 above to allow *sema_mqttd* (port 1883) to communicate through Windows Firewall.

4.2 Linux

Allow ports through firewall

Find the setting files `/etc/SEMA/config/conf.xml` and `/etc/SEMA/config/mqtt.xml`, and allow the ports in these files through firewall.

```
<?xml version="1.0"?>
<Server>
  <id>ADLINK_SEMA3.0.0</id>
  <security>
    <!-- true for SSL , false for non-SSL connection -->
    <SSL>true</SSL>
    <!-- the files must be located at the same folder as EAPI_Server -->
    <certificate>server.crt</certificate>
    <privatekey>server.key</privatekey>
    <dhfile>dh512.pem</dhfile>
    <passwd>202CB962AC59075B964B07152D234B70</passwd>
  </security>
  <ipversion>IPv4</ipversion>
  <port>9999</port>
  <maxconnection>10</maxconnection>
  <logsize>4096</logsize>
  <loglevel>warning</loglevel>
</Server>
~
~
~
~
"/etc/SEMA/config/conf.xml" [noeol] 18L, 538C 1,1 All
```

```
<?xml version="1.0"?>
<mqtt>
  <sn>ADLINK_SEMA</sn>
  <connection>
    <ip>61.222.153.59</ip>
    <port>1883</port>
    <timeout>10</timeout>
    <ping>10</ping>
    <cache>1000</cache>
  </connection>
  <configure>
    <Push_Interval>
      <timeout>60</timeout>
      <unit>second</unit>
    </Push_Interval>
    <Register>1</Register>
    <log>
      <level>warning</level>
      <size>4096</size>
    </log>
  </configure>
  <static_message>
    <ip />
  </static_message>
</mqtt>
"/etc/SEMA/config/mqtt.xml" 27L, 471C 1,1 Top
```


5 Security Connection

If SSL encryption is enabled, the same set of SSL keys should be installed on all computers involved in remote communication via SEMA API. Keys can be generated on any Linux host using following commands:

Generate a private key:

```
# openssl genrsa -des3 -out server.key 1024
```

Generate a certificate signing request:

```
# openssl req -new -key server.key -out server.csr
```

Sign the certificate with the private key:

```
# openssl x509 -req -days 3650 -in server.csr -signkey server.key -out server.crt
```

Remove password requirement:

```
# cp server.key server.key.secure
```

```
# openssl rsa -in server.key.secure -out server.key
```

Generate a dhparam file:

```
# openssl dhparam -out dh512.pem 512
```

The resulting *dh512.pem*, *server.crt* and *server.key* must be put in the */etc/SEMA/cert/* or *c:\SEMA\cert* directory on all computers involved in remote communication via SEMA API. If these files are not generated and installed manually, the predefined keys included with the install package will be used (see warning below).



WARNING: to make sure their connections are secure.

The install package comes with predefined keys for customer testing purposes. These keys are distributed to the public. Customers should create their own keys

Getting Service

Ask an Expert: <http://askanexpert.adlinktech.com>

ADLINK Technology, Inc.

Address: 9F, No.166 Jian Yi Road, Zhonghe District
New Taipei City 235, Taiwan
新北市中和區建一路166號9樓
Tel: +886-2-8226-5877
Fax: +886-2-8226-5717
Email: service@adlinktech.com

Ampro ADLINK Technology, Inc.

Address: 5215 Hellyer Avenue, #110
San Jose, CA 95138, USA
Tel: +1-408-360-0200
Toll Free: +1-800-966-5200 (USA only)
Fax: +1-408-360-0222
Email: info@adlinktech.com

ADLINK Technology (China) Co., Ltd.

Address: 上海市浦东新区张江高科技园区芳春路300号 (201203)
300 Fang Chun Rd., Zhangjiang Hi-Tech Park
Pudong New Area, Shanghai, 201203 China
Tel: +86-21-5132-8988
Fax: +86-21-5132-3588
Email: market@adlinktech.com

LIPPERT ADLINK Technology GmbH

Address: Hans-Thoma-Strasse 11, D-68163
Mannheim, Germany
Tel: +49-621-43214-0
Fax: +49-621 43214-30
Email: emea@adlinktech.com

Please visit the Contact page at www.adlinktech.com for information on how to contact the ADLINK regional office nearest you: