

4/11/2013

GILAT

NGNMS – AUTOMATED TESTING

Usage examples for: `wptest.py` | Vitalie Ghelbert - Moldova

Contents

Instalation	2
Example.....	7
Real working example flow:.....	7
Usage examples	8
Show help.....	8
Show active vsat's.....	9
Show one particular vsat	11
Show hub configuration.....	12
Checking vsat	13
Checking hub.....	15
Show DLF configurations:	16
Checking DLF connection:	16
Setting DLF device:.....	17
Run one particular test	17
Run all active test cases	17
Configuring TESTCASES	0
Data from output.xls file after running test.....	0
Configuring HUB.....	0
Configuring VSAT.	1

Installation

- from [\\gna2\pituach\Svl\Automation&Simulator](#) copy WP folder to disk C:
- enter C:\WP \setup folder
- Follow install instructions from INSTALL.TXT file.

For 32 bit Windows, install all programs from 32/ folder in order specified below:


1. python-2.7.5.msi
2. setuptools-0.7.4.win32-py2.7.exe
3. pycurl-7.19.0.win32-py2.7.exe
4. pyserial-2.7-pre1.win32-py2.7.exe
5. install_xlutils.bat

For 64 bit Windows, install all programs from 64/ folder in order specified below:


1. python-2.7.5.amd64.msi
2. setuptools-0.7.4.win-amd64-py2.7.exe
3. pycurl-7.19.0.win-amd64-py2.7.exe
4. pyserial-2.7-pre1.win-amd64-py2.7.exe
5. install_xlutils.bat

- Add python path to PATH variable: C:\Python27; C:\Python27\Scripts;


1. Click Start button, then right click on My Computer and click Properties (see picture below).

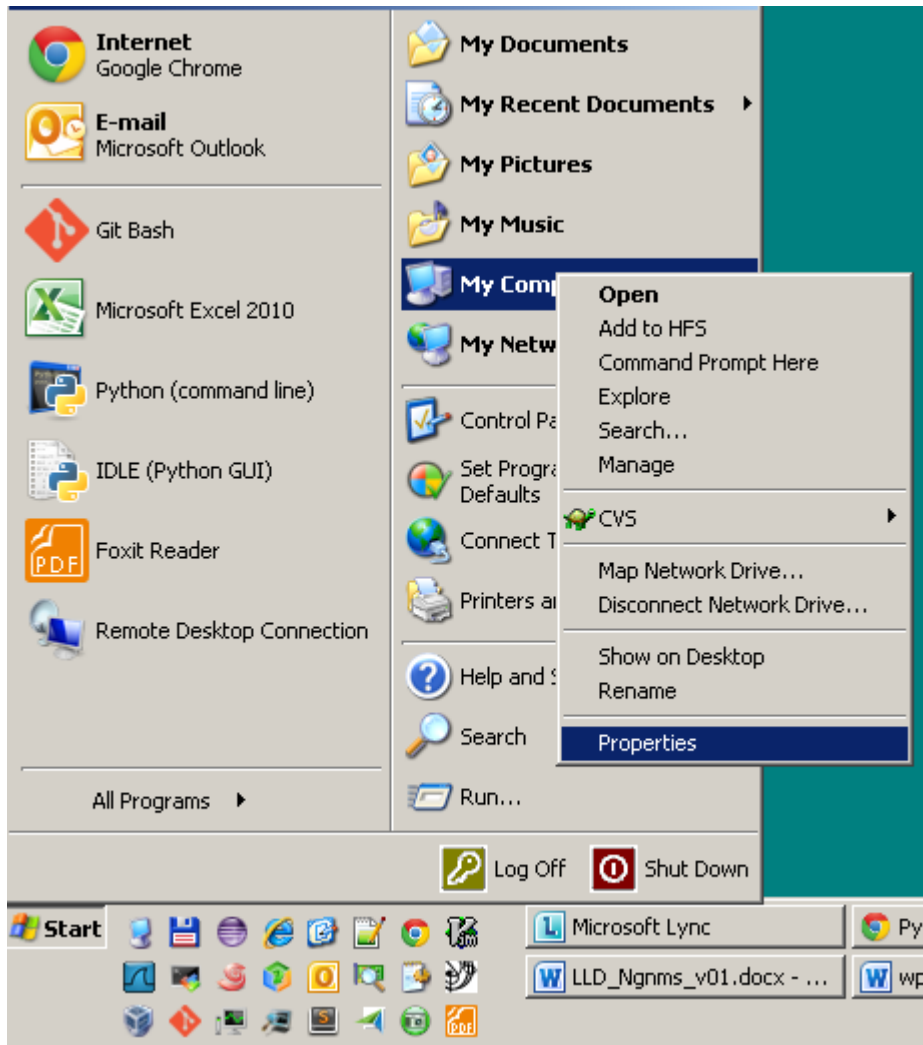



2. Then click on Advanced Tab.

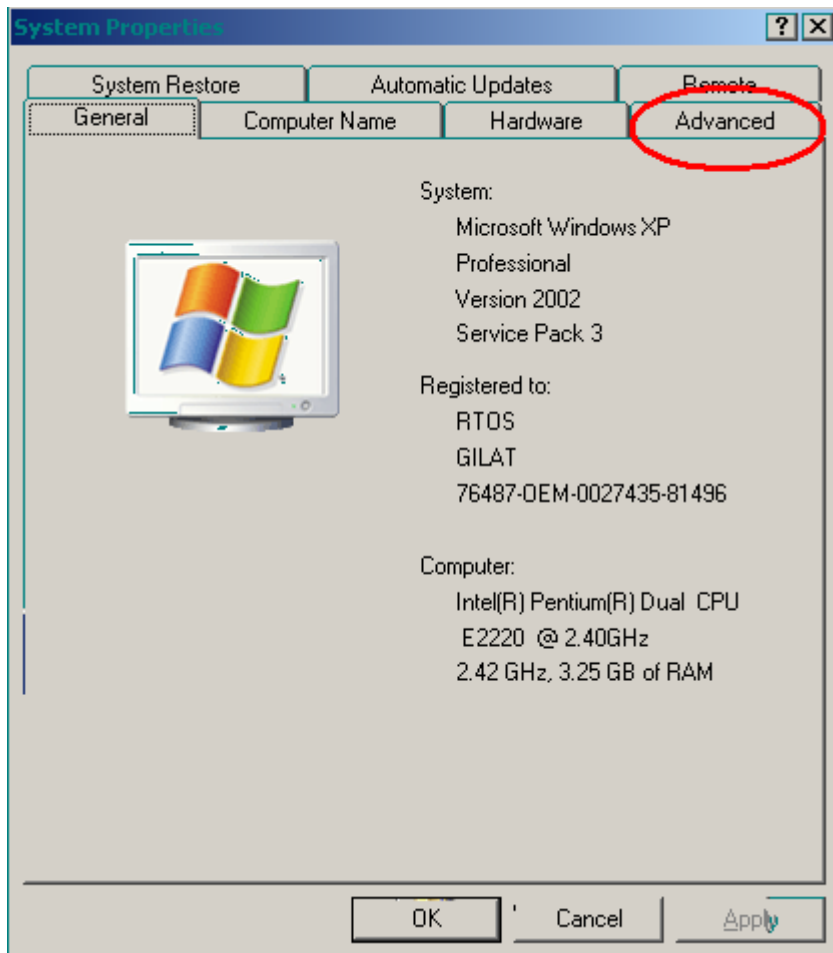

3. Click on Environment Variables.

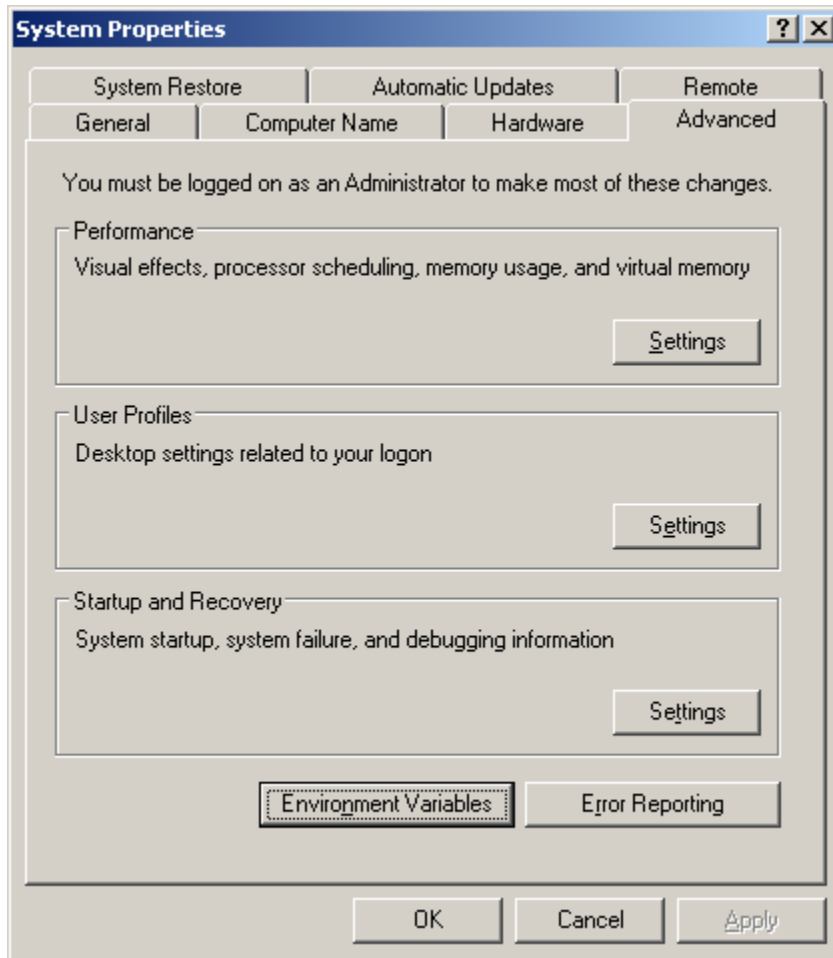

4. From there, find Path variable and press Edit button:
Copy and Paste C:\Python27; C:\Python27\Scripts; and press OK.
Note: don't miss (;) at the end!

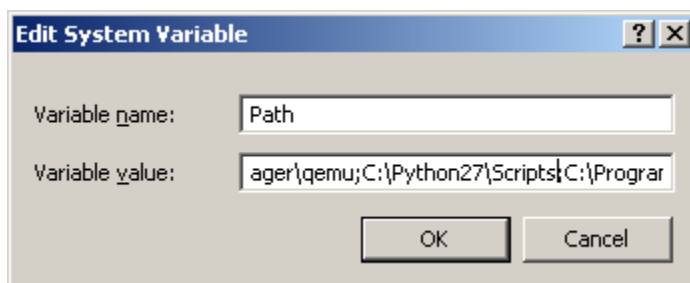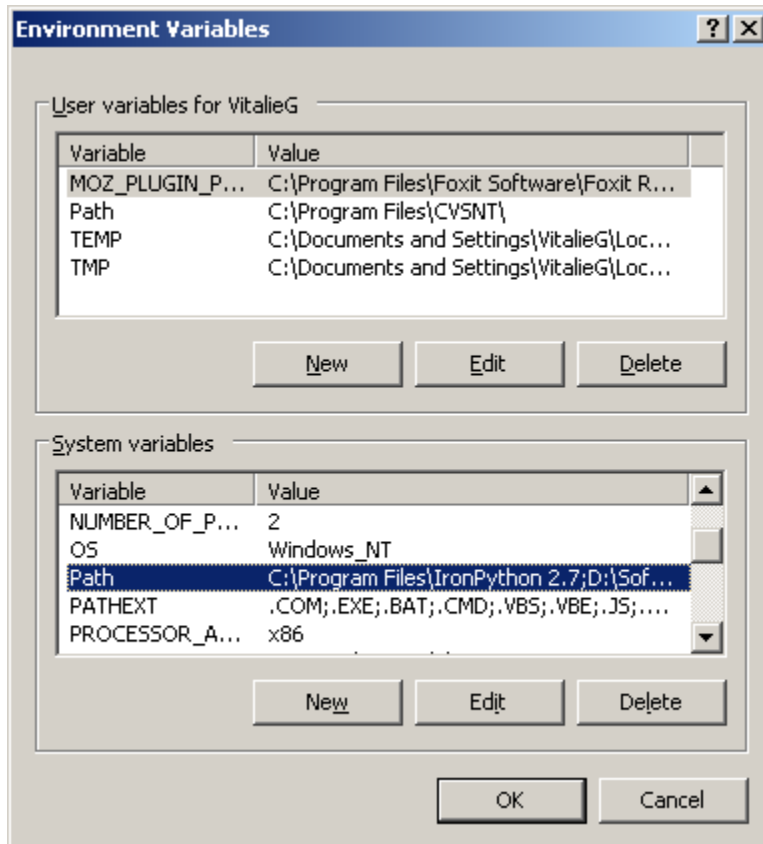

Example

Real working example flow:

1. open C:\WP\ngnms\data\demo.xls
2. open command prompt to C:\WP\ngnms
3. show DLF configuration file:

```
wptest.py --dlf show
```

4. configuring DLF file C:\WP\ngnms\configs\dlf.ini
5. setting and setup DLF with:

```
wptest.py --dlf setup
```

```
wptest.py --dlf set
```

NOTE: set "serial = 0" in C:\WP\ngnms\configs\dlf.ini if needed DLF connection over TCP.

6. show VSAT enabled configurations with:

```
wptest.py --show vsat
```

7. show HUB enabled configurations with:

```
wptest.py --show hub
```

8. show enabled TESTCASES with:

```
wptest.py --show test
```

9. correct VSAT and/or HUB configurations into C:\WP\ngnms\data\demo.xls

10. check VSAT with:

```
wptest.py --check vsat
```

11. check HUB with:

```
wptest.py --check hub
```

12. If VSAT, HUB, DLF are ok, we could run one TESTCASE with:

```
wptest.py --run --name 2
```

Note: this will run TESTCASE number 2. To run all TESTCASES:

```
wptest.py --run
```

13. When program finished to run, you could check for result in:

C:\WP\ngnms\data\output

Usage examples

Show help

```
C:\WP\ngnms>wptest.py --help
```

```
Usage: wptest.py [options]
```

```
Copyright 2013 Gilat
```

```
Options:
```

```
--version      show program's version number and exit
-h, --help     show this help message and exit
-c DEVICE, --check=DEVICE
                check [hub, vsat]'s status.
-n NAME, --name=NAME  vsat name to check.
-s INFO, --show=INFO  show [all, hub, vsat, test]'s info.
-d, --disabled     show disabled rows only.
-i INFILE, --in-file=INFILE
                testcases input file [default: data/demo.xls]
-r, --run         run one or [default:enabled] test cases
--dlf=DLF        dlf state [show, check, set, setup]
```

```
wptest.py - read and run test cases from excel file.
```

Show active vsat's

- `wptest.py --show vsat`
- `wptest.py --show vsat --disabled`

```
C:\WP\ngnms>wptest.py --show vsat
```

INFO: Excel file data/demo.xls!

ENABLED

VSAT : ENABLED

VSAT : V1 : ENABLED

```
Active           = x
Name             = V1
Console IP       = 192.168.140.76
Console PORT     = 1010
Connection timeout = 10
Number of tries  = 3
Tries timeout    = 10
```

[illegible]

Show one particular vsat

- `wptest.py --show vsat --name V4`

```
C:\WP\ngnms>wptest.py --show vsat --name V4
```

INFO: Excel file data/demo.xls!

[illegible][illegible]

XX

VSAT : ENABLED

XX

VSAT: V1

[illegible]

DISABLED

[illegible]

XX

VSAT : DISABLED

XX

VSAT: V2

VSAT: V3

VSAT : V4 : DISABLED

Active =

Name = V4

Console IP = 10.111.35.6

Console PORT = 1004

Connection timeout = 10

Number of tries = 3

Tries timeout = 10

VSAT: V5

VSAT: V9

VSAT: V10

Show hub configuration

- `wptest.py --show hub`
- `wptest.py --show hub --disabled`

```
C:\WP\ngnms>wptest.py --show hub
```

INFO: Excel file data/demo.xls!

ENABLED

HUB : ENABLED

HUB : NS_3 : ENABLED

```
Active          = x
Name            = NS_3
Type            = NS
URL             = https://172.20.255.1
User            = rnd
Password        = 6DTR2ZHGS6MQQ
```

```
C:\WP\ngnms>wptest.py --show hub --disabled
```

INFO: Excel file data/demo.xls!

DISABLED

HUB : DISABLED

HUB : NS_3 : DISABLED

```
Active      =
Name        = NS_3
Type        = NS
URL         = https://ngnms-server/
User        = admin
Password    = manager
```

Checking vsat

- `wptest.py --check vsat`
- `wptest.py --check vsat --name V2`

```
C:\WP\ngnms>wptest.py --check vsat
```

INFO: Excel file data/demo.xls!

[illegible]

```
-- V1 : ENABLED --
```

```
Active      = x
Name        = V1
Console IP   = 192.168.140.76
Console PORT = 1010
Connection timeout = 10
Number of tries = 3
Tries timeout = 10
```

```
step:\> Checking connection ...
status: -> SUCCESS!
```

```
step:\> Checking link status!  
status: Total Backbone Links UP = 1  
status: ->Link UP!
```

[illegible]

Checking hub

- `wptest.py --check hub`

```
C:\WP\ngnms>wptest.py --check hub
```

```
=====
INFO: Excel file data/demo.xls!
=====
```

```
step:\> Connecting to: https://ngnms-server
```

```
info:\> [user: admin] [password: manager]
```

```
status: 200 https://ngnms-server/navigation/statustree/network
```

```
step:\> Scanning ngnms network tree ...
```

```
-----
Teleport: main
```

```
  Satellite: Satellite
```

```
    RF Cluster: rfCluster 1
```

```
      NS: controller
-----
```

```
info:\> Available network segments names on server:
```

```
controller      = 579
```


Show DLF configurations:

```
C:\WP\ngnms>wptest.py --dlf show
```

```
serial = 1
serial_port = COM1
serial_baudrate = 19200
tcp_ip = 192.168.140.76
tcp_port = 1001
```

Note: change serial = 0 to connect over TCP to DLF device.

```
[Action]
default = 0
constant = 1
trapeze = 0
sinus = 0
saw = 0
connectivity = 0
```

```
[DefaultsComp]
ib_noise = 1
ob_noise = 1
noise_output = 0
sync = 1
mesh = 0
etc ...
```

Checking DLF connection:

```
C:\WP\ngnms>wptest.py --dlf check
```

```
status:\> Serial(id=0xc9c790, open=True)(port='COM1', baudrate=19200, bytesize=8, parity='N',
stopbits=1, timeout=None, xonxoff=False, rtscts=False, dsrdtr=False)
status:\> checking serial port: COM1
status:\> port open: True
status:\> closing port: COM1
status:\> port open: False
```

Setting DLF device:

```
C:\WP\ngnms>wptest.py --dlf set
```

```
status:\> setting DLF defaults.
```

```
status:\> sending data over serial: COM1
```

```
status:\> finished!
```

```
C:\WP\ngnms>wptest.py --dlf setup
```

```
status:\> setting DLF defaults.
```

```
status:\> sending data over serial: COM1
```

```
ib_noise = 1 -> 90060D
```

```
ob_noise = 1 -> 93060D
```

```
noise_output = 0 -> 92000D
```

```
sync = 1 -> 91070D
```

```
mesh = 0 -> 8F000D95000D
```

```
status:\> finished!
```

Run one particular test

- **wptest.py --run --name 1**

Run all active test cases

- **wptest.py --run**

Note: to run all disabled tests use --disabled option.

- **wptest.py --run --disabled**

Configuring TESTCASES

Clipboard | Form | Alignment | Font | Styles | Undo | Redo

A4 | fx

Active	Test N°	OB symbol rate	OB mode code	RTN Channels Frequency Plan	IB symbol rate	IB mode code	Number of Channels	Dynamic/Static	Symbol Rate							
T	T	T	T	T	1 2 3 4	1 2 3 4	1 2 3 4	1 2 3 4	1 2 3 4							
	1	45000000	QPSK 1/3	DYNAMIC	768	128	QPSK 1/2	QPSK 3/4	111	112	STATIC	DYNAMIC	1024	256	128	768
	2	45000000	QPSK 2/3	DYNAMIC	1024	768	QPSK 6/7	QPSK 4/5	111	112	STATIC	DYNAMIC	1024	256	128	768
	3	45000000	QPSK 3/5	STATIC	512	768	8PSK 3/4	QPSK 4/5	111	112	DYNAMIC	DYNAMIC	2048	256	128	768
X	4	45000000	16APSK 9/10	STATIC	768	768	QPSK 3/4	QPSK 3/4	111	112	STATIC	DYNAMIC	1024	1024	128	768
	5	45000000	8PSK 8/9	DYNAMIC	768	768	8PSK 3/4	QPSK 4/5	111	112	DYNAMIC	STATIC	1024	256	128	768
	6	45000000	QPSK 3/4	DYNAMIC	768	768	8PSK 4/5	8PSK 2/3	111	112	DYNAMIC	DYNAMIC	1024	256	128	768
	7	45000000	8PSK 5/6	STATIC	768	768	8PSK 4/5	8PSK 3/4	111	112	DYNAMIC	DYNAMIC	1024	256	128	768
x	8	45000000	8PSK 9/10	DYNAMIC	768	768	8PSK 3/4	QPSK 1/2	111	112	STATIC	DYNAMIC	1024	256	128	768
	9	45000000	QPSK 3/4	DYNAMIC	768	768	8PSK 2/3	8PSK 2/2	111	112	STATIC	DYNAMIC	1024	256	128	768
	10	45000000	QPSK 2/3	STATIC	768	768	8PSK 6/7	8PSK 3/4								
	11	45000000	QPSK 1/4	DYNAMIC	768	768	QPSK 2/3	8PSK 6/7								

FWD Link

Uplink Center Frequency

28100000

[27850000..30000000 KHz] !

Symbol Rate

45000000

[3000000..60000000 sps] !

MODCOD Range - Base MODCOD

QPSK 3/4

i !

MODCOD Range - Most Efficient MODCOD

8PSK 4/5

i !

TX Power

0 dBm

[dBm]

RFT Uplink LO

27000000

[1000000..30000000 KHz] !

10MHz Output to RFT

Enable

RTN Link

RTN Frequency Slice 1

RTN Channels Frequency Plan

Static Frequency Plan i !

RTN Channel Types

Index

Symbol Rate

MODCOD

Number of Channels

Dynamic/Static

1

128

QPSK 3/4

1

Static

2

2048

QPSK 3/4

1

Static

Dynamic Channels - Channel Mix

Index

Symbol Rate

1

128

By default, you could use demo.xls file from data directory: C:\WP\ngnms\data\demo.xls

Hint: Make a copy before changing demo.xls file.

You can specify witch input file to use with -i option:

Example:

```
wptest.py -i data/demo.xls --run --name 4
```

That will read test cases from [data/demo.xls] file, and store to [data/output/] directory.

NOTE: by default, [data/demo.xls] is used if no (-i) option in provided.

Data from output.xls file after running test

AG	AI	AI	AJ	AK	AL	AM
Max IB bit rate [kbps]	Max OB bit rate [kbps]	VSAT CPU [IB] [OB]	Number of transmitted OB packets	Number of received IB packets	Number of OB retransmit packets	Channel
S	S	S	S	S	S	S
0	0	[10][10]	0	0	0	TS Id:0 TRF 2-ATM QPSK 1/2 256000 Sps
0	0	[10][10]	0	0	0	TS Id:0 TRF 2-ATM QPSK 1/2 256000 Sps

Configuring HUB.

	A	B	C	D	E	F
1	Active	Name	Type	URL	User	Password
2		NS_3	NS	https://172.20.255.1	rnd	6DTR2ZHGS6MQQ
3		Network Segment	NS	https://172.20.255.1	admin	manager
4	x	NS1	NS	https://172.20.255.1	admin	manager
5		NS5	NS	https://192.168.140.150:8443	admin	manager
6						
7						

Active: just one line should be active.

Name: fill here network segment name

Type: optional

URL: ngnms link

User: ngnms user

Password: ngnms password

Configuring VSAT.

A1 fx Active								
	A	B	C	D	E	F	G	H
1	Active	Console PORT	Console IP	Connection timeout	Number of tries	Channel Name	Channel Number	Tries timeout
2		10001	172.17.222.4	10	10			10
3		1012	192.168.140.76	10	3	INB2	1	10
4		1014	192.168.140.76	10	3	INB4	0	10
5	x	10025	172.17.11.233	10	10	INB3	0	10
6	x	10024	172.17.11.233	10	10	INB4	4	10
7		1009	10.111.35.8	10	3			10
8		1010	10.111.35.9	10	3			10
9								
10								

Active: just one line should be active.

Console Port: telnet port connection

Console IP: telnet ip connection

Connection timeout: time until timeout

Channel Name: vsat connected to DLF channel.

Channel Number: TRF channel on which transmit vsat.

Number of tries: how many tries to check until link UP.

Tries timeout: time between each try if vsat has link DOWN.