

Android Application Manual


CHAPTER 1. SCANEMUL.....	4
1. EDIT PROFILE	4
2. EDIT PROFILE - MENU.....	5
3. EDIT PROFILE – DELETE.....	5
4. RESULT WINDOW	6
5-1. General Settings – 1D	6
5-2. General Settings – Zebra 2D.....	7
5-3. General Settings – Zebra 2D - IDC.....	8
5-4. General Settings – Honeywell 2D.....	9
6-1. READING OPTION – 1D	10
6-2. READING OPTION – Zebra, Honeywell 2D	11
7. Intent Output.....	12
8. ETC.....	12
9. Code Type Settings.....	12
10. Code Type Params (1D).....	13
11. Code Type Params (Zebra 2D)	16
12. Multi Decode Mode.....	19
CHAPTER 2. UHF EMUL	20
1. EDIT PROFILE	20
2. EDIT PROFILE - MENU.....	21
3. EDIT PROFILE – DELETE.....	21
4-1. Result Window - Inventory.....	22
4-2. Result Window - Config.....	22
4-3. Result Window - Memory Access	23
4-4. Result Window - Lock/Kill.....	24
5. General Settings	25
6. READING OPTION	26
7. Intent Output.....	27
8. ETC.....	27
CHAPTER 3. APPCENTER.....	28
1. First view of the program	28
2. Default Setting	28
3. Login Menu in User.....	29
4. Login.....	30
5. Admin Mode.....	30
6. Manage Apps	31
7. Wallpaper.....	31

8. Apk Path.....	32
CHAPTER 4. STARTUP	33
1-1. Main screen.....	33
1-2. Main screen – option menu.....	34
1-3. Main screen – add dialog	34
2-1. Wi-Fi Access Point.....	35
2-2. Wi-Fi Preference.....	36
3. APN Settings.....	37
4. File Download.....	37
5. Install APK.....	38
6. Date and Time.....	38
7-1. Start Application	39
7-2. Application select.....	39
8-1. ETC - Display & Volume Settings	40
8-2. ETC - Location, Language, NFC, Airplane, Bluetooth, Unknown source.....	41
8-3. ETC – OTA, Airplane, Bluetooth, Unknown source.....	41
9-1. Make barcode(Export) - List.....	42
9-2. Make barcode(Export) - Barcode.....	42
10. Read barcode(Import)	43
CHAPTER 5. KEYTOOL FOR SM15	44
1. Select	44
2. Settings.....	45
CHAPTER 6. HOT SWAP FOR SM15	46
1. Hot Swap	46
2. Restrictions.....	47
CHAPTER 7. LRSCANEMUL FOR SM15	48
1. EDIT PROFILE	48
2. RESULT WINDOW.....	49
3-1. Settings	50
3-2. Settings	51
SERVICES	52

Chapter 1. ScanEmul

Supported	Restriction
SM15	OS Higher than Nougat 1.2.0
UL20	OS Higher than Oreo 1.0.0


1. EDIT PROFILE

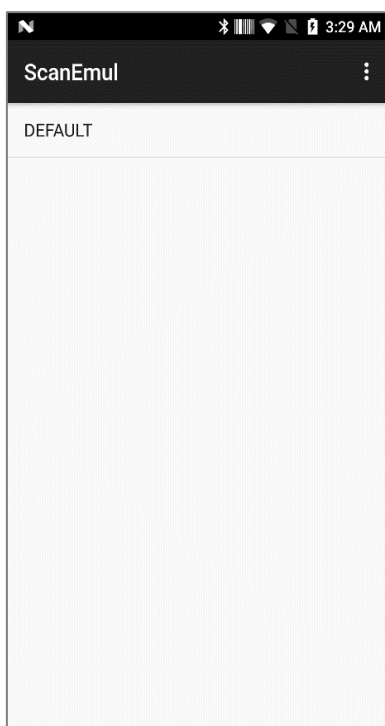

■ Edit Profile


- ✓ Here user can edit setting profiles.
- ✓ DEFAULT profile is created by default.
- ✓ In DEFAULT profile every apps are included except apps which are set for other profiles.
- ✓ Profile is managed as a database. You can copy the scanemul.db file from the following path to another device to use the settings.
'/Android/data/net.m3mobile.app.scanemul/scanemul.db'

2. EDIT PROFILE - MENU

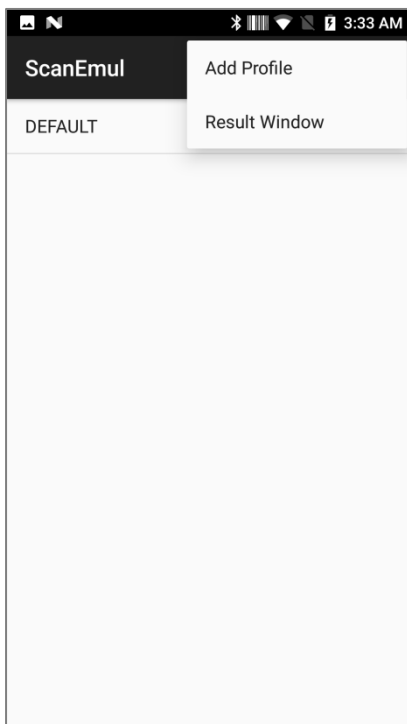


- Profile Menu
 - ✓ Add Profile: Profiles can be added.
 - ✓ Result Window: Barcode type and data will be shown based on as DEFAULT set profile.

3. EDIT PROFILE – DELETE

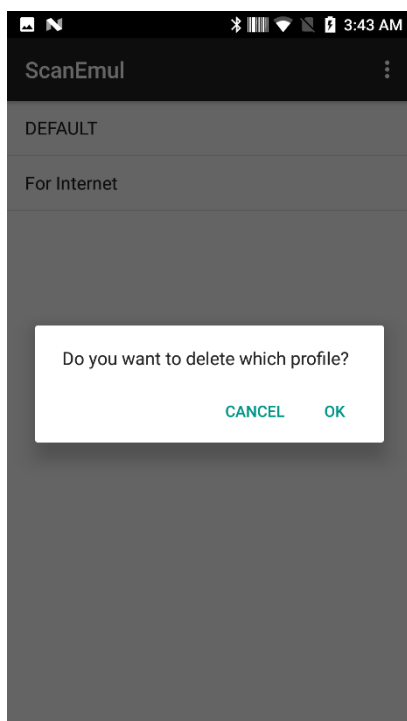


- Delete Profile
 - ✓ Pressing a profile long shows Delete menu.
 - ✓ Pressing "OK" deletes a selected Profile.

4. RESULT WINDOW

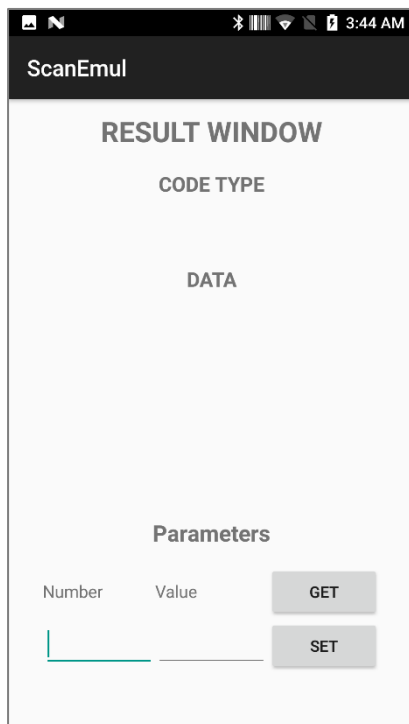


- Result Window
 - ✓ Here user can test simple barcode reading.
 - ✓ The result is given based on DEFAULT Profile 'Intent enable' has to be active.
 - ✓ Parameters

5-1. General Settings – 1D

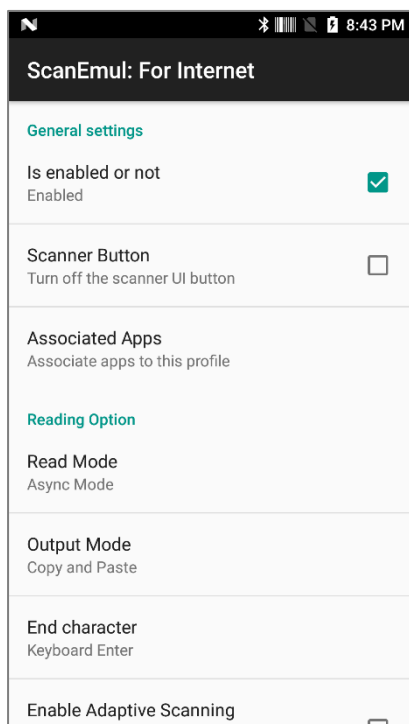

- Is enabled or not: Scanner Activate or Deactivate.
- Scanner Button: Scanner beam button's appeared on screen.
- Associated Apps: Certain apps can be addressed to profile.
(NOTE: 'Associated Apps' cannot be addressed in Default Profile.)

5-2. General Settings – Zebra 2D

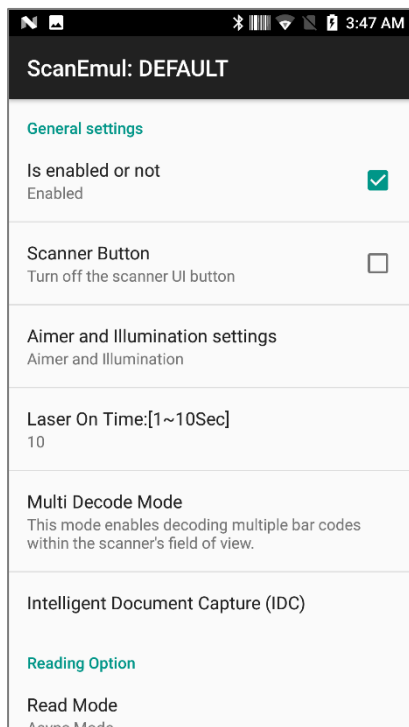

- Is enabled or not: Scanner Activate or Deactivate.
- Scanner Button: Scanner beam button's appeared on screen.
- Aimer and Illumination settings :
 - ✓ Aimer and Illumination
 - ✓ Aimer only
 - ✓ Illumination only
- Laser On Time: Timeout period of emit beam. (1~10 Seconds)
- Multi Decode Mode: Enable decoding multiple bar codes
- Intelligent Document Capture (IDC) : advanced image processing firmware for select imager based decoders.

5-3. General Settings – Zebra 2D - IDC

The screenshot shows the ScanEmul app interface with the following settings:

Intelligent Document Capture (IDC)	
Operating Mode	Linked
Symbology	Select the bar code type(s) to use when Document Capture mode is not set to Off.
X Coordinate	0
Y Coordinate	0
Width	140
Height	65
Folder	/storage/emulated/0/android/data/net.m3mobile.app.scanemul/
File Name	

- Operating Mode : Select the operating mode of the Intelligent Document Capture firmware
 - ✓ Off : Disables the IDC feature.
 - ✓ Anchored : Requires a bar code decode. The image capture region is based off this bar code.
 - ✓ Linked : A printed border or page edge defines the image capture region. A bar code is required.
- Symbology : Select the bar code type(s) to use when Document Capture mode is not set to Off.
- X, Y Coordinate : Specify the horizontal offset to the top left corner of the region to capture relative to the center of the bar code. This parameter only applies when IDC Operating Mode is set to Anchored.
- Width, Height : Specify the width, height of the region to capture. This parameter only applies when IDC Operating Mode is set to Anchored.
- Folder : Specifies the path where the image will be saved.
- File Name : Specifies the name of the file
- Border Type : . Select the style of border used to determine the outline of the capture region in Free-Form and Linked modes
 - ✓ None : capture the largest rectangular region within the field-of-view.
 - ✓ Black : indicate that the border must be black (such as a printed rectangular border).
 - ✓ Select White to indicate that the border must be white (e.g., paper edge on a dark background).
 - ✓ Select Advanced Edge Detection (AED) to capture a region defined by edges of any color and potentially broken.

5-4. General Settings – Honeywell 2D

ScanEmul: DEFAULT

General settings

Is enabled or not
Enabled ☒

Scanner Button
Turn off the scanner UI button ☐

Laser On Time:[1~10Sec]
10

Multi Decode Mode
This mode enables decoding multiple bar codes within the scanner's field of view.

Reading Option


Read Mode
Sync Mode

Output Mode
Key Emulation

End character

- Is enabled or not: Scanner Activate or Deactivate.
- Scanner Button: Scanner beam button's appeared on screen.
- Laser On Time: Timeout period of emit beam. (1~10 Seconds)
- Multi Decode Mode: Enable decoding multiple bar codes

6-1. READING OPTION – 1D

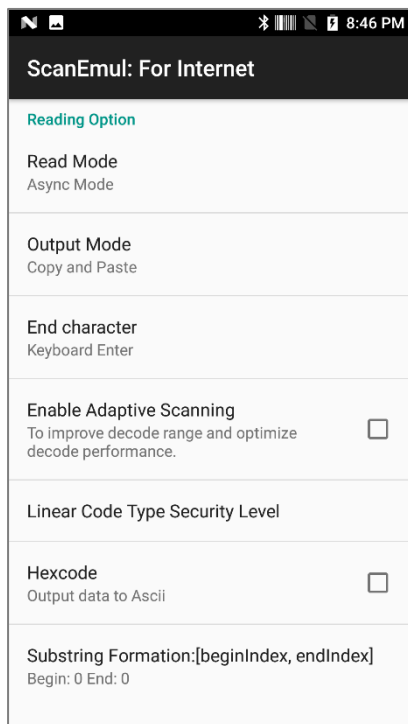

- Read Mode
 - ✓ Async : Emits beam while the scan button is pressed.
 - ✓ Sync : Emits beam for 3 sec.
 - ✓ Continue : Beam keeps emitting after a successful scan.
- OutPutMode : Output method after reading.
 - ✓ Copy and Paste : Outputs the result to clipboard and paste.
 - ✓ Key Emulation : Outputs the result as keyboard type.
 - ✓ None(Clipboard) : Outputs the result to clipboard.
- End character : End command at the end of barcode data.

Example)

 - ✓ Enter : Enter command after reading.
 - ✓ Keyboard Enter : Keyboard Enter command after reading.
- Enable Adaptive Scanning : decode performance based on distance to the barcode and ambient light conditions. At times this feature can nearly double working range.
- Linear Code Type Security Level : Determines how many successful read(s) confirm the result. Ex) 2 means it needs to successfully read the barcode twice to output the result.
- Hexcode : Output data result can be Hexcode.

6-2. READING OPTION – Zebra, Honeywell 2D

ScanEmul: DEFAULT

Reading Option

Read Mode
Async Mode

Output Mode
Copy and Paste

End character
Keyboard Enter

Hexcode
Output data to Ascii ☐


Read Mobile Barcode
Disable mobile phone barcode mode ☐

Centering mode
Any bar code within the field of view can be decoded ☐

Substring Formation:[beginIndex, endIndex]
Begin: 0 End: 0

- Read Mode
 - ✓ Async : Emits beam while the scan button is pressed.
 - ✓ Sync : Emits beam for 3 sec.
 - ✓ Continue : Beam keeps emitting after a successful scan.
- OutPutMode : Output method after reading.
 - ✓ Copy and Paste : Outputs the result to clipboard and paste.
 - ✓ Key Emulation : Outputs the result as keyboard type.
 - ✓ None(Clipboard) : Outputs the result to clipboard.
- End character : End command at the end of barcode data.
Example)
 - ✓ Enter : Enter command after reading.
 - ✓ Keyboard Enter : Keyboard Enter command after reading.
- Hexcode : Output data result can be Hexcode.
- Read Mobile Barcode : Enhanced reading performance for LCD screen such as mobile phone barcode.
- Centering mode : Only the bar code in the center of the image is decoded
- Substring Formation : Obtain a substring from an input value, starting from a specified position within the input value.
- Remove FNC : Remove Function Characters after bar-code reading.
- Translate Data : Translate data of GS. For example, if input the 5D, 1D is translated 5D.


7. Intent Output

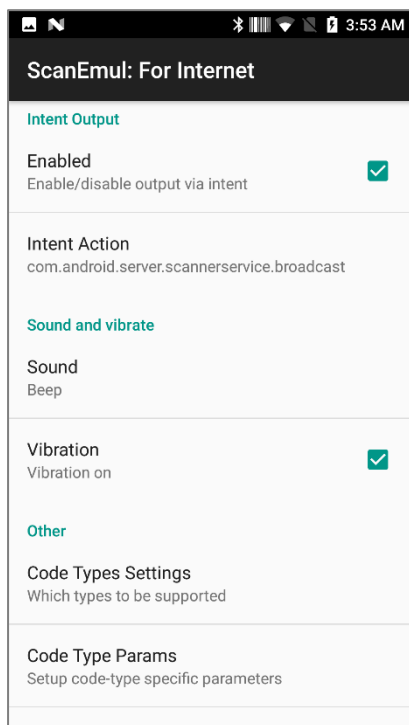

■ Intent

- ✓ Enabled : User can enable to get output via intent.
- ✓ Intent Action: Selects Actions that should receive Barcode Data.

8. ETC

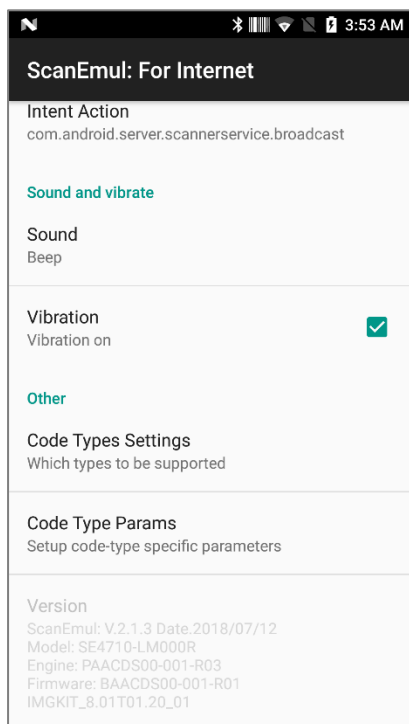


■ Prefix and PostFix

- ✓ Prefix and Postfix as Ascii Hex : Prefix or Postfix can be used for general control command as Ascii Code (/w Hexcode input) such as escape code.
 - ◆ Ex) 0A31 – 0A: line feed, 31:'1'
 - ◆ Ascii code reference (<https://en.wikipedia.org/wiki/ASCII>)
- ✓ Prefix and Postfix : Enter character at the front or end of barcode data.

■ Sound and Vibrate


- ✓ Sound : Reading sound after reading.
 - ◆ Ex) None, Beep, DingDong.
- Vibration : Vibration after reading.

9. Code Type Settings

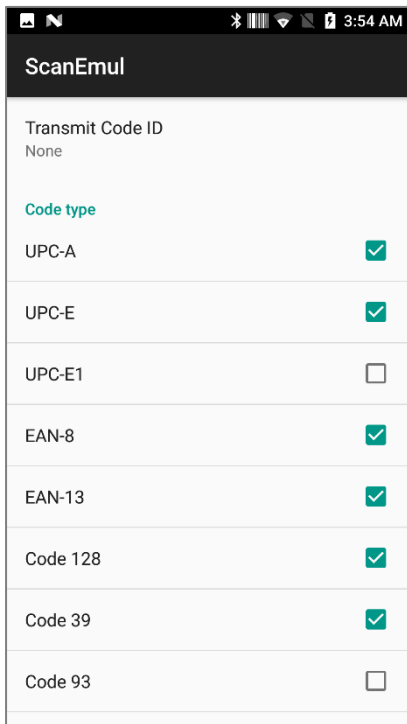


- Code Type : Wanted Code Type can be Enable/Disable.

10. Code Type Params (1D)

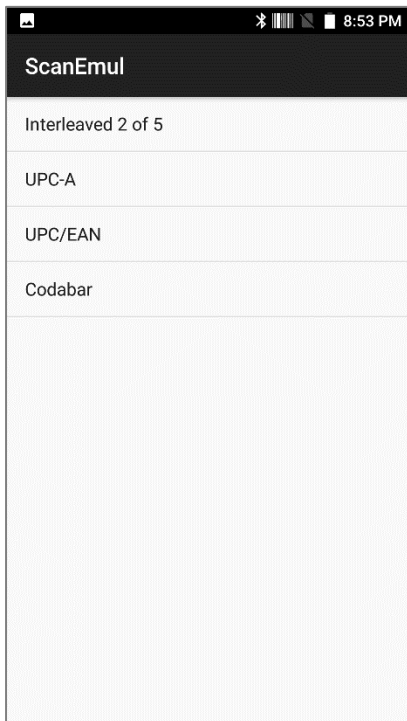

- Code Type Params can be set each code types parameters.


10.1. Interleaved 2 of 5 Setting

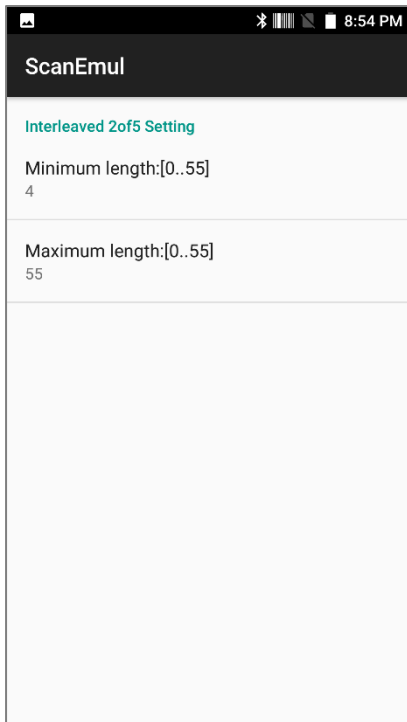

The screenshot shows the 'ScanEmul' app interface. At the top, there's a status bar with icons for Bluetooth, signal strength, and battery, along with the time '8:54 PM'. Below the app title 'ScanEmul', the section 'Interleaved 2 of 5 Setting' is highlighted in green. It contains two input fields: 'Minimum length:[0..55]' with the value '4' entered, and 'Maximum length:[0..55]' with the value '55' entered. The rest of the screen is a large empty white space.

- Interleaved 2 of 5 has additional option (Min/Max length : 0-55) when it's activated.

10.2. UPC-A

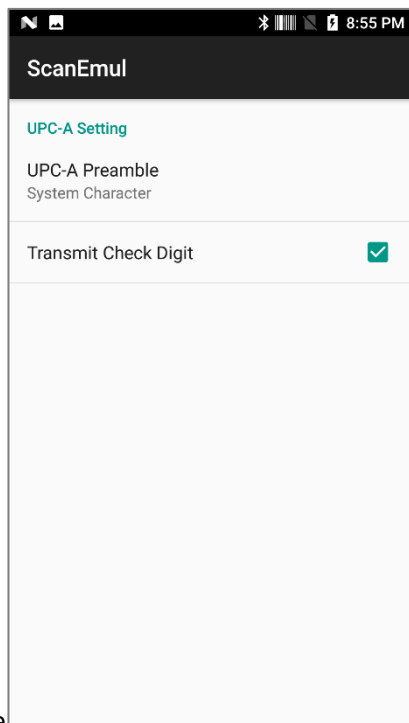


The screenshot shows the 'ScanEmul' app interface. At the top, there's a status bar with icons for Bluetooth, signal strength, and battery, along with the time '8:55 PM'. Below the app title 'ScanEmul', the section 'UPC-A Setting' is highlighted in green. It contains two input fields: 'UPC-A Preamble' with the value 'System Character' entered, and 'Transmit Check Digit' with a green checkmark icon. The rest of the screen is a large empty white space.

ge

- UPC-A Preamble : Preamble characters include Country Code and System Character.
 - ✓ No Preamble
 - ✓ System Character
 - ✓ System Character Country Code
- Transmit Check Digit : The check digit is the last character of the symbol used to verify the integrity of the data. Scan the appropriate bar code below to transmit the bar code data with or without the UPC-A check digit. It is always verified to guarantee the integrity of the data.

10.3 UPC/EAN

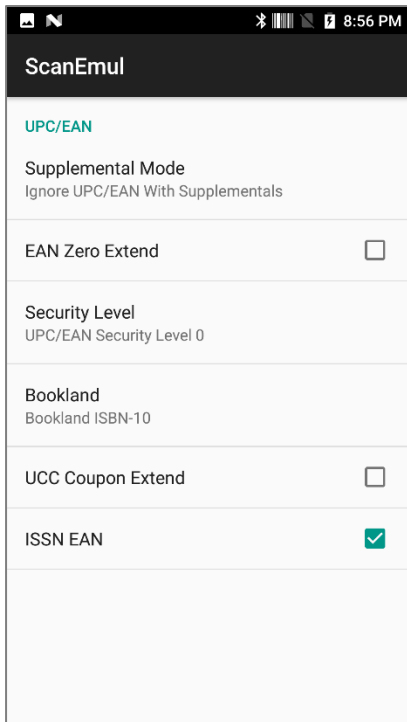

ScanEmul

UPC/EAN

Supplemental Mode
Ignore UPC/EAN With Supplementals

EAN Zero Extend ☐

Security Level
UPC/EAN Security Level 0


Bookland
Bookland ISBN-10

UCC Coupon Extend ☐

ISSN EAN ☒

- Supplemental Mode : Supplementals are bar codes appended according to specific format conventions (e.g., UPC A+2, UPC E+2, EAN 13+2).
- EAN Zero Extend : When enabled, this parameter adds five leading zeros to decoded EAN-8 symbols to make them compatible in format to EAN-13 symbols.
- Security Level : four levels of decode security for UPC/EAN bar codes. Increasing levels of security are provided for decreasing levels of bar code quality.

10.4 Codabar

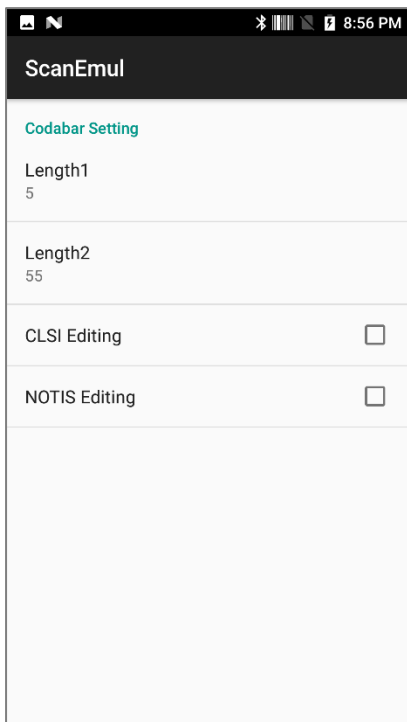

ScanEmul

Codabar Setting

Length1
5


Length2
55

CLSI Editing ☐

NOTIS Editing ☐


- Set Length : The length of a code refers to the number of characters, including check digit(s) the code contains.
- CLSI Editing : When enabled, this parameter strips the start and stop characters and inserts a space after the first, fifth, and tenth characters of a 14-character Codabar symbol.
- NOTIS Editing : When enabled, this parameter strips the start and stop characters from decoded Codabar symbol.

11. Code Type Params (Zebra 2D)

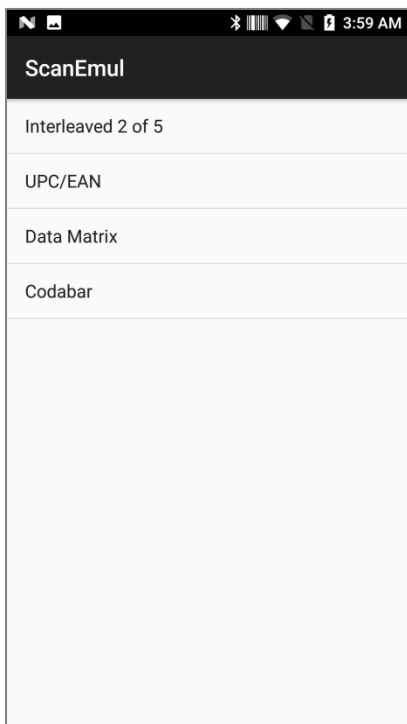


- Code Type Params can be set each code types parameters.

11.1. Interleaved 2 of 5 Setting

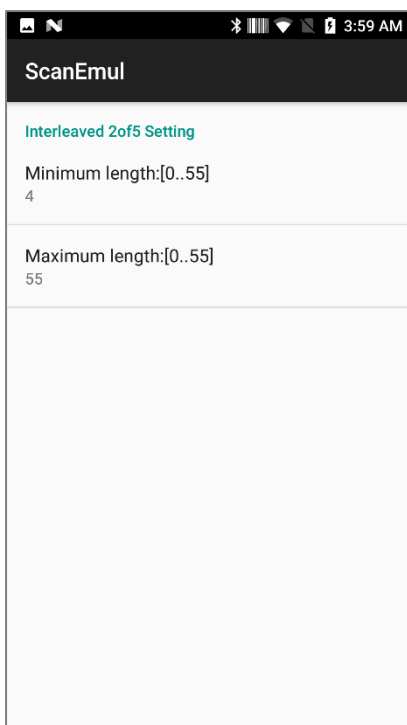


- Interleaved 2 of 5 has additional option (Min/Max length : 0-55) when it's activated.

11.2. UPC/EAN

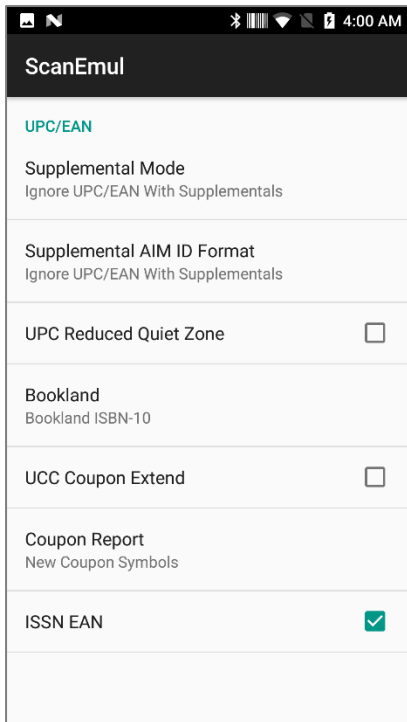


- Supplemental Mode : Supplementals are bar codes appended according to specific format conventions (e.g., UPC A+2, UPC E+2, EAN 13+2).
- Supplemental AIM ID Format : Select an output format when reporting UPC/EAN bar codes with Supplementals with Transmit Code ID Character.
- UPC Reduced Quiet Zone : Enable or disable decoding UPC bar codes with reduced quiet zones.
- Coupon Report : Traditional coupon symbols (old coupon symbols) are composed of two bar codes: UPC/EAN and Code128. A new coupon symbol is composed of a single Databar Expanded bar code.

11.3. Data Matrix

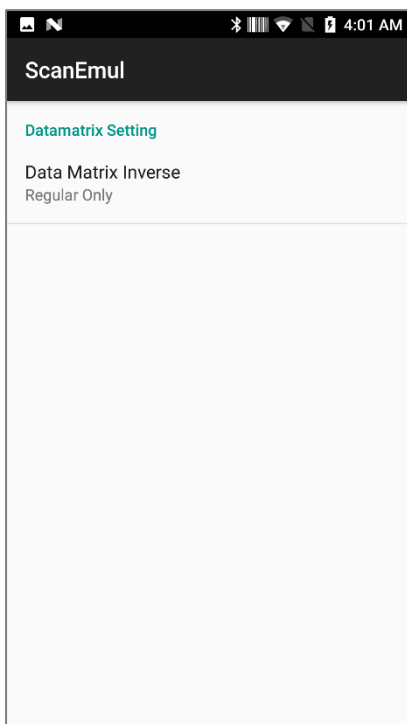

- Data Matrix has additional option :
 - ✓ Data Matrix Inverse mode
 - ◆ Regular Only
 - ◆ Inverse Only
 - ◆ Inverse Autodetect

11.4. Codabar

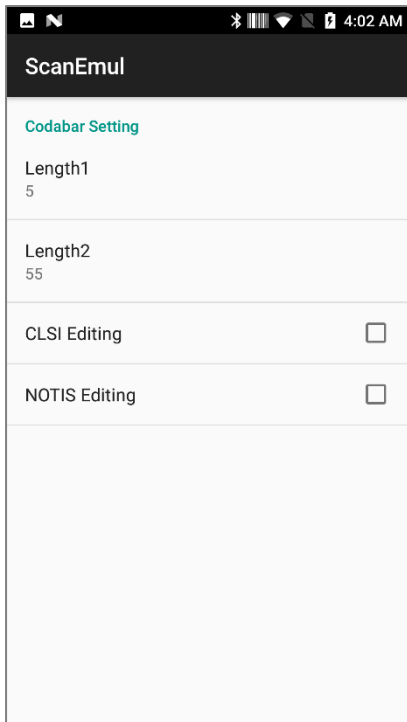


The screenshot shows the ScanEmul application interface. At the top is a black status bar with icons for signal, battery, and time (4:02 AM). Below the status bar is a dark header with the text "ScanEmul". The main content area has a light gray background and contains the following settings:

- Codabar Setting** (in green text)
- Length1**: 5
- Length2**: 55
- CLSI Editing**: ☐
- NOTIS Editing**: ☐

Below these settings is a large, empty light gray rectangular area.

- **Set Length** : The length of a code refers to the number of characters, including check digit(s) the code contains.
- **CLSI Editing** : When enabled, this parameter strips the start and stop characters and inserts a space after the first, fifth, and tenth characters of a 14-character Codabar symbol.
- **NOTIS Editing** : When enabled, this parameter strips the start and stop characters from decoded Codabar symbol.

12. Multi Decode Mode

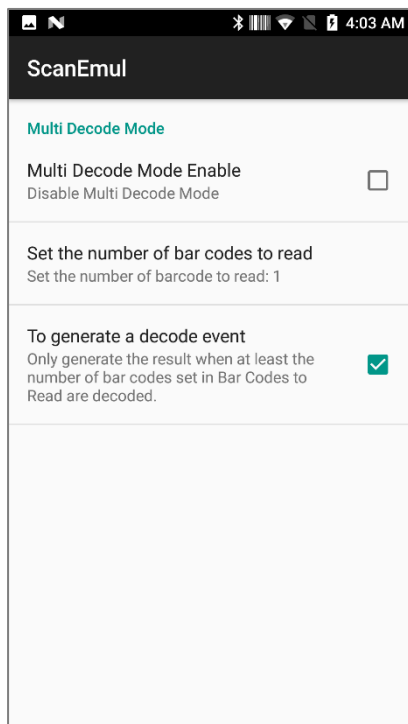

- Multi decode mode
 - ✓ Multi Decode Mode: Enables decoding multiple bar codes within the scanner's field of view
 - ✓ Set the number of bar codes to read: The range is 1 to 10 bar codes.
 - ✓ To generate a decode event
 - ◆ Enable: Only generate the complete event when at least the number of bar codes set in 'Set the number of bar codes to read' are decoded.
 - ◆ Disable: Generate a decode event after one or more bar codes are decoded

Chapter 2. UHF Emul

Supported	Restriction
SM15	OS Higher than Nougat 1.1.0
UL20	Not Supported


1. EDIT PROFILE



■ Edit Profile


- ✓ Here user can edit setting profiles.
- ✓ DEFAULT profile is created by default.
- ✓ If all profiles are disabled, they will not run automatically at boot time.

2. EDIT PROFILE - MENU

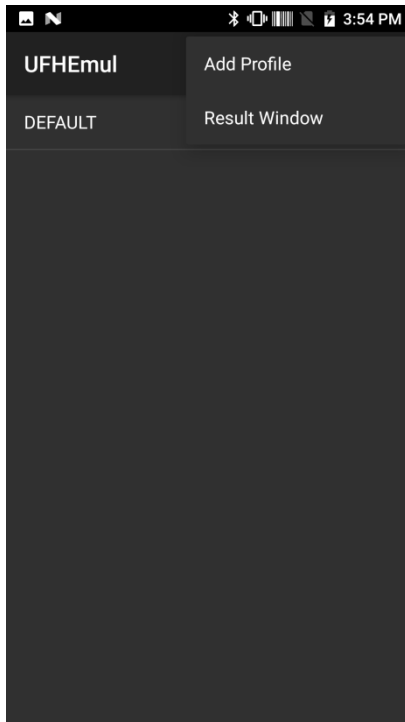


- Profile Menu
 - ✓ Add Profile: Profiles can be added.
 - ✓ Result Window

3. EDIT PROFILE – DELETE

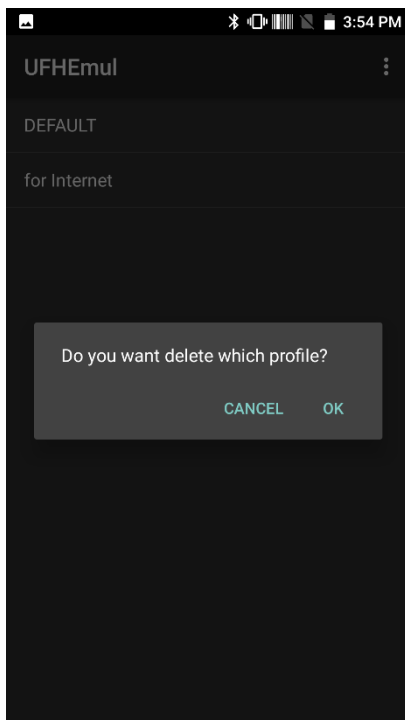


- Delete Profile
 - ✓ Pressing a profile long shows Delete menu.
 - ✓ Pressing "OK" deletes a selected Profile.

4-1. Result Window - Inventory

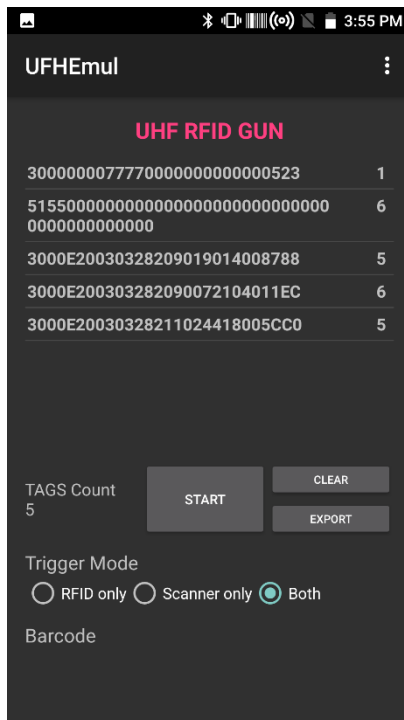

4-2. Result Window - Config

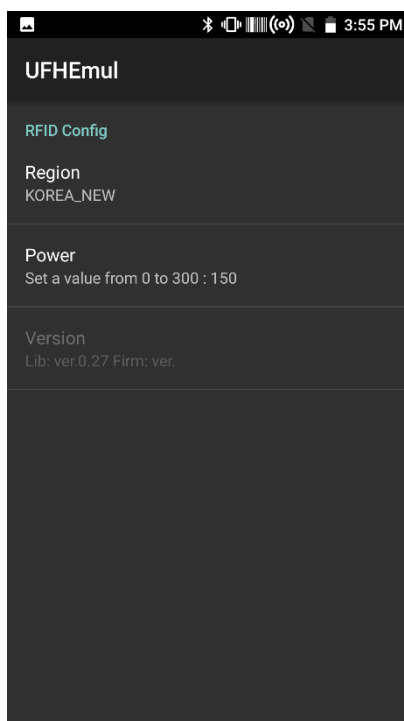

- It will show simple EPC read and count UI

- ✓ **START:** Starts inventory read. Continuously read EPC values of surrounding tags.
- ✓ **CLEAR:** Clear result
- ✓ **Trigger Mode:** Determine trigger mode either RFID(UHF tag) reader or Scanning barcode or together.
- ✓ **Barcode Result:** Barcode scanning result is shown under 'Barcode Result'

■ Config Menu


- ✓ Region: Set frequency according to the country regulation.(make sure 2 different Ant. type between KC and CE)
- ✓ Power: Set output power. Maximum power is 300 Dbm.

The correct value is 30 dBm (30dBm = 1W = 1000mW). The last 0 of `300` is a garbage value which is called from the module so you can ignore it.

How dBm into mW converted is please refer to below link:

<https://en.wikipedia.org/wiki/DBm>


4-3. Result Window - Memory Access

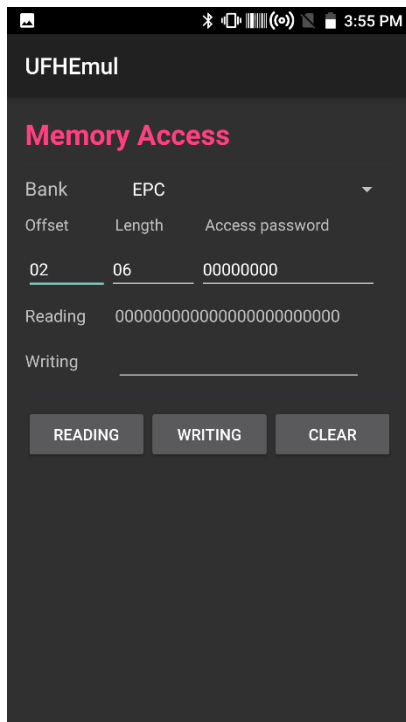

■ Reading / Writing

- ✓ Bank (Reserved, EPC, TID, User) Select.
- ✓ Offset: Starting location of the memory. (Word unit)
- ✓ Length: Length of the data (Word unit)
- ✓ Password: If the tag is locked, Access Password is required to write data.
- ✓ Reading: Read data as configured and output data in the TextView.
- ✓ Writing: Data in the EditText will be written as configured.


4-4. Result Window - Lock/Kill

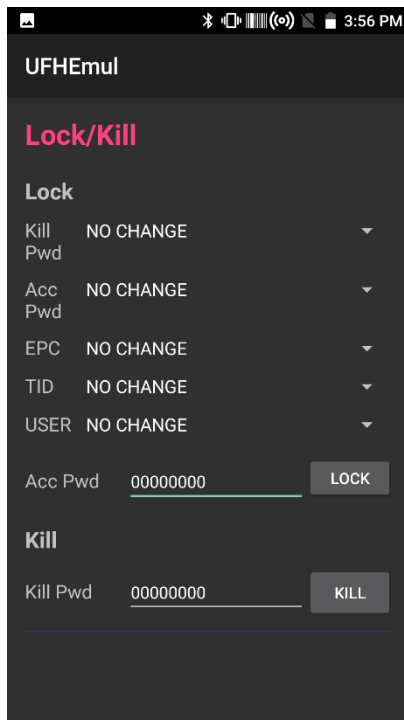

■ Memory Lock / Tag Kill

- ✓ Lock : Set password to access the tag memory. Access password is stored in reserved area. There are 4 access types
 - Accessible: Read and write of password is possible. Change permission is also possible.
 - Always Accessible: Read and write of password is possible. But, change permission is not possible.
 - Secured Accessible: Read and write of password is not possible. But, change permission is possible.
 - Always Not Accessible: Read and write of password is not possible. Change permission is also not possible.
- ✓ Read / Write accessibility setting is possible in reserved area. EPC, USER area only allow setting for write, where read is always possible. TID is read only.
- ✓ Kill: Kill the tag. Once killed, the tag is no longer active. Kill password in reserved area is required.

5. General Settings

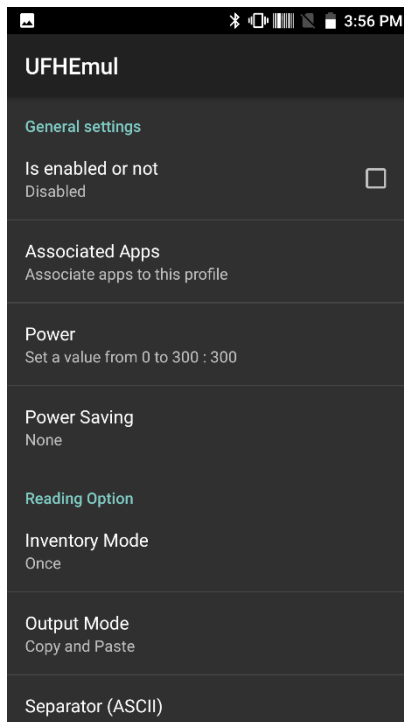

- Is enabled or not: Scanner Activate or Deactivate.
- Associated Apps: Certain apps can be addressed to profile.
- Power: Set output power. Maximum power is 300 Dbm.


The correct value is 30 dBm (30dBm = 1W = 1000mW). The last 0 of `300` is a garbage value which is called from the module so you can ignore it.

How dBm into mW converted is please refer to below link:

<https://en.wikipedia.org/wiki/DBm>


- Power Saving: Turn off the UHF Emul when the set time has elapsed

6. READING OPTION

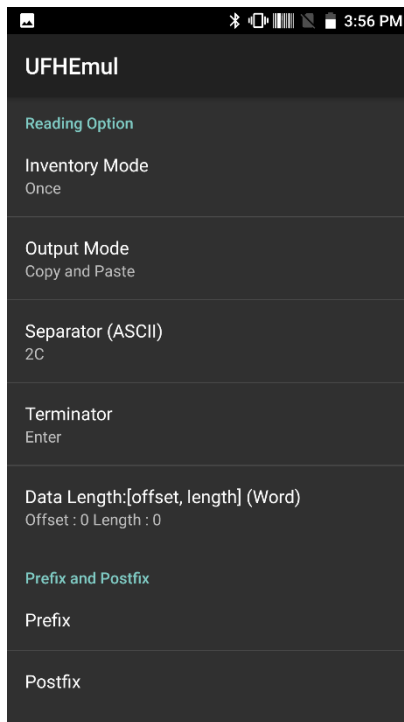

- Inventory Mode
 - ✓ Overlap : Inventory regardless of duplicate values
 - ✓ Multiple : Exclude duplicates
 - ✓ Once : Inventory only one tag
- OutPutMode : Output method after reading.
 - ✓ Copy and Paste : Outputs the result to clipboard and paste.
 - ✓ None(Clipboard) : Outputs the result to clipboard.
- Separator (ASCII) : It is a separator to output between tags when Inventory Mode is Overlap or Multiple
Example)
 - ✓ 0D : Enter
 - ✓ 2C : Comma
 - ✓ 09 : TAB
- Terminator : Specifies the value that is printed only once at the end of Inventory.
- Data Length : Specifies the start and end points of the TAG
 - ✓ By default, the PC value 1 word is included before the data. If you do not want to use the PC value, change the offset to 1.


7. Intent Output

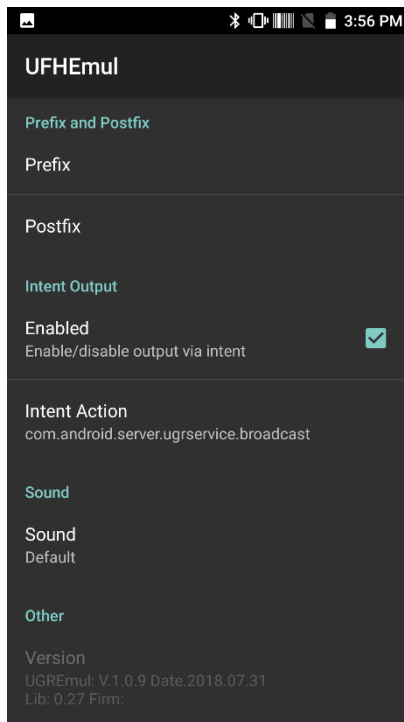

■ Intent

- ✓ Enabled : User can enable to get output via intent.
- ✓ Intent Action: Selects Actions that should receive UHF tag Data.

8. ETC

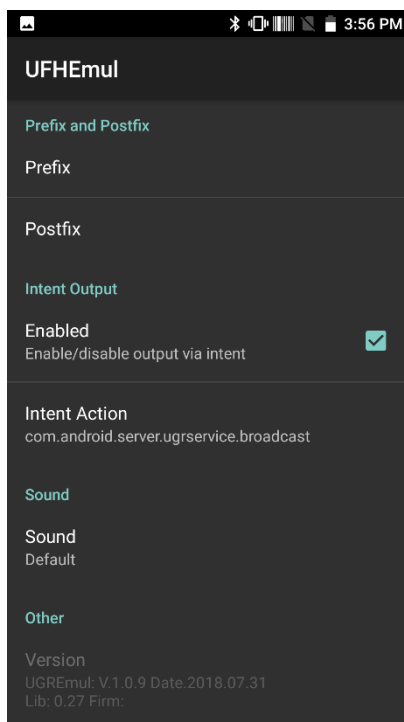

■ Prefix and PostFix

- ✓ Prefix and Postfix as Ascii Hex : Prefix or Postfix can be used for general control command as Ascii Code (/w Hexcode input) such as escape code.
 - ◆ Ex) 0A31 – 0A: line feed, 31:'1'
 - ◆ Ascii code reference (<https://en.wikipedia.org/wiki/ASCII>)
- ✓ Prefix and Postfix : Enter character at the front or end of UHF tag data.


■ Sound

- ✓ Sound : Reading sound after reading.
 - ◆ Ex) None, Default.

Chapter 3. AppCenter

Supported	Restriction
SM15	OS Higher than Nougat 1.1.0
UL20	OS Higher than Oreo 1.0.0


1. First view of the program

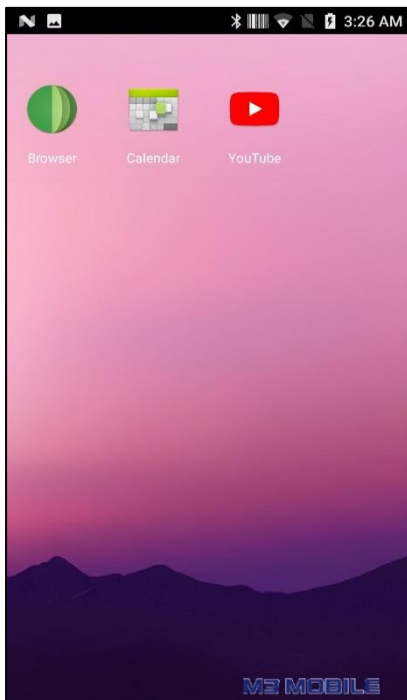

■ Main Screen

- ✓ Arrange allowed applications in categories on Home Screen.
- ✓ Inactivate drag down the status bar in User Mode.(System setting mode's untouchable).


2. Default Setting

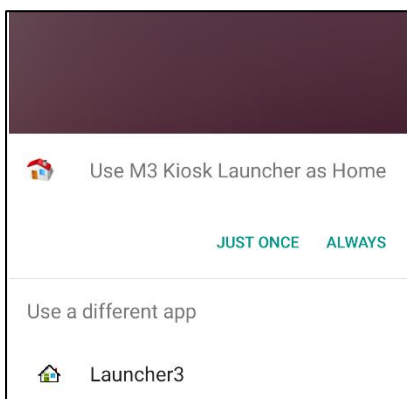

■ Initial settings

- ✓ Select below 2 steps for autorun of the 'AppCenter'.
 - ✧ Pressed Home Button: 'M3 Kiosk Launcher' – Always Click
 - ✧ Reset Device: 'M3 Kiosk Launcher' – Always Click
 - ✧ If you have a OS PI(Android 9), you need to clear all :
 - 1) Click the menu button(■)
 - 2) Click the CLEAR ALL.
- ✓ Roll back : Settings – Apps – M3 Kiosk Launcher – Clear defaults

3. Login Menu in User

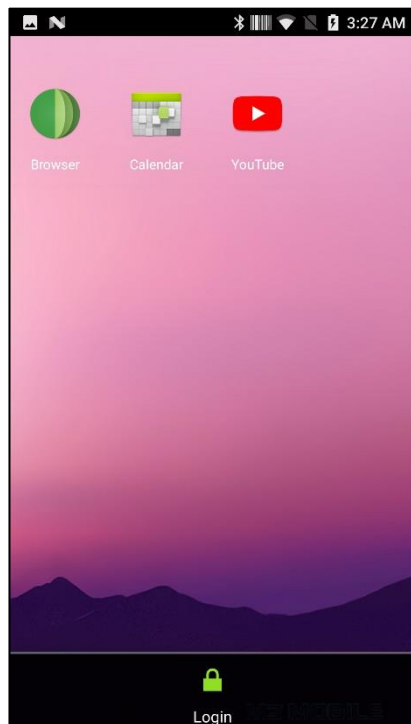

■ User Menu

- ✓ Press physical menu button(refer to Figure 3-1) or m3mobile software button(refer to Figure 3-2) at the bottom of the screen then login icon shown up in User mode.

Figure 3-1 (Before Appcenter Version 1.3.2)






Figure 3-2 (Appcenter Version 1.3.2)



Figure 3-2 (Appcenter Version 1.3.3 or later)

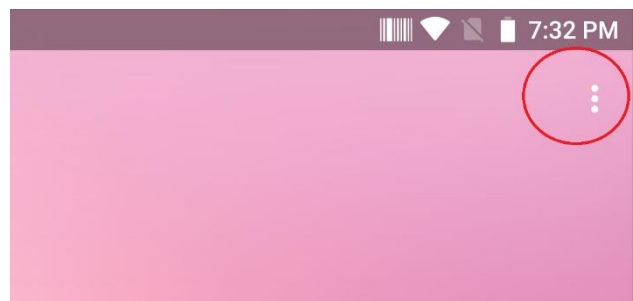

4. Login

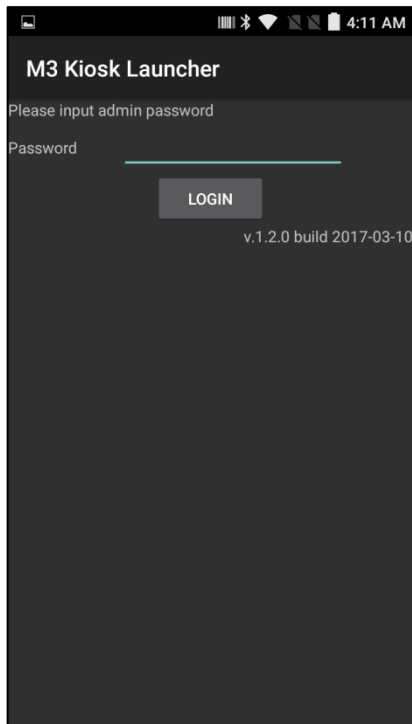


■ Login

- ✓ Input the Password to enter Admin Mode
 - ✓ Default Password is 'mobile'.
 - ✓ Password change – Modify and replace the xml file in the Internal storage as below.
'/Android/data/com.m3.appcenter/appcenter_login.xml'.
- >> Reboot required to create above folder.

– appcenter_login.xml

```
<?xml version="1.0" encoding="UTF-8"
standalone="true"?>
<password value="mobile"/>
```

5. Admin Mode

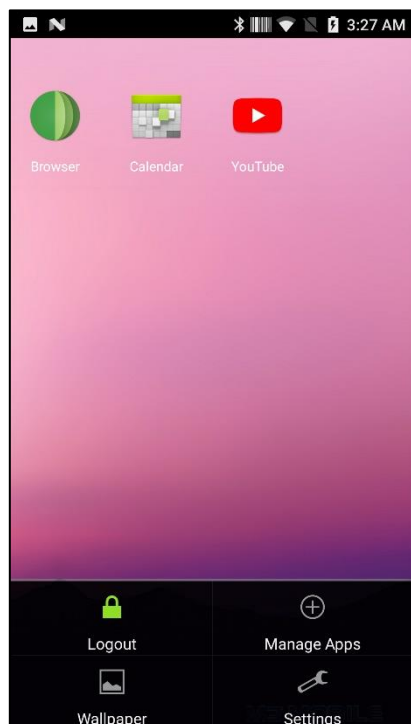


■ Admin Mode

- ✓ Able to set 'Manage Apps', 'Wallpaper', 'Settings' in Admin Mode.
- ✓ Logout : Back to user mode from Admin mode.
- ✓ Manage Apps : Managing Apps on Home Screen.
- ✓ Wallpaper : Change background image.
- ✓ Settings: Launch Android setting app.

NOTE : Statusbar is activation in AdminMode.
Conversely, Statusbar is lock when UserMode..

■

6. Manage Apps

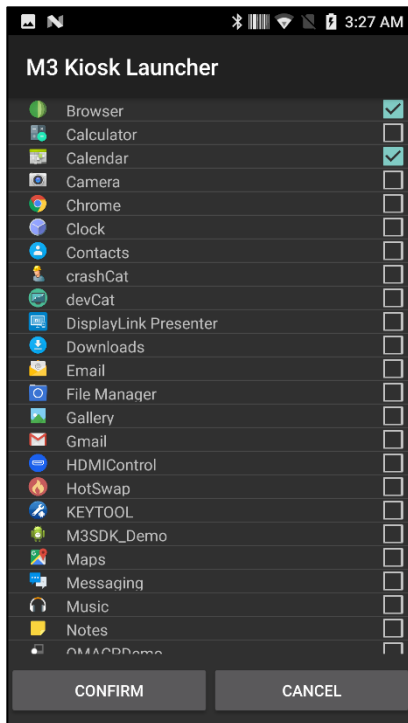


■ Manage Apps

- ✓ Managing Apps on Home Screen.
- ✓ This setting's saved into Internal storage as below.

'/Android/data/com.m3.appcenter/m3ap
pc enter. xml'.

If you'd like to deploy same
configuration, you can copy this .xml file
to other units.


7. Wallpaper

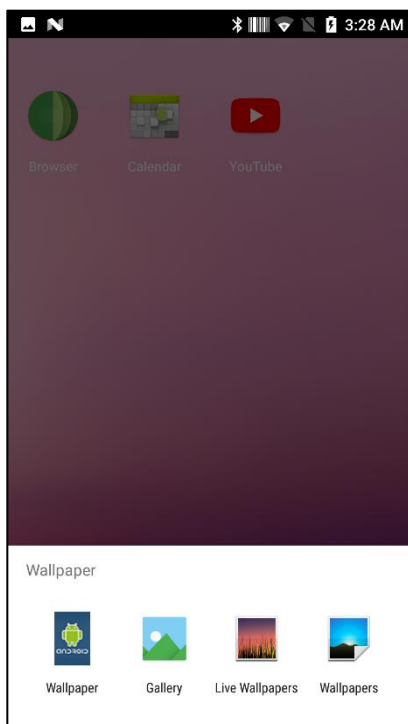

■ Wallpaper

- ✓ Change the background home image.
- ✓ Gallery's photos and default wallpaper can be used.
(Live Wallpapers cannot be used.)

8. Apk Path

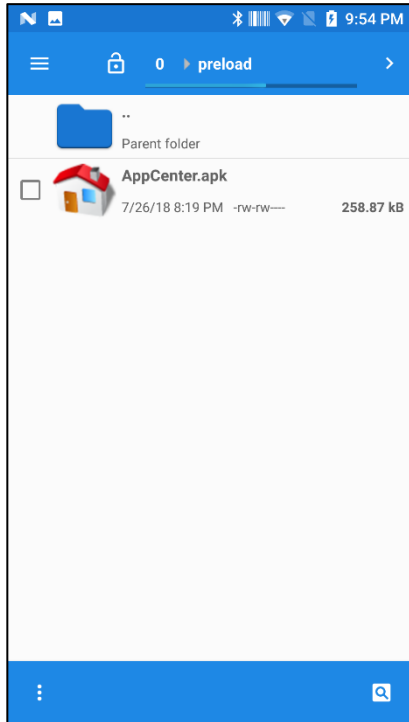


■ Apk Path

- ✓ SM15 is included by default in the preload directory.

Chapter 4. StartUp


Supported	Restriction
SM15	OS Higher than Nougat 1.1.0
UL20	OS Higher than Oreo 1.0.0

1-1. Main screen

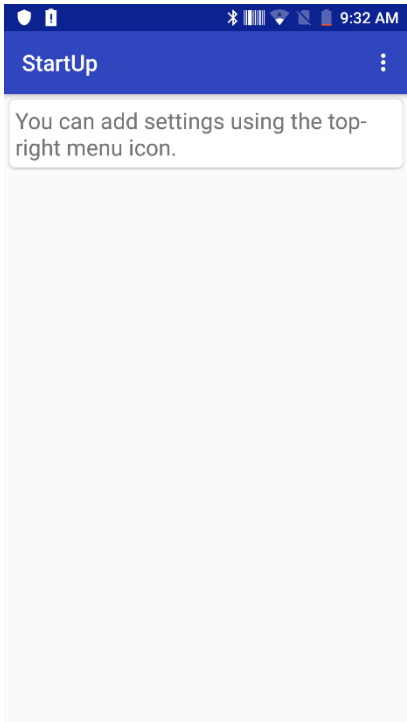

- Main screen
 - ✓ Main screen of the StartUp Application.

1-2. Main screen – option menu

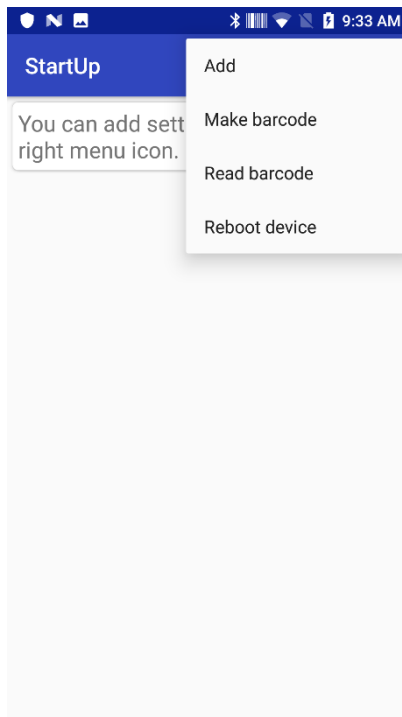


■ Option menu

- ✓ Add: Add provisioning settings*
- ✓ Make barcode:
Can make a barcode, using settings already made on current device.
- ✓ Read barcode:
Can read a barcode, made from other device.
- ✓ Reboot device:
After setting, the application need to reboot for automated setting. When device was restarted the StartUp will be configure.

Configured settings are saved in 'Internal Storage/Android/data/com.m3.startup/StartUp.json'. If you'd like to deploy same configuration, you can copy this .json file to other units.

It is not compatible with the 2.x version of the xml file.


1-3. Main screen – add dialog

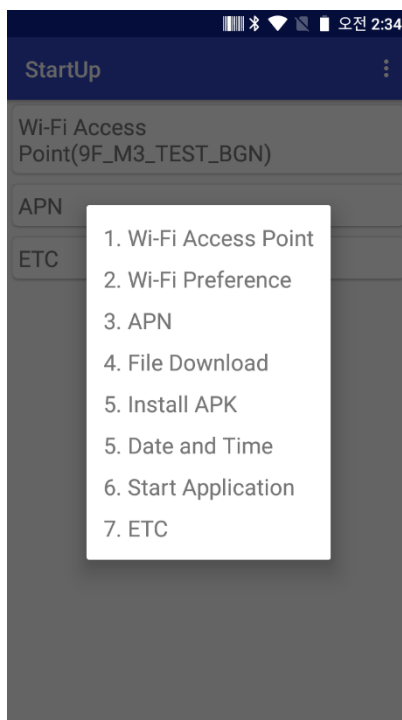

■ Add dialog

- ✓ Wi-Fi Access point : Setting Wireless LAN access point
- ✓ Wi-Fi Preference : Setting Wireless LAN details
- ✓ APN : Setting Access Point Name for Network
- ✓ File Download :
It will download any files on Internet.
- ✓ Install APK :
APK files can be installed in this menu
- ✓ Date and Time
Can set the date and time and the NTP server.
- ✓ Start Application : Setting application that run on boot
- ✓ ETC
Bluetooth, Display, Volume

2-1. Wi-Fi Access Point

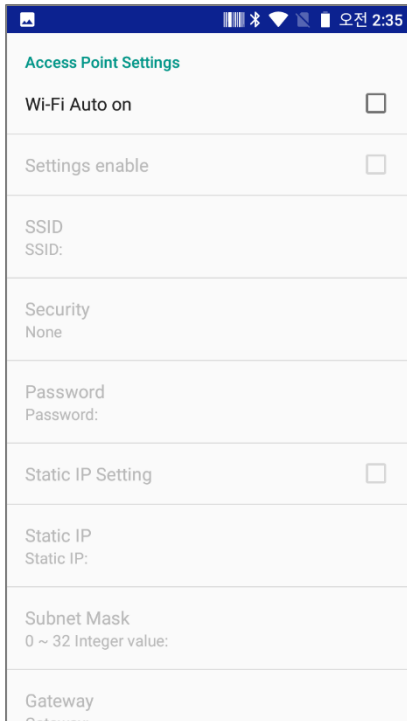

Access Point Settings

Wi-Fi Auto on ☐

Settings enable ☐

SSID
SSID:

Security
None

Password
Password:

Static IP Setting ☐

Static IP
Static IP:

Subnet Mask
0 ~ 32 Integer value:

Gateway
Gateway:

■ Wi-Fi Access Point Settings


- ✓ Wi-Fi Auto on: Wi-Fi AutoOn when reboot.
- ✓ Wi-Fi Settings enable: Allow to the provision Wi-Fi setting can access an AP. 'Wi-Fi AutoOn on' should be enabled.
- ✓ SSID: Access to SSID(Be careful of Upper/Lower case letter.)
- ✓ Password: Input PW for the SSID.
- ✓ Static IP Setting: Enable Static IP setting.
- ✓ Static IP: Input Static IP address
- ✓ Subnet Mask: Input Subnet Mask.(0~32)

Notation	Netmask
0	0.0.0.0
8	255.0.0.0
16	255.255.0.0
24	255.255.255.0
25	255.255.255.128
32	255.255.255.255

- ✓ Gateway: Input Gateway address.

Domain Name Server: Input DNS address.


2-2. Wi-Fi Preference

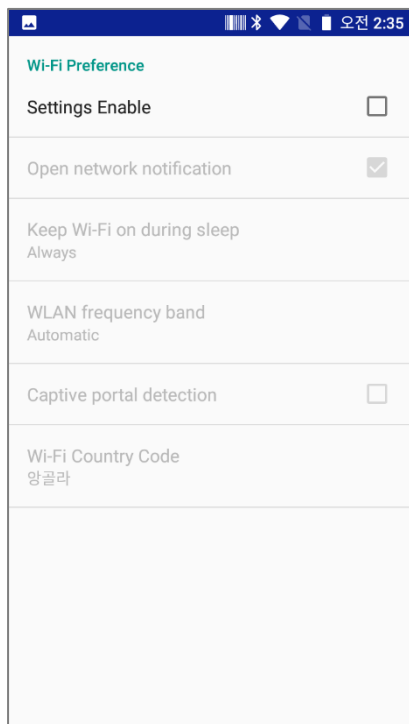

■ Wi-Fi Preference

- ✓ Set detailed settings to be common

3. APN Settings

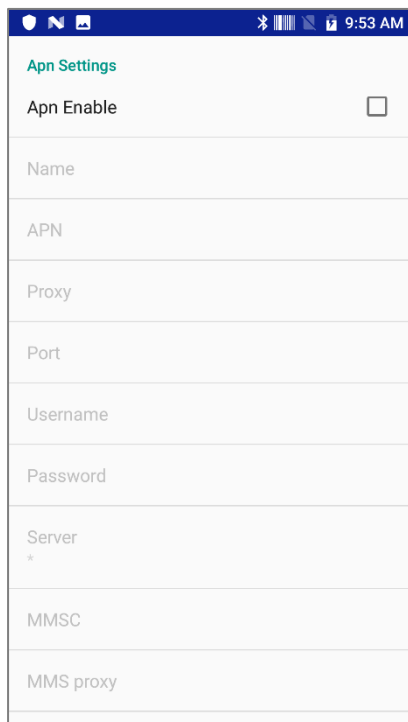

Apn Settings

Apn Enable ☐

Name

APN

Proxy

Port

Username

Password

Server *


MMSC

MMS proxy

■ APN Setting

- ✓ Set the value according to the network environment you want to set.
- ✓ Do not leave the Name, APN, MCC, and MNC fields blank.

4. File Download

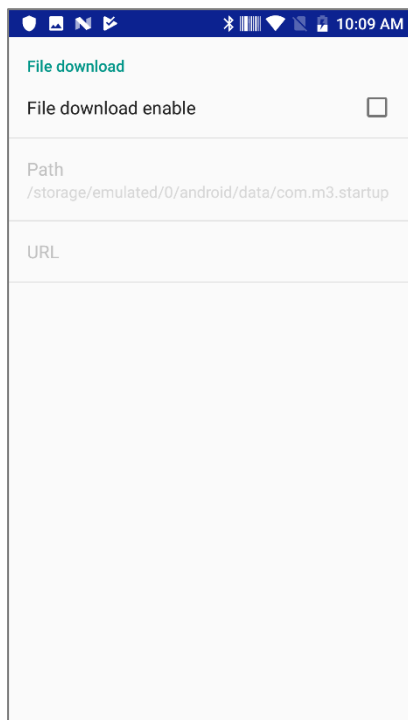

File download

File download enable ☐

Path
/storage/emulated/0/android/data/com.m3.startup

URL

■ File Download

- ✓ File Download enable : Check to use download function.
- ✓ Folder : Select the destination folder on your device.
- ✓ URL : Input correct URL want to download.

5. Install APK

APK

Install apk ☐

Type
Local

Path

URL

■ File Download

- ✓ Install apk : Check to use a install (or download and install) APK.
- ✓ Type
 - Local : Select the APK path on device.
 - URL : Input correct URL want to download and install.

6. Date and Time

Ntp Settings

Ntp Enable ☒

URL

Date and Time Settings

Datetime Enable ☐


Date

Time

■ Date and Time

- ✓ Ntp
 - Specifies the URL of the NTP server
- ✓ Date and Time
 - Set to the specified date and time.
 - (Applies only once at next boot)


7-1. Start Application

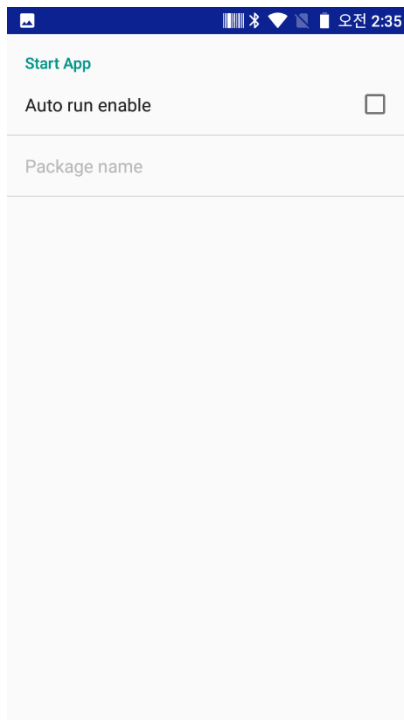

■ Start Application

- ✓ Setting application that run on boot
- ✓ Select Package name to launch the application selection screen


7-2. Application select

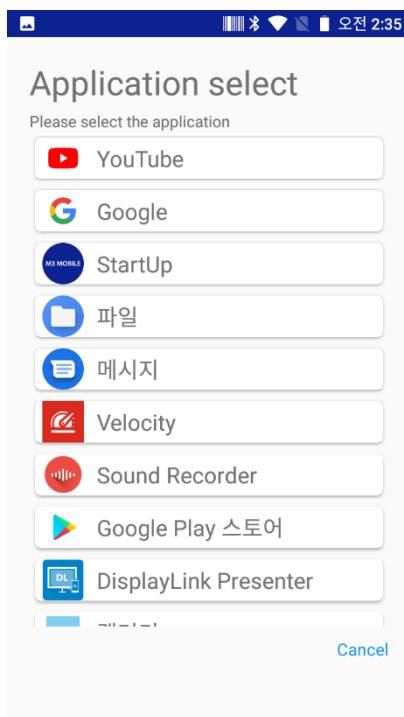

■ Application select

- ✓ Select the application that will be executed

8-1. ETC - Display & Volume Settings

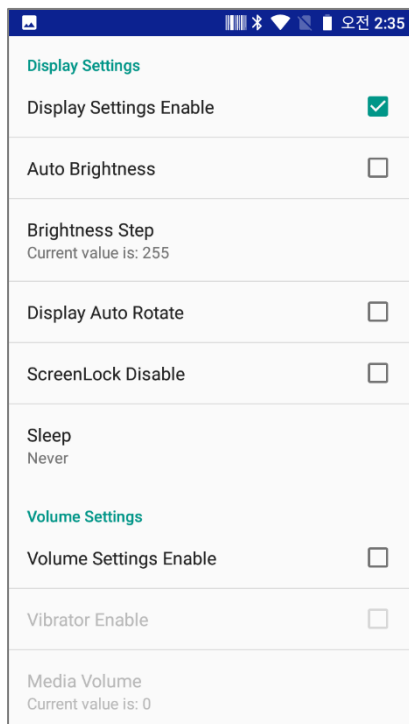


■ Display Settings

- ✓ Display Settings Enable: Allow to Display Setting.
- ✓ Auto Brightness: Brightness's adjusted by light condition automatically.
- ✓ Brightness Step: Adjust Brightness.
- ✓ Display Auto Rotate: Automatically display rotated between portrait and landscape.
- ✓ ScreenLock Disable : Select to disable ScreenLock

■ Volume Settings


- ✓ Volume Settings Enable: Allow to Volume Control when reboot.
- ✓ Vibrator Enable: Vibrator enabled when reboot.
- ✓ Media Volume: Media Volume can be set.
- ✓ Ringtone Volume: Ringtone Volume can be set.
- ✓ Alarm Volume: Alarm Volume can be set.

8-2. ETC - Location, Language, NFC, Airplane, Bluetooth, Unknown source

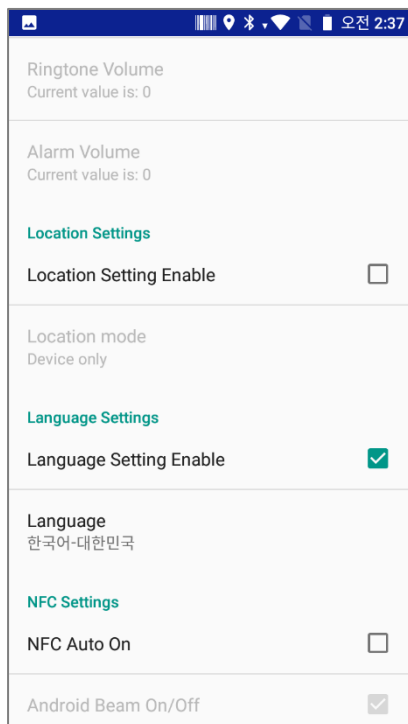


- Location Setting
 - ✓ Specifies the Location mode
- Language Settings : Select the language to use on your device
- NFC Settings : Select whether NFC and NFC beam are to be used.

8-3. ETC – OTA, Airplane, Bluetooth, Unknown source

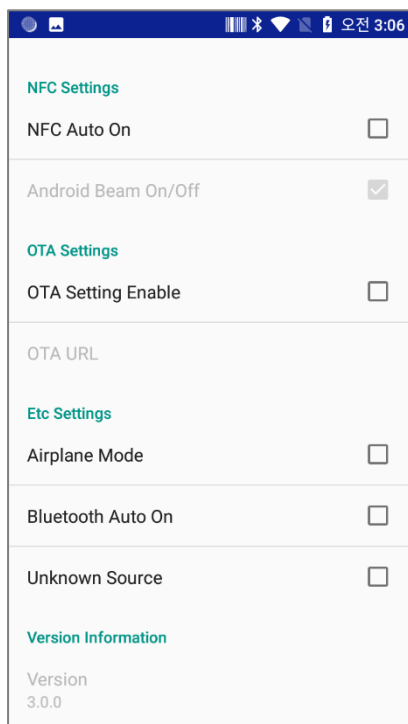

- OTA Settings : Specify the URL to use when running OTA updates remotely
- Airplane Mode : Turn on/off the airplane mode
- Bluetooth Auto on: Bluetooth Auto On when reboot.
- Unknown source : Allow installation of apps from sources other than the Play Store

9-1. Make barcode(Export) - List

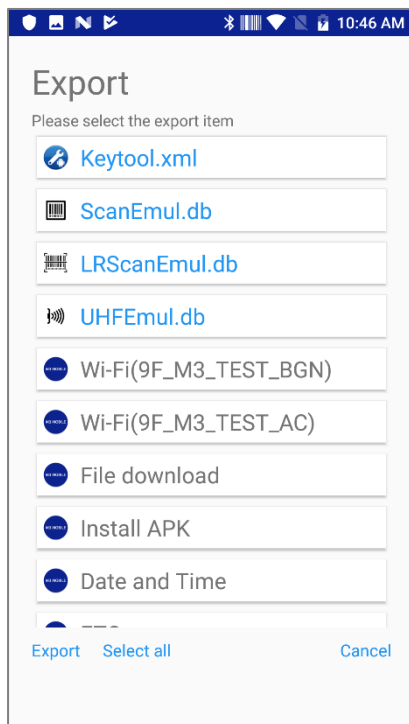

- File transfer
 - ✓ Select Keytool, ScanEmul, LRScanEmul, and UHFEmul to generate a bar code to send the file to Bluetooth
 - ✓ Be sure to check the scanner type(Zebra 1D, Zebra2D, Honeywell) and version when exporting ScanEmul
 - ✓ Check the version when exporting LRScanEmul and UHFEmul
- StartUp Settings
 - ✓ Select the settings to export, then select the export button at the bottom.

9-2. Make barcode(Export) - Barcode



- Export barcode
 - ✓ Scan the barcode from the device on the read barcode screen
 - ✓ Check the number of pages at the bottom and scan the following barcode in order

10. Read barcode(Import)



- Read barcode
 - ✓ Scan the barcode to import using the barcode scanner or camera

Chapter 5. KeyTool for SM15

Supported

Restriction


SM15

OS Higher than Nougat 1.1.0

UL20

Not Supported


1. Select

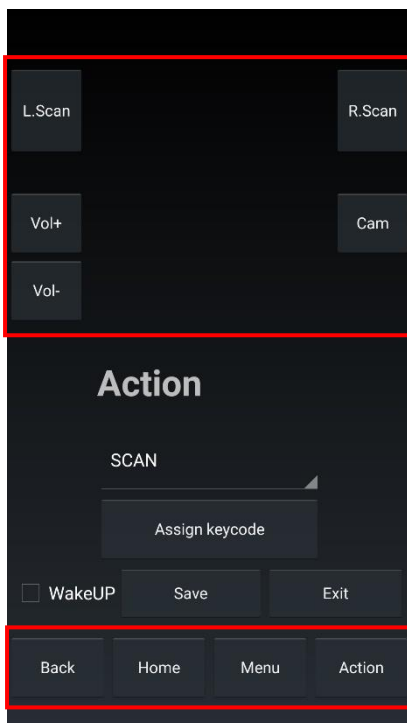

■ Select

- ✓ Select the button to setting.
- ✓ When selected, the name and function of the button are displayed in the center of the screen.
- ✓ The button is located referring to the physical location of the actual device.

2. Settings

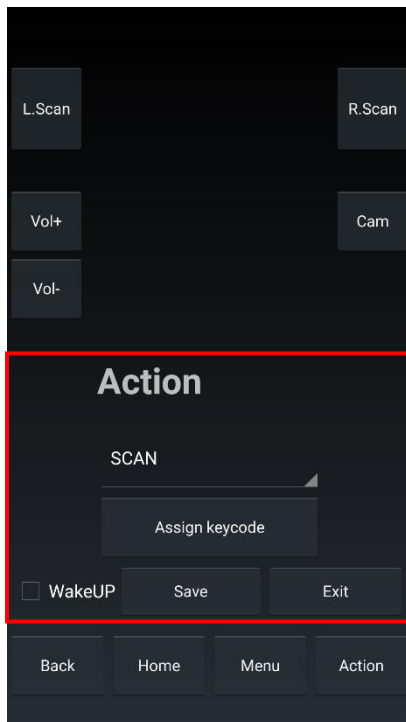


■ Settings

- ✓ The current function appears in the select box
- ✓ Select a function from the selection box and use the following functions
- ✓ Assign keycode : Designate the selected function.
- ✓ WakeUp : Select to include the wake-up feature.
- ✓ Save : The set data is saved as "keyremap.xml" file in "Android-data-kr.co.m3mobile.keyremapper" directory.

Chapter 6. Hot Swap for SM15

Supported	Restriction
SM15	OS Higher than Nougat 1.1.0
UL20	Not Supported


1. Hot Swap

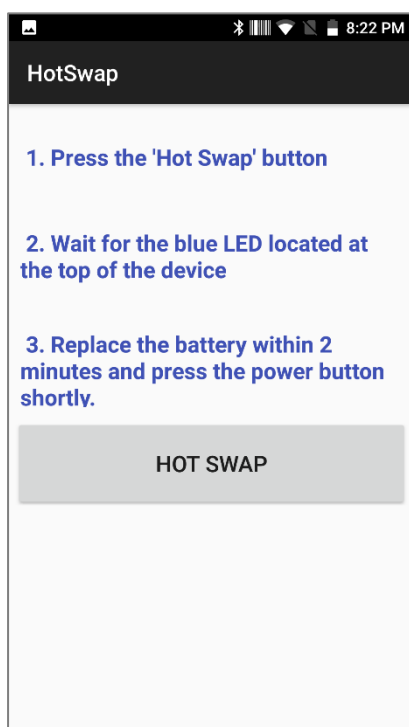

■ Hot Swap

- ✓ Press the 'HotSwap' button
- ✓ Wait for the blue LED located at the top of the device
- ✓ Replace the battery within 2 minutes and press the power button shortly.

2. Restrictions

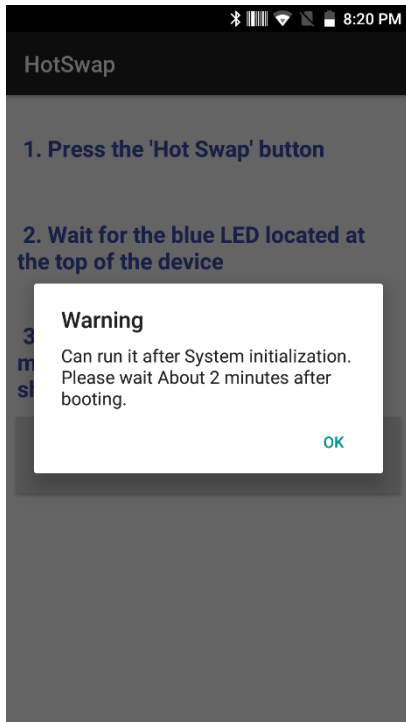


■ Restrictions

- ✓ Wait 3 minutes after booting.
- ✓ Battery level should be less than 60%

Chapter 7. LRScanEmul for SM15

Supported	Restriction
SM15	OS Higher than Nougat 1.2.0
UL20	Not Supported

1. EDIT PROFILE

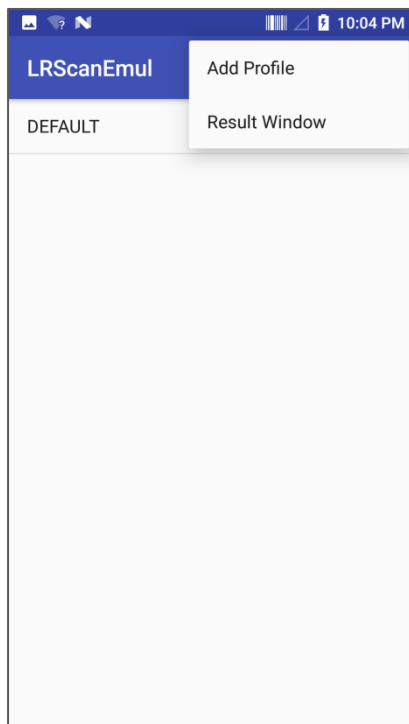

■ Edit Profile

- ✓ Here user can edit setting profiles.
- ✓ DEFAULT profile is created by default.
- ✓ In DEFAULT profile every apps are included except apps which are set for other profiles.


■ Profile Menu

- ✓ Add Profile: Profiles can be added.
- ✓ Result Window: Barcode type and data will be shown based on as DEFAULT set profile.

■ Delete Profile

- ✓ Pressing a profile long shows Delete menu.
- ✓ Pressing "OK" deletes a selected Profile.


2. RESULT WINDOW

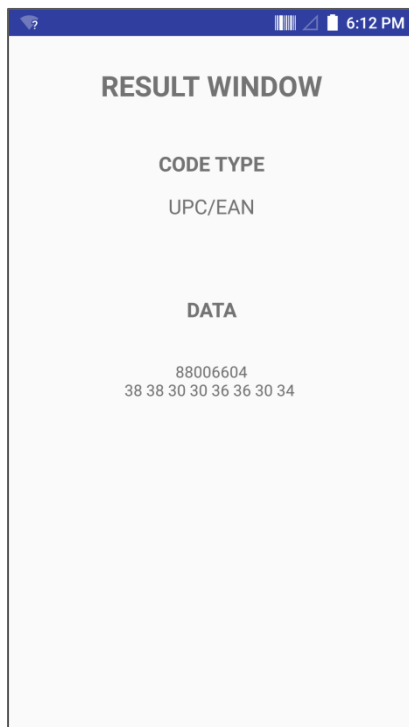

■ Result Window


- ✓ Here user can test simple barcode reading.
- ✓ The result is given based on DEFAULT Profile 'Intent enable' has to be active.

3-1. Settings

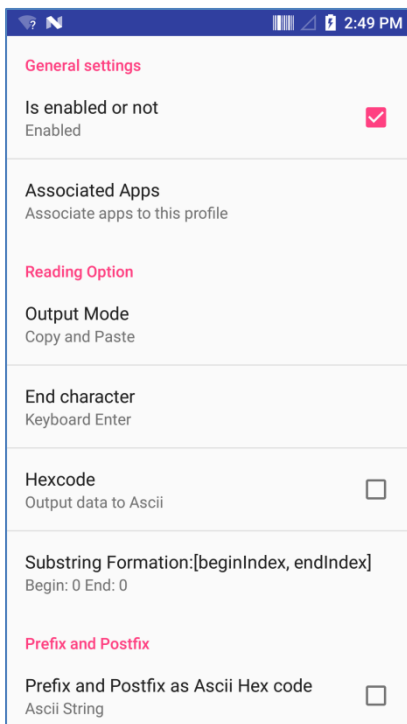

- Is enabled or not: Scanner Activate or Deactivate.
- Associated Apps: Certain apps can be addressed to profile.
(NOTE: 'Associated Apps' cannot be addressed in Default Profile.)
- outPutMode : Output method after reading.
 - ✓ Copy and Paste : Outputs the result to clipboard and paste.
 - ✓ Key Emulation : Outputs the result as keyboard type.
 - ✓ None(Clipboard) : Outputs the result to clipboard.
- End character : End command at the end of barcode data.
Example)
 - ✓ Enter : Enter command after reading.
 - ✓ Keyboard Enter : Keyboard Enter command after reading.
- Hexcode : Output data result can be Hexcode.
- Prefix and PostFix
 - ✓ Prefix and Postfix as Ascii Hex : Prefix or Postfix can be used for general control command as Ascii Code (/w Hexcode input) such as escape code.
 - ◆ Ex) 0A31 – 0A: line feed, 31:'1'
 - ◆ Ascii code reference
(<https://en.wikipedia.org/wiki/ASCII>)
 - ✓ Prefix and Postfix : Enter character at the front or end of barcode data.

3-2. Settings

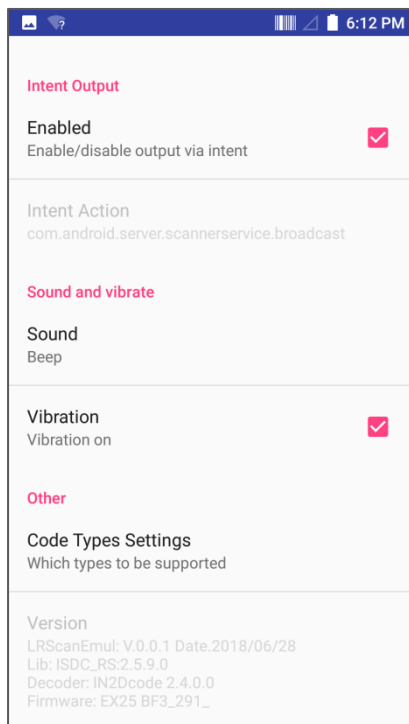

- Intent
 - ✓ Enabled : User can enable to get output via intent.
- Intent Action: Selects Actions that should receive Barcode Data.
- Sound and Vibrate
 - ✓ Sound : Reading sound after reading.
 - ◆ Ex) None, Beep, DingDong.
- Vibration : Vibration after reading.
- Code Types Settings : Wanted Code Type can be Enable/Disable.

Services

If you experience any trouble while using our product, you can visit **M3 Service center** or send enquires to our **online support web page** (<http://itc.m3mobile.net>), we will do our best to solve your trouble as soon as we can.

M3 FAQ document can help you with troubleshooting.

For any enquires about business program, please contact program provider for faster service.

Contact details

Headquarter

4F, Namjeon bldg., 44, Guuigangbyeon-ro, Gwangjin-gu, Seoul, Korea, 05116

Tel: +82 2 574 0037 Fax: +82 2 558 1253

www.m3mobile.net, sales@m3mobile.co.kr

Factory / Service Center

Chun-ui Techno Park 201-610, 202, Chunui-Dong, WonMi-Gu, Buchoen, Gyeonggi-Do, 420-857, Korea

Tel: +82 32 623 0030, Fax: +82 32 623 0035

Online Support Web page

<http://itc.m3mobile.net>