

Flash Power Manage in FSP

Rev. 1.1.0, 2023-04-24

Contents

| | |
|---|-----------|
| Introduction | 3 |
| 1 Hardware and Software Requirements | 3 |
| 2 Work Flow..... | 3 |
| 3.1 Preparation | 3 |
| 3.2 Build Project..... | 5 |
| 3.3 Add Modules and set Parameters..... | 7 |
| 3.4 Add Testbench..... | 8 |
| 3 Run Demo..... | 9 |
| 4 Revision History | 11 |

Introduction

Usually, Nor Flash has more than one power mode, such as Normal mode and DeepPowerDown, but in FSP, it is not very easy to change Flash power mode. In this application, we introduce a middleware to manage Flash Power mode, and take MX25R as an example for interpretation. The Power Manage Middleware just offers some interfaces and the Flash vendor should realize the interfaces according to related rules:

- `power_init ()`
- `setNormalMode ()`
- `setHighPerformanceMode ()`
- `setLowPowerMode ()`
- `setSuperLowPowerMode ()`
- `setDeepPowerDownMode ()`

`power_init()` is used to do some initialization work, and then vendor should select some power mode according to actual Flash. Finally, the other power should return `NOT_SUPPORT`;

1 Hardware and Software Requirements

The RWWEE is developed and tested on Renesas RA6M3 board. User can select the same platform for quick start. The onboard NOR flash is MX25L series flash. It is recommended to add a new MX25R flash with QSPI's another CS channel (RA6M3 QSPI controller has two CS channel and can access two devices).


Please check if your environment can satisfy the following requirements:


- **Renesas RA6M3 Board (with MX25R flash)**
- **Renesas Flexible Software Package (FSP)**
- **J-Link RTT Viewer**
- **MX25R Extend Modulepack: MXIC.MX25R_Extend.2.0.0.pack**
- **PowerManage Modulepack: Renesas.Flash_PowerManage.1.0.0+fsp.4.0.0.pack**
- **PowerManage_Sample_Project**

2 Work Flow

3.1 Preparation

We assume that FSP is installed successfully, so you should import the pack as follows.

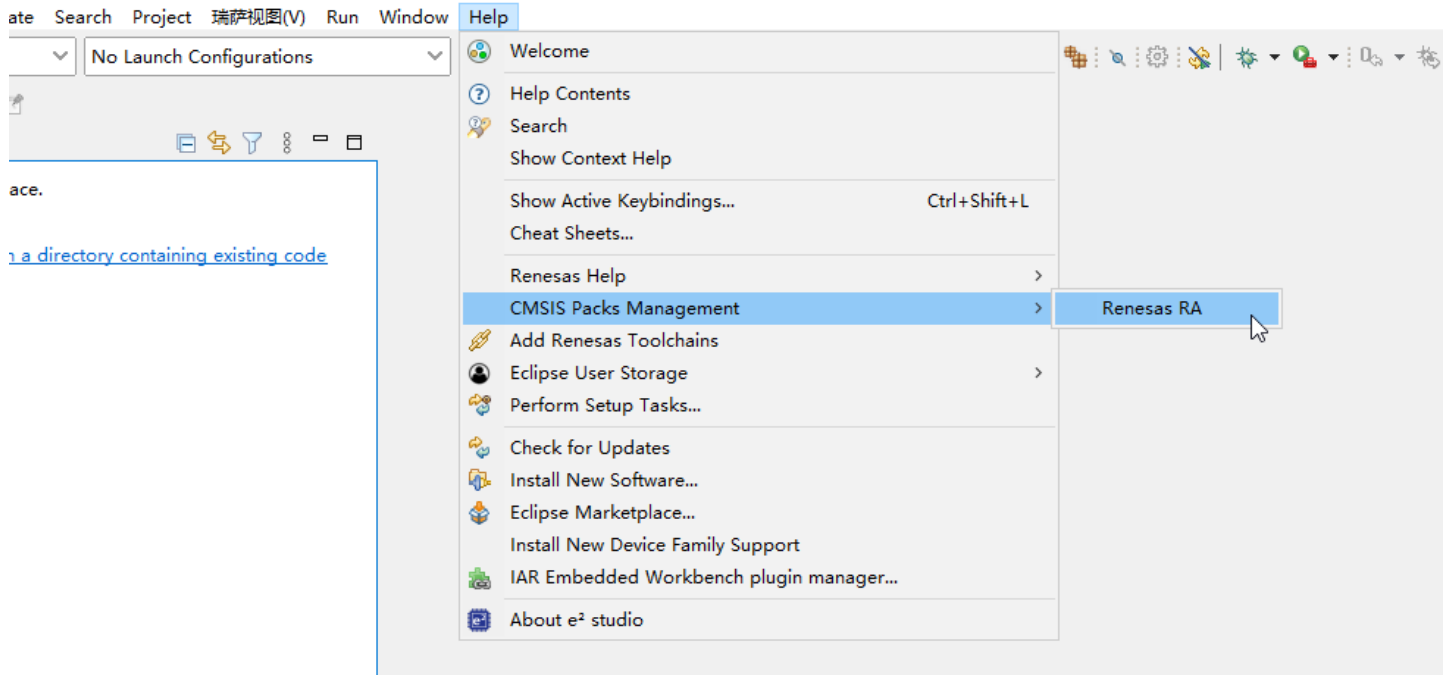

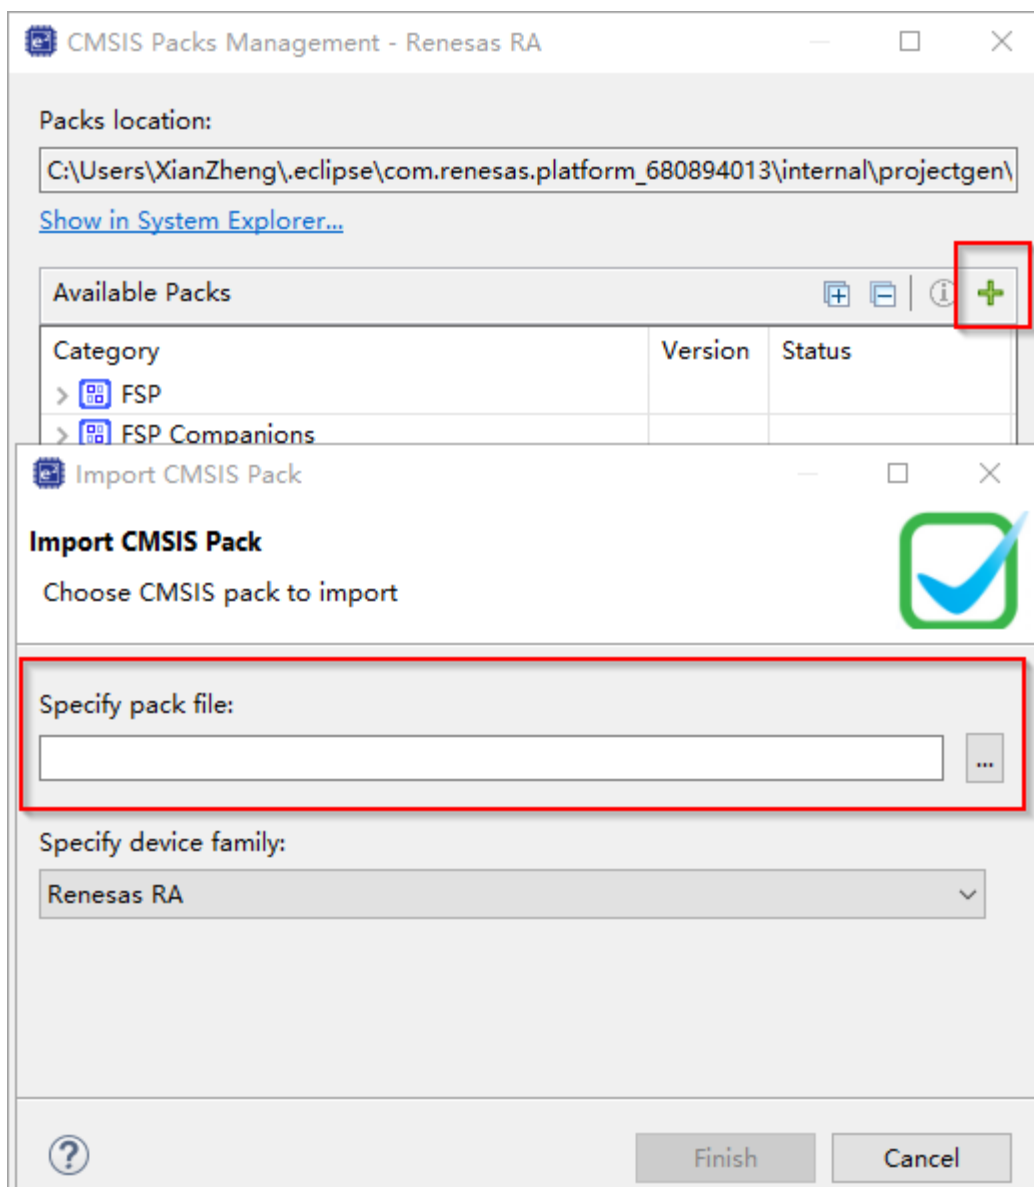

3.2 Build Project

Open e2studio and build a new project, here we choose **Renesas RA C/C++ Project** and device select **EK-RA6M3**:

Renesas RA C/C++ Project
 Device and Tools Selection

Device Selection

FSP Version: 2.0.0
 Board: EK-RA6M3
 Device: R7FA6M3AH3CFC
 Language: ☒ C ☐ C++

Board Description
 Evaluation kit for RA6M3 MCU Group
 Visit www.renesas.com/ra/ek-ra6m3 to get kit user's manual, quick start guide, errata, design package, example projects, etc.

Device Details


| | |
|-----------|-----------|
| TrustZone | No |
| Pins | 176 |
| Processor | cortex-m4 |

Toolchains
 GNU ARM Embedded
 9.2.1.20191025

Debugger
 J-Link ARM


< 上一步(B) **下一步(N) >** 完成(F) 取消

Then we can select **Bare Metal – Blinky** as a template:

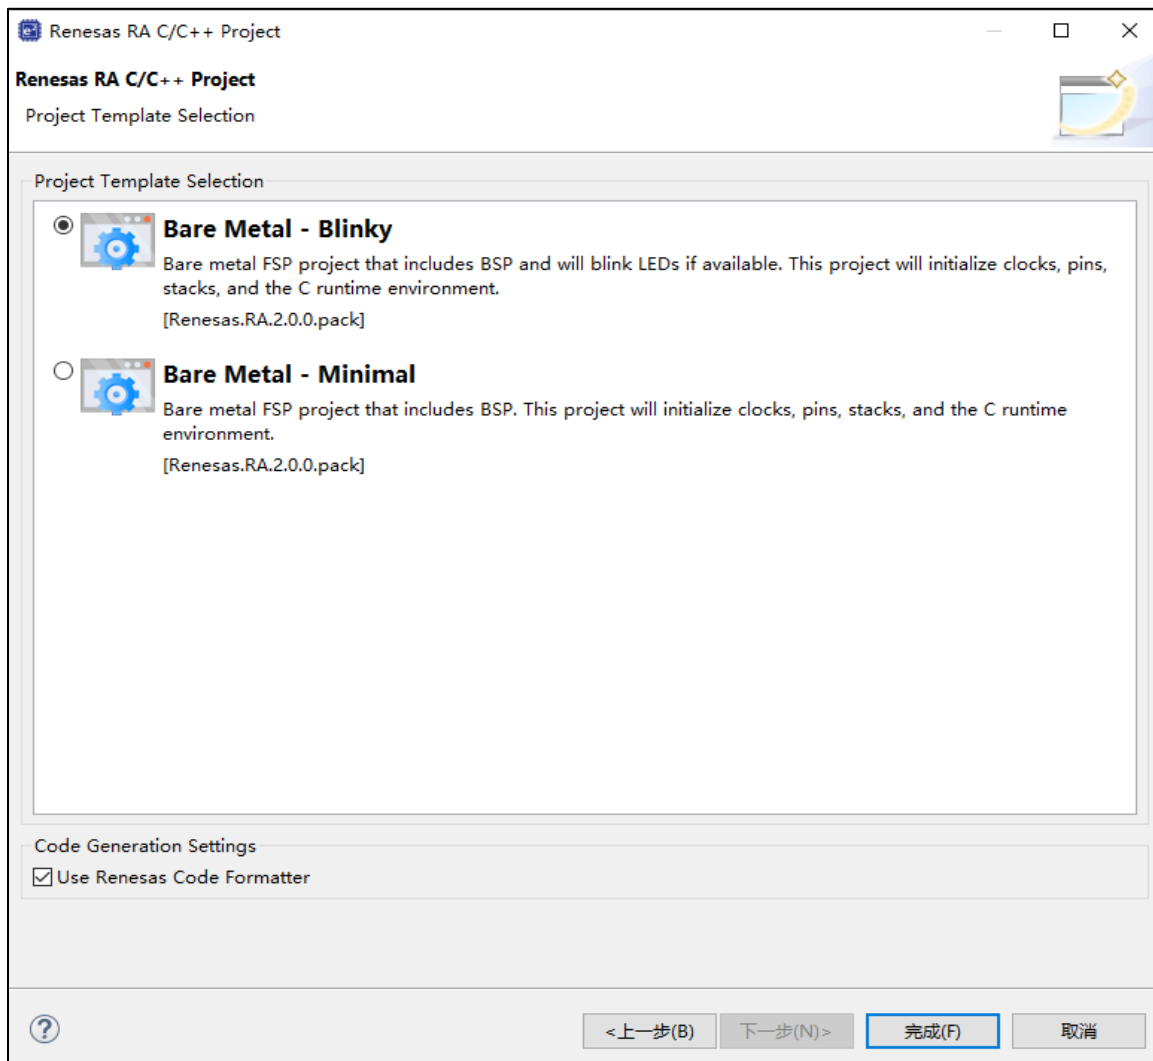

3.3 Add Modules and set Parameters

After build project, you should add Power Manage module as the follow picture: **New Stack->Middleware->Storage->Flash Power manage.**

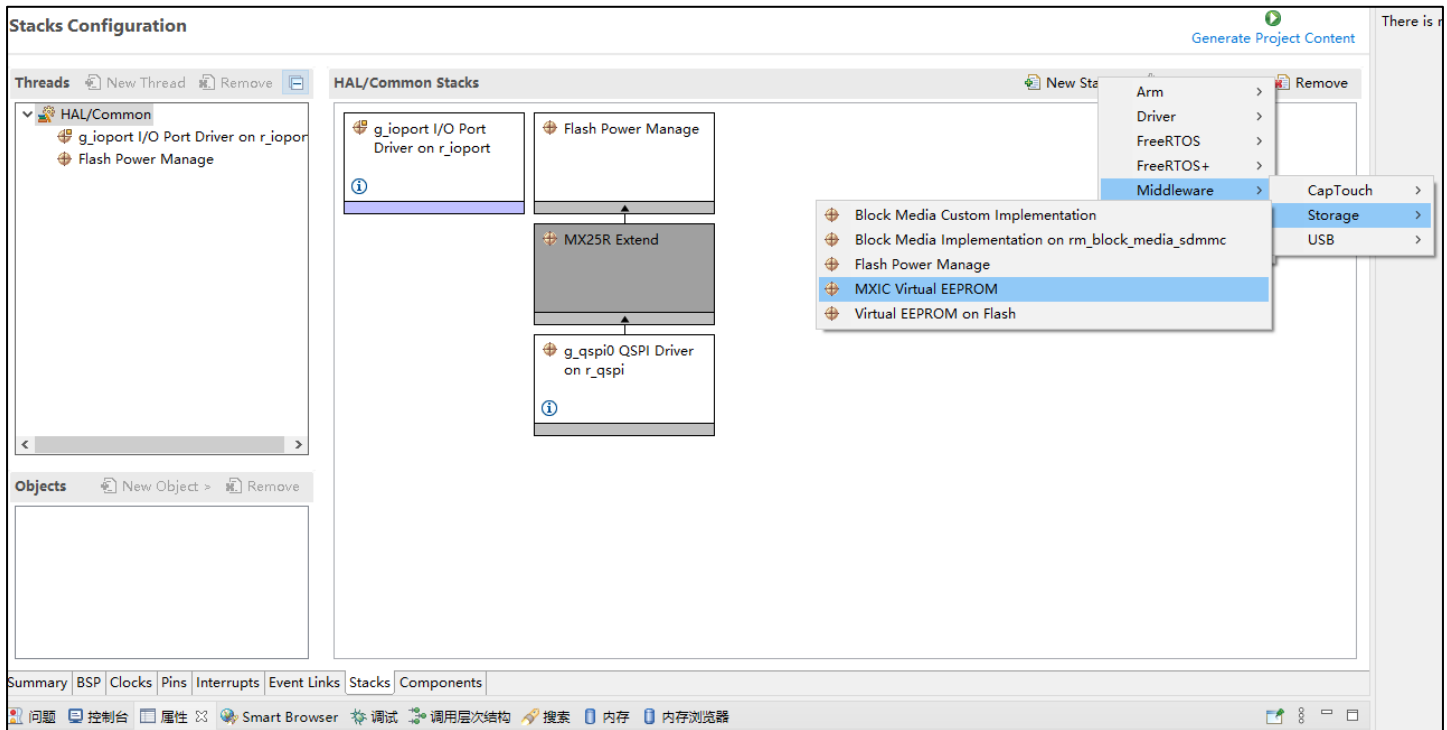


After add MX25R Module, you should set correct pins according to actual connection. For more information, Please refer to *MX25R_Extend Application Note*.

Finally, you should set **Heap size** in **BSP->Properties**(To generate random data for testbench), then save the changes and click **Generate Project Content** button to generate code.


3.4 Add Testbench

You can copy **SEGGER_RTT** folder and **hal_entry.c** from **PowerManage_Sample_Project** and paste to **src** folder. Then, you should click the hammer button to build the project.

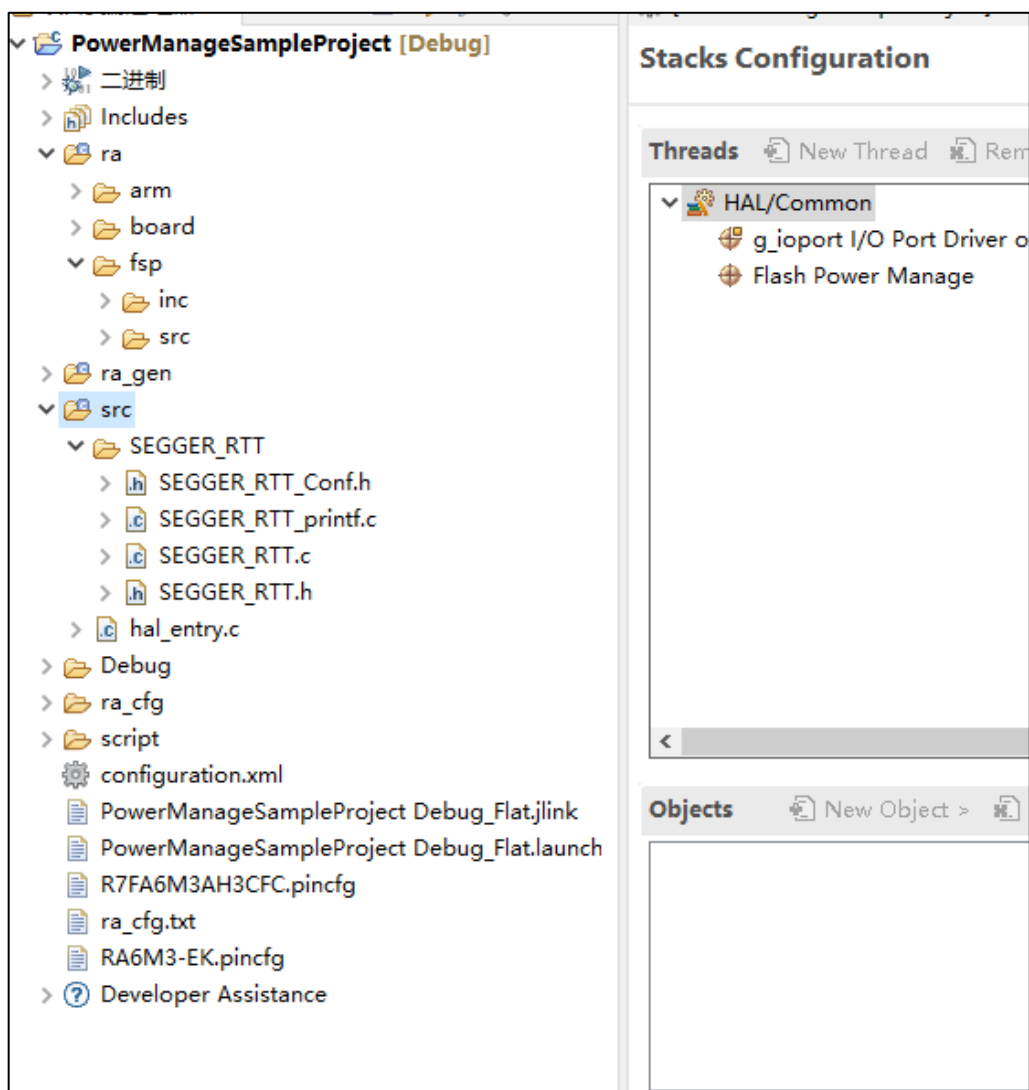

3 Run Demo

Download the code to develop board, and then connect to J-Link RTT Viewer.

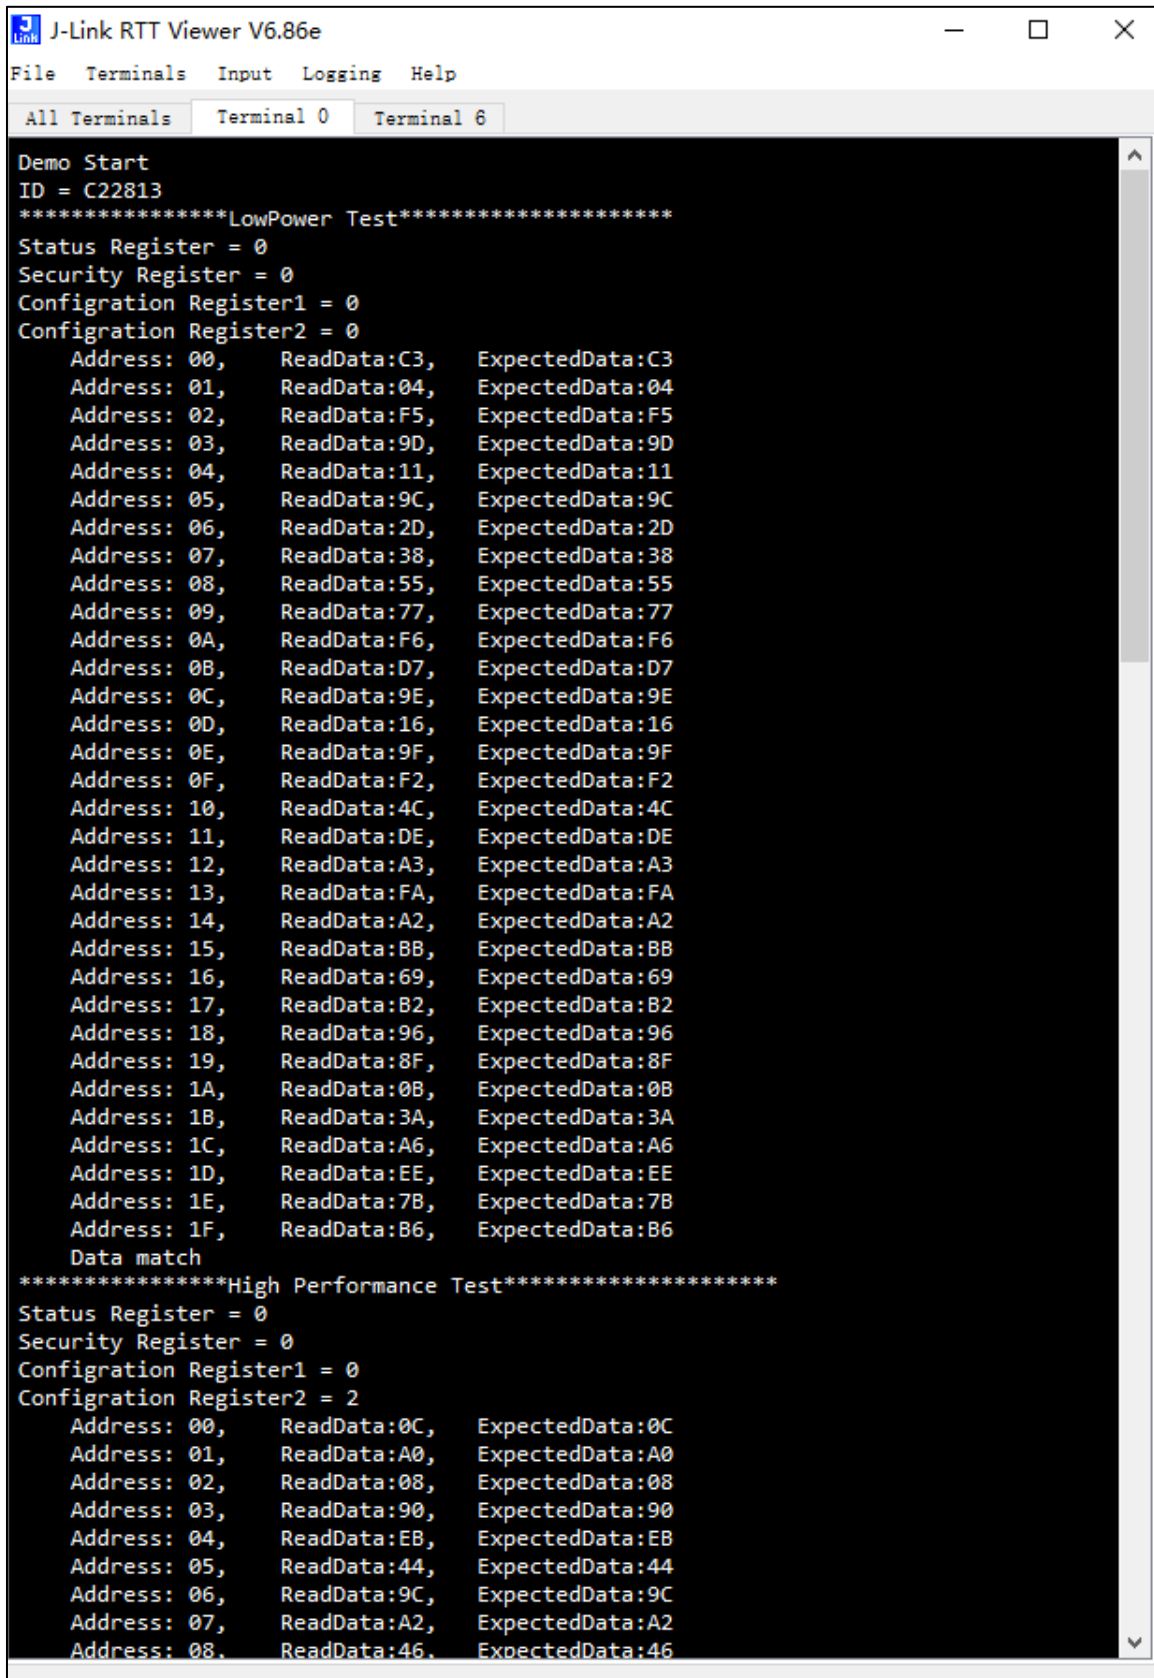

```

J-Link RTT Viewer V6.86e
File Terminals Input Logging Help
All Terminals Terminal 0 Terminal 6

Demo Start
ID = C22813
*****LowPower Test*****
Status Register = 0
Security Register = 0
Configuration Register1 = 0
Configuration Register2 = 0
  Address: 00,   ReadData:C3,   ExpectedData:C3
  Address: 01,   ReadData:04,   ExpectedData:04
  Address: 02,   ReadData:F5,   ExpectedData:F5
  Address: 03,   ReadData:9D,   ExpectedData:9D
  Address: 04,   ReadData:11,   ExpectedData:11
  Address: 05,   ReadData:9C,   ExpectedData:9C
  Address: 06,   ReadData:2D,   ExpectedData:2D
  Address: 07,   ReadData:38,   ExpectedData:38
  Address: 08,   ReadData:55,   ExpectedData:55
  Address: 09,   ReadData:77,   ExpectedData:77
  Address: 0A,   ReadData:F6,   ExpectedData:F6
  Address: 0B,   ReadData:D7,   ExpectedData:D7
  Address: 0C,   ReadData:9E,   ExpectedData:9E
  Address: 0D,   ReadData:16,   ExpectedData:16
  Address: 0E,   ReadData:9F,   ExpectedData:9F
  Address: 0F,   ReadData:F2,   ExpectedData:F2
  Address: 10,   ReadData:4C,   ExpectedData:4C
  Address: 11,   ReadData:DE,   ExpectedData:DE
  Address: 12,   ReadData:A3,   ExpectedData:A3
  Address: 13,   ReadData:FA,   ExpectedData:FA
  Address: 14,   ReadData:A2,   ExpectedData:A2
  Address: 15,   ReadData:BB,   ExpectedData:BB
  Address: 16,   ReadData:69,   ExpectedData:69
  Address: 17,   ReadData:B2,   ExpectedData:B2
  Address: 18,   ReadData:96,   ExpectedData:96
  Address: 19,   ReadData:8F,   ExpectedData:8F
  Address: 1A,   ReadData:0B,   ExpectedData:0B
  Address: 1B,   ReadData:3A,   ExpectedData:3A
  Address: 1C,   ReadData:A6,   ExpectedData:A6
  Address: 1D,   ReadData:EE,   ExpectedData:EE
  Address: 1E,   ReadData:7B,   ExpectedData:7B
  Address: 1F,   ReadData:B6,   ExpectedData:B6
Data match
*****High Performance Test*****
Status Register = 0
Security Register = 0
Configuration Register1 = 0
Configuration Register2 = 2
  Address: 00,   ReadData:0C,   ExpectedData:0C
  Address: 01,   ReadData:A0,   ExpectedData:A0
  Address: 02,   ReadData:08,   ExpectedData:08
  Address: 03,   ReadData:90,   ExpectedData:90
  Address: 04,   ReadData:EB,   ExpectedData:EB
  Address: 05,   ReadData:44,   ExpectedData:44
  Address: 06,   ReadData:9C,   ExpectedData:9C
  Address: 07,   ReadData:A2,   ExpectedData:A2
  Address: 08,   ReadData:46,   ExpectedData:46
  
```

4 Revision History

Table 8-1: Revision History

| Revision No. | Description | Page | Date |
|--------------|-----------------|------|----------------|
| Rev. 1.0.0 | Initial Release | ALL | April 14, 2021 |
| Rev. 1.1.0 | Update | 4 | April 24, 2023 |



MACRONIX
INTERNATIONAL CO., LTD.

Macronix Proprietary

APPLICATION NOTE

Except for customized products which have been expressly identified in the applicable agreement, Macronix's products are designed, developed, and/or manufactured for ordinary business, industrial, personal, and/or household applications only, and not for use in any applications which may, directly or indirectly, cause death, personal injury, or severe property damages. In the event Macronix products are used in contradicted to their target usage above, the buyer shall take any and all actions to ensure said Macronix's product qualified for its actual use in accordance with the applicable laws and regulations; and Macronix as well as its suppliers and/or distributors shall be released from any and all liability arisen therefrom.

Copyright© Macronix International Co., Ltd. 2023. All rights reserved, including the trademarks and tradename thereof, such as Macronix, MXIC, MXIC Logo, MX Logo, Integrated Solutions Provider, Nbit, Macronix NBit, HybridNVM, HybridFlash, HybridXFlash, XtraROM, KH Logo, BE-SONOS, KSMC, Kingtech, MXSMIO, Macronix vEE, Macronix MAP, RichBook, Rich TV, OctaRAM, OctaBus, OctaFlash, and FitCAM. The names and brands of third party referred thereto (if any) are for identification purposes only.

For the contact and order information, please visit Macronix's Web site at: <http://www.macronix.com>.

MACRONIX INTERNATIONAL CO., LTD. reserves the right to change product and specifications without notice.