


Turtlebot4 Practice 1

운영체제의 실제
안인규 (Inkyu An)

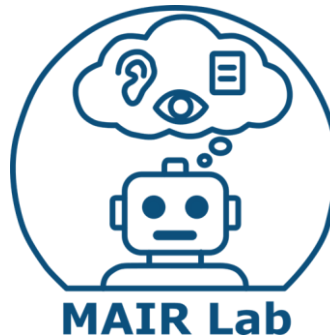

Turtlebot4

- The Turtlebot4 is a ROS 2-based mobile robot intended for education and research
- It is capable of mapping the robot's surroundings, navigating autonomously, running AI models on its camera and more
- A Raspberry Pi 4B runs the TurtleBot4 software



Turtlebot4 - Sensor

- RPLIDAR A1M8
 - A 360 degree Laser Range Scanner with a 12 m range
- OAK-D-Pro
 - It contains OV9282 stereo sensors as well as an IR laser dot projector and an IR illumination LED → High quality depth images



Turtlebot4 – How to use?

- Turn on:
 - Place the Turtlebot4 onto its dock
 - The green LED on the dock will turn on for a few second
 - The Turtlebot4 should power on (we can hear a “happy sound”)
- Turn off:
 - Remove the Turtlebot4 from the dock (do not leave it on the dock)
 - Press and hold the round button in the center for 5 seconds (until a “happy sound” is heard)
- Other settings have been completed by the TAs

Turtlebot4 – How to use?

- **User PC (Our laptop PC)**
 - OS: Ubuntu 24.04
 - ROS2: Jazzy
- **Check the status of Turtlebot4 using LED**



Status LED

Status LED

LED	Colour	Description
POWER	Green	Always ON
MOTOR	Green	ON when wheels are enabled, OFF when wheels are disabled
COMMS	Green	ON when communication with the Create [®] 3 is active. OFF otherwise
WIFI	Green	ON when a valid IP address can be found for the specified Wi-Fi interface
BATTERY	Green, Yellow, Red	Colour will reflect battery percentage

Battery Percentage	Colour
50-100	Green
20-50	Yellow
12-20	Red
0-12	Blinking Red

Turtlebot4 – How to use?


• Installation

- Install Ubuntu 24.04 on each PC.
- Install ROS2 Jazzy (아래 사이트를 참고해서 설치).
 - <https://docs.ros.org/en/jazzy/Installation/Ubuntu-Install-Debs.html>
- Install the ROS2 Turtlebot4 package.

```
$ sudo apt update
$ sudo apt install ros-jazzy-turtlebot4-description ros-jazzy-turtlebot4-msgs ros-jazzy-turtlebot4-navigation
ros-jazzy-turtlebot4-node
$ sudo apt install ros-jazzy-turtlebot4-desktop
```


Turtlebot4 – Networking

- The User PC and the Raspberry Pi communicate via **Wi-Fi** (using the 5 GHz band for speed).
- All hardware-related processing of the robot is handled on the Raspberry Pi (including sensor topics and robot control from command velocities).
- The User PC performs computation-intensive tasks such as SLAM and navigation.

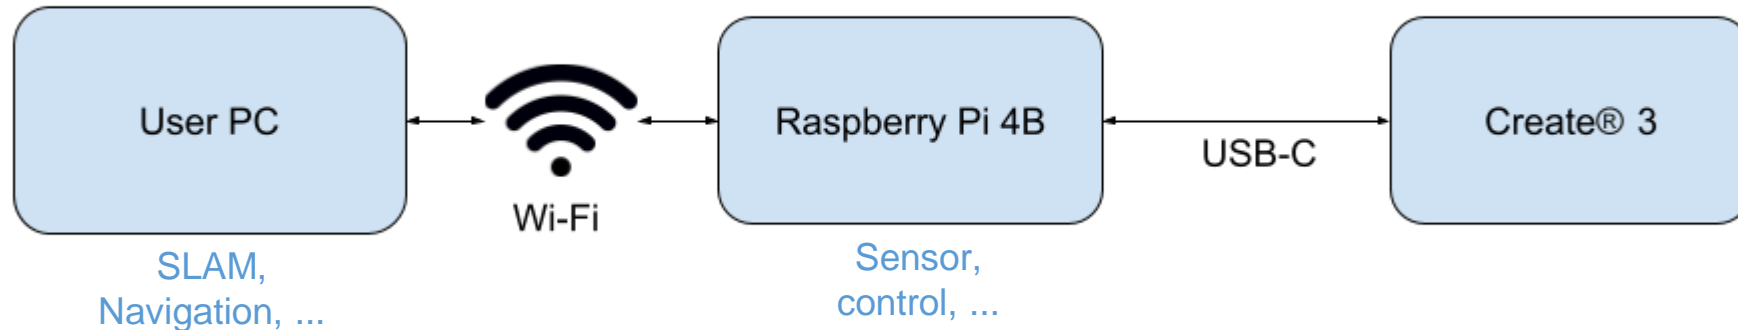

- The Raspberry Pi can be accessed via SSH (IP는 각자의 turtlebot4에 맞게 설정) **(Practice)**


```
$ ssh ubuntu@192.168.28.24
$ pw: turtlebot4
```

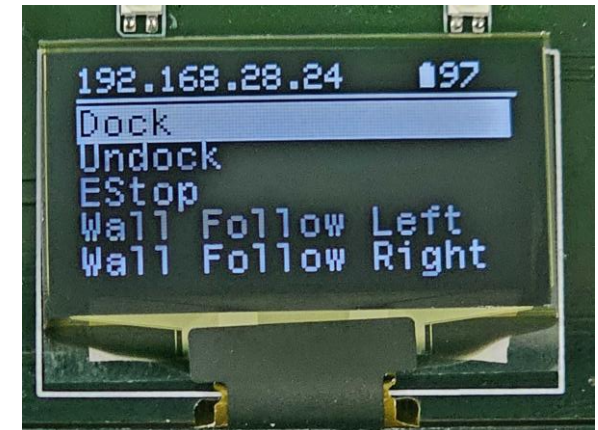

Turtlebot4 – Networking

- To change the **ROS_DOMAIN_ID**, connect to the TurtleBot 4 (via SSH) and use *turtlebot4_setup*.
 - ROS setup → Bash setup → sets ROS_DOMAIN_ID → Apply Settings (Wait for a few minutes)

```
$ ssh ubuntu@192.168.28.24  
$ pw: turtlebot4  
$ turtlebot4-setup
```

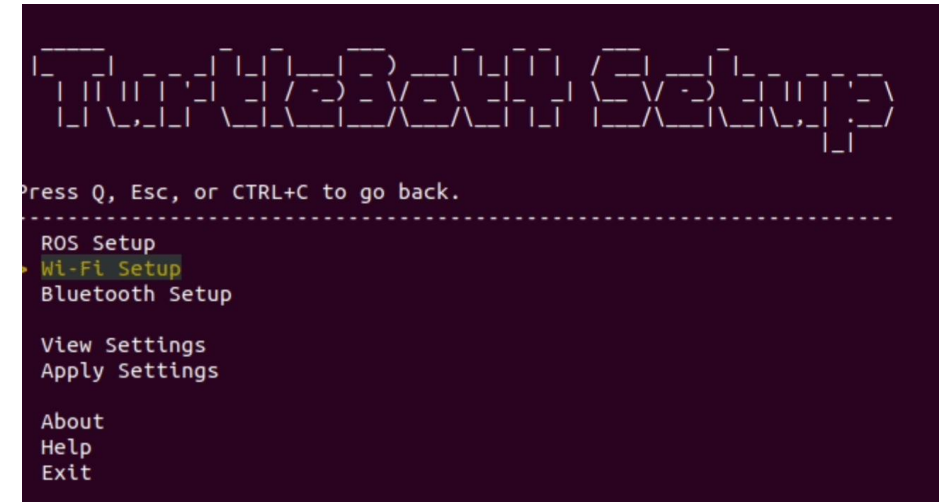

- The ROS_DOMAIN_ID of User PC also has to be matched

```
$ echo "export ROS_DOMAIN_ID=<your_domain_id>" >> ~/.bashrc
```