

Open Playback Recorder

MAKER GUIDE

Overview

This document contains the necessary information to build the Open Playback Recorder.

Contents

Overview	1
Maker Checklist.....	4
Maker To Do List	4
Items to Give to User	4
Tool List	4
Customization Guide.....	4
3D Printing Guide	5
3D Printing Summary	5
3D Printing Settings.....	5
Post-Processing	5
Examples of Quality Prints	6
Custom Printed Circuit Board (PCB) Guide	10
Ordering the Custom PCB	10
Assembly Guide.....	12
Required Components	12
Required Tools	16
Required Personal Protective Equipment (PPE)	16
Bottom Enclosure.....	17
Step 1: Solder the battery leads.....	17
Step 2: Solder the capacitor	17
Step 3: Solder the power switch	18
Step 4: Solder the headers to the MicroSD card reader	18
Step 5: Solder the MicroSd card reader to the PCB	19
Step 5: Solder the push buttons	19
Step 6: Solder the 3.5mm jacks.....	20

Open Playback Recorder

MAKER GUIDE

Step 7: Using your fingers ect.....	20
Step 8: Solder them in place and remove the microcontroller.	21
Step 8: Solder in the ribbon cable header	22
Step 9: Add the T-Nut to the bottom enclosure	23
Step 10: Add buttons to the enclosure.....	24
Step 11: Screw PCB into the bottom enclosure	25
Step 12: Connect the battery	26
Bottom Enclosure Done	26
Top Enclosure.....	27
Step 1: Solder in the resistors	27
Step 2: Solder in the Level LEDs	27
Step 3: Solder in the Play and Rec LEDs	28
Step 4: Solder the amplifier terminal and male headers.....	28
Step 5: Solder the amplifier female headers	29
Step 6: Solder the ribbon cable header onto the PCB	29
Step 7: Solder the microphone to the PCB	30
Step 8: Solder the potentiometer into the PCB	30
Step 9: Slide the PCB into the top enclosure	31
Step 10: Attach the volume knob	32
Step 11: Prep the Speaker Wires	33
Step 12: Screw the Speaker to the Enclosure	33
Step 12: Connect the speaker	34
Step 13: Connect the ribbon cable.....	34
Step 14: Close the enclosure.....	35
Top Enclosure Done	35
Programming	36
Step 1: Setup Arduino IDE on Computer	36
Step 2: Download the Firmware files.....	36
Step 3: Open the Library Manager.....	36
Step 4: Search the TMRpcm library	37

Open Playback Recorder

MAKER GUIDE

Step 5: Enable Recording	37
Step 6: Open the Preferences	38
Step 7: Add the Board URL.....	39
Step 8: Add the Seeeduino Nano Board	40
Step 9: Connect the Open Playback Recorder to the Computer	41
Step 10: Program the Microcontroller	41
Testing.....	41
Power on the device with battery power	41
Record multiple messages on one level	41
Adjust the volume.....	42
Record a message on each level	42
Delete the multiple messages and record one message	42
Power the device with USB power.....	42
Troubleshooting.....	42
Both Play and Record LEDs flashing when device is powered on.....	42

Open Playback Recorder

MAKER GUIDE

Maker Checklist

This list provides an overview of the steps required to build and deliver the device.

Maker To Do List

- ☐ Read through the Assembly Guide to become familiar with required components, tools, supplies, and safety gear and overall assembly steps.
- ☐ Talk to User about customization options (e.g., color, any special requests, etc.)
- ☐ Talk to user about what switches they would like
 - [Switches](#) are a separate device that can be found on the MMC site and are not included in the files for this device. Custom toppers for the [Interact Switch](#) can be found in the build filed for this device.
- ☐ Order hardware components
- ☐ Gather tools, supplies, and safety equipment.
- ☐ Assemble the device
- ☐ Test device
- ☐ Print "User Guide"

Items to Give to User

- ☐ Assembled, tested device
- ☐ "User Guide"

Tool List

- 3D printer
- Soldering iron and solder
- Small flathead screwdriver
- Small Phillips screwdriver
- ¼-20 Bolt

Customization Guide

The device can be printed in the user's desired colour.

The text on the enclosure can be printed in a separate colour from the enclosure to increase contrast

The base and lid can be printed in separate colours for a two tone effect

Open Playback Recorder

MAKER GUIDE

3D Printing Guide

3D Printing Summary

Metrics	Single Unit
Total Print Time (min)	194 (3h14)
Total Number of Components	9
Typical Total Mass (g)	90
Typical Number of Print Setups	2

3D Printing Settings

Print File Name	Qty	Total Print Time (hr:min)	Mass (g)	Infill (%)	Support(Y/N)	Layer Height/ Nozzle Diameter(mm)	Notes
Base.stl	1	1:10	40	20	N	0.2/0.4	
Battery Cover.stl	1	0:16	5	20	N	0.2/0.4	
3 LED Spacer.stl	1	0:06	1	20	N	0.2/0.4	
2 LED Spacer.stl	1	0:05	1	20	N	0.2/0.4	
Level Button.stl	1	0:03	1	20	N	0.2/0.4	
Lid.stl	1	1:19	39	20	N	0.2/0.4	
Play Button.stl	1	0:03	1	20	N	0.2/0.4	
Record Button.stl	1	0:03	1	20	N	0.2/0.4	
Volume Knob.stl	1	0:09	1	20	N	0.2/0.4	

Post-Processing

- Use a hobby knife to remove any burrs or bumps

Open Playback Recorder MAKER GUIDE

Examples of Quality Prints

Photo of Base.stl


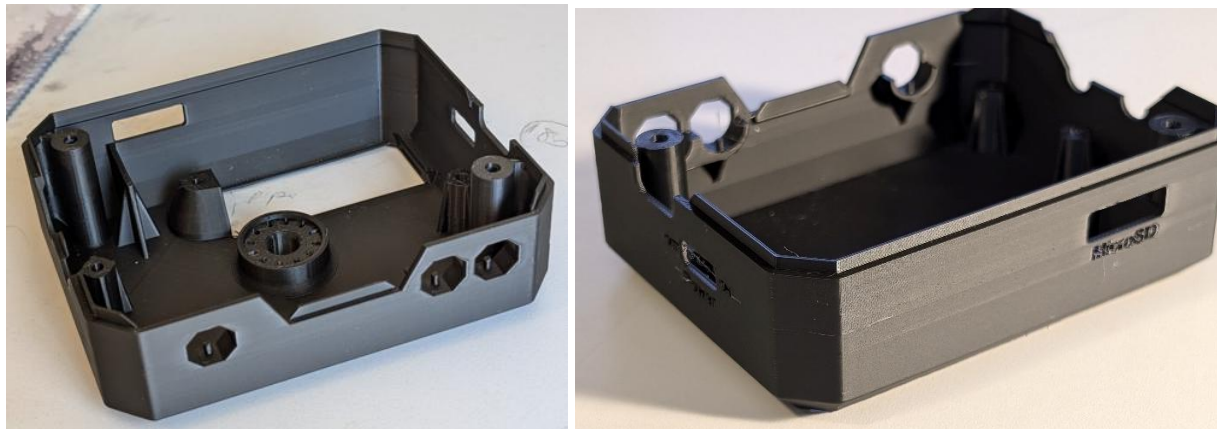


Photo of Battery Cover.stl

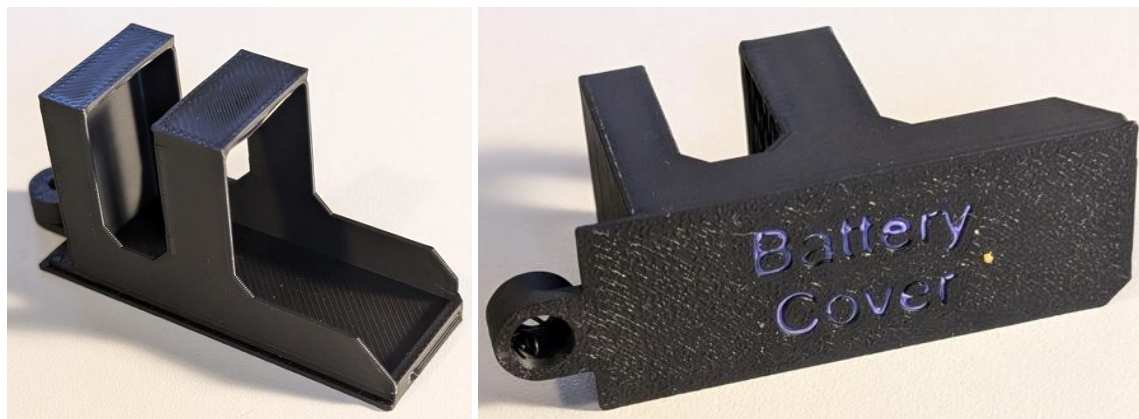

Open Playback Recorder MAKER GUIDE

Photo of Lid.stl



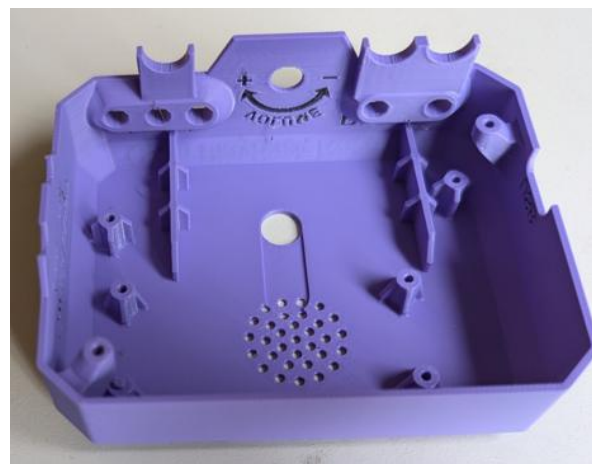


Photo of Level Button.stl

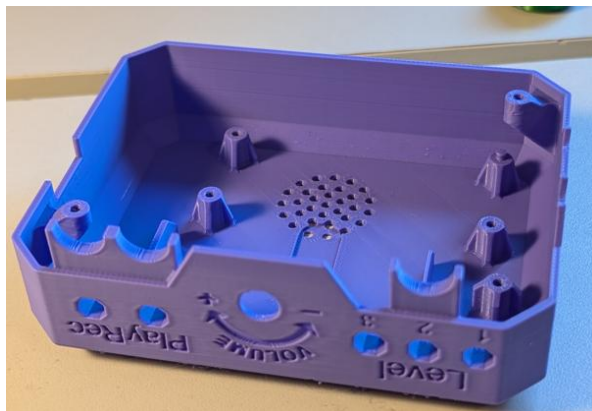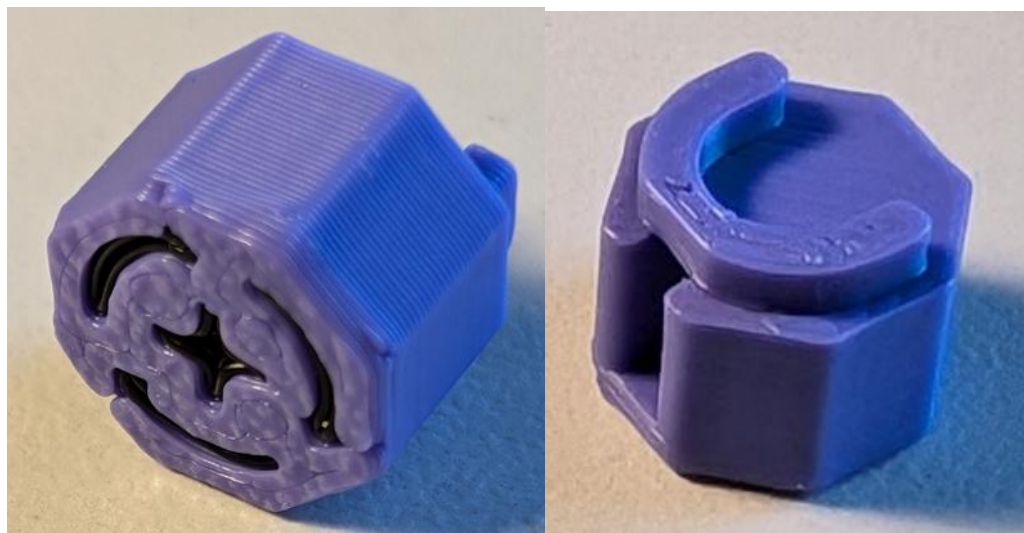

Open Playback Recorder MAKER GUIDE

Photo of Play Button.stl


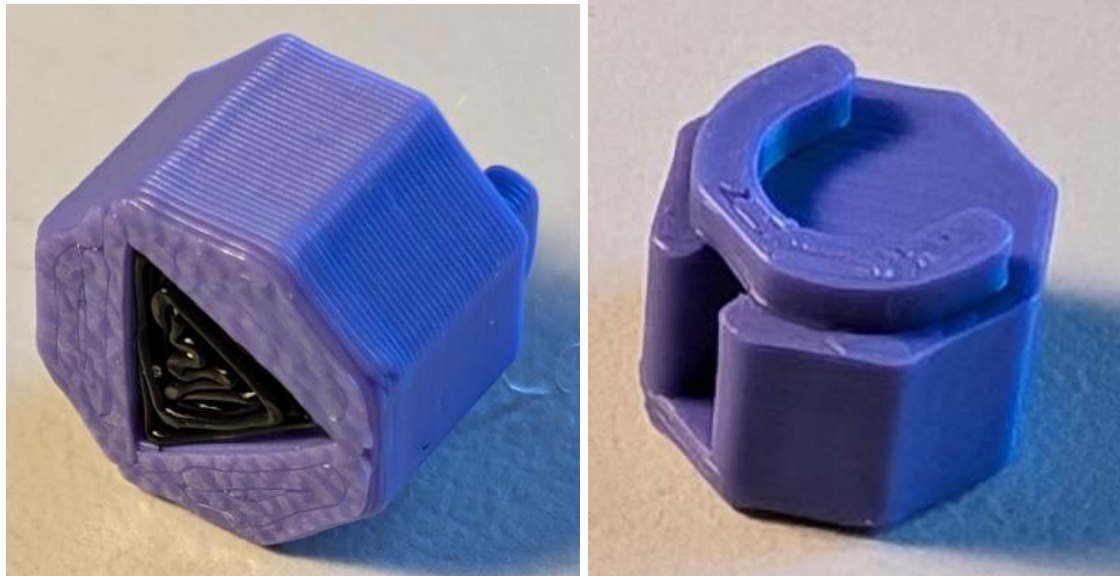


Photo of Record Button.stl

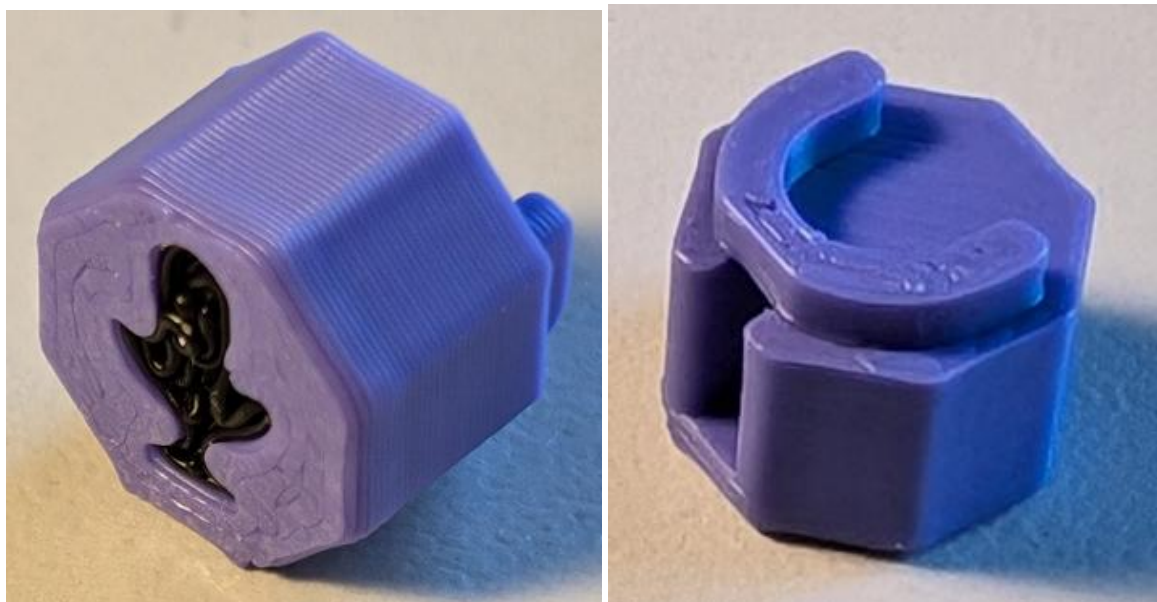

Open Playback Recorder MAKER GUIDE

Photo of Volume Knob.stl



Photo of 3 LED Spacer.stl



Open Playback Recorder

MAKER GUIDE

Photo of 2 LED Spacer.stl



Custom Printed Circuit Board (PCB) Guide

The Open Playback Recorder uses 2 custom circuit board/boards.

The Custom PCB can be ordered from one of a variety of PCB Manufacturers. Typically, the minimum quantity for a custom PCB is five. Shipping options vary significantly in cost and shipping time. Plan on at least a week from the time of order to the PCBs arrival.

Ordering the Custom PCB

1. Select a PCB Fabrication Company
 - a. [JLPCB](#)
 - b. [PCBWay](#)
 - c. [OSH Park](#)
 - d. [Seeed Fusion PCB](#)
2. Create an account or use a guest login.
3. Upload both the Gerber Files (e.g., Open_Playback_Recorder_Top_2024-06-26.zip, Open_Playback_Recorder_Bottom_2024-06-26.zip).
4. Select the fabrication options for each PCB:
 - a. PCB Layers: 2 Layers
 - b. PCB Quantity: 1
 - c. PCB Thickness: 1.6 mm
 - d. Surface Finish: HASL with lead
 - e. PCB Color: Choose what you like. Note that certain colours may impact build time and cost.
 - f. The default settings for the other settings should work.
5. Select shipping option.
 - a. Shipping options and costs vary significantly. Select the best option based on your budget and timing.
6. Submit the order.

Open Playback Recorder

MAKER GUIDE





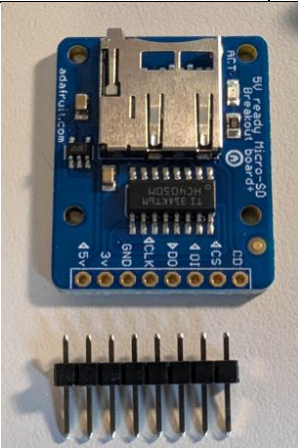

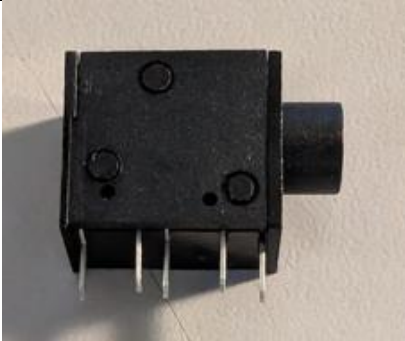

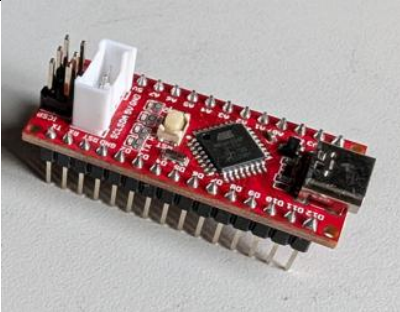


Open Playback Recorder

MAKER GUIDE




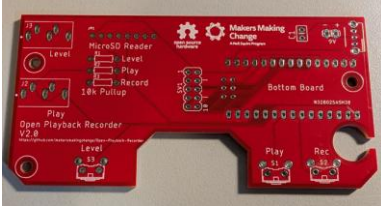



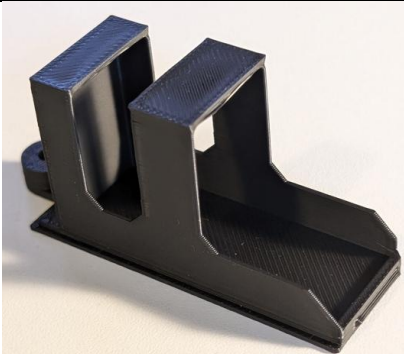

Assembly Guide

Required Components

01	Bottom PCB	QTY: 1	02	Battery Clip	QTY: 1	03	0.1 uF Capacitor	QTY: 1
								
04	Slide Switch	QTY: 1	05	Micro SD Card Reader	QTY: 1	06	Press Button	QTY: 3
								
07	Mono Cable Jack	QTY: 2	08	15 Pin Female Header	QTY: 2	09	Seeeduino Nano	QTY: 1
								

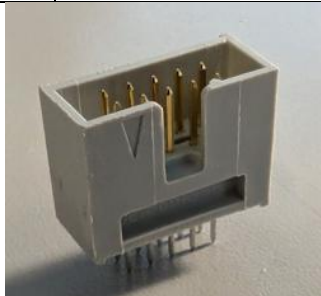

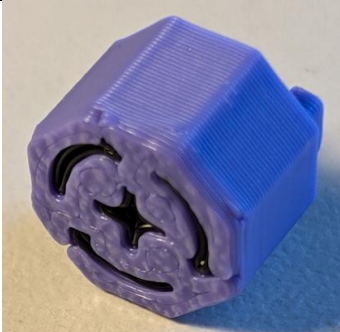



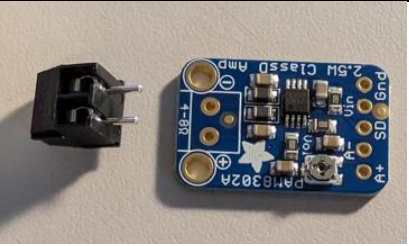
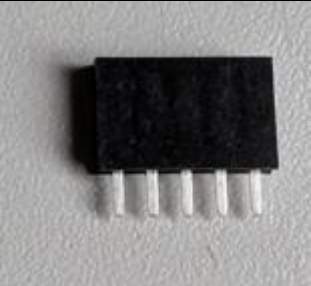
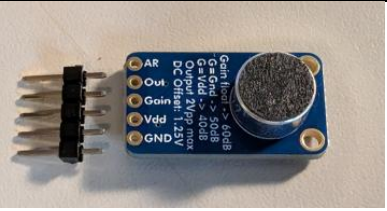
Open Playback Recorder

MAKER GUIDE

10	Ribbon Cable Header	QTY: 2	11	#4 Sheet Metal Screw	QTY: 11	12	9V Battery	QTY: 1
								
13	Level Button	QTY: 1	14	Play Button	QTY: 1	15	Rec Button	QTY: 1
								
16	Base	QTY: 1	17	Battery Cover	QTY: 1	18	Micro SD Card	QTY: 1
								

Open Playback Recorder

MAKER GUIDE

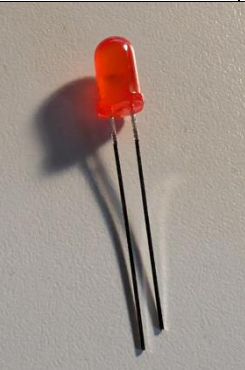19	2 kOhm Resistor	QTY: 5	20	3 LED Spacer	QTY: 1	21	Blue LED	QTY: 3
								
22	2 LED Spacer	QTY: 1	23	Red LED	QTY: 1	24	Green LED	QTY: 1
								
25	PAM8302	QTY: 1	26	5 Pin Female Header	QTY: 1	27	MAX9814	QTY: 1
								

Open Playback Recorder

MAKER GUIDE

28	10 kOhm Logarithmic Potentiometer	QTY: 1	29	Lid	QTY: 1	30	Volume Knob	QTY: 1
								
31	4 Ohm 3W Speaker	QTY: 1	32	Ribbon Cable	QTY: 1	33	Top PCB	QTY: 1
								
34	¼-20 T-Nut	QTY: 1						
								

Open Playback Recorder

MAKER GUIDE

Required Tools

- Soldering Iron
- Solder
- Small flathead screwdriver
- Phillips Screwdriver
- ¼-20 Bolt

Required Personal Protective Equipment (PPE)


- Safety glasses
- Solder fume extractor (optional)

Open Playback Recorder MAKER GUIDE

Bottom Enclosure


Step 1: Solder the battery leads

Take the battery clip (02) and solder it to the bottom PCB (01) on the 9V footprint with the black lead connected to the -, and the red lead connected to the +.

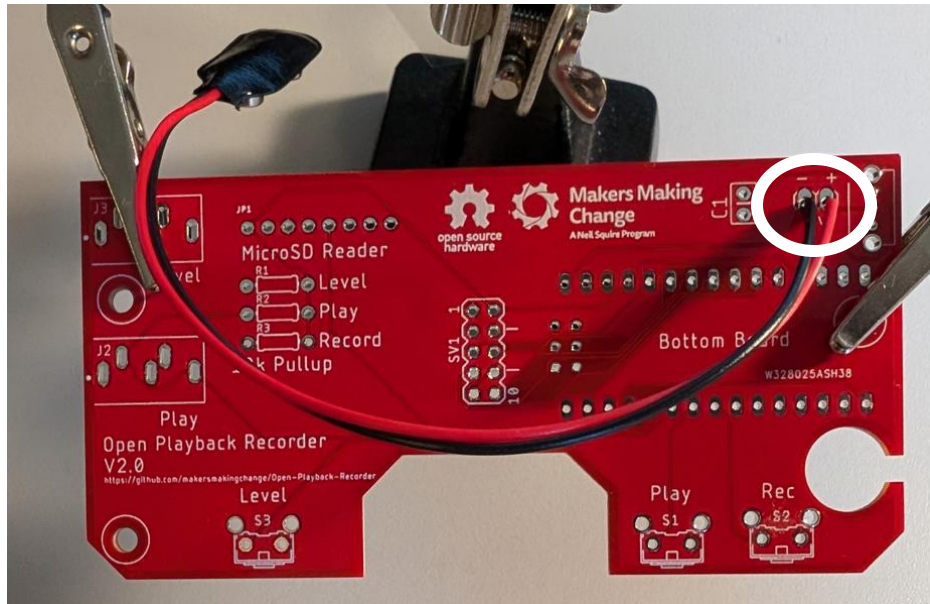

Step 2: Solder the capacitor

Take the 0.1 uF capacitor (03) and solder it to the PCB on the C1 footprint. Trim the leads on the other side of the board.

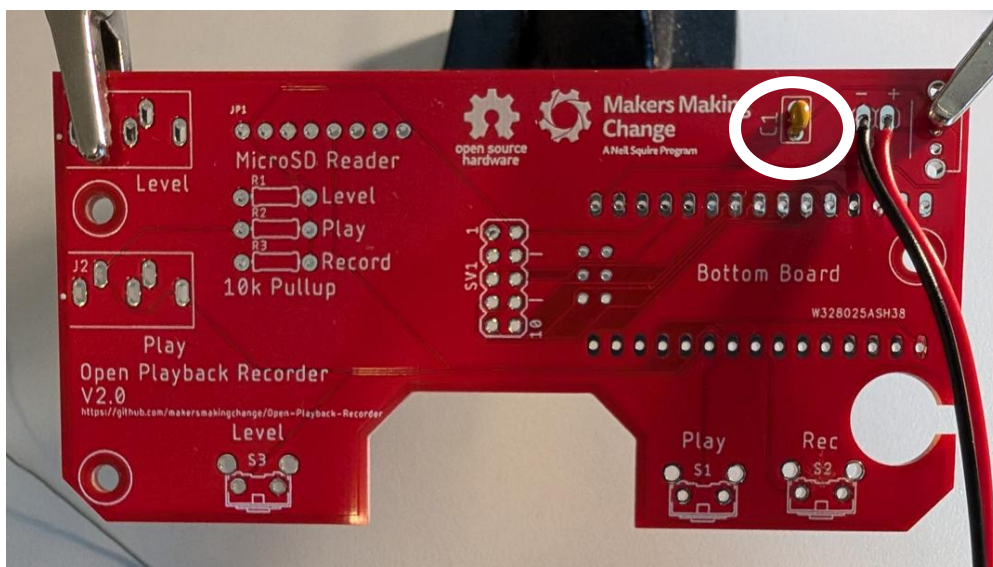


Open Playback Recorder

MAKER GUIDE


Step 3: Solder the power switch

Take the power switch (04) and solder it to the PCB beside the battery clip, with the switch facing the side of the PCB

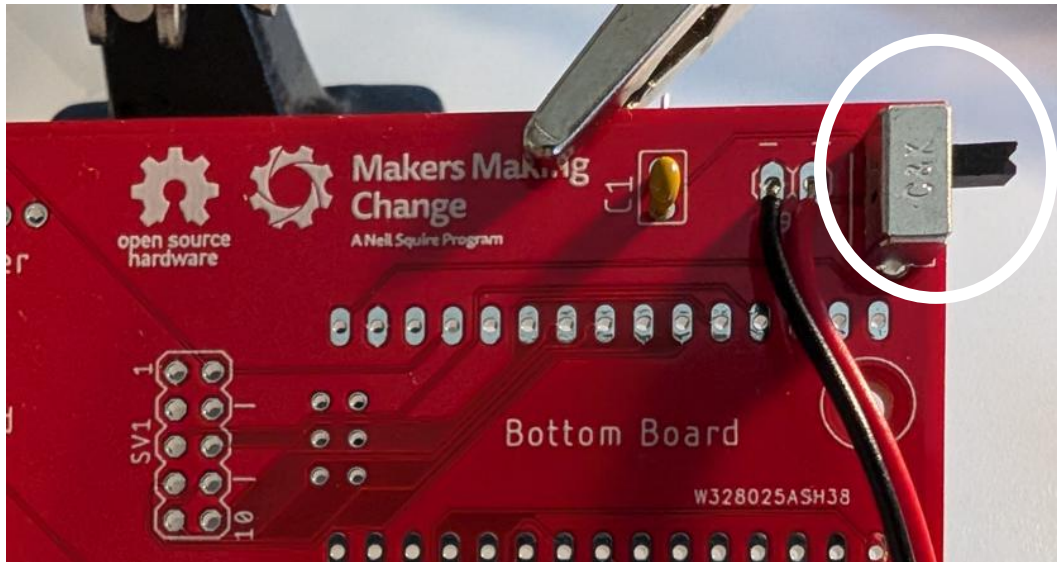

Step 4: Solder the headers to the MicroSD card reader


Solder the male header that came with the microSD card reader (05) to the reader with the short pins of the header in the microSD card reader and the long side of the pins facing away from the reader as shown in the below picture. Insert the microSD card (18) into the reader. You may need to trim one pin from the header that comes with the reader to get it to the correct number of pins.

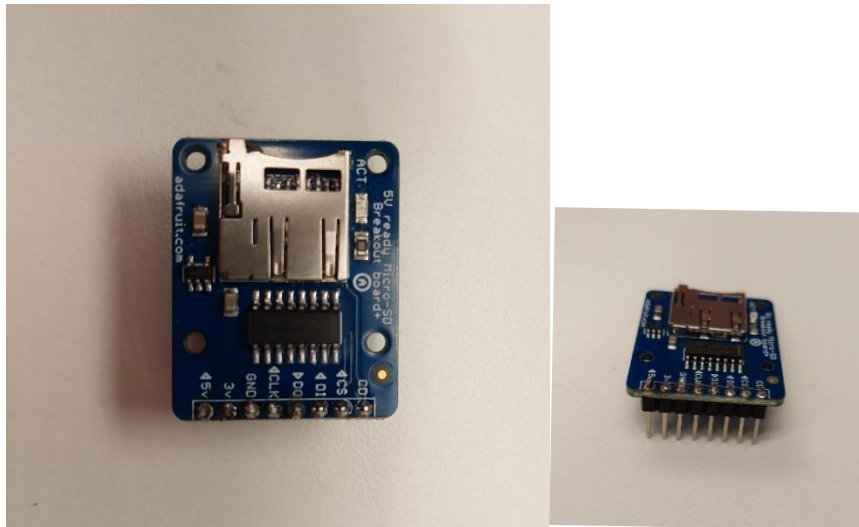

Open Playback Recorder MAKER GUIDE


Step 5: Solder the MicroSd card reader to the PCB

Solder the MicroSD card reader to the PCB with the SD card socket facing away from the PCB, as seen in the below photo. When soldering the reader, ensure that the board is parallel to the PCB.

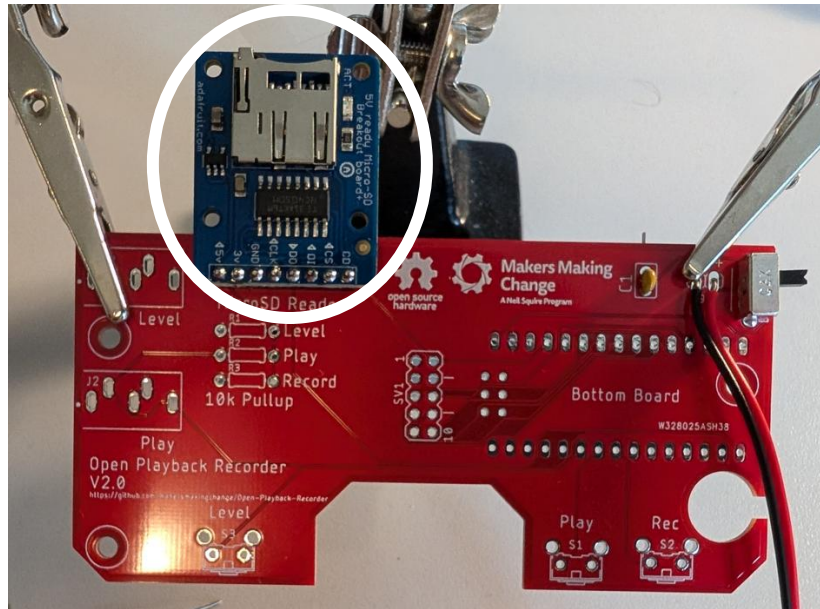

Step 5: Solder the push buttons


Take the three push buttons (06) and solder them into the Level, Play, and Rec footprints on the PCB, with the button facing the edge of the board.

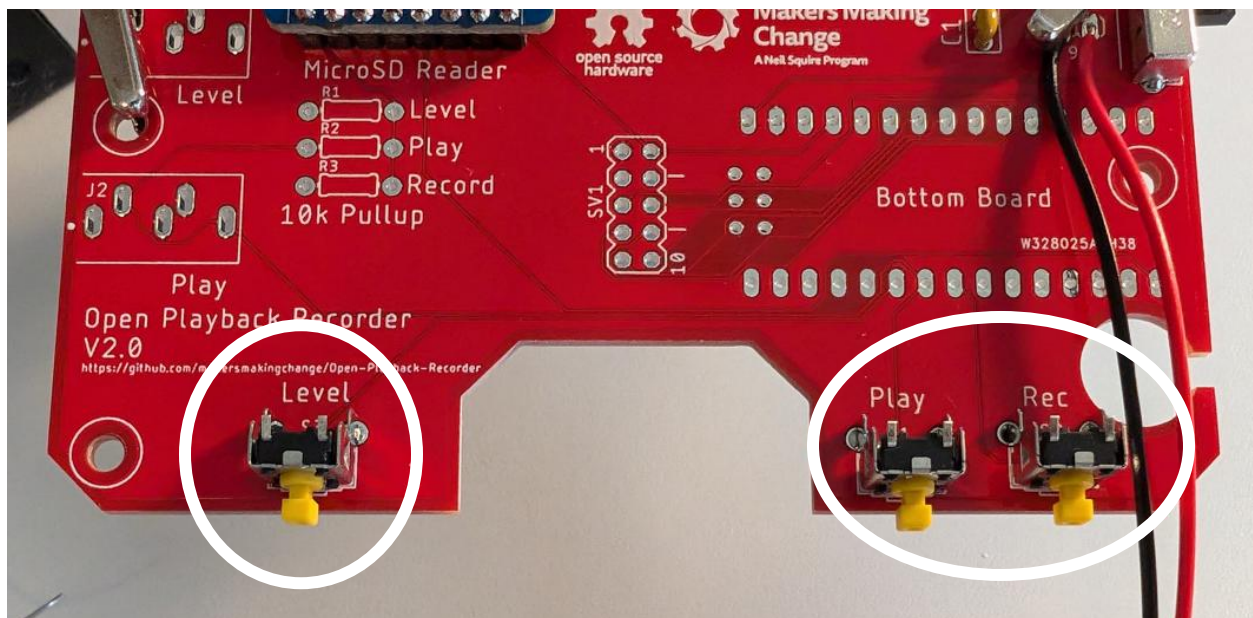

Open Playback Recorder MAKER GUIDE


Step 6: Solder the 3.5mm jacks

Solder both of the 3.5mm jacks (07) to the PCB on the Level and Play footprints

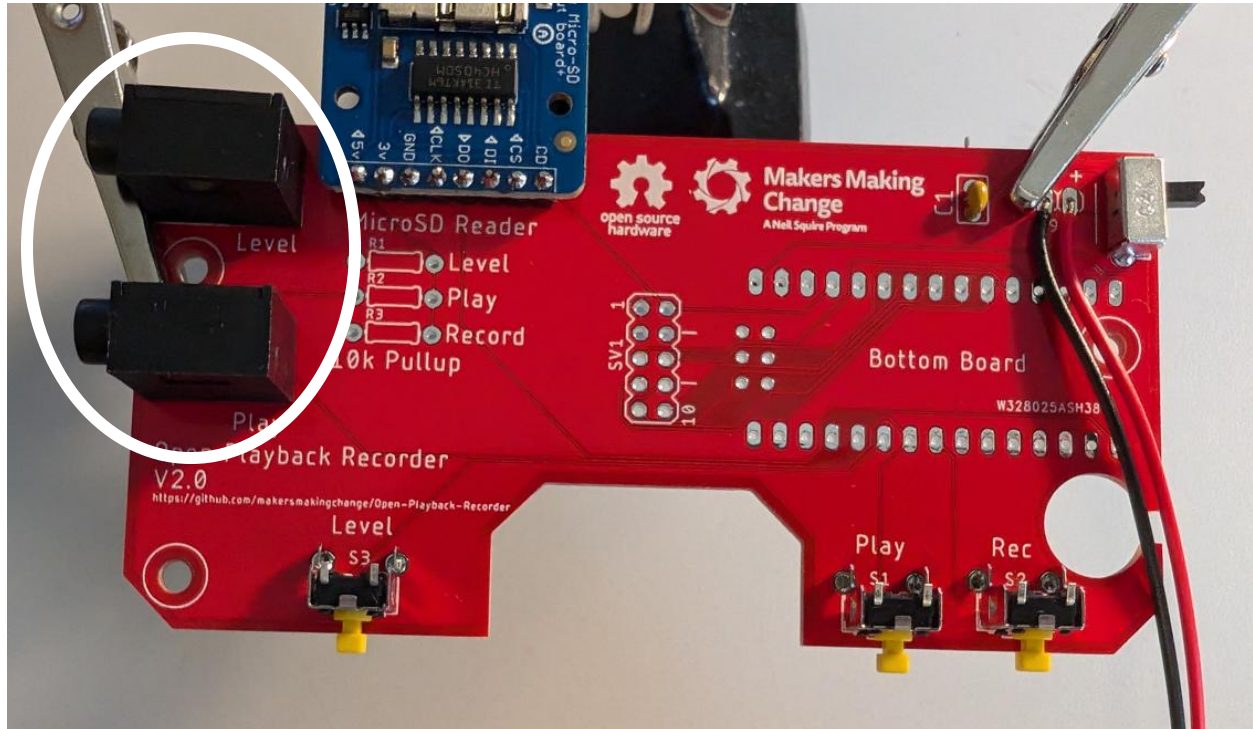

Step 7: Using your fingers ect....

Take both of the 15 pin headers (08) and press them on to the pins of the microcontroller(09) .

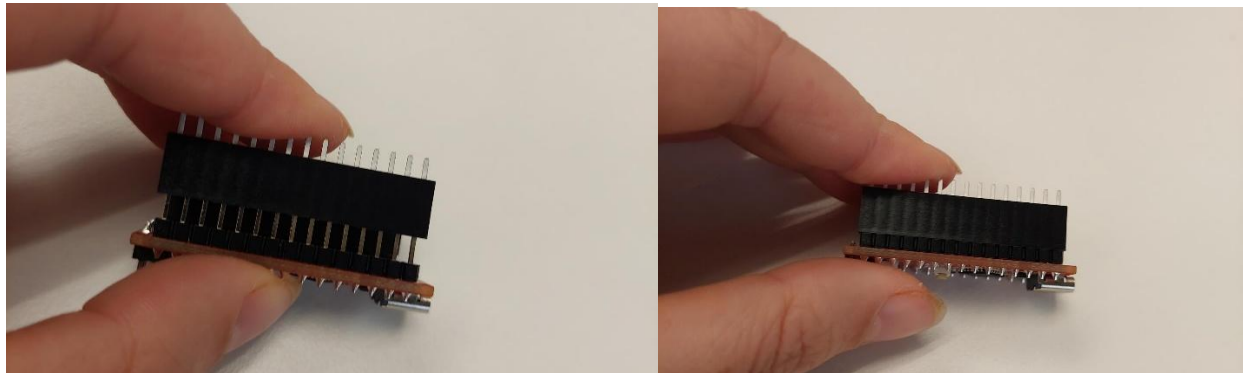


Open Playback Recorder

MAKER GUIDE

Step 8: Solder them in place and remove the microcontroller.



Take the microcontroller with the pins attached and place it into the matching slots on the PCB. Make sure that the USB C port on the microcontroller is facing the edge of the PCB. Solder the header pins to the PCB.

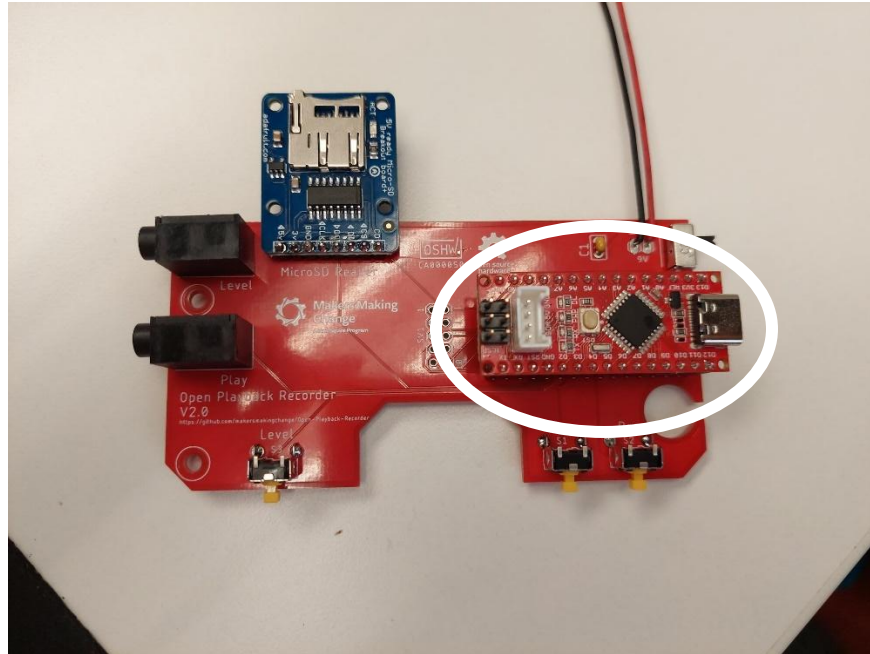

Open Playback Recorder MAKER GUIDE

Step 8: Solder in the ribbon cable header

Solder the ribbon cable header (10) to the SV1 footprint on the PCB. Align the gap on the header with the two lines on the footprint facing the microcontroller.

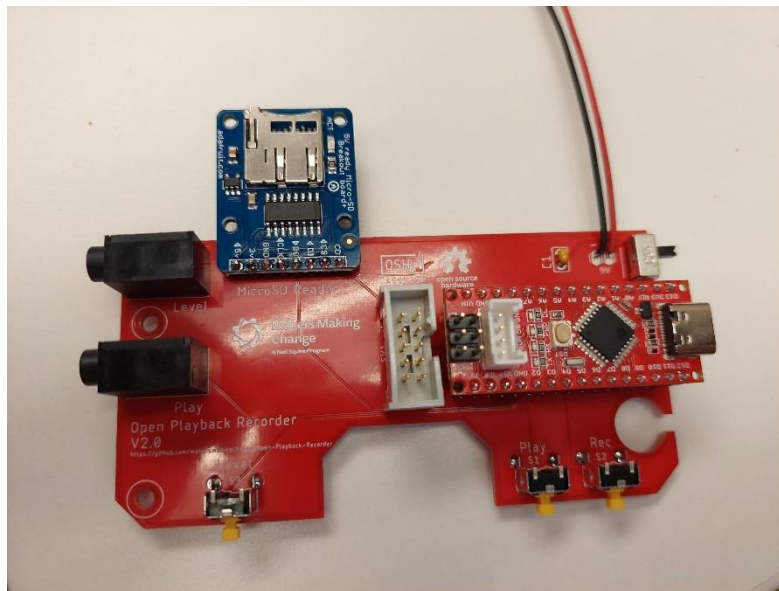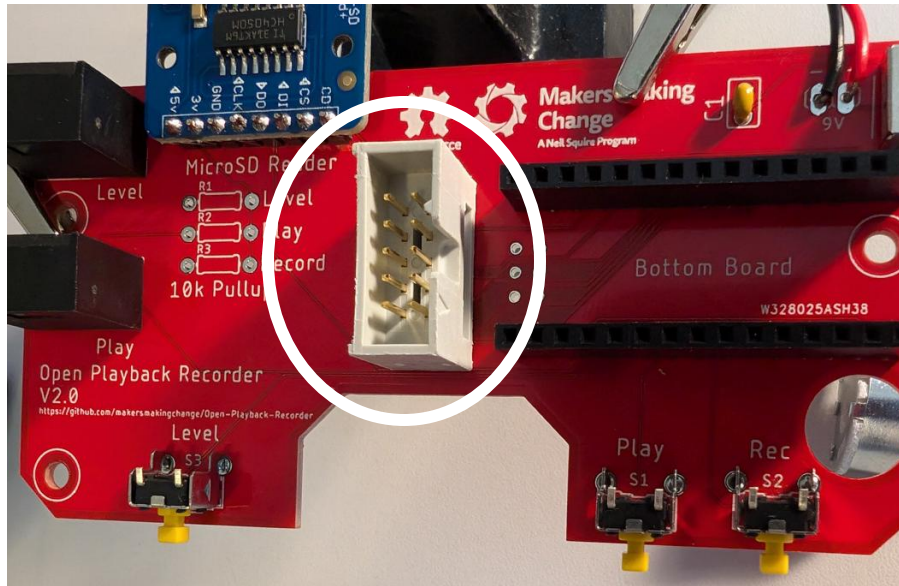

Open Playback Recorder

MAKER GUIDE

Step 9: Add the T-Nut to the bottom enclosure

Take the T-Nut (34) and the base enclosure (16), press the T-nut into the round raised section in the middle of the base. Using a ¼-20 bolt, tighten the T-Nut in place. Remove the bolt.




Open Playback Recorder

MAKER GUIDE

Step 10: Add buttons to the enclosure.


Take the Play button print (14), the Rec button (15), and the Level button (13) and insert them into the base enclosure (16). Align the slot on the bottom of each button with the peg on the button track, and insert the button from the inside of the enclosure and slide it out.

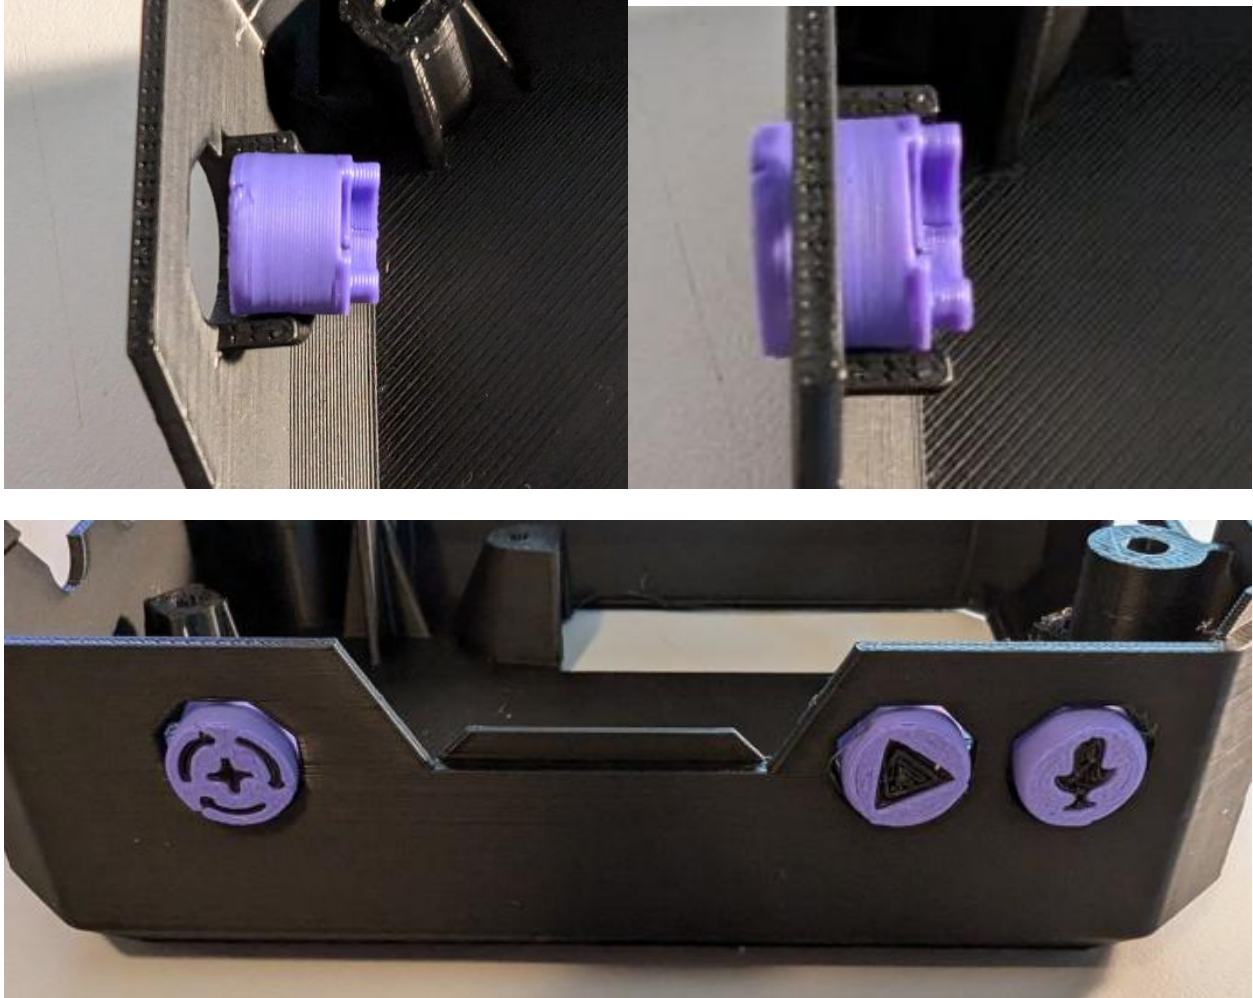

Open Playback Recorder MAKER GUIDE

Step 11: Screw PCB into the bottom enclosure

Place the PCB into the enclosure so that the cutout on the board lines up with the screw boss in the enclosure and the buttons in the enclosure capture the buttons in the enclosure. Use three of the screws (11) to secure the PCB to the enclosure.


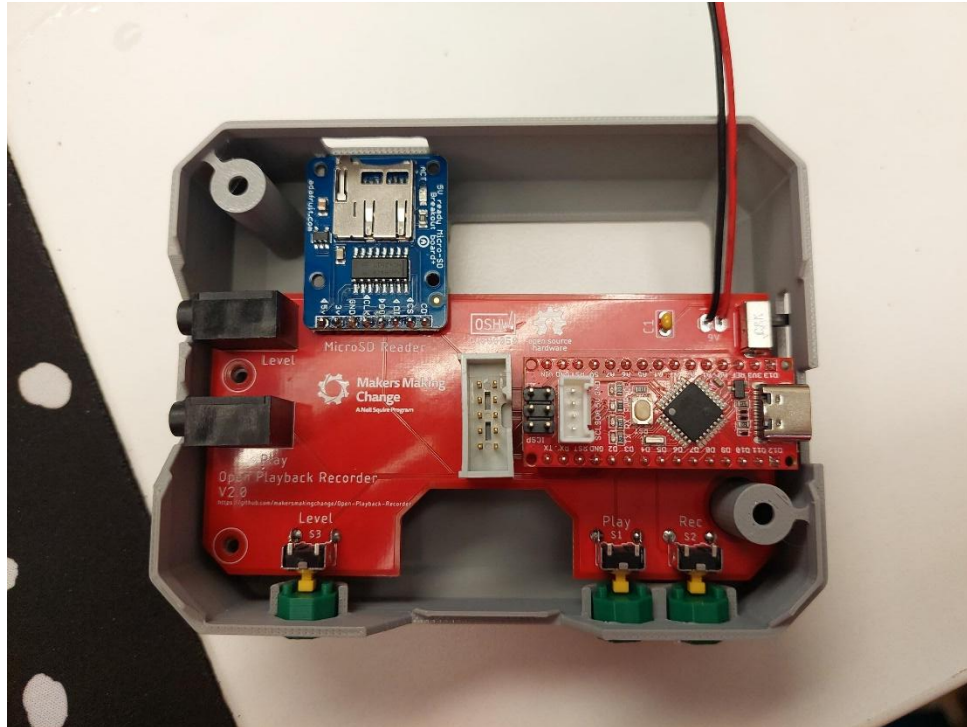


Open Playback Recorder

MAKER GUIDE

Step 12: Connect the battery

Take the battery (12) and slide it into the battery cover (17) with the smaller terminal towards the bottom, as shown in the below photo. Pass the battery clip from the board out the battery cutout in the enclosure, and clip it to the battery. Insert the battery assembly into the enclosure and use a screw (11) to secure it in place. Slide the power switch on the enclosure to OFF.

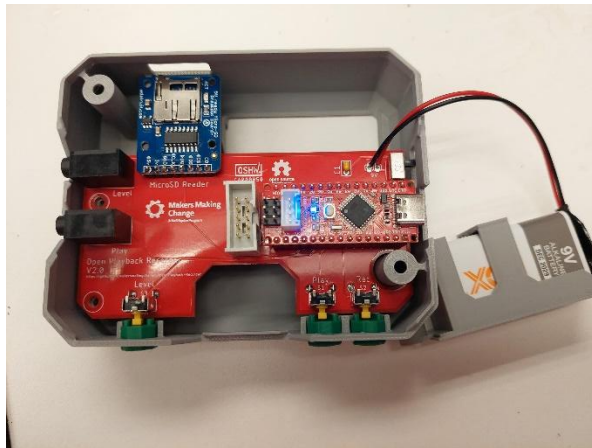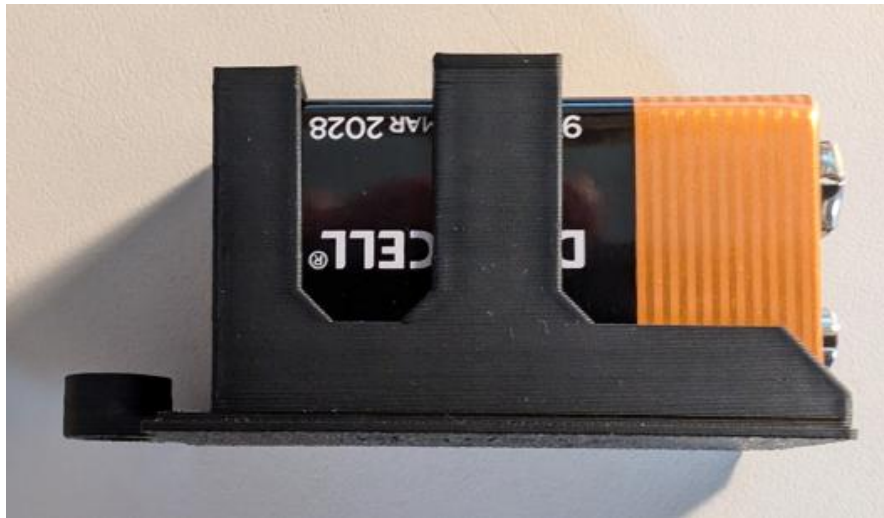

Bottom Enclosure Done

Open Playback Recorder

MAKER GUIDE

Top Enclosure


Step 1: Solder in the resistors

Take the resistors (19) and solder them into the R1, R2, R3, R4, and R5 footprints onto the top PCB (33). Trim the leads flush on the other side.



Step 2: Solder in the Level LEDs

Take the three blue LEDs (21) and the 3 LED spacer (20). With the flats of the LEDs facing the flat side of the spacer (circled), insert them into the spacer so that they are resting on the ledge of the spacer. When looking at the spacer from the front with the ledge in the back (Photo 1 on the left), the short leg of the LEDs should be on the right. Pass the legs of the LEDs through the footprints for LED1 LED2 and LED3 on the PCB so that the flats of the LEDs line up with the flats on the footprints. Solder the LEDs in place, then use the spacer to bend them 90 degrees so they face the side of the PCB. Trim the leads flush with the PCB.

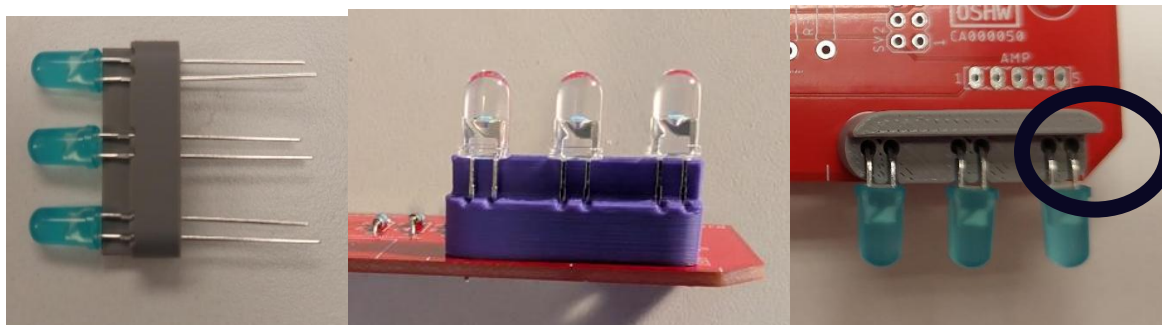


Open Playback Recorder

MAKER GUIDE


Step 3: Solder in the Play and Rec LEDs

Take the red Rec LED (23), the green Play LED (24) and the 2 LED spacer (22). With the flats of the LEDs facing the flat side of the spacer (circled), insert them into the spacer so that they are resting on the ledge of the spacer. With the R+G label facing the front, the green LED should be inserted over the G, and the red LED should be inserted over the R. The short leg of the LEDs should be facing the right. Pass the legs of the LEDs through the footprints for LED4 and LED5 on the PCB so that the flats of the LEDs line up with the flats on the footprints. Solder the LEDs in place, then use the spacer to bend them 90 degrees so they face the side of the PCB. Trim the headers on the bottom of the PCB.

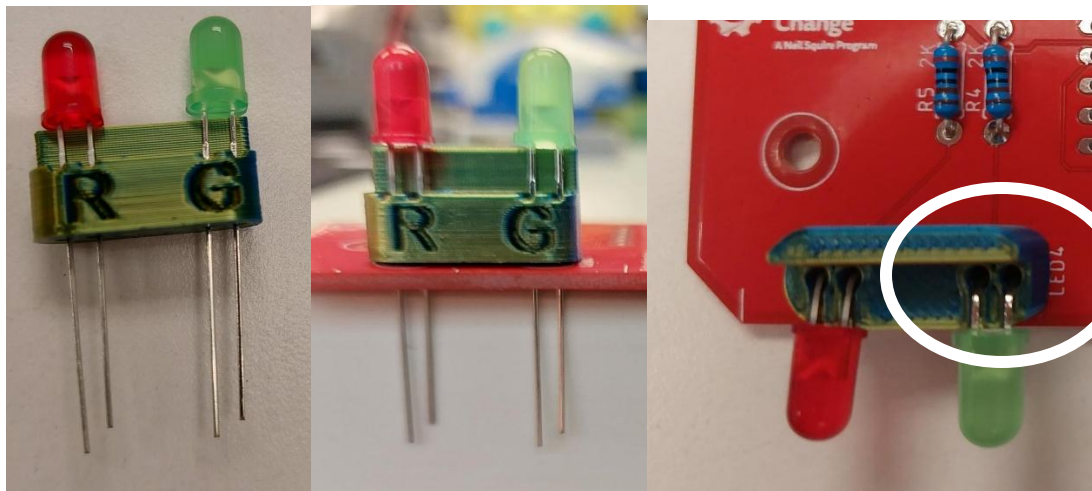

Step 4: Solder the amplifier terminal and male headers


Take the amplifier (25) and solder the male headers onto it with the short side of the headers in the board, and the long pins facing away from the board, on the side with no electronic components. You may need to trim one pin off the headers that come with the board to make them fit. Take the screw terminal blocks that came with it, and solder them to the bottom of the board with no electronic components, with the connectors facing away from the pins, as shown in the photo.

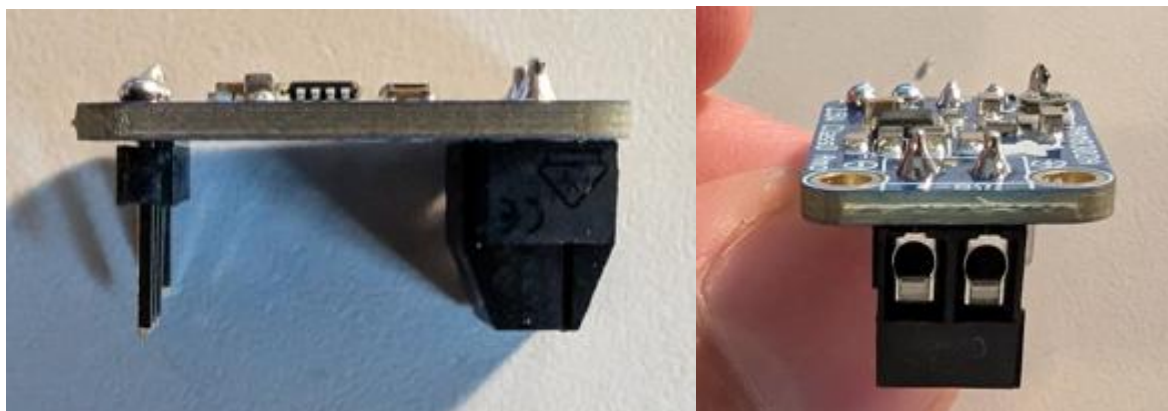

Open Playback Recorder MAKER GUIDE


Step 5: Solder the amplifier female headers

Take the 5 pin female header (26), and solder it to the AMP footprint on the PCB.

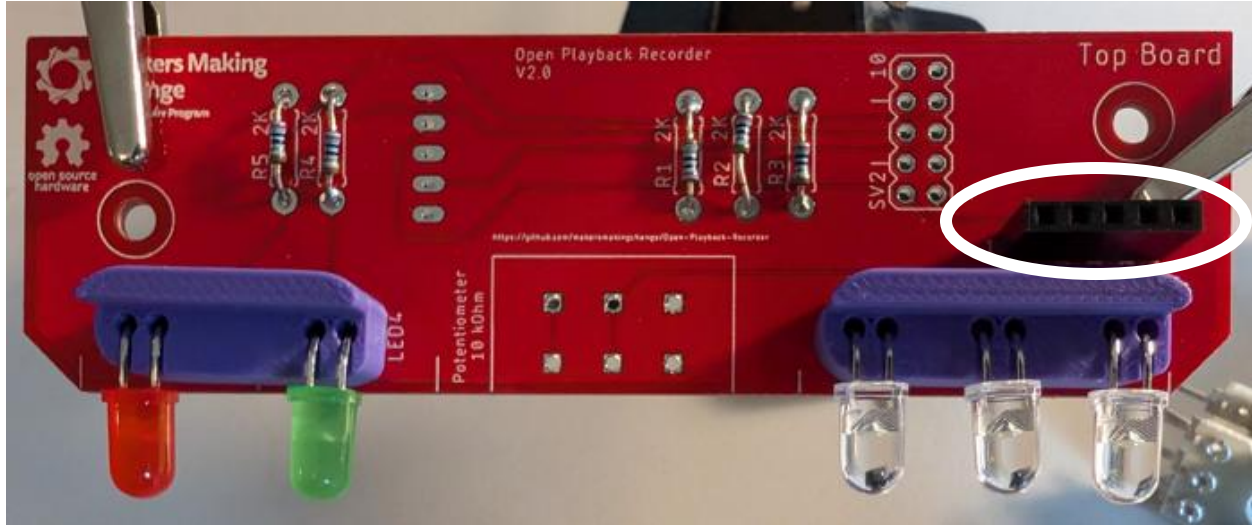

Step 6: Solder the ribbon cable header onto the PCB

Take the ribbon cable header (10) and solder it to the SV2 footprint, aligning it so that the cutout on the header lines up with the two lines beside the text that says SV2.

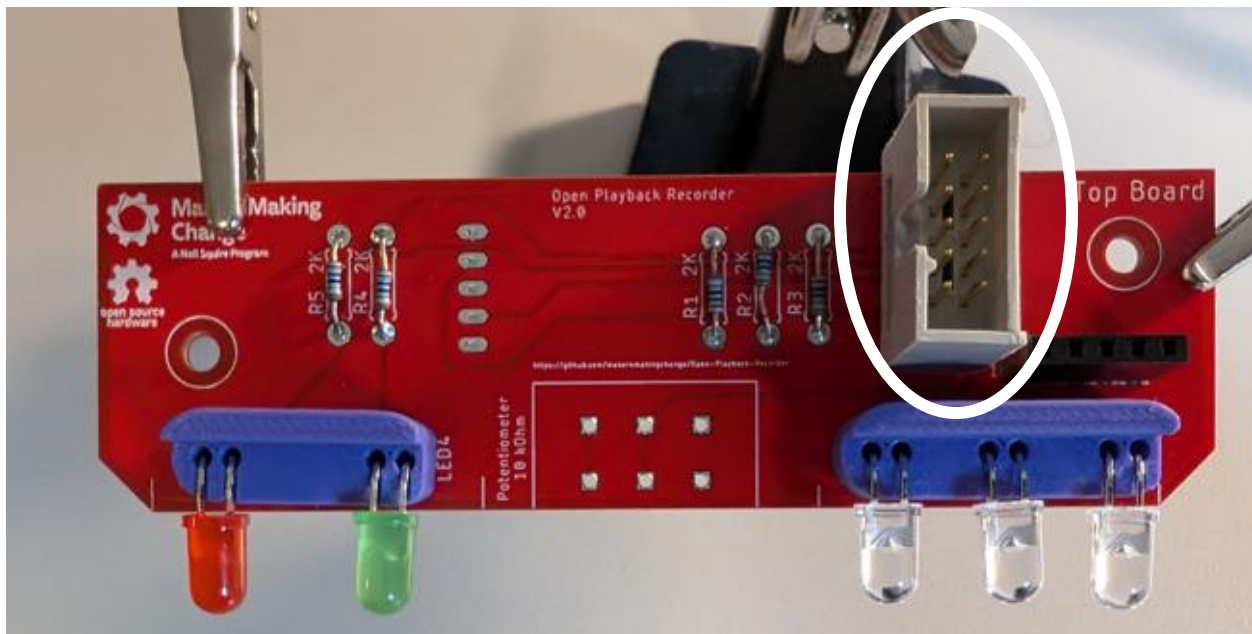

Open Playback Recorder

MAKER GUIDE


Step 7: Solder the microphone to the PCB

Take the microphone (27) and solder it to the bottom of the PCB, aligning it so that the round microphone component on the board is roughly in the middle of the PCB. The short end of the headers should be going through the microphone and the long end through the PCB



Step 8: Solder the potentiometer into the PCB

Take the potentiometer (28) and solder it to the footprint labeled 10k Ohm so that the arm of the potentiometer is sticking out away from the board.

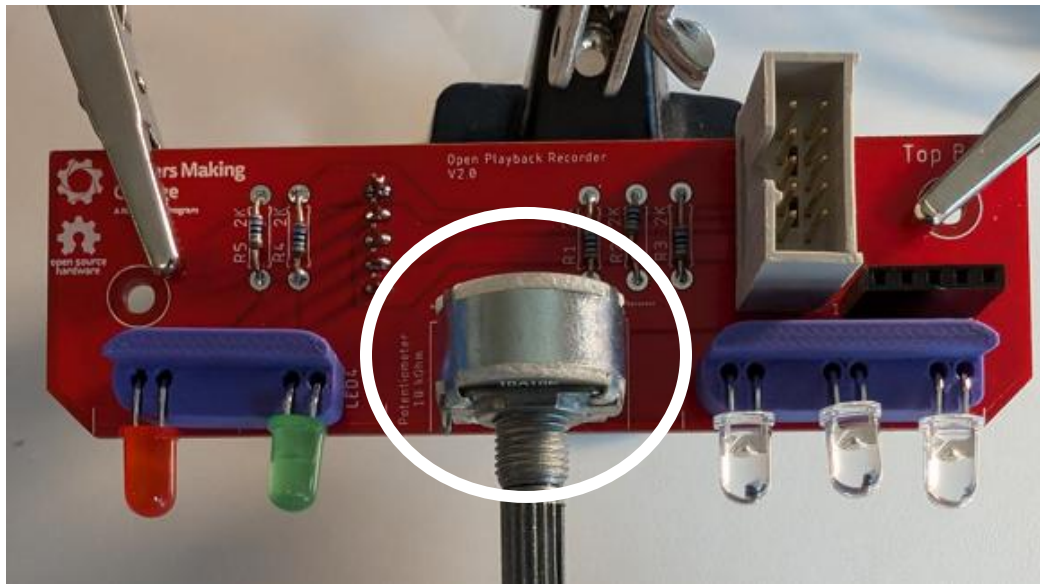


Open Playback Recorder

MAKER GUIDE

Step 9: Slide the PCB into the top enclosure

Place the assembled PCB into the top enclosure (29) and slide it forwards so that the arm of the potentiometer passes through the hole labeled volume, and the LEDs all slide into their respective holes in the enclosure. Use two screws (11) to secure the PCB in place.

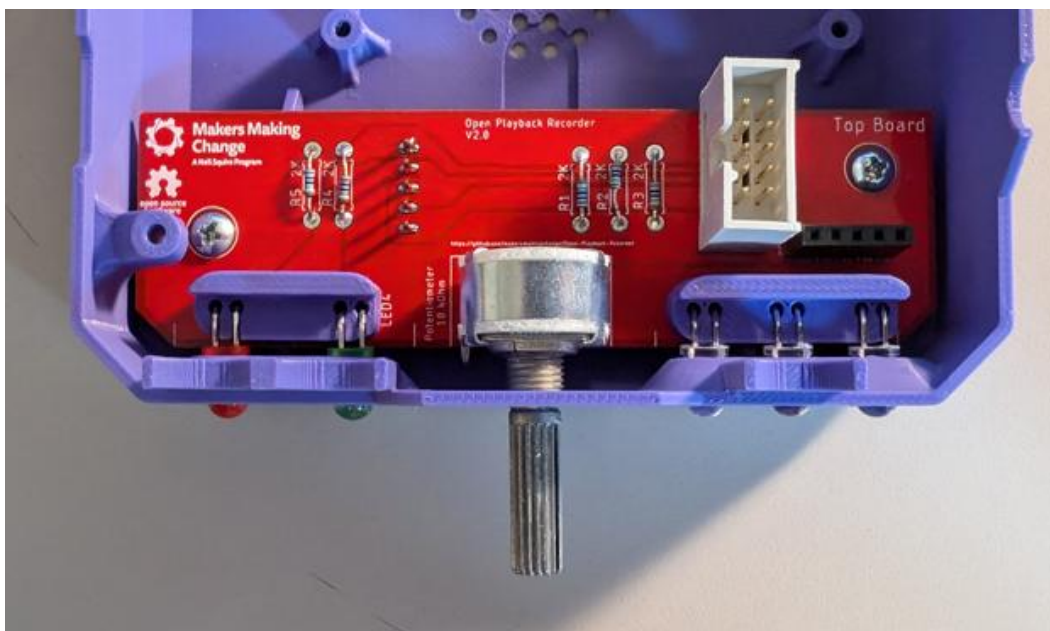

Open Playback Recorder

MAKER GUIDE

Step 10: Attach the volume knob


Take the volume knob (30) and slide it onto the arm of the potentiometer.



Open Playback Recorder MAKER GUIDE

Step 11: Prep the Speaker Wires

Take the speaker (31) and cut the lead to roughly 4 to 5 inches long. Strip 0.5cm off the ends of the wires, twist the wires together and use a bit of solder to tin them and make them solid.

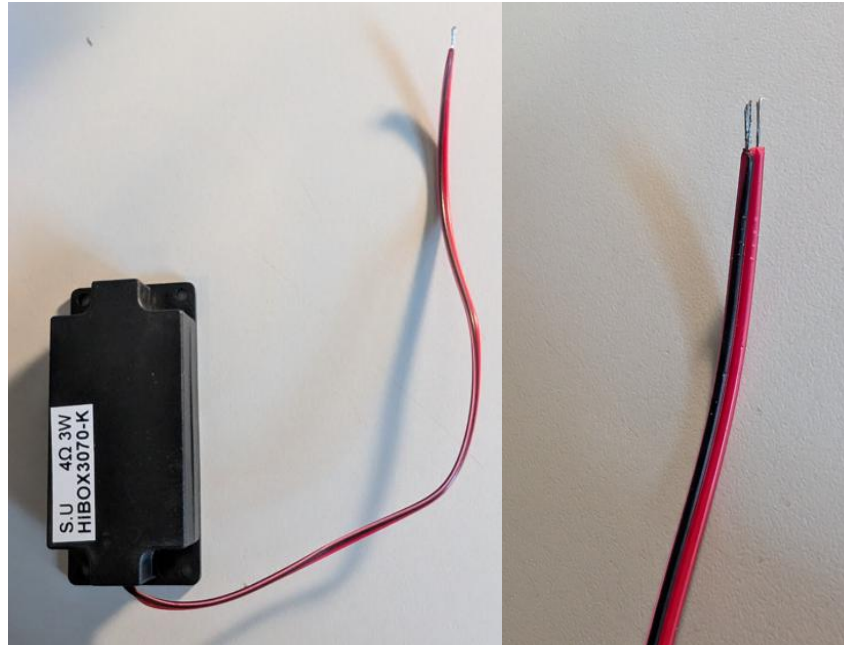

Step 12: Screw the Speaker to the Enclosure

Screw the speaker onto the 4 posts in the enclosure, with the centre of the speaker over the grill in the enclosure.




Open Playback Recorder

MAKER GUIDE


Step 12: Connect the speaker

Take the stripped ends of the speaker wire, and screw them into the terminal blocks on the amp using the small flathead screwdriver. Plug in the amplifier to the 5 pin header on the PCB with the terminal block facing away from the LEDs.

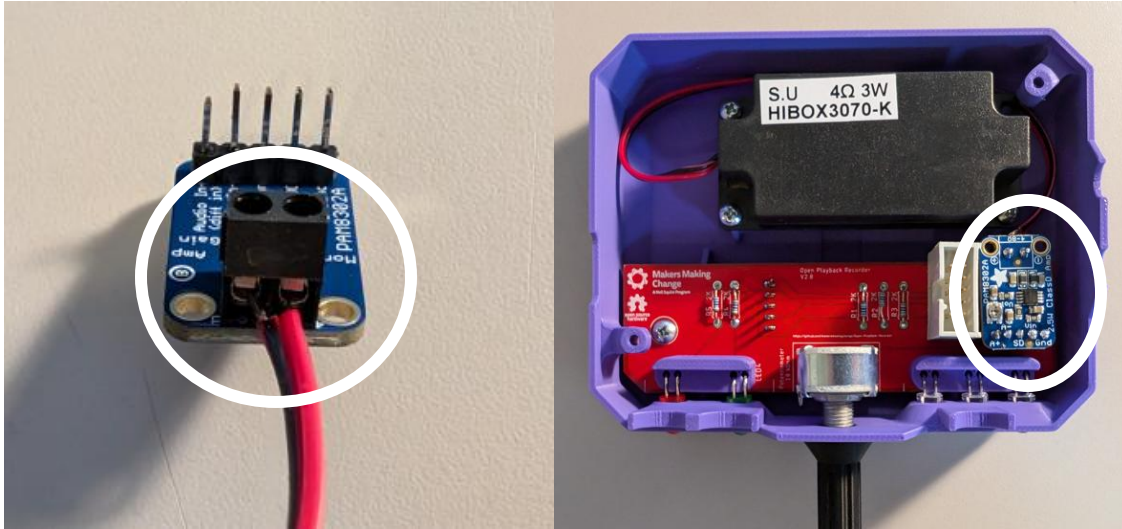


Step 13: Connect the ribbon cable

Plug the ribbon cable (32) into the headers on both the top and bottom PCBs. The tab on the ribbon cable is on different sides on each end of the header, on the bottom PCB, the cable should be facing away from the microcontroller after being plugged into the header.

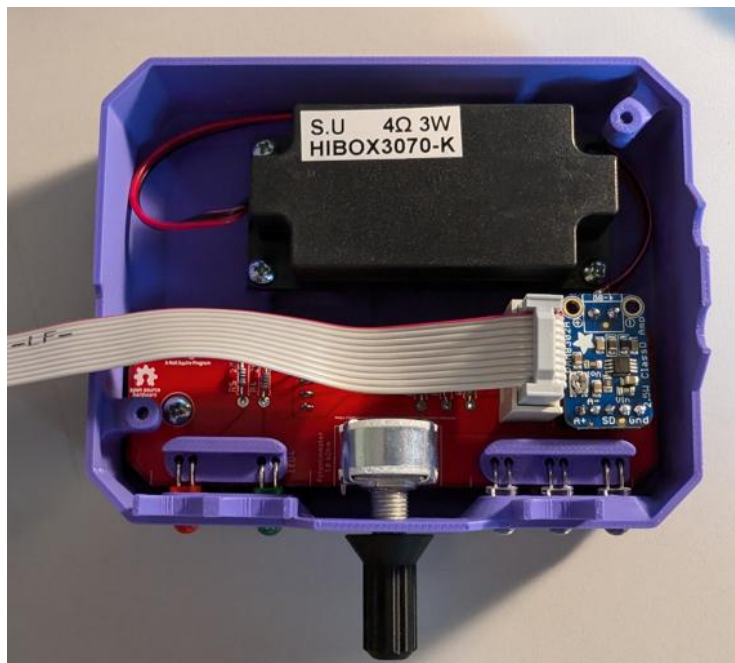

Open Playback Recorder MAKER GUIDE

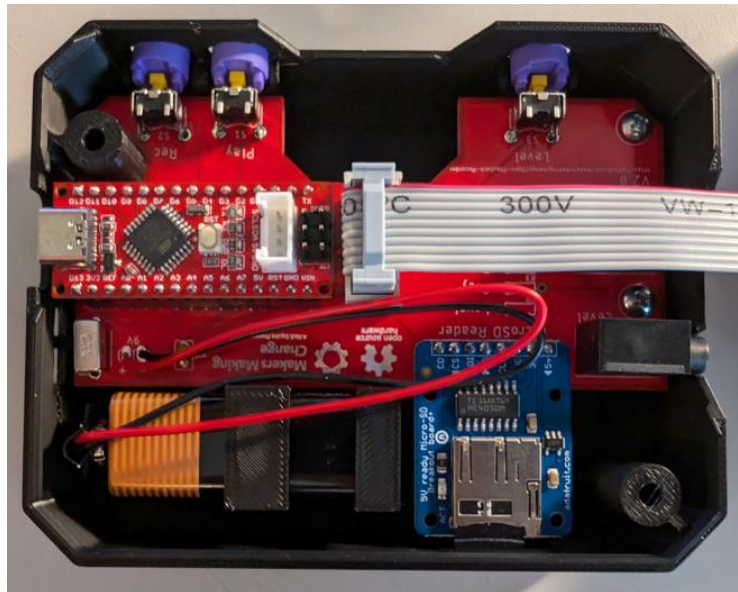

Step 14: Close the enclosure

Close the two halves of the enclosure and secure it with 2 screws (11).



Top Enclosure Done

Open Playback Recorder

MAKER GUIDE

Programming

Step 1: Setup Arduino IDE on Computer

1. Download Arduino IDE for your operating system at <https://www.arduino.cc/en/software>
2. Install the Arduino IDE.


Step 2: Download the Firmware files

Download the firmware files from the GitHub Repository. Extract the folder to a known location and open the file in the Arduino IDE.

https://github.com/makersmakingchange/Open-Playback-Recorder/blob/main/Build_Files/Firmware_Files/Open_Playback_Recorder_Firmware.zip

Step 3: Open the Library Manager


Click on the Tools menu, and select Manage Libraries. Alternatively, the menu can be opened with Ctrl+Shift+I

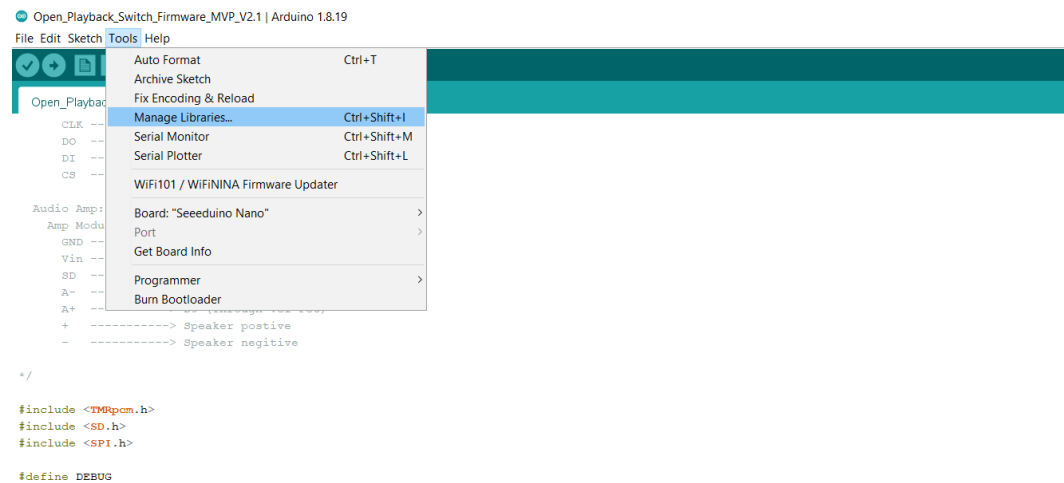

Open Playback Recorder MAKER GUIDE

Step 4: Search the TMRpcm library

Using the search bar on the top right of the menu, search TMRpcm. Install the library by TMRh20

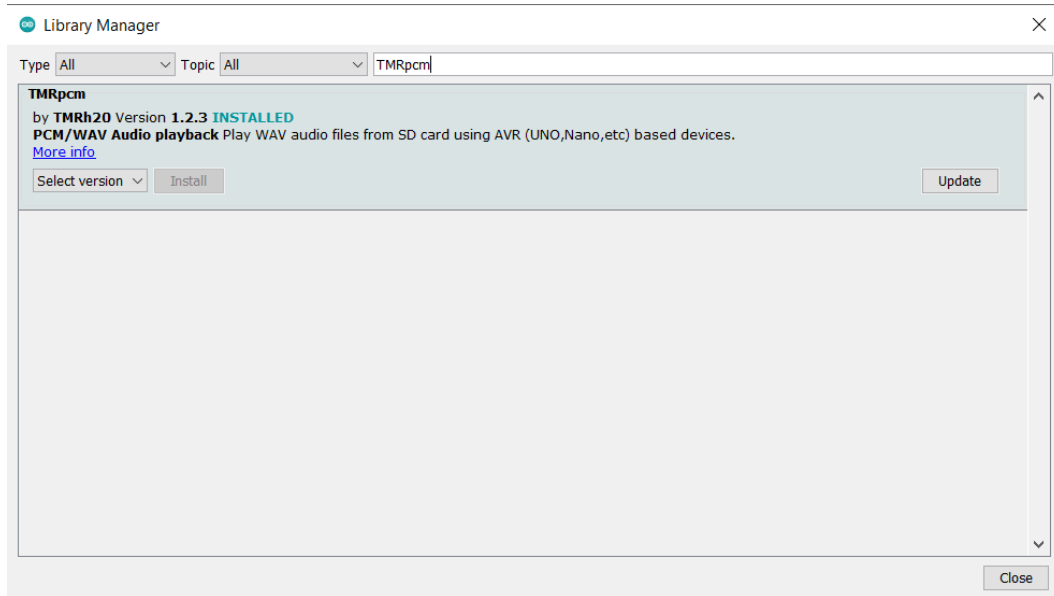

Step 5: Enable Recording

Find the folder where the TMRpcm library was installed. This is usually in C:\Users\[NAME]\sketchbook\libraries\TMRpcm. Open the file pcmConfig.h in notepad or a similar text editor.

Uncomment the line “#define buffSize 128” by removing the “//” before #define buffSize128

```

/***** GENERAL USER DEFINES *****/
See https://github.com/TMRh20/TMRpcm/wiki for info on usage

Override the default size of the buffers (MAX 254). There are 2 buffers, so memory usage will be double this number
Defaults to 64bytes for Uno etc. 254 for Mega etc. note: In multi mode there are 4 buffers*/
#define buffSize 128 //must be an even number

```

Uncomment the line “#define ENABLE_RECORDING” by removing the “//” before #define ENABLE_RECORDING

```

/* Initial implementation for recording of WAV files to SD card via a microphone or input connected to an analog pin
SdFat library is recommended
Requires a class 4 card minimum, buffSize may need to be increased to 254 if audio is skipping etc.
Depending on the card, can take a few seconds for recording to start

#define ENABLE_RECORDING

```

Save the file and close it.

Open Playback Recorder

MAKER GUIDE

Step 6: Open the Preferences

Click on the File menu, and select Preferences. Alternatively, the menu can be opened with Ctrl+Comma.




Open Playback Recorder MAKER GUIDE

Step 7: Add the Board URL

Copy the following link into the Additional Board Managers URL and hit 'OK'

https://raw.githubusercontent.com/Seeed-Studio/Seeed_Platform/master/package_legacy_seeeduino_boards_index.json

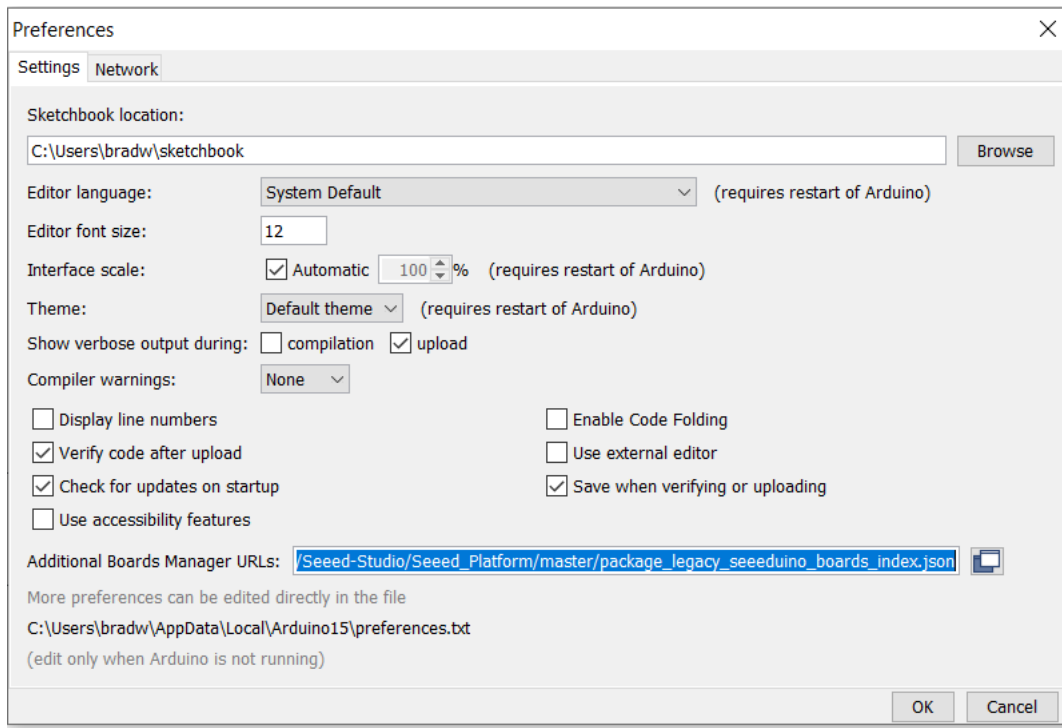


Open Playback Recorder


MAKER GUIDE

Step 8: Add the Seeeduino Nano Board

Open the Board Manager from Tools > Board > Board Manager

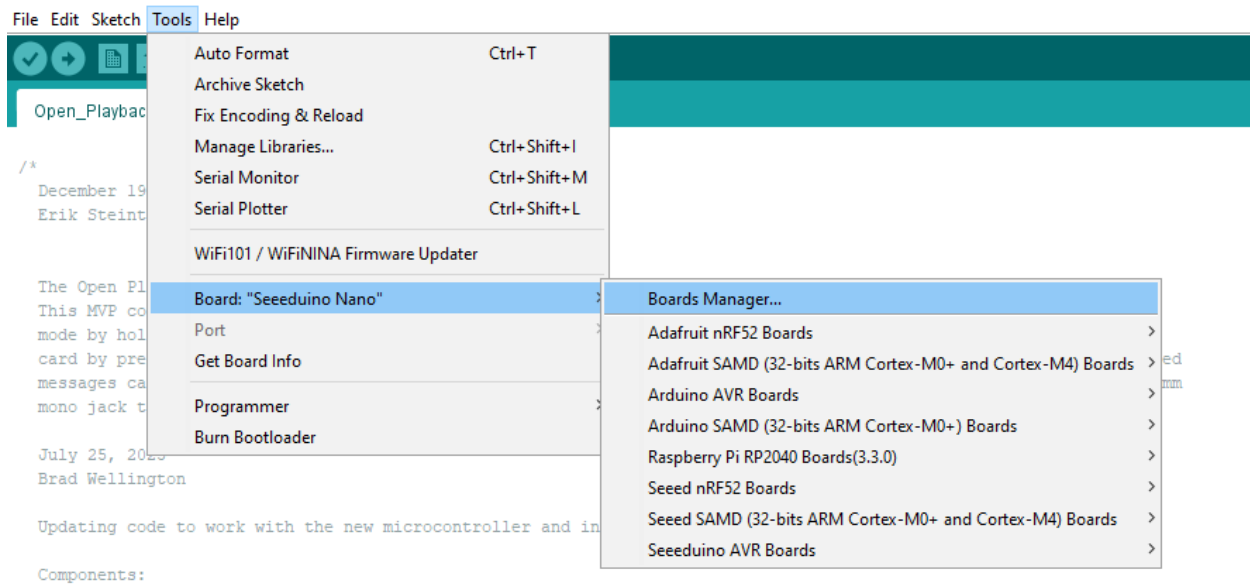

Type Seeeduino AVR into the search bar, and install the board package.

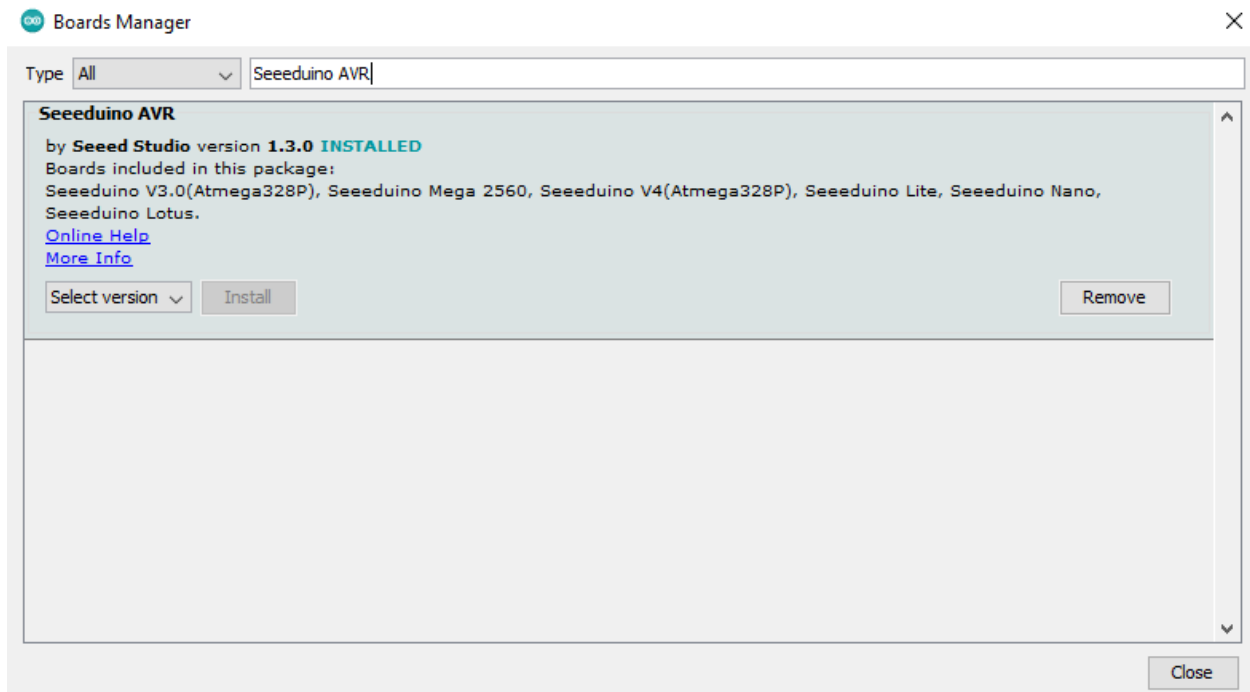

Open Playback Recorder


MAKER GUIDE

Step 9: Connect the Open Playback Recorder to the Computer

Plug the microcontroller into the computer using a USB cable

Step 10: Program the Microcontroller

In the Tools menu, set the board to Seeeduino Nano, and set the port to whatever port shows up when the microcontroller is plugged into the computer. After this, press the arrow button below the Edit menu to compile the code and upload it to the microcontroller.

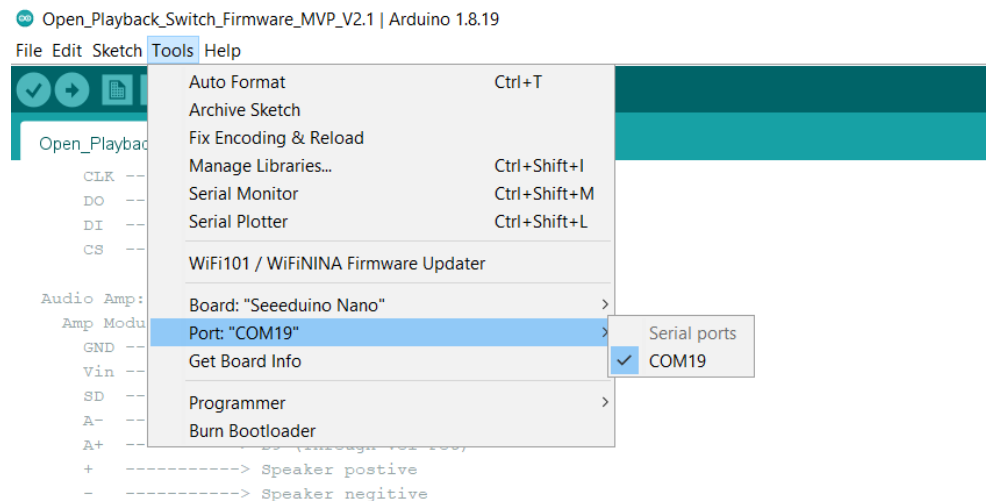

Testing

Before delivering the device to the user, there are a series of tests to perform to verify that the device is working correctly.

Power on the device with battery power

Flip the slide switch on the side of the device from off to on. The Level 1 LED should illuminate. If the Rec and Play LEDs are flashing instead, this means that there has been an issue initializing the MicroSD card.

Record multiple messages on one level

Hold down the record button until the record LED turns on. This indicates that the device has entered record mode. At this point, holding either the play button or an assistive switch connected to the play jack will cause the device to record a message. The device will continue recording as long as the button is held down, and will finish the message when it is released. Record multiple messages, then press the record button again to exit record mode.

Pressing the play button will play the first message, and pressing it again will play the next message. Cycle through playing all the messages that were recorded until the first message is reached again.

Open Playback Recorder

MAKER GUIDE



Adjust the volume

Using the volume control knob on the front of the device, change the volume while a message is playing to ensure that the volume changes as the knob is spun.

Record a message on each level

Press either the level button, or an assistive switch connected to the level jack. The first level LED should turn off, and the second level LED should turn on. Record another message on this level, and repeat the process on the third level. Go to each level again and play back each message.

Delete the multiple messages and record one message

Return to the first level where multiple messages were recorded and enter record mode again. Record a single message and play it back. All the previous messages should be deleted, and just the single message should play, no matter how many times the play button is pressed.

Power the device with USB power

Flip the slide switch on the side of the device from on to off. Using a USB cable, plug the device into a computer or power block to provide power to the device. The device should power on the same as when it is on battery power, and should function the same as well.

Troubleshooting

Both Play and Record LEDs flashing when device is powered on

This indicates that the SD card has not been properly initialized. Try reformatting the SD card, if this does not work, check the soldering on the SD card reader and the microcontroller. Finally, if neither of the previous steps work, try a new SD card.