




mangOH™ green

# User Guide

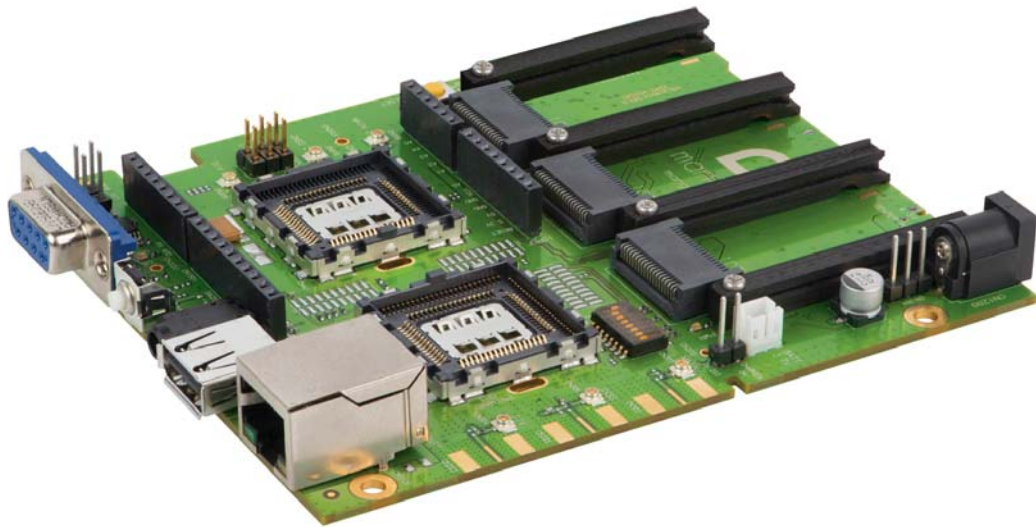

4117164

Rev 3

Contents subject to change

## Important Notice

Due to the nature of wireless communications, transmission and reception of data can never be guaranteed. Data may be delayed, corrupted (i.e., have errors) or be totally lost. Although significant delays or losses of data are rare when wireless devices such as the Sierra Wireless modem are used in a normal manner with a well-constructed network, the Sierra Wireless modem should not be used in situations where failure to transmit or receive data could result in damage of any kind to the user or any other party, including but not limited to personal injury, death, or loss of property. Sierra Wireless accepts no responsibility for damages of any kind resulting from delays or errors in data transmitted or received using the Sierra Wireless modem, or for failure of the Sierra Wireless modem to transmit or receive such data.

## Safety and Hazards

Do not operate the Sierra Wireless modem in areas where blasting is in progress, where explosive atmospheres may be present, near medical equipment, near life support equipment, or any equipment which may be susceptible to any form of radio interference. In such areas, the Sierra Wireless modem **MUST BE POWERED OFF**. The Sierra Wireless modem can transmit signals that could interfere with this equipment.

Do not operate the Sierra Wireless modem in any aircraft, whether the aircraft is on the ground or in flight. In aircraft, the Sierra Wireless modem **MUST BE POWERED OFF**. When operating, the Sierra Wireless modem can transmit signals that could interfere with various onboard systems.

---

*Note: Some airlines may permit the use of cellular phones while the aircraft is on the ground and the door is open. Sierra Wireless modems may be used at this time.*

---

The driver or operator of any vehicle should not operate the Sierra Wireless modem while in control of a vehicle. Doing so will detract from the driver or operator's control and operation of that vehicle. In some states and provinces, operating such communications devices while in control of a vehicle is an offence.

## Limitation of Liability

The information in this manual is subject to change without notice and does not represent a commitment on the part of Sierra Wireless. SIERRA WIRELESS AND ITS AFFILIATES SPECIFICALLY DISCLAIM LIABILITY FOR ANY AND ALL DIRECT, INDIRECT, SPECIAL, GENERAL, INCIDENTAL, CONSEQUENTIAL, PUNITIVE OR EXEMPLARY DAMAGES INCLUDING, BUT NOT LIMITED TO, LOSS OF PROFITS OR REVENUE OR ANTICIPATED PROFITS OR REVENUE ARISING OUT OF THE USE OR INABILITY TO USE ANY SIERRA WIRELESS PRODUCT, EVEN IF SIERRA WIRELESS AND/OR ITS AFFILIATES HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR THEY ARE FORESEEABLE OR FOR CLAIMS BY ANY THIRD PARTY.

Notwithstanding the foregoing, in no event shall Sierra Wireless and/or its affiliates aggregate liability arising under or in connection with the Sierra Wireless product, regardless of the number of events, occurrences, or claims giving rise to liability, be in excess of the price paid by the purchaser for the Sierra Wireless product.

## Patents

This product may contain technology developed by or for Sierra Wireless Inc.

This product includes technology licensed from QUALCOMM®.

This product is manufactured or sold by Sierra Wireless Inc. or its affiliates under one or more patents licensed from InterDigital Group and MMP Portfolio Licensing.

## Document details

Title: mangOH Green User Guide

Author: Sierra Wireless

Source: <http://mangoh.io/>

## Copyright

© 2016 Sierra Wireless. Licensed under the Creative Commons Attribution 4.0 license, <http://creativecommons.org/licenses/by/4.0/>



## Disclaimer

Indicate any modifications made to the original document.

## Trademarks

mangOH™ and the mangOH logo are trademarks of Sierra Wireless.

Other trademarks are the property of their respective owners.

## Revision History

Revision number	Release date	Changes
1	January 2016	Document Creation
2	January 2016	Comprehensive update replacing revision 1
3	February 2016	Minor edits

# Contents

- Introduction . . . . . 6**
  - mangOH green Components and Accessories . . . . . 6
- Setup and Installation . . . . . 9**
  - Safe Handling Recommendations . . . . . 9
  - Initial Setup . . . . . 10
- Hardware Setup and Operation . . . . . 11**
  - Insert/Remove Embedded Modules . . . . . 11
  - Power Supply . . . . . 14
    - Select Primary Power Supply . . . . . 15
    - Connect Battery Backup . . . . . 16
    - RTC Capacitor . . . . . 17
  - Insert SIM Card(s) . . . . . 17
  - Insert microSD Card . . . . . 20
  - Connect Antenna(s) . . . . . 21
  - Insert/Remove IoT Connectors . . . . . 23
  - Arduino-compatible Circuit . . . . . 24
    - Connect Arduino-compatible Shield . . . . . 25
  - Audio Connection . . . . . 26
  - Ethernet Connection . . . . . 27
  - USB Host Connection . . . . . 28
  - RS-232 Console Output Connection . . . . . 28
  - LED Indicators . . . . . 29
  - Reset Switches . . . . . 30
  - mangOH green Configuration . . . . . 31
    - Default Configuration . . . . . 31
    - Switch and Jumper Configuration Options . . . . . 32

---

<b>Software Setup</b> .....	<b>36</b>
Install / Update Windows Driver.....	36
Install a Terminal Emulator .....	37
Install the Arduino IDE .....	37
Install the Legato Developer Studio.....	37
Download Firmware Updates.....	37
Write Your First Program .....	37

# 1: Introduction

1

This user guide explains how to set up and begin using the mangOH™ green with CF3 (Common Flexible Form Factor) modules.

Once you have the mangOH green set up, visit [mangoh.io](http://mangoh.io) for developer documentation, code samples, and other materials.

## mangOH green Components and Accessories

[Table 1-1](#) details the required and optional components needed to begin using the mangOH green in your development environment. Some of these components are available in mangOH development kits (kit contents are supplier-dependent).

**Table 1-1: mangOH green Components**









Item	Details
mangOH green	<p>Pre-configured development board.</p> <p>The mangOH green supports CF3 modules.</p> 
CF3 module(s) (See <a href="#">Table 1-2 on page 8</a> for a list of compatible Sierra Wireless modules.)	<ul style="list-style-type: none"><li>Primary (required)—Used in the primary CF3 socket, the module includes a cellular modem and an application processor running Legato, an open source embedded platform built on Linux for hosting IoT applications (see <a href="http://legato.io">legato.io</a> for details).</li><li>Secondary (optional)—[Future Use] Used in the secondary CF3 socket, the module includes a cellular modem that must be associated to an application processor in the primary CF3 socket. (In this socket, only the inner ring of pins of the CF3 footprint are used.)</li></ul> 
CF3 module cover and cover removal tool	<p>Industrial-quality snap-in module cover, plus cover removal tool to disconnect the cover from the mangOH green (Note: The cover and tool shown are for WP-series modules. A similar cover and tool (not displayed) are used for HL-series modules.)</p> 
Micro-USB cable	<p>Connects computer to the mangOH green for communication and to provide power for non-transmitting tests.</p> 

Table 1-1: mangOH green Components

Item	Details
Power supply	<ul style="list-style-type: none"> <li>Output voltage: 4.5V to 17V</li> <li>10 W or higher</li> <li>The mangOH green will operate with USB power, but DC power may be required to make and establish a full-speed mobile network connection.</li> </ul> 
Antenna	Main RF antenna 
GNSS Antenna	GNSS (GPS/GLONASS) active antenna 
Eurocard case and mangOH green faceplates	<p>The mangOH green fits in a Eurocard standard size casing (100x120mm). 3D-printable files for faceplates are available at <a href="http://mangoh.io">mangoh.io</a>.</p> 
Mini-USB cable	Connects computer directly to the Arduino-compatible circuit integrated into the mangOH green 
Mini-SIM card	<p>Mini-SIM card with an active account, or a test card for use with a call box.</p>  <p><i>Note: Throughout this document, 'SIM' refers to 'SIM', 'USIM', and 'UIM'.</i></p>
Micro-SIM card	<p>Micro-SIM card with an active account, or a test card for use with a call box.</p> <p>The micro-SIM is used only if the CF3 module supports dual-SIMs (selecting either the mini-SIM or the micro-SIM for use at a given time). It uses the dual SIM/SD connector.</p> 
Audio cable (3.5 mm)	Audio cable or headset 
Ethernet cable	<p>Ethernet cable (Cat5 or better) for use with the mangOH green's 100 Mbps Ethernet connector</p> 

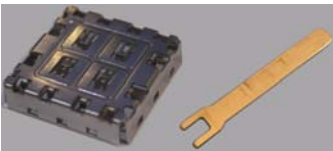**Table 1-1: mangOH green Components**

Item	Details
RS-232 DB9 cable	Serial cable used for console output (male connector required on mangOH end) 
Battery	Rechargeable Li-Ion or Li-Polymer battery (3V7 nominal) for use when USB/DC power supply is unavailable 
Arduino-compatible shields	Plug-in boards for the mangOH green's integrated Arduino-compatible circuit 

**Table 1-2: mangOH-compatible CF3 Modules<sup>a</sup>**

Module series	Notes			
AirPrime WP8548 AirPrime WP75xx	The mangOH schematic (available at <a href="http://mango.io">mango.io</a> ), describes all interfaces that are supported by the mangOH green. The following table identifies signals that are currently not available on WP85xx/WP75xx-series modules.			
	Pin #	mangOH Name	Primary CF3 Name	WP85/75 Name
	92	SPI2CLK	SPI2CLK	Reserved
	93	SPI2_MOSI	SPI2_MOSI	Reserved
	94	SPI2_MISO	SPI2_MISO	Reserved
	95	SPI2_MRDY	SPI2_CS0	Reserved
	98	UART2_RTS	UART2_RTS	Reserved
	99	UART2_CTS	UART2_CTS	Reserved
	100	GPIO_Lowpower2	GPIO34	Reserved
	101	GPIO_Lowpower1	GPIO35	Reserved
	102	GPIO20/SWD_CLK	GPIO36	Reserved
	103	GPIO31/SWD_DIO	GPIO37	Reserved
	107	ADC2	ADC2	Reserved
	108	ADC3	ADC3	Reserved
	147	IOT2_GIO4	GPIO21	GPIO21

a. Refer to Product Technical Specification documents for detailed module information.



## 2: Setup and Installation

## 2

### Safe Handling Recommendations

To help prevent accidental damage to the mangOH green:

- Use safe ESD-handling practices (such as wearing proper ESD straps) to avoid possible ESD damage.
- Avoid touching the CF3 module sockets (J200, J601). These pins can be damaged if they catch on clothing or other materials.

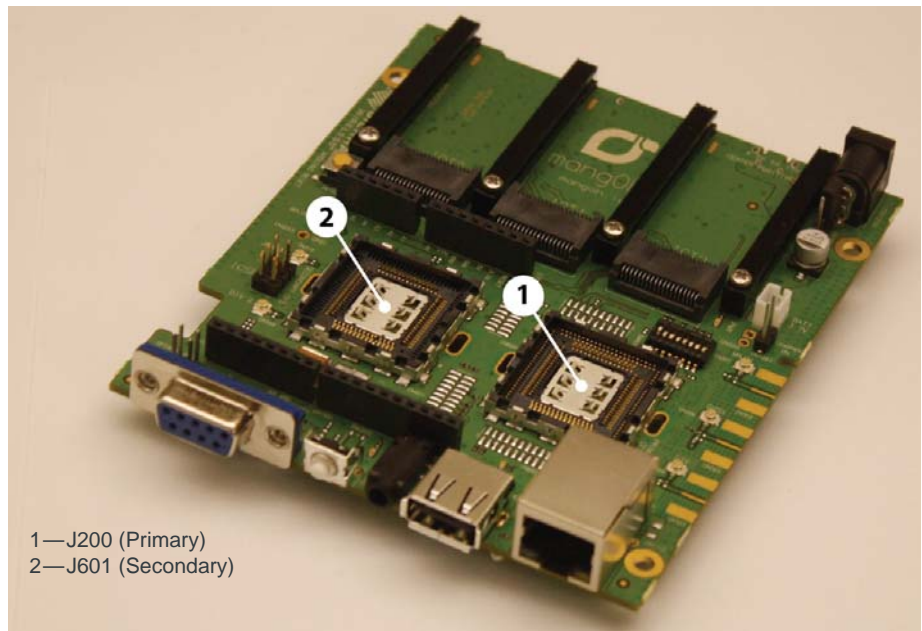


Figure 2-1: Safe Handling Recommendations—CF3 Socket Locations (Do Not Touch)

- Mount the mangOH green in a case, or attach standoffs (not included) to the mounting holes at each corner of the board to avoid damage to components on the bottom side of the board.

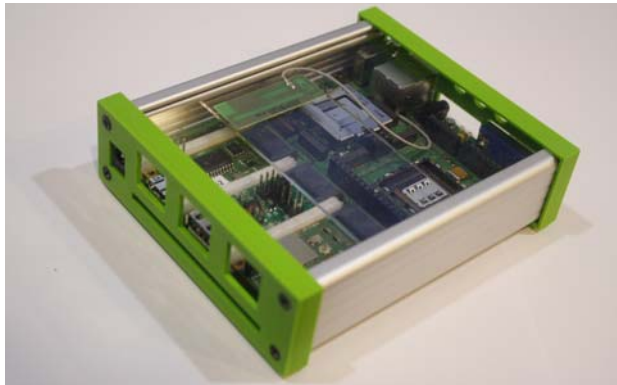


Figure 2-2: Case-mounted mangOH green

## Initial Setup

To begin using the mangOH green, set up your hardware and software:

1. Insert a suitable CF3 module in the primary socket. See [Insert/Remove Embedded Modules](#) on page 11.
2. [Select Primary Power Supply](#). See page 15.
3. If you will be establishing a mobile network connection, insert a mini-SIM. See [Insert SIM Card\(s\)](#) on page 17.
4. [Connect Antenna\(s\)](#). See page 21.
5. [Install / Update Windows Driver](#). See page 36.
6. Connect the mangOH green to your computer using the USB cable provided. If you selected USB power in [Step 2](#), the power LED lights up.
7. If you selected the DC power supply in [Step 2](#), plug a DC wall adapter into the DC barrel jack. (The wall adapter must meet the requirements in [Table 1-1](#) on page 6.) The power LED lights up when power is supplied.
8. [Install a Terminal Emulator](#). See page 37.

The mangOH green is now ready to be used.

- For information on additional hardware features, see [Hardware Setup and Operation](#) on page 11.
- For instructions on writing a program, see [Write Your First Program](#) on page 37.

# 3: Hardware Setup and Operation

## 3

This chapter describes how to install various components on the mangOH green, and how to configure and control features using connectors and switches.

## Insert/Remove Embedded Modules

The mangOH green has two CF3 module sockets

- Primary (J200)—The primary module includes a wireless modem and application processor. All pins are used.
- Secondary (J601)—The secondary module, if used, includes a wireless modem that is associated with the primary module. Only the inner ring pins (of the CF3 footprint) are used.

To insert a CF3 module:

1. Place the mangOH green face-up.

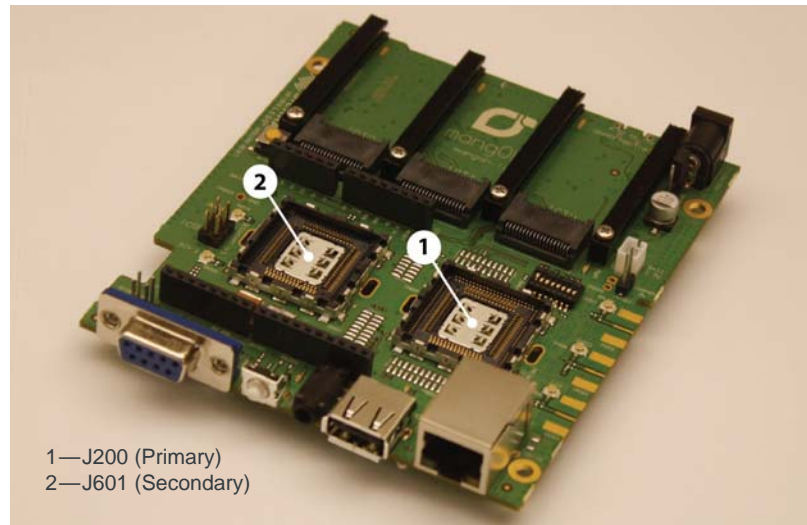
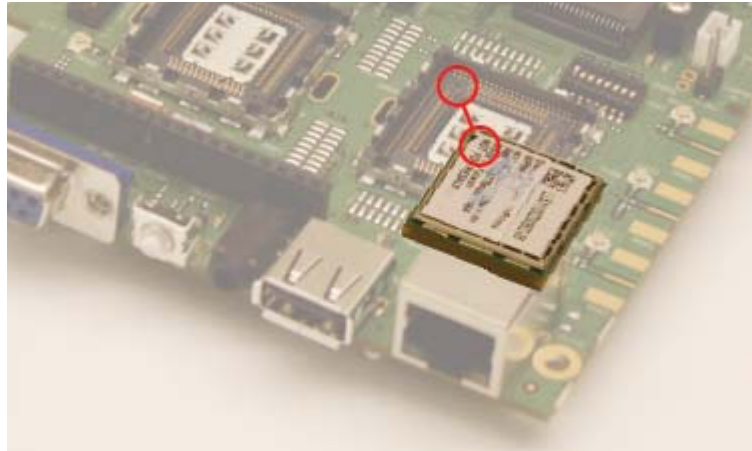


Figure 3-1: mangOH green—Top View

2. Hold the module above the socket and line up the polarity marks on the module and socket. (Primary module installation shown.)



*Figure 3-2: CF3 Module Positioning*

3. Place the module onto the socket. The module should drop into place when you have it aligned properly. Do not insert at an angle as this may damage the socket pins.



*Figure 3-3: CF3 Module Inserted*

4. Attach the module cover:
  - a. Hold the module cover above the CF3 module and line up the polarity marks on the module and cover.

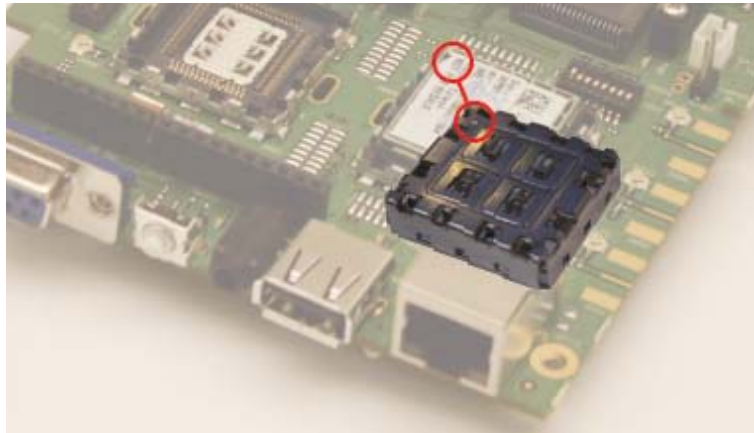


Figure 3-4: Installing Module Cover

- b. Place the cover on the module, then press down carefully until you hear the cover click into place. Make sure all sides of the cover have clicked into place.

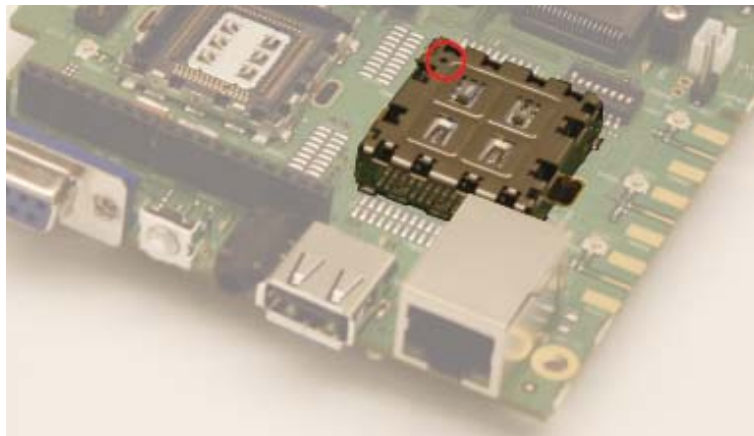


Figure 3-5: Installing Module Cover

To remove a CF3 module (primary module displayed below):

1. Remove the module cover using the module cover removal tool—Starting at one corner, insert the tool in the pair of holes and carefully pry the cover away from the module.
2. Repeat at the other locations (there are pairs of pry holes on each side).

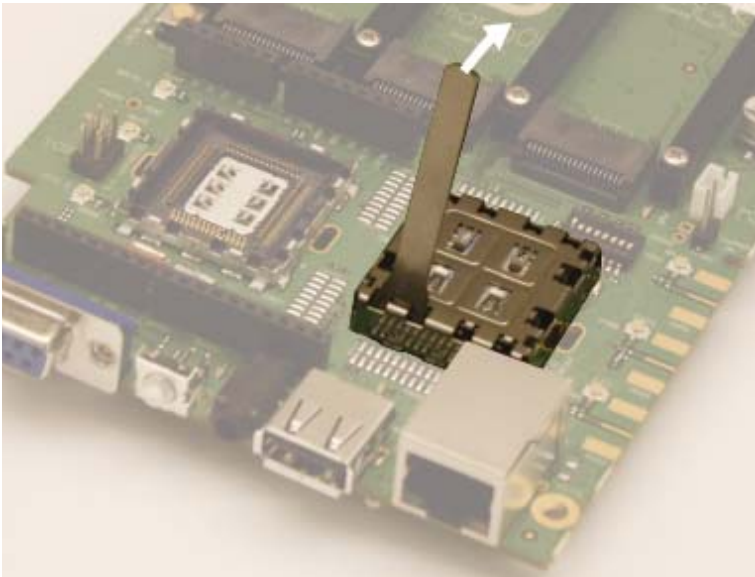


Figure 3-6: Removing the Module Cover

- 3. Lift the cover off the module.
- 4. Carefully pinch the module and pull it straight up out of the socket.

## Power Supply

The mangOH green has the following supplies:

Table 3-1: mangOH green Power Supplies

Supply		Details
Primary	DC power	Primary (Required if you want to maintain a full-speed mobile network data connection)
	USB	Primary  <i>Note: USB current (500 mA) is sufficient for non-transmitting tests, but may not be enough to satisfy full power requirements of the mangOH green.</i>
Backup	Battery	An optional Li-Ion or Li-polymer (3V7 nominal) rechargeable battery can be installed to power the board if the primary power supply fails.



## Select Primary Power Supply

To select the primary power supply:

1. Place the mangOH green face-up and locate the power supply jumper pins (CN1204).

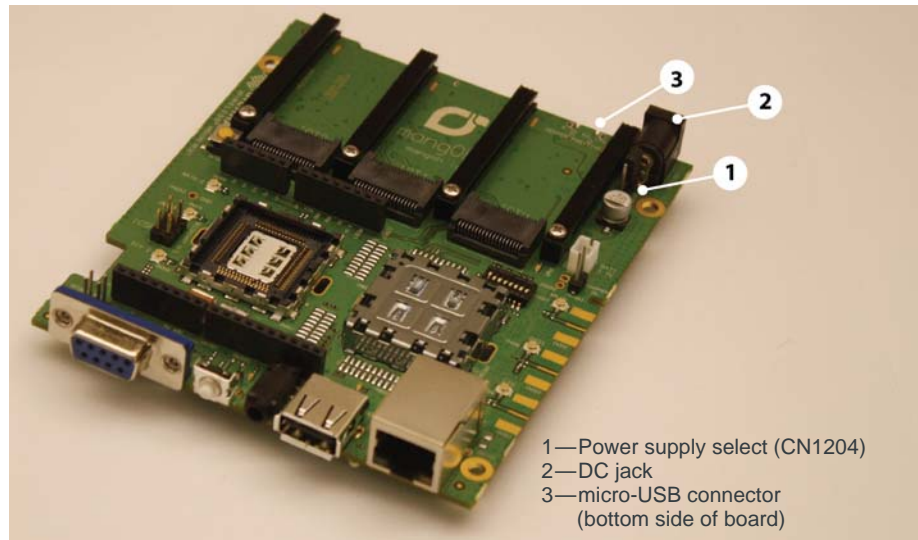


Figure 3-7: Power Supply Select (CN1204)

2. Select the power source:
  - USB power—Place a jumper across the two pins farthest from the DC power jack.
  - DC power—Place a jumper across the pins closest to the DC power jack.

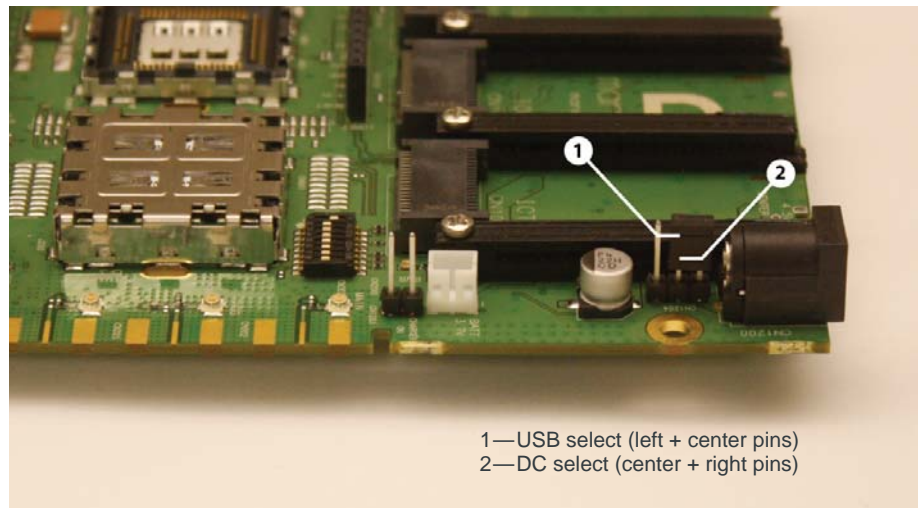


Figure 3-8: Power Source Select (DC power shown)

## Connect Battery Backup

Optionally, you can connect a rechargeable Li-Ion/Li-Polymer battery to the mangOH green to provide uninterrupted power in the event that the primary power supply (DC or USB) fails.

If a jumper is placed on CN1201, the mangOH green recharges the battery and then provides a trickle charge to maintain the battery's full charge.

To connect a rechargeable Li-Ion/Li-Polymer battery to the mangOH green:

1. Connect the battery to CN1202.

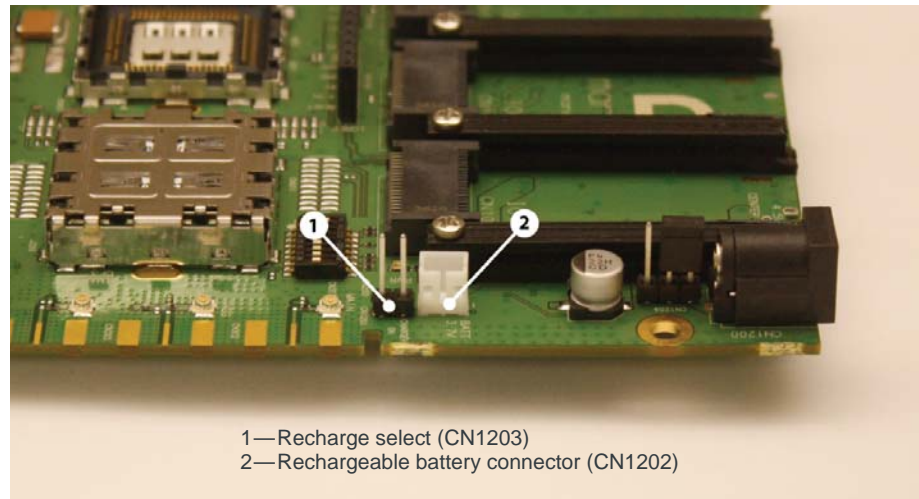


Figure 3-9: Battery Backup (CN1202/CN1203)

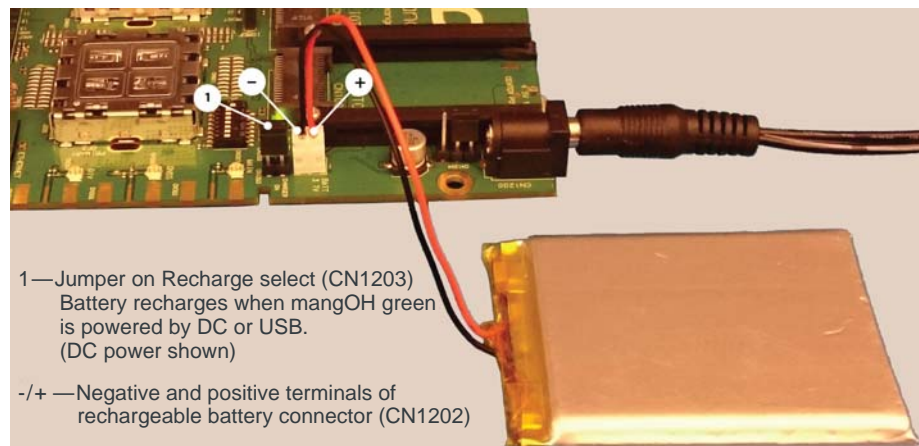


Figure 3-10: mangOH green With Rechargeable Battery Connected

2. If you want the battery to recharge while connected to the board, place a jumper across the pins on CN1203 (Recharge select).

**Caution:** If a rechargeable battery is not connected to the board, make sure to remove the jumper from CN1203.



**Caution:** The board is designed to use a rechargeable Li-Ion or Li-polymer battery. Regular (non-rechargeable) batteries are NOT recommended. However, if a regular battery is used, DO NOT place a jumper on CN1203 as this will damage the battery and possibly the board.

## RTC Capacitor

The mangOH green provides a capacitor that maintains the RTC.

To enable the ability to manually discharge the capacitor, install a switch on CN320. (For details, see the mangOH green schematics available at [mangoh.io](http://mangoh.io).) The capacitor can then be discharged by pressing this switch.

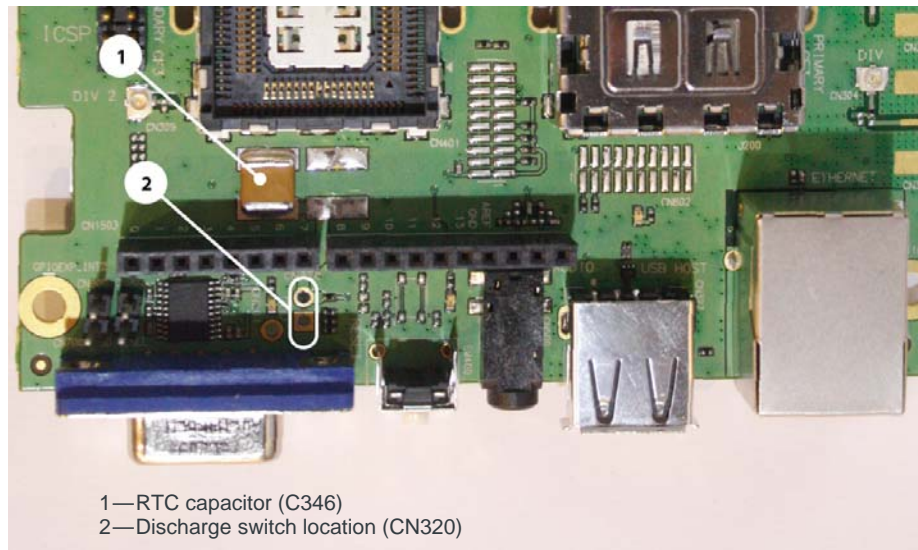


Figure 3-11: RTC Capacitor

## Insert SIM Card(s)

The mangOH green supports dual SIM functionality (if supported by the CF3 module).

Table 3-2: SIM connectors

CF3 Interface	Type	Connector	Details
UIM1	Mini-SIM	CN801	Hot-swappable By default, a SIM detect switch is activated when a mini-SIM is inserted or removed. For details, see <a href="#">Table 3-6</a> on page 31.
UIM2	Micro-SIM	CN802	Not hot-swappable

To establish a mobile network connection with a UMTS/LTE CF3 module, you must install at least one SIM card:

- Live card(s) with active accounts, *or*
- Test card(s) for use with a call box (for example, an Agilent 8960 or Rohde & Schwarz CMU200)

---

*Note: A SIM card is not required if you want to connect to a LAN using the Ethernet port.*

---

To install the SIM card(s):

1. Place the Dev Kit face-down (as shown).

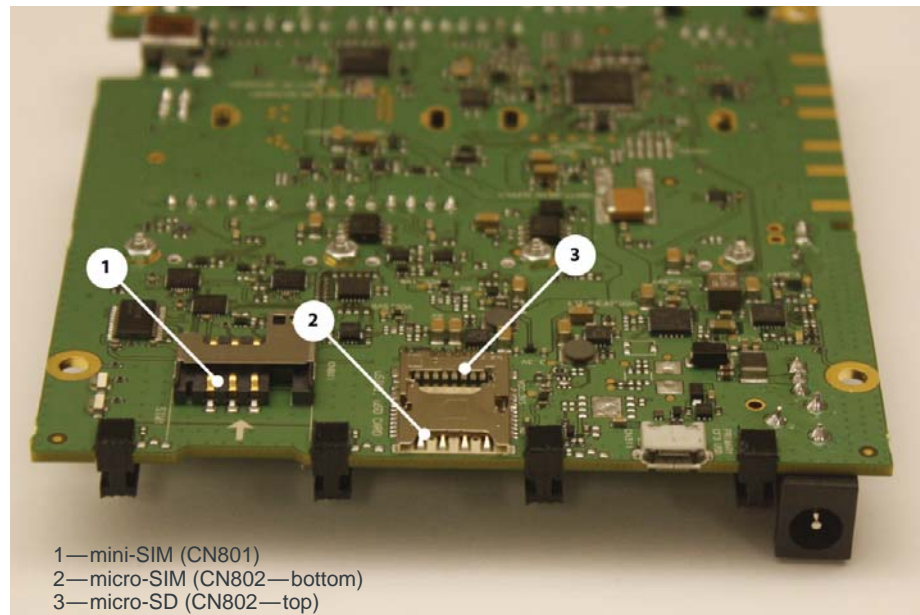


Figure 3-12: SIM Connector and micro-SD Locations

2. Insert the SIM card(s) with contacts face-down into the desired slot(s)—note the locations of the notched corners of the cards in [Figure 3-13](#). (The mini-SIM is inserted with the flat end first, and the micro-SIM is inserted with the notched end first.)

---

**Important:** *CN802 is a dual-connector—a micro-SIM can be placed in the lower slot, and a micro-SD can be placed in the upper slot.*

---

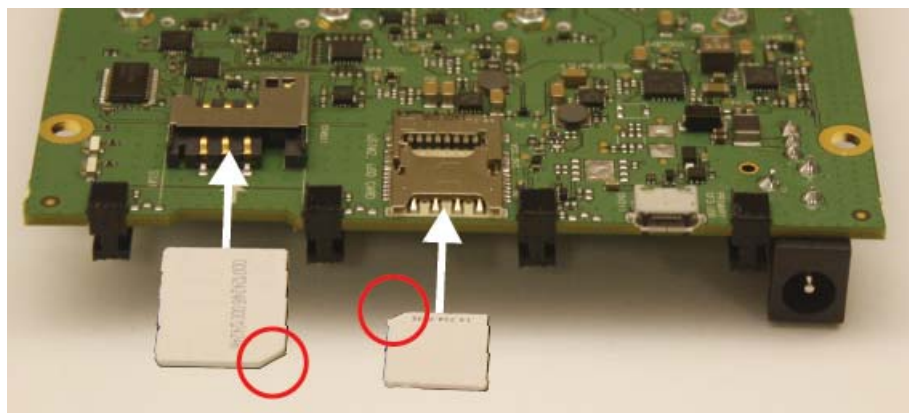


Figure 3-13: SIMs—Inserting

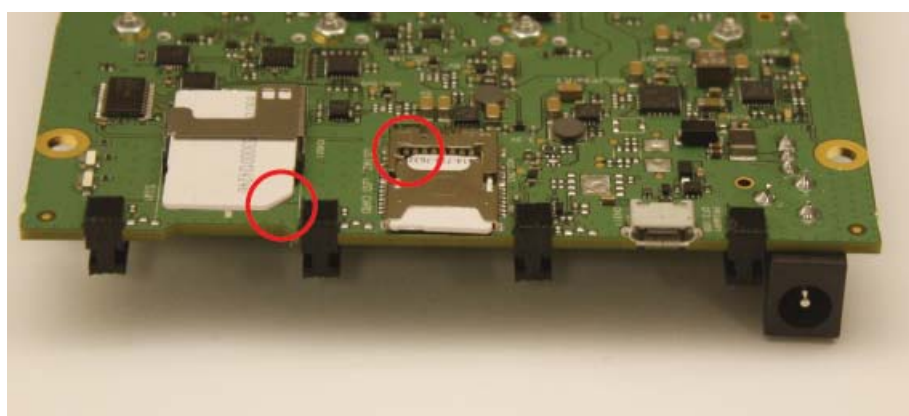


Figure 3-14: SIMs—Inserted

## Insert microSD Card

The mangOH green includes a microSD card slot in the top part of CN802.

To install a microSD card:

1. Place the Dev Kit face-down (as shown).

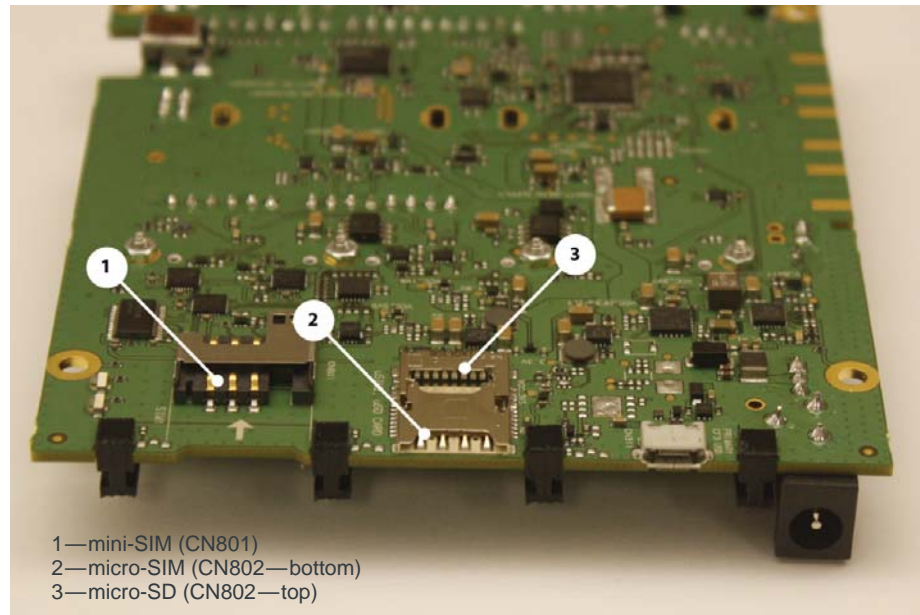


Figure 3-15: SIM Connector and microSD Locations

2. Insert the microSD card with contacts face-down into the top slot of CN802.

---

**Important:** CN802 is a dual-connector—a micro-SIM can be placed in the lower slot, and a micro-SD can be placed in the upper slot.

---

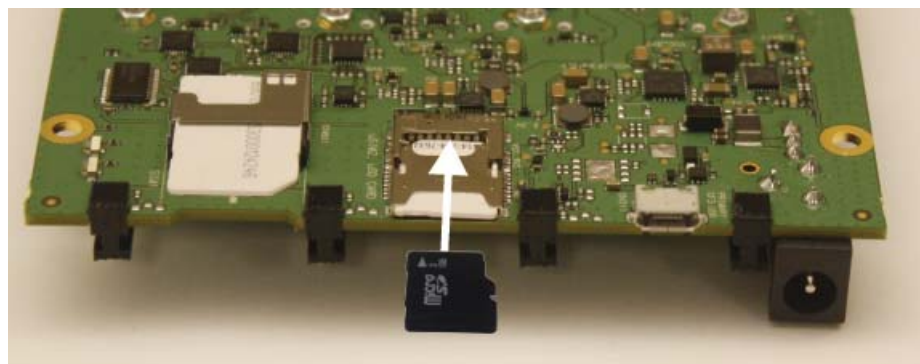


Figure 3-16: microSD—Inserting

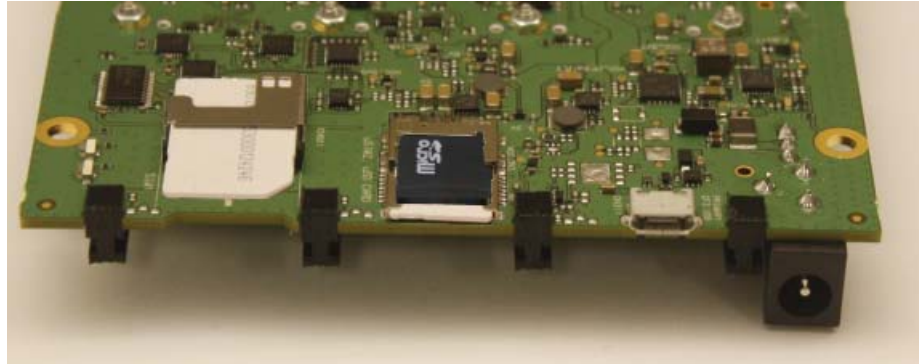


Figure 3-17: microSD—Inserted

## Connect Antenna(s)

The mangOH green includes three antenna ports for the primary CF3 module.

**Table 3-3: Antenna Ports**

Type	Connector <sup>a</sup>	Details
Main	CN307	Required to establish a mobile network data connection
Diversity	CN304	Used only if primary CF3 supports diversity.
GNSS	CN306	<ul style="list-style-type: none"> <li>Required to enable GNSS functionality</li> <li>Active</li> <li>3.3 V bias voltage</li> </ul>

a. U.FL connectors

*Note: If needed, the board can be configured to use SMA connectors. For details, see [Table 3-6](#) on page 31.*

To connect an antenna to the Main, Diversity, or GNSS antenna connector:

1. Place the mangOH green face-up.



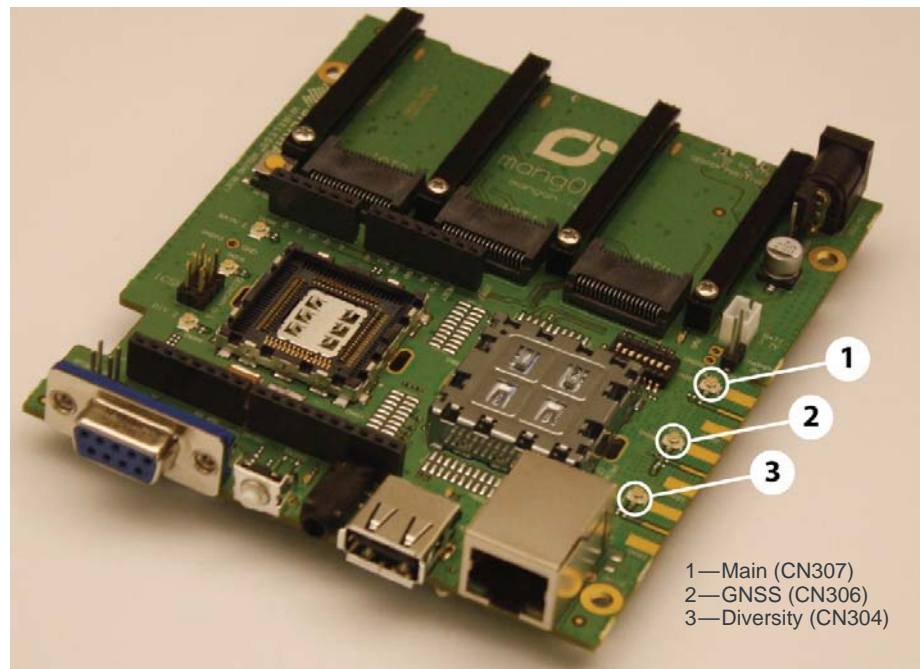


Figure 3-18: Antenna Connector Locations

2. Attach the antenna cable's female connector to the board's male connector and press firmly to get a secure connection.  
(Note that female connectors are rated for a limited number of reconnects before the connector wears out, so should be left connected if possible. Use a U.FL extraction tool to put less strain on the connector during removal.)

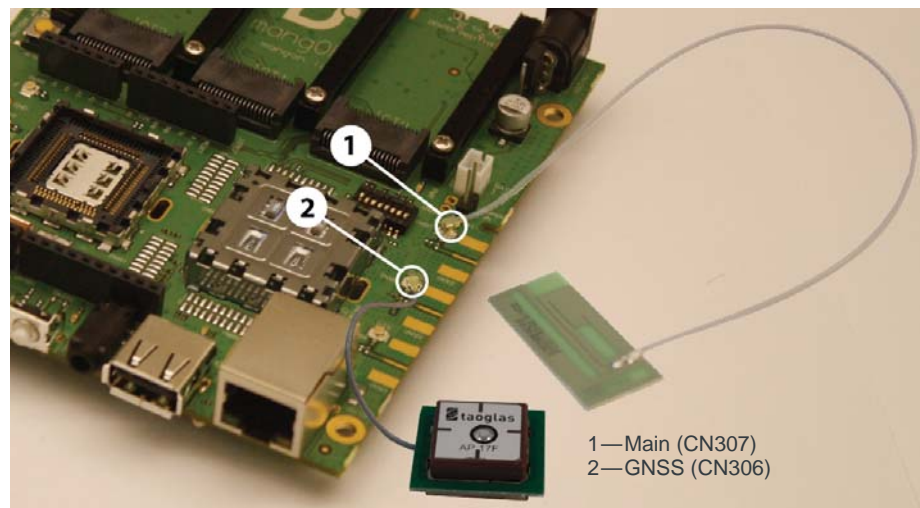


Figure 3-19: Main and GNSS Antennas Connected

## Insert/Remove IoT Connectors

The mangOH green includes three single-width IoT connector slots.

If the board uses IoT connector mounting rails and you want to use a double-width (2-slot) or triple-width (3-slot) IoT connector, remove the rails between the slots you will be using.

---

**Caution:** Handle IoT connectors carefully to make sure components are not accidentally damaged, and hold them by their edges to avoid possible ESD damage.

---

To install an IoT connector in any IoT slot:

1. Remove power from the mangOH green. (This step is recommended in case the IoT connector is not hot-swappable or needs a reset.)
2. Check the IoT connector to make sure you know which side is the top. (IoT Connectors must not be inserted upside-down.)
3. Slide the IoT connector into the rails until it meets the socket, then press firmly to seat the connector into the socket.

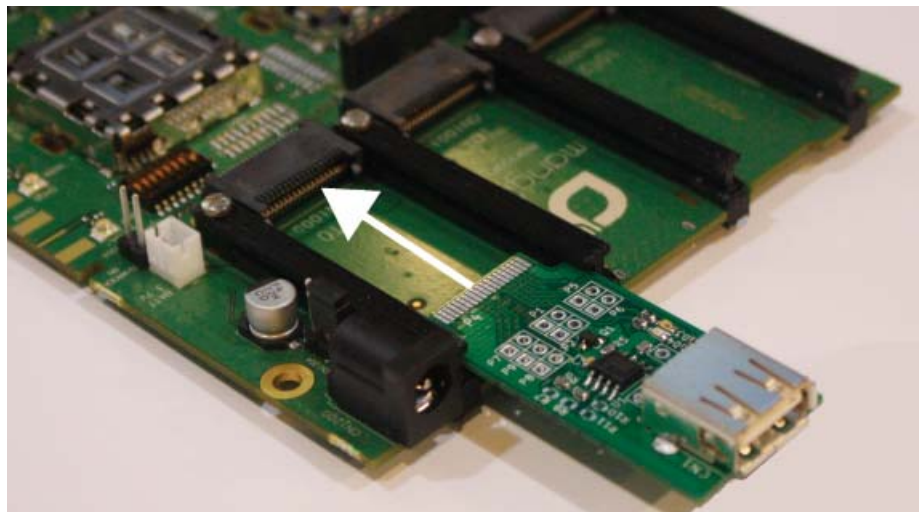


Figure 3-20: IoT Connector Insertion



Figure 3-21: IoT Connector Inserted

To remove an IoT connector:

1. Pull the connector straight out, using safe ESD-handling practices (such as wearing proper ESD straps).

For detailed interface information for each IoT slot, refer to the mangOH green Developer's Guide. For detailed information about IoT connectors, refer to the IoT Connector Specification.

## Arduino-compatible Circuit

The mangOH green includes an integrated Arduino-compatible circuit (with connector for use with Arduino-compatible shields, and an Atmega32U4 microcontroller).

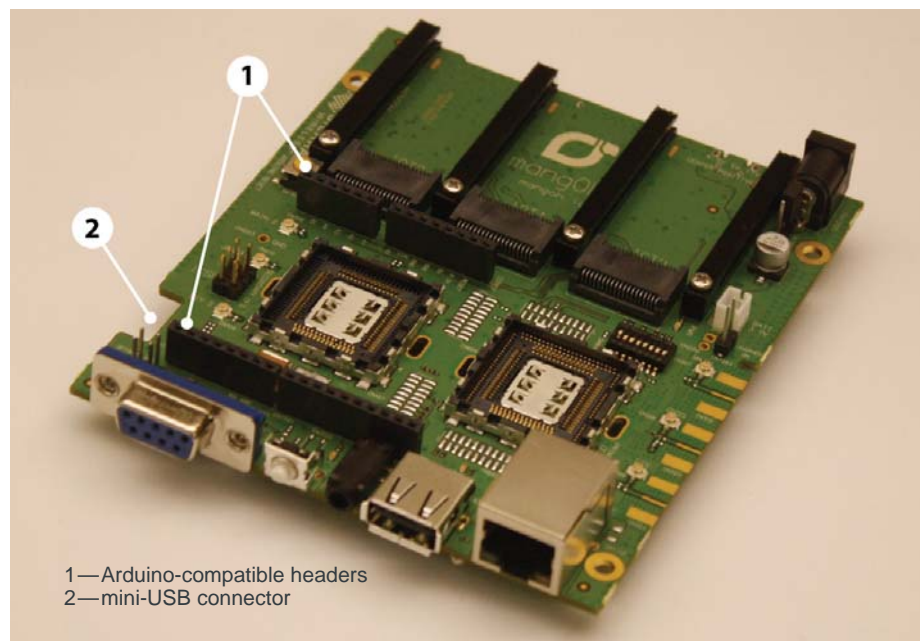


Figure 3-22: Integrated Arduino-compatible Circuit



The Arduino-compatible circuit is controlled directly via a mini-USB cable connection from your computer. This connection is used to download sketches from your computer using the Arduino IDE.

By default, the Arduino-compatible circuit's UART is configured to connect to the primary CF3 module's USB using an FTDI conversion chip (UART to USB). For details, see [Table 3-6](#) on page 31.

The Arduino-compatible circuit can also be accessed from the primary CF3 module, as shown in [Figure 3-23](#). The 'Bridge application' is a Legato application (downloadable from [legato.io](http://legato.io)) that allows communication between the primary CF3 module and the Arduino-compatible circuit. See the mangOH to Cloud Developer's Guide for details.

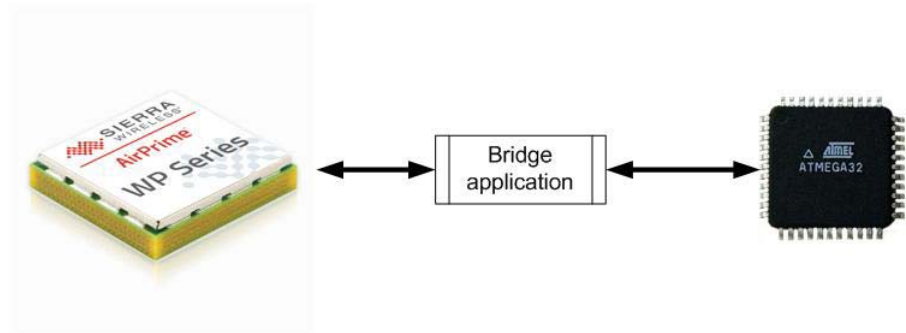


Figure 3-23: Arduino-compatible Circuit Control by Primary CF3 Module

## Connect Arduino-compatible Shield

To connect an Arduino-compatible shield to the mangOH green:

1. Position the shield above the headers. (Note that the two rows of headers have different numbers of pins—make sure to position the shield correctly.)

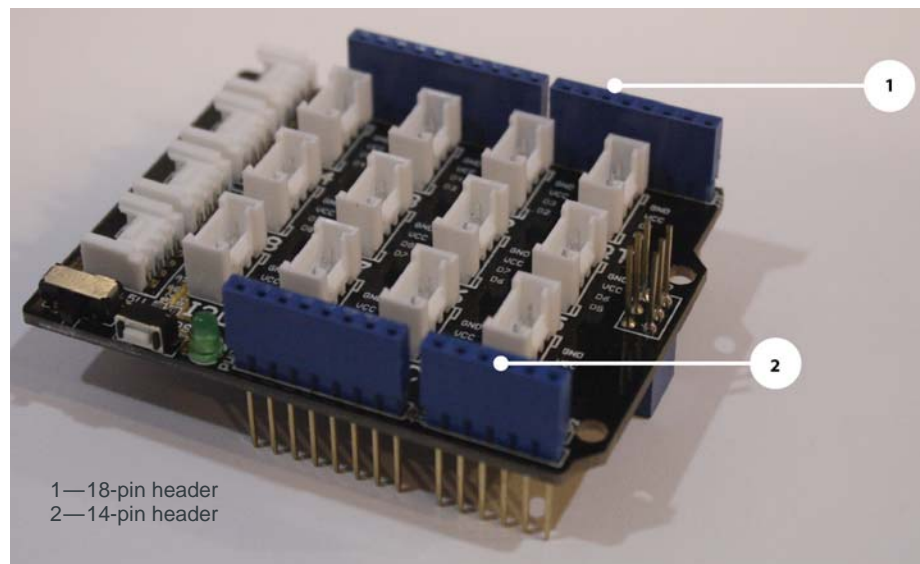


Figure 3-24: Arduino-compatible Shield Example

2. Hold the shield by its edges and press straight down into the headers.

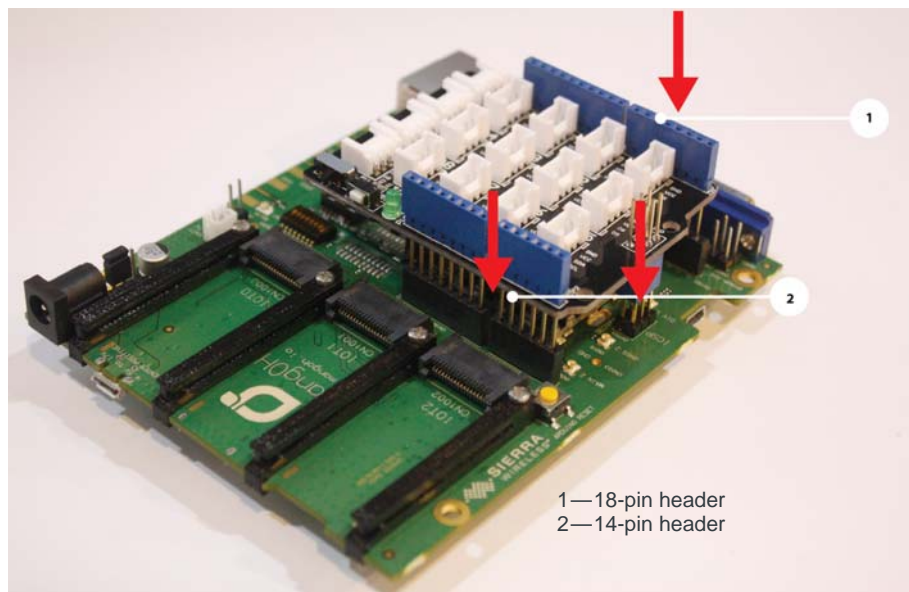


Figure 3-25: Installing an Arduino-compatible Shield

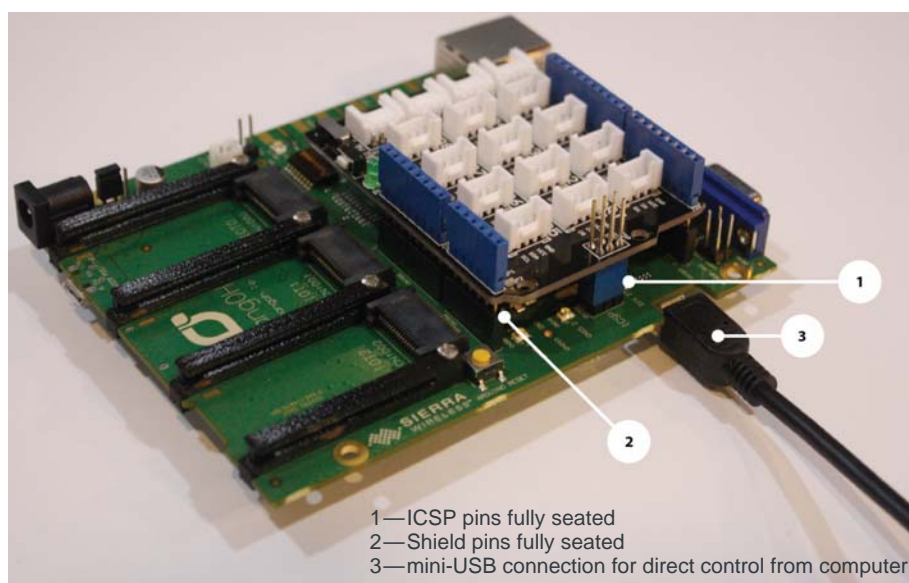


Figure 3-26: Arduino-compatible Shield Installed on mangOH green

## Audio Connection

The mangOH green includes a 3.5 mm audio jack for use with audio-enabled CF3 modules. If supported by the CF3 module, the jack can be used for making a voice call.

By default, the audio jack is connected to the onboard mangOH codec, and is configured for use with a CTIA/AHJ-compatible headset. For details, see [Table 3-6](#) on page 31.

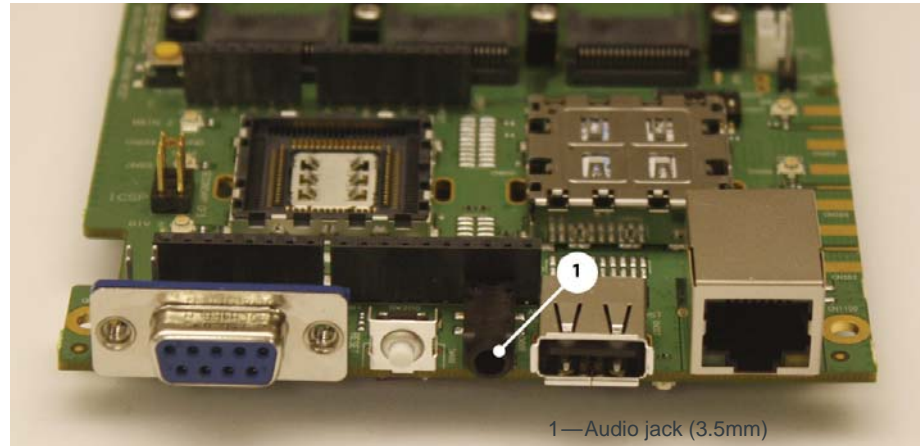


Figure 3-27: Audio Output Jack

## Ethernet Connection

The mangOH green includes a 100 Mbps Ethernet port that may be used to connect the board to a LAN.

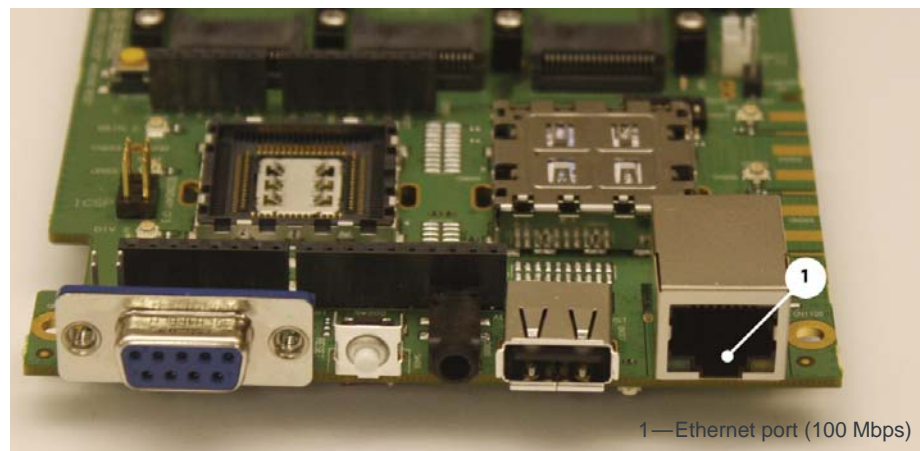


Figure 3-28: Ethernet Port

The Ethernet port has two LEDs that exhibit the behavior described in [Table 3-4](#).

**Table 3-4: Ethernet LED indicators**

Pattern	Purpose	Description
Green (Left side)	Connection state	<ul style="list-style-type: none"><li>• Solid—Connected</li><li>• Blinking—Connected and transmitting/receiving</li><li>• Off—No connection</li></ul>
Amber (Right side)	Connection speed	<ul style="list-style-type: none"><li>• On—100 Mbps</li><li>• Off—10 Mbps</li></ul>

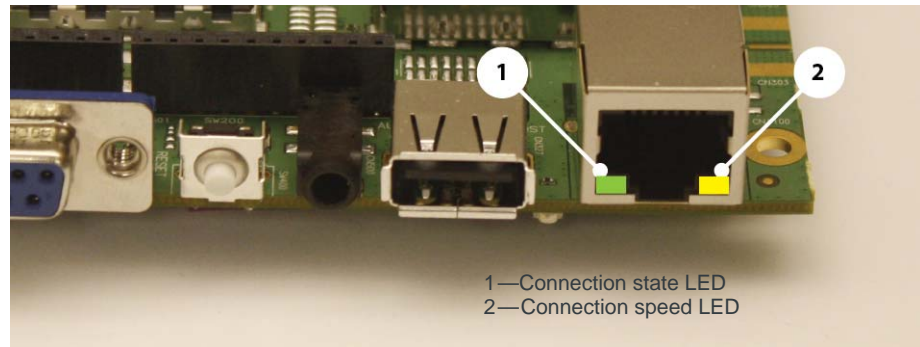


Figure 3-29: Ethernet Port LEDs

## USB Host Connection

The mangOH green includes a USB Host port (USB 2.0) for attaching a peripheral device, memory stick, etc.

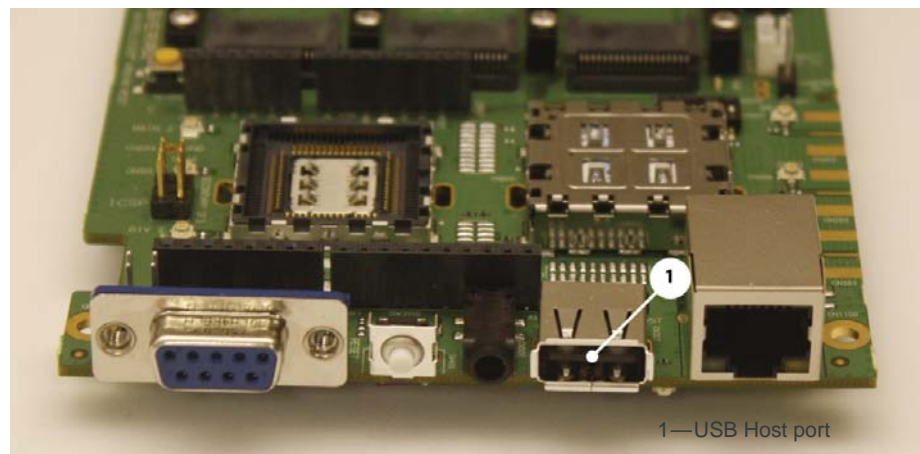


Figure 3-30: USB Host Port

## RS-232 Console Output Connection

The mangOH green includes an RS-232 DB9 connector for console output.

By default, this port is enabled and configured to connect to the primary module's UART2 (two-wire interface).

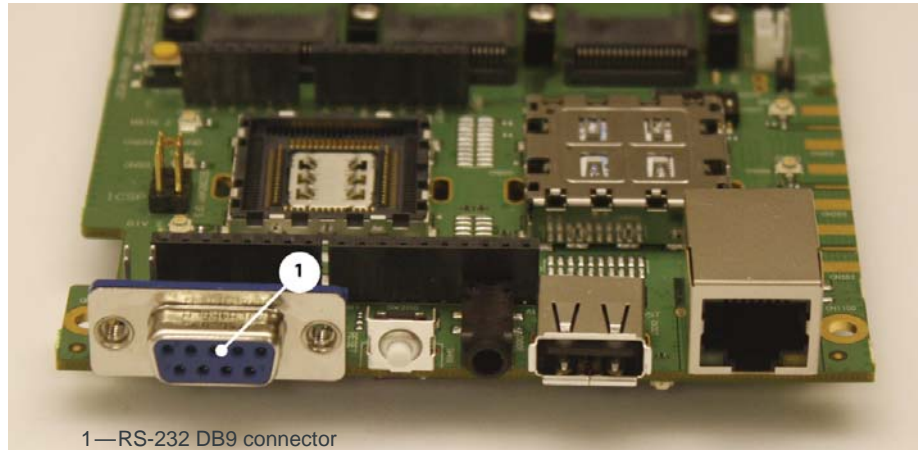


Figure 3-31: RS-232 Console Output Connection

## LED Indicators

The mangOH green includes several LED indicators.

Table 3-5: mangOH green LEDs

LED	Description
1—Power	On when power is supplied by any power source (USB, DC, battery)
2—Rx (Arduino-compatible circuit)	On when the Arduino-compatible circuit is receiving data
3—Tx (Arduino-compatible circuit)	On when the Arduino-compatible circuit is sending data
4—User-controlled	User can control on/off behavior
5—Battery charging	On when the battery is recharging
6—RF Rx/Tx	On when the CF3 module is sending (Tx) or receiving (Rx) data
7—W_DISABLE_N	On when RF is enabled



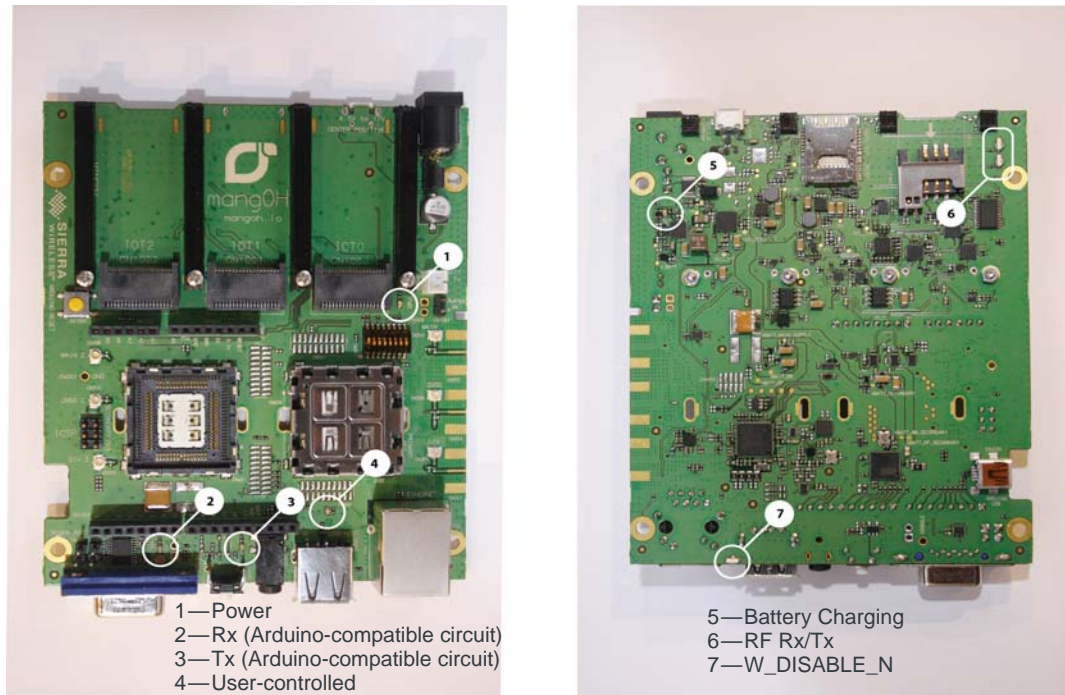


Figure 3-32: LED Indicators (mangOH green DV3 Configuration)

## Reset Switches

The mangOH green includes two reset switches:

- Board reset (SW400)—Press and hold for 5 seconds to reset the board (including the integrated Arduino-compatible circuit)  
Note that when the board is resetting, the reset signal is held LOW until the primary module is fully booted.
- Arduino-compatible circuit reset (SW1500)—Press and hold for 5 seconds to reset the integrated Arduino-compatible circuit.

For details on resetting the mangOH green or specific application blocks, see the mangOH green Developer's Guide.

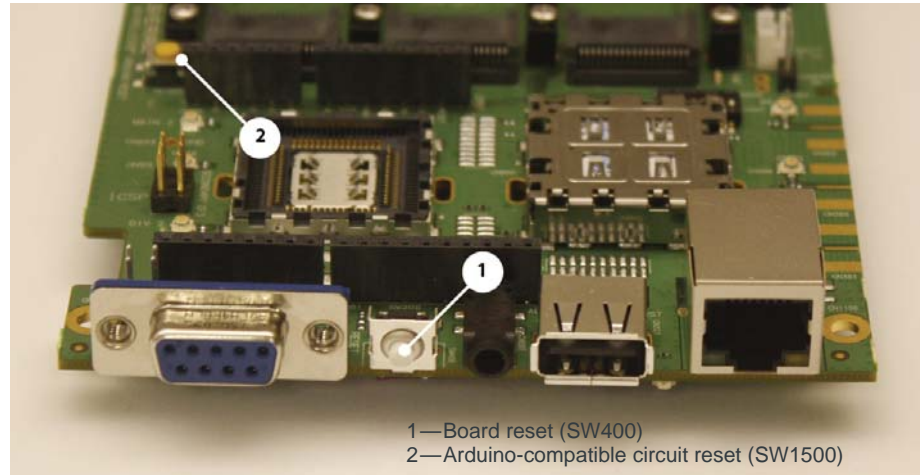


Figure 3-33: Reset Switches

## mangOH green Configuration

### Default Configuration

The mangOH green's default configuration is described in [Table 3-6](#).

Table 3-6: mangOH green Default Configuration

Component/ Switch	Default Configuration/Behavior	Notes
Antenna connectors (Main, Diversity, GPS)	<ul style="list-style-type: none"> <li>U.FL connectors</li> <li>3.3 V bias voltage for active antennas</li> </ul>	SMA connectors can be added, if required, by a user who is proficient at soldering. For details, refer to the mangOH green schematic available at <a href="http://mangoh.io">mangoh.io</a> .
Audio connector (CN500)	<ul style="list-style-type: none"> <li>Connected to onboard mangOH codec</li> <li>CTIA/AHJ-compatible headset</li> </ul>	Reconfiguration to use an OMTP-compatible headset requires soldering.
RS-232 connector (CN700)	<ul style="list-style-type: none"> <li>Enabled</li> <li>Connected to primary module's UART2</li> </ul>	
LEDs	All LEDs are enabled and will exhibit their default behaviors	
System reset signal (RESET_IN_N)	Held LOW until primary module is fully booted	Peripherals on the mangOH green are not activated until the module is fully booted.
SIM1/SIM2 Detect	<ul style="list-style-type: none"> <li>SIM1 Detect uses physical sensor to detect SIM card insertion/removal</li> <li>SIM2—Switch SW401 (position 4) can be used to indicate that a SIM is in SIM holder 2:               <ul style="list-style-type: none"> <li>OFF—SIM2 detected</li> <li>ON—No SIM</li> </ul> </li> </ul>	

**Table 3-6: mangOH green Default Configuration (Continued)**

Component/ Switch	Default Configuration/Behavior	Notes
SD connector (CN802)	Connected to primary module	Board can be configured using a software command to connect primary module's SDIO signals to IOT1 instead of SD connector.
Peripheral interfaces (UART, SPI, I2C, etc.)	See the mangOH green Developer's Guide for details.	
Arduino-compatible circuit UART	Connected to primary module's USB using FTDI conversion chip (UART to USB)	Board can be configured using a software command to connect Arduino-compatible circuit's UART to WP UART1
Module Signals Control (SW401)	<ul style="list-style-type: none"> <li>POWER_ON (Dip 1)=ON (Unit is enabled)</li> <li>All others = OFF</li> </ul>	

## Switch and Jumper Configuration Options

The mangOH green uses several switches and jumpers to configure the board and CF3 module's operation, as detailed below in [Table 3-7](#) through [Table 3-9](#).

To locate these switches and jumpers, see [Figure 3-34](#) on page 34 and [Figure 3-35](#) on page 35.

**Table 3-7: CN1204—Board Power Select<sup>a</sup>**

Power supply selection	Jump 1–2	Jump 2–3
USB power, through micro-USB port (CN311–USB port)	Yes	
DC power, through DC barrel jack (CN1200–barrel jack power)		Yes

a. Required: Select one option only (Jump 1–2 or Jump 2–3). For details, see [Select Primary Power Supply](#) on page 15.

**Table 3-8: CN1203—Battery Recharge Select**

Battery recharge behavior	Jump 1–2
Battery will recharge while power is supplied by USB or DC	Yes <sup>a</sup>
Battery will not recharge	No

a. IMPORTANT: Jumper must not be used if there is no battery connected. For details, see [Connect Battery Backup](#) on page 16.


**Table 3-9: SW401—Module Signals Control**

Signal	Dip	On/Off	State
POWER_ON	1	On (Default)	Enable POWER_ON signal for primary module (J200)
		Off	Disable POWER_ON signal



**Table 3-9: SW401—Module Signals Control (Continued)**

Signal	Dip	On/Off	State
<b>Reserved</b>	2	On	tbd
		Off (Default)	
<b>W_DISABLE_N</b>	3	On	Disable RF power for primary CF3 module
		Off (Default)	Enable RF power for primary CF3 module
<b>SIM2_Detect</b>	4	On	Indicate that SIM Holder #2 is empty
		Off (Default)	Indicate that a SIM is in SIM Holder #2
<b>SW_PWR_ON</b>	5	On	Enable POWER_ON signal for secondary module (J601)
		Off (Default)	Disable POWER_ON signal
<b>S_TP1_BOOT</b>	6	On	Enable secondary CF3 module's TP1 (boot) signal functionality. Pull the signal low to enter download mode for firmware updates.
		Off (Default)	Secondary module functions normally.
<b>TP1_BOOT</b>	7	On	Enable primary CF3 module's TP1 (boot) signal functionality. Pull the signal low to enter download mode for firmware updates.
		Off (Default)	Primary module functions normally.
<b>RESET_IN_N</b>	8	On	Reset signal is low until primary CF3 module fully boots.
		Off (Default)	tbd

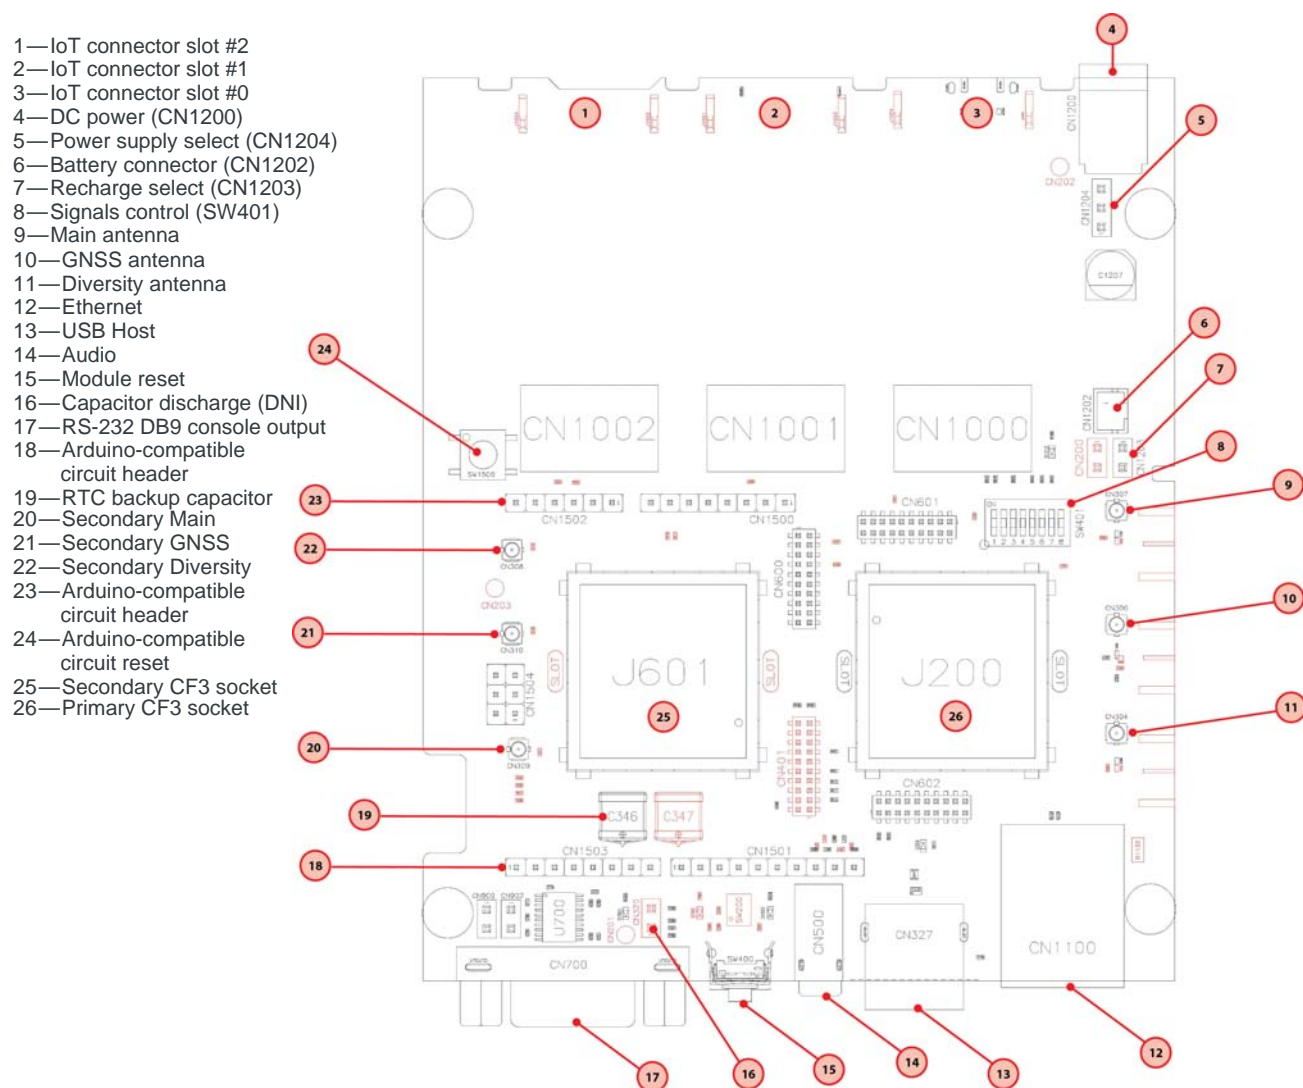



# 4: Software Setup

## 4

This chapter describes software resources that you will need on your computer to access the mangOH green and develop applications for its CF3 module and integrated Arduino-compatible circuit.

Sample applications and instructional materials are available from the sites mentioned in this chapter. For detailed information on developing for the mangOH green, see the mangOH green Developer's Guide and related documents (available from [mangoh.io](http://mangoh.io)).

## Install / Update Windows Driver

If you are using a Windows computer, you will need to install the Legato driver for the CF3 module that you install in your mangOH green.

1. Visit [mangoh.io](http://mangoh.io) to download the Windows driver and driver installation instructions for your CF3 module.
2. Install the Windows driver.
3. When the mangOH green is connected via USB to the computer, display the Device Manager (Control Panel > System > Device Manager).

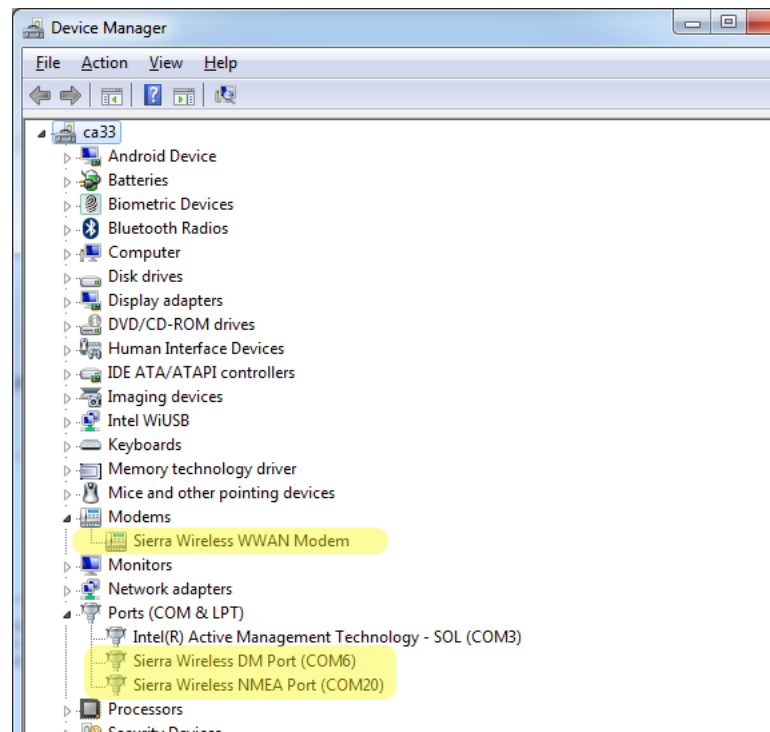


Figure 4-1: Windows Device Manager

If the driver installed correctly, you will see the following items listed:

- Modems > Sierra Wireless WWAN Modem (This is the module in socket J200.)
- Ports [COM & LPT] > Sierra Wireless DM Port

- Ports [COM & LPT] > Sierra Wireless NMEA Port (This is the port that you will use to communicate with the module from your terminal emulator.)

## Install a Terminal Emulator

To communicate with the mangOH green, you need to use a terminal emulator program such as Tera Term or HyperTerminal®.

When you have an emulator installed, use it to establish a console connection to the mangOH green:

- Port—Serial modem COM port (for Sierra Wireless devices, this is the Sierra Wireless NMEA Port)
- Baud rate—115200

## Install the Arduino IDE

To work with the mangOH green's integrated Arduino-compatible circuit, you must download and install the Arduino IDE (Integrated Development Environment). The IDE is used to write code ('sketches') and upload them to the mangOH green's integrated Arduino-compatible circuit. Installation and usage information is available at [mangoh.io](http://mangoh.io).

## Install the Legato Developer Studio

To create Legato applications for the CF3 module, download and install the Open AT Developer Studio (a Legato IDE) available at [mangoh.io](http://mangoh.io).

## Download Firmware Updates

Firmware updates will be made available for download from [mangoh.io](http://mangoh.io).

## Write Your First Program

For instructions on building applications (including writing a 'Hello World' program to test your mangOH green), and to download sample Arduino sketches and Legato applications, visit [mangoh.io](http://mangoh.io).