



An Object Oriented Finite Element Library

Reference Guide

Release 3.1.1

Rachid Touzani
Laboratoire de Mathématiques Blaise Pascal
Université Clermont Auvergne
63177 Aubière, France
e-mail : rachid.touzani@uca.fr

Contents

1	Module Index	3
1.1	Modules	3
2	Namespace Index	5
2.1	Namespace List	5
3	Hierarchical Index	7
3.1	Class Hierarchy	7
4	Class Index	11
4.1	Class List	11
5	Module Documentation	17
5.1	Conservation Law Equations	17
5.2	Electromagnetics	18
5.3	Finite Element Mesh	19
5.4	Fluid Dynamics	37
5.5	General Purpose Equations	38
5.6	Global Variables	42
5.7	Heat Transfer	45
5.8	Input/Output	46
5.9	Interface Problems	47
5.10	Laplace equation	48
5.11	OFELI	49
5.12	Physical properties of media	108
5.13	Porous Media problems	109
5.14	Shape Function	110
5.15	Solid Mechanics	111
5.16	Solver	112
5.17	Utilities	125
5.18	Vector and Matrix	147
6	Namespace Documentation	155
6.1	OFELI Namespace Reference	155
7	Class Documentation	175
7.1	AbsEqua< T_ > Class Template Reference	175
7.2	Bar2DL2 Class Reference	177
7.3	Beam3DL2 Class Reference	195
7.4	BiotSavart Class Reference	212
7.5	BMatrix< T_ > Class Template Reference	217
7.6	Brick Class Reference	224
7.7	Circle Class Reference	226

7.8	DC1DL2 Class Reference	229
7.9	DC2DT3 Class Reference	250
7.10	DC2DT6 Class Reference	275
7.11	DC3DAT3 Class Reference	295
7.12	DC3DT4 Class Reference	316
7.13	DG Class Reference	338
7.14	DMatrix< T_ > Class Template Reference	339
7.15	Domain Class Reference	356
7.16	DSMatrix< T_ > Class Template Reference	360
7.17	EC2D1T3 Class Reference	368
7.18	Edge Class Reference	384
7.19	EdgeList Class Reference	387
7.20	EigenProblemSolver Class Reference	388
7.21	Elas2DQ4 Class Reference	394
7.22	Elas2DT3 Class Reference	412
7.23	Elas3DH8 Class Reference	434
7.24	Elas3DT4 Class Reference	450
7.25	Element Class Reference	466
7.26	ElementList Class Reference	475
7.27	Ellipse Class Reference	476
7.28	Equa_Electromagnetics< T_, NEN_, NEE_, NSN_, NSE_ > Class Template Reference	478
7.29	Equa_Fluid< T_, NEN_, NEE_, NSN_, NSE_ > Class Template Reference	492
7.30	Equa_Laplace< T_, NEN_, NEE_, NSN_, NSE_ > Class Template Reference	507
7.31	Equa_Porous< T_, NEN_, NEE_, NSN_, NSE_ > Class Template Reference	521
7.32	Equa_Solid< T_, NEN_, NEE_, NSN_, NSE_ > Class Template Reference	537
7.33	Equa_Therm< T_, NEN_, NEE_, NSN_, NSE_ > Class Template Reference	552
7.34	Equation< T_, NEN_, NEE_, NSN_, NSE_ > Class Template Reference	570
7.35	Estimator Class Reference	585
7.36	FastMarching2D Class Reference	587
7.37	FEShape Class Reference	588
7.38	Figure Class Reference	590
7.39	FMM2D Class Reference	592
7.40	FMM3D Class Reference	593
7.41	FMMSolver Class Reference	595
7.42	Funct Class Reference	596
7.43	Gauss Class Reference	598
7.44	Grid Class Reference	599
7.45	HelmholtzBT3 Class Reference	601
7.46	Hexa8 Class Reference	615
7.47	ICPG1D Class Reference	618
7.48	ICPG2DT Class Reference	626
7.49	ICPG3DT Class Reference	633
7.50	IOField Class Reference	637
7.51	IPF Class Reference	639
7.52	Iter< T_ > Class Template Reference	648
7.53	Laplace1DL2 Class Reference	648
7.54	Laplace1DL3 Class Reference	664
7.55	Laplace2DFVT Class Reference	679
7.56	Laplace2DMHRT0 Class Reference	694
7.57	Laplace2DT3 Class Reference	709
7.58	LaplaceDG2DP1 Class Reference	726
7.59	LCL1D Class Reference	729
7.60	LCL2DT Class Reference	734
7.61	LCL3DT Class Reference	739

7.62	Line2 Class Reference	745
7.63	Line2H Class Reference	748
7.64	Line3 Class Reference	750
7.65	LinearSolver< T_ > Class Template Reference	752
7.66	LocalMatrix< T_, NR_, NC_ > Class Template Reference	757
7.67	LocalVect< T_, N_ > Class Template Reference	759
7.68	Material Class Reference	761
7.69	Matrix< T_ > Class Template Reference	764
7.70	Mesh Class Reference	773
7.71	MeshAdapt Class Reference	795
7.72	Muscl Class Reference	800
7.73	Muscl1D Class Reference	803
7.74	Muscl2DT Class Reference	806
7.75	Muscl3DT Class Reference	810
7.76	MyOpt Class Reference	814
7.77	Node Class Reference	815
7.78	NodeList Class Reference	819
7.79	NSP2DQ41 Class Reference	821
7.80	ODESolver Class Reference	837
7.81	OptSolver Class Reference	845
7.82	Partition Class Reference	852
7.83	Penta6 Class Reference	856
7.84	PETScMatrix< T_ > Class Template Reference	858
7.85	PETScVect< T_ > Class Template Reference	870
7.86	PETScWrapper< T_ > Class Template Reference	891
7.87	PhaseChange Class Reference	899
7.88	Point< T_ > Class Template Reference	900
7.89	Point2D< T_ > Class Template Reference	903
7.90	Polygon Class Reference	906
7.91	Prec< T_ > Class Template Reference	908
7.92	Prescription Class Reference	912
7.93	Quad4 Class Reference	913
7.94	Reconstruction Class Reference	916
7.95	Rectangle Class Reference	918
7.96	Side Class Reference	920
7.97	SideList Class Reference	926
7.98	SkMatrix< T_ > Class Template Reference	928
7.99	SkSMatrix< T_ > Class Template Reference	942
7.100	Sphere Class Reference	950
7.101	SpMatrix< T_ > Class Template Reference	952
7.102	SteklovPoincare2DBE Class Reference	969
7.103	Tabulation Class Reference	971
7.104	Tetra4 Class Reference	971
7.105	Timer Class Reference	974
7.106	TimeStepping Class Reference	975
7.107	TINS2DT3B Class Reference	980
7.108	Triang3 Class Reference	996
7.109	Triang6S Class Reference	998
7.110	Triangle Class Reference	1001
7.111	Triangle Class Reference	1003
7.112	TrMatrix< T_ > Class Template Reference	1006
7.113	UserData< T_ > Class Template Reference	1013
7.114	Vect< T_ > Class Template Reference	1017
7.115	WaterPorous2D Class Reference	1043

Chapter 1

Module Index

1.1 Modules

Here is a list of all modules:

OFELI	49
Conservation Law Equations	17
Electromagnetics	18
Finite Element Mesh	19
Fluid Dynamics	37
General Purpose Equations	38
Global Variables	42
Heat Transfer	45
Input/Output	46
Interface Problems	47
Laplace equation	48
Physical properties of media	108
Porous Media problems	109
Shape Function	110
Solid Mechanics	111
Solver	112
Utilities	125
Vector and Matrix	147

Chapter 2

Namespace Index

2.1 Namespace List

Here is a list of all documented namespaces with brief descriptions:

OFELI	A namespace to group all library classes, functions, ..	155
-------	---	-----

Chapter 3

Hierarchical Index

3.1 Class Hierarchy

This inheritance list is sorted roughly, but not completely, alphabetically:

AbsEqua< complex_t >	175
Equation< complex_t, NEN_, NEE_, NSN_, NSE_ >	570
Equa_Electromagnetics< complex_t, 3, 3, 2, 2 >	478
EC2D1T3	368
HelmholtzBT3	601
AbsEqua< double >	175
Equation< double, NEN_, NEE_, NSN_, NSE_ >	570
Equa_Solid< double, 8, 24, 4, 12 >	537
Elas3DH8	434
AbsEqua< real_t >	175
Equation< real_t, NEN_, NEE_, NSN_, NSE_ >	570
Equa_Electromagnetics< real_t, 3, 6, 2, 4 >	478
Equa_Fluid< real_t, 3, 6, 2, 4 >	492
TINS2DT3B	980
Equa_Fluid< real_t, 4, 8, 2, 4 >	492
NSP2DQ41	821
Equa_Laplace< real_t, 2, 2, 1, 1 >	507
Laplace1DL2	648
Equa_Laplace< real_t, 3, 3, 1, 1 >	507
Laplace1DL3	664
Equa_Laplace< real_t, 3, 3, 2, 2 >	507
Laplace2DFVT	679
Laplace2DMHRT0	694
Laplace2DT3	709
Equa_Laplace< real_t, 4, 4, 3, 3 >	507
Equa_Porous< real_t, 2, 2, 1, 1 >	521
Equa_Porous< real_t, 3, 3, 2, 2 >	521
WaterPorous2D	1043
Equa_Solid< real_t, 2, 12, 1, 1 >	537
Beam3DL2	195
Equa_Solid< real_t, 2, 4, 1, 2 >	537
Bar2DL2	177
Equa_Solid< real_t, 3, 6, 2, 4 >	537

Elas2DT3	412
Equa.Solid< real.t, 4, 12, 3, 9 >	537
Elas3DT4	450
Equa.Solid< real.t, 4, 8, 2, 4 >	537
Elas2DQ4	394
Equa.Therm< real.t, 2, 2, 1, 1 >	552
DC1DL2	229
Equa.Therm< real.t, 3, 3, 2, 2 >	552
DC2DT3	250
DC3DAT3	295
Equa.Therm< real.t, 4, 4, 3, 3 >	552
DC3DT4	316
Equa.Therm< real.t, 6, 6, 3, 3 >	552
DC2DT6	275
LocalMatrix< complex.t, NEE_, NEE_ >	757
LocalMatrix< complex.t, NSE_, NSE_ >	757
LocalMatrix< double, NEE_, NEE_ >	757
LocalMatrix< double, NSE_, NSE_ >	757
LocalMatrix< real.t, NEE_, NEE_ >	757
LocalMatrix< real.t, NSE_, NSE_ >	757
LocalMatrix< T_, NEE_, NEE_ >	757
LocalMatrix< T_, NSE_, NSE_ >	757
LocalVect< complex.t, NEE_ >	759
LocalVect< complex.t, NSE_ >	759
LocalVect< double, NEE_ >	759
LocalVect< double, NSE_ >	759
LocalVect< real.t, NEE_ >	759
LocalVect< real.t, NSE_ >	759
LocalVect< T_, NEE_ >	759
LocalVect< T_, NSE_ >	759
AbsEqua< T_ >	175
Equation< T_, NEN_, NEE_, NSN_, NSE_ >	570
Equa.Electromagnetics< T_, NEN_, NEE_, NSN_, NSE_ >	478
Equa.Fluid< T_, NEN_, NEE_, NSN_, NSE_ >	492
Equa.Laplace< T_, NEN_, NEE_, NSN_, NSE_ >	507
Equa.Porous< T_, NEN_, NEE_, NSN_, NSE_ >	521
Equa.Solid< T_, NEN_, NEE_, NSN_, NSE_ >	537
Equa.Therm< T_, NEN_, NEE_, NSN_, NSE_ >	552
BiotSavart	212
DG	338
LaplaceDG2DP1	726
Domain	356
Edge	384
EdgeList	387
EigenProblemSolver	388
Element	466
ElementList	475
Estimator	585
FastMarching2D	587
FEShape	588
Hexa8	615
Line2	745

Line2H	748
Line3	750
Penta6	856
Quad4	913
Tetra4	971
triangle	??
Triang3	996
Triang6S	998
Figure	590
Brick	224
Circle	226
Ellipse	476
Polygon	906
Rectangle	918
Sphere	950
Triangle	1003
FMM2D	592
FMM3D	593
FMMSolver	595
Funct	596
Gauss	598
Grid	599
IOField	637
IPF	639
Iter< T_ >	648
LinearSolver< T_ >	752
LocalMatrix< T_, NR_, NC_ >	757
LocalVect< T_, N_ >	759
Material	761
Matrix< T_ >	764
BMatrix< T_ >	217
DMatrix< T_ >	339
DSMatrix< T_ >	360
SkMatrix< T_ >	928
SkSMatrix< T_ >	942
SpMatrix< T_ >	952
TrMatrix< T_ >	1006
Mesh	773
MeshAdapt	795
Muscl	800
Muscl1D	803
ICPG1D	618
LCL1D	729
Muscl2DT	806
ICPG2DT	626
LCL2DT	734
Muscl3DT	810
ICPG3DT	633
LCL3DT	739
MyOpt	814
Node	815
NodeList	819

ODESolver	837
OptSolver	845
Partition	852
PETScMatrix< T_ >	858
PETScVect< T_ >	870
PETScWrapper< T_ >	891
PhaseChange	899
Point< T_ >	900
Point2D< T_ >	903
Prec< T_ >	908
Prescription	912
Reconstruction	916
Side	920
SideList	926
SteklovPoincare2DBE	969
Tabulation	971
Timer	974
TimeStepping	975
UserData< T_ >	1013
Vect< T_ >	1017
Point< real_t >	900

Chapter 4

Class Index

4.1 Class List

Here are the classes, structs, unions and interfaces with brief descriptions:

AbsEqua< T_ >	Mother abstract class to describe equation	175
Bar2DL2	To build element equations for Planar Elastic Bar element with 2 DOF (Degrees of Freedom) per node	177
Beam3DL2	To build element equations for 3-D beam equations using 2-node lines	195
BiotSavart	Class to compute the magnetic induction from the current density using the Biot-Savart formula	212
BMatrix< T_ >	To handle band matrices	217
Brick	To store and treat a brick (parallelepiped) figure	224
Circle	To store and treat a circular figure	226
DC1DL2	Builds finite element arrays for thermal diffusion and convection in 1-D using 2-Node elements	229
DC2DT3	Builds finite element arrays for thermal diffusion and convection in 2-D domains using 3-Node triangles	250
DC2DT6	Builds finite element arrays for thermal diffusion and convection in 2-D domains using 6-Node triangles	275
DC3DAT3	Builds finite element arrays for thermal diffusion and convection in 3-D domains with axisymmetry using 3-Node triangles	295
DC3DT4	Builds finite element arrays for thermal diffusion and convection in 3-D domains using 4-Node tetrahedra	316
DG	Enables preliminary operations and utilities for the Discontinuous Galerkin method	338

DMatrix< T_ >	To handle dense matrices	339
Domain	To store and treat finite element geometric information	356
DSMatrix< T_ >	To handle symmetric dense matrices	360
EC2D1T3	Eddy current problems in 2-D domains using solenoidal approximation	368
Edge	To describe an edge	384
EdgeList	Class to construct a list of edges having some common properties	387
EigenProblemSolver	Class to find eigenvalues and corresponding eigenvectors of a given matrix in a generalized eigenproblem, <i>i.e.</i> Find scalars λ and non-null vectors v such that $[K]\{v\} = \lambda[M]\{v\}$ where $[K]$ and $[M]$ are symmetric matrices. The eigenproblem can be originated from a PDE. For this, we will refer to the matrices K and M as <i>Stiffness</i> and <i>Mass</i> matrices respectively	388
Elas2DQ4	To build element equations for 2-D linearized elasticity using 4-node quadrilaterals	394
Elas2DT3	To build element equations for 2-D linearized elasticity using 3-node triangles	412
Elas3DH8	To build element equations for 3-D linearized elasticity using 8-node hexahedra	434
Elas3DT4	To build element equations for 3-D linearized elasticity using 4-node tetrahedra	450
Element	To store and treat finite element geometric information	466
ElementList	Class to construct a list of elements having some common properties	475
Ellipse	To store and treat an ellipsoidal figure	476
Equa_Electromagnetics< T_, NEN_, NEE_, NSN_, NSE_ >	Abstract class for Electromagnetics Equation classes	478
Equa_Fluid< T_, NEN_, NEE_, NSN_, NSE_ >	Abstract class for Fluid Dynamics Equation classes	492
Equa_Laplace< T_, NEN_, NEE_, NSN_, NSE_ >	Abstract class for classes about the Laplace equation	507
Equa_Porous< T_, NEN_, NEE_, NSN_, NSE_ >	Abstract class for Porous Media Finite Element classes	521
Equa_Solid< T_, NEN_, NEE_, NSN_, NSE_ >	Abstract class for Solid Mechanics Finite Element classes	537
Equa_Therm< T_, NEN_, NEE_, NSN_, NSE_ >	Abstract class for Heat transfer Finite Element classes	552
Equation< T_, NEN_, NEE_, NSN_, NSE_ >	Abstract class for all equation classes	570
Estimator	To calculate an a posteriori estimator of the solution	585
FastMarching2D	To run a Fast Marching Method on 2-D structured uniform grids	587
FEShape	Parent class from which inherit all finite element shape classes	588

Figure	To store and treat a figure (or shape) information	590
FMM2D	Class for the fast marching 2-D algorithm	592
FMM3D	Class for the 3-D fast marching algorithm	593
FMMSolver	The Fast Marching Method solver	595
Funct	A simple class to parse real valued functions	596
Gauss	Calculate data for Gauss integration	598
Grid	To manipulate structured grids	599
HelmholtzBT3	Builds finite element arrays for Helmholtz equations in a bounded media using 3-Node triangles	601
Hexa8	Defines a three-dimensional 8-node hexahedral finite element using Q1-isoparametric interpolation	615
ICPG1D	Class to solve the Inviscid compressible fluid flows (Euler equations) for perfect gas in 1-D	618
ICPG2DT	Class to solve the Inviscid compressible fluid flows (Euler equations) for perfect gas in 2-D	626
ICPG3DT	Class to solve the Inviscid compressible fluid flows (Euler equations) for perfect gas in 3-D	633
IOField	Enables working with files in the XML Format	637
IPF	To read project parameters from a file in IPF format	639
Iter< T. >	Class to drive an iterative process	648
Laplace1DL2	To build element equation for a 1-D elliptic equation using the 2-Node line element (P_1)	648
Laplace1DL3	To build element equation for the 1-D elliptic equation using the 3-Node line (P_2)	664
Laplace2DFVT	To build and solve the Laplace equation using a standard Finite Volume method	679
Laplace2DMHRT0	To build element equation for the 2-D elliptic equation using the Mixed Hybrid finite element at lowest degree (Raviart-Thomas RT_0)	694
Laplace2DT3	To build element equation for the Laplace equation using the 2-D triangle ele- ment (P_1)	709
LaplaceDG2DP1	To build and solve the linear system for the Poisson problem using the DG P_1 2-D triangle element	726

LCL1D	Class to solve the linear conservation law (Hyperbolic equation) in 1-D by a MUSCL Finite Volume scheme	729
LCL2DT	Class to solve the linear hyperbolic equation in 2-D by a MUSCL Finite Volume scheme on triangles	734
LCL3DT	Class to solve the linear conservation law equation in 3-D by a MUSCL Finite Volume scheme on tetrahedra	739
Line2	To describe a 2-Node planar line finite element	745
Line2H	To describe a 2-Node Hermite planar line finite element	748
Line3	To describe a 3-Node quadratic planar line finite element	750
LinearSolver< T_ >	Class to solve systems of linear equations by iterative methods	752
LocalMatrix< T_, NR_, NC_ >	Handles small size matrices like element matrices, with a priori known size . .	757
LocalVect< T_, N_ >	Handles small size vectors like element vectors	759
Material	To treat material data. This class enables reading material data in material data files. It also returns these informations by means of its members	761
Matrix< T_ >	Virtual class to handle matrices for all storage formats	764
Mesh	To store and manipulate finite element meshes	773
MeshAdapt	To adapt mesh in function of given solution	795
Muscl	Parent class for hyperbolic solvers with Muscl scheme	800
Muscl1D	Class for 1-D hyperbolic solvers with Muscl scheme	803
Muscl2DT	Class for 2-D hyperbolic solvers with Muscl scheme	806
Muscl3DT	Class for 3-D hyperbolic solvers with Muscl scheme using tetrahedra	810
MyOpt	Abstract class to define by user specified optimization function	814
Node	To describe a node	815
NodeList	Class to construct a list of nodes having some common properties	819
NSP2DQ41	Builds finite element arrays for incompressible Navier-Stokes equations in 2-D domains using Q_1/P_0 element and a penalty formulation for the incompressibility condition	821
ODESolver	To solve a system of ordinary differential equations	837
OptSolver	To solve an optimization problem with bound constraints	845
Partition	To partition a finite element mesh into balanced submeshes	852

Penta6	Defines a 6-node pentahedral finite element using P_1 interpolation in local coordinates $(s.x, s.y)$ and Q_1 isoparametric interpolation in local coordinates $(s.x, s.z)$ and $(s.y, s.z)$	856
PETScMatrix< T_ >	To handle matrices in sparse storage format using the Petsc library	858
PETScVect< T_ >	To handle general purpose vectors using Petsc	870
PETScWrapper< T_ >	This class is a wrapper to be used when the library Petsc is installed and used with OFELI	891
PhaseChange	This class enables defining phase change laws for a given material	899
Point< T_ >	Defines a point with arbitrary type coordinates	900
Point2D< T_ >	Defines a 2-D point with arbitrary type coordinates	903
Polygon	To store and treat a polygonal figure	906
Prec< T_ >	To set a preconditioner	908
Prescription	To prescribe various types of data by an algebraic expression. Data may consist in boundary conditions, forces, tractions, fluxes, initial condition. All these data types can be defined through an enumerated variable	912
Quad4	Defines a 4-node quadrilateral finite element using Q_1 isoparametric interpolation	913
Reconstruction	To perform various reconstruction operations	916
Rectangle	To store and treat a rectangular figure	918
Side	To store and treat finite element sides (edges in 2-D or faces in 3-D)	920
SideList	Class to construct a list of sides having some common properties	926
SkMatrix< T_ >	To handle square matrices in skyline storage format	928
SkSMatrix< T_ >	To handle symmetric matrices in skyline storage format	942
Sphere	To store and treat a sphere	950
SpMatrix< T_ >	To handle matrices in sparse storage format	952
SteklovPoincare2DBE	Solver of the Steklov Poincare problem in 2-D geometries using piecewise constant boundary element	969
Tabulation	To read and manipulate tabulated functions	971
Tetra4	Defines a three-dimensional 4-node tetrahedral finite element using P_1 interpolation	971
Timer	To handle elapsed time counting	974

TimeStepping	To solve time stepping problems, i.e. systems of linear ordinary differential equations of the form $[A2]\{y''\} + [A1]\{y'\} + [A0]\{y\} = \{b\}$	975
TINS2DT3B	Builds finite element arrays for thermal diffusion and convection in 2-D domains using 3-Node triangles	980
Triang3	Defines a 3-Node (P_1) triangle	996
Triang6S	Defines a 6-Node straight triangular finite element using P_2 interpolation . . .	998
triangle	Defines a triangle. The reference element is the rectangle triangle with two unit edges	??
Triangle	To store and treat a triangle	1003
TrMatrix< T_ >	To handle tridiagonal matrices	1006
UserData< T_ >	Abstract class to define by user various problem data	1013
Vect< T_ >	To handle general purpose vectors	1017
WaterPorous2D	To solve water flow equations in porous media (1-D)	1043

Chapter 5

Module Documentation

5.1 Conservation Law Equations

Conservation law equations.

Classes

- class [ICPG1D](#)
Class to solve the Inviscid compressible fluid flows (Euler equations) for perfect gas in 1-D.
- class [ICPG2DT](#)
Class to solve the Inviscid compressible fluid flows (Euler equations) for perfect gas in 2-D.
- class [ICPG3DT](#)
Class to solve the Inviscid compressible fluid flows (Euler equations) for perfect gas in 3-D.
- class [LCL1D](#)
Class to solve the linear conservation law (Hyperbolic equation) in 1-D by a MUSCL Finite Volume scheme.
- class [LCL2DT](#)
Class to solve the linear hyperbolic equation in 2-D by a MUSCL Finite Volume scheme on triangles.
- class [LCL3DT](#)
Class to solve the linear conservation law equation in 3-D by a MUSCL Finite Volume scheme on tetrahedra.
- class [Muscl](#)
Parent class for hyperbolic solvers with Muscl scheme.
- class [Muscl1D](#)
Class for 1-D hyperbolic solvers with [Muscl](#) scheme.
- class [Muscl2DT](#)
Class for 2-D hyperbolic solvers with [Muscl](#) scheme.
- class [Muscl3DT](#)
Class for 3-D hyperbolic solvers with [Muscl](#) scheme using tetrahedra.

5.1.1 Detailed Description

Conservation law equations.

5.2 Electromagnetics

Electromagnetic equations.

Classes

- class [BiotSavart](#)
Class to compute the magnetic induction from the current density using the Biot-Savart formula.
- class [EC2D1T3](#)
Eddy current problems in 2-D domains using solenoidal approximation.
- class [Equa_Electromagnetics](#)< [T_](#), [NEN_](#), [NEE_](#), [NSN_](#), [NSE_](#) >
Abstract class for Electromagnetics [Equation](#) classes.
- class [HelmholtzBT3](#)
Builds finite element arrays for Helmholtz equations in a bounded media using 3-Node triangles.

5.2.1 Detailed Description

Electromagnetic equations.

5.3 Finite Element Mesh

Mesh management classes

Classes

- class [Domain](#)
To store and treat finite element geometric information.
- class [Edge](#)
To describe an edge.
- class [Element](#)
To store and treat finite element geometric information.
- class [Figure](#)
To store and treat a figure (or shape) information.
- class [Rectangle](#)
To store and treat a rectangular figure.
- class [Brick](#)
To store and treat a brick (parallelepiped) figure.
- class [Circle](#)
To store and treat a circular figure.
- class [Sphere](#)
To store and treat a sphere.
- class [Ellipse](#)
To store and treat an ellipsoidal figure.
- class [Triangle](#)
To store and treat a triangle.
- class [Polygon](#)
To store and treat a polygonal figure.
- class [Grid](#)
To manipulate structured grids.
- class [Mesh](#)
To store and manipulate finite element meshes.
- class [MeshAdapt](#)
To adapt mesh in function of given solution.
- class [NodeList](#)
Class to construct a list of nodes having some common properties.
- class [ElementList](#)
Class to construct a list of elements having some common properties.
- class [SideList](#)
Class to construct a list of sides having some common properties.
- class [EdgeList](#)
Class to construct a list of edges having some common properties.
- class [Node](#)
To describe a node.
- class [Partition](#)
To partition a finite element mesh into balanced submeshes.
- class [Side](#)
To store and treat finite element sides (edges in 2-D or faces in 3-D)

Macros

- `#define GRAPH_MEMORY 1000000`
Memory necessary to store matrix graph.
- `#define MAX_NB_ELEMENTS 10000`
Maximal Number of elements.
- `#define MAX_NB_NODES 10000`
Maximal number of nodes.
- `#define MAX_NB_SIDES 30000`
Maximal number of sides in.
- `#define MAX_NB_EDGES 30000`
Maximal Number of edges.
- `#define MAX_NBDOF_NODE 6`
Maximum number of DOF supported by each node.
- `#define MAX_NBDOF_SIDE 6`
Maximum number of DOF supported by each side.
- `#define MAX_NBDOF_EDGE 2`
Maximum number of DOF supported by each edge.
- `#define MAX_NB_ELEMENT_NODES 20`
Maximum number of nodes by element.
- `#define MAX_NB_ELEMENT_EDGES 10`
Maximum number of edges by element.
- `#define MAX_NB_SIDE_NODES 9`
Maximum number of nodes by side.
- `#define MAX_NB_ELEMENT_SIDES 8`
Maximum number of sides by element.
- `#define MAX_NB_ELEMENT_DOF 27`
Maximum number of dof by element.
- `#define MAX_NB_SIDE_DOF 4`
Maximum number of dof by side.
- `#define MAX_NB_INT_PTS 20`
Maximum number of integration points in element.
- `#define MAX_NB_MATERIALS 10`
Maximum number of materials.
- `#define TheNode (*theNode)`
- `#define TheElement (*theElement)`
- `#define TheSide (*theSide)`
- `#define TheEdge (*theEdge)`
- `#define MeshElements(mesh) for ((mesh).topElement(); (theElement=(mesh).getElement());)`
- `#define MeshActiveElements(mesh) for ((mesh).topElement(); (theElement=(mesh).get←
ActiveElement());)`
- `#define MeshNodeLoop(mesh, node) for ((mesh).topNode(); ((node)=(mesh).getNode());)`
- `#define MeshNodes(mesh) for ((mesh).topNode(); (theNode=(mesh).getNode());)`
- `#define MeshBoundaryNodes(mesh) for ((mesh).topBoundaryNode(); (theNode=(mesh).get←
BoundaryNode());)`
- `#define MeshSides(mesh) for ((mesh).topSide(); (theSide=(mesh).getSide());)`
- `#define MeshSideSet(sl) for ((sl).top(); (theSide=(sl).get());)`
- `#define MeshBoundarySides(mesh) for ((mesh).topBoundarySide(); (theSide=(mesh).get←
BoundarySide());)`

- #define `MeshEdges(mesh)` for ((mesh).topEdge()); (theEdge=(mesh).getEdge());
- #define `theNodeLabel` theNode->n()
- #define `theSideLabel` theSide->n()
A macro that returns side label in a loop using macro `MeshSides`
- #define `theSideNodeLabel(i)` theSide->getNodeLabel(i)
*A macro that returns label of *i*-th node of side using macro `MeshSides`*
- #define `theElementLabel` theElement->n()
A macro that returns element label in a loop using macro `MeshElements`
- #define `theElementNodeLabel(i)` theElement->getNodeLabel(i)
*A macro that returns label of *i*-th node of element using macro `MeshElements`*

Functions

- ostream & `operator<<` (ostream &s, const Edge &ed)
Output edge data.
- ostream & `operator<<` (ostream &s, const Element &el)
Output element data.
- Figure `operator&&` (const Figure &f1, const Figure &f2)
Function to define a `Figure` instance as the intersection of two `Figure` instances.
- Figure `operator||` (const Figure &f1, const Figure &f2)
Function to define a `Figure` instance as the union of two `Figure` instances.
- Figure `operator-` (const Figure &f1, const Figure &f2)
Function to define a `Figure` instance as the set subtraction of two `Figure` instances.
- ostream & `operator<<` (ostream &s, const Material &m)
Output material data.
- ostream & `operator<<` (ostream &s, const Mesh &ms)
Output mesh data.
- ostream & `operator<<` (ostream &s, const MeshAdapt &a)
Output `MeshAdapt` class data.
- ostream & `operator<<` (ostream &s, const NodeList &nl)
Output `NodeList` instance.
- ostream & `operator<<` (ostream &s, const ElementList &el)
Output `ElementList` instance.
- ostream & `operator<<` (ostream &s, const SideList &sl)
Output `SideList` instance.
- ostream & `operator<<` (ostream &s, const EdgeList &el)
Output `EdgeList` instance.
- size_t `Label` (const Node &nd)
Return label of a given node.
- size_t `Label` (const Element &el)
Return label of a given element.
- size_t `Label` (const Side &sd)
Return label of a given side.
- size_t `Label` (const Edge &ed)
Return label of a given edge.
- size_t `NodeLabel` (const Element &el, size_t n)
Return global label of node local label in element.

- `size_t NodeLabel` (const Side &sd, size_t n)
Return global label of node local label in side.
- `Point< real_t > Coord` (const Node &nd)
Return coordinates of a given node.
- `int Code` (const Node &nd, size_t i=1)
Return code of a given (degree of freedom of) node.
- `int Code` (const Element &el)
Return code of a given element.
- `int Code` (const Side &sd, size_t i=1)
Return code of a given (degree of freedom of) side.
- `bool operator==` (const Element &el1, const Element &el2)
Check equality between 2 elements.
- `bool operator==` (const Side &sd1, const Side &sd2)
Check equality between 2 sides.
- `void DeformMesh` (Mesh &mesh, const Vect< real_t > &u, real_t a=1)
Calculate deformed mesh using a displacement field.
- `void DeformMesh` (Mesh &mesh, const PETScVect< real_t > &u, real_t a=1)
Calculate deformed mesh using a displacement field as instance of PETScVect.
- `void MeshToMesh` (Mesh &m1, Mesh &m2, const Vect< real_t > &u1, Vect< real_t > &u2, size_t nx, size_t ny=0, size_t nz=0, size_t dof=1)
Function to redefine a vector defined on a mesh to a new mesh.
- `void MeshToMesh` (Mesh &m1, Mesh &m2, const Vect< real_t > &u1, Vect< real_t > &u2, const Point< real_t > &xmin, const Point< real_t > &xmax, size_t nx, size_t ny, size_t nz, size_t dof=1)
Function to redefine a vector defined on a mesh to a new mesh.
- `real_t getMaxSize` (const Mesh &m)
Return maximal size of element edges for given mesh.
- `real_t getMinSize` (const Mesh &m)
Return minimal size of element edges for given mesh.
- `real_t getMinElementMeasure` (const Mesh &m)
Return minimal measure (length, area or volume) of elements of given mesh.
- `real_t getMinSideMeasure` (const Mesh &m)
Return minimal measure (length or area) of sides of given mesh.
- `real_t getMaxSideMeasure` (const Mesh &m)
Return maximal measure (length or area) of sides of given mesh.
- `real_t getMeanElementMeasure` (const Mesh &m)
Return average measure (length, area or volume) of elements of given mesh.
- `real_t getMeanSideMeasure` (const Mesh &m)
Return average measure (length or area) of sides of given mesh.
- `void setNodeCodes` (Mesh &m, const string &exp, int code, size_t dof=1)
Assign a given code to all nodes satisfying a boolean expression using node coordinates.
- `void setBoundaryNodeCodes` (Mesh &m, const string &exp, int code, size_t dof=1)
Assign a given code to all nodes on boundary that satisfy a boolean expression using node coordinates.
- `void setSideCodes` (Mesh &m, const string &exp, int code, size_t dof=1)
Assign a given code to all sides satisfying a boolean expression using node coordinates.
- `void setBoundarySideCodes` (Mesh &m, const string &exp, int code, size_t dof=1)
Assign a given code to all sides on boundary that satisfy a boolean expression using node coordinates.

- void `setElementCodes` (Mesh &m, const string &exp, int code)
Assign a given code to all elements satisfying a boolean expression using node coordinates.
- int `NodeInElement` (const Node *nd, const Element *el)
Say if a given node belongs to a given element.
- int `NodeInSide` (const Node *nd, const Side *sd)
Say if a given node belongs to a given side.
- int `SideInElement` (const Side *sd, const Element *el)
Say if a given side belongs to a given element.
- ostream & `operator<<` (ostream &s, const Node &nd)
Output node data.
- ostream & `operator<<` (ostream &s, const Side &sd)
Output side data.

5.3.1 Detailed Description

Mesh management classes

5.3.2 Macro Definition Documentation

#define GRAPH_MEMORY 1000000

Memory necessary to store matrix graph.

This value is necessary only if nodes are to be renumbered.

#define TheNode (*theNode)

A macro that gives the instance pointed by *theNode*

#define TheElement (*theElement)

A macro that gives the instance pointed by *theElement*

#define TheSide (*theSide)

A macro that gives the instance pointed by *theSide*

#define TheEdge (*theEdge)

A macro that gives the instance pointed by *theEdge*

#define MeshElements(mesh) for ((mesh).topElement(); (theElement=(mesh).getElement());)

A macro to loop on mesh elements mesh: Instance of Mesh

Note

: Each iteration updates the pointer *theElement* to current Element

```
#define MeshActiveElements( mesh ) for ((mesh).topElement());  
(theElement=(mesh).getActiveElement());
```

A macro to loop on mesh active elements *mesh* : Instance of Mesh

Note

- : Each iteration updates the pointer *theElement* to current Element
- : This macro is necessary only if adaptive meshing is used

```
#define MeshNodeLoop( mesh, node ) for ((mesh).topNode()); ((node)=(mesh).getNode());
```

A macro to loop on mesh nodes *mesh*: Instance of Mesh *node*: Pointer to pointed node

```
#define MeshNodes( mesh ) for ((mesh).topNode()); (theNode=(mesh).getNode());
```

A macro to loop on mesh nodes *mesh* : Instance of Mesh

Note

- : Each iteration updates the pointer *theNode* to current Node

```
#define MeshBoundaryNodes( mesh ) for ((mesh).topBoundaryNode());  
(theNode=(mesh).getBoundaryNode());
```

A macro to loop on mesh nodes *mesh*: Instance of Mesh

Note

- : Each iteration updates the pointer *theNode* to current Node

```
#define MeshSides( mesh ) for ((mesh).topSide()); (theSide=(mesh).getSide());
```

A macro to loop on mesh sides *mesh*: Instance of Mesh

Note

- : Each iteration updates the pointer *theSide* to current Side

```
#define MeshSideSet( sl ) for ((sl).top()); (theSide=(sl).get());
```

A macro to loop on a subset of mesh sides *sl*: Instance of SideList class

Note

- : Each iteration updates the pointer *theSide* to current Side

```
#define MeshBoundarySides( mesh ) for ((mesh).topBoundarySide());  
(theSide=(mesh).getBoundarySide());
```

A macro to loop on mesh boundary sides *mesh*: Instance of Mesh

Notes:

- List of boundary sides must have been previously created by using class SideList
- Each iteration updates the pointer *theSide* to current Side

```
#define MeshEdges( mesh ) for ((mesh).topEdge(); (theEdge=(mesh).getEdge());)
```

A macro to loop on mesh edges mesh: Instance of Mesh

Note

: Each iteration updates the pointer theEdge to current Edge

```
#define theNodeLabel theNode->n()
```

A macro that returns node label in a loop using macro *MeshNodes*

5.3.3 Function Documentation

Figure operator&& (const Figure & f1, const Figure & f2)

Function to define a [Figure](#) instance as the intersection of two [Figure](#) instances.

Parameters

in	<i>f1</i>	First Figure instance
in	<i>f2</i>	Second Figure instance

Returns

Updated resulting [Figure](#) instance

Figure operator|| (const Figure & f1, const Figure & f2)

Function to define a [Figure](#) instance as the union of two [Figure](#) instances.

Parameters

in	<i>f1</i>	First Figure instance
in	<i>f2</i>	Second Figure instance

Returns

Updated resulting [Figure](#) instance

Figure operator- (const Figure & f1, const Figure & f2)

Function to define a [Figure](#) instance as the set subtraction of two [Figure](#) instances.

Parameters

in	<i>f1</i>	First Figure instance to subtract from
in	<i>f2</i>	Second Figure instance to subtract

Returns

Updated resulting [Figure](#) instance

size_t Label (const Node & *nd*)

Return label of a given node.

Parameters

in	<i>nd</i>	Reference to Node instance
----	-----------	--

Returns

Label of node

size_t Label (const Element & *el*)

Return label of a given element.

Parameters

in	<i>el</i>	Reference to Element instance
----	-----------	---

Returns

Label of element

size_t Label (const Side & *sd*)

Return label of a given side.

Parameters

in	<i>sd</i>	Reference to Side instance
----	-----------	--

Returns

Label of side

size_t Label (const Edge & *ed*)

Return label of a given edge.

Parameters

in	<i>ed</i>	Reference to Edge instance
----	-----------	--

Returns

Label of edge

size_t NodeLabel (const Element & *el*, size_t *n*)

Return global label of node local label in element.

Parameters

in	<i>el</i>	Reference to Element instance
in	<i>n</i>	Local label of node in element

Returns

Global label of node

size_t NodeLabel (const Side & *sd*, size_t *n*)

Return global label of node local label in side.

Parameters

in	<i>sd</i>	Reference to Side instance
in	<i>n</i>	Local label of node in side

Returns

Global label of node

Point< real_t > Coord (const Node & *nd*)

Return coordinates of a given node.

Parameters

in	<i>nd</i>	Reference to Node instance
----	-----------	--

Returns

Coordinates of node

int Code (const Node & *nd*, size_t *i* = 1)

Return code of a given (degree of freedom of) node.

Parameters

in	<i>nd</i>	Reference to Node instance
in	<i>i</i>	Label of dof [Default: 1]

Returns

Code of dof of node

int Code (const Element & *el*)

Return code of a given element.

Parameters

in	<i>el</i>	Reference to Element instance
----	-----------	---

Returns

Code of element

int Code (const Side & *sd*, size_t *i* = 1)

Return code of a given (degree of freedom of) side.

Parameters

in	<i>sd</i>	Reference to Side instance
in	<i>i</i>	Label of dof [Default: 1]

Returns

Code of dof of side

operator== (const Element & *el1*, const Element & *el2*)

Check equality between 2 elements.

Parameters

in	<i>el1</i>	Reference to first Side instance
in	<i>el2</i>	Reference to second Side instance

Returns

true is elements are equal, *i.e.* if they have the same nodes, false if not.

bool operator== (const Side & *sd1*, const Side & *sd2*)

Check equality between 2 sides.

Parameters

in	<i>sd1</i>	Reference to first Side instance
in	<i>sd2</i>	Reference to second Side instance

Returns

true is sides are equal, *i.e.* if they have the same nodes, false if not.

void DeformMesh (Mesh & *mesh*, const Vect< real.t > & *u*, real.t *a* = 1)

Calculate deformed mesh using a displacement field.

Parameters

in,out	<i>mesh</i>	Mesh instance. On output, node coordinates are modified to take into account the displacement
in	<i>u</i>	Displacement field at nodes
in	<i>a</i>	Amplification factor [Default: 1]. The displacement is multiplied by a before to be added to node coordinates

void DeformMesh (Mesh & *mesh*, const PETScVect< real.t > & *u*, real.t *a* = 1)

Calculate deformed mesh using a displacement field as instance of [PETScVect](#).

Parameters

in,out	<i>mesh</i>	Mesh instance. On output, node coordinates are modified to take into account the displacement
in	<i>u</i>	Displacement field at nodes
in	<i>a</i>	Amplification factor [Default: 1]. The displacement is multiplied by a before to be added to node coordinates

void MeshToMesh (Mesh & *m1*, Mesh & *m2*, const Vect< real.t > & *u1*, Vect< real.t > & *u2*, size.t *nx*, size.t *ny* = 0, size.t *nz* = 0, size.t *dof* = 1)

Function to redefine a vector defined on a mesh to a new mesh.

The program interpolates (piecewise linear) first the vector on a finer structured grid. Then the values on the new mesh nodes are computed.

Remarks

For efficiency the number of grid cells must be large enough so that interpolation provides efficient accuracy

Parameters

in	<i>m1</i>	Reference to the first mesh instance
out	<i>m2</i>	Reference to the second mesh instance
in	<i>u1</i>	Input vector of nodal values defined on first mesh
out	<i>u2</i>	Output vector of nodal values defined on second mesh
in	<i>nx</i>	Number of cells in the x-direction in the fine structured grid
in	<i>ny</i>	Number of cells in the y-direction in the fine structured grid The default value of ny is 0, i.e. a 1-D grid

Parameters

in	<i>nz</i>	Number of cells in the z-direction in the fine structured grid The default value of <i>nz</i> is 0, i.e. a 1-D or 2-D grid
in	<i>dof</i>	Label of degree of freedom of vector <i>u</i> . Only this dof is considered. [Default: 1]

Note

The input vector *u1* is a one degree of freedom per node vector, i.e. its size must be equal (or greater than) the total number of nodes of mesh *m1*. The size of vector *u2* is deduced from the mesh *m2*

The program interpolates (piecewise linear) first the vector on a finer structured grid. Then the values on the new mesh nodes are computed.

Remarks

For efficiency the number of grid cells must be large enough so that interpolation provides efficient accuracy

Parameters

in	<i>u1</i>	Input vector of nodal values defined on first mesh. This vector instance must contain Mesh instance
out	<i>u2</i>	Output vector of nodal values defined on second mesh. This vector instance must contain Mesh instance
in	<i>nx</i>	Number of cells in the x-direction in the fine structured grid
in	<i>ny</i>	Number of cells in the y-direction in the fine structured grid The default value of <i>ny</i> is 0, i.e. a 1-D grid
in	<i>nz</i>	Number of cells in the z-direction in the fine structured grid The default value of <i>nz</i> is 0, i.e. a 1-D or 2-D grid
in	<i>dof</i>	Label of degree of freedom of vector <i>u</i> . Only this dof is considered. [Default: 1]

Note

The input vector *u1* is a one degree of freedom per node vector, i.e. its size must be equal (or greater than) the total number of nodes of mesh *m1*. The size of vector *u2* is deduced from the mesh *m2*

```
void MeshToMesh ( Mesh & m1, Mesh & m2, const Vect< real.t > & u1, Vect< real.t > & u2, const Point< real.t > & xmin, const Point< real.t > & xmax, size.t nx, size.t ny, size.t nz, size.t dof = 1 )
```

Function to redefine a vector defined on a mesh to a new mesh.

The program interpolates (piecewise linear) first the vector on a finer structured grid. Then the values on the new mesh nodes are computed. In this function the grid rectangle is defined so that this one can cover only a submesh of *m1*.

Remarks

For efficiency the number of grid cells must be large enough so that interpolation provides efficient accuracy

Parameters

in	<i>m1</i>	Reference to the first mesh instance
out	<i>m2</i>	Reference to the second mesh instance
in	<i>u1</i>	Input vector of nodal values defined on first mesh
out	<i>u2</i>	Output vector of nodal values defined on second mesh
in	<i>xmin</i>	Point instance containing minimal coordinates of the rectangle that defines the grid
in	<i>xmax</i>	Point instance containing maximal coordinates of the rectangle that defines the grid
in	<i>nx</i>	Number of cells in the x-direction in the fine structured grid
in	<i>ny</i>	Number of cells in the y-direction in the fine structured grid The default value of ny is 0, i.e. a 1-D grid
in	<i>nz</i>	Number of cells in the z-direction in the fine structured grid The default value of nz is 0, i.e. a 1-D or 2-D grid
in	<i>dof</i>	Label of degree of freedom of vector u. Only this dof is considered. [Default: 1]

Note

The input vector *u1* is a one degree of freedom per node vector, i.e. its size must be equal (or greater than) the total number of nodes of mesh *m1*. The size of vector *u2* is deduced from the mesh *m2*

real.t getMaxSize (const Mesh & *m*)

Return maximal size of element edges for given mesh.

Parameters

in	<i>m</i>	Reference to mesh instance
----	----------	----------------------------

real.t getMinSize (const Mesh & *m*)

Return minimal size of element edges for given mesh.

Parameters

in	<i>m</i>	Reference to mesh instance
----	----------	----------------------------

real.t getMinElementMeasure (const Mesh & *m*)

Return minimal measure (length, area or volume) of elements of given mesh.

Return maximal measure (length, area or volume) of elements of given mesh.

Parameters

in	<i>m</i>	Reference to mesh instance
----	----------	----------------------------

real_t getMinSideMeasure (const Mesh & *m*)

Return minimal measure (length or area) of sides of given mesh.

Parameters

in	<i>m</i>	Reference to mesh instance
----	----------	----------------------------

Note

Use this function only if sides are present in the mesh and for 2-D meshes

real_t getMaxSideMeasure (const Mesh & *m*)

Return maximal measure (length or area) of sides of given mesh.

Parameters

in	<i>m</i>	Reference to mesh instance
----	----------	----------------------------

Note

Use this function only if sides are present in the mesh and for 2-D meshes

real_t getMeanElementMeasure (const Mesh & *m*)

Return average measure (length, area or volume) of elements of given mesh.

Parameters

in	<i>m</i>	Reference to mesh instance
----	----------	----------------------------

real_t getMeanSideMeasure (const Mesh & *m*)

Return average measure (length or area) of sides of given mesh.

Parameters

in	<i>m</i>	Reference to mesh instance
----	----------	----------------------------

Note

Use this function only if sides are present in the mesh and for 2-D meshes

void setNodeCodes (Mesh & *m*, const string & *exp*, int *code*, size_t *dof* = 1)

Assign a given code to all nodes satisfying a boolean expression using node coordinates.

Parameters

in	<i>m</i>	Reference to mesh instance
in	<i>exp</i>	Regular expression using x, y, and z coordinates of nodes, according to <code>fparser</code> parser
in	<i>code</i>	Code to assign
in	<i>dof</i>	Degree of freedom for which code is assigned [Default: 1]

void setBoundaryNodeCodes (Mesh & *m*, const string & *exp*, int *code*, size_t *dof* = 1)

Assign a given code to all nodes on boundary that satisfy a boolean expression using node coordinates.

Parameters

in	<i>m</i>	Reference to mesh instance
in	<i>exp</i>	Regular expression using x, y, and z coordinates of nodes, according to <code>fparser</code> parser
in	<i>code</i>	Code to assign
in	<i>dof</i>	Degree of freedom for which code is assigned [Default: 1]

void setSideCodes (Mesh & *m*, const string & *exp*, int *code*, size_t *dof* = 1)

Assign a given code to all sides satisfying a boolean expression using node coordinates.

Parameters

in	<i>m</i>	Reference to mesh instance
in	<i>exp</i>	Regular expression using x, y, and z coordinates of side nodes, according to <code>fparser</code> parser
in	<i>code</i>	Code to assign
in	<i>dof</i>	Degree of freedom for which code is assigned [Default: 1]

void setBoundarySideCodes (Mesh & *m*, const string & *exp*, int *code*, size_t *dof* = 1)

Assign a given code to all sides on boundary that satisfy a boolean expression using node coordinates.

Parameters

in	<i>m</i>	Reference to mesh instance
in	<i>exp</i>	Regular expression using x, y, and z coordinates of side nodes, according to <code>fparser</code> parser
in	<i>code</i>	Code to assign
in	<i>dof</i>	Degree of freedom for which code is assigned [Default: 1]

void setElementCodes (Mesh & *m*, const string & *exp*, int *code*)

Assign a given code to all elements satisfying a boolean expression using node coordinates.

Parameters

in	<i>m</i>	Reference to mesh instance
in	<i>exp</i>	Regular expression using x, y, and z coordinates of element nodes, according to fparser parser
in	<i>code</i>	Code to assign

int NodeInElement (const Node * *nd*, const Element * *el*)

Say if a given node belongs to a given element.

Parameters

in	<i>nd</i>	Pointer to Node
in	<i>el</i>	Pointer to Element

Returns

Local label of the node if this one is found, 0 if not.

int NodeInSide (const Node * *nd*, const Side * *sd*)

Say if a given node belongs to a given side.

Parameters

in	<i>nd</i>	Pointer to Node
in	<i>sd</i>	Pointer to Side

Returns

Local label of the node if this one is found, 0 if not.

int SideInElement (const Side * *sd*, const Element * *el*)

Say if a given side belongs to a given element.

Parameters

in	<i>sd</i>	Pointer to Side
in	<i>el</i>	Pointer to Element

Returns

Local label of the side if this one is found, 0 if not.

5.4 Fluid Dynamics

Fluid Dynamics equations.

Classes

- class [Equa_Fluid](#)< T_, NEN_, NEE_, NSN_, NSE_ >
Abstract class for Fluid Dynamics [Equation](#) classes.
- class [NSP2DQ41](#)
Builds finite element arrays for incompressible Navier-Stokes equations in 2-D domains using Q_1/P_0 element and a penalty formulation for the incompressibility condition.
- class [TINS2DT3B](#)
Builds finite element arrays for thermal diffusion and convection in 2-D domains using 3-Node triangles.

5.4.1 Detailed Description

Fluid Dynamics equations.

5.5 General Purpose Equations

Gathers equation related classes.

Classes

- class [AbsEqua< T_ >](#)
Mother abstract class to describe equation.
- class [Equation< T_, NEN_, NEE_, NSN_, NSE_ >](#)
Abstract class for all equation classes.
- class [Estimator](#)
To calculate an a posteriori estimator of the solution.

Functions

- `template<class T_ , size_t N_ , class E_ >`
`void element_assembly (const E_ &e, const LocalVect< T_ , N_ > &be, Vect< T_ > &b)`
Assemble local vector into global vector.
- `template<class T_ , size_t N_ , class E_ >`
`void element_assembly (const E_ &e, const LocalMatrix< T_ , N_ , N_ > &ae, Vect< T_ > &b)`
Assemble diagonal local vector into global vector.
- `template<class T_ , size_t N_ , class E_ >`
`void element_assembly (const E_ &e, const LocalMatrix< T_ , N_ , N_ > &ae, Matrix< T_ > *A)`
Assemble local matrix into global matrix.
- `template<class T_ , size_t N_ , class E_ >`
`void element_assembly (const E_ &e, const LocalMatrix< T_ , N_ , N_ > &ae, SkMatrix< T_ > &A)`
Assemble local matrix into global skyline matrix.
- `template<class T_ , size_t N_ , class E_ >`
`void element_assembly (const E_ &e, const LocalMatrix< T_ , N_ , N_ > &ae, SkSMatrix< T_ > &A)`
Assemble local matrix into global symmetric skyline matrix.
- `template<class T_ , size_t N_ , class E_ >`
`void element_assembly (const E_ &e, const LocalMatrix< T_ , N_ , N_ > &ae, SpMatrix< T_ > &A)`
Assemble local matrix into global sparse matrix.
- `template<class T_ , size_t N_ >`
`void side_assembly (const Element &e, const LocalMatrix< T_ , N_ , N_ > &ae, SpMatrix< T_ > &A)`
Side assembly of local matrix into global matrix (as instance of class [SpMatrix](#)).
- `template<class T_ , size_t N_ >`
`void side_assembly (const Element &e, const LocalMatrix< T_ , N_ , N_ > &ae, SkSMatrix< T_ > &A)`
Side assembly of local matrix into global matrix (as instance of class [SkSMatrix](#)).
- `template<class T_ , size_t N_ >`
`void side_assembly (const Element &e, const LocalMatrix< T_ , N_ , N_ > &ae, SkMatrix< T_ > &A)`
Side assembly of local matrix into global matrix (as instance of class [SkMatrix](#)).

- `template<class T_, size_t N_>`
`void side_assembly (const Element &e, const LocalVect< T_, N_ > &be, Vect< T_ > &b)`
Side assembly of local vector into global vector.
- `ostream & operator<< (ostream &s, const Estimator &r)`
Output estimator vector in output stream.

5.5.1 Detailed Description

Gathers equation related classes.

5.5.2 Function Documentation

`void element_assembly (const E_ &e, const LocalVect< T_, N_ > &be, Vect< T_ > &b)`

Assemble local vector into global vector.

Parameters

in	<i>e</i>	Reference to local entity (Element or Side)
in	<i>be</i>	Local vector
in,out	<i>b</i>	Global vector

`void element_assembly (const E_ &e, const LocalMatrix< T_, N_, N_ > &ae, Vect< T_ > &b)`

Assemble diagonal local vector into global vector.

Parameters

in	<i>e</i>	Reference to local entity (Element or Side)
in	<i>ae</i>	Local matrix
in,out	<i>b</i>	Global vector

`void element_assembly (const E_ &e, const LocalMatrix< T_, N_, N_ > &ae, Matrix< T_ > *A)`

Assemble local matrix into global matrix.

This function is to be called with an abstract pointer to matrix (class [Matrix](#))

Parameters

in	<i>e</i>	Reference to local entity (Element or Side)
in	<i>ae</i>	Local matrix
in,out	<i>A</i>	Pointer to global matrix

void element_assembly (const E_ & *e*, const LocalMatrix< T_, N_, N_ > & *ae*, SkMatrix< T_ > & *A*)

Assemble local matrix into global skyline matrix.

Parameters

in	<i>e</i>	Reference to local entity (Element or Side)
in	<i>ae</i>	Local matrix
in,out	<i>A</i>	Global matrix

void element_assembly (const E_ & *e*, const LocalMatrix< T_, N_, N_ > & *ae*, SkSMatrix< T_ > & *A*)

Assemble local matrix into global symmetric skyline matrix.

Parameters

in	<i>e</i>	Reference to local entity (Element or Side)
in	<i>ae</i>	Local matrix
in,out	<i>A</i>	Global matrix

void element_assembly (const E_ & *e*, const LocalMatrix< T_, N_, N_ > & *ae*, SpMatrix< T_ > & *A*)

Assemble local matrix into global sparse matrix.

Parameters

in	<i>e</i>	Reference to local entity (Element or Side)
in	<i>ae</i>	Local matrix
in,out	<i>A</i>	Global matrix

void side_assembly (const Element & *e*, const LocalMatrix< T_, N_, N_ > & *ae*, SpMatrix< T_ > & *A*)

Side assembly of local matrix into global matrix (as instance of class [SpMatrix](#)).

Parameters

in	<i>e</i>	Reference to local Element
in	<i>ae</i>	Local matrix
in,out	<i>A</i>	Global matrix

void side_assembly (const Element & e , const LocalMatrix< T_, N_, N_ > & ae , SkSMatrix< T_ > & A)

Side assembly of local matrix into global matrix (as instance of class [SkSMatrix](#)).

Parameters

in	e	Reference to local Element
in	ae	Local matrix
in,out	A	Global matrix

void side_assembly (const Element & e , const LocalMatrix< T_, N_, N_ > & ae , SkMatrix< T_ > & A)

[Side](#) assembly of local matrix into global matrix (as instance of class [SkMatrix](#)).

Parameters

in	e	Reference to local Element
in	ae	Local matrix
in,out	A	Global matrix

void side_assembly (const Element & e , const LocalVect< T_, N_ > & be , Vect< T_ > & b)

Side assembly of local vector into global vector.

Parameters

in	e	Reference to local Element
in	be	Local vector
in,out	b	Global vector

5.6 Global Variables

All global variables in the library.

Variables

- Node * [theNode](#)
A pointer to [Node](#).
- Element * [theElement](#)
A pointer to [Element](#).
- Side * [theSide](#)
A pointer to [Side](#).
- Edge * [theEdge](#)
A pointer to [Edge](#).
- int [theStep](#)
Time step counter.
- int [theIteration](#)
Iteration counter.
- int [NbTimeSteps](#)
Number of time steps.
- int [MaxNbIterations](#)
Maximal number of iterations.
- int [Verbosity](#)
Parameter for verbosity of message outputting.
- [real.t theTimeStep](#)
Time step label.
- [real.t theTime](#)
Time value.
- [real.t theFinalTime](#)
Final time value.
- [real.t theTolerance](#)
Tolerance value for convergence.
- [real.t theDiscrepancy](#)
Value of discrepancy for an iterative procedure Its default value is 1.0.
- bool [Converged](#)
Boolean variable to say if an iterative procedure has converged.
- bool [InitPetsc](#)

5.6.1 Detailed Description

All global variables in the library.

5.6.2 Variable Documentation

Node* [theNode](#)

A pointer to [Node](#).

Useful for loops on nodes

Element* theElement

A pointer to [Element](#).

Useful for loops on elements

Side* theSide

A pointer to [Side](#).

Useful for loops on sides

Edge* theEdge

A pointer to [Edge](#).

Useful for loops on edges

int theStep

Time step counter.

This counter must be initialized by the user if the macro `timeLoop` is not used

Remarks

May be used in conjunction with the macro `TimeLoop`. In this case, it has to be initialized before. Its default value is 1

int theIteration

Iteration counter.

This counter must be initialized by the user

Remarks

May be used in conjunction with the macro `IterationLoop`. Its default value is 1

int NbTimeSteps

Number of time steps.

Remarks

May be used in conjunction with the macro `TimeLoop`.

int MaxNbIterations

Maximal number of iterations.

Remarks

May be used in conjunction with the macro `IterationLoop`. Its default value is 1000

int Verbosity

Parameter for verbosity of message outputting.

Its default value is 1

real t theTimeStep

Time step label.

Remarks

May be used in conjunction with the macro TimeLoop. In this case, it has to be initialized before

real t theTime

Time value.

Remarks

May be used in conjunction with the macro TimeLoop. Its default value is 0.0

real t theFinalTime

Final time value.

Remarks

May be used in conjunction with the macro TimeLoop. In this case, it has to be initialized before

real t theTolerance

Tolerance value for convergence.

Remarks

May be used within an iterative procedure. Its default value is 1.e-8

bool Converged

Boolean variable to say if an iterative procedure has converged.

Its default value is false

bool InitPetsc

Boolean to say if PETSc use was initialized. Useful only if PETSc is used

5.7 Heat Transfer

Heat Transfer equations.

Classes

- class [DC1DL2](#)
Builds finite element arrays for thermal diffusion and convection in 1-D using 2-Node elements.
- class [DC2DT3](#)
Builds finite element arrays for thermal diffusion and convection in 2-D domains using 3-Node triangles.
- class [DC2DT6](#)
Builds finite element arrays for thermal diffusion and convection in 2-D domains using 6-Node triangles.
- class [DC3DAT3](#)
Builds finite element arrays for thermal diffusion and convection in 3-D domains with axisymmetry using 3-Node triangles.
- class [DC3DT4](#)
Builds finite element arrays for thermal diffusion and convection in 3-D domains using 4-Node tetrahedra.
- class [Equa_Therm](#)< T_, NEN_, NEE_, NSN_, NSE_ >
Abstract class for Heat transfer Finite Element classes.
- class [PhaseChange](#)
This class enables defining phase change laws for a given material.

5.7.1 Detailed Description

Heat Transfer equations.

5.8 Input/Output

Input/Output utility classes.

Classes

- class [IOField](#)
Enables working with files in the XML Format.
- class [IPF](#)
To read project parameters from a file in [IPF](#) format.
- class [Prescription](#)
To prescribe various types of data by an algebraic expression. Data may consist in boundary conditions, forces, tractions, fluxes, initial condition. All these data types can be defined through an enumerated variable.

Macros

- `#define MAX_NB_PAR 50`
Maximum number of parameters.
- `#define MAX_ARRAY_SIZE 100`
Maximum array size.
- `#define MAX_INPUT_STRING_LENGTH 100`
Maximum string length.
- `#define FILENAME_LENGTH 150`
Length of a string defining a file name.

5.8.1 Detailed Description

Input/Output utility classes.

5.8.2 Macro Definition Documentation

`#define MAX_NB_PAR 50`

Maximum number of parameters.
Used in class [IPF](#)

`#define MAX_ARRAY_SIZE 100`

Maximum array size.
Used in class [IPF](#)

`#define MAX_INPUT_STRING_LENGTH 100`

Maximum string length.
Used in class [IPF](#)

5.9 Interface Problems

Interface problems, including image processing.

Classes

- class [FastMarching2D](#)
To run a Fast Marching Method on 2-D structured uniform grids.
- class [FMMSolver](#)
The Fast Marching Method solver.

5.9.1 Detailed Description

Interface problems, including image processing.

5.10 Laplace equation

Laplace and Poisson equations.

Classes

- class [Equa.Laplace< T_, NEN_, NEE_, NSN_, NSE_ >](#)
Abstract class for classes about the Laplace equation.
- class [Laplace1DL2](#)
To build element equation for a 1-D elliptic equation using the 2-Node line element (P_1).
- class [Laplace1DL3](#)
To build element equation for the 1-D elliptic equation using the 3-Node line (P_2).
- class [Laplace2DFVT](#)
To build and solve the Laplace equation using a standard Finite Volume method.
- class [Laplace2DMHRT0](#)
To build element equation for the 2-D elliptic equation using the Mixed Hybrid finite element at lowest degree (Raviart-Thomas RT_0).
- class [Laplace2DT3](#)
To build element equation for the Laplace equation using the 2-D triangle element (P_1).
- class [LaplaceDG2DP1](#)
To build and solve the linear system for the Poisson problem using the [DG](#) P_1 2-D triangle element.
- class [SteklovPoincare2DBE](#)
Solver of the Steklov Poincare problem in 2-D geometries using piecewise constant boundary elemen.

5.10.1 Detailed Description

Laplace and Poisson equations.

5.11 OFELI

Modules

- [Conservation Law Equations](#)
Conservation law equations.
- [Electromagnetics](#)
Electromagnetic equations.
- [Finite Element Mesh](#)
Mesh management classes
- [Fluid Dynamics](#)
Fluid Dynamics equations.
- [General Purpose Equations](#)
Gathers equation related classes.
- [Global Variables](#)
All global variables in the library.
- [Heat Transfer](#)
Heat Transfer equations.
- [Input/Output](#)
Input/Output utility classes.
- [Interface Problems](#)
Interface problems, including image processing.
- [Laplace equation](#)
Laplace and Poisson equations.
- [Physical properties of media](#)
Physical properties of materials and media.
- [Porous Media problems](#)
Porous Media equation classes.
- [Shape Function](#)
Shape function classes.
- [Solid Mechanics](#)
Solid Mechanics finite element equations.
- [Solver](#)
Solver functions and classes.
- [Utilities](#)
Utility functions and classes.
- [Vector and Matrix](#)
Vector and matrix classes.

Files

- file [AbsEqua.h](#)
Definition file for abstract class AbsEqua.
- file [ICPG1D.h](#)
Definition file for class ICPG1D.
- file [ICPG2DT.h](#)
Definition file for class ICPG2DT.
- file [ICPG3DT.h](#)

- Definition file for class ICPG3DT.*

 - file [LCL1D.h](#)
- Definition file for class LCL1D.*

 - file [LCL2DT.h](#)
- Definition file for class LCL2DT.*

 - file [LCL3DT.h](#)
- Definition file for class LCL3DT.*

 - file [Muscl.h](#)
- Definition file for class Muscl.*

 - file [Muscl1D.h](#)
- Definition file for class Muscl1D.*

 - file [Muscl2DT.h](#)
- Definition file for class Muscl2DT.*

 - file [Muscl3DT.h](#)
- Definition file for class Muscl3DT.*

 - file [BiotSavart.h](#)
- Definition file for class BiotSavart.*

 - file [EC2D1T3.h](#)
- Definition file for class EC2D1T3.*

 - file [Equa.Electromagnetics.h](#)
- Definition file for class FE_Electromagnetics.*

 - file [HelmholtzBT3.h](#)
- Definition file for class HelmholtzBT3.*

 - file [Equation.h](#)
- Definition file for class Equation.*

 - file [Equa.Fluid.h](#)
- Definition file for class Equa.Fluid.*

 - file [NSP2DQ41.h](#)
- Definition file for class NSP2DQ41.*

 - file [TINS2DT3B.h](#)
- Definition file for class TINS2DT3B.*

 - file [Equa.Laplace.h](#)
- Definition file for class Equa.Laplace.*

 - file [Laplace1DL2.h](#)
- Definition file for class Laplace1DL2.*

 - file [Laplace1DL3.h](#)
- Definition file for class Laplace1DL3.*

 - file [Laplace2DFVT.h](#)
- Definition file for class Laplace.*

 - file [Laplace2DMHRT0.h](#)
- Definition file for class Laplace2DMHRT0.*

 - file [Laplace2DT3.h](#)
- Definition file for class Laplace2DT3.*

 - file [Laplace3DT4.h](#)
- Definition file for class Laplace3DT4.*

 - file [SteklovPoincare2DBE.h](#)

- Definition file for class `SteklovPoincare2DBE`.*
- file [Equa.Porous.h](#)
 - Definition file for class `Equa.Porous`.*
- file [WaterPorous1D.h](#)
 - Definition file for class `WaterPorous1D`.*
- file [WaterPorous2D.h](#)
 - Definition file for class `WaterPorous2D`.*
- file [Bar2DL2.h](#)
 - Definition file for class `Bar2DL2`.*
- file [Beam3DL2.h](#)
 - Definition file for class `Beam3DL2`.*
- file [Elas2DQ4.h](#)
 - Definition file for class `Elas2DQ4`.*
- file [Elas2DT3.h](#)
 - Definition file for class `Elas2DT3`.*
- file [Elas3DH8.h](#)
 - Definition file for class `Elas3DH8`.*
- file [Elas3DT4.h](#)
 - Definition file for class `Elas3DT4`.*
- file [Equa.Solid.h](#)
 - Definition file for class `Equa.Solid`.*
- file [DC1DL2.h](#)
 - Definition file for class `DC1DL2`.*
- file [DC2DT3.h](#)
 - Definition file for class `DC2DT3`.*
- file [DC2DT6.h](#)
 - Definition file for class `DC2DT6`.*
- file [DC3DAT3.h](#)
 - Definition file for class `DC3DAT3`.*
- file [DC3DT4.h](#)
 - Definition file for class `DC3DT4`.*
- file [Equa.Therm.h](#)
 - Definition file for class `Equa.Therm`.*
- file [PhaseChange.h](#)
 - Definition file for class `PhaseChange` and its parent abstract class.*
- file [Funct.h](#)
 - Definition file for class `Funct`.*
- file [IOField.h](#)
 - Definition file for class `IOField`.*
- file [IPF.h](#)
 - Definition file for class `IPF`.*
- file [output.h](#)
 - File that contains some output utility functions.*
- file [Prescription.h](#)
 - Definition file for class `Prescription`.*
- file [saveField.h](#)

- *Prototypes for functions to save mesh in various file formats.*
• file [saveField.h](#)
- *Prototypes for functions to save mesh in various file formats.*
• file [Tabulation.h](#)
- *Definition file for class Tabulation.*
• file [UserData.h](#)
- *Definition file for abstract class UserData.*
• file [BMatrix.h](#)
- *Definition file for class BMatrix.*
• file [DMatrix.h](#)
- *Definition file for class DMatrix.*
• file [DSMatrix.h](#)
- *Definition file for abstract class DSMatrix.*
• file [LocalMatrix.h](#)
- *Definition file for class LocalMatrix.*
• file [LocalVect.h](#)
- *Definition file for class LocalVect.*
• file [Matrix.h](#)
- *Definition file for abstract class Matrix.*
• file [PETScMatrix.h](#)
- *Definition file for class PETScMatrix.*
• file [Point.h](#)
- *Definition file and implementation for class Point.*
• file [Point2D.h](#)
- *Definition file for class Point2D.*
• file [SkMatrix.h](#)
- *Definition file for class SkMatrix.*
• file [SkSMatrix.h](#)
- *Definition file for class SkSMatrix.*
• file [SpMatrix.h](#)
- *Definition file for class SpMatrix.*
• file [TrMatrix.h](#)
- *Definition file for class TrMatrix.*
• file [Domain.h](#)
- *Definition file for class Domain.*
• file [Edge.h](#)
- *Definition file for class Edge.*
• file [Element.h](#)
- *Definition file for class Element.*
• file [Figure.h](#)
- *Definition file for figure classes.*
• file [getMesh.h](#)
- *Definition file for mesh conversion functions.*
• file [Grid.h](#)
- *Definition file for class Grid.*
• file [Material.h](#)

- Definition file for class Material.*
- file [Mesh.h](#)
 - Definition file for class Mesh.*
- file [MeshAdapt.h](#)
 - Definition file for class MeshAdapt.*
- file [MeshExtract.h](#)
 - Definition file for classes for extracting submeshes.*
- file [MeshUtil.h](#)
 - Definitions of utility functions for meshes.*
- file [Node.h](#)
 - Definition file for class Node.*
- file [saveMesh.h](#)
 - Prototypes for functions to save mesh in various file formats.*
- file [Side.h](#)
 - Definition file for class Side.*
- file [FEShape.h](#)
 - Definition file for class FEShape.*
- file [Hexa8.h](#)
 - Definition file for class Hexa8.*
- file [Line2.h](#)
 - Definition file for class Line2.*
- file [Line2H.h](#)
 - Definition file for class Line2H.*
- file [Line3.h](#)
 - Definition file for class Line3.*
- file [Penta6.h](#)
 - Definition file for class Penta6.*
- file [Quad4.h](#)
 - Definition file for class Quad4.*
- file [Tetra4.h](#)
 - Definition file for class Tetra4.*
- file [Triang3.h](#)
 - Definition file for class Triang3.*
- file [Triang6S.h](#)
 - Definition file for class Triang6S.*
- file [BiCG.h](#)
 - Solves an unsymmetric linear system of equations using the BiConjugate Gradient method.*
- file [BSpline.h](#)
 - Function to perform a B-spline interpolation.*
- file [CG.h](#)
 - Functions to solve a symmetric positive definite linear system of equations using the Conjugate Gradient method.*
- file [CGS.h](#)
 - Solves an unsymmetric linear system of equations using the Conjugate Gradient Squared method.*
- file [EigenProblemSolver.h](#)
 - Definition file for class EigenProblemSolver.*
- file [GMRes.h](#)

- *Function to solve a linear system of equations using the Generalized Minimum Residual method.*
• file [GS.h](#)
- *Function to solve a linear system of equations using the Gauss-Seidel method.*
• file [Jacobi.h](#)
- *Function to solve a linear system of equations using the Jacobi method.*
• file [MyOpt.h](#)
- *Definition file for abstract class MyOpt.*
• file [ODESolver.h](#)
- *Definition file for class ODESolver.*
• file [Prec.h](#)
- *Definition file for preconditioning classes.*
• file [Richardson.h](#)
- *Function to solve a linear system of equations using the Richardson method.*
• file [SSOR.h](#)
- *Function to solve a linear system of equations using the Symmetric Successive Over Relaxation method.*
• file [TimeStepping.h](#)
- *Definition file for class TimeStepping.*
• file [constants.h](#)
- *File that contains some widely used constants.*
• file [Gauss.h](#)
- *Definition file for struct Gauss.*
• file [qksort.h](#)
- *File that contains template quick sorting function.*
• file [Timer.h](#)
- *Definition file for class Timer.*
• file [util.h](#)
- *File that contains various utility functions.*

Classes

- class [SkMatrix< T_ >](#)
To handle square matrices in skyline storage format.
- class [SkSMatrix< T_ >](#)
To handle symmetric matrices in skyline storage format.
- class [SpMatrix< T_ >](#)
To handle matrices in sparse storage format.
- class [AbsEqua< T_ >](#)
Mother abstract class to describe equation.
- class [LocalVect< T_, N_ >](#)
Handles small size vectors like element vectors.
- class [ICPG1D](#)
Class to solve the Inviscid compressible fluid flows (Euler equations) for perfect gas in 1-D.
- class [ICPG2DT](#)
Class to solve the Inviscid compressible fluid flows (Euler equations) for perfect gas in 2-D.
- class [ICPG3DT](#)
Class to solve the Inviscid compressible fluid flows (Euler equations) for perfect gas in 3-D.
- class [LCL1D](#)

- Class to solve the linear conservation law (Hyperbolic equation) in 1-D by a MUSCL Finite Volume scheme.*

 - class [LCL2DT](#)
- Class to solve the linear hyperbolic equation in 2-D by a MUSCL Finite Volume scheme on triangles.*

 - class [LCL3DT](#)
- Class to solve the linear conservation law equation in 3-D by a MUSCL Finite Volume scheme on tetrahedra.*

 - class [Muscl](#)
- Parent class for hyperbolic solvers with Muscl scheme.*

 - class [Vect< T_ >](#)
- To handle general purpose vectors.*

 - class [Muscl1D](#)
- Class for 1-D hyperbolic solvers with [Muscl](#) scheme.*

 - class [Muscl2DT](#)
- Class for 2-D hyperbolic solvers with [Muscl](#) scheme.*

 - class [Muscl3DT](#)
- Class for 3-D hyperbolic solvers with [Muscl](#) scheme using tetrahedra.*

 - class [BiotSavart](#)
- Class to compute the magnetic induction from the current density using the Biot-Savart formula.*

 - class [EC2D1T3](#)
- Eddy current problems in 2-D domains using solenoidal approximation.*

 - class [Equa_Electromagnetics< T_, NEN_, NEE_, NSN_, NSE_ >](#)
- Abstract class for Electromagnetics [Equation](#) classes.*

 - class [HelmholtzBT3](#)
- Builds finite element arrays for Helmholtz equations in a bounded media using 3-Node triangles.*

 - class [Equation< T_, NEN_, NEE_, NSN_, NSE_ >](#)
- Abstract class for all equation classes.*

 - class [Equa_Fluid< T_, NEN_, NEE_, NSN_, NSE_ >](#)
- Abstract class for Fluid Dynamics [Equation](#) classes.*

 - class [NSP2DQ41](#)
- Builds finite element arrays for incompressible Navier-Stokes equations in 2-D domains using Q_1/P_0 element and a penalty formulation for the incompressibility condition.*

 - class [TINS2DT3B](#)
- Builds finite element arrays for thermal diffusion and convection in 2-D domains using 3-Node triangles.*

 - class [FastMarching2D](#)
- To run a Fast Marching Method on 2-D structured uniform grids.*

 - class [FMM2D](#)
- class for the fast marching 2-D algorithm*

 - class [FMM3D](#)
- class for the 3-D fast marching algorithm*

 - class [FMMSolver](#)
- The Fast Marching Method solver.*

 - class [Equa_Laplace< T_, NEN_, NEE_, NSN_, NSE_ >](#)
- Abstract class for classes about the Laplace equation.*

 - class [Laplace1DL2](#)
- To build element equation for a 1-D elliptic equation using the 2-Node line element (P_1).*

 - class [Laplace1DL3](#)
- To build element equation for the 1-D elliptic equation using the 3-Node line (P_2).*

 - class [Laplace2DFVT](#)

- To build and solve the Laplace equation using a standard Finite Volume method.*

 - class [Laplace2DMHRT0](#)

To build element equation for the 2-D elliptic equation using the Mixed Hybrid finite element at lowest degree (Raviart-Thomas RT_0).
 - class [Laplace2DT3](#)

To build element equation for the Laplace equation using the 2-D triangle element (P_1).
 - class [SteklovPoincare2DBE](#)

Solver of the Steklov Poincare problem in 2-D geometries using piecewise constant boundary elemen.
 - class [Equa_Porous](#)< [T_](#), [NEN_](#), [NEE_](#), [NSN_](#), [NSE_](#) >

Abstract class for Porous Media Finite Element classes.
 - class [WaterPorous2D](#)

To solve water flow equations in porous media (1-D)
 - class [Bar2DL2](#)

To build element equations for Planar Elastic Bar element with 2 DOF (Degrees of Freedom) per node.
 - class [Beam3DL2](#)

To build element equations for 3-D beam equations using 2-node lines.
 - class [Elas2DQ4](#)

To build element equations for 2-D linearized elasticity using 4-node quadrilaterals.
 - class [Elas2DT3](#)

To build element equations for 2-D linearized elasticity using 3-node triangles.
 - class [Elas3DH8](#)

To build element equations for 3-D linearized elasticity using 8-node hexahedra.
 - class [Elas3DT4](#)

To build element equations for 3-D linearized elasticity using 4-node tetrahedra.
 - class [Equa_Solid](#)< [T_](#), [NEN_](#), [NEE_](#), [NSN_](#), [NSE_](#) >

Abstract class for Solid Mechanics Finite Element classes.
 - class [DC1DL2](#)

Builds finite element arrays for thermal diffusion and convection in 1-D using 2-Node elements.
 - class [DC2DT3](#)

Builds finite element arrays for thermal diffusion and convection in 2-D domains using 3-Node triangles.
 - class [DC2DT6](#)

Builds finite element arrays for thermal diffusion and convection in 2-D domains using 6-Node triangles.
 - class [DC3DAT3](#)

Builds finite element arrays for thermal diffusion and convection in 3-D domains with axisymmetry using 3-Node triangles.
 - class [DC3DT4](#)

Builds finite element arrays for thermal diffusion and convection in 3-D domains using 4-Node tetrahedra.
 - class [Equa_Therm](#)< [T_](#), [NEN_](#), [NEE_](#), [NSN_](#), [NSE_](#) >

Abstract class for Heat transfer Finite Element classes.
 - class [PhaseChange](#)

This class enables defining phase change laws for a given material.
 - class [Funct](#)

A simple class to parse real valued functions.
 - class [IOField](#)

Enables working with files in the XML Format.
 - class [IPF](#)

To read project parameters from a file in [IPF](#) format.

- class [Prescription](#)
To prescribe various types of data by an algebraic expression. Data may consist in boundary conditions, forces, tractions, fluxes, initial condition. All these data types can be defined through an enumerated variable.
- class [Tabulation](#)
To read and manipulate tabulated functions.
- class [UserData< T_ >](#)
Abstract class to define by user various problem data.
- class [BMatrix< T_ >](#)
To handle band matrices.
- class [DMatrix< T_ >](#)
To handle dense matrices.
- class [DSMatrix< T_ >](#)
To handle symmetric dense matrices.
- class [LocalMatrix< T_, NR_, NC_ >](#)
Handles small size matrices like element matrices, with a priori known size.
- class [Matrix< T_ >](#)
Virtual class to handle matrices for all storage formats.
- class [PETScVect< T_ >](#)
To handle general purpose vectors using Petsc.
- class [PETScMatrix< T_ >](#)
To handle matrices in sparse storage format using the Petsc library.
- class [PETScWrapper< T_ >](#)
This class is a wrapper to be used when the library Petsc is installed and used with OFELI.
- class [Point< T_ >](#)
Defines a point with arbitrary type coordinates.
- class [Point2D< T_ >](#)
Defines a 2-D point with arbitrary type coordinates.
- class [Prec< T_ >](#)
To set a preconditioner.
- class [TrMatrix< T_ >](#)
To handle tridiagonal matrices.
- class [Domain](#)
To store and treat finite element geometric information.
- class [Edge](#)
To describe an edge.
- class [Element](#)
To store and treat finite element geometric information.
- class [Figure](#)
To store and treat a figure (or shape) information.
- class [Rectangle](#)
To store and treat a rectangular figure.
- class [Brick](#)
To store and treat a brick (parallelepiped) figure.
- class [Circle](#)
To store and treat a circular figure.
- class [Sphere](#)

- To store and treat a sphere.*
- class [Ellipse](#)
 - To store and treat an ellipsoidal figure.*
- class [Triangle](#)
 - To store and treat a triangle.*
- class [Polygon](#)
 - To store and treat a polygonal figure.*
- class [Grid](#)
 - To manipulate structured grids.*
- class [Material](#)
 - To treat material data. This class enables reading material data in material data files. It also returns these informations by means of its members.*
- class [Mesh](#)
 - To store and manipulate finite element meshes.*
- class [MeshAdapt](#)
 - To adapt mesh in function of given solution.*
- class [NodeList](#)
 - Class to construct a list of nodes having some common properties.*
- class [ElementList](#)
 - Class to construct a list of elements having some common properties.*
- class [SideList](#)
 - Class to construct a list of sides having some common properties.*
- class [EdgeList](#)
 - Class to construct a list of edges having some common properties.*
- class [Node](#)
 - To describe a node.*
- class [Partition](#)
 - To partition a finite element mesh into balanced submeshes.*
- class [Side](#)
 - To store and treat finite element sides (edges in 2-D or faces in 3-D)*
- class [FEShape](#)
 - Parent class from which inherit all finite element shape classes.*
- class [triangle](#)
 - Defines a triangle. The reference element is the rectangle triangle with two unit edges.*
- class [Hexa8](#)
 - Defines a three-dimensional 8-node hexahedral finite element using Q_1 -isoparametric interpolation.*
- class [Line2](#)
 - To describe a 2-Node planar line finite element.*
- class [Line2H](#)
 - To describe a 2-Node Hermite planar line finite element.*
- class [Line3](#)
 - To describe a 3-Node quadratic planar line finite element.*
- class [Penta6](#)
 - Defines a 6-node pentahedral finite element using P_1 interpolation in local coordinates $(s.x, s.y)$ and Q_1 isoparametric interpolation in local coordinates $(s.x, s.z)$ and $(s.y, s.z)$.*
- class [Quad4](#)
 - Defines a 4-node quadrilateral finite element using Q_1 isoparametric interpolation.*

- class [Tetra4](#)
Defines a three-dimensional 4-node tetrahedral finite element using P_1 interpolation.
- class [Triang3](#)
Defines a 3-Node (P_1) triangle.
- class [Triang6S](#)
Defines a 6-Node straight triangular finite element using P_2 interpolation.
- class [EigenProblemSolver](#)
Class to find eigenvalues and corresponding eigenvectors of a given matrix in a generalized eigenproblem, i.e. Find scalars l and non-null vectors v such that $[K]\{v\} = l[M]\{v\}$ where $[K]$ and $[M]$ are symmetric matrices. The eigenproblem can be originated from a PDE. For this, we will refer to the matrices K and M as Stiffness and Mass matrices respectively.
- class [Iter< T_ >](#)
Class to drive an iterative process.
- class [LinearSolver< T_ >](#)
Class to solve systems of linear equations by iterative methods.
- class [MyOpt](#)
Abstract class to define by user specified optimization function.
- class [ODESolver](#)
To solve a system of ordinary differential equations.
- class [TimeStepping](#)
To solve time stepping problems, i.e. systems of linear ordinary differential equations of the form $[A2]\{y''\} + [A1]\{y'\} + [A0]\{y\} = \{b\}$.
- class [Gauss](#)
Calculate data for Gauss integration.
- class [Timer](#)
To handle elapsed time counting.

Enumerations

Functions

- $T_ * \text{A} ()$
Return element matrix.
- $T_ * \text{b} ()$
Return element right-hand side.
- $T_ * \text{Prev} ()$
Return element previous vector.
- [IOField](#) ()
Default constructor.
- [IOField](#) (const string &file, AccessType access, bool compact=true)
Constructor using file name.
- [IOField](#) (const string &mesh.file, const string &file, Mesh &ms, AccessType access, bool compact=true)
Constructor using file name, mesh file and mesh.
- [IOField](#) (const string &file, Mesh &ms, AccessType access, bool compact=true)
Constructor using file name and mesh.
- [IOField](#) (const string &file, AccessType access, const string &name)
Constructor using file name and field name.

- `~IOField ()`
Destructor.
- `void setMeshFile (const string &file)`
Set mesh file.
- `void open ()`
Open file.
- `void open (const string &file, AccessType access)`
Open file.
- `void close ()`
Close file.
- `void put (Mesh &ms)`
Store mesh in file.
- `void put (const Vect< real_t > &v)`
Store Vect instance v in file.
- `void put (const PETScVect< real_t > &v)`
Store PETScVect instance v in file.
- `real_t get (Vect< real_t > &v)`
Get Vect v instance from file.
- `int get (Vect< real_t > &v, const string &name)`
Get Vect v instance from file if the field has the given name.
- `int get (DMatrix< real_t > &A, const string &name)`
Get DMatrix A instance from file if the field has the given name.
- `int get (DSMatrix< real_t > &A, const string &name)`
Get DSMatrix A instance from file if the field has the given name.
- `int get (Vect< real_t > &v, real_t t)`
Get Vect v instance from file corresponding to a specific time value.
- `void saveGMSH (string output_file, string mesh_file)`
Save field vectors in a file using GMSH format.
- `Tabulation ()`
Default constructor.
- `Tabulation (string file)`
Constructor using file name.
- `~Tabulation ()`
Destructor.
- `void setFile (string file)`
Set file name.
- `real_t getValue (string funct, real_t v)`
Return the calculated value of the function.
- `real_t getDerivative (string funct, real_t v)`
Return the derivative of the function at a given point.
- `real_t getValue (string funct, real_t v1, real_t v2)`
Return the calculated value of the function.
- `real_t getValue (string funct, real_t v1, real_t v2, real_t v3)`
Return the calculated value of the function.
- `Point< double > CrossProduct (const Point< double > &lp, const Point< double > &rp)`
Return Cross product of two vectors lp and rp

- `Grid ()`
Construct a default grid with 10 intervals in each direction.
- `Grid (real.t xm, real.t xM, size.t npx)`
Construct a 1-D structured grid given its extremal coordinates and number of intervals.
- `Grid (real.t xm, real.t xM, real.t ym, real.t yM, size.t npx, size.t npy)`
Construct a 2-D structured grid given its extremal coordinates and number of intervals.
- `Grid (Point< real.t > m, Point< real.t > M, size.t npx, size.t npy)`
Construct a 2-D structured grid given its extremal coordinates and number of intervals.
- `Grid (real.t xm, real.t xM, real.t ym, real.t yM, real.t zm, real.t zM, size.t npx, size.t npy, size.t npz)`
Construct a 3-D structured grid given its extremal coordinates and number of intervals.
- `Grid (Point< real.t > m, Point< real.t > M, size.t npx, size.t npy, size.t npz)`
Construct a 3-D structured grid given its extremal coordinates and number of intervals.
- `void setXMin (const Point< real.t > &x)`
Set min. coordinates of the domain.
- `void setXMax (const Point< real.t > &x)`
- `void setDomain (real.t xmin, real.t xmax)`
Set Dimensions of the domain: 1-D case.
- `void setDomain (real.t xmin, real.t xmax, real.t ymin, real.t ymax)`
Set Dimensions of the domain: 2-D case.
- `void setDomain (real.t xmin, real.t xmax, real.t ymin, real.t ymax, real.t zmin, real.t zmax)`
Set Dimensions of the domain: 3-D case.
- `void setDomain (Point< real.t > xmin, Point< real.t > xmax)`
Set Dimensions of the domain: 3-D case.
- `const Point< real.t > &getXMin () const`
Return min. Coordinates of the domain.
- `const Point< real.t > &getXMax () const`
Return max. Coordinates of the domain.
- `void setN (size.t nx, size.t ny=0, size.t nz=0)`
Set number of grid intervals in the x, y and z-directions.
- `size.t getNx () const`
Return number of grid intervals in the x-direction.
- `size.t getNy () const`
Return number of grid intervals in the y-direction.
- `size.t getNz () const`
Return number of grid intervals in the z-direction.
- `real.t getHx () const`
Return grid size in the x-direction.
- `real.t getHy () const`
Return grid size in the y-direction.
- `real.t getHz () const`
Return grid size in the z-direction.
- `Point< real.t > getCoord (size.t i) const`
Return coordinates a point with label i in a 1-D grid.
- `Point< real.t > getCoord (size.t i, size.t j) const`
Return coordinates a point with label (i, j) in a 2-D grid.
- `Point< real.t > getCoord (size.t i, size.t j, size.t k) const`

- Return coordinates a point with label (i, j, k) in a 3-D grid.*

 - `real_t getX (size_t i) const`
Return x-coordinate of point with index i
 - `real_t getY (size_t j) const`
Return y-coordinate of point with index j
 - `real_t getZ (size_t k) const`
Return z-coordinate of point with index k
 - `Point2D< real_t > getXY (size_t i, size_t j) const`
Return coordinates of point with indices (i, j)
 - `Point< real_t > getXYZ (size_t i, size_t j, size_t k) const`
Return coordinates of point with indices (i, j, k)
 - `real_t getCenter (size_t i) const`
Return coordinates of center of a 1-D cell with indices $i, i+1$
 - `Point< real_t > getCenter (size_t i, size_t j) const`
Return coordinates of center of a 2-D cell with indices $(i, j), (i+1, j), (i+1, j+1), (i, j+1)$
 - `Point< real_t > getCenter (size_t i, size_t j, size_t k) const`
Return coordinates of center of a 3-D cell with indices $(i, j, k), (i+1, j, k), (i+1, j+1, k), (i, j+1, k), (i, j, k+1), (i+1, j, k+1), (i+1, j+1, k+1), (i, j+1, k+1)$
 - `void setCode (string exp, int code)`
Set a code for some grid points.
 - `void setCode (int side, int code)`
Set a code for grid points on sides.
 - `int getCode (int side) const`
Return code for a side number.
 - `int getCode (size_t i, size_t j) const`
Return code for a grid point.
 - `int getCode (size_t i, size_t j, size_t k) const`
Return code for a grid point.
 - `size_t getDim () const`
Return space dimension.
 - `void Deactivate (size_t i)`
Change state of a cell from active to inactive (1-D grid)
 - `void Deactivate (size_t i, size_t j)`
Change state of a cell from active to inactive (2-D grid)
 - `void Deactivate (size_t i, size_t j, size_t k)`
Change state of a cell from active to inactive (2-D grid)
 - `int isActive (size_t i) const`
Say if cell is active or not (1-D grid)
 - `int isActive (size_t i, size_t j) const`
Say if cell is active or not (2-D grid)
 - `int isActive (size_t i, size_t j, size_t k) const`
Say if cell is active or not (3-D grid)
 - `ostream & operator<< (ostream &s, const Grid &g)`
Output grid data.
 - `BMatrix ()`
Default constructor.
 - `BMatrix (size_t size, int ld, int ud)`

- Constructor that for a band matrix with given size and bandwidth.

 - **BMatrix** (const BMatrix &m)
Copy Constructor.
 - void **setSize** (size_t size, int ld, int ud)
Set size (number of rows) and storage of matrix.
 - void **MultAdd** (const Vect< T_ > &x, Vect< T_ > &y) const
Multiply matrix by vector x and add result to y
 - void **MultAdd** (T_ a, const Vect< T_ > &x, Vect< T_ > &y) const
Multiply matrix by vector $a*x$ and add result to y
 - void **Mult** (const Vect< T_ > &x, Vect< T_ > &y) const
Multiply matrix by vector x and save result in y
 - void **TMult** (const Vect< T_ > &x, Vect< T_ > &y) const
Multiply transpose of matrix by vector x and save result in y
 - void **Axpy** (T_ a, const BMatrix< T_ > &x)
Add to matrix the product of a matrix by a scalar.
 - void **Axpy** (T_ a, const Matrix< T_ > *x)
Add to matrix the product of a matrix by a scalar.
 - void **set** (size_t i, size_t j, const T_ &val)
Add constant val to an entry (i, j) of the matrix.
 - void **add** (size_t i, size_t j, const T_ &val)
Add constant val value to an entry (i, j) of the matrix.
 - T_ **operator()** (size_t i, size_t j) const
Operator $()$ (Constant version).
 - T_ & **operator()** (size_t i, size_t j)
Operator $()$ (Non constant version).
 - BMatrix< T_ > & **operator=** (const BMatrix< T_ > &m)
Operator $=$.
 - BMatrix< T_ > & **operator=** (const T_ &x)
Operator $=$ Assign matrix to identity times x .
 - BMatrix< T_ > & **operator*=** (const T_ &x)
Operator $*=$.
 - BMatrix< T_ > & **operator+=** (const T_ &x)
Operator $+=$.
 - int **setLU** ()
Factorize the matrix (LU factorization)
 - int **solve** (Vect< T_ > &b)
Solve linear system.
 - int **solve** (const Vect< T_ > &b, Vect< T_ > &x)
Solve linear system.
 - T_ **get** (size_t i, size_t j) const
Return entry (i, j) of matrix.
 - **DSMatrix** ()
Default constructor.
 - **DSMatrix** (size_t dim)
Constructor that for a symmetric matrix with given number of rows.
 - **DSMatrix** (const DSMatrix< T_ > &m)

- *Copy Constructor.*
- void **setDiag** ()
Store diagonal entries in a separate internal vector.
- void **setSize** (size_t dim)
Set size (number of rows) of matrix.
- void **set** (size_t i, size_t j, const T_ &val)
Assign constant to entry (i, j) of the matrix.
- void **setDiag** (const T_ &a)
Set matrix as diagonal and assign its diagonal entries as a constant.
- void **setDiag** (const vector< T_ > &d)
Set matrix as diagonal and assign its diagonal entries.
- void **add** (size_t i, size_t j, const T_ &val)
Add constant to an entry of the matrix.
- T_ **operator()** (size_t i, size_t j) const
Operator () (Constant version).
- T_ & **operator()** (size_t i, size_t j)
Operator () (Non constant version).
- DSMatrix & **operator+=** (const T_ &x)
Operator +=.
- DSMatrix & **operator-=** (const T_ &x)
Operator -=.
- DSMatrix< T_ > & **operator=** (const DSMatrix< T_ > &m)
Operator = Copy matrix m to current matrix instance.
- DSMatrix< T_ > & **operator=** (const T_ &x)
Operator = Assign matrix to identity times x.
- int **setLDLt** ()
Factorize matrix (LDL^T)
- void **getColumn** (size_t j, Vect< T_ > &v) const
Get j-th column vector.
- Vect< T_ > **getColumn** (size_t j) const
Get j-th column vector.
- void **setColumn** (size_t i, const Vect< T_ > &v)
Copy a given vector to a prescribed column in the matrix.
- void **getRow** (size_t i, Vect< T_ > &v) const
Get i-th row vector.
- Vect< T_ > **getRow** (size_t i) const
Get i-th row vector.
- void **setRow** (size_t i, const Vect< T_ > &v)
Copy a given vector to a prescribed row in the matrix.
- void **MultAdd** (const Vect< T_ > &x, Vect< T_ > &y) const
*Multiply matrix by vector $a*x$ and add result to y.*
- void **MultAdd** (T_ a, const Vect< T_ > &x, Vect< T_ > &y) const
*Multiply matrix by vector $a*x$ and add to y.*
- void **Mult** (const Vect< T_ > &x, Vect< T_ > &y) const
Multiply matrix by vector x and save result in y.
- void **TMult** (const Vect< T_ > &x, Vect< T_ > &y) const

- Multiply transpose of matrix by vector x and add result in y .*

 - `int solve (Vect< T_ > &b)`
Solve linear system.
 - `int solve (const Vect< T_ > &b, Vect< T_ > &x)`
Solve linear system.
 - `T_ get (size_t i, size_t j) const`
Return entry (i, j) of matrix.
 - `void Axy (T_ a, const DSMatrix< T_ > &m)`
Add to matrix the product of a matrix by a scalar.
 - `void Axy (T_ a, const Matrix< T_ > *m)`
Add to matrix the product of a matrix by a scalar.
 - `LocalMatrix ()`
Default constructor.
 - `LocalMatrix (const LocalMatrix< T_, NR_, NC_ > &m)`
Copy constructor.
 - `LocalMatrix (Element *el, const SpMatrix< T_ > &a)`
Constructor of a local matrix associated to element from a [SpMatrix](#).
 - `LocalMatrix (Element *el, const SkMatrix< T_ > &a)`
Constructor of a local matrix associated to element from a [SkMatrix](#).
 - `LocalMatrix (Element *el, const SkSMatrix< T_ > &a)`
Constructor of a local matrix associated to element from a [SkSMatrix](#).
 - `void Localize (Element *el, const SpMatrix< T_ > &a)`
Initialize matrix as element matrix from global [SpMatrix](#).
 - `void Localize (Element *el, const SkMatrix< T_ > &a)`
Initialize matrix as element matrix from global [SkMatrix](#).
 - `void Localize (Element *el, const SkSMatrix< T_ > &a)`
Initialize matrix as element matrix from global [SkSMatrix](#).
 - `LocalMatrix< T_, NR_, NC_ > & operator= (const LocalMatrix< T_, NR_, NC_ > &m)`
Operator =
 - `LocalMatrix< T_, NR_, NC_ > & operator= (const T_ &x)`
Operator =
 - `LocalMatrix< T_, NR_, NC_ > & operator+= (const LocalMatrix< T_, NR_, NC_ > &m)`
Operator +=
 - `LocalMatrix< T_, NR_, NC_ > & operator-= (const LocalMatrix< T_, NR_, NC_ > &m)`
Operator -=
 - `LocalVect< T_, NR_ > operator* (LocalVect< T_, NR_ > &x)`
*Operator **
 - `LocalMatrix< T_, NR_, NC_ > & operator+= (const T_ &x)`
Operator +=
 - `LocalMatrix< T_, NR_, NC_ > & operator-= (const T_ &x)`
Operator -=
 - `LocalMatrix< T_, NR_, NC_ > & operator*= (const T_ &x)`
*Operator *=*
 - `LocalMatrix< T_, NR_, NC_ > & operator/= (const T_ &x)`
Operator /=
 - `void MultAdd (const LocalVect< T_, NC_ > &x, LocalVect< T_, NR_ > &y)`

- Multiply matrix by vector and add result to vector.*

 - void **MultAddScal** (const T_ &a, const LocalVect< T_, NC_ > &x, LocalVect< T_, NR_ > &y)

Multiply matrix by scaled vector and add result to vector.

 - void **Mult** (const LocalVect< T_, NC_ > &x, LocalVect< T_, NR_ > &y)

Multiply matrix by vector.

 - void **Symmetrize** ()

Symmetrize matrix.

 - int **Factor** ()

Factorize matrix.

 - int **Solve** (LocalVect< T_, NR_ > &b)

Forward and backsubstitute to solve a linear system.

 - int **FactorAndSolve** (LocalVect< T_, NR_ > &b)

Factorize matrix and solve linear system.

 - void **Invert** (LocalMatrix< T_, NR_, NC_ > &A)

Calculate inverse of matrix.

 - T_ **getInnerProduct** (const LocalVect< T_, NC_ > &x, const LocalVect< T_, NR_ > &y)

Calculate inner product with respect to matrix.

 - **LocalVect** ()

Default constructor.

 - **LocalVect** (const T_ *a)

Constructor using a C-array.

 - **LocalVect** (const Element *el)

*Constructor using **Element** pointer.*

 - **LocalVect** (const Side *sd)

*Constructor using **Side** pointer.*

 - **LocalVect** (const LocalVect< T_, N_ > &v)

Copy constructor.

 - **LocalVect** (const Element *el, const Vect< T_ > &v, int opt=0)

*Constructor of an element vector from a global **Vect** instance.*

 - **LocalVect** (const Side *sd, const Vect< T_ > &v, int opt=0)

*Constructor of a side vector from a global **Vect** instance.*

 - void **getLocal** (const Element &el, const Vect< T_ > &v, int type)

*Localize an element vector from a global **Vect** instance.*

 - void **Localize** (const Element *el, const Vect< T_ > &v, size_t k=0)

*Localize an element vector from a global **Vect** instance.*

 - void **Localize** (const Side *sd, const Vect< T_ > &v, size_t k=0)

*Localize a side vector from a global **Vect** instance.*

 - LocalVect< T_, N_ > & **operator=** (const LocalVect< T_, N_ > &v)

Operator =

 - LocalVect< T_, N_ > & **operator=** (const T_ &x)

Operator =

 - LocalVect< T_, N_ > & **operator+=** (const LocalVect< T_, N_ > &v)

Operator +=

 - LocalVect< T_, N_ > & **operator+=** (const T_ &a)

Operator +=

 - LocalVect< T_, N_ > & **operator-=** (const LocalVect< T_, N_ > &v)

- Operator -=*
- LocalVect< T₋, N₋ > & **operator-=** (const T₋ &a)
- Operator -=*
- LocalVect< T₋, N₋ > & **operator*=** (const T₋ &a)
- Operator *=*
- LocalVect< T₋, N₋ > & **operator/=** (const T₋ &a)
- Operator /=*
- T₋ **operator**, (const LocalVect< T₋, N₋ > &v) const
- Return Dot (scalar) product of two vectors.*
- **SkSMatrix** ()
- Default constructor.*
- **SkSMatrix** (size_t size, int is_diagonal=false)
- Constructor that initializes a dense symmetric matrix.*
- **SkSMatrix** (Mesh &mesh, size_t dof=0, int is_diagonal=false)
- Constructor using mesh to initialize skyline structure of matrix.*
- **SkSMatrix** (const Vect< size_t > &ColHt)
- Constructor that initializes skyline structure of matrix using vector of column height.*
- **SkSMatrix** (const Vect< size_t > &I, const Vect< size_t > &J, int opt=1)
- Constructor for a square matrix using non zero row and column indices.*
- **SkSMatrix** (const Vect< size_t > &I, const Vect< size_t > &J, const Vect< T₋ > &a, int opt=1)
- Constructor for a square matrix using non zero row and column indices.*
- **SkSMatrix** (const SkSMatrix< T₋ > &m)
- Copy Constructor.*
- void **setMesh** (Mesh &mesh, size_t dof=0)
- Determine mesh graph and initialize matrix.*
- void **setSkyline** (Mesh &mesh)
- Determine matrix structure.*
- void **setDiag** ()
- Store diagonal entries in a separate internal vector.*
- void **set** (size_t i, size_t j, const T₋ &val)
- Assign a value to an entry of the matrix.*
- void **MultAdd** (const Vect< T₋ > &x, Vect< T₋ > &y) const
- Multiply matrix by vector x and add to y.*
- void **MultAdd** (T₋ a, const Vect< T₋ > &x, Vect< T₋ > &y) const
- Multiply matrix by vector a*x and add to y.*
- void **Mult** (const Vect< T₋ > &x, Vect< T₋ > &y) const
- Multiply matrix by vector x and save in y*
- void **TMult** (const Vect< T₋ > &x, Vect< T₋ > &y) const
- Multiply transpose of matrix by vector x and save in y.*
- void **add** (size_t i, size_t j, const T₋ &val)
- Add a constant to an entry of the matrix.*
- size_t **getColHeight** (size_t i) const
- Return column height.*
- Vect< T₋ > **getColumn** (size_t j) const
- Get j-th column vector.*
- Vect< T₋ > **getRow** (size_t i) const

- Get i -th row vector.*
- `T_ & operator() (size_t i, size_t j)`
 - Operator () (Non constant version).*
- `T_ operator() (size_t i, size_t j) const`
 - Operator () (Constant version).*
- `SkSMMatrix< T_ > & operator= (const SkSMMatrix< T_ > &m)`
 - Operator =.*
- `SkSMMatrix< T_ > & operator= (const T_ &x)`
 - Operator =.*
- `SkSMMatrix< T_ > & operator+= (const SkSMMatrix< T_ > &m)`
 - Operator +=.*
- `SkSMMatrix< T_ > & operator*= (const T_ &x)`
 - Operator *=.*
- `int setLDLt ()`
 - Factorize matrix (LDLt (Crout) factorization).*
- `int solve (Vect< T_ > &b)`
 - Solve linear system.*
- `int solve (const Vect< T_ > &b, Vect< T_ > &x)`
 - Solve linear system.*
- `int solveLDLt (const Vect< T_ > &b, Vect< T_ > &x)`
 - Solve a linear system using the LDLt (Crout) factorization.*
- `T_ get (size_t i, size_t j) const`
 - Return entry (i, j) of matrix if this one is stored, 0 else.*
- `void Axy (T_ a, const SkSMMatrix< T_ > &m)`
 - Add to matrix the product of a matrix by a scalar.*
- `void Axy (T_ a, const Matrix< T_ > *m)`
 - Add to matrix the product of a matrix by a scalar.*
- `TrMatrix ()`
 - Default constructor.*
- `TrMatrix (size_t size)`
 - Constructor for a tridiagonal matrix with $size$ rows.*
- `TrMatrix (const TrMatrix &m)`
 - Copy Constructor.*
- `void setSize (size_t size)`
 - Set size (number of rows) of matrix.*
- `void MultAdd (const Vect< T_ > &x, Vect< T_ > &y) const`
 - Multiply matrix by vector x and add result to y .*
- `void MultAdd (T_ a, const Vect< T_ > &x, Vect< T_ > &y) const`
 - Multiply matrix by vector $a*x$ and add result to y .*
- `void Mult (const Vect< T_ > &x, Vect< T_ > &y) const`
 - Multiply matrix by vector x and save result in y .*
- `void TMult (const Vect< T_ > &x, Vect< T_ > &y) const`
 - Multiply transpose of matrix by vector x and save result in y .*
- `void Axy (T_ a, const TrMatrix< T_ > &m)`
 - Add to matrix the product of a matrix by a scalar.*
- `void Axy (T_ a, const Matrix< T_ > *m)`

- Add to matrix the product of a matrix by a scalar.*
- void **set** (size_t i, size_t j, const T_ &val)
Assign constant val to an entry (i, j) of the matrix.
- void **add** (size_t i, size_t j, const T_ &val)
Add constant val value to an entry (i, j) of the matrix.
- T_ **operator()** (size_t i, size_t j) const
Operator () (Constant version).
- T_ & **operator()** (size_t i, size_t j)
Operator () (Non constant version).
- TrMatrix< T_ > & **operator=** (const TrMatrix< T_ > &m)
Operator =.
- TrMatrix< T_ > & **operator=** (const T_ &x)
Operator = Assign matrix to identity times x.
- TrMatrix< T_ > & **operator*=** (const T_ &x)
*Operator *.*
- int **solve** (Vect< T_ > &b)
Solve a linear system with current matrix (forward and back substitution).
- int **solve** (const Vect< T_ > &b, Vect< T_ > &x)
Solve a linear system with current matrix (forward and back substitution).
- T_ **get** (size_t i, size_t j) const
Return entry (i, j) of matrix.
- **Iter** ()
Default Constructor.
- **Iter** (int max_it, real_t toler, int verbose=0)
Constructor with iteration parameters.
- bool **check** (Vect< T_ > &u, const Vect< T_ > &v, int opt=2)
Check convergence.
- int **solve** (Iteration s, Preconditioner p=DIAG_PREC)
Solve equations using prescribed solver and preconditioner.

5.11.1 Detailed Description

5.11.2 Enumeration Type Documentation

enum PDE_Terms

Enumerate variable that selects various terms in partial differential equations

Enumerator

CONSISTENT_MASS Consistent mass term
LUMPED_MASS Lumped mass term
MASS Consistent mass term
CAPACITY Consistent capacity term
CONSISTENT_CAPACITY Consistent capacity term
LUMPED_CAPACITY Lumped capacity term
VISCOSITY Viscosity term
STIFFNESS Stiffness term

DIFFUSION Diffusion term
MOBILITY Mobility term
CONVECTION Convection term
DEVIATORIC Deviatoric term
DILATATION Dilatational term
ELECTRIC Electric term
MAGNETIC Magnetic term
LOAD Body load term
HEAT.SOURCE Body heat source term
BOUNDARY_TRACTION Boundary traction (pressure) term
HEAT_FLUX Boundary heat flux term
CONTACT Signorini contact
BUOYANCY Buoyancy force term
LORENTZ_FORCE Lorentz force term

enum EqDataType

Enumerate variable that selects equation data type

Enumerator

INITIAL_FIELD Initial condition
SOLUTION Solution vector (same as Initial)
INITIAL_AUX_1 Initial auxiliary field
INITIAL_AUX_2 Initial auxiliary field
INITIAL_AUX_3 Initial auxiliary field
INITIAL_AUX_4 Initial auxiliary field
BOUNDARY_CONDITION Boundary condition data
BODY_FORCE Body force data
SOURCE Source data (same as Body force)
POINT_FORCE Localized (at point) force
BOUNDARY_FORCE Boundary force data
FLUX Flux data (same as Boundary force)
TRACTION Traction data (same as Boundary force)
AUX_INPUT_FIELD_1 Auxiliary input field 1
AUX_INPUT_FIELD_2 Auxiliary input field 2
AUX_INPUT_FIELD_3 Auxiliary input field 3
AUX_INPUT_FIELD_4 Auxiliary input field 4
DISPLACEMENT_FIELD A displacement field
VELOCITY_FIELD A velocity field
TEMPERATURE_FIELD A temperature field

enum ArrayType

Selects local or global option for array as argument.

Enumerator

LOCAL_ARRAY For a local array labeled with local numbering

GLOBAL_ARRAY For a local array labeled with global numbering

enum TimeScheme

Selects time integration scheme

Enumerator

STATIONARY No time scheme: stationary

FORWARD_EULER Forward Euler scheme (Explicit)

BACKWARD_EULER Backward Euler scheme (Implicit)

CRANK_NICOLSON Crank-Nicolson scheme

HEUN Heun scheme

NEWMARK Newmark scheme

LEAP_FROG Leap Frog scheme

ADAMS_BASHFORTH Adams-Bashforth scheme (2nd Order)

AB2 Adams-Bashforth scheme (2nd Order)

RUNGE_KUTTA 4-th Order Runge-Kutta scheme (4th Order)

RK4 4-th Order Runge-Kutta scheme

RK3_TVD 3-rd Order Runge-Kutta TVD scheme

BDF2 Backward Difference Formula (2nd Order)

enum FEType

Choose Finite [Element](#) Type

Enumerator

FE_2D_3N 2-D elements, 3-Nodes (P1)

FE_2D_6N 2-D elements, 6-Nodes (P2)

FE_2D_4N 2-D elements, 4-Nodes (Q1)

FE_3D_AXI_3N 3-D Axisymmetric elements, 3-Nodes (P1)

FE_3D_4N 3-D elements, 4-Nodes (P1)

FE_3D_8N 3-D elements, 8-Nodes (Q1)

enum AnalysisType

Choose analysis type

Enumerator

STEADY_STATE Steady state analysis

TRANSIENT Transient analysis

OPTIMIZATION Optimization analysis

enum MatrixType

Choose matrix storage and type

Enumerator

SKYLINE Skyline storage
SPARSE Sparse storage
DIAGONAL Diagonal storage
TRIDIAGONAL Tridiagonal storage
SYMMETRIC Symmetric matrix
UNSYMMETRIC Unsymmetric matrix
IDENTITY Identity matrix

enum Iteration

Choose iterative solver for the linear system.

Enumerator

DIRECT_SOLVER Direct solver
CG_SOLVER CG Method
CGS_SOLVER CGS Method
BICG_SOLVER BiCG Method
BICG_STAB_SOLVER BiCGStab Method
GMRES_SOLVER GMRes Method

enum Preconditioner

Choose preconditioner for the linear system.

Enumerator

IDENT_PREC Identity (No preconditioning)
DIAG_PREC Diagonal preconditioner
DILU_PREC ILU (Incomplete factorization) preconditioner
ILU_PREC DILU (Diagonal Incomplete factorization) preconditioner
SSOR_PREC SSOR preconditioner

enum BCType

To select special boundary conditions.

Enumerator

PERIODIC_A Periodic Boundary conditions (first side)
PERIODIC_B Periodic Boundary conditions (second side)
CONTACT_BC Contact Boundary conditions
SLIP Slip Boundary conditions

5.11.3 Function Documentation

T_* OFELI::A ()

Return element matrix.

Matrix is returned as a C-array

T_* OFELI::b ()

Return element right-hand side.

Right-hand side is returned as a C-array

T_* OFELI::Prev ()

Return element previous vector.

This is the vector given in time dependent constructor. It is returned as a C-array.

IOField (const string & file, AccessType access, bool compact = true)

Constructor using file name.

Parameters

in	<i>file</i>	File name.
in	<i>access</i>	Access code. This number is to be chosen among two enumerated values: <ul style="list-style-type: none"> • IOField::IN to read the file • IOField::OUT to write on it
in	<i>compact</i>	Flag to choose a compact storage or not [Default: true]

IOField (const string & mesh_file, const string & file, Mesh & ms, AccessType access, bool compact = true)

Constructor using file name, mesh file and mesh.

Parameters

in	<i>mesh_file</i>	File containing mesh
in	<i>file</i>	File that contains field stored or to store
in	<i>ms</i>	Mesh instance
in	<i>access</i>	Access code. This number is to be chosen among two enumerated values: <ul style="list-style-type: none"> • IOField::IN to read the file • IOField::OUT to write on it
in	<i>compact</i>	Flag to choose a compact storage or not [Default: true]

IOField (const string & *file*, Mesh & *ms*, AccessType *access*, bool *compact* = true)

Constructor using file name and mesh.

Parameters

in	<i>file</i>	File that contains field stored or to store
in	<i>ms</i>	Mesh instance
in	<i>access</i>	Access code. This number is to be chosen among two enumerated values: <ul style="list-style-type: none"> • IOField::IN to read the file • IOField::OUT to write on it
in	<i>compact</i>	Flag to choose a compact storage or not [Default: true]

IOField (const string & *file*, AccessType *access*, const string & *name*)

Constructor using file name and field name.

Parameters

in	<i>file</i>	File that contains field stored or to store
in	<i>access</i>	Access code. This number is to be chosen among two enumerated values: <ul style="list-style-type: none"> • IOField::IN to read the file • IOField::OUT to write on it
in	<i>name</i>	Seek a specific field with given <i>name</i>

void setMeshFile (const string & *file*)

Set mesh file.

Parameters

in	<i>file</i>	Mesh file
----	-------------	---------------------------

void open ()

Open file.

Case where file name has been previously given (in the constructor).

void open (const string & *file*, AccessType *access*)

Open file.

Parameters

in	<i>file</i>	File name.
in	<i>access</i>	Access code. This number is to be chosen among two enumerated values: <ul style="list-style-type: none"> • <code>IOField::IN</code> to read the file • <code>IOField::OUT</code> to write on it

void put (const Vect< real.t > & v)

Store [Vect](#) instance *v* in file.

Parameters

in	<i>v</i>	Vect instance to store
----	----------	--

void put (const PETScVect< real.t > & v)

Store [PETScVect](#) instance *v* in file.

Parameters

in	<i>v</i>	PETScVect instance to store
----	----------	---

real.t get (Vect< real.t > & v)

Get [Vect](#) *v* instance from file.

First time step is read from the XML file.

int get (Vect< real.t > & v, const string & name)

Get [Vect](#) *v* instance from file if the field has the given name.

First time step is read from the XML file.

Parameters

in,out	<i>v</i>	Vect instance
in	<i>name</i>	Name to seek in the XML file

int get (DMatrix< real.t > & A, const string & name)

Get [DMatrix](#) *A* instance from file if the field has the given name.

First time step is read from the XML file.

Parameters

in,out	<i>A</i>	DMatrix instance
--------	----------	----------------------------------

Parameters

in	<i>name</i>	Name to seek in the XML file
----	-------------	------------------------------

int get (DSMatrix< real.t > & A, const string & name)

Get [DSMatrix](#) A instance from file if the field has the given name.
First time step is read from the XML file.

Parameters

in,out	<i>A</i>	DSMatrix instance
in	<i>name</i>	Name to seek in the XML file

int get (Vect< real.t > & v, real.t t)

Get [Vect](#) v instance from file corresponding to a specific time value.
The sought vector corresponding to the time value is read from the XML file.

Parameters

in,out	<i>v</i>	Vector instance
in	<i>t</i>	Time value

void saveGMSH (string output_file, string mesh_file)

Save field vectors in a file using **GMSH** format.
This member function enables avoiding the use of `cfield`. It must be used once all field vectors have been stored in output file. It closes this file and copies its contents to a **GMSH** file.

Parameters

in	<i>output_file</i>	Output file name where to store using GMSH format
in	<i>mesh_file</i>	File containing mesh data

void setFile (string file)

Set file name.
This function is to be used when the default constructor is invoked.

real.t getValue (string funct, real.t v)

Return the calculated value of the function.
Case of a function of one variable

Parameters

in	<i>funct</i>	Name of the function to be evaluated, as read from input file
----	--------------	---

Parameters

in	<i>v</i>	Value of the variable
----	----------	-----------------------

Returns

Computed value of the function

real.t getDerivative (string *funct*, real.t *v*)

Return the derivative of the function at a given point.

Case of a function of one variable

Parameters

in	<i>funct</i>	Name of the function to be evaluated, as read from input file
in	<i>v</i>	Value of the variable

Returns

Derivative value

real.t getValue (string *funct*, real.t *v1*, real.t *v2*)

Return the calculated value of the function.

Case of a function of two variables

Parameters

in	<i>funct</i>	Name of the function to be evaluated, as read from input file
in	<i>v1</i>	Value of the first variable
in	<i>v2</i>	Value of the second variable

Returns

Computed value of the function

real.t getValue (string *funct*, real.t *v1*, real.t *v2*, real.t *v3*)

Return the calculated value of the function.

Case of a function of three variables

Parameters

in	<i>funct</i>	Name of the funct to be evaluated, as read from input file
in	<i>v1</i>	Value of the first variable
in	<i>v2</i>	Value of the second variable
in	<i>v3</i>	Value of the third variable

Returns

Computed value of the function

Grid (real_t *xm*, real_t *xM*, size_t *npx*)

Construct a 1-D structured grid given its extremal coordinates and number of intervals.

Parameters

in	<i>xm</i>	Minimal value for x
in	<i>xM</i>	Maximal value for x
in	<i>npx</i>	Number of grid intervals in the x-direction

Grid (real_t *xm*, real_t *xM*, real_t *ym*, real_t *yM*, size_t *npx*, size_t *npy*)

Construct a 2-D structured grid given its extremal coordinates and number of intervals.

Parameters

in	<i>xm</i>	Minimal value for x
in	<i>xM</i>	Maximal value for x
in	<i>ym</i>	Minimal value for y
in	<i>yM</i>	Maximal value for y
in	<i>npx</i>	Number of grid intervals in the x-direction
in	<i>npy</i>	Number of grid intervals in the y-direction

Grid (Point< real_t > *m*, Point< real_t > *M*, size_t *npx*, size_t *npy*)

Construct a 2-D structured grid given its extremal coordinates and number of intervals.

Parameters

in	<i>m</i>	Minimal coordinate value
in	<i>M</i>	Maximal coordinate value
in	<i>npx</i>	Number of grid intervals in the x-direction
in	<i>npy</i>	Number of grid intervals in the y-direction

Grid (real_t *xm*, real_t *xM*, real_t *ym*, real_t *yM*, real_t *zm*, real_t *zM*, size_t *npx*, size_t *npy*, size_t *npz*)

Construct a 3-D structured grid given its extremal coordinates and number of intervals.

Parameters

in	<i>xm</i>	Minimal value for x
in	<i>xM</i>	Maximal value for x

Parameters

in	ym	Minimal value for y
in	yM	Maximal value for y
in	zm	Minimal value for z
in	zM	Maximal value for z
in	npx	Number of grid intervals in the x-direction
in	npz	Number of grid intervals in the y-direction
in	npz	Number of grid intervals in the z-direction

Grid (Point< real.t > m , Point< real.t > M , size.t npx , size.t npz , size.t npz)

Construct a 3-D structured grid given its extremal coordinates and number of intervals.

Parameters

in	m	Minimal coordinate value
in	M	Maximal coordinate value
in	npx	Number of grid intervals in the x-direction
in	npz	Number of grid intervals in the y-direction
in	npz	Number of grid intervals in the z-direction

void setXMin (const Point< real.t > & x)

Set min. coordinates of the domain.

Parameters

in	x	Minimal values of coordinates
----	-----	-------------------------------

void setXMax (const Point< real.t > & x)

Set max. coordinates of the domain.

Parameters

in	x	Maximal values of coordinates
----	-----	-------------------------------

void setDomain (real.t $xmin$, real.t $xmax$)

Set Dimensions of the domain: 1-D case.

Parameters

in	$xmin$	Minimal value of x-coordinate
in	$xmax$	Maximal value of x-coordinate

void setDomain (real_t xmin, real_t xmax, real_t ymin, real_t ymax)

Set Dimensions of the domain: 2-D case.

Parameters

in	<i>xmin</i>	Minimal value of x-coordinate
in	<i>xmax</i>	Maximal value of x-coordinate
in	<i>ymin</i>	Minimal value of y-coordinate
in	<i>ymax</i>	Maximal value of y-coordinate

void setDomain (real_t xmin, real_t xmax, real_t ymin, real_t ymax, real_t zmin, real_t zmax)

Set Dimensions of the domain: 3-D case.

Parameters

in	<i>xmin</i>	Minimal value of x-coordinate
in	<i>xmax</i>	Maximal value of x-coordinate
in	<i>ymin</i>	Minimal value of y-coordinate
in	<i>ymax</i>	Maximal value of y-coordinate
in	<i>zmin</i>	Minimal value of z-coordinate
in	<i>zmax</i>	Maximal value of z-coordinate

void setDomain (Point< real_t > xmin, Point< real_t > xmax)

Set Dimensions of the domain: 3-D case.

Parameters

in	<i>xmin</i>	Minimal coordinate value
in	<i>xmax</i>	Maximal coordinate value

void setN (size_t nx, size_t ny = 0, size_t nz = 0)

Set number of grid intervals in the x, y and z-directions.

Number of points is the number of intervals plus one in each direction

Parameters

in	<i>nx</i>	Number of grid intervals in the x-direction
in	<i>ny</i>	Number of grid intervals in the y-direction (Default=0: 1-D grid)
in	<i>nz</i>	Number of grid intervals in the z-direction (Default=0: 1-D or 2-D grid)

Remarks

: The size of the grid (`xmin` and `xmax`) must have been defined before.

size_t getNy () const

Return number of grid intervals in the y-direction.

`ny=0` for 1-D domains (segments)

size_t getNz () const

Return number of grid intervals in the z-direction.

`nz=0` for 1-D (segments) and 2-D domains (rectangles)

void setCode (string exp, int code)

Set a code for some grid points.

Parameters

in	<i>exp</i>	Regular expression that determines the set of grid points on which the code is applied.
in	<i>code</i>	Code to assign.

void setCode (int side, int code)

Set a code for grid points on sides.

Parameters

in	<i>side</i>	Side for which code is assigned. Possible values are: <code>MIN_X</code> , <code>MAX_X</code> , <code>MIN_Y</code> , <code>MAX_Y</code> , <code>MIN_Z</code> , <code>MAX_Z</code>
in	<i>code</i>	Code to assign.

int getCode (int side) const

Return code for a side number.

Parameters

in	<i>side</i>	Side for which code is returned. Possible values are: <code>MIN_X</code> , <code>MAX_X</code> , <code>MIN_Y</code> , <code>MAX_Y</code> , <code>MIN_Z</code> , <code>MAX_Z</code>
----	-------------	---

int getCode (size_t i, size_t j) const

Return code for a grid point.

Parameters

in	<i>i</i>	<i>i</i> -th index for node for which code is to be returned.
----	----------	---

Parameters

in	<i>j</i>	j-th index for node for which code is to be returned.
----	----------	---

int getCode (size_t *i*, size_t *j*, size_t *k*) const

Return code for a grid point.

Parameters

in	<i>i</i>	i-th index for node for which code is to be returned.
in	<i>j</i>	j-th index for node for which code is to be returned.
in	<i>k</i>	k-th index for node for which code is to be returned.

void Deactivate (size_t *i*)

Change state of a cell from active to inactive (1-D grid)

Parameters

in	<i>i</i>	grid cell to remove
----	----------	---------------------

void Deactivate (size_t *i*, size_t *j*)

Change state of a cell from active to inactive (2-D grid)

Parameters

in	<i>i</i>	i-th index for grid cell to remove. If this value is 0, all cells (*, j) are deactivated
in	<i>j</i>	j-th index for grid cell to remove If this value is 0, all cells (i, *) are deactivated

Remarks

if *i* and *j* have value 0 all grid cells are deactivated !!

void Deactivate (size_t *i*, size_t *j*, size_t *k*)

Change state of a cell from active to inactive (2-D grid)

Parameters

in	<i>i</i>	i-th index for grid cell to remove. If this value is 0, all cells (*, j, k) are deactivated
in	<i>j</i>	j-th index for grid cell to remove If this value is 0, all cells (i, *, k) are deactivated
in	<i>k</i>	k-th index for grid cell to remove If this value is 0, all cells (i, j, *) are deactivated

int isActive (size_t *i*) const

Say if cell is active or not (1-D grid)

Parameters

in	<i>i</i>	Index of cell
----	----------	---------------

Returns

1 if cell is active, 0 if not

int isActive (size_t *i*, size_t *j*) const

Say if cell is active or not (2-D grid)

Parameters

in	<i>i</i>	i-th index of cell
in	<i>j</i>	j-th index of cell

Returns

1 if cell is active, 0 if not

int isActive (size_t *i*, size_t *j*, size_t *k*) const

Say if cell is active or not (3-D grid)

Parameters

in	<i>i</i>	i-th index of cell
in	<i>j</i>	j-th index of cell
in	<i>k</i>	k-th index of cell

Returns

1 if cell is active, 0 if not

BMatrix ()

Default constructor.

Initialize a zero dimension band matrix

BMatrix (size_t *size*, int *ld*, int *ud*)

Constructor that for a band matrix with given size and bandwidth.

Assign 0 to all matrix entries.

Parameters

in	<i>size</i>	Number of rows and columns
in	<i>ld</i>	Number of lower co-diagonals (must be > 0)
in	<i>ud</i>	Number of upper co-diagonals (must be > 0)

void setSize (size_t size, int ld, int ud)

Set size (number of rows) and storage of matrix.

Parameters

in	<i>size</i>	Number of rows and columns
in	<i>ld</i>	Number of lower co-diagonals (must be > 0)
in	<i>ud</i>	Number of upper co-diagonals (must be > 0)

void Axy (T_ a, const BMatrix< T_ > & x)

Add to matrix the product of a matrix by a scalar.

Parameters

in	<i>a</i>	Scalar to premultiply
in	<i>x</i>	Matrix by which <i>a</i> is multiplied. The result is added to current instance

void Axy (T_ a, const Matrix< T_ > * x) [virtual]

Add to matrix the product of a matrix by a scalar.

Parameters

in	<i>a</i>	Scalar to premultiply
in	<i>x</i>	Matrix by which <i>a</i> is multiplied. The result is added to current instance

Implements [Matrix< T_ >](#).

T_ operator() (size_t i, size_t j) const [virtual]

Operator () (Constant version).

Parameters

in	<i>i</i>	Row index
in	<i>j</i>	Column index

Implements [Matrix< T_ >](#).

T_ & operator() (size_t i, size_t j) [virtual]

Operator () (Non constant version).

Parameters

in	<i>i</i>	Row index
in	<i>j</i>	Column index

Implements [Matrix< T_ >](#).

BMatrix< T_ > & operator= (const BMatrix< T_ > & m)

Operator =.

Copy matrix *m* to current matrix instance.

BMatrix< T_ > & operator*= (const T_ & x)

Operator *.

Premultiply matrix entries by constant value *x*

BMatrix< T_ > & operator+= (const T_ & x)

Operator +.

Add constant *x* to matrix entries.

int setLU ()

Factorize the matrix (LU factorization)

LU factorization of the matrix is realized. Note that since this is an in place factorization, the contents of the matrix are modified.

Returns

- 0 if factorization was normally performed,
- *n* if the *n*-th pivot is null.

Remarks

A flag in this class indicates after factorization that this one has been realized, so that, if the member function solve is called after this no further factorization is done.

int solve (Vect< T_ > & b) [virtual]

Solve linear system.

The linear system having the current instance as a matrix is solved by using the LU decomposition. Solution is thus realized after a factorization step and a forward/backward substitution step. The factorization step is realized only if this was not already done.

Note that this function modifies the matrix contents is a factorization is performed. Naturally, if the the matrix has been modified after using this function, the user has to refactorize it using the function setLU. This is because the class has no non-expensive way to detect if the matrix has been modified. The function setLU realizes the factorization step only.

Parameters

in,out	<i>b</i>	Vect instance that contains right-hand side on input and solution on output.
--------	----------	--

Returns

- 0 if solution was normally performed,
- *n* if the *n*-th pivot is null.

Implements [Matrix< T_ >](#).

int solve (const Vect< T_ > & *b*, Vect< T_ > & *x*)

Solve linear system.

The linear system having the current instance as a matrix is solved by using the LU decomposition. Solution is thus realized after a factorization step and a forward/backward substitution step. The factorization step is realized only if this was not already done.

Note that this function modifies the matrix contents if a factorization is performed. Naturally, if the matrix has been modified after using this function, the user has to refactorize it using the function `setLU`. This is because the class has no non-expensive way to detect if the matrix has been modified. The function `setLU` realizes the factorization step only.

Parameters

in	<i>b</i>	Vect instance that contains right-hand side.
out	<i>x</i>	Vect instance that contains solution

Returns

- 0 if solution was normally performed,
- *n* if the *n*-th pivot is null.

DSMatrix (size_t *dim*)

Constructor that for a symmetric matrix with given number of rows.

Parameters

in	<i>dim</i>	Number of rows
----	------------	----------------

DSMatrix (const DSMatix< T_ > & *m*)

Copy Constructor.

Parameters

in	<i>m</i>	DSMatrix instance to copy
----	----------	---

void setSize (size_t *dim*)

Set size (number of rows) of matrix.

Parameters

in	<i>dim</i>	Number of rows and columns.
----	------------	-----------------------------

void set (size_t *i*, size_t *j*, const T_ & *val*) [virtual]

Assign constant to entry (*i*, *j*) of the matrix.

Parameters

in	<i>i</i>	row index
in	<i>j</i>	column index
in	<i>val</i>	value to assign to a(<i>i</i> , <i>j</i>)

Implements [Matrix< T_ >](#).

void setDiag (const T_ & *a*)

Set matrix as diagonal and assign its diagonal entries as a constant.

Parameters

in	<i>a</i>	Value to assign to all diagonal entries
----	----------	---

void setDiag (const vector< T_ > & *d*)

Set matrix as diagonal and assign its diagonal entries.

Parameters

in	<i>d</i>	Vector entries to assign to matrix diagonal entries
----	----------	---

void add (size_t *i*, size_t *j*, const T_ & *val*) [virtual]

Add constant to an entry of the matrix.

Parameters

in	<i>i</i>	row index
in	<i>j</i>	column index
in	<i>val</i>	value to add to a(<i>i</i> , <i>j</i>)

Implements [Matrix< T_ >](#).

T_ operator() (size_t i, size_t j) const [virtual]

Operator () (Constant version).

Parameters

in	<i>i</i>	Row index
in	<i>j</i>	Column index

Implements [Matrix< T_ >](#).

T_ & operator() (size_t i, size_t j) [virtual]

Operator () (Non constant version).

Parameters

in	<i>i</i>	Row index
in	<i>j</i>	Column index

Warning

To modify a value of an entry of the matrix it is safer not to modify both lower and upper triangles. Otherwise, wrong values will be assigned. If not sure, use the member functions `set` or `add`.

Implements [Matrix< T_ >](#).

DSMatrix< T_ > & operator+=(const T_ & x)

Operator +=.

Add constant value x to all matrix entries.

DSMatrix< T_ > & operator-=(const T_ & x)

Operator -=.

Subtract constant value x from to all matrix entries.

int setLDLt ()

Factorize matrix (LDL^T)

Returns

- 0, if factorization was normally performed,
- n, if the n-th pivot is null.

void getColumn (size_t j, Vect< T_ > & v) const

Get j-th column vector.

Parameters

in	j	Index of column to extract
out	v	Reference to Vect instance where the column is stored

Remarks

Vector v does not need to be sized before. It is resized in the function

Vect< T_ > getColumn (size_t j) const

Get j -th column vector.

Parameters

in	j	Index of column to extract
----	-----	----------------------------

Returns

[Vect](#) instance where the column is stored

Remarks

Vector v does not need to be sized before. It is resized in the function

void setColumn (size_t i , const Vect< T_ > & v)

Copy a given vector to a prescribed column in the matrix.

Parameters

in	i	column index to be assigned
in	v	Vect instance to copy

void getRow (size_t i , Vect< T_ > & v) const

Get i -th row vector.

Parameters

in	i	Index of row to extract
out	v	Reference to Vect instance where the row is stored

Remarks

Vector v does not need to be sized before. It is resized in the function

Vect< T_ > getRow (size_t i) const

Get i -th row vector.

Parameters

in	i	Index of row to extract
----	-----	-------------------------

Returns

[Vect](#) instance where the row is stored

Remarks

Vector v does not need to be sized before. It is resized in the function

void setRow (size_t i , const Vect< T_ > & v)

Copy a given vector to a prescribed row in the matrix.

Parameters

in	i	row index to be assigned
in	v	Vect instance to copy

void MultAdd (T_ a , const Vect< T_ > & x , Vect< T_ > & y) const [virtual]

Multiply matrix by vector $a*x$ and add to y .

Parameters

in	a	Constant to multiply by matrix
in	x	Vector to multiply by matrix
in,out	y	Vector to add to the result. y contains on output the result.

Implements [Matrix< T_ >](#).

void TMult (const Vect< T_ > & x , Vect< T_ > & y) const [virtual]

Multiply transpose of matrix by vector x and add result in y .

Parameters

in	x	Vector to add to y
in,out	y	on input, vector to add to. On output, result.

Implements [Matrix< T_ >](#).

int solve (Vect< T_ > & b) [virtual]

Solve linear system.

The matrix is factorized using the LDLt (Crout) decomposition. If this one is already factorized, no further factorization is performed. If the matrix has been modified the user has to refactorize it using the function setLDLt.

Parameters

in, out	<i>b</i>	Vect instance that contains right-hand side on input and solution on output.
---------	----------	--

Returns

- 0 if solution was normally performed,
- *n* if the *n*-th pivot is null.

Implements [Matrix< T_ >](#).

int solve (const Vect< T_ > & b, Vect< T_ > & x)

Solve linear system.

The matrix is factorized using the LDLt (Crout) decomposition. If this one is already factorized, no further factorization is performed. If the matrix has been modified the user has to refactorize it using the function setLDLt.

Parameters

in	<i>b</i>	Vect instance that contains right-hand side.
out	<i>x</i>	Vect instance that contains solution

Returns

- 0 if solution was normally performed,
- *n* if the *n*-th pivot is null.

void Axy (T_ a, const DSMatrix< T_ > & m)

Add to matrix the product of a matrix by a scalar.

Parameters

in	<i>a</i>	Scalar to premultiply
in	<i>m</i>	Matrix by which <i>a</i> is multiplied. The result is added to current instance

void Axy (T_ a, const Matrix< T_ > * m) [virtual]

Add to matrix the product of a matrix by a scalar.

Parameters

in	<i>a</i>	Scalar to premultiply
in	<i>m</i>	Matrix by which <i>a</i> is multiplied. The result is added to current instance

Implements [Matrix< T_ >](#).

LocalMatrix ()

Default constructor.

Constructs a matrix with 0 rows and 0 columns

LocalMatrix (Element * *el*, const SpMatrix< T_ > & *a*)

Constructor of a local matrix associated to element from a [SpMatrix](#).

Parameters

in	<i>el</i>	Pointer to Element
in	<i>a</i>	Global matrix as instance of class SpMatrix .

LocalMatrix (Element * *el*, const SkMatrix< T_ > & *a*)

Constructor of a local matrix associated to element from a [SkMatrix](#).

Parameters

in	<i>el</i>	Pointer to Element
in	<i>a</i>	Global matrix as instance of class SkMatrix .

LocalMatrix (Element * *el*, const SkSMMatrix< T_ > & *a*)

Constructor of a local matrix associated to element from a [SkSMMatrix](#).

Parameters

in	<i>el</i>	Pointer to Element
in	<i>a</i>	Global matrix as instance of class SkSMMatrix .

void Localize (Element * *el*, const SpMatrix< T_ > & *a*)

Initialize matrix as element matrix from global [SpMatrix](#).

Parameters

in	<i>el</i>	Pointer to Element
in	<i>a</i>	Global matrix as instance of class SpMatrix . This function is called by its corresponding constructor.

void Localize (Element * *el*, const SkMatrix< T_ > & *a*)

Initialize matrix as element matrix from global [SkMatrix](#).

Parameters

in	<i>el</i>	Pointer to Element
in	<i>a</i>	Global matrix as instance of class SkMatrix . This function is called by its corresponding constructor.

void Localize (Element * *el*, const SkSMatrix< T_ > & *a*)

Initialize matrix as element matrix from global [SkSMatrix](#).

Parameters

in	<i>el</i>	Pointer to Element
in	<i>a</i>	Global matrix as instance of class SkSMatrix . This function is called by its corresponding constructor.

LocalMatrix< T_, NR_, NC_ > & operator= (const LocalMatrix< T_, NR_, NC_ > & *m*)

Operator =

Copy instance *m* into current instance.

LocalMatrix< T_, NR_, NC_ > & operator= (const T_ & *x*)

Operator =

Assign matrix to identity times *x*

LocalMatrix< T_, NR_, NC_ > & operator+= (const LocalMatrix< T_, NR_, NC_ > & *m*)

Operator +=

Add *m* to current matrix.

LocalMatrix< T_, NR_, NC_ > & operator-= (const LocalMatrix< T_, NR_, NC_ > & *m*)

Operator -=

Subtract *m* from current matrix.

LocalVect< T_, NR_ > operator* (LocalVect< T_, NC_ > & *x*)

Operator *

Return a [Vect](#) instance as product of current matrix by vector *x*.

LocalMatrix< T_, NR_, NC_ > & operator+= (const T_ & *x*)

Operator +=

Add constant *x* to current matrix entries.

LocalMatrix< T_, NR_, NC_ > & operator-= (const T_ & x)

Operator -=

Subtract x from current matrix entries.

LocalMatrix< T_, NR_, NC_ > & operator*= (const T_ & x)

Operator *=

Multiply matrix entries by constant x.

LocalMatrix< T_, NR_, NC_ > & operator/= (const T_ & x)

Operator /=

Divide by x current matrix entries.

void MultAdd (const LocalVect< T_, NC_ > & x, LocalVect< T_, NR_ > & y)

Multiply matrix by vector and add result to vector.

Parameters

in	x	Vector to multiply matrix by.
out	y	Resulting vector ($y += a * x$)

void MultAddScal (const T_ & a, const LocalVect< T_, NC_ > & x, LocalVect< T_, NR_ > & y)

Multiply matrix by scaled vector and add result to vector.

Parameters

in	a	Constant to premultiply by vector x.
in	x	(Scaled) vector to multiply matrix by.
out	y	Resulting vector ($y += a * x$)

void Mult (const LocalVect< T_, NC_ > & x, LocalVect< T_, NR_ > & y)

Multiply matrix by vector.

Parameters

in	x	Vector to multiply matrix by.
out	y	Resulting vector.

void Symmetrize ()

Symmetrize matrix.

Fill upper triangle to form a symmetric matrix.

int Factor ()

Factorize matrix.

Performs a LU factorization.

Returns

- 0: Factorization has ended normally,
- n: n-th pivot was zero.

int Solve (LocalVect< T_, NR_ > & b)

Forward and backsubstitute to solve a linear system.

Parameters

in	b	Right-hand side in input and solution vector in output.
----	---	---

Returns

- 0: Solution was performed normally.
- n: n-th pivot is zero.

Note

Matrix must have been factorized at first.

int FactorAndSolve (LocalVect< T_, NR_ > & b)

Factorize matrix and solve linear system.

Parameters

in,out	b	Right-hand side in input and solution vector in output.
--------	---	---

Returns

0 if solution was performed normally. n if n-th pivot is zero. This function simply calls **Factor()** then **Solve(b)**.

void Invert (LocalMatrix< T_, NR_, NC_ > & A)

Calculate inverse of matrix.

Parameters

out	A	Inverse of matrix
-----	---	-------------------

T_ getInnerProduct (const LocalVect< T_, NC_ > & x, const LocalVect< T_, NR_ > & y)

Calculate inner product with respect to matrix.

Returns the product $x^T A y$

Parameters

in	x	Left vector
in	y	Right vector

Returns

Resulting product

LocalVect (const Element * el, const Vect< T_ > & v, int opt = 0)

Constructor of an element vector from a global [Vect](#) instance.

The constructed vector has local numbering of nodes

Parameters

in	el	Pointer to Element to localize
in	v	Global vector to localize
in	opt	Option for DOF treatment <ul style="list-style-type: none"> • = 0, Normal case [Default] • Any other value : only one DOF is handled (Local vector has as dimension number of degrees of freedom)

LocalVect (const Side * sd, const Vect< T_ > & v, int opt = 0)

Constructor of a side vector from a global [Vect](#) instance.

The constructed vector has local numbering of nodes

Parameters

in	sd	Pointer to Side to localize
in	v	Global vector to localize
in	opt	Option for DOF treatment <ul style="list-style-type: none"> • = 0, Normal case [Default] • Any other value : only one DOF is handled (Local vector has as dimension number of degrees of freedom)

void getLocal (const Element & el, const Vect< T_ > & v, int type)

Localize an element vector from a global [Vect](#) instance.

The constructed vector has local numbering of nodes This function is called by the constructor↵
`: LocalVect(const Element *el, const Vect<T_> &v)`

Parameters

in	<i>el</i>	Pointer to Element to localize
in	<i>v</i>	Global vector to localize
in	<i>type</i>	Type of element. This is to be chosen among enumerated values: LINE2, TRIANG3, QUAD4, TETRA4, HEXA8, PENTA6

void Localize (const Element * *el*, const Vect< T_ > & *v*, size_t *k* = 0)

Localize an element vector from a global [Vect](#) instance.

The constructed vector has local numbering of nodes This function is called by the constructor↵
`: LocalVect(const Element *el, const Vect<T_> &v)`

Parameters

in	<i>el</i>	Pointer to Side to localize
in	<i>v</i>	Global vector to localize
in	<i>k</i>	Degree of freedom to localize [Default: All degrees of freedom are stored]

void Localize (const Side * *sd*, const Vect< T_ > & *v*, size_t *k* = 0)

Localize a side vector from a global [Vect](#) instance.

The constructed vector has local numbering of nodes This function is called by the constructor↵
`: LocalVect(const Side *sd, const Vect<T_> &v)`

Parameters

in	<i>sd</i>	Pointer to Side to localize
in	<i>v</i>	Global vector to localize
in	<i>k</i>	Degree of freedom to localize [Default: All degrees of freedom are stored]

LocalVect< T_ , N_ > & operator= (const LocalVect< T_ , N_ > & *v*)

Operator =

Copy a [LocalVect](#) instance to the current one

LocalVect< T_ , N_ > & operator= (const T_ & *x*)

Operator =

Assign value *x* to all vector entries

LocalVect< T_ , N_ > & operator+= (const LocalVect< T_ , N_ > & *v*)

Operator +=

Add vector *v* to this instance

LocalVect< T_, N_ > & operator+=(const T_ & a)

Operator +=

Add constant a to vector entries

LocalVect< T_, N_ > & operator-= (const LocalVect< T_, N_ > & v)

Operator -=

Subtract vector v from this instance

LocalVect< T_, N_ > & operator-= (const T_ & a)

Operator -=

Subtract constant a from vector entries

LocalVect< T_, N_ > & operator*= (const T_ & a)

Operator *=

Multiply vector by constant a

LocalVect< T_, N_ > & operator/= (const T_ & a)

Operator /=

Divide vector by constant a

T_ operator, (const LocalVect< T_, N_ > & v) const

Return Dot (scalar) product of two vectors.

A typical use of this operator is double a = (v,w) where v and w are 2 instances of LocalVect<double,n>

Parameters

in	v	LocalVect instance by which the current instance is multiplied
----	---	--

SkSMatrix ()

Default constructor.

Initializes a zero-dimension matrix

SkSMatrix (size_t size, int is_diagonal = false)

Constructor that initializes a dense symmetric matrix.

Normally, for a dense matrix this is not the right class.

Parameters

in	size	Number of matrix rows (and columns).
in	is_diagonal	Boolean to select if the matrix is diagonal or not [Default: false]

SkSMatrix (Mesh & mesh, size_t dof = 0, int is_diagonal = false)

Constructor using mesh to initialize skyline structure of matrix.

Parameters

in	<i>mesh</i>	Mesh instance for which matrix graph is determined.
in	<i>dof</i>	Option parameter, with default value 0. dof=1 means that only one degree of freedom for each node (or element or side) is taken to determine matrix structure. The value dof=0 means that matrix structure is determined using all DOFs.
in	<i>is_diagonal</i>	Boolean argument to say is the matrix is actually a diagonal matrix or not.

SkSMatrix (const Vect< size_t > & ColHt)

Constructor that initializes skyline structure of matrix using vector of column height.

Parameters

in	<i>ColHt</i>	Vect instance that contains rows lengths of matrix.
----	--------------	---

SkSMatrix (const Vect< size_t > & I, const Vect< size_t > & J, int opt = 1)

Constructor for a square matrix using non zero row and column indices.

Parameters

in	<i>I</i>	Vector containing row indices
in	<i>J</i>	Vector containing column indices
in	<i>opt</i>	Flag indicating if vectors I and J are cleaned and ordered (opt=1) or not (opt=0). In the latter case, these vectors can contain the same contents more than once and are not necessarily ordered.

SkSMatrix (const Vect< size_t > & I, const Vect< size_t > & J, const Vect< T_ > & a, int opt = 1)

Constructor for a square matrix using non zero row and column indices.

Parameters

in	<i>I</i>	Vector containing row indices
in	<i>J</i>	Vector containing column indices
in	<i>a</i>	Vector containing matrix entries in the same order than the one given by I and J
in	<i>opt</i>	Flag indicating if vectors I and J are cleaned and ordered (opt=1) or not (opt=0). In the latter case, these vectors can contain the same contents more than once and are not necessarily ordered

void setMesh (Mesh & *mesh*, size_t *dof* = 0)

Determine mesh graph and initialize matrix.

This member function is called by constructor with the same arguments

Parameters

in	<i>mesh</i>	Mesh instance for which matrix graph is determined.
in	<i>dof</i>	Option parameter, with default value 0. dof=1 means that only one degree of freedom for each node (or element or side) is taken to determine matrix structure. The value dof=0 means that matrix structure is determined using all DOFs.

void setSkyline (Mesh & *mesh*)

Determine matrix structure.

This member function calculates matrix structure using [Mesh](#) instance *mesh*.

void set (size_t *i*, size_t *j*, const T_ & *val*) [virtual]

Assign a value to an entry of the matrix.

Parameters

in	<i>i</i>	Row index
in	<i>j</i>	Column index
in	<i>val</i>	Value to assign to a(<i>i</i> , <i>j</i>)

Implements [Matrix< T_ >](#).

void MultAdd (const Vect< T_ > & *x*, Vect< T_ > & *y*) const [virtual]

Multiply matrix by vector *x* and add to *y*.

Parameters

in	<i>x</i>	Vector to multiply by matrix
in,out	<i>y</i>	Vector to add to the result. <i>y</i> contains on output the result.

Implements [Matrix< T_ >](#).

void MultAdd (T_ *a*, const Vect< T_ > & *x*, Vect< T_ > & *y*) const [virtual]

Multiply matrix by vector *a***x* and add to *y*.

Parameters

in	<i>a</i>	Constant to multiply by matrix
in	<i>x</i>	Vector to multiply by matrix
in,out	<i>y</i>	Vector to add to the result. <i>y</i> contains on output the result.

Implements [Matrix< T_ >](#).

void Mult (const Vect< T_ > & x, Vect< T_ > & y) const [virtual]

Multiply matrix by vector x and save in y

Parameters

in	<i>x</i>	Vector to multiply by matrix
out	<i>y</i>	Vector that contains on output the result.

Implements [Matrix< T_ >](#).

void TMult (const Vect< T_ > & x, Vect< T_ > & y) const [virtual]

Multiply transpose of matrix by vector x and save in y.

Parameters

in	<i>x</i>	Vector to multiply by matrix
out	<i>y</i>	Vector that contains on output the result.

Implements [Matrix< T_ >](#).

void add (size_t i, size_t j, const T_ & val) [virtual]

Add a constant to an entry of the matrix.

Parameters

in	<i>i</i>	Row index
in	<i>j</i>	Column index
in	<i>val</i>	Constant value to add to a(i,j)

Implements [Matrix< T_ >](#).

size_t getColHeight (size_t i) const

Return column height.

Column height at entry i is returned.

T_ & operator() (size_t i, size_t j) [virtual]

Operator () (Non constant version).

Parameters

in	<i>i</i>	Row index
in	<i>j</i>	Column index

Warning

To modify a value of an entry of the matrix it is safer not to modify both lower and upper triangles. Otherwise, wrong values will be assigned. If not sure, use the member functions `set` or `add`.

Implements [Matrix< T_ >](#).

T_ operator() (size_t i, size_t j) const [virtual]

Operator () (Constant version).

Parameters

in	<i>i</i>	Row index
in	<i>j</i>	Column index

Implements [Matrix< T_ >](#).

SkSMatrix< T_ > & operator= (const SkSMatrix< T_ > & m)

Operator =.

Copy matrix `m` to current matrix instance.

SkSMatrix< T_ > & operator= (const T_ & x)

Operator =.

define the matrix as a diagonal one with all diagonal entries equal to `x`.

SkSMatrix< T_ > & operator+= (const SkSMatrix< T_ > & m)

Operator +=.

Add matrix `m` to current matrix instance.

SkSMatrix< T_ > & operator*= (const T_ & x)

Operator *.

Premultiply matrix entries by constant value `x`.

int setLDLt ()

Factorize matrix (LDLt (Crout) factorization).

Returns

- 0 if factorization was normally performed
- `n` if the `n`-th pivot is null

int solve (Vect< T_ > & b) [virtual]

Solve linear system.

The linear system having the current instance as a matrix is solved by using the LDLt decomposition. Solution is thus realized after a factorization step and a forward/backward substitution step. The factorization step is realized only if this was not already done.

Note that this function modifies the matrix contents is a factorization is performed. Naturally, if the the matrix has been modified after using this function, the user has to refactorize it using the function `setLU`. This is because the class has no non-expensive way to detect if the matrix has been modified. The function `setLDLt` realizes the factorization step only.

Parameters

<code>in,out</code>	<code>b</code>	<code>Vect</code> instance that contains right-hand side on input and solution on output.
---------------------	----------------	---

Returns

- 0 if solution was normally performed,
- `n` if the `n`-th pivot is null.

Implements `Matrix< T_ >`.

int solve (const Vect< T_ > & b, Vect< T_ > & x)

Solve linear system.

The linear system having the current instance as a matrix is solved by using the LDLt decomposition. Solution is thus realized after a factorization step and a forward/backward substitution step. The factorization step is realized only if this was not already done.

Note that this function modifies the matrix contents is a factorization is performed. Naturally, if the the matrix has been modified after using this function, the user has to refactorize it using the function `setLDLt`. This is because the class has no non-expensive way to detect if the matrix has been modified. The function `setLDLt` realizes the factorization step only.

Parameters

<code>in</code>	<code>b</code>	<code>Vect</code> instance that contains right-hand side.
<code>out</code>	<code>x</code>	<code>Vect</code> instance that contains solution

Returns

- 0 if solution was normally performed,
- `n` if the `n`-th pivot is null.

int solveLDLt (const Vect< T_ > & b, Vect< T_ > & x)

Solve a linear system using the LDLt (Crout) factorization.

This function solves a linear system. The LDLt factorization is performed if this was not already done using the function `setLU`.

Parameters

<code>in</code>	<code>b</code>	<code>Vect</code> instance that contains right-hand side
<code>out</code>	<code>x</code>	<code>Vect</code> instance that contains solution

Returns

- 0 if solution was normally performed,
 - n if the n -th pivot is null
- Solution is performed only if factorization has previously been invoked.

void Axy (T_ a , const SkSMatrix< T_ > & m)

Add to matrix the product of a matrix by a scalar.

Parameters

in	a	Scalar to premultiply
in	m	Matrix by which a is multiplied. The result is added to current instance

void Axy (T_ a , const Matrix< T_ > * m) [virtual]

Add to matrix the product of a matrix by a scalar.

Parameters

in	a	Scalar to premultiply
in	m	Pointer to Matrix by which a is multiplied. The result is added to current instance

Implements [Matrix< T_ >](#).

TrMatrix ()

Default constructor.

Initialize a zero dimension tridiagonal matrix

void setSize (size_t $size$)

Set size (number of rows) of matrix.

Parameters

in	$size$	Number of rows and columns.
----	--------	-----------------------------

void Axy (T_ a , const TrMatrix< T_ > & m)

Add to matrix the product of a matrix by a scalar.

Parameters

in	a	Scalar to premultiply
in	m	Matrix by which a is multiplied. The result is added to current instance

void Axy (T_ *a*, const Matrix< T_ > * *m*) [virtual]

Add to matrix the product of a matrix by a scalar.

Parameters

in	<i>a</i>	Scalar to premultiply
in	<i>m</i>	Matrix by which <i>a</i> is multiplied. The result is added to current instance

Implements [Matrix< T_ >](#).

T_ operator() (size_t *i*, size_t *j*) const [virtual]

Operator () (Constant version).

Parameters

in	<i>i</i>	Row index
in	<i>j</i>	Column index

Implements [Matrix< T_ >](#).

T_ & operator() (size_t *i*, size_t *j*) [virtual]

Operator () (Non constant version).

Parameters

in	<i>i</i>	Row index
in	<i>j</i>	Column index

Implements [Matrix< T_ >](#).

TrMatrix< T_ > & operator= (const TrMatrix< T_ > & *m*)

Operator =.

Copy matrix *m* to current matrix instance.

TrMatrix< T_ > & operator*= (const T_ & *x*)

Operator *.

Premultiply matrix entries by constant value *x*.

int solve (Vect< T_ > & *b*) [virtual]

Solve a linear system with current matrix (forward and back substitution).

Parameters

in, out	<i>b</i>	Vect instance that contains right-hand side on input and solution on output.
---------	----------	--

Returns

- 0 if solution was normally performed,
- n if the n -th pivot is null.

Warning: Matrix is modified after this function.
Implements [Matrix< T_ >](#).

int solve (const Vect< T_ > & b , Vect< T_ > & x)

Solve a linear system with current matrix (forward and back substitution).

Parameters

in	b	Vect instance that contains right-hand side.
out	x	Vect instance that contains solution.

Returns

- 0 if solution was normally performed,
- n if the n -th pivot is null.

Warning: Matrix is modified after this function.

Iter ()

Default Constructor.

This constructor set default values: the maximal number of iterations is set to 100 and the tolerance to $1.e-8$

Iter (int max_it , real_t $toler$, int $verbose = 0$)

Constructor with iteration parameters.

Parameters

in	max_it	Maximum number of iterations
in	$toler$	Tolerance value for convergence
in	$verbose$	Verbosity parameter [default: 0] 0: No message output, > 0: message output with increasing display.

bool check (Vect< T_ > & u , const Vect< T_ > & v , int $opt = 2$)

Check convergence.

Parameters

in,out	u	Solution vector at previous iteration
in	v	Solution vector at current iteration
in	opt	Vector norm for convergence checking 1: 1-norm, 2: 2-norm, 0: Max. norm [default: 2]

Returns

true if convergence criterion is satisfied, false if not

After checking, this function copied v into u .

int solve (Iteration s , Preconditioner $p = \text{DIAG_PREC}$)

Solve equations using prescribed solver and preconditioner.

Parameters

in	s	Solver identification parameter To be chosen in the enumeration variable Iteration: DIRECT_SOLVER, CG_SOLVER, CGS_SOLVER, BICG_SOLVER, BICG_STAB_SOLVER, GMRES_SOLVER, QMR_SOLVER [Default: CGS_SOLVER]
in	p	Preconditioner identification parameter. To be chosen in the enumeration variable Preconditioner: IDENT_PREC, DIAG_PREC, SSOR_PREC, DILU_PREC, ILU_PREC [Default: DIAG_PREC]

Note

The argument p has no effect if the solver is DIRECT_SOLVER

5.12 Physical properties of media

Physical properties of materials and media.

Classes

- class [Material](#)

To treat material data. This class enables reading material data in material data files. It also returns these informations by means of its members.

5.12.1 Detailed Description

Physical properties of materials and media.

5.13 Porous Media problems

Porous Media equation classes.

Classes

- class `Equa_Porous< T_, NEN_, NEE_, NSN_, NSE_ >`
Abstract class for Porous Media Finite Element classes.

5.13.1 Detailed Description

Porous Media equation classes.

5.14 Shape Function

Shape function classes.

Classes

- class [FEShape](#)
Parent class from which inherit all finite element shape classes.
- class [triangle](#)
Defines a triangle. The reference element is the rectangle triangle with two unit edges.
- class [Hexa8](#)
Defines a three-dimensional 8-node hexahedral finite element using Q_1 -isoparametric interpolation.
- class [Line2](#)
To describe a 2-Node planar line finite element.
- class [Line2H](#)
To describe a 2-Node Hermite planar line finite element.
- class [Line3](#)
To describe a 3-Node quadratic planar line finite element.
- class [Penta6](#)
Defines a 6-node pentahedral finite element using P_1 interpolation in local coordinates $(s.x, s.y)$ and Q_1 isoparametric interpolation in local coordinates $(s.x, s.z)$ and $(s.y, s.z)$.
- class [Quad4](#)
Defines a 4-node quadrilateral finite element using Q_1 isoparametric interpolation.
- class [Tetra4](#)
Defines a three-dimensional 4-node tetrahedral finite element using P_1 interpolation.
- class [Triang3](#)
Defines a 3-Node (P_1) triangle.
- class [Triang6S](#)
Defines a 6-Node straight triangular finite element using P_2 interpolation.

5.14.1 Detailed Description

Shape function classes.

5.15 Solid Mechanics

Solid Mechanics finite element equations.

Classes

- class [Bar2DL2](#)
To build element equations for Planar Elastic Bar element with 2 DOF (Degrees of Freedom) per node.
- class [Beam3DL2](#)
To build element equations for 3-D beam equations using 2-node lines.
- class [Elas2DQ4](#)
To build element equations for 2-D linearized elasticity using 4-node quadrilaterals.
- class [Elas2DT3](#)
To build element equations for 2-D linearized elasticity using 3-node triangles.
- class [Elas3DH8](#)
To build element equations for 3-D linearized elasticity using 8-node hexahedra.
- class [Elas3DT4](#)
To build element equations for 3-D linearized elasticity using 4-node tetrahedra.
- class [Equa_Solid< T_, NEN_, NEE_, NSN_, NSE_ >](#)
Abstract class for Solid Mechanics Finite Element classes.

5.15.1 Detailed Description

Solid Mechanics finite element equations.

5.16 Solver

Solver functions and classes.

Classes

- class [Reconstruction](#)
To perform various reconstruction operations.
- class [EigenProblemSolver](#)
Class to find eigenvalues and corresponding eigenvectors of a given matrix in a generalized eigenproblem, i.e. Find scalars λ and non-null vectors v such that $[K]\{v\} = \lambda[M]\{v\}$ where $[K]$ and $[M]$ are symmetric matrices. The eigenproblem can be originated from a PDE. For this, we will refer to the matrices K and M as Stiffness and Mass matrices respectively.
- class [Iter< T_ >](#)
Class to drive an iterative process.
- class [LinearSolver< T_ >](#)
Class to solve systems of linear equations by iterative methods.
- class [MyOpt](#)
Abstract class to define by user specified optimization function.
- class [ODESolver](#)
To solve a system of ordinary differential equations.
- class [OptSolver](#)
To solve an optimization problem with bound constraints.
- class [Prec< T_ >](#)
To set a preconditioner.
- class [TimeStepping](#)
To solve time stepping problems, i.e. systems of linear ordinary differential equations of the form $[A2]\{y''\} + [A1]\{y'\} + [A0]\{y\} = \{b\}$.

Macros

- `#define` [MAX_NB_EQUATIONS](#) 5
Maximum number of equations.
- `#define` [MAX_NB_INPUT_FIELDS](#) 3
Maximum number of fields for an equation.
- `#define` [MAX_NB_MESHES](#) 10
Maximum number of meshes.
- `#define` [TIME_LOOP](#)(ts, t, ft, n)
A macro to loop on time steps to integrate on time ts : Time step t : Initial time value updated at each time step ft : Final time value n : Time step index.
- `#define` [TimeLoop](#)
A macro to loop on time steps to integrate on time.
- `#define` [IterationLoop](#) while (++theIteration<MaxNbIterations && Converged==false)
A macro to loop on iterations for an iterative procedure.

Functions

- ostream & **operator<<** (ostream &s, const Muscl3DT &m)
Output mesh data as calculated in class [Muscl3DT](#).
- template<class T_ >
int **BiCG** (const SpMatrix< T_ > &A, int prec, const Vect< T_ > &b, Vect< T_ > &x, int max_it, [real.t](#) toler, int verbose)
Biconjugate gradient solver function.
- template<class T_ >
int **BiCGStab** (const SpMatrix< T_ > &A, const Prec< T_ > &P, const Vect< T_ > &b, Vect< T_ > &x, int max_it, [real.t](#) toler, int verbose)
Biconjugate gradient stabilized solver function.
- template<class T_ >
int **BiCGStab** (const SpMatrix< T_ > &A, int prec, const Vect< T_ > &b, Vect< T_ > &x, int max_it, [real.t](#) toler, int verbose)
Biconjugate gradient stabilized solver function.
- template<class T_ >
int **CG** (const SpMatrix< T_ > &A, const Prec< T_ > &P, const Vect< T_ > &b, Vect< T_ > &x, int max_it, [real.t](#) toler, int verbose)
Conjugate gradient solver function.
- template<class T_ >
int **CG** (const SpMatrix< T_ > &A, int prec, const Vect< T_ > &b, Vect< T_ > &x, int max_it, [real.t](#) toler, int verbose)
Conjugate gradient solver function.
- template<class T_ >
int **CGS** (const SpMatrix< T_ > &A, int prec, const Vect< T_ > &b, Vect< T_ > &x, int max_it, [real.t](#) toler, int verbose)
Conjugate Gradient Squared solver function.
- template<class T_ >
int **GMRes** (const SpMatrix< T_ > &A, const Prec< T_ > &P, const Vect< T_ > &b, Vect< T_ > &x, size.t m, int max_it, [real.t](#) toler, int verbose)
GMRes solver function.
- template<class T_ >
int **GMRes** (const SpMatrix< T_ > &A, int prec, const Vect< T_ > &b, Vect< T_ > &x, size.t m, int max_it, [real.t](#) toler, int verbose)
GMRes solver function.
- template<class T_ >
int **GS** (const SpMatrix< T_ > &A, const Vect< T_ > &b, Vect< T_ > &x, [real.t](#) omega, int max_it, [real.t](#) toler, int verbose)
Gauss-Seidel solver function.
- template<class T_ >
int **Jacobi** (const SpMatrix< T_ > &A, const Vect< T_ > &b, Vect< T_ > &x, [real.t](#) omega, int max_it, [real.t](#) toler, int verbose)
Jacobi solver function.
- ostream & **operator<<** (ostream &s, const ODESolver &de)
Output differential system information.
- ostream & **operator<<** (ostream &s, const OptSolver &os)
Output differential system information.
- template<class T_ , class M_ >
int **Richardson** (const M_ &A, const Vect< T_ > &b, Vect< T_ > &x, [real.t](#) omega, int max_it, [real.t](#) toler, int verbose)

Richardson solver function.

- `template<class T_>`
`void Schur (SkMatrix< T_ > &A, SpMatrix< T_ > &U, SpMatrix< T_ > &L, SpMatrix< T_ >`
`&D, Vect< T_ > &b, Vect< T_ > &c)`

Solve a linear system of equations with a 2x2-block matrix.

- `template<class T_>`
`void Schur (PETScMatrix< T_ > &A, PETScMatrix< T_ > &U, PETScMatrix< T_ > &L,`
`PETScMatrix< T_ > &D, PETScVect< T_ > &b, PETScVect< T_ > &c)`

Solve a linear system of equations with a 2x2-block matrix.

- `template<class T_ , class M_>`
`int SSOR (const M_ &A, const Vect< T_ > &b, Vect< T_ > &x, int max.it, real.t toler, int`
`verbose)`

SSOR solver function.

- `ostream & operator<< (ostream &s, const TimeStepping &ts)`

Output differential system information.

5.16.1 Detailed Description

Solver functions and classes.

5.16.2 Macro Definition Documentation

#define MAX_NB_EQUATIONS 5

Maximum number of equations.

Useful for coupled problems

#define MAX_NB_INPUT_FIELDS 3

Maximum number of fields for an equation.

Useful for coupled problems

#define MAX_NB_MESHES 10

Maximum number of meshes.

Useful for coupled problems

#define TimeLoop

Value:

```
NbTimeSteps = int(theFinalTime/theTimeStep); \
    for (theTime=theTimeStep, theStep=1; theTime<
        theFinalTime+0.001*theTimeStep; theTime+=
        theTimeStep, ++theStep)
```

A macro to loop on time steps to integrate on time.

It uses the following global variables defined in **OFELI**: theStep, theTime, theTimeStep, theFinalTime

#define IterationLoop while (++theIteration<MaxNbIterations && Converged==false)

A macro to loop on iterations for an iterative procedure.

It uses the following global variables defined in **OFELI**: theIteration, MaxNbIterations, Converged

5.16.3 Function Documentation

int BiCG (const SpMatrix< T_ > & A, int prec, const Vect< T_ > & b, Vect< T_ > & x, int max_it, real_t toler, int verbose)

Biconjugate gradient solver function.

Parameters

in	<i>A</i>	Problem matrix (Instance of class SpMatrix).
in	<i>prec</i>	Enum variable selecting a preconditioner, among the values IDENT_PREC, DIAG_PREC, ILU_PREC or SSOR_PREC
in	<i>b</i>	Right-hand side vector (class Vect)
in,out	<i>x</i>	Vect instance containing initial solution guess in input and solution of the linear system in output (If iterations have succeeded).
in	<i>max↔ _it</i>	Maximum number of iterations.
	<i>toler</i>	[in] Tolerance for convergence (measured in relative weighted 2-Norm).
	<i>verbose</i>	[in] Information output parameter <ul style="list-style-type: none"> • 0: No output • 1: Output iteration information, • 2 and greater: Output iteration information and solution at each iteration.

Returns

Number of performed iterations,

Template Parameters

<T↔ ->	Data type (double, float, complex<double>, ...)
-----------	---

int BiCGStab (const SpMatrix< T_ > & A, const Prec< T_ > & P, const Vect< T_ > & b, Vect< T_ > & x, int max_it, real_t toler, int verbose)

Biconjugate gradient stabilized solver function.

Parameters

in	<i>A</i>	Problem matrix (Instance of class SpMatrix).
in	<i>P</i>	Preconditioner (Instance of class Prec).
in	<i>b</i>	Right-hand side vector (class Vect)
in,out	<i>x</i>	Vect instance containing initial solution guess on input and solution of the linear system on output (If iterations have succeeded).
in	<i>max↔ _it</i>	Maximum number of iterations.

Parameters

in	<i>toler</i>	Tolerance for convergence (measured in relative weighted 2-Norm).
in	<i>verbose</i>	Information output parameter <ul style="list-style-type: none"> • 0: No output • 1: Output iteration information, • 2 and greater: Output iteration information and solution at each iteration.

Returns

Number of performed iterations,

Template Parameters

$\langle T \leftrightarrow$ ->	Data type (double, float, complex<double>, ...)
-----------------------------------	---

int BiCGStab (const SpMatrix< T_ > & A, int *prec*, const Vect< T_ > & b, Vect< T_ > & x, int *max_it*, real_t *toler*, int *verbose*)

Biconjugate gradient stabilized solver function.

Parameters

in	<i>A</i>	Problem matrix (Instance of class SpMatrix).
in	<i>prec</i>	Enum variable selecting a preconditioner, among the values IDENT_PREC, DIAG_PREC, ILU_PREC or SSOR_PREC
in	<i>b</i>	Right-hand side vector (class Vect)
in,out	<i>x</i>	Vect instance containing initial solution guess in input and solution of the linear system in output (If iterations have succeeded).
in	<i>max\leftrightarrow _it</i>	Maximum number of iterations.
in	<i>toler</i>	Tolerance for convergence (measured in relative weighted 2-Norm).
in	<i>verbose</i>	Information output parameter <ul style="list-style-type: none"> • 0: No output • 1: Output iteration information, • 2 and greater: Output iteration information and solution at each iteration.

Returns

Number of performed iterations,

Template Parameters

$\langle T_{\leftrightarrow} \rightarrow$	Data type (double, float, complex<double>, ...)
---	---

```
int CG ( const SpMatrix< T_ > & A, const Prec< T_ > & P, const Vect< T_ > & b, Vect< T_ > & x, int max_it, real_t toler, int verbose )
```

Conjugate gradient solver function.

Parameters

in	A	Problem matrix (Instance of class SpMatrix).
in	P	Preconditioner (Instance of class Prec).
in	b	Right-hand side vector (class Vect)
in,out	x	Vect instance containing initial solution guess in input and solution of the linear system in output (If iterations have succeeded).
in	$max_{\leftrightarrow} _it$	Maximum number of iterations.
in	$toler$	Tolerance for convergence (measured in relative weighted 2-Norm).
in	$verbose$	Information output parameter <ul style="list-style-type: none"> • 0: No output • 1: Output iteration information, • 2 and greater: Output iteration information and solution at each iteration.

Returns

Number of performed iterations,

Template Parameters

$\langle T_{\leftrightarrow} \rightarrow$	Data type (double, float, complex<double>, ...)
---	---

```
int CG ( const SpMatrix< T_ > & A, int prec, const Vect< T_ > & b, Vect< T_ > & x, int max_it, real_t toler, int verbose )
```

Conjugate gradient solver function.

Parameters

in	A	Problem matrix (Instance of abstract class SpMatrix).
in	$prec$	Enum variable selecting a preconditioner, among the values IDENT_PREC, DIAG_PREC, ILU_PREC or SSOR_PREC
in	b	Right-hand side vector (class Vect)
in,out	x	Vect instance containing initial solution guess in input and solution of the linear system in output (If iterations have succeeded).
in	max_{it}	Maximum number of iterations.
in	$toler$	Tolerance for convergence (measured in relative weighted 2-Norm).
in	$verbose$	Information output parameter <ul style="list-style-type: none"> • 0: No output • 1: Output iteration information, • 2 and greater: Output iteration information and solution at each iteration.

Returns

Number of performed iterations,

Template Parameters

$\langle T_{\leftrightarrow} \rangle$	Data type (double, float, complex<double>, ...)
---------------------------------------	---

int CGS (const [SpMatrix](#)< T_{\leftrightarrow} > & A , int $prec$, const [Vect](#)< T_{\leftrightarrow} > & b , [Vect](#)< T_{\leftrightarrow} > & x , int max_{it} , real_t $toler$, int $verbose$)

Conjugate Gradient Squared solver function.

Parameters

in	A	Problem matrix (Instance of class SpMatrix).
in	$prec$	Enum variable selecting a preconditioner, among the values IDENT_PREC, DIAG_PREC, ILU_PREC or SSOR_PREC
in	b	Right-hand side vector (class Vect)
in,out	x	Vect instance containing initial solution guess in input and solution of the linear system in output (If iterations have succeeded).
in	max_{it}	Maximum number of iterations.
in	$toler$	Tolerance for convergence (measured in relative weighted 2-Norm).

Parameters

in	<i>verbose</i>	Information output parameter <ul style="list-style-type: none"> • 0: No output • 1: Output iteration information, • 2 and greater: Output iteration information and solution at each iteration.
----	----------------	--

Returns

Number of performed iterations

Template Parameters

$\langle T_{\leftrightarrow} \rightarrow$	Data type (real.t, float, complex<real.t>, ...)
---	---

int GMRes (const SpMatrix< T_ > & A, const Prec< T_ > & P, const Vect< T_ > & b, Vect< T_ > & x, size.t m, int max.it, real.t toler, int verbose)

GMRes solver function.

Parameters

in	<i>A</i>	Problem matrix (Instance of class SpMatrix).
in	<i>P</i>	Preconditioner (Instance of class Prec).
in	<i>b</i>	Right-hand side vector (class Vect)
in,out	<i>x</i>	Vect instance containing initial solution guess in input and solution of the linear system in output (If iterations have succeeded).
in	<i>m</i>	Number of subspaces to generate for iterations.
in	<i>max.it</i>	Maximum number of iterations.
in	<i>toler</i>	Tolerance for convergence (measured in relative weighted 2-Norm).
in	<i>verbose</i>	Information output parameter (0: No output, 1: Output iteration information, 2 and greater: Output iteration information and solution at each iteration).

Returns

Number of performed iterations,

Template Parameters

$\langle T_{\leftrightarrow} \rightarrow$	Data type (double, float, complex<double>, ...)
---	---

int GMRes (const SpMatrix< T_ > & A, int prec, const Vect< T_ > & b, Vect< T_ > & x, size_t m, int max_it, real_t toler, int verbose)

GMRes solver function.

Parameters

in	<i>A</i>	Problem matrix (Instance of class SpMatrix).
in	<i>prec</i>	Enum variable selecting a preconditioner, among the values IDENT_PREC, DIAG_PREC, ILU_PREC or SSOR_PREC
in	<i>b</i>	Right-hand side vector (class Vect)
in,out	<i>x</i>	Vect instance containing initial solution guess in input and solution of the linear system in output (If iterations have succeeded).
in	<i>m</i>	Number of subspaces to generate for iterations.
in	<i>max↔ _it</i>	Maximum number of iterations.
in	<i>toler</i>	Tolerance for convergence (measured in relative weighted 2-Norm).
in	<i>verbose</i>	Information output parameter (0: No output, 1: Output iteration information, 2 and greater: Output iteration information and solution at each iteration).

Returns

Number of performed iterations,

Template Parameters

<T↔ ->	Data type (double, float, complex<double>, ...)
-----------	---

int GS (const SpMatrix< T_ > & A, const Vect< T_ > & b, Vect< T_ > & x, real_t omega, int max_it, real_t toler, int verbose)

Gauss-Seidel solver function.

Parameters

in	<i>A</i>	Problem matrix (Instance of class SpMatrix).
in	<i>b</i>	Right-hand side vector (class Vect)
in,out	<i>x</i>	Vect instance containing initial solution guess in input and solution of the linear system in output (If iterations have succeeded).
in	<i>omega</i>	Relaxation parameter.
in	<i>max↔ _it</i>	Maximum number of iterations.
in	<i>toler</i>	Tolerance for convergence (measured in relative weighted 2-Norm).

Parameters

in	<i>verbose</i>	Information output parameter <ul style="list-style-type: none"> • 0: No output • 1: Output iteration information • 2 and greater: Output iteration information and solution at each iteration.
----	----------------	---

Returns

Number of performed iterations

Template Parameters

$\langle T_{\leftrightarrow} \rightarrow$	Data type (real.t, float, complex<real.t>, ...)
---	---

int Jacobi (const SpMatrix< T_ > &A, const Vect< T_ > &b, Vect< T_ > &x, real.t omega, int max_it, real.t toler, int verbose)

Jacobi solver function.

Parameters

in	<i>A</i>	Problem matrix (Instance of class SpMatrix).
in	<i>b</i>	Right-hand side vector (class Vect)
in, out	<i>x</i>	Vect instance containing initial solution guess in input and solution of the linear system in output (If iterations have succeeded).
in	<i>omega</i>	Relaxation parameter.
in	$max_{\leftrightarrow} _it$	Maximum number of iterations.
in, out	<i>toler</i>	Tolerance for convergence (measured in relative weighted 2-Norm).
in	<i>verbose</i>	Information output parameter (0: No output, 1: Output iteration information, 2 and greater: Output iteration information and solution at each iteration.

Returns

Number of performed iterations,

Template Parameters

$\langle T_{\rightarrow}$	Data type (real.t, float, complex<real.t>, ...)
$\langle M_{\leftrightarrow} \rightarrow$	Matrix storage class

int Richardson (const M_{-} & A , const Vect< T_{-} > & b , Vect< T_{-} > & x , real_t ω , int max_it , real_t $toler$, int $verbose$)

Richardson solver function.

Parameters

in	A	Problem matrix problem (Instance of abstract class M_{-}).
in	b	Right-hand side vector (class Vect)
	x	Vect instance containing initial solution guess in input and solution of the linear system in output (If iterations have succeeded).
in	ω	Relaxation parameter.
in	max_it	Maximum number of iterations.
in	$toler$	Tolerance for convergence (measured in relative weighted 2-Norm).
in	$verbose$	Information output parameter (0: No output, 1: Output iteration information, 2 and greater: Output iteration information and solution at each iteration.

Returns

nb_it Number of performed iterations,

Template Parameters

< T_{-} >	Data type (real_t, float, complex<real_t>, ...)
< M_{-} >	Matrix storage class

void Schur (SkMatrix< T_{-} > & A , SpMatrix< T_{-} > & U , SpMatrix< T_{-} > & L , SpMatrix< T_{-} > & D , Vect< T_{-} > & b , Vect< T_{-} > & c)

Solve a linear system of equations with a 2x2-block matrix.

The linear system is of the form

$$\begin{bmatrix} A & U \\ L & D \end{bmatrix} \begin{bmatrix} x \\ y \end{bmatrix} = \begin{bmatrix} b \\ c \end{bmatrix}$$

Parameters

in	A	Instance of class SkMatrix class for the first diagonal block. The matrix must be invertible and factorizable (Do not use SpMatrix class) where A, U, L, D are instances of matrix classes,
in	U	Instance of class SpMatrix for the upper triangle block. The matrix can be rectangular
in	L	Instance of class SpMatrix for the lower triangle block. The matrix can be rectangular
in	D	Instance of class SpMatrix for the second diagonal block. The matrix must be factorizable (Do not use SpMatrix class)

Parameters

in,out	b	Vector (Instance of class Vect) that contains the first block of right-hand side on input and the first block of the solution on output. b must have the same size as the dimension of A.
in,out	c	Vect instance that contains the second block of right-hand side on output and the first block of the solution on output. c must have the same size as the dimension of D.

Template Argument:

Template Parameters

$\langle T_{\leftarrow} \rightarrow$	data type (real.t, float, ...)
--------------------------------------	--------------------------------

void Schur (PETScMatrix< T_ > & A, PETScMatrix< T_ > & U, PETScMatrix< T_ > & L, PETScMatrix< T_ > & D, PETScVect< T_ > & b, PETScVect< T_ > & c)

Solve a linear system of equations with a 2x2-block matrix.

The linear system is of the form

$$\begin{bmatrix} A & U \\ L & D \end{bmatrix} \begin{bmatrix} x \\ y \end{bmatrix} = \begin{bmatrix} b \\ c \end{bmatrix}$$

Parameters

in	A	Instance of class SkMatrix class for the first diagonal block. The matrix must be invertible and factorizable (Do not use SpMatrix class) where A, U, L, D are instances of matrix classes,
in	U	Instance of class PETScMatrix for the upper triangle block. The matrix can be rectangular
in	L	Instance of class PETScMatrix for the lower triangle block. The matrix can be rectangular
in	D	Instance of class PETScMatrix for the second diagonal block. The matrix must be factorizable (Do not use SpMatrix class)
in,out	b	Vector (Instance of class PETScVect) that contains the first block of right-hand side on input and the first block of the solution on output. b must have the same size as the dimension of A.
in,out	c	PETScVect instance that contains the second block of right-hand side on output and the first block of the solution on output. c must have the same size as the dimension of D.

Template Argument:

Template Parameters

$\langle T_{\leftarrow} \rightarrow$	data type (real.t, float, ...)
--------------------------------------	--------------------------------


```
int SSOR ( const M_ & A, const Vect< T_ > & b, Vect< T_ > & x, int max_it, real_t toler, int verbose )
```

SSOR solver function.

Parameters

in	<i>A</i>	Problem matrix (Instance of abstract class M_).
in	<i>b</i>	Right-hand side vector (class Vect)
in,out	<i>x</i>	Vect instance containing initial solution guess in input and solution of the linear system in output (If iterations have succeeded).
in	<i>max↔ _it</i>	Maximum number of iterations.
in	<i>toler</i>	Tolerance for convergence (measured in relative weighted 2-Norm).
in	<i>verbose</i>	Information output parameter (0: No output, 1: Output iteration information, 2 and greater : Output iteration information and solution at each iteration.

Returns

Number of performed iterations,

Template Arguments:

- *T_* data type (double, float, ...)
- *M_* Matrix storage class

5.17 Utilities

Utility functions and classes.

Files

- file [OFELI.h](#)
Header file that includes all kernel classes of the library.
- file [OFELI.Config.h](#)
File that contains some macros.
- file [constants.h](#)
File that contains some widely used constants.

Classes

- class [Func](#)
A simple class to parse real valued functions.
- class [Tabulation](#)
To read and manipulate tabulated functions.
- class [UserData< T_ >](#)
Abstract class to define by user various problem data.
- class [Point< T_ >](#)
Defines a point with arbitrary type coordinates.
- class [Point2D< T_ >](#)
Defines a 2-D point with arbitrary type coordinates.
- class [Gauss](#)
Calculate data for Gauss integration.
- class [Timer](#)
To handle elapsed time counting.

Macros

- `#define OFELI_E 2.71828182845904523536028747135`
- `#define OFELI_PI 3.14159265358979323846264338328`
- `#define OFELI_THIRD 0.33333333333333333333333333333333`
- `#define OFELI_SIXTH 0.16666666666666666666666666666667`
- `#define OFELI_TWELVETH 0.08333333333333333333333333333333`
- `#define OFELI_SQRT2 1.41421356237309504880168872421`
- `#define OFELI_SQRT3 1.73205080756887729352744634151`
- `#define OFELI_ONEOVERPI 0.31830988618379067153776752675`
- `#define OFELI_GAUSS2 0.57735026918962576450914878050196`
- `#define OFELI_EPSMCH DBL_EPSILON`
- `#define OFELI_TOLERANCE OFELI_EPSMCH*10000`
- `#define OFELI_IMAG std::complex<double>(0.,1.);`
- `#define PARSE(exp, var) theParser.Parse(exp,var)`
- `#define EVAL(d) theParser.Eval(d)`

Typedefs

- typedef unsigned long `lsize_t`
This type stands for type `unsigned long`.
- typedef double `real_t`
This type stands for `double`.
- typedef std::complex< double > `complex_t`
This type stands for type `std::complex<double>`

Functions

- ostream & `operator<<` (ostream &s, const `complex_t` &x)
Output a complex number.
- ostream & `operator<<` (ostream &s, const std::string &c)
Output a string.
- template<class T_ >
ostream & `operator<<` (ostream &s, const vector< T_ > &v)
Output a vector instance.
- template<class T_ >
ostream & `operator<<` (ostream &s, const std::pair< T_, T_ > &a)
Output a pair instance.
- void `saveField` (Vect< `real_t` > &v, string output_file, int opt)
Save a vector to an output file in a given file format.
- void `saveField` (PETScVect< `real_t` > &v, string output_file, int opt)
Save a PETSc vector to an output file in a given file format.
- void `saveField` (PETScVect< `real_t` > &v, const Mesh &mesh, string output_file, int opt)
Save a PETSc vector to an output file in a given file format.
- void `saveField` (Vect< `real_t` > &v, const Grid &g, string output_file, int opt)
Save a vector to an output file in a given file format, for a structured grid data.
- void `saveGnuplot` (string input_file, string output_file, string mesh_file)
Save a vector to an input `Gnuplot` file.
- void `saveTecplot` (string input_file, string output_file, string mesh_file)
Save a vector to an output file to an input `Tecplot` file.
- void `saveVTK` (string input_file, string output_file, string mesh_file)
Save a vector to an output `VTK` file.
- void `saveGmsh` (string input_file, string output_file, string mesh_file)
Save a vector to an output `Gmsh` file.
- ostream & `operator<<` (ostream &s, const Tabulation &t)
Output Tabulated function data.
- template<class T_ >
bool `operator==` (const Point< T_ > &a, const Point< T_ > &b)
Operator ==
- template<class T_ >
Point< T_ > `operator+` (const Point< T_ > &a, const Point< T_ > &b)
Operator +
- template<class T_ >
Point< T_ > `operator+` (const Point< T_ > &a, const T_ &x)
Operator +

- `template<class T_>`
`Point< T_ > operator-` (`const Point< T_ > &a`)
Unary Operator -
- `template<class T_>`
`Point< T_ > operator-` (`const Point< T_ > &a, const Point< T_ > &b`)
Operator -
- `template<class T_>`
`Point< T_ > operator-` (`const Point< T_ > &a, const T_ &x`)
Operator -
- `template<class T_>`
`Point< T_ > operator*` (`const T_ &a, const Point< T_ > &b`)
*Operator **
- `template<class T_>`
`Point< T_ > operator*` (`const int &a, const Point< T_ > &b`)
*Operator *.*
- `template<class T_>`
`Point< T_ > operator*` (`const Point< T_ > &b, const T_ &a`)
Operator /
- `template<class T_>`
`Point< T_ > operator*` (`const Point< T_ > &b, const int &a`)
*Operator **
- `template<class T_>`
`T_ operator*` (`const Point< T_ > &a, const Point< T_ > &b`)
*Operator **
- `template<class T_>`
`Point< T_ > operator/` (`const Point< T_ > &b, const T_ &a`)
Operator /
- `bool areClose` (`const Point< double > &a, const Point< double > &b, double toler=OFELI.TOLERANCE`)
Return `true` if both instances of class `Point<double>` are distant with less then `toler`
- `double SqrDistance` (`const Point< double > &a, const Point< double > &b`)
Return squared euclidean distance between points `a` and `b`
- `double Distance` (`const Point< double > &a, const Point< double > &b`)
Return euclidean distance between points `a` and `b`
- `template<class T_>`
`std::ostream & operator<<` (`std::ostream &s, const Point< T_ > &a`)
Output point coordinates.
- `template<class T_>`
`bool operator==` (`const Point2D< T_ > &a, const Point2D< T_ > &b`)
Operator ==.
- `template<class T_>`
`Point2D< T_ > operator+` (`const Point2D< T_ > &a, const Point2D< T_ > &b`)
Operator +.
- `template<class T_>`
`Point2D< T_ > operator+` (`const Point2D< T_ > &a, const T_ &x`)
Operator +.
- `template<class T_>`
`Point2D< T_ > operator-` (`const Point2D< T_ > &a`)

Unary Operator -

- `template<class T_ >`
`Point2D< T_ >` **operator-** (const `Point2D< T_ >` &a, const `Point2D< T_ >` &b)

Operator -

- `template<class T_ >`
`Point2D< T_ >` **operator-** (const `Point2D< T_ >` &a, const `T_` &x)

*Operator **

- `template<class T_ >`
`Point2D< T_ >` **operator*** (const `T_` &a, const `Point2D< T_ >` &b)

*Operator *.*

- `template<class T_ >`
`Point2D< T_ >` **operator*** (const int &a, const `Point2D< T_ >` &b)
- `template<class T_ >`
`Point2D< T_ >` **operator*** (const `Point2D< T_ >` &b, const `T_` &a)

Operator /

- `template<class T_ >`
`Point2D< T_ >` **operator*** (const `Point2D< T_ >` &b, const int &a)

*Operator **

- `template<class T_ >`
`T_` **operator*** (const `Point2D< T_ >` &b, const `Point2D< T_ >` &a)

*Operator *.*

- `template<class T_ >`
`Point2D< T_ >` **operator/** (const `Point2D< T_ >` &b, const `T_` &a)

Operator /

- `bool areClose` (const `Point2D< real_t >` &a, const `Point2D< real_t >` &b, `real_t` toler=`OFELI.TOLERANCE`)

Return `true` if both instances of class `Point2D<real_t>` are distant with less then toler [Default: `OFELI.EPSMCH`].

- `real_t SqrDistance` (const `Point2D< real_t >` &a, const `Point2D< real_t >` &b)

Return squared euclidean distance between points `a` and `b`

- `real_t Distance` (const `Point2D< real_t >` &a, const `Point2D< real_t >` &b)

Return euclidean distance between points `a` and `b`

- `template<class T_ >`
`std::ostream & operator<<` (`std::ostream &s`, const `Point2D< T_ >` &a)

Output point coordinates.

- `void getMesh` (string file, ExternalFileFormat form, Mesh &mesh, size_t nb_dof=1)

Construct an instance of class `Mesh` from a mesh file stored in an external file format.

- `void getBamg` (string file, Mesh &mesh, size_t nb_dof=1)

Construct an instance of class `Mesh` from a mesh file stored in `Bamg` format.

- `void getEasymesh` (string file, Mesh &mesh, size_t nb_dof=1)

Construct an instance of class `Mesh` from a mesh file stored in `Easymesh` format.

- `void getGambit` (string file, Mesh &mesh, size_t nb_dof=1)

Construct an instance of class `Mesh` from a mesh file stored in `Gambit` neutral format.

- `void getGmsh` (string file, Mesh &mesh, size_t nb_dof=1)

Construct an instance of class `Mesh` from a mesh file stored in `Gmsh` format.

- `void getMatlab` (string file, Mesh &mesh, size_t nb_dof=1)

Construct an instance of class `Mesh` from a Matlab mesh data.

- `void getNetgen` (string file, Mesh &mesh, size_t nb_dof=1)

- Construct an instance of class `Mesh` from a mesh file stored in `Netgen` format.

 - `void getTetgen` (string file, Mesh &mesh, size_t nb_dof=1)
- Construct an instance of class `Mesh` from a mesh file stored in `Tetgen` format.

 - `void getTriangle` (string file, Mesh &mesh, size_t nb_dof=1)
- Construct an instance of class `Mesh` from a mesh file stored in `Triangle` format.

 - `void saveMesh` (const string &file, const Mesh &mesh, ExternalFileFormat form)
- This function saves mesh data a file for a given external format.

 - `void saveGmsh` (const string &gp_file, const Mesh &mesh)
- This function outputs a `Mesh` instance in a file in `Gmsh` format.

 - `void saveGnuplot` (const string &file, const Mesh &mesh)
- This function outputs a `Mesh` instance in a file in `Gmsh` format.

 - `void saveMatlab` (const string &file, const Mesh &mesh)
- This function outputs a `Mesh` instance in a file in `Matlab` format.

 - `void saveTecplot` (const string &file, const Mesh &mesh)
- This function outputs a `Mesh` instance in a file in `Tecplot` format.

 - `void saveVTK` (const string &file, const Mesh &mesh)
- This function outputs a `Mesh` instance in a file in `VTK` format.

 - `void saveBamg` (const string &file, Mesh &mesh)
- This function outputs a `Mesh` instance in a file in `Bamg` format.

 - `void BSpline` (size_t n, size_t t, Vect< Point< real_t > > &control, Vect< Point< real_t > > &output, size_t num_output)
- Function to perform a B-spline interpolation.

 - `void banner` (const string &prog=" ")
- Outputs a banner as header of any developed program.

 - `template<class T_ >`
`void QuickSort` (std::vector< T_ > &a, int begin, int end)
- Function to sort a vector.

 - `template<class T_ >`
`void qksort` (std::vector< T_ > &a, int begin, int end)
- Function to sort a vector.

 - `template<class T_ , class C_ >`
`void qksort` (std::vector< T_ > &a, int begin, int end, C_ compare)
- Function to sort a vector according to a key function.

 - `int Sgn` (real_t a)
- Return sign of a : -1 or 1.

 - `real_t Abs2` (complex_t a)
- Return square of modulus of complex number a

 - `real_t Abs2` (real_t a)
- Return square of real number a

 - `real_t Abs` (real_t a)
- Return absolute value of a

 - `real_t Abs` (complex_t a)
- Return modulus of complex number a

 - `real_t Abs` (const Point< real_t > &p)
- Return Norm of vector a

 - `real_t Conjg` (real_t a)
- Return complex conjugate of real number a

- `complex.t Conjg (complex.t a)`
Return complex conjugate of complex number *a*
- `real.t Max (real.t a, real.t b, real.t c)`
Return maximum value of real numbers *a*, *b* and *c*
- `int Max (int a, int b, int c)`
Return maximum value of integer numbers *a*, *b* and *c*
- `real.t Min (real.t a, real.t b, real.t c)`
Return minimum value of real numbers *a*, *b* and *c*
- `int Min (int a, int b, int c)`
Return minimum value of integer numbers *a*, *b* and *c*
- `real.t Max (real.t a, real.t b, real.t c, real.t d)`
Return maximum value of integer numbers *a*, *b*, *c* and *d*
- `int Max (int a, int b, int c, int d)`
Return maximum value of integer numbers *a*, *b*, *c* and *d*
- `real.t Min (real.t a, real.t b, real.t c, real.t d)`
Return minimum value of real numbers *a*, *b*, *c* and *d*
- `int Min (int a, int b, int c, int d)`
Return minimum value of integer numbers *a*, *b*, *c* and *d*
- `real.t Arg (complex.t x)`
Return argument of complex number *x*
- `complex.t Log (complex.t x)`
Return principal determination of logarithm of complex number *x*
- `template<class T_>`
`T_ Sqr (T_ x)`
Return square of value *x*
- `template<class T_>`
`void Scale (T_ a, const vector< T_ > &x, vector< T_ > &y)`
Multiply vector *x* by *a* and save result in vector *y*
- `template<class T_>`
`void Scale (T_ a, const Vect< T_ > &x, Vect< T_ > &y)`
Multiply vector *x* by *a* and save result in vector *y*
- `template<class T_>`
`void Scale (T_ a, vector< T_ > &x)`
Multiply vector *x* by *a*
- `template<class T_>`
`void Xpy (size_t n, T_ *x, T_ *y)`
Add array *x* to *y*
- `template<class T_>`
`void Xpy (const vector< T_ > &x, vector< T_ > &y)`
Add vector *x* to *y*
- `template<class T_>`
`void Axy (size_t n, T_ a, T_ *x, T_ *y)`
Multiply array *x* by *a* and add result to *y*
- `template<class T_>`
`void Axy (T_ a, const vector< T_ > &x, vector< T_ > &y)`
Multiply vector *x* by *a* and add result to *y*
- `template<class T_>`
`void Axy (T_ a, const Vect< T_ > &x, Vect< T_ > &y)`

- Multiply vector x by a and add result to y*

 - `template<class T_ >`
`void Copy (size_t n, T_ *x, T_ *y)`
Copy array x to y n is the arrays size.
 - `real_t Error2 (const vector< real_t > &x, const vector< real_t > &y)`
Return absolute L2 error between vectors x and y
 - `real_t RError2 (const vector< real_t > &x, const vector< real_t > &y)`
Return absolute L^2 error between vectors x and y
 - `real_t ErrorMax (const vector< real_t > &x, const vector< real_t > &y)`
Return absolute Max. error between vectors x and y
 - `real_t RErrorMax (const vector< real_t > &x, const vector< real_t > &y)`
Return relative Max. error between vectors x and y
 - `template<class T_ >`
`T_ Dot (size_t n, T_ *x, T_ *y)`
Return dot product of arrays x and y
 - `real_t Dot (const vector< real_t > &x, const vector< real_t > &y)`
Return dot product of vectors x and y .
 - `real_t Dot (const Vect< real_t > &x, const Vect< real_t > &y)`
Return dot product of vectors x and y
 - `template<class T_ >`
`T_ Dot (const Point< T_ > &x, const Point< T_ > &y)`
Return dot product of x and y
 - `real_t exprep (real_t x)`
Compute the exponential function with avoiding over and underflows.
 - `template<class T_ >`
`void Assign (vector< T_ > &v, const T_ &a)`
Assign the value a to all entries of a vector v
 - `template<class T_ >`
`void Clear (vector< T_ > &v)`
Assign 0 to all entries of a vector.
 - `template<class T_ >`
`void Clear (Vect< T_ > &v)`
Assign 0 to all entries of a vector.
 - `real_t Nrm2 (size_t n, real_t *x)`
Return 2-norm of array x
 - `real_t Nrm2 (const vector< real_t > &x)`
Return 2-norm of vector x
 - `template<class T_ >`
`real_t Nrm2 (const Point< T_ > &a)`
Return 2-norm of a
 - `bool Equal (real_t x, real_t y, real_t toler=OFELLEPSMCH)`
Function to return true if numbers x and y are close up to a given tolerance $toler$
 - `char itoc (int i)`
Function to convert an integer to a character.
 - `string itos (int i)`
Function to convert an integer to a string.
 - `std::string itos (size_t i)`

- Function to convert an integer to a string.*

 - string `dtos` (`real_t d`)

Function to convert a real to a string.
- template<class T_>
T_ `stringTo` (const std::string &s)

Function to convert a string to a template type parameter.
- void `RTrim` (char *s)

Function to remove blanks at the end of a string.
- void `LTrim` (char *s)

Function to remove blanks at the beginning of a string.
- void `Trim` (char *s)

Function to remove blanks at the beginning and end of a string.
- template<class T_>
void `Swap` (T_ &a, T_ &b)

Swap elements a and b.

5.17.1 Detailed Description

Utility functions and classes.

5.17.2 Macro Definition Documentation

#define OFELI_E 2.71828182845904523536028747135

Value of e or exp (with 28 digits)

#define OFELI_PI 3.14159265358979323846264338328

Value of Pi (with 28 digits)

#define OFELI_THIRD 0.33333333333333333333333333333333

Value of $1/3$ (with 28 digits)

#define OFELI_SIXTH 0.16666666666666666666666666666667

Value of $1/6$ (with 28 digits)

#define OFELI_TWELVETH 0.08333333333333333333333333333333

Value of $1/12$ (with 28 digits)

#define OFELI_SQRT2 1.41421356237309504880168872421

Value of $\sqrt{2}$ (with 28 digits)

#define OFELI_SQRT3 1.73205080756887729352744634151

Value of $\sqrt{3}$ (with 28 digits)

#define OFELI_ONEOVERPI 0.31830988618379067153776752675

Value of $1/Pi$ (with 28 digits)

#define OFELI_GAUSS2 0.57735026918962576450914878050196

Value of $1/\sqrt{3}$ (with 32 digits)

#define OFELI_EPSMCH DBL_EPSILON

Value of Machine Epsilon

#define OFELI_TOLERANCE OFELI_EPSMCH*10000

Default tolerance for an iterative process = OFELI_EPSMCH * 10000

#define OFELI_IMAG std::complex<double>(0.,1.);

= Unit imaginary number (i)

#define PARSE(exp, var) theParser.Parse(exp,var)

A macro that parses a regular expression *exp* using the variables in the string *var*. For instance, to parse the function $\sin(x+y)$ one must declare `PARSE("sin(x+y)","x,y")`

#define EVAL(d) theParser.Eval(d)

A macro that evaluates a parsed regular expression For instance, with a declaration `PARSE("sin(x+y)","x,y")` the data $x=1$ and $y=2$ using this function must be evaluated as follows: `EVAL(d)` with $d[0]=1$, $d[1]=2$

5.17.3 Function Documentation

void saveField (Vect< real.t > &v, string output_file, int opt)

Save a vector to an output file in a given file format.

Case where the vector contains mesh information

Parameters

in	<i>v</i>	Vect instance to save
in	<i>output_file</i>	Output file where to save the vector
in	<i>opt</i>	Option to choose file format to save. This is to be chosen among enumerated values: GMSH GNUPLOT MATLAB TECPLOT VTK

void saveField (PETScVect< real.t > &v, string output_file, int opt)

Save a PETSc vector to an output file in a given file format.

Case where the vector does not contain mesh information

Parameters

in	<i>v</i>	PETScVect instance to save
in	<i>output_file</i>	Output file where to save the vector
in	<i>opt</i>	Option to choose file format to save. This is to be chosen among enumerated values: GMSH, GNUPLOT, MATLAB, TECPLOT, VTK

void saveField (PETScVect< real.t > &v, const Mesh &mesh, string output_file, int opt)

Save a PETSc vector to an output file in a given file format.

Case where the vector does not contain mesh information

Parameters

in	<i>v</i>	PETScVect instance to save
in	<i>mesh</i>	Mesh instance
in	<i>output_file</i>	Output file where to save the vector
in	<i>opt</i>	Option to choose file format to save. This is to be chosen among enumerated values: GMSH, GNUPLOT, MATLAB, TECPLOT, VTK

void saveField (Vect< real.t > &v, const Grid &g, string output_file, int opt = VTK)

Save a vector to an output file in a given file format, for a structured grid data.

Parameters

in	<i>v</i>	Vect instance to save
in	<i>g</i>	Grid instance
in	<i>output_file</i>	Output file where to save the vector
in	<i>opt</i>	Option to choose file format to save. This is to be chosen among enumerated values: VTK

void saveGnuplot (string input_file, string output_file, string mesh_file)

Save a vector to an input Gnuplot file.

Gnuplot is a command-line driven program for producing 2D and 3D plots. It is under the GNU General Public License. Available information can be found in the site:

<http://www.gnuplot.info/>

Parameters

in	<i>input_file</i>	Input file (OFELI XML file containing a field).
in	<i>output_file</i>	Output file (gnuplot format file)
in	<i>mesh_file</i>	File containing mesh data

void saveTecplot (string input_file, string output_file, string mesh_file)

Save a vector to an output file to an input Tecplot file.

Tecplot is high quality post graphical commercial processing program developed by Amtec. Available information can be found in the site: <http://www.tecplot.com>

Parameters

in	<i>input_file</i>	Input file (OFELI XML file containing a field).
in	<i>output_file</i>	Output file (gnuplot format file)

Parameters

in	<i>mesh_file</i>	File containing mesh data
----	------------------	---------------------------

saveVTK (string *input_file*, string *output_file*, string *mesh_file*)

Save a vector to an output **VTK** file.

The Visualization ToolKit (VTK) is an open source, freely available software system for 3D computer graphics. Available information can be found in the site:

<http://public.kitware.com/VTK/>

Parameters

in	<i>input_file</i>	Input file (OFELI XML file containing a field).
in	<i>output_file</i>	Output file (VTK format file)
in	<i>mesh_file</i>	File containing mesh data

void saveGmsh (string *input_file*, string *output_file*, string *mesh_file*)

Save a vector to an output **Gmsh** file.

Gmsh is a free mesh generator and postprocessor that can be downloaded from the site:

<http://www.geuz.org/gmsh/>

Parameters

in	<i>input_file</i>	Input file (OFELI XML file containing a field).
in	<i>output_file</i>	Output file (Gmsh format file)
in	<i>mesh_file</i>	File containing mesh data

bool operator== (const Point< T_ > & a, const Point< T_ > & b)

Operator ==

Return true if a=b, false if not.

Point< T_ > operator+ (const Point< T_ > & a, const Point< T_ > & b)

Operator +

Return sum of two points a and b

Point< T_ > operator+ (const Point< T_ > & a, const T_ & x)

Operator +

Translate a by x

Point< T_ > operator- (const Point< T_ > & a)

Unary Operator -

Return minus a

Point< T_ > operator- (const Point< T_ > & a, const Point< T_ > & b)

Operator -
Return point a minus point b

Point< T_ > operator- (const Point< T_ > & a, const T_ & x)

Operator -
Translate a by -x

Point< T_ > operator* (const T_ & a, const Point< T_ > & b)

Operator *
Return point b premultiplied by constant a

Point< T_ > operator* (const int & a, const Point< T_ > & b)

Operator *.
Return point b divided by integer constant a

Point< T_ > operator* (const Point< T_ > & b, const T_ & a)

Operator /
Return point b multiplied by constant a

Point< T_ > operator* (const Point< T_ > & b, const int & a)

Operator *
Return point b postmultiplied by constant a

T_ operator* (const Point< T_ > & b, const Point< T_ > & a)

Operator *
Return inner (scalar) product of points a and b

Point< T_ > operator/ (const Point< T_ > & b, const T_ & a)

Operator /
Return point b divided by constant a

bool operator== (const Point2D< T_ > & a, const Point2D< T_ > & b)

Operator ==.
Return true if a=b, false if not.

Point2D< T_ > operator+ (const Point2D< T_ > & a, const Point2D< T_ > & b)

Operator +.
Return sum of two points a and b

Point2D< T_ > operator+ (const Point2D< T_ > & a, const T_ & x)

Operator +.
Translate a by x

Point2D< T_ > operator- (const Point2D< T_ > & a)

Unary Operator -
Return minus a

Point2D< T_ > operator- (const Point2D< T_ > & a, const Point2D< T_ > & b)

Operator -
Return point a minus point b

Point2D< T_ > operator- (const Point2D< T_ > & a, const T_ & x)

Operator -
Translate a by -x

Point2D< T_ > operator* (const T_ & a, const Point2D< T_ > & b)

Operator *.
Return point b premultiplied by constant a

Point2D< T_ > operator* (const int & a, const Point2D< T_ > & b)

Operator *.
Return point b divided by integer constant a

Point2D< T_ > operator* (const Point2D< T_ > & b, const T_ & a)

Operator /
Return point b postmultiplied by constant a

Point2D< T_ > operator* (const Point2D< T_ > & b, const int & a)

Operator *
Return point b postmultiplied by constant a

T_ operator* (const Point2D< T_ > & b, const Point2D< T_ > & a)

Operator *.
Return point *b* postmultiplied by integer constant *a*.

Point2D< T_ > operator/ (const Point2D< T_ > & b, const T_ & a)

Operator /
Return point b divided by constant a

void getMesh (string *file*, ExternalFileFormat *form*, Mesh & *mesh*, size_t *nb_dof* = 1)

Construct an instance of class [Mesh](#) from a mesh file stored in an external file format.

Parameters

in	<i>file</i>	Input mesh file name.
----	-------------	-----------------------

Parameters

in	<i>form</i>	Format of the mesh file. This one can be chosen among the enumerated values: <ul style="list-style-type: none"> • GMSH: Mesh generator Gmsh, see site: http://www.geuz.org/gmsh/ • MATLAB: Matlab file, see site: http://www.mathworks.com/products/matlab/ • EASYMESH: Easymesh is a 2-D mesh generator, see site: http://web.mit.edu/easymesh_v1.4/www/easymesh.html • GAMBIT: Gambit is a mesh generator associated to Fluent http://www.stanford.edu/class/me469b/gambit_download.html • BAMG: Mesh generator Bamg, see site: http://raweb.inria.fr/rapportsactivite/RA2002/gamma/uid25.html • NETGEN: Netgen is a 3-D mesh generator, see site: http://www.hpfem.jku.at/netgen/ • TETGEN: Tetgen is a 3-D mesh generator, see site: http://tetgen.berlios.de/ • TRIANGLE.FF: Triangle is a 2-D mesh generator, see site: http://www.cs.cmu.edu/~quake/triangle.html
out	<i>mesh</i>	Mesh instance created by the function.
in	<i>nb_dof</i>	Number of degrees of freedom for each node. This information is not provided, in general, by mesh generators. Its default value here is 1.

void getBamg (string *file*, Mesh & *mesh*, size_t *nb_dof* = 1)

Construct an instance of class **Mesh** from a mesh file stored in **Bamg** format.

Parameters

in	<i>file</i>	Name of a file written in the Bamg format.
----	-------------	--

Note

Bamg is a 2-D mesh generator. It allows to construct adapted meshes from a given metric. It was developed at INRIA, France. Available information can be found in the site: <http://raweb.inria.fr/rapportsactivite/RA2002/gamma/uid25.html>

Parameters

out	<i>mesh</i>	Mesh instance created by the function.
in	<i>nb_dof</i>	Number of degrees of freedom for each node. This information is not provided, in general, by mesh generators. Its default value here is 1.

void getEasymesh (string *file*, Mesh & *mesh*, size_t *nb_dof* = 1)

Construct an instance of class **Mesh** from a mesh file stored in **Easymesh** format.

Parameters

in	<i>file</i>	Name of a file (without extension) written in Easymesh format. Actually, the function Easymesh2MDF attempts to read mesh data from files <i>file.e</i> , <i>file.n</i> and <i>file.s</i> produced by Easymesh .
----	-------------	--

Note

Easymesh is a free program that generates 2-D, unstructured, Delaunay and constrained Delaunay triangulations in general domains. It can be downloaded from the site:

<http://www.dinma.univ.trieste.it/nirftc/research/easymesh/Default.htm>

Parameters

in	<i>mesh</i>	Mesh instance created by the function.
in	<i>nb_dof</i>	Number of degrees of freedom for each node. This information is not provided, in general, by mesh generators. Its default value here is 1.

void getGambit (string *file*, Mesh & *mesh*, size_t *nb_dof* = 1)

Construct an instance of class **Mesh** from a mesh file stored in **Gambit** neutral format.

Note

Gambit is a commercial mesh generator associated to the CFD code **Fluent**. Informations about **Gambit** can be found in the site:

<http://www.fluent.com/software/gambit/>

Parameters

in	<i>file</i>	Name of a file written in the Gambit neutral format.
out	<i>mesh</i>	Mesh instance created by the function.
in	<i>nb_dof</i>	Number of degrees of freedom for each node. This information is not provided, in general, by mesh generators. Its default value here is 1.

void getGmsh (string *file*, Mesh & *mesh*, size_t *nb_dof* = 1)

Construct an instance of class **Mesh** from a mesh file stored in **Gmsh** format.

Note

Gmsh is a free mesh generator that can be downloaded from the site:

<http://www.geuz.org/gmsh/>

Parameters

in	<i>file</i>	Name of a file written in the Gmsh format.
out	<i>mesh</i>	Mesh instance created by the function.
in	<i>nb_dof</i>	Number of degrees of freedom for each node. This information is not provided, in general, by mesh generators. Its default value here is 1.

void getMatlab (string *file*, Mesh & *mesh*, size_t *nb_dof* = 1)

Construct an instance of class **Mesh** from a Matlab mesh data.

Note

Matlab is a language of scientific computing including visualization. It is developed by **MathWorks**. Available information can be found in the site:
<http://www.mathworks.com/products/matlab/>

Parameters

in	<i>file</i>	Name of a file created by Matlab by executing the script file <code>Matlab20FELI.m</code>
out	<i>mesh</i>	Mesh instance created by the function.
in	<i>nb_dof</i>	Number of degrees of freedom for each node. This information is not provided, in general, by mesh generators. Its default value here is 1.

void getNetgen (string *file*, Mesh & *mesh*, size_t *nb_dof* = 1)

Construct an instance of class **Mesh** from a mesh file stored in **Netgen** format.

Note

Netgen is a tetrahedral mesh generator that can be downloaded from the site:
<http://www.hpfem.jku.at/netgen/>

Parameters

in	<i>file</i>	Name of a file written in the Netgen format.
out	<i>mesh</i>	Mesh instance created by the function.
in	<i>nb_dof</i>	Number of degrees of freedom for each node. This information is not provided, in general, by mesh generators. [default = 1]

void getTetgen (string *file*, Mesh & *mesh*, size_t *nb_dof* = 1)

Construct an instance of class **Mesh** from a mesh file stored in **Tetgen** format.

Note

Tetgen is a free three-dimensional mesh generator that can be downloaded in the site:
<http://tetgen.berlios.de/>

Parameters

in	<i>file</i>	Name of a file written in the Tetgen format.
out	<i>mesh</i>	Mesh instance created by the function.
in	<i>nb_dof</i>	Number of degrees of freedom for each node. This information is not provided, in general, by mesh generators. Its default value here is 1.

void getTriangle (string *file*, Mesh & *mesh*, size_t *nb_dof* = 1)

Construct an instance of class **Mesh** from a mesh file stored in **Triangle** format.

Note

TRIANGLE is a C program that can generate meshes, Delaunay triangulations and Voronoi diagrams for 2D pointsets that can be downloaded in the site:

http://people.scs.fsu.edu/~burkardt/c_src/triangle/triangle.html/

Parameters

in	<i>file</i>	Name of a file written in the Tetgen format.
out	<i>mesh</i>	Mesh instance created by the function.
in	<i>nb_dof</i>	Number of degrees of freedom for each node. This information is not provided, in general, by mesh generators. Its default value here is 1.

void saveMesh (const string & *file*, const Mesh & *mesh*, ExternalFileFormat *form*)

This function saves mesh data a file for a given external format.

Parameters

in	<i>file</i>	File where to store mesh
in	<i>mesh</i>	Mesh instance to save
in	<i>form</i>	Format of the mesh file. This one can be chosen among the enumerated values: <ul style="list-style-type: none"> • GMSH: Mesh generator and graphical postprocessor Gmsh: http://www.geuz.org/gmsh/ • GNUPLLOT: Well known graphics software: http://www.gnuplot.info/ • MATLAB: Matlab file: http://www.mathworks.com/products/matlab/ • TECPLOT: Commercial graphics software: http://www.tecplot.com • VTK: Graphics format for the free postprocessor ParaView: http://public.kitware.com/VTK/

void saveGmsh (const string & *file*, const Mesh & *mesh*)

This function outputs a **Mesh** instance in a file in **Gmsh** format.

Note

Gmsh is a free mesh generator that can be downloaded from the site: <http://www.geuz.org/gmsh/>

Parameters

out	<i>file</i>	Output file in Gmsh format.
in	<i>mesh</i>	Mesh instance to save.

void saveGnuplot (const string &file, const Mesh & mesh)

This function outputs a **Mesh** instance in a file in **Gmsh** format.

Note

Gnuplot is a command-line driven program for producing 2D and 3D plots. It is under the GNU General Public License. Available information can be found in the site: <http://www.gnuplot.info/>

Parameters

out	<i>file</i>	Output file in Gnuplot format.
in	<i>mesh</i>	Mesh instance to save.

void saveMatlab (const string &file, const Mesh & mesh)

This function outputs a **Mesh** instance in a file in **Matlab** format.

Note

Matlab is a language of scientific computing including visualization. It is developed by **MathWorks**. Available information can be found in the site: <http://www.mathworks.com/products/matlab/>

Parameters

out	<i>file</i>	Output file in Matlab format.
in	<i>mesh</i>	Mesh instance to save.

void saveTecplot (const string &file, const Mesh & mesh)

This function outputs a **Mesh** instance in a file in **Tecplot** format.

Note

Tecplot is high quality post graphical commercial processing program developed by **Amtec**. Available information can be found in the site: <http://www.tecplot.com>

Parameters

out	<i>file</i>	Output file in Tecplot format.
in	<i>mesh</i>	Mesh instance to save.

void saveVTK (const string &file, const Mesh & mesh)

This function outputs a [Mesh](#) instance in a file in **VTK** format.

Note

The Visualization ToolKit (VTK) is an open source, freely available software system for 3D computer graphics. Available information can be found in the site:

<http://public.kitware.com/VTK/>

Parameters

out	<i>file</i>	Output file in VTK format.
in	<i>mesh</i>	Mesh instance to save.

void saveBamg (const string &file, Mesh & mesh)

This function outputs a [Mesh](#) instance in a file in **Bamg** format.

Parameters

in	<i>file</i>	Name of a file written in the Bamg format.
----	-------------	--

Note

Bamg is a 2-D mesh generator. It allows to construct adapted meshes from a given metric. It was developed at INRIA, France. Available information can be found in the site:

<http://raweb.inria.fr/rapportsactivite/RA2002/gamma/uid25.html>

Parameters

in	<i>mesh</i>	Mesh instance.
----	-------------	--------------------------------

BSpline (size_t n, size_t t, Vect< Point< real_t > > & control, Vect< Point< real_t > > & output, size_t num_output)

Function to perform a B-spline interpolation.

This program is adapted from a free program ditributed by Keith Vertanen (vertankd@cda.mrs.umn.edu) in 1994.

Parameters

Parameters

in	<i>n</i>	Number of control points minus 1.
in	<i>t</i>	Degree of the polynomial plus 1.
in	<i>control</i>	Control point array made up of Point stucture.
out	<i>output</i>	Vector in which the calculated spline points are to be put.
in	<i>num_output</i>	How many points on the spline are to be calculated.

Note

Condition: $n+2 > t$ (No curve results if $n+2 \leq t$) Control vector contains the number of points specified by *n* Output array is the proper size to hold *num_output* point structures

void banner (const string & prog = " ")

Outputs a banner as header of any developed program.

Parameters

in	<i>prog</i>	Calling program name. Enables writing a copyright notice accompanying the program.
----	-------------	--

void QuickSort (std::vector< T_ > & a, int begin, int end)

Function to sort a vector.

qksort uses the famous quick sorting algorithm.

Parameters

in,out	<i>a</i>	Vector to sort.
in	<i>begin</i>	index of starting iterator
in	<i>end</i>	index of ending iterator

The calling program must provide an overloading of the operator < for the type T_.

void qksort (std::vector< T_ > & a, int begin, int end)

Function to sort a vector.

qksort uses the famous quick sorting algorithm.

Parameters

in,out	<i>a</i>	Vector to sort.
in	<i>begin</i>	index of starting index (default value is 0)
in	<i>end</i>	index of ending index (default value is the vector size - 1)

void qksort (std::vector< T_ > & a, int begin, int end, C_ compare)

Function to sort a vector according to a key function.
qksort uses the famous quick sorting algorithm.

Parameters

in,out	<i>a</i>	Vector to sort.
in	<i>begin</i>	index of starting index (0 for the beginning of the vector)
in	<i>end</i>	index of ending index
in	<i>compare</i>	A function object that implements the ordering. The user must provide this function that returns a boolean function that is true if the first argument is less than the second and false if not.

void Scale (T_ a, const vector< T_ > & x, vector< T_ > & y)

Multiply vector x by a and save result in vector y
x and y are instances of class vector<T_>

void Scale (T_ a, const Vect< T_ > & x, Vect< T_ > & y)

Multiply vector x by a and save result in vector y
x and y are instances of class Vect<T_>

void Scale (T_ a, vector< T_ > & x)

Multiply vector x by a
x is an instance of class vector<T_>

void Xpy (const vector< T_ > & x, vector< T_ > & y)

Add vector x to y
x and y are instances of class vector<T_>

void Axy (size_t n, T_ a, T_ * x, T_ * y)

Multiply array x by a and add result to y
n is the arrays size.

void Axy (T_ a, const vector< T_ > & x, vector< T_ > & y)

Multiply vector x by a and add result to y
x and y are instances of class vector<T_>

void Axy (T_ a, const Vect< T_ > & x, Vect< T_ > & y)

Multiply vector x by a and add result to y
x and y are instances of class Vect<T_>

T_ Dot (size_t n, T_ * x, T_ * y)

Return dot product of arrays x and y
n is the arrays size.

double Dot (const vector< real_t > & x, const vector< real_t > & y)

Return dot product of vectors x and y.
 x and y are instances of class vector<double>

real_t Dot (const Vect< real_t > & x, const Vect< real_t > & y)

Return dot product of vectors x and y
 x and y are instances of class Vect<T_>

void Clear (vector< T_ > & v)

Assign 0 to all entries of a vector.

Parameters

in	<i>v</i>	Vector to clear
----	----------	-----------------

void Clear (Vect< T_ > & v)

Assign 0 to all entries of a vector.

Parameters

in	<i>v</i>	Vector to clear
----	----------	-----------------

real_t Nrm2 (size_t n, real_t * x)

Return 2-norm of array x

Parameters

in	<i>n</i>	is Array length
in	<i>x</i>	Array to treat

bool Equal (real_t x, real_t y, real_t toler = OFELI_EPSMCH)

Function to return true if numbers x and y are close up to a given tolerance toler
 Default value of tolerance is the constant OFELI_EPSMCH

5.18 Vector and Matrix

Vector and matrix classes.

Classes

- class [BMatrix< T_ >](#)
To handle band matrices.
- class [DMatrix< T_ >](#)
To handle dense matrices.
- class [DSMatrix< T_ >](#)
To handle symmetric dense matrices.
- class [LocalMatrix< T_, NR_, NC_ >](#)
Handles small size matrices like element matrices, with a priori known size.
- class [LocalVect< T_, N_ >](#)
Handles small size vectors like element vectors.
- class [PETScMatrix< T_ >](#)
To handle matrices in sparse storage format using the Petsc library.
- class [PETScVect< T_ >](#)
To handle general purpose vectors using Petsc.
- class [PETScWrapper< T_ >](#)
This class is a wrapper to be used when the library Petsc is installed and used with [OFELI](#).
- class [SkMatrix< T_ >](#)
To handle square matrices in skyline storage format.
- class [SkSMatrix< T_ >](#)
To handle symmetric matrices in skyline storage format.
- class [SpMatrix< T_ >](#)
To handle matrices in sparse storage format.
- class [TrMatrix< T_ >](#)
To handle tridiagonal matrices.
- class [Vect< T_ >](#)
To handle general purpose vectors.

Typedefs

- typedef Eigen::Matrix< T_, Eigen::Dynamic, 1 > [VectorX](#)
This type is the vector type in the Eigen library.

Functions

- template<class T_ >
Vect< T_ > [operator*](#) (const BMatrix< T_ > &A, const Vect< T_ > &b)
*Operator * (Multiply vector by matrix and return resulting vector.*
- template<class T_ >
BMatrix< T_ > [operator*](#) (T_ a, const BMatrix< T_ > &A)
*Operator * (Premultiplication of matrix by constant)*
- template<class T_ >
ostream & [operator<<](#) (ostream &s, const BMatrix< T_ > &a)
Output matrix in output stream.

- `template<class T_>`
`Vect< T_ > operator* (const DMatrix< T_ > &A, const Vect< T_ > &b)`
*Operator * (Multiply vector by matrix and return resulting vector).*
- `template<class T_>`
`ostream & operator<< (ostream &s, const DMatrix< T_ > &a)`
Output matrix in output stream.
- `template<class T_>`
`Vect< T_ > operator* (const DSMatrix< T_ > &A, const Vect< T_ > &b)`
*Operator * (Multiply vector by matrix and return resulting vector).*
- `template<class T_>`
`ostream & operator<< (ostream &s, const DSMatrix< T_ > &a)`
Output matrix in output stream.
- `template<class T_ , size_t NR_ , size_t NC_>`
`LocalMatrix< T_ , NR_ , NC_ > operator* (T_ a, const LocalMatrix< T_ , NR_ , NC_ > &x)`
*Operator * (Multiply matrix x by scalar a)*
- `template<class T_ , size_t NR_ , size_t NC_>`
`LocalMatrix< T_ , NR_ , NC_ > operator/ (T_ a, const LocalMatrix< T_ , NR_ , NC_ > &x)`
Operator / (Divide matrix x by scalar a)
- `template<class T_ , size_t NR_ , size_t NC_>`
`LocalMatrix< T_ , NR_ , NC_ > operator+ (const LocalMatrix< T_ , NR_ , NC_ > &x, const LocalMatrix< T_ , NR_ , NC_ > &y)`
Operator + (Add matrix x to y)
- `template<class T_ , size_t NR_ , size_t NC_>`
`LocalMatrix< T_ , NR_ , NC_ > operator- (const LocalMatrix< T_ , NR_ , NC_ > &x, const LocalMatrix< T_ , NR_ , NC_ > &y)`
Operator - (Subtract matrix y from x)
- `template<class T_ , size_t NR_ , size_t NC_>`
`ostream & operator<< (ostream &s, const LocalMatrix< T_ , NR_ , NC_ > &a)`
Output vector in output stream.
- `template<class T_ , size_t N_>`
`LocalVect< T_ , N_ > operator+ (const LocalVect< T_ , N_ > &x, const LocalVect< T_ , N_ > &y)`
Operator + (Add two vectors)
- `template<class T_ , size_t N_>`
`LocalVect< T_ , N_ > operator- (const LocalVect< T_ , N_ > &x, const LocalVect< T_ , N_ > &y)`
Operator - (Subtract two vectors)
- `template<class T_ , size_t N_>`
`LocalVect< T_ , N_ > operator* (T_ a, const LocalVect< T_ , N_ > &x)`
*Operator * (Premultiplication of vector by constant)*
- `template<class T_ , size_t N_>`
`LocalVect< T_ , N_ > operator/ (T_ a, const LocalVect< T_ , N_ > &x)`
Operator / (Division of vector by constant)
- `template<class T_ , size_t N_>`
`real_t Dot (const LocalVect< T_ , N_ > &a, const LocalVect< T_ , N_ > &b)`
Calculate dot product of 2 vectors (instances of class LocalVect)
- `template<class T_ , size_t N_>`
`void Scale (T_ a, const LocalVect< T_ , N_ > &x, LocalVect< T_ , N_ > &y)`
Multiply vector x by constant a and store result in y.

- `template<class T_, size_t N_>`
`void Scale (T_ a, LocalVect< T_, N_ > &x)`
Multiply vector x by constant a and store result in x .
- `template<class T_, size_t N_>`
`void Axy (T_ a, const LocalVect< T_, N_ > &x, LocalVect< T_, N_ > &y)`
*Add $a*x$ to vector y .*
- `template<class T_, size_t N_>`
`void Copy (const LocalVect< T_, N_ > &x, LocalVect< T_, N_ > &y)`
Copy vector x into vector y .
- `template<class T_, size_t N_>`
`ostream & operator<< (ostream &s, const LocalVect< T_, N_ > &v)`
Output vector in output stream.
- `template<class T_>`
`PETScVect< T_ > operator* (const PETScMatrix< T_ > &A, const PETScVect< T_ > &x)`
- `template<class T_>`
`ostream & operator<< (ostream &s, PETScMatrix< T_ > &A)`
Output matrix in output stream.
- `template<class T_>`
`ostream & operator<< (ostream &s, const PETScWrapper< T_ > &w)`
Output Petsc Wrapper data in output stream.
- `template<class T_>`
`Vect< T_ > operator* (const SkMatrix< T_ > &A, const Vect< T_ > &b)`
*Operator * (Multiply vector by matrix and return resulting vector.*
- `template<class T_>`
`ostream & operator<< (ostream &s, const SkMatrix< T_ > &a)`
Output matrix in output stream.
- `template<class T_>`
`Vect< T_ > operator* (const SkSMatrix< T_ > &A, const Vect< T_ > &b)`
*Operator * (Multiply vector by matrix and return resulting vector.*
- `template<class T_>`
`ostream & operator<< (ostream &s, const SkSMatrix< T_ > &a)`
Output matrix in output stream.
- `template<class T_>`
`Vect< T_ > operator* (const SpMatrix< T_ > &A, const Vect< T_ > &b)`
*Operator * (Multiply vector by matrix and return resulting vector.*
- `template<class T_>`
`ostream & operator<< (ostream &s, const SpMatrix< T_ > &A)`
- `template<class T_>`
`Vect< T_ > operator* (const TrMatrix< T_ > &A, const Vect< T_ > &b)`
*Operator * (Multiply vector by matrix and return resulting vector.*
- `template<class T_>`
`TrMatrix< T_ > operator* (T_ a, const TrMatrix< T_ > &A)`
*Operator * (Premultiplication of matrix by constant)*
- `template<class T_>`
`ostream & operator<< (ostream &s, const TrMatrix< T_ > &A)`
Output matrix in output stream.
- `real_t operator* (const vector< real_t > &x, const vector< real_t > &y)`
*Operator * (Dot product of 2 vector instances)*

Friends

- `template<class TT_>`
`ostream & operator<< (ostream &s, const SpMatrix< TT_ > &A)`

5.18.1 Detailed Description

Vector and matrix classes.

5.18.2 Typedef Documentation

VectorX

This type is the vector type in the Eigen library.

Remarks

: This type is available only if the Eigen library was installed in conjunction with [OFELI](#)

5.18.3 Function Documentation

Vect< T_ > operator* (const BMatrix< T_ > & A, const Vect< T_ > & b)

Operator * (Multiply vector by matrix and return resulting vector.

Parameters

in	<i>A</i>	BMatrix instance to multiply by vector
in	<i>b</i>	Vect instance

Returns

[Vect](#) instance containing $A*b$

BMatrix< T_ > operator* (T_ a, const BMatrix< T_ > & A)

Operator * (Premultiplication of matrix by constant)

Returns

$a*A$

Vect< T_ > operator* (const DMatrix< T_ > & A, const Vect< T_ > & b)

Operator * (Multiply vector by matrix and return resulting vector.

Parameters

in	<i>A</i>	DMatrix instance to multiply by vector
in	<i>b</i>	Vect instance

Returns

[Vect](#) instance containing $A*b$

`Vect< T_ > operator* (const DSMatrix< T_ > & A, const Vect< T_ > & b)`

Operator * (Multiply vector by matrix and return resulting vector.

Parameters

in	A	DSMatrix instance to multiply by vector
in	b	Vect instance

Returns

[Vect](#) instance containing $A*b$

`LocalMatrix< T_, NR_, NC_ > operator* (T_ a, const LocalMatrix< T_, NR_, NC_ > & x)`

Operator * (Multiply matrix x by scalar a)

Returns

$a*x$

`LocalMatrix< T_, NR_, NC_ > operator/ (T_ a, const LocalMatrix< T_, NR_, NC_ > & x)`

Operator / (Divide matrix x by scalar a)

Returns

x/a

`LocalMatrix< T_, NR_, NC_ > operator+ (const LocalMatrix< T_, NR_, NC_ > & x, const LocalMatrix< T_, NR_, NC_ > & y)`

Operator + (Add matrix x to y)

Returns

$x+y$

`LocalMatrix< T_, NR_, NC_ > operator- (const LocalMatrix< T_, NR_, NC_ > & x, const LocalMatrix< T_, NR_, NC_ > & y)`

Operator - (Subtract matrix y from x)

Returns

$x-y$

LocalVect< T_, N_ > operator+ (const LocalVect< T_, N_ > & x, const LocalVect< T_, N_ > & y)

Operator + (Add two vectors)

Returns

$x+y$

LocalVect< T_, N_ > operator- (const LocalVect< T_, N_ > & x, const LocalVect< T_, N_ > & y)

Operator - (Subtract two vectors)

Returns

$x-y$

LocalVect< T_, N_ > operator* (T_ a, const LocalVect< T_, N_ > & x)

Operator * (Premultiplication of vector by constant)

Returns

$a*x$

LocalVect< T_, N_ > operator/ (T_ a, const LocalVect< T_, N_ > & x)

Operator / (Division of vector by constant)

Returns

x/a

double Dot (const LocalVect< T_, N_ > & a, const LocalVect< T_, N_ > & b)

Calculate dot product of 2 vectors (instances of class [LocalVect](#))

Returns

Dot product

PETScVect< T_ > operator* (const PETScMatrix< T_ > & A, const PETScVect< T_ > & x)

Multiply a matrix by a vector

Parameters

in	A	Matrix to multiply by (Instance of class PETScMatrix)
in	x	Vector to multiply by (Instance of class PETScVect)

Returns

Vector product $y = Ax$

Vect< T_ > operator* (const SkMatrix< T_ > & A, const Vect< T_ > & b)

Operator * (Multiply vector by matrix and return resulting vector.

Parameters

in	A	SkMatrix instance to multiply by vector
in	b	Vect instance

Returns

[Vect](#) instance containing $A*b$

Vect< T_ > operator* (const SkSMMatrix< T_ > & A, const Vect< T_ > & b)

Operator * (Multiply vector by matrix and return resulting vector.

Parameters

in	A	SkSMMatrix instance to multiply by vector
in	b	Vect instance

Returns

[Vect](#) instance containing $A*b$

Vect< T_ > operator* (const SpMatrix< T_ > & A, const Vect< T_ > & b)

Operator * (Multiply vector by matrix and return resulting vector.

Parameters

in	A	SpMatrix instance to multiply by vector
in	b	Vect instance

Returns

[Vect](#) instance containing $A*b$

ostream & operator<< (ostream & s, const SpMatrix< T_ > & A)

Output matrix in output stream

Vect< T_ > operator* (const TrMatrix< T_ > & A, const Vect< T_ > & b)

Operator * (Multiply vector by matrix and return resulting vector.

Parameters

in	A	TrMatrix instance to multiply by vector
in	b	Vect instance

Returns

[Vect](#) instance containing $A*b$

TrMatrix< T_ > operator* (T_ a, const TrMatrix< T_ > & A)

Operator * (Premultiplication of matrix by constant)

Returns

$a*A$

real.t operator* (const vector< real.t > & x, const vector< real.t > & y)

Operator * (Dot product of 2 vector instances)

Returns

$x.y$

5.18.4 Friends

ostream & operator<< (ostream & s, const SpMatrix< TT_ > & A) [friend]

Output matrix in output stream

Chapter 6

Namespace Documentation

6.1 OFELI Namespace Reference

A namespace to group all library classes, functions, ...

Classes

- class [AbsEqua](#)
Mother abstract class to describe equation.
- class [Bar2DL2](#)
To build element equations for Planar Elastic Bar element with 2 DOF (Degrees of Freedom) per node.
- class [Beam3DL2](#)
To build element equations for 3-D beam equations using 2-node lines.
- class [BiotSavart](#)
Class to compute the magnetic induction from the current density using the Biot-Savart formula.
- class [BMatrix](#)
To handle band matrices.
- class [Brick](#)
To store and treat a brick (parallelepiped) figure.
- class [Circle](#)
To store and treat a circular figure.
- class [DC1DL2](#)
Builds finite element arrays for thermal diffusion and convection in 1-D using 2-Node elements.
- class [DC2DT3](#)
Builds finite element arrays for thermal diffusion and convection in 2-D domains using 3-Node triangles.
- class [DC2DT6](#)
Builds finite element arrays for thermal diffusion and convection in 2-D domains using 6-Node triangles.
- class [DC3DAT3](#)
Builds finite element arrays for thermal diffusion and convection in 3-D domains with axisymmetry using 3-Node triangles.
- class [DC3DT4](#)
Builds finite element arrays for thermal diffusion and convection in 3-D domains using 4-Node tetrahedra.
- class [DG](#)
Enables preliminary operations and utilities for the Discontinuous Galerkin method.
- class [DMatrix](#)

- To handle dense matrices.*
- class [Domain](#)
 - To store and treat finite element geometric information.*
- class [DSMatrix](#)
 - To handle symmetric dense matrices.*
- class [EC2D1T3](#)
 - Eddy current problems in 2-D domains using solenoidal approximation.*
- class [Edge](#)
 - To describe an edge.*
- class [EdgeList](#)
 - Class to construct a list of edges having some common properties.*
- class [EigenProblemSolver](#)
 - Class to find eigenvalues and corresponding eigenvectors of a given matrix in a generalized eigenproblem, i.e. Find scalars l and non-null vectors v such that $[K]\{v\} = l[M]\{v\}$ where $[K]$ and $[M]$ are symmetric matrices. The eigenproblem can be originated from a PDE. For this, we will refer to the matrices K and M as Stiffness and Mass matrices respectively.*
- class [Elas2DQ4](#)
 - To build element equations for 2-D linearized elasticity using 4-node quadrilaterals.*
- class [Elas2DT3](#)
 - To build element equations for 2-D linearized elasticity using 3-node triangles.*
- class [Elas3DH8](#)
 - To build element equations for 3-D linearized elasticity using 8-node hexahedra.*
- class [Elas3DT4](#)
 - To build element equations for 3-D linearized elasticity using 4-node tetrahedra.*
- class [Element](#)
 - To store and treat finite element geometric information.*
- class [ElementList](#)
 - Class to construct a list of elements having some common properties.*
- class [Ellipse](#)
 - To store and treat an ellipsoidal figure.*
- class [Equa.Electromagnetics](#)
 - Abstract class for Electromagnetics [Equation](#) classes.*
- class [Equa.Fluid](#)
 - Abstract class for Fluid Dynamics [Equation](#) classes.*
- class [Equa.Laplace](#)
 - Abstract class for classes about the Laplace equation.*
- class [Equa.Porous](#)
 - Abstract class for Porous Media Finite Element classes.*
- class [Equa.Solid](#)
 - Abstract class for Solid Mechanics Finite Element classes.*
- class [Equa.Therm](#)
 - Abstract class for Heat transfer Finite Element classes.*
- class [Equation](#)
 - Abstract class for all equation classes.*
- class [Estimator](#)
 - To calculate an a posteriori estimator of the solution.*
- class [FastMarching2D](#)

- To run a Fast Marching Method on 2-D structured uniform grids.*

 - class [FEShape](#)

Parent class from which inherit all finite element shape classes.
- class [Figure](#)

To store and treat a figure (or shape) information.
- class [FMM2D](#)

class for the fast marching 2-D algorithm
- class [FMM3D](#)

class for the 3-D fast marching algorithm
- class [FMMSolver](#)

The Fast Marching Method solver.
- class [Funct](#)

A simple class to parse real valued functions.
- class [Gauss](#)

Calculate data for Gauss integration.
- class [Grid](#)

To manipulate structured grids.
- class [HelmholtzBT3](#)

Builds finite element arrays for Helmholtz equations in a bounded media using 3-Node triangles.
- class [Hexa8](#)

Defines a three-dimensional 8-node hexahedral finite element using Q1-isoparametric interpolation.
- class [ICPG1D](#)

Class to solve the Inviscid compressible fluid flows (Euler equations) for perfect gas in 1-D.
- class [ICPG2DT](#)

Class to solve the Inviscid compressible fluid flows (Euler equations) for perfect gas in 2-D.
- class [ICPG3DT](#)

Class to solve the Inviscid compressible fluid flows (Euler equations) for perfect gas in 3-D.
- class [IOField](#)

Enables working with files in the XML Format.
- class [IPF](#)

To read project parameters from a file in [IPF](#) format.
- class [Iter](#)

Class to drive an iterative process.
- class [Laplace1DL2](#)

To build element equation for a 1-D elliptic equation using the 2-Node line element (P_1).
- class [Laplace1DL3](#)

To build element equation for the 1-D elliptic equation using the 3-Node line (P_2).
- class [Laplace2DFVT](#)

To build and solve the Laplace equation using a standard Finite Volume method.
- class [Laplace2DMHRT0](#)

To build element equation for the 2-D elliptic equation using the Mixed Hybrid finite element at lowest degree (Raviart-Thomas RT_0).
- class [Laplace2DT3](#)

To build element equation for the Laplace equation using the 2-D triangle element (P_1).
- class [LaplaceDG2DP1](#)

To build and solve the linear system for the Poisson problem using the [DG](#) P_1 2-D triangle element.
- class [LCL1D](#)

- Class to solve the linear conservation law (Hyperbolic equation) in 1-D by a MUSCL Finite Volume scheme.*

 - class [LCL2DT](#)
- Class to solve the linear hyperbolic equation in 2-D by a MUSCL Finite Volume scheme on triangles.*

 - class [LCL3DT](#)
- Class to solve the linear conservation law equation in 3-D by a MUSCL Finite Volume scheme on tetrahedra.*

 - class [Line2](#)
- To describe a 2-Node planar line finite element.*

 - class [Line2H](#)
- To describe a 2-Node Hermite planar line finite element.*

 - class [Line3](#)
- To describe a 3-Node quadratic planar line finite element.*

 - class [LinearSolver](#)
- Class to solve systems of linear equations by iterative methods.*

 - class [LocalMatrix](#)
- Handles small size matrices like element matrices, with a priori known size.*

 - class [LocalVect](#)
- Handles small size vectors like element vectors.*

 - class [Material](#)
- To treat material data. This class enables reading material data in material data files. It also returns these informations by means of its members.*

 - class [Matrix](#)
- Virtual class to handle matrices for all storage formats.*

 - class [Mesh](#)
- To store and manipulate finite element meshes.*

 - class [MeshAdapt](#)
- To adapt mesh in function of given solution.*

 - class [Muscl](#)
- Parent class for hyperbolic solvers with Muscl scheme.*

 - class [Muscl1D](#)
- Class for 1-D hyperbolic solvers with [Muscl](#) scheme.*

 - class [Muscl2DT](#)
- Class for 2-D hyperbolic solvers with [Muscl](#) scheme.*

 - class [Muscl3DT](#)
- Class for 3-D hyperbolic solvers with [Muscl](#) scheme using tetrahedra.*

 - class [MyOpt](#)
- Abstract class to define by user specified optimization function.*

 - class [Node](#)
- To describe a node.*

 - class [NodeList](#)
- Class to construct a list of nodes having some common properties.*

 - class [NSP2DQ41](#)
- Builds finite element arrays for incompressible Navier-Stokes equations in 2-D domains using Q_1/P_0 element and a penalty formulation for the incompressibility condition.*

 - class [ODESolver](#)
- To solve a system of ordinary differential equations.*

 - class [OptSolver](#)
- To solve an optimization problem with bound constraints.*

- class [Partition](#)
To partition a finite element mesh into balanced submeshes.
- class [Penta6](#)
Defines a 6-node pentahedral finite element using P_1 interpolation in local coordinates $(s.x, s.y)$ and Q_1 isoparametric interpolation in local coordinates $(s.x, s.z)$ and $(s.y, s.z)$.
- class [PETScMatrix](#)
To handle matrices in sparse storage format using the Petsc library.
- class [PETScVect](#)
To handle general purpose vectors using Petsc.
- class [PETScWrapper](#)
This class is a wrapper to be used when the library Petsc is installed and used with [OFELI](#).
- class [PhaseChange](#)
This class enables defining phase change laws for a given material.
- class [Point](#)
Defines a point with arbitrary type coordinates.
- class [Point2D](#)
Defines a 2-D point with arbitrary type coordinates.
- class [Polygon](#)
To store and treat a polygonal figure.
- class [Prec](#)
To set a preconditioner.
- class [Prescription](#)
To prescribe various types of data by an algebraic expression. Data may consist in boundary conditions, forces, tractions, fluxes, initial condition. All these data types can be defined through an enumerated variable.
- class [Quad4](#)
Defines a 4-node quadrilateral finite element using Q_1 isoparametric interpolation.
- class [Reconstruction](#)
To perform various reconstruction operations.
- class [Rectangle](#)
To store and treat a rectangular figure.
- class [Side](#)
To store and treat finite element sides (edges in 2-D or faces in 3-D)
- class [SideList](#)
Class to construct a list of sides having some common properties.
- class [SkMatrix](#)
To handle square matrices in skyline storage format.
- class [SkSMatrix](#)
To handle symmetric matrices in skyline storage format.
- class [Sphere](#)
To store and treat a sphere.
- class [SpMatrix](#)
To handle matrices in sparse storage format.
- class [SteklovPoincare2DBE](#)
Solver of the Steklov Poincare problem in 2-D geometries using piecewise constant boundary elemen.
- class [Tabulation](#)
To read and manipulate tabulated functions.

- class [Tetra4](#)
Defines a three-dimensional 4-node tetrahedral finite element using P_1 interpolation.
- class [Timer](#)
To handle elapsed time counting.
- class [TimeStepping](#)
To solve time stepping problems, i.e. systems of linear ordinary differential equations of the form $[A2]\{y''\} + [A1]\{y'\} + [A0]\{y\} = \{b\}$.
- class [TINS2DT3B](#)
Builds finite element arrays for thermal diffusion and convection in 2-D domains using 3-Node triangles.
- class [Triang3](#)
Defines a 3-Node (P_1) triangle.
- class [Triang6S](#)
Defines a 6-Node straight triangular finite element using P_2 interpolation.
- class [triangle](#)
Defines a triangle. The reference element is the rectangle triangle with two unit edges.
- class [Triangle](#)
To store and treat a triangle.
- class [TrMatrix](#)
To handle tridiagonal matrices.
- class [UserData](#)
Abstract class to define by user various problem data.
- class [Vect](#)
To handle general purpose vectors.
- class [WaterPorous2D](#)
To solve water flow equations in porous media (1-D)

Enumerations

Functions

- `ostream & operator<< (ostream &s, const Muscl3DT &m)`
Output mesh data as calculated in class [Muscl3DT](#).
- `T_ * A ()`
Return element matrix.
- `T_ * b ()`
Return element right-hand side.
- `T_ * Prev ()`
Return element previous vector.
- `ostream & operator<< (ostream &s, const complex.t &x)`
Output a complex number.
- `ostream & operator<< (ostream &s, const std::string &c)`
Output a string.
- `template<class T_ >`
`ostream & operator<< (ostream &s, const vector< T_ > &v)`
Output a vector instance.
- `template<class T_ >`
`ostream & operator<< (ostream &s, const std::pair< T_, T_ > &a)`
Output a pair instance.

- void `saveField` (`Vect< real_t >` &v, string output_file, int opt)
Save a vector to an output file in a given file format.
- void `saveField` (`PETScVect< real_t >` &v, string output_file, int opt)
Save a PETSc vector to an output file in a given file format.
- void `saveField` (`PETScVect< real_t >` &v, const `Mesh` &mesh, string output_file, int opt)
Save a PETSc vector to an output file in a given file format.
- void `saveField` (`Vect< real_t >` &v, const `Grid` &g, string output_file, int opt)
Save a vector to an output file in a given file format, for a structured grid data.
- void `saveGnuplot` (string input_file, string output_file, string mesh_file)
Save a vector to an input Gnuplot file.
- void `saveTecplot` (string input_file, string output_file, string mesh_file)
Save a vector to an output file to an input Tecplot file.
- void `saveVTK` (string input_file, string output_file, string mesh_file)
Save a vector to an output VTK file.
- void `saveGmsh` (string input_file, string output_file, string mesh_file)
Save a vector to an output Gmsh file.
- ostream & `operator<<` (ostream &s, const `Tabulation` &t)
Output Tabulated function data.
- template<class T_, size_t N_, class E_ >
void `element_assembly` (const E_ &e, const `LocalVect< T_, N_ >` &be, `Vect< T_ >` &b)
Assemble local vector into global vector.
- template<class T_, size_t N_, class E_ >
void `element_assembly` (const E_ &e, const `LocalMatrix< T_, N_, N_ >` &ae, `Vect< T_ >` &b)
Assemble diagonal local vector into global vector.
- template<class T_, size_t N_, class E_ >
void `element_assembly` (const E_ &e, const `LocalMatrix< T_, N_, N_ >` &ae, `Matrix< T_ >` *A)
Assemble local matrix into global matrix.
- template<class T_, size_t N_, class E_ >
void `element_assembly` (const E_ &e, const `LocalMatrix< T_, N_, N_ >` &ae, `SkMatrix< T_ >` &A)
Assemble local matrix into global skyline matrix.
- template<class T_, size_t N_, class E_ >
void `element_assembly` (const E_ &e, const `LocalMatrix< T_, N_, N_ >` &ae, `SkSMatrix< T_ >` &A)
Assemble local matrix into global symmetric skyline matrix.
- template<class T_, size_t N_, class E_ >
void `element_assembly` (const E_ &e, const `LocalMatrix< T_, N_, N_ >` &ae, `SpMatrix< T_ >` &A)
Assemble local matrix into global sparse matrix.
- template<class T_, size_t N_>
void `side_assembly` (const `Element` &e, const `LocalMatrix< T_, N_, N_ >` &ae, `SpMatrix< T_ >` &A)
Side assembly of local matrix into global matrix (as instance of class SpMatrix).
- template<class T_, size_t N_>
void `side_assembly` (const `Element` &e, const `LocalMatrix< T_, N_, N_ >` &ae, `SkSMatrix< T_ >` &A)
Side assembly of local matrix into global matrix (as instance of class SkSMatrix).

- `template<class T_, size_t N_>`
`void side_assembly (const Element &e, const LocalMatrix< T_, N_, N_ > &ae, SkMatrix< T_ > &A)`
Side assembly of local matrix into global matrix (as instance of class SkMatrix).
- `template<class T_, size_t N_>`
`void side_assembly (const Element &e, const LocalVect< T_, N_ > &be, Vect< T_ > &b)`
Side assembly of local vector into global vector.
- `template<class T_>`
`Vect< T_ > operator* (const BMatrix< T_ > &A, const Vect< T_ > &b)`
*Operator * (Multiply vector by matrix and return resulting vector.*
- `template<class T_>`
`BMatrix< T_ > operator* (T_ a, const BMatrix< T_ > &A)`
*Operator * (Premultiplication of matrix by constant)*
- `template<class T_>`
`ostream & operator<< (ostream &s, const BMatrix< T_ > &a)`
Output matrix in output stream.
- `template<class T_>`
`Vect< T_ > operator* (const DMatrix< T_ > &A, const Vect< T_ > &b)`
*Operator * (Multiply vector by matrix and return resulting vector.*
- `template<class T_>`
`ostream & operator<< (ostream &s, const DMatrix< T_ > &a)`
Output matrix in output stream.
- `template<class T_>`
`Vect< T_ > operator* (const DSMatrix< T_ > &A, const Vect< T_ > &b)`
*Operator * (Multiply vector by matrix and return resulting vector.*
- `template<class T_>`
`ostream & operator<< (ostream &s, const DSMatrix< T_ > &a)`
Output matrix in output stream.
- `template<class T_, size_t NR_, size_t NC_>`
`LocalMatrix< T_, NR_, NC_ > operator* (T_ a, const LocalMatrix< T_, NR_, NC_ > &x)`
*Operator * (Multiply matrix x by scalar a)*
- `template<class T_, size_t NR_, size_t NC_>`
`LocalMatrix< T_, NR_, NC_ > operator/ (T_ a, const LocalMatrix< T_, NR_, NC_ > &x)`
Operator / (Divide matrix x by scalar a)
- `template<class T_, size_t NR_, size_t NC_>`
`LocalMatrix< T_, NR_, NC_ > operator+ (const LocalMatrix< T_, NR_, NC_ > &x, const LocalMatrix< T_, NR_, NC_ > &y)`
Operator + (Add matrix x to y)
- `template<class T_, size_t NR_, size_t NC_>`
`LocalMatrix< T_, NR_, NC_ > operator- (const LocalMatrix< T_, NR_, NC_ > &x, const LocalMatrix< T_, NR_, NC_ > &y)`
Operator - (Subtract matrix y from x)
- `template<class T_, size_t NR_, size_t NC_>`
`ostream & operator<< (ostream &s, const LocalMatrix< T_, NR_, NC_ > &a)`
Output vector in output stream.
- `template<class T_, size_t N_>`
`LocalVect< T_, N_ > operator+ (const LocalVect< T_, N_ > &x, const LocalVect< T_, N_ > &y)`
Operator + (Add two vectors)

- `template<class T_, size_t N_>`
`LocalVect< T_, N_ > operator-` (const `LocalVect< T_, N_ > &x`, const `LocalVect< T_, N_ > &y`)
Operator - (Subtract two vectors)
- `template<class T_, size_t N_>`
`LocalVect< T_, N_ > operator*` (T_ a, const `LocalVect< T_, N_ > &x`)
*Operator * (Premultiplication of vector by constant)*
- `template<class T_, size_t N_>`
`LocalVect< T_, N_ > operator/` (T_ a, const `LocalVect< T_, N_ > &x`)
Operator / (Division of vector by constant)
- `template<class T_, size_t N_>`
`real_t Dot` (const `LocalVect< T_, N_ > &a`, const `LocalVect< T_, N_ > &b`)
Calculate dot product of 2 vectors (instances of class `LocalVect`)
- `template<class T_, size_t N_>`
`void Scale` (T_ a, const `LocalVect< T_, N_ > &x`, `LocalVect< T_, N_ > &y`)
Multiply vector `x` by constant `a` and store result in `y`.
- `template<class T_, size_t N_>`
`void Scale` (T_ a, `LocalVect< T_, N_ > &x`)
Multiply vector `x` by constant `a` and store result in `x`.
- `template<class T_, size_t N_>`
`void Axy` (T_ a, const `LocalVect< T_, N_ > &x`, `LocalVect< T_, N_ > &y`)
*Add `a*x` to vector `y`.*
- `template<class T_, size_t N_>`
`void Copy` (const `LocalVect< T_, N_ > &x`, `LocalVect< T_, N_ > &y`)
Copy vector `x` into vector `y`.
- `template<class T_, size_t N_>`
`ostream & operator<<` (ostream &s, const `LocalVect< T_, N_ > &v`)
Output vector in output stream.
- `template<class T_>`
`PETScVect< T_ > operator*` (const `PETScMatrix< T_ > &A`, const `PETScVect< T_ > &x`)
- `template<class T_>`
`ostream & operator<<` (ostream &s, `PETScMatrix< T_ > &A`)
Output matrix in output stream.
- `string itos` (int i)
Function to convert an integer to a string.
- `string dtos` (real_t d)
Function to convert a real to a string.
- `template<class T_>`
`ostream & operator<<` (ostream &s, const `PETScWrapper< T_ > &w`)
Output Petsc Wrapper data in output stream.
- `template<class T_>`
`bool operator==` (const `Point< T_ > &a`, const `Point< T_ > &b`)
Operator ==
- `template<class T_>`
`Point< T_ > operator+` (const `Point< T_ > &a`, const `Point< T_ > &b`)
Operator +
- `template<class T_>`
`Point< T_ > operator+` (const `Point< T_ > &a`, const T_ &x)
Operator +

- `template<class T_>`
`Point< T_ > operator-` (const `Point< T_ > &a`)
Unary Operator -
- `template<class T_>`
`Point< T_ > operator-` (const `Point< T_ > &a`, const `Point< T_ > &b`)
Operator -
- `template<class T_>`
`Point< T_ > operator-` (const `Point< T_ > &a`, const `T_ &x`)
Operator -
- `template<class T_>`
`Point< T_ > operator*` (const `T_ &a`, const `Point< T_ > &b`)
*Operator **
- `template<class T_>`
`Point< T_ > operator*` (const int `&a`, const `Point< T_ > &b`)
*Operator *.*
- `template<class T_>`
`Point< T_ > operator*` (const `Point< T_ > &b`, const `T_ &a`)
Operator /
- `template<class T_>`
`Point< T_ > operator*` (const `Point< T_ > &b`, const int `&a`)
*Operator **
- `template<class T_>`
`T_ operator*` (const `Point< T_ > &a`, const `Point< T_ > &b`)
*Operator **
- `template<class T_>`
`Point< T_ > operator/` (const `Point< T_ > &b`, const `T_ &a`)
Operator /
- `Point< double > CrossProduct` (const `Point< double > &lp`, const `Point< double > &rp`)
Return Cross product of two vectors `lp` and `rp`
- `bool areClose` (const `Point< double > &a`, const `Point< double > &b`, double `toler=OFELI.TOLERANCE`)
Return `true` if both instances of class `Point<double>` are distant with less then `toler`
- `double SqrDistance` (const `Point< double > &a`, const `Point< double > &b`)
Return squared euclidean distance between points `a` and `b`
- `double Distance` (const `Point< double > &a`, const `Point< double > &b`)
Return euclidean distance between points `a` and `b`
- `template<class T_>`
`std::ostream & operator<<` (std::ostream `&s`, const `Point< T_ > &a`)
Output point coordinates.
- `template<class T_>`
`bool operator==` (const `Point2D< T_ > &a`, const `Point2D< T_ > &b`)
Operator ==.
- `template<class T_>`
`Point2D< T_ > operator+` (const `Point2D< T_ > &a`, const `Point2D< T_ > &b`)
Operator +.
- `template<class T_>`
`Point2D< T_ > operator+` (const `Point2D< T_ > &a`, const `T_ &x`)
Operator +.

- `template<class T_>`
`Point2D< T_> operator-` (const `Point2D< T_> &a`)
Unary Operator -
- `template<class T_>`
`Point2D< T_> operator-` (const `Point2D< T_> &a`, const `Point2D< T_> &b`)
Operator -
- `template<class T_>`
`Point2D< T_> operator-` (const `Point2D< T_> &a`, const `T_ &x`)
Operator -
- `template<class T_>`
`Point2D< T_> operator*` (const `T_ &a`, const `Point2D< T_> &b`)
*Operator *.*
- `template<class T_>`
`Point2D< T_> operator*` (const int `&a`, const `Point2D< T_> &b`)
- `template<class T_>`
`Point2D< T_> operator*` (const `Point2D< T_> &b`, const `T_ &a`)
Operator /
- `template<class T_>`
`Point2D< T_> operator*` (const `Point2D< T_> &b`, const int `&a`)
*Operator **
- `template<class T_>`
`T_ operator*` (const `Point2D< T_> &b`, const `Point2D< T_> &a`)
*Operator *.*
- `template<class T_>`
`Point2D< T_> operator/` (const `Point2D< T_> &b`, const `T_ &a`)
Operator /
- `bool areClose` (const `Point2D< real_t> &a`, const `Point2D< real_t> &b`, `real_t` `toler=OFELI.TOLERANCE`)
Return `true` if both instances of class `Point2D<real_t>` are distant with less then `toler` [Default: `OFELI.EPSMCH`].
- `real_t SqrDistance` (const `Point2D< real_t> &a`, const `Point2D< real_t> &b`)
Return squared euclidean distance between points `a` and `b`
- `real_t Distance` (const `Point2D< real_t> &a`, const `Point2D< real_t> &b`)
Return euclidean distance between points `a` and `b`
- `template<class T_>`
`std::ostream & operator<<` (std::ostream `&s`, const `Point2D< T_> &a`)
Output point coordinates.
- `template<class T_>`
`Vect< T_> operator*` (const `SkMatrix< T_> &A`, const `Vect< T_> &b`)
*Operator * (Multiply vector by matrix and return resulting vector.*
- `template<class T_>`
`ostream & operator<<` (ostream `&s`, const `SkMatrix< T_> &a`)
Output matrix in output stream.
- `template<class T_>`
`Vect< T_> operator*` (const `SkSMatrix< T_> &A`, const `Vect< T_> &b`)
*Operator * (Multiply vector by matrix and return resulting vector.*
- `template<class T_>`
`ostream & operator<<` (ostream `&s`, const `SkSMatrix< T_> &a`)
Output matrix in output stream.

- `template<class T_ >`
`Vect< T_ > operator*` (const `SpMatrix< T_ > &A`, const `Vect< T_ > &b`)
*Operator * (Multiply vector by matrix and return resulting vector.*
- `template<class T_ >`
`ostream & operator<<` (ostream &s, const `SpMatrix< T_ > &A`)
- `template<class T_ >`
`Vect< T_ > operator*` (const `TrMatrix< T_ > &A`, const `Vect< T_ > &b`)
*Operator * (Multiply vector by matrix and return resulting vector.*
- `template<class T_ >`
`TrMatrix< T_ > operator*` (T_ a, const `TrMatrix< T_ > &A`)
*Operator * (Premultiplication of matrix by constant)*
- `template<class T_ >`
`ostream & operator<<` (ostream &s, const `TrMatrix< T_ > &A`)
Output matrix in output stream.
- `ostream & operator<<` (ostream &s, const `Edge &ed`)
Output edge data.
- `ostream & operator<<` (ostream &s, const `Element &el`)
Output element data.
- `Figure operator&&` (const `Figure &f1`, const `Figure &f2`)
Function to define a `Figure` instance as the intersection of two `Figure` instances.
- `Figure operator||` (const `Figure &f1`, const `Figure &f2`)
Function to define a `Figure` instance as the union of two `Figure` instances.
- `Figure operator-` (const `Figure &f1`, const `Figure &f2`)
Function to define a `Figure` instance as the set subtraction of two `Figure` instances.
- `void getMesh` (string file, ExternalFileFormat form, `Mesh &mesh`, size_t nb_dof=1)
Construct an instance of class `Mesh` from a mesh file stored in an external file format.
- `void getBamg` (string file, `Mesh &mesh`, size_t nb_dof=1)
Construct an instance of class `Mesh` from a mesh file stored in `Bamg` format.
- `void getEasymesh` (string file, `Mesh &mesh`, size_t nb_dof=1)
Construct an instance of class `Mesh` from a mesh file stored in `Easymesh` format.
- `void getGambit` (string file, `Mesh &mesh`, size_t nb_dof=1)
Construct an instance of class `Mesh` from a mesh file stored in `Gambit` neutral format.
- `void getGmsh` (string file, `Mesh &mesh`, size_t nb_dof=1)
Construct an instance of class `Mesh` from a mesh file stored in `Gmsh` format.
- `void getMatlab` (string file, `Mesh &mesh`, size_t nb_dof=1)
Construct an instance of class `Mesh` from a Matlab mesh data.
- `void getNetgen` (string file, `Mesh &mesh`, size_t nb_dof=1)
Construct an instance of class `Mesh` from a mesh file stored in `Netgen` format.
- `void getTetgen` (string file, `Mesh &mesh`, size_t nb_dof=1)
Construct an instance of class `Mesh` from a mesh file stored in `Tetgen` format.
- `void getTriangle` (string file, `Mesh &mesh`, size_t nb_dof=1)
Construct an instance of class `Mesh` from a mesh file stored in `Triangle` format.
- `ostream & operator<<` (ostream &s, const `Grid &g`)
Output grid data.
- `ostream & operator<<` (ostream &s, const `Material &m`)
Output material data.
- `ostream & operator<<` (ostream &s, const `Mesh &ms`)

- Output mesh data.*

 - `ostream & operator<< (ostream &s, const MeshAdapt &a)`

Output MeshAdapt class data.

 - `ostream & operator<< (ostream &s, const NodeList &nl)`

Output NodeList instance.

 - `ostream & operator<< (ostream &s, const ElementList &el)`

Output ElementList instance.

 - `ostream & operator<< (ostream &s, const SideList &sl)`

Output SideList instance.

 - `ostream & operator<< (ostream &s, const EdgeList &el)`

Output EdgeList instance.

 - `size_t Label (const Node &nd)`

Return label of a given node.

 - `size_t Label (const Element &el)`

Return label of a given element.

 - `size_t Label (const Side &sd)`

Return label of a given side.

 - `size_t Label (const Edge &ed)`

Return label of a given edge.

 - `size_t NodeLabel (const Element &el, size_t n)`

Return global label of node local label in element.

 - `size_t NodeLabel (const Side &sd, size_t n)`

Return global label of node local label in side.

 - `Point< real_t > Coord (const Node &nd)`

Return coordinates of a given node.

 - `int Code (const Node &nd, size_t i=1)`

Return code of a given (degree of freedom of) node.

 - `int Code (const Element &el)`

Return code of a given element.

 - `int Code (const Side &sd, size_t i=1)`

Return code of a given (degree of freedom of) side.

 - `bool operator== (const Element &el1, const Element &el2)`

Check equality between 2 elements.

 - `bool operator== (const Side &sd1, const Side &sd2)`

Check equality between 2 sides.

 - `void DeformMesh (Mesh &mesh, const Vect< real_t > &u, real_t a=1)`

Calculate deformed mesh using a displacement field.

 - `void DeformMesh (Mesh &mesh, const PETScVect< real_t > &u, real_t a=1)`

Calculate deformed mesh using a displacement field as instance of PETScVect.

 - `void MeshToMesh (Mesh &m1, Mesh &m2, const Vect< real_t > &u1, Vect< real_t > &u2, size_t nx, size_t ny=0, size_t nz=0, size_t dof=1)`

Function to redefine a vector defined on a mesh to a new mesh.

 - `void MeshToMesh (Mesh &m1, Mesh &m2, const Vect< real_t > &u1, Vect< real_t > &u2, const Point< real_t > &xmin, const Point< real_t > &xmax, size_t nx, size_t ny, size_t nz, size_t dof=1)`

Function to redefine a vector defined on a mesh to a new mesh.

 - `real_t getMaxSize (const Mesh &m)`

- Return maximal size of element edges for given mesh.*

 - `real.t getMinSize` (const `Mesh` &m)
- Return minimal size of element edges for given mesh.*

 - `real.t getMinElementMeasure` (const `Mesh` &m)
- Return minimal measure (length, area or volume) of elements of given mesh.*

 - `real.t getMinSideMeasure` (const `Mesh` &m)
- Return minimal measure (length or area) of sides of given mesh.*

 - `real.t getMaxSideMeasure` (const `Mesh` &m)
- Return maximal measure (length or area) of sides of given mesh.*

 - `real.t getMeanElementMeasure` (const `Mesh` &m)
- Return average measure (length, area or volume) of elements of given mesh.*

 - `real.t getMeanSideMeasure` (const `Mesh` &m)
- Return average measure (length or area) of sides of given mesh.*

 - `void setNodeCodes` (`Mesh` &m, const string &exp, int code, size_t dof=1)
- Assign a given code to all nodes satisfying a boolean expression using node coordinates.*

 - `void setBoundaryNodeCodes` (`Mesh` &m, const string &exp, int code, size_t dof=1)
- Assign a given code to all nodes on boundary that satisfy a boolean expression using node coordinates.*

 - `void setSideCodes` (`Mesh` &m, const string &exp, int code, size_t dof=1)
- Assign a given code to all sides satisfying a boolean expression using node coordinates.*

 - `void setBoundarySideCodes` (`Mesh` &m, const string &exp, int code, size_t dof=1)
- Assign a given code to all sides on boundary that satisfy a boolean expression using node coordinates.*

 - `void setElementCodes` (`Mesh` &m, const string &exp, int code)
- Assign a given code to all elements satisfying a boolean expression using node coordinates.*

 - `int NodeInElement` (const `Node` *nd, const `Element` *el)
- Say if a given node belongs to a given element.*

 - `int NodeInSide` (const `Node` *nd, const `Side` *sd)
- Say if a given node belongs to a given side.*

 - `int SideInElement` (const `Side` *sd, const `Element` *el)
- Say if a given side belongs to a given element.*

 - `ostream & operator<<` (ostream &s, const `Node` &nd)
- Output node data.*

 - `void saveMesh` (const string &file, const `Mesh` &mesh, ExternalFileFormat form)
- This function saves mesh data a file for a given external format.*

 - `void saveGmsh` (const string &gp_file, const `Mesh` &mesh)
- This function outputs a `Mesh` instance in a file in `Gmsh` format.*

 - `void saveGnuplot` (const string &file, const `Mesh` &mesh)
- This function outputs a `Mesh` instance in a file in `Gmsh` format.*

 - `void saveMatlab` (const string &file, const `Mesh` &mesh)
- This function outputs a `Mesh` instance in a file in `Matlab` format.*

 - `void saveTecplot` (const string &file, const `Mesh` &mesh)
- This function outputs a `Mesh` instance in a file in `Tecplot` format.*

 - `void saveVTK` (const string &file, const `Mesh` &mesh)
- This function outputs a `Mesh` instance in a file in `VTK` format.*

 - `void saveBamg` (const string &file, `Mesh` &mesh)
- This function outputs a `Mesh` instance in a file in `Bamg` format.*

 - `ostream & operator<<` (ostream &s, const `Side` &sd)

Output side data.

- ostream & **operator<<** (ostream &s, const **Estimator** &r)

Output estimator vector in output stream.

- template<class T_ >
int **BiCG** (const **SpMatrix**< T_ > &A, int prec, const **Vect**< T_ > &b, **Vect**< T_ > &x, int max_it, **real_t** toler, int verbose)

Biconjugate gradient solver function.

- template<class T_ >
int **BiCGStab** (const **SpMatrix**< T_ > &A, const **Prec**< T_ > &P, const **Vect**< T_ > &b, **Vect**< T_ > &x, int max_it, **real_t** toler, int verbose)

Biconjugate gradient stabilized solver function.

- template<class T_ >
int **BiCGStab** (const **SpMatrix**< T_ > &A, int prec, const **Vect**< T_ > &b, **Vect**< T_ > &x, int max_it, **real_t** toler, int verbose)

Biconjugate gradient stabilized solver function.

- void **BSpline** (size_t n, size_t t, **Vect**< **Point**< **real_t** > > &control, **Vect**< **Point**< **real_t** > > &output, size_t num_output)

Function to perform a B-spline interpolation.

- template<class T_ >
int **CG** (const **SpMatrix**< T_ > &A, const **Prec**< T_ > &P, const **Vect**< T_ > &b, **Vect**< T_ > &x, int max_it, **real_t** toler, int verbose)

Conjugate gradient solver function.

- template<class T_ >
int **CG** (const **SpMatrix**< T_ > &A, int prec, const **Vect**< T_ > &b, **Vect**< T_ > &x, int max_it, **real_t** toler, int verbose)

Conjugate gradient solver function.

- template<class T_ >
int **CGS** (const **SpMatrix**< T_ > &A, int prec, const **Vect**< T_ > &b, **Vect**< T_ > &x, int max_it, **real_t** toler, int verbose)

Conjugate Gradient Squared solver function.

- template<class T_ >
int **GMRes** (const **SpMatrix**< T_ > &A, const **Prec**< T_ > &P, const **Vect**< T_ > &b, **Vect**< T_ > &x, size_t m, int max_it, **real_t** toler, int verbose)

GMRes solver function.

- template<class T_ >
int **GMRes** (const **SpMatrix**< T_ > &A, int prec, const **Vect**< T_ > &b, **Vect**< T_ > &x, size_t m, int max_it, **real_t** toler, int verbose)

GMRes solver function.

- template<class T_ >
int **GS** (const **SpMatrix**< T_ > &A, const **Vect**< T_ > &b, **Vect**< T_ > &x, **real_t** omega, int max_it, **real_t** toler, int verbose)

Gauss-Seidel solver function.

- template<class T_ >
int **Jacobi** (const **SpMatrix**< T_ > &A, const **Vect**< T_ > &b, **Vect**< T_ > &x, **real_t** omega, int max_it, **real_t** toler, int verbose)

Jacobi solver function.

- ostream & **operator<<** (ostream &s, const **ODESolver** &de)

Output differential system information.

- ostream & **operator<<** (ostream &s, const **OptSolver** &os)

Output differential system information.

- `template<class T_, class M_ >`
`int Richardson (const M_ &A, const Vect< T_ > &b, Vect< T_ > &x, real_t omega, int max_it,`
`real_t toler, int verbose)`

Richardson solver function.

- `template<class T_ >`
`void Schur (SkMatrix< T_ > &A, SpMatrix< T_ > &U, SpMatrix< T_ > &L, SpMatrix< T_`
`> &D, Vect< T_ > &b, Vect< T_ > &c)`

Solve a linear system of equations with a 2x2-block matrix.

- `template<class T_ >`
`void Schur (PETScMatrix< T_ > &A, PETScMatrix< T_ > &U, PETScMatrix< T_ > &L,`
`PETScMatrix< T_ > &D, PETScVect< T_ > &b, PETScVect< T_ > &c)`

Solve a linear system of equations with a 2x2-block matrix.

- `template<class T_, class M_ >`
`int SSOR (const M_ &A, const Vect< T_ > &b, Vect< T_ > &x, int max_it, real_t toler, int`
`verbose)`

SSOR solver function.

- `ostream & operator<< (ostream &s, const TimeStepping &ts)`

Output differential system information.

- `void banner (const string &prog=" ")`

Outputs a banner as header of any developed program.

- `template<class T_ >`
`void QuickSort (std::vector< T_ > &a, int begin, int end)`

Function to sort a vector.

- `template<class T_ >`
`void qksort (std::vector< T_ > &a, int begin, int end)`

Function to sort a vector.

- `template<class T_, class C_ >`
`void qksort (std::vector< T_ > &a, int begin, int end, C_ compare)`

Function to sort a vector according to a key function.

- `int Sgn (real_t a)`

Return sign of a : -1 or 1.

- `real_t Abs2 (complex_t a)`

Return square of modulus of complex number a

- `real_t Abs2 (real_t a)`

Return square of real number a

- `real_t Abs (real_t a)`

Return absolute value of a

- `real_t Abs (complex_t a)`

Return modulus of complex number a

- `real_t Abs (const Point< real_t > &p)`

Return Norm of vector a

- `real_t Conjg (real_t a)`

Return complex conjugate of real number a

- `complex_t Conjg (complex_t a)`

Return complex conjugate of complex number a

- `real_t Max (real_t a, real_t b, real_t c)`

Return maximum value of real numbers a , b and c

- `int Max (int a, int b, int c)`
Return maximum value of integer numbers a, b and c
- `real_t Min (real_t a, real_t b, real_t c)`
Return minimum value of real numbers a, b and c
- `int Min (int a, int b, int c)`
Return minimum value of integer numbers a, b and c
- `real_t Max (real_t a, real_t b, real_t c, real_t d)`
Return maximum value of integer numbers a, b, c and d
- `int Max (int a, int b, int c, int d)`
Return maximum value of integer numbers a, b, c and d
- `real_t Min (real_t a, real_t b, real_t c, real_t d)`
Return minimum value of real numbers a, b, c and d
- `int Min (int a, int b, int c, int d)`
Return minimum value of integer numbers a, b, c and d
- `real_t Arg (complex_t x)`
Return argument of complex number x
- `complex_t Log (complex_t x)`
Return principal determination of logarithm of complex number x
- `template<class T_>`
`T_ Sqr (T_ x)`
Return square of value x
- `template<class T_>`
`void Scale (T_ a, const vector< T_ > &x, vector< T_ > &y)`
Multiply vector x by a and save result in vector y
- `template<class T_>`
`void Scale (T_ a, const Vect< T_ > &x, Vect< T_ > &y)`
Multiply vector x by a and save result in vector y
- `template<class T_>`
`void Scale (T_ a, vector< T_ > &x)`
Multiply vector x by a
- `template<class T_>`
`void Xpy (size_t n, T_ *x, T_ *y)`
Add array x to y
- `template<class T_>`
`void Xpy (const vector< T_ > &x, vector< T_ > &y)`
Add vector x to y
- `template<class T_>`
`void Axy (size_t n, T_ a, T_ *x, T_ *y)`
Multiply array x by a and add result to y
- `template<class T_>`
`void Axy (T_ a, const vector< T_ > &x, vector< T_ > &y)`
Multiply vector x by a and add result to y
- `template<class T_>`
`void Axy (T_ a, const Vect< T_ > &x, Vect< T_ > &y)`
Multiply vector x by a and add result to y
- `template<class T_>`
`void Copy (size_t n, T_ *x, T_ *y)`
Copy array x to y n is the arrays size.

- `real_t Error2` (const vector< `real_t` > &x, const vector< `real_t` > &y)
Return absolute L2 error between vectors x and y
- `real_t RError2` (const vector< `real_t` > &x, const vector< `real_t` > &y)
Return absolute L^2 error between vectors x and y
- `real_t ErrorMax` (const vector< `real_t` > &x, const vector< `real_t` > &y)
Return absolute Max. error between vectors x and y
- `real_t RErrorMax` (const vector< `real_t` > &x, const vector< `real_t` > &y)
Return relative Max. error between vectors x and y
- template<class T_ >
`T_ Dot` (size_t n, T_ *x, T_ *y)
Return dot product of arrays x and y
- `real_t Dot` (const vector< `real_t` > &x, const vector< `real_t` > &y)
Return dot product of vectors x and y .
- `real_t operator*` (const vector< `real_t` > &x, const vector< `real_t` > &y)
*Operator * (Dot product of 2 vector instances)*
- `real_t Dot` (const Vect< `real_t` > &x, const Vect< `real_t` > &y)
Return dot product of vectors x and y
- template<class T_ >
`T_ Dot` (const Point< T_ > &x, const Point< T_ > &y)
Return dot product of x and y
- `real_t exprep` (`real_t` x)
Compute the exponential function with avoiding over and underflows.
- template<class T_ >
`void Assign` (vector< T_ > &v, const T_ &a)
Assign the value a to all entries of a vector v
- template<class T_ >
`void Clear` (vector< T_ > &v)
Assign 0 to all entries of a vector.
- template<class T_ >
`void Clear` (Vect< T_ > &v)
Assign 0 to all entries of a vector.
- `real_t Nrm2` (size_t n, `real_t` *x)
Return 2-norm of array x
- `real_t Nrm2` (const vector< `real_t` > &x)
Return 2-norm of vector x
- template<class T_ >
`real_t Nrm2` (const Point< T_ > &a)
Return 2-norm of a
- `bool Equal` (`real_t` x, `real_t` y, `real_t` toler=`OFELI.EPSMCH`)
Function to return true if numbers x and y are close up to a given tolerance $toler$
- `char itoc` (int i)
Function to convert an integer to a character.
- `std::string itos` (size_t i)
Function to convert an integer to a string.
- template<class T_ >
`T_ stringTo` (const std::string &s)
Function to convert a string to a template type parameter.

- void [RTrim](#) (char *s)
Function to remove blanks at the end of a string.
- void [LTrim](#) (char *s)
Function to remove blanks at the beginning of a string.
- void [Trim](#) (char *s)
Function to remove blanks at the beginning and end of a string.
- template<class T_ >
void [Swap](#) (T_ &a, T_ &b)
Swap elements a and b.

Variables

- [Node](#) * [theNode](#)
A pointer to [Node](#).
- [Element](#) * [theElement](#)
A pointer to [Element](#).
- [Side](#) * [theSide](#)
A pointer to [Side](#).
- [Edge](#) * [theEdge](#)
A pointer to [Edge](#).
- int [theStep](#)
Time step counter.
- int [theIteration](#)
Iteration counter.
- int [NbTimeSteps](#)
Number of time steps.
- int [MaxNbIterations](#)
Maximal number of iterations.
- int [Verbosity](#)
Parameter for verbosity of message outputting.
- [real_t](#) [theTimeStep](#)
Time step label.
- [real_t](#) [theTime](#)
Time value.
- [real_t](#) [theFinalTime](#)
Final time value.
- [real_t](#) [theTolerance](#)
Tolerance value for convergence.
- [real_t](#) [theDiscrepancy](#)
Value of discrepancy for an iterative procedure Its default value is 1. 0.
- bool [Converged](#)
Boolean variable to say if an iterative procedure has converged.
- bool [InitPetsc](#)

6.1.1 Detailed Description

A namespace to group all library classes, functions, ...

Namespace [OFELI](#) groups all OFELI library classes, functions and global variables.


Chapter 7

Class Documentation

7.1 AbsEqua< T_ > Class Template Reference

Mother abstract class to describe equation.

Inheritance diagram for AbsEqua< T_ >:

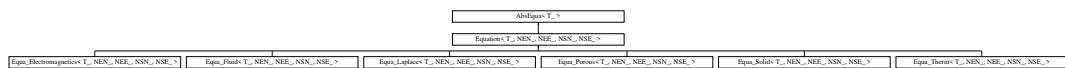

Public Member Functions

- [AbsEqua](#) ()
Default constructor.
- [AbsEqua](#) ([Mesh](#) &mesh)
Constructor with mesh instance.
- virtual [~AbsEqua](#) ()
Destructor.
- void [setMesh](#) ([Mesh](#) &m)
Define mesh and renumber DOFs after removing imposed ones.
- [Mesh](#) & [getMesh](#) () const
Return reference to [Mesh](#) instance.
- [LinearSolver](#)< T_ > & [getLinearSolver](#) ()
Return reference to linear solver instance.
- void [setSolver](#) ([Iteration](#) ls, [Preconditioner](#) pc=[IDENT_PREC](#))
Choose solver for the linear system.
- int [SolveLinearSystem](#) ([Matrix](#)< T_ > *A, [Vect](#)< T_ > &b, [Vect](#)< T_ > &x)
Solve the linear system.

7.1.1 Detailed Description

template<class T_>

class OFELI::AbsEqua< T_ >

Mother abstract class to describe equation.

Template Parameters

<T_>	Data type (real_t, float, complex<real_t>, ...)
------	---

7.1.2 Member Function Documentation

Mesh& getMesh () const

Return reference to [Mesh](#) instance.

Returns

Reference to [Mesh](#) instance

void setSolver (Iteration *ls*, Preconditioner *pc* = IDENT_PREC)

Choose solver for the linear system.

Parameters

in	<i>ls</i>	<p>Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER</p> <ul style="list-style-type: none"> • DIRECT_SOLVER, Use a facorization solver [default] • CG_SOLVER, Conjugate Gradient iterative solver • CGS_SOLVER, Squared Conjugate Gradient iterative solver • BICG_SOLVER, BiConjugate Gradient iterative solver • BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver • GMRES_SOLVER, GMRES iterative solver • QMR_SOLVER, QMR iterative solver
in	<i>pc</i>	<p>Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:</p> <ul style="list-style-type: none"> • IDENT_PREC, Identity preconditioner (no preconditioning [default]) • DIAG_PREC, Diagonal preconditioner • ILU_PREC, Incomplete LU factorization preconditioner

int SolveLinearSystem (Matrix< T_ > * *A*, Vect< T_ > & *b*, Vect< T_ > & *x*)

Solve the linear system.

Parameters

in	<i>A</i>	Pointer to matrix of the system (Instance of class SpMatrix)
----	----------	---


Parameters

in	b	Vector containing right-hand side
in, out	x	Vector containing initial guess of solution on input, actual solution on output

7.2 Bar2DL2 Class Reference

To build element equations for Planar Elastic Bar element with 2 DOF (Degrees of Freedom) per node.

Inheritance diagram for Bar2DL2:

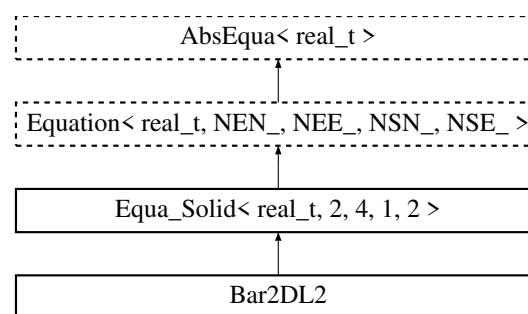

Public Member Functions

- [Bar2DL2](#) ()
Default Constructor.
- [Bar2DL2](#) ([Element](#) *el, [real_t](#) section)
Constructor using element data.
- [~Bar2DL2](#) ()
Destructor.
- void [Mass](#) ([real_t](#) coef=1.)
Add element consistent mass contribution to matrix and right-hand side after multiplication by coef
- void [LMass](#) ([real_t](#) coef=1.)
Add element lumped mass contribution to matrix and right-hand side after multiplication by coef
- void [LMassToLHS](#) ([real_t](#) coef=1)
Add lumped mass matrix to left-hand side after multiplying it by coefficient coef
- void [LMassToRHS](#) ([real_t](#) coef=1)
Add lumped mass contribution to right-hand side after multiplying it by coefficient coef
- void [MassToLHS](#) ([real_t](#) coef=1)
Add consistent mass matrix to left-hand side after multiplying it by coefficient coef
- void [MassToRHS](#) ([real_t](#) coef=1)
Add consistent mass contribution to right-hand side after multiplying it by coefficient coef
- void [Stiffness](#) ([real_t](#) coef=1.)
Add element stiffness to left hand side.
- void [BodyRHS](#) ([UserData](#)< [real_t](#) > &ud)
Add body right-hand side term to right hand side.
- [real_t](#) [Stress](#) () const

- Return stresses in bar.*

 - void `getStresses` (const `Vect< real.t > &u`, `Vect< real.t > &s`)

Return stresses in the truss structure (elementwise)
- int `runOneTimeStep` ()

Run one time step.
- int `run` ()

Solve the equation.
- void `build` ()

Build the linear system of equations.
- void `buildEigen` (`SkSMatrix< real.t > &K`, `SkSMatrix< real.t > &M`)

Build global stiffness and mass matrices for the eigen system.
- void `buildEigen` (`SkSMatrix< real.t > &K`, `Vect< real.t > &M`)

Build global stiffness and mass matrices for the eigen system.
- void `setLumpedMass` ()

Add lumped mass contribution to left and right-hand sides taking into account time integration scheme.
- void `setMass` ()

Add consistent mass contribution to left and right-hand sides taking into account time integration scheme.
- virtual void `Deviator` (`real.t` coef=1)

Add deviator matrix to left-hand side taking into account time integration scheme, after multiplication by coef [Default: 1].
- virtual void `Dilatation` (`real.t` coef=1)

Add dilatation matrix to left-hand side taking into account time integration scheme, after multiplication by coef [Default: 1].
- virtual void `DilatationToRHS` (`real.t` coef=1)

Add dilatation vector to right-hand side taking into account time integration scheme, after multiplication by coef [Default: 1].
- virtual void `DeviatorToRHS` (`real.t` coef=1)

Add deviator vector to right-hand side taking into account time integration scheme, after multiplication by coef [Default: 1].
- virtual void `StiffnessToRHS` (`real.t` coef=1)

Add stiffness matrix to right-hand side taking into account time integration scheme, after multiplication by coef [Default: 1].
- void `setDilatation` ()

Add dilatation matrix to left and/or right-hand side taking into account time.
- void `setDeviator` ()

Add deviator matrix to left and/or right-hand side taking into account time integration scheme.
- void `setStiffness` ()

Add convection contribution to left and/or right-hand side taking into account time integration scheme.
- void `updateBC` (const `Element &el`, const `Vect< real.t > &bc`)

Update Right-Hand side by taking into account essential boundary conditions.
- void `updateBC` (const `Vect< real.t > &bc`)

Update Right-Hand side by taking into account essential boundary conditions.
- void `DiagBC` (int dof_type=NODE_DOF, int dof=0)

Update element matrix to impose bc by diagonalization technique.
- void `LocalNodeVector` (`Vect< real.t > &b`)

Localize Element Vector from a Vect instance.
- void `ElementNodeVector` (const `Vect< real.t > &b`, `LocalVect< real.t, NEE_ > &be`)

Localize Element Vector from a Vect instance.

- void [ElementNodeVector](#) (const [Vect](#)< [real_t](#) > &b, [LocalVect](#)< [real_t](#), [NEN_](#) > &be, int dof)
Localize Element Vector from a Vect instance.
- void [ElementNodeVectorSingleDOF](#) (const [Vect](#)< [real_t](#) > &b, [LocalVect](#)< [real_t](#), [NEN_](#) > &be)
Localize Element Vector from a Vect instance.
- void [ElementSideVector](#) (const [Vect](#)< [real_t](#) > &b, [LocalVect](#)< [real_t](#), [NSE_](#) > &be)
Localize Element Vector from a Vect instance.
- void [ElementVector](#) (const [Vect](#)< [real_t](#) > &b, int dof_type=NODE.FIELD, int flag=0)
Localize Element Vector.
- void [SideVector](#) (const [Vect](#)< [real_t](#) > &b)
Localize Side Vector.
- void [ElementNodeCoordinates](#) ()
Localize coordinates of element nodes.
- void [SideNodeCoordinates](#) ()
Localize coordinates of side nodes.
- void [ElementAssembly](#) ([Matrix](#)< [real_t](#) > *A)
Assemble element matrix into global one.
- void [ElementAssembly](#) ([PETScMatrix](#)< [real_t](#) > &A)
Assemble element matrix into global one.
- void [ElementAssembly](#) ([PETScVect](#)< [real_t](#) > &b)
Assemble element right-hand side vector into global one.
- void [ElementAssembly](#) ([BMatrix](#)< [real_t](#) > &A)
Assemble element matrix into global one.
- void [ElementAssembly](#) ([SkSMatrix](#)< [real_t](#) > &A)
Assemble element matrix into global one.
- void [ElementAssembly](#) ([SkMatrix](#)< [real_t](#) > &A)
Assemble element matrix into global one.
- void [ElementAssembly](#) ([SpMatrix](#)< [real_t](#) > &A)
Assemble element matrix into global one.
- void [ElementAssembly](#) ([TrMatrix](#)< [real_t](#) > &A)
Assemble element matrix into global one.
- void [ElementAssembly](#) ([Vect](#)< [real_t](#) > &v)
Assemble element vector into global one.
- void [SideAssembly](#) ([PETScMatrix](#)< [real_t](#) > &A)
Assemble side matrix into global one.
- void [SideAssembly](#) ([PETScVect](#)< [real_t](#) > &b)
Assemble side right-hand side vector into global one.
- void [SideAssembly](#) ([Matrix](#)< [real_t](#) > *A)
Assemble side (edge or face) matrix into global one.
- void [SideAssembly](#) ([SkSMatrix](#)< [real_t](#) > &A)
Assemble side (edge or face) matrix into global one.
- void [SideAssembly](#) ([SkMatrix](#)< [real_t](#) > &A)
Assemble side (edge or face) matrix into global one.
- void [SideAssembly](#) ([SpMatrix](#)< [real_t](#) > &A)
Assemble side (edge or face) matrix into global one.
- void [SideAssembly](#) ([Vect](#)< [real_t](#) > &v)
Assemble side (edge or face) vector into global one.

- void **DGElementAssembly** (**Matrix**< **real.t** > *A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void **DGElementAssembly** (**SkSMatrix**< **real.t** > &A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void **DGElementAssembly** (**SkMatrix**< **real.t** > &A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void **DGElementAssembly** (**SpMatrix**< **real.t** > &A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void **DGElementAssembly** (**TrMatrix**< **real.t** > &A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void **AxbAssembly** (const **Element** &el, const **Vect**< **real.t** > &x, **Vect**< **real.t** > &b)
Assemble product of element matrix by element vector into global vector.
- void **AxbAssembly** (const **Side** &sd, const **Vect**< **real.t** > &x, **Vect**< **real.t** > &b)
Assemble product of side matrix by side vector into global vector.
- size_t **getNbNodes** () const
Return number of element nodes.
- size_t **getNbEq** () const
Return number of element equations.
- void **setInitialSolution** (const **Vect**< **real.t** > &u)
Set initial solution (previous time step)
- **real.t** **setMaterialProperty** (const string &exp, const string &prop)
Define a material property by an algebraic expression.
- void **setMesh** (**Mesh** &m)
Define mesh and renumber DOFs after removing imposed ones.
- **Mesh** & **getMesh** () const
Return reference to Mesh instance.
- **LinearSolver**< **real.t** > & **getLinearSolver** ()
Return reference to linear solver instance.
- void **setSolver** (**Iteration** ls, **Preconditioner** pc=IDENT_PREC)
Choose solver for the linear system.
- int **SolveLinearSystem** (**Matrix**< **real.t** > *A, **Vect**< **real.t** > &b, **Vect**< **real.t** > &x)
Solve the linear system.

Public Attributes

- **LocalMatrix**< **real.t**, NEE_, NEE_ > **eMat**
LocalMatrix instance containing local matrix associated to current element.
- **LocalMatrix**< **real.t**, NSE_, NSE_ > **sMat**
LocalMatrix instance containing local matrix associated to current side.
- **LocalVect**< **real.t**, NEE_ > **ePrev**
LocalVect instance containing local vector associated to current element.
- **LocalVect**< **real.t**, NEE_ > **eRHS**
LocalVect instance containing local right-hand side vector associated to current element.
- **LocalVect**< **real.t**, NEE_ > **eRes**
LocalVect instance containing local residual vector associated to current element.
- **LocalVect**< **real.t**, NSE_ > **sRHS**
LocalVect instance containing local right-hand side vector associated to current side.

Protected Member Functions

- void **Young** (const **real_t** &E)
Set (constant) Young modulus.
- void **Young** (const string &exp)
Set Young modulus given by an algebraic expression.
- void **Poisson** (const **real_t** &nu)
Set (constant) Poisson ratio.
- void **Poisson** (const string &exp)
Set Poisson ratio given by an algebraic expression.
- void **Density** (const **real_t** &rho)
Set (constant) density.
- void **Density** (const string &exp)
Set density given by an algebraic expression.
- void **setMaterial** ()
Set material properties.
- void **Init** (const **Element** *el)
Set element arrays to zero.
- void **Init** (const **Side** *sd)
Set side arrays to zero.

7.2.1 Detailed Description

To build element equations for Planar Elastic Bar element with 2 DOF (Degrees of Freedom) per node.

This class implements a planar (two-dimensional) elastic bar using 2-node lines. Note that members calculating element arrays have as an argument a real *coef* that is multiplied by the contribution of the current element. This makes possible testing different algorithms.

7.2.2 Constructor & Destructor Documentation

Bar2DL2 ()

Default Constructor.

Constructs an empty equation.

Bar2DL2 (**Element** * *el*, **real_t** *section*)

Constructor using element data.

Parameters

in	<i>el</i>	Pointer to Element
in	<i>section</i>	Section of bar at present element

7.2.3 Member Function Documentation

void Mass (**real_t** *coef* = 1.) [virtual]

Add element consistent mass contribution to matrix and right-hand side after multiplication by *coef*

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [Default: 1].
----	-------------	---

Reimplemented from [Equa.Solid< real.t, 2, 4, 1, 2 >](#).

void LMass (real.t *coef* = 1.) [virtual]

Add element lumped mass contribution to matrix ans right-hand side after multiplication by *coef*

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [Default: 1].
----	-------------	---

Reimplemented from [Equa.Solid< real.t, 2, 4, 1, 2 >](#).

void LMassToLHS (real.t *coef* = 1) [virtual]

Add lumped mass matrix to left-hand side after multiplying it by coefficient *coef*

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [Default: 1].
----	-------------	---

Reimplemented from [Equa.Solid< real.t, 2, 4, 1, 2 >](#).

void LMassToRHS (real.t *coef* = 1) [virtual]

Add lumped mass contribution to right-hand side after multiplying it by coefficient *coef*

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [Default: 1].
----	-------------	---

Reimplemented from [Equa.Solid< real.t, 2, 4, 1, 2 >](#).

void MassToLHS (real.t *coef* = 1) [virtual]

Add consistent mass matrix to left-hand side after multiplying it by coefficient *coef*

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [Default: 1].
----	-------------	---

Reimplemented from [Equa.Solid< real.t, 2, 4, 1, 2 >](#).

void MassToRHS (real.t *coef* = 1) [virtual]

Add consistent mass contribution to right-hand side after multiplying it by coefficient *coef*

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [Default: 1].
----	-------------	---

Reimplemented from [Equa.Solid< real.t, 2, 4, 1, 2 >](#).

void Stiffness (real.t *coef* = 1.) [virtual]

Add element stiffness to left hand side.

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [Default: 1].
----	-------------	---

Reimplemented from [Equa.Solid< real.t, 2, 4, 1, 2 >](#).

void BodyRHS (UserData< real.t > & *ud*)

Add body right-hand side term to right hand side.

Parameters

in	<i>ud</i>	instance containing user data with prescribes loads
----	-----------	---

void getStresses (const Vect< real.t > & *u*, Vect< real.t > & *s*)

Return stresses in the truss structure (elementwise)

Parameters

in	<i>u</i>	Vect instance containing displacements at nodes
in	<i>s</i>	Vect instance containing axial stresses in elements

int runOneTimeStep ()

Run one time step.

This function performs one time step in equation solving. It is to be used only if a TRANSIENT analysis is required.

Returns

Return error from the linear system solver

int run ()

Solve the equation.

If the analysis (see function **setAnalysis**) is STEADY.STATE, then the function solves the stationary equation.

If the analysis is TRANSIENT, then the function performs time stepping until the final time is reached.

void build ()

Build the linear system of equations.

Before using this function, one must have properly selected appropriate options for:

- The choice of a steady state or transient analysis
- In the case of transient analysis, the choice of a time integration scheme and a lumped or consistent mass matrix
- The choice of desired linear system solver

void buildEigen (SkSMatrix< real.t > & K, SkSMatrix< real.t > & M)

Build global stiffness and mass matrices for the eigen system.

Case where the mass matrix is consistent

Parameters

in	K	Stiffness matrix
in	M	Consistent mass matrix

void buildEigen (SkSMatrix< real.t > & K, Vect< real.t > & M)

Build global stiffness and mass matrices for the eigen system.

Case where the mass matrix is lumped

Parameters

in	K	Stiffness matrix
in	M	Vector containing diagonal mass matrix

void updateBC (const Element & el, const Vect< real.t > & bc) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	el	Reference to current element instance
in	bc	Vector that contains imposed values at all DOFs

void updateBC (const Vect< real.t > & bc) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	bc	Vector that contains imposed values at all DOFs
----	------	---

Remarks

The current element is pointed by `_theElement`

void DiagBC (int *dof_type* = *NODE_DOF*, int *dof* = 0) [inherited]

Update element matrix to impose bc by diagonalization technique.

Parameters

in	<i>dof_type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • <i>NODE_FIELD</i>, DOFs are supported by nodes [Default] • <i>ELEMENT_FIELD</i>, DOFs are supported by elements • <i>SIDE_FIELD</i>, DOFs are supported by sides
in	<i>dof</i>	DOF setting: <ul style="list-style-type: none"> • = 0, All DOFs are taken into account [Default] • != 0, Only DOF No. <i>dof</i> is handled in the system

void LocalNodeVector (Vect< real.t > & *b*) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Reference to global vector to be localized. The resulting local vector can be accessed by attribute <i>ePrev</i> . This member function is to be used if a constructor with <i>Element</i> was invoked.
----	----------	---

void ElementNodeVector (const Vect< real.t > & *b*, LocalVect< real.t, NEE_ > & *be*)
[inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

All degrees of freedom are transferred to the local vector

void ElementNodeVector (const Vect< real_t > & b, LocalVect< real_t, NEN_ > & be, int dof) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.
in	<i>dof</i>	Degree of freedom to transfer to the local vector

Remarks

Only yhe dega dof is transferred to the local vector

void ElementNodeVectorSingleDOF (const Vect< real_t > & b, LocalVect< real_t, NEN_ > & be) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

Vector b is assumed to contain only one degree of freedom by node.

void ElementSideVector (const Vect< real_t > & b, LocalVect< real_t, NSE_ > & be) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is

void ElementVector (const Vect< real_t > & b, int dof_type = NODE_FIELD, int flag = 0) [inherited]

Localize Element Vector.

Parameters

in	<i>b</i>	Global vector to be localized
in	<i>dof_type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • <code>NODE_FIELD</code>, DOFs are supported by nodes [Default] • <code>ELEMENT_FIELD</code>, DOFs are supported by elements • <code>SIDE_FIELD</code>, DOFs are supported by sides
in	<i>flag</i>	Option to set: <ul style="list-style-type: none"> • <code>= 0</code>, All DOFs are taken into account [Default] • <code>!= 0</code>, Only DOF number <code>dof</code> is handled in the system The resulting local vector can be accessed by attribute <code>ePrev</code> .

Remarks

This member function is to be used if a constructor with `Element` was invoked. It uses the `Element` pointer `_theElement`

void SideVector (const Vect< real.t > & b) [inherited]

Localize Side Vector.

Parameters

in	<i>b</i>	Global vector to be localized <ul style="list-style-type: none"> • <code>NODE_FIELD</code>, DOFs are supported by nodes [default] • <code>ELEMENT_FIELD</code>, DOFs are supported by elements • <code>SIDE_FIELD</code>, DOFs are supported by sides The resulting local vector can be accessed by attribute <code>ePrev</code> .
----	----------	---

Remarks

This member function is to be used if a constructor with `Side` was invoked. It uses the `Side` pointer `_theSide`

void ElementNodeCoordinates () [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array `_x[0]`, `_x[1]`, ... which are instances of class [Point<real.t>](#)

Remarks

This member function uses the `Side` pointer `_theSide`

void SideNodeCoordinates () [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array `_x[0]`, `_x[1]`, ... which are instances of class [Point<real_t>](#)

Remarks

This member function uses the Element pointer `_theElement`

void ElementAssembly (Matrix< real_t > * A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScMatrix< real_t > & A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Reference to global matrix
----------	----------------------------

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScVect< real_t > & b) [inherited]

Assemble element right-hand side vector into global one.

Parameters

<i>b</i>	Reference to global right-hand side vector
----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (BMatrix< real_t > & A) [inherited]

Assemble element matrix into global one.

Parameters

A	Global matrix stored as a BMatrix instance
-----	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkSMatrix< real.t > &A) [inherited]

Assemble element matrix into global one.

Parameters

A	Global matrix stored as an SkSMatrix instance
-----	---

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkMatrix< real.t > &A) [inherited]

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an SkMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SpMatrix< real.t > &A) [inherited]

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an SpMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (TrMatrix< real.t > &A) [inherited]

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an TrMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable theElement

void ElementAssembly (Vect< real.t > & v) [inherited]

Assemble element vector into global one.

Parameters

in	v	Global vector (Vect instance)
----	-----	-------------------------------

Warning

The element pointer is given by the global variable theElement

void SideAssembly (PETScMatrix< real.t > & A) [inherited]

Assemble side matrix into global one.

Parameters

A	Reference to global matrix
-----	----------------------------

Warning

The side pointer is given by the global variable theSide

void SideAssembly (PETScVect< real.t > & b) [inherited]

Assemble side right-hand side vector into global one.

Parameters

b	Reference to global right-hand side vector
-----	--

Warning

The side pointer is given by the global variable theSide

void SideAssembly (Matrix< real.t > * A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

<i>A</i>	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
----------	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SkSMatrix< real.t > & *A*) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an SkSMatrix instance
----	----------	---

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SkMatrix< real.t > & *A*) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an SkMatrix instance
----	----------	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SpMatrix< real.t > & *A*) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an SpMatrix instance
----	----------	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (Vect< real.t > & *v*) [inherited]

Assemble side (edge or face) vector into global one.

Parameters

in	v	Global vector (Vect instance)
----	-----	-------------------------------

Warning

The side pointer is given by the global variable `theSide`

void DGElementAssembly (Matrix< real.t > * A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
---	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SkSMatrix< real.t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

A	Global matrix stored as an SkSMatrix instance
---	---

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SkMatrix< real.t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SpMatrix< real.t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	A	Global matrix stored as an SpMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (TrMatrix< real.t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	A	Global matrix stored as an TrMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void AxbAssembly (const Element & el , const Vect< real.t > & x , Vect< real.t > & b)
[inherited]

Assemble product of element matrix by element vector into global vector.

Parameters

in	el	Reference to Element instance
in	x	Global vector to multiply by (Vect instance)
out	b	Global vector to add (Vect instance)

void AxbAssembly (const Side & sd , const Vect< real.t > & x , Vect< real.t > & b)
[inherited]

Assemble product of side matrix by side vector into global vector.

Parameters

in	sd	Reference to Side instance
in	x	Global vector to multiply by (Vect instance)
out	b	Global vector (Vect instance)

real.t setMaterialProperty (const string & exp , const string & $prop$) [inherited]

Define a material property by an algebraic expression.

Parameters

in	<i>exp</i>	Algebraic expression
in	<i>prop</i>	Property name

Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

Mesh& getMesh () const [inherited]

Return reference to Mesh instance.

Returns

Reference to Mesh instance

void setSolver (Iteration *ls*, Preconditioner *pc* = *IDENT_PREC*) [inherited]

Choose solver for the linear system.

Parameters

in	<i>ls</i>	<p>Solver of the linear system. To choose among the enumerated values: <i>DIRECT_SOLVER</i>, <i>CG_SOLVER</i>, <i>GMRES_SOLVER</i></p> <ul style="list-style-type: none"> • <i>DIRECT_SOLVER</i>, Use a facorization solver [default] • <i>CG_SOLVER</i>, Conjugate Gradient iterative solver • <i>CGS_SOLVER</i>, Squared Conjugate Gradient iterative solver • <i>BICG_SOLVER</i>, BiConjugate Gradient iterative solver • <i>BICG_STAB_SOLVER</i>, BiConjugate Gradient Stabilized iterative solver • <i>GMRES_SOLVER</i>, GMRES iterative solver • <i>QMR_SOLVER</i>, QMR iterative solver
in	<i>pc</i>	<p>Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:</p> <ul style="list-style-type: none"> • <i>IDENT_PREC</i>, Identity preconditioner (no preconditioning [default]) • <i>DIAG_PREC</i>, Diagonal preconditioner • <i>ILU_PREC</i>, Incomplete LU factorization preconditioner

int SolveLinearSystem (Matrix< real_t > * A, Vect< real_t > & b, Vect< real_t > & x)
[inherited]

Solve the linear system.

Parameters

in	A	Pointer to matrix of the system (Instance of class SpMatrix)
in	b	Vector containing right-hand side
in,out	x	Vector containing initial guess of solution on input, actual solution on output

7.2.4 Member Data Documentation

LocalVect<real_t,NEE_> ePrev [inherited]


LocalVect instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

7.3 Beam3DL2 Class Reference

To build element equations for 3-D beam equations using 2-node lines.

Inheritance diagram for Beam3DL2:

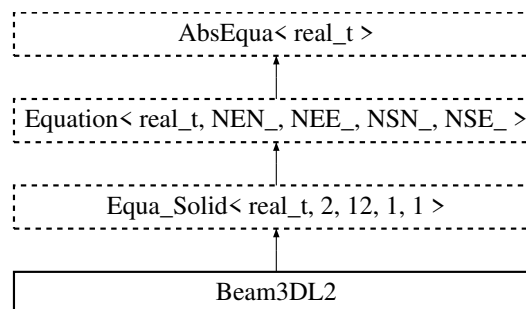

Public Member Functions

- **Beam3DL2 ()**
Default Constructor.
- **Beam3DL2 (Element *el, real_t A, real_t I1, real_t I2)**
Constructor using element data.
- **Beam3DL2 (Element *el, real_t A, real_t I1, real_t I2, const Vect< real_t > &u, const real_t &time=0)**
Constructor for dynamic problems.
- **Beam3DL2 (Mesh &ms, const Vect< real_t > &u, Vect< real_t > &d)**
Constructor to determine displacements.
- **~Beam3DL2 ()**
Destructor.
- **void LMassToLHS (real_t coef=1.)**
Add element lumped Mass contribution to matrix after multiplication by coef

- void **LMassToRHS** (**real.t** coef=1.)
Add element lumped Mass contribution to RHS after multiplication by coef
- void **MassToLHS** (**real.t** coef=1.)
Add element consistent Mass contribution to matrix after multiplication by coef (not implemented)
- void **MassToRHS** (**real.t** coef=1.)
Add element consistent Mass contribution to RHS after multiplication by coef (not implemented)
- void **Stiffness** (**real.t** coef=1.)
Add element stiffness to left hand side.
- void **Load** (const **Vect**< **real.t** > &f)
Add contributions for loads.
- void **setBending** ()
Set bending contribution to stiffness.
- void **setAxial** ()
Set axial contribution to stiffness.
- void **setShear** ()
Set shear contribution to stiffness.
- void **setTorsion** ()
Set torsion contribution to stiffness.
- void **setNoBending** ()
Set no bending contribution.
- void **setNoAxial** ()
Set no axial contribution.
- void **setNoShear** ()
Set no shear contribution.
- void **setNoTorsion** ()
Set no torsion contribution.
- void **setReducedIntegration** ()
Set reduced integration.
- **real.t** **AxialForce** () const
Return axial force in element.
- **Point**< **real.t** > **ShearForce** () const
Return shear force in element.
- **Point**< **real.t** > **BendingMoment** () const
Return bending moment in element.
- **real.t** **TwistingMoment** () const
Return twisting moment in element.
- void **buildEigen** (**SkSMatrix**< **real.t** > &K, **Vect**< **real.t** > &M)
Build global stiffness and mass matrices for the eigen system.
- void **setLumpedMass** ()
Add lumped mass contribution to left and right-hand sides taking into account time integration scheme.
- void **setMass** ()
Add consistent mass contribution to left and right-hand sides taking into account time integration scheme.
- virtual void **Mass** (**real.t** coef=1)
Add consistent mass matrix to left-hand side after multiplication by coef [Default: 1].
- virtual void **LMass** (**real.t** coef=1)
Add lumped mass matrix to left-hand side after multiplication by coef [Default: 1].

- virtual void **Deviator** (**real_t** coef=1)
Add deviator matrix to left-hand side taking into account time integration scheme, after multiplication by coef [Default: 1].
- virtual void **Dilatation** (**real_t** coef=1)
Add dilatation matrix to left-hand side taking into account time integration scheme, after multiplication by coef [Default: 1].
- virtual void **DilatationToRHS** (**real_t** coef=1)
Add dilatation vector to right-hand side taking into account time integration scheme, after multiplication by coef [Default: 1].
- virtual void **DeviatorToRHS** (**real_t** coef=1)
Add deviator vector to right-hand side taking into account time integration scheme, after multiplication by coef [Default: 1].
- virtual void **StiffnessToRHS** (**real_t** coef=1)
Add stiffness matrix to right-hand side taking into account time integration scheme, after multiplication by coef [Default: 1].
- void **setDilatation** ()
Add dilatation matrix to left and/or right-hand side taking into account time.
- void **setDeviator** ()
Add deviator matrix to left and/or right-hand side taking into account time integration scheme.
- void **setStiffness** ()
Add convection contribution to left and/or right-hand side taking into account time integration scheme.
- void **updateBC** (const **Element** &el, const **Vect**< **real_t** > &bc)
Update Right-Hand side by taking into account essential boundary conditions.
- void **updateBC** (const **Vect**< **real_t** > &bc)
Update Right-Hand side by taking into account essential boundary conditions.
- void **DiagBC** (int dof_type=NODE.DOF, int dof=0)
Update element matrix to impose bc by diagonalization technique.
- void **LocalNodeVector** (**Vect**< **real_t** > &b)
Localize Element Vector from a Vect instance.
- void **ElementNodeVector** (const **Vect**< **real_t** > &b, **LocalVect**< **real_t**, **NEE_** > &be)
Localize Element Vector from a Vect instance.
- void **ElementNodeVector** (const **Vect**< **real_t** > &b, **LocalVect**< **real_t**, **NEN_** > &be, int dof)
Localize Element Vector from a Vect instance.
- void **ElementNodeVectorSingleDOF** (const **Vect**< **real_t** > &b, **LocalVect**< **real_t**, **NEN_** > &be)
Localize Element Vector from a Vect instance.
- void **ElementSideVector** (const **Vect**< **real_t** > &b, **LocalVect**< **real_t**, **NSE_** > &be)
Localize Element Vector from a Vect instance.
- void **ElementVector** (const **Vect**< **real_t** > &b, int dof_type=NODE.FIELD, int flag=0)
Localize Element Vector.
- void **SideVector** (const **Vect**< **real_t** > &b)
Localize Side Vector.
- void **ElementNodeCoordinates** ()
Localize coordinates of element nodes.
- void **SideNodeCoordinates** ()
Localize coordinates of side nodes.
- void **ElementAssembly** (**Matrix**< **real_t** > *A)
Assemble element matrix into global one.

- void [ElementAssembly](#) (PETScMatrix< real.t > &A)
Assemble element matrix into global one.
- void [ElementAssembly](#) (PETScVect< real.t > &b)
Assemble element right-hand side vector into global one.
- void [ElementAssembly](#) (BMatrix< real.t > &A)
Assemble element matrix into global one.
- void [ElementAssembly](#) (SkSMatrix< real.t > &A)
Assemble element matrix into global one.
- void [ElementAssembly](#) (SkMatrix< real.t > &A)
Assemble element matrix into global one.
- void [ElementAssembly](#) (SpMatrix< real.t > &A)
Assemble element matrix into global one.
- void [ElementAssembly](#) (TrMatrix< real.t > &A)
Assemble element matrix into global one.
- void [ElementAssembly](#) (Vect< real.t > &v)
Assemble element vector into global one.
- void [SideAssembly](#) (PETScMatrix< real.t > &A)
Assemble side matrix into global one.
- void [SideAssembly](#) (PETScVect< real.t > &b)
Assemble side right-hand side vector into global one.
- void [SideAssembly](#) (Matrix< real.t > *A)
Assemble side (edge or face) matrix into global one.
- void [SideAssembly](#) (SkSMatrix< real.t > &A)
Assemble side (edge or face) matrix into global one.
- void [SideAssembly](#) (SkMatrix< real.t > &A)
Assemble side (edge or face) matrix into global one.
- void [SideAssembly](#) (SpMatrix< real.t > &A)
Assemble side (edge or face) matrix into global one.
- void [SideAssembly](#) (Vect< real.t > &v)
Assemble side (edge or face) vector into global one.
- void [DGElementAssembly](#) (Matrix< real.t > *A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void [DGElementAssembly](#) (SkSMatrix< real.t > &A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void [DGElementAssembly](#) (SkMatrix< real.t > &A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void [DGElementAssembly](#) (SpMatrix< real.t > &A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void [DGElementAssembly](#) (TrMatrix< real.t > &A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void [AxbAssembly](#) (const [Element](#) &el, const Vect< real.t > &x, Vect< real.t > &b)
Assemble product of element matrix by element vector into global vector.
- void [AxbAssembly](#) (const [Side](#) &sd, const Vect< real.t > &x, Vect< real.t > &b)
Assemble product of side matrix by side vector into global vector.
- size_t [getNbNodes](#) () const
Return number of element nodes.

- `size_t getNbEq ()` const
Return number of element equations.
- `void setInitialSolution (const Vect< real_t > &u)`
Set initial solution (previous time step)
- `real_t setMaterialProperty (const string &exp, const string &prop)`
Define a material property by an algebraic expression.
- `void setMesh (Mesh &m)`
Define mesh and renumber DOFs after removing imposed ones.
- `Mesh & getMesh ()` const
Return reference to Mesh instance.
- `LinearSolver< real_t > & getLinearSolver ()`
Return reference to linear solver instance.
- `void setSolver (Iteration ls, Preconditioner pc=IDENT_PREC)`
Choose solver for the linear system.
- `int SolveLinearSystem (Matrix< real_t > *A, Vect< real_t > &b, Vect< real_t > &x)`
Solve the linear system.

Public Attributes

- `LocalMatrix< real_t, NEE_, NEE_ > eMat`
LocalMatrix instance containing local matrix associated to current element.
- `LocalMatrix< real_t, NSE_, NSE_ > sMat`
LocalMatrix instance containing local matrix associated to current side.
- `LocalVect< real_t, NEE_ > ePrev`
LocalVect instance containing local vector associated to current element.
- `LocalVect< real_t, NEE_ > eRHS`
LocalVect instance containing local right-hand side vector associated to current element.
- `LocalVect< real_t, NEE_ > eRes`
LocalVect instance containing local residual vector associated to current element.
- `LocalVect< real_t, NSE_ > sRHS`
LocalVect instance containing local right-hand side vector associated to current side.

Protected Member Functions

- `void Young (const real_t &E)`
Set (constant) Young modulus.
- `void Young (const string &exp)`
Set Young modulus given by an algebraic expression.
- `void Poisson (const real_t &nu)`
Set (constant) Poisson ratio.
- `void Poisson (const string &exp)`
Set Poisson ratio given by an algebraic expression.
- `void Density (const real_t &rho)`
Set (constant) density.
- `void Density (const string &exp)`
Set density given by an algebraic expression.
- `void setMaterial ()`

Set material properties.

- void **Init** (const **Element** *el)

Set element arrays to zero.

- void **Init** (const **Side** *sd)

Set side arrays to zero.

7.3.1 Detailed Description

To build element equations for 3-D beam equations using 2-node lines.

This class enables building finite element arrays for 3-D beam elements using 6 degrees of freedom per node and 2-Node line elements.

7.3.2 Constructor & Destructor Documentation

Beam3DL2 (**Element** * *el*, **real.t** *A*, **real.t** *I1*, **real.t** *I2*)

Constructor using element data.

Parameters

in	<i>el</i>	Pointer to Element
in	<i>A</i>	Section area of the beam
in	<i>I1</i>	first (x) momentum of inertia
in	<i>I2</i>	second (y) momentum of inertia

Beam3DL2 (**Element** * *el*, **real.t** *A*, **real.t** *I1*, **real.t** *I2*, const **Vect**< **real.t** > & *u*, const **real.t** & *time* = 0)

Constructor for dynamic problems.

Parameters

in	<i>el</i>	Pointer to Element
in	<i>A</i>	Section area of the beam
in	<i>I1</i>	first (x) momentum of inertia
in	<i>I2</i>	second (y) momentum of inertia
in	<i>u</i>	Vector containing previous solution (at previous time step)
in	<i>time</i>	Current time value

Beam3DL2 (**Mesh** & *ms*, const **Vect**< **real.t** > & *u*, **Vect**< **real.t** > & *d*)

Constructor to determine displacements.

The unknowns consist in planar and rotational degrees of freedom. This member function construct a 3-D node vector that gives the displacement vector at each node.

Parameters

in	<i>ms</i>	Mesh instance
in	<i>u</i>	Vector containing the solution vector

Parameters

out	<i>d</i>	Vector containing three components for each node that are x, y and z displacements.
-----	----------	---

7.3.3 Member Function Documentation

void buildEigen (SkSMatrix< real_t > &K, Vect< real_t > &M)

Build global stiffness and mass matrices for the eigen system.

Case where the mass matrix is lumped

Parameters

in	<i>K</i>	Stiffness matrix
in	<i>M</i>	Vector containing diagonal mass matrix

void updateBC (const Element &el, const Vect< real_t > &bc) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>el</i>	Reference to current element instance
in	<i>bc</i>	Vector that contains imposed values at all DOFs

void updateBC (const Vect< real_t > &bc) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>bc</i>	Vector that contains imposed values at all DOFs
----	-----------	---

Remarks

The current element is pointed by `_theElement`

void DiagBC (int dof_type = NODE_DOF, int dof = 0) [inherited]

Update element matrix to impose bc by diagonalization technique.

Parameters

in	<i>dof_type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • <code>NODE_FIELD</code>, DOFs are supported by nodes [Default] • <code>ELEMENT_FIELD</code>, DOFs are supported by elements • <code>SIDE_FIELD</code>, DOFs are supported by sides
in	<i>dof</i>	DOF setting: <ul style="list-style-type: none"> • <code>= 0</code>, All DOFs are taken into account [Default] • <code>!= 0</code>, Only DOF No. <i>dof</i> is handled in the system

void LocalNodeVector (Vect< real.t > & b) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Reference to global vector to be localized. The resulting local vector can be accessed by attribute <i>ePrev</i> . This member function is to be used if a constructor with <i>Element</i> was invoked.
----	----------	---

void ElementNodeVector (const Vect< real.t > & b, LocalVect< real.t, NEE_ > & be)
[inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

All degrees of freedom are transferred to the local vector

void ElementNodeVector (const Vect< real.t > & b, LocalVect< real.t, NEN_ > & be, int dof) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.
in	<i>dof</i>	Degree of freedom to transfer to the local vector

Remarks

Only yhe dega dof is transferred to the local vector

void ElementNodeVectorSingleDOF (const Vect< real_t > & b, LocalVect< real_t, NEN_ > & be) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

Vector b is assumed to contain only one degree of freedom by node.

void ElementSideVector (const Vect< real_t > & b, LocalVect< real_t, NSE_ > & be) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is

void ElementVector (const Vect< real_t > & b, int dof_type = NODE_FIELD, int flag = 0) [inherited]

Localize Element Vector.

Parameters

in	<i>b</i>	Global vector to be localized
in	<i>dof_type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • NODE_FIELD, DOFs are supported by nodes [Default] • ELEMENT_FIELD, DOFs are supported by elements • SIDE_FIELD, DOFs are supported by sides
in	<i>flag</i>	Option to set: <ul style="list-style-type: none"> • = 0, All DOFs are taken into account [Default] • != 0, Only DOF number dof is handled in the system The resulting local vector can be accessed by attribute ePrev.

Remarks

This member function is to be used if a constructor with Element was invoked. It uses the Element pointer `_theElement`

void SideVector (const Vect< real_t > & b) [inherited]

Localize Side Vector.

Parameters

in	<i>b</i>	Global vector to be localized <ul style="list-style-type: none"> • <code>NODE_FIELD</code>, DOFs are supported by nodes [default] • <code>ELEMENT_FIELD</code>, DOFs are supported by elements • <code>SIDE_FIELD</code>, DOFs are supported by sides The resulting local vector can be accessed by attribute <code>ePrev</code> .
----	----------	---

Remarks

This member function is to be used if a constructor with Side was invoked. It uses the Side pointer `_theSide`

void ElementNodeCoordinates () [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array `_x[0]`, `_x[1]`, ... which are instances of class [Point<real_t>](#)

Remarks

This member function uses the Side pointer `_theSide`

void SideNodeCoordinates () [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array `_x[0]`, `_x[1]`, ... which are instances of class [Point<real_t>](#)

Remarks

This member function uses the Element pointer `_theElement`

void ElementAssembly (Matrix< real_t > * A) [inherited]

Assemble element matrix into global one.

Parameters

A	Pointer to global matrix (abstract class: can be any of classes <code>SkSMatrix</code> , <code>SkMatrix</code> , <code>SpMatrix</code>)
---	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScMatrix< real_t > &A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Reference to global matrix
----------	----------------------------

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScVect< real_t > &b) [inherited]

Assemble element right-hand side vector into global one.

Parameters

<i>b</i>	Reference to global right-hand side vector
----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (BMatrix< real_t > &A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Global matrix stored as a BMatrix instance
----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkSMatrix< real_t > &A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Global matrix stored as an SkSMatrix instance
----------	---

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkMatrix< real_t > & A) [inherited]

Assemble element matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an SkMatrix instance
----	----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SpMatrix< real_t > & A) [inherited]

Assemble element matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an SpMatrix instance
----	----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (TrMatrix< real_t > & A) [inherited]

Assemble element matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an TrMatrix instance
----	----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (Vect< real_t > & v) [inherited]

Assemble element vector into global one.

Parameters

in	<i>v</i>	Global vector (Vect instance)
----	----------	-------------------------------

Warning

The element pointer is given by the global variable `theElement`

void SideAssembly (PETScMatrix< real_t > &A) [inherited]

Assemble side matrix into global one.

Parameters

<i>A</i>	Reference to global matrix
----------	----------------------------

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (PETScVect< real_t > &b) [inherited]

Assemble side right-hand side vector into global one.

Parameters

<i>b</i>	Reference to global right-hand side vector
----------	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (Matrix< real_t > *A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

<i>A</i>	Pointer to global matrix (abstract class: can be any of classes <code>SkSMatrix</code> , <code>SkMatrix</code> , <code>SpMatrix</code>)
----------	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SkSMatrix< real_t > &A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

<i>in</i>	<i>A</i>	Global matrix stored as an <code>SkSMatrix</code> instance
-----------	----------	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SkMatrix< real.t > & A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SpMatrix< real.t > & A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	A	Global matrix stored as an SpMatrix instance
----	---	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (Vect< real.t > & v) [inherited]

Assemble side (edge or face) vector into global one.

Parameters

in	v	Global vector (Vect instance)
----	---	-------------------------------

Warning

The side pointer is given by the global variable `theSide`

void DGElementAssembly (Matrix< real.t > * A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
---	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SkSMatrix< real_t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

<code>A</code>	Global matrix stored as an SkSMatrix instance
----------------	---

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SkMatrix< real_t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

<code>in</code>	<code>A</code>	Global matrix stored as an SkMatrix instance
-----------------	----------------	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SpMatrix< real_t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

<code>in</code>	<code>A</code>	Global matrix stored as an SpMatrix instance
-----------------	----------------	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (TrMatrix< real_t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

<code>in</code>	<code>A</code>	Global matrix stored as an TrMatrix instance
-----------------	----------------	--

Warning

The element pointer is given by the global variable `theElement`

void AxbAssembly (const Element & *el*, const Vect< real_t > & *x*, Vect< real_t > & *b*)
[inherited]

Assemble product of element matrix by element vector into global vector.

Parameters

in	<i>el</i>	Reference to Element instance
in	<i>x</i>	Global vector to multiply by (Vect instance)
out	<i>b</i>	Global vector to add (Vect instance)

void AxbAssembly (const Side & *sd*, const Vect< real_t > & *x*, Vect< real_t > & *b*)
[inherited]

Assemble product of side matrix by side vector into global vector.

Parameters

in	<i>sd</i>	Reference to Side instance
in	<i>x</i>	Global vector to multiply by (Vect instance)
out	<i>b</i>	Global vector (Vect instance)

real_t setMaterialProperty (const string & *exp*, const string & *prop*) [inherited]

Define a material property by an algebraic expression.

Parameters

in	<i>exp</i>	Algebraic expression
in	<i>prop</i>	Property name

Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

Mesh& getMesh () const [inherited]

Return reference to Mesh instance.

Returns

Reference to Mesh instance

void setSolver (Iteration *ls*, Preconditioner *pc* = *IDENT_PREC*) [inherited]

Choose solver for the linear system.

Parameters

in	<i>ls</i>	<p>Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER</p> <ul style="list-style-type: none"> • DIRECT_SOLVER, Use a facorization solver [default] • CG_SOLVER, Conjugate Gradient iterative solver • CGS_SOLVER, Squared Conjugate Gradient iterative solver • BICG_SOLVER, BiConjugate Gradient iterative solver • BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver • GMRES_SOLVER, GMRES iterative solver • QMR_SOLVER, QMR iterative solver
in	<i>pc</i>	<p>Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:</p> <ul style="list-style-type: none"> • IDENT_PREC, Identity preconditioner (no preconditioning [default]) • DIAG_PREC, Diagonal preconditioner • ILU_PREC, Incomplete LU factorization preconditioner

int SolveLinearSystem (Matrix< real_t > * *A*, Vect< real_t > & *b*, Vect< real_t > & *x*)
[inherited]

Solve the linear system.

Parameters

in	<i>A</i>	Pointer to matrix of the system (Instance of class SpMatrix)
in	<i>b</i>	Vector containing right-hand side
in,out	<i>x</i>	Vector containing initial guess of solution on input, actual solution on output

7.3.4 Member Data Documentation

LocalVect<real_t,NEE_> ePrev [inherited]

LocalVect instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

7.4 BiotSavart Class Reference

Class to compute the magnetic induction from the current density using the Biot-Savart formula.

Public Member Functions

- [BiotSavart \(\)](#)
Default constructor.
- [BiotSavart \(Mesh &ms\)](#)
Constructor using mesh data.
- [BiotSavart \(Mesh &ms, const Vect< real_t > &J, Vect< real_t > &B, int code=0\)](#)
Constructor using mesh and vector of real current density.
- [BiotSavart \(Mesh &ms, const Vect< complex_t > &J, Vect< complex_t > &B, int code=0\)](#)
Constructor using mesh and vector of complex current density.
- [~BiotSavart \(\)](#)
Destructor.
- void [setCurrentDensity](#) (const Vect< real_t > &J)
Set (real) current density given at elements.
- void [setCurrentDensity](#) (const Vect< complex_t > &J)
Set (real) current density given at elements.
- void [setMagneticInduction](#) (Vect< real_t > &B)
Transmit (real) magnetic induction vector given at nodes.
- void [setMagneticInduction](#) (Vect< complex_t > &B)
Transmit (complex) magnetic induction vector given at nodes.
- void [selectCode](#) (int code)
Choose code of faces or edges at which current density is given.
- void [setPermeability](#) (real_t mu)
Set the magnetic permeability coefficient.
- void [setBoundary](#) ()
Choose to compute the magnetic induction at boundary nodes only.
- [Point< real_t > getB3](#) (Point< real_t > x)
Compute the real magnetic induction at a given point using the volume Biot-Savart formula.
- [Point< real_t > getB2](#) (Point< real_t > x)
Compute the real magnetic induction at a given point using the surface Biot-Savart formula.
- [Point< real_t > getB1](#) (Point< real_t > x)
Compute the real magnetic induction at a given point using the line Biot-Savart formula.
- [Point< complex_t > getBC3](#) (Point< real_t > x)
Compute the complex magnetic induction at a given point using the volume Biot-Savart formula.
- [Point< complex_t > getBC2](#) (Point< real_t > x)
Compute the complex magnetic induction at a given point using the surface Biot-Savart formula.
- [Point< complex_t > getBC1](#) (Point< real_t > x)
Compute the complex magnetic induction at a given point using the line Biot-Savart formula.
- int [run](#) ()
Run the calculation by the Biot-Savart formula.

7.4.1 Detailed Description

Class to compute the magnetic induction from the current density using the Biot-Savart formula.

Given a current density vector given at elements, a collection of sides of edges (piecewise constant), this class enables computing the magnetic induction vector (continuous and piecewise linear) using the Ampere equation. This magnetic induction is obtained by using the Biot-Savart formula which can be either a volume, surface or line formula depending on the nature of the current density vector.

7.4.2 Constructor & Destructor Documentation

BiotSavart (Mesh & *ms*)

Constructor using mesh data.

Parameters

in	<i>ms</i>	Mesh instance
----	-----------	-------------------------------

BiotSavart (Mesh & *ms*, const Vect< real.t > & *J*, Vect< real.t > & *B*, int *code* = 0)

Constructor using mesh and vector of real current density.

The current density is assumed piecewise constant

Parameters

in	<i>ms</i>	Mesh instance
in	<i>J</i>	Sidewise vector of current density (<i>J</i> is a real valued vector), in the case of a surface supported current
in	<i>B</i>	Nodewise vector that contains, once the member function run is used, the magnetic induction
in	<i>code</i>	Only sides with given <i>code</i> support current [Default: 0]

BiotSavart (Mesh & *ms*, const Vect< complex.t > & *J*, Vect< complex.t > & *B*, int *code* = 0)

Constructor using mesh and vector of complex current density.

The current density is assumed piecewise constant

Parameters

in	<i>ms</i>	Mesh instance
in	<i>J</i>	Sidewise vector of current density (<i>J</i> is a complex valued vector), in the case of a surface supported current
in	<i>B</i>	Nodewise vector that contains, once the member function run is used, the magnetic induction
in	<i>code</i>	Only sides with given <i>code</i> support current [Default: 0]

7.4.3 Member Function Documentation

void setCurrentDensity (const Vect< real_t > & J)

Set (real) current density given at elements.

The current density is assumed piecewise constant and real valued. This function can be used in the case of the volume Biot-Savart formula.

Parameters

in	<i>J</i>	Current density vector (Vect instance) and real entries
----	----------	--

void setCurrentDensity (const Vect< complex_t > & J)

Set (real) current density given at elements.

The current density is assumed piecewise constant and complex valued. This function can be used in the case of the volume Biot-Savart formula.

Parameters

in	<i>J</i>	Current density vector (Vect instance) of complex entries
----	----------	--

void setMagneticInduction (Vect< real_t > & B)

Transmit (real) magnetic induction vector given at nodes.

Parameters

out	<i>B</i>	Magnetic induction vector (Vect instance) and real entries
-----	----------	---

void setMagneticInduction (Vect< complex_t > & B)

Transmit (complex) magnetic induction vector given at nodes.

Parameters

out	<i>B</i>	Magnetic induction vector (Vect instance) and complex entries
-----	----------	--

void setPermeability (real_t *mu*)

Set the magnetic permeability coefficient.

Parameters

in	<i>mu</i>	Magnetic permeability
----	-----------	-----------------------

void setBoundary ()

Choose to compute the magnetic induction at boundary nodes only.

By default the magnetic induction is computed (using the function run) at all mesh nodes

Note

This function has no effect for surface of line Biot-Savart formula

Point<real_t> getB3 (Point< real.t > x)

Compute the real magnetic induction at a given point using the volume Biot-Savart formula.

This function computes a real valued magnetic induction for a real valued current density field

Parameters

in	x	Coordinates of point at which the magnetic induction is computed
----	-----	--

Returns

Value of the magnetic induction at x

Point<real_t> getB2 (Point< real.t > x)

Compute the real magnetic induction at a given point using the surface Biot-Savart formula.

This function computes a real valued magnetic induction for a real valued current density field

Parameters

in	x	Coordinates of point at which the magnetic induction is computed
----	-----	--

Returns

Value of the magnetic induction at x

Point<real_t> getB1 (Point< real.t > x)

Compute the real magnetic induction at a given point using the line Biot-Savart formula.

This function computes a real valued magnetic induction for a real valued current density field

Parameters

in	x	Coordinates of point at which the magnetic induction is computed
----	-----	--

Returns

Value of the magnetic induction at x

Point<complex.t> getBC3 (Point< real.t > x)

Compute the complex magnetic induction at a given point using the volume Biot-Savart formula.

This function computes a complex valued magnetic induction for a complex valued current density field

Parameters

in	x	Coordinates of point at which the magnetic induction is computed
----	-----	--

Returns

Value of the magnetic induction at x

Point<complex.t> getBC2 (Point< real.t > x)

Compute the complex magnetic induction at a given point using the surface Biot-Savart formula.

This function computes a complex valued magnetic induction for a complex valued current density field

Parameters

in	x	Coordinates of point at which the magnetic induction is computed
----	-----	--

Returns

Value of the magnetic induction at x

Point<complex.t> getBC1 (Point< real.t > x)

Compute the complex magnetic induction at a given point using the line Biot-Savart formula.

This function computes a complex valued magnetic induction for a complex valued current density field

Parameters

in	x	Coordinates of point at which the magnetic induction is computed
----	-----	--

Returns

Value of the magnetic induction at x

int run ()


Run the calculation by the Biot-Savart formula.

This function computes the magnetic induction, which is stored in the vector B given in the constructor

7.5 BMATRIX< T_ > Class Template Reference

To handle band matrices.

Inheritance diagram for BMATRIX< T_ >:

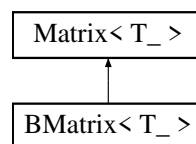

Public Member Functions

- **BMATRIX** ()
Default constructor.
- **BMATRIX** (size_t size, int ld, int ud)
Constructor that for a band matrix with given size and bandwidth.
- **BMATRIX** (const **BMATRIX** &m)
Copy Constructor.
- **~BMATRIX** ()
Destructor.
- void **setSize** (size_t size, int ld, int ud)
Set size (number of rows) and storage of matrix.
- void **MultAdd** (const **Vect**< T_ > &x, **Vect**< T_ > &y) const
Multiply matrix by vector x and add result to y
- void **MultAdd** (T_ a, const **Vect**< T_ > &x, **Vect**< T_ > &y) const
*Multiply matrix by vector a*x and add result to y*
- void **Mult** (const **Vect**< T_ > &x, **Vect**< T_ > &y) const
Multiply matrix by vector x and save result in y
- void **TMult** (const **Vect**< T_ > &x, **Vect**< T_ > &y) const
Multiply transpose of matrix by vector x and save result in y
- void **Axpy** (T_ a, const **BMATRIX**< T_ > &x)
Add to matrix the product of a matrix by a scalar.
- void **Axpy** (T_ a, const **Matrix**< T_ > *x)
Add to matrix the product of a matrix by a scalar.
- void **set** (size_t i, size_t j, const T_ &val)
Add constant val to an entry (i, j) of the matrix.
- void **add** (size_t i, size_t j, const T_ &val)
Add constant val value to an entry (i, j) of the matrix.
- T_ **operator()** (size_t i, size_t j) const
Operator () (Constant version).
- T_ & **operator()** (size_t i, size_t j)
Operator () (Non constant version).
- **BMATRIX**< T_ > & **operator=** (const **BMATRIX**< T_ > &m)
Operator =.
- **BMATRIX**< T_ > & **operator=** (const T_ &x)
Operator = Assign matrix to identity times x.
- **BMATRIX**< T_ > & **operator*=** (const T_ &x)

- Operator `*=`.
- `BMatrix< T_ > & operator+= (const T_ &x)`
Operator `+=`.
- `int setLU ()`
Factorize the matrix (LU factorization)
- `int solve (Vect< T_ > &b)`
Solve linear system.
- `int solve (const Vect< T_ > &b, Vect< T_ > &x)`
Solve linear system.
- `T_ * get () const`
Return C-Array.
- `T_ get (size_t i, size_t j) const`
Return entry (i, j) of matrix.
- `size_t getNbRows () const`
Return number of rows.
- `size_t getNbColumns () const`
Return number of columns.
- `void setPenal (real_t p)`
Set Penalty Parameter (For boundary condition prescription).
- `void setDiagonal ()`
Set the matrix as diagonal.
- `void setDiagonal (Mesh &mesh)`
Initialize matrix storage in the case where only diagonal terms are stored.
- `T_ getDiag (size_t k) const`
Return k -th diagonal entry of matrix.
- `size_t size () const`
Return matrix dimension (Number of rows and columns).
- `void Assembly (const Element &el, T_ *a)`
Assembly of element matrix into global matrix.
- `void Assembly (const Element &el, const DMatrix< T_ > &a)`
Assembly of element matrix into global matrix.
- `void Assembly (const Side &sd, T_ *a)`
Assembly of side matrix into global matrix.
- `void Assembly (const Side &sd, const DMatrix< T_ > &a)`
Assembly of side matrix into global matrix.
- `void Prescribe (Vect< T_ > &b, const Vect< T_ > &u, int flag=0)`
Impose by a penalty method an essential boundary condition, using the `Mesh` instance provided by the constructor.
- `void Prescribe (int dof, int code, Vect< T_ > &b, const Vect< T_ > &u, int flag=0)`
Impose by a penalty method an essential boundary condition to a given degree of freedom for a given code.
- `void Prescribe (Vect< T_ > &b, int flag=0)`
Impose by a penalty method a homogeneous (=0) essential boundary condition.
- `void Prescribe (size_t dof, Vect< T_ > &b, const Vect< T_ > &u, int flag=0)`
Impose by a penalty method an essential boundary condition when only one DOF is treated.
- `void PrescribeSide ()`
Impose by a penalty method an essential boundary condition when DOFs are supported by sides.
- `virtual int Factor ()=0`

- *Factorize matrix. Available only if the storage class enables it.*
- `int FactorAndSolve (Vect< T_ > &b)`
Factorize matrix and solve the linear system.
- `int FactorAndSolve (const Vect< T_ > &b, Vect< T_ > &x)`
Factorize matrix and solve the linear system.
- `size_t getLength () const`
Return number of stored terms in matrix.
- `int isDiagonal () const`
Say if matrix is diagonal or not.
- `int isFactorized () const`
Say if matrix is factorized or not.
- `virtual size_t getColInd (size_t i) const`
*Return Column index for column i (See the description for class *SpMatrix*).*
- `virtual size_t getRowPtr (size_t i) const`
*Return Row pointer for row i (See the description for class *SpMatrix*).*
- `T_ operator() (size_t i) const`
Operator () with one argument (Constant version).
- `T_ & operator() (size_t i)`
Operator () with one argument (Non Constant version).
- `T_ & operator[] (size_t k)`
Operator [] (Non constant version).
- `T_ operator[] (size_t k) const`
Operator [] (Constant version).
- `Matrix & operator+= (const Matrix< T_ > &m)`
Operator +=.
- `Matrix & operator-= (const Matrix< T_ > &m)`
Operator -=.
- `Matrix & operator-= (const T_ &x)`
Operator -=.

7.5.1 Detailed Description

template<class T_>
class OFELI::BMatrix< T_ >

To handle band matrices.

This class enables storing and manipulating band matrices. The matrix can have different numbers of lower and upper co-diagonals

Template Parameters

T_{\leftrightarrow}	Data type (double, float, complex<double>, ...)
$_{\leftrightarrow}$	

7.5.2 Member Function Documentation

void setDiagonal (Mesh & *mesh*) [inherited]

Initialize matrix storage in the case where only diagonal terms are stored.

This member function is to be used for explicit time integration schemes

T_ getDiag (size_t *k*) const [inherited]

Return *k*-th diagonal entry of matrix.

First entry is given by **getDiag(1)**.

void Assembly (const Element & *el*, T_* *a*) [inherited]

Assembly of element matrix into global matrix.

Case where element matrix is given by a C-array.

Parameters

in	<i>el</i>	Pointer to element instance
in	<i>a</i>	Element matrix as a C-array

void Assembly (const Element & *el*, const DMatrix< T_ > & *a*) [inherited]

Assembly of element matrix into global matrix.

Case where element matrix is given by a [DMatrix](#) instance.

Parameters

in	<i>el</i>	Pointer to element instance
in	<i>a</i>	Element matrix as a DMatrix instance

void Assembly (const Side & *sd*, T_* *a*) [inherited]

Assembly of side matrix into global matrix.

Case where side matrix is given by a C-array.

Parameters

in	<i>sd</i>	Pointer to side instance
in	<i>a</i>	Side matrix as a C-array instance

void Assembly (const Side & *sd*, const DMatrix< T_ > & *a*) [inherited]

Assembly of side matrix into global matrix.

Case where side matrix is given by a [DMatrix](#) instance.

Parameters

in	<i>sd</i>	Pointer to side instance
----	-----------	--------------------------

Parameters

in	<i>a</i>	Side matrix as a DMatrix instance
----	----------	---

void Prescribe (Vect< T_ > & *b*, const Vect< T_ > & *u*, int *flag* = 0) [inherited]

Impose by a penalty method an essential boundary condition, using the [Mesh](#) instance provided by the constructor.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function **setPenal(..)**.

Parameters

in,out	<i>b</i>	Vect instance that contains right-hand side.
in	<i>u</i>	Vect instance that contains imposed valued at DOFs where they are to be imposed.
in	<i>flag</i>	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).

void Prescribe (int *dof*, int *code*, Vect< T_ > & *b*, const Vect< T_ > & *u*, int *flag* = 0) [inherited]

Impose by a penalty method an essential boundary condition to a given degree of freedom for a given code.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function **setPenal(..)**.

Parameters

in	<i>dof</i>	Degree of freedom for which a boundary condition is to be enforced
in	<i>code</i>	Code for which a boundary condition is to be enforced
in,out	<i>b</i>	Vect instance that contains right-hand side.
in	<i>u</i>	Vect instance that contains imposed valued at DOFs where they are to be imposed.
in	<i>flag</i>	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).

void Prescribe (Vect< T_ > & *b*, int *flag* = 0) [inherited]

Impose by a penalty method a homegeneous (=0) essential boundary condition.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty

parameter is defined by default equal to 1.e20. It can be modified by member function **setPenal(..)**.

Parameters

in,out	<i>b</i>	Vect instance that contains right-hand side.
in	<i>flag</i>	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).

void Prescribe (size_t dof, Vect< T_ > & b, const Vect< T_ > & u, int flag = 0) [inherited]

Impose by a penalty method an essential boundary condition when only one DOF is treated.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. This function is to be used if only one DOF per node is treated in the linear system. The penalty parameter is by default equal to 1.e20. It can be modified by member function setPenal.

Parameters

in	<i>dof</i>	Label of the concerned degree of freedom (DOF).
in,out	<i>b</i>	Vect instance that contains right-hand side.
in	<i>u</i>	Vect instance that contains imposed values at DOFs where they are to be imposed.
in	<i>flag</i>	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).

void PrescribeSide () [inherited]

Impose by a penalty method an essential boundary condition when DOFs are supported by sides.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function **setPenal(..)**.

int FactorAndSolve (Vect< T_ > & b) [inherited]

Factorize matrix and solve the linear system.

This is available only if the storage class enables it.

Parameters

in,out	<i>b</i>	Vect instance that contains right-hand side on input and solution on output
--------	----------	---

int FactorAndSolve (const Vect< T_ > & b, Vect< T_ > & x) [inherited]

Factorize matrix and solve the linear system.

This is available only if the storage class enables it.

Parameters

in	b	Vect instance that contains right-hand side
out	x	Vect instance that contains solution

Returns

- 0 if solution was normally performed
- n if the n -th pivot is nul

int isFactorized () const [inherited]

Say if matrix is factorized or not.

If the matrix was not factorized, the class does not allow solving by a direct solver.

T_ operator() (size_t i) const [inherited]

Operator () with one argument (Constant version).

Returns i -th position in the array storing matrix entries. The first entry is at location 1. Entries are stored row by row.

Parameters

in	i	entry index
----	-----	-------------

T_& operator() (size_t i) [inherited]

Operator () with one argument (Non Constant version).

Returns i -th position in the array storing matrix entries. The first entry is at location 1. Entries are stored row by row.

Parameters

in	i	entry index
----	-----	-------------

T_& operator[] (size_t k) [inherited]

Operator [] (Non constant version).

Returns k -th stored element in matrix Index k starts at 0.

T_ operator[] (size_t k) const [inherited]

Operator [] (Constant version).

Returns k -th stored element in matrix Index k starts at 0.

Matrix& operator+=(const Matrix< T_ > & m) [inherited]

Operator +=.

Add matrix `m` to current matrix instance.

Matrix& operator+= (const Matrix< T_ > & m) [inherited]

Operator +=.

Subtract matrix `m` from current matrix instance.

Matrix& operator-= (const T_ & x) [inherited]


Operator -=.

Subtract constant value `x` from all matrix entries.

7.6 Brick Class Reference

To store and treat a brick (parallelepiped) figure.

Inheritance diagram for Brick:

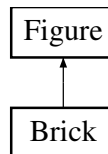

Public Member Functions

- **Brick ()**
Default constructor.
- **Brick (const Point< real_t > &bbm, const Point< real_t > &bbM, int code=1)**
Constructor.
- **void setBoundingBox (const Point< real_t > &bbm, const Point< real_t > &bbM)**
Assign bounding box of the brick.
- **Point< real_t > getBoundingBox1 () const**
Return first point of bounding box (xmin,ymin,zmin)
- **Point< real_t > getBoundingBox2 () const**
Return second point of bounding box (xmax,ymax,zmax)
- **real_t getSignedDistance (const Point< real_t > &p) const**
Return signed distance of a given point from the current brick.
- **Brick & operator+= (Point< real_t > a)**
Operator +=.
- **Brick & operator+= (real_t a)**
*Operator *+=.*
- **void setCode (int code)**
Choose a code for the domain defined by the figure.
- **void getSignedDistance (const Grid &g, Vect< real_t > &d) const**
Calculate signed distance to current figure with respect to grid points.
- **real_t dLine (const Point< real_t > &p, const Point< real_t > &a, const Point< real_t > &b) const**
Compute signed distance from a line.

7.6.1 Detailed Description

To store and treat a brick (parallelepiped) figure.

7.6.2 Constructor & Destructor Documentation

Brick (const Point< real_t > & *bbm*, const Point< real_t > & *bbM*, int *code* = 1)

Constructor.

Parameters

in	<i>bbm</i>	first point (xmin,ymin,zmin)
in	<i>bbM</i>	second point (xmax,ymax,zmax)
in	<i>code</i>	Code to assign to rectangle

7.6.3 Member Function Documentation

void setBoundingBox (const Point< real_t > & *bbm*, const Point< real_t > & *bbM*)

Assign bounding box of the brick.

Parameters

in	<i>bbm</i>	first point (xmin,ymin,zmin)
in	<i>bbM</i>	second point (xmax,ymax,zmax)

real_t getSignedDistance (const Point< real_t > & *p*) const [virtual]

Return signed distance of a given point from the current brick.

The computed distance is negative if *p* lies in the brick, negative if it is outside, and 0 on its boundary

Parameters

in	<i>p</i>	Point<double> instance
----	----------	------------------------

Reimplemented from [Figure](#).

Brick& operator+= (Point< real_t > *a*)

Operator +=.

Translate brick by a vector *a*

Brick& operator+= (real_t *a*)

Operator *+=.

Scale brick by a factor *a*

void getSignedDistance (const Grid & *g*, Vect< real_t > & *d*) const [inherited]

Calculate signed distance to current figure with respect to grid points.

Parameters

in	<i>g</i>	Grid instance
in	<i>d</i>	Vect instance containing calculated distance from each grid index to Figure

Remarks

Vector *d* doesn't need to be sized before invoking this function

real_t dLine (const Point< real_t > & *p*, const Point< real_t > & *a*, const Point< real_t > & *b*) const [inherited]

Compute signed distance from a line.

Parameters

in	<i>p</i>	Point for which distance is computed
in	<i>a</i>	First vertex of line
in	<i>b</i>	Second vertex of line


Returns

Signed distance

7.7 Circle Class Reference

To store and treat a circular figure.

Inheritance diagram for Circle:

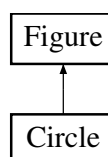

Public Member Functions

- Circle ()
Default constructor.
- Circle (const Point< real_t > &*c*, real_t *r*, int code=1)
Constructor.
- void setRadius (real_t *r*)
Assign radius of circle.
- real_t getRadius () const
Return radius of circle.

- `void setCenter (const Point< real.t > &c)`
Assign coordinates of center of circle.
- `Point< real.t > getCenter () const`
Return coordinates of center of circle.
- `real.t getSignedDistance (const Point< real.t > &p) const`
Return signed distance of a given point from the current circle.
- `Circle & operator+= (Point< real.t > a)`
Operator +=.
- `Circle & operator+= (real.t a)`
*Operator *+=.*
- `void setCode (int code)`
Choose a code for the domain defined by the figure.
- `void getSIGNEDDistance (const Grid &g, Vect< real.t > &d) const`
Calculate signed distance to current figure with respect to grid points.
- `real.t dLine (const Point< real.t > &p, const Point< real.t > &a, const Point< real.t > &b) const`
Compute signed distance from a line.

7.7.1 Detailed Description

To store and treat a circular figure.

7.7.2 Constructor & Destructor Documentation

Circle (const Point< real.t > &c, real.t r, int code = 1)

Constructor.

Parameters

in	<i>c</i>	Coordinates of center of circle
in	<i>r</i>	Radius
in	<i>code</i>	Code to assign to the generated domain [Default: 1]

7.7.3 Member Function Documentation

real.t getSIGNEDDistance (const Point< real.t > &p) const [virtual]

Return signed distance of a given point from the current circle.

The computed distance is negative if p lies in the disk, positive if it is outside, and 0 on the circle

Parameters

in	<i>p</i>	Point<double> instance
----	----------	------------------------

Reimplemented from [Figure](#).

Circle& operator+= (Point< real_t > a)

Operator +=.

Translate circle by a vector a

Circle& operator+= (real_t a)

Operator *.

Scale circle by a factor a

void getSignedDistance (const Grid & g, Vect< real_t > & d) const [inherited]

Calculate signed distance to current figure with respect to grid points.

Parameters

in	<i>g</i>	Grid instance
in	<i>d</i>	Vect instance containing calculated distance from each grid index to Figure

Remarks

Vector d doesn't need to be sized before invoking this function

real_t dLine (const Point< real_t > & p, const Point< real_t > & a, const Point< real_t > & b) const [inherited]

Compute signed distance from a line.

Parameters

in	<i>p</i>	Point for which distance is computed
in	<i>a</i>	First vertex of line
in	<i>b</i>	Second vertex of line


Returns

Signed distance

7.8 DC1DL2 Class Reference

Builds finite element arrays for thermal diffusion and convection in 1-D using 2-Node elements.

Inheritance diagram for DC1DL2:

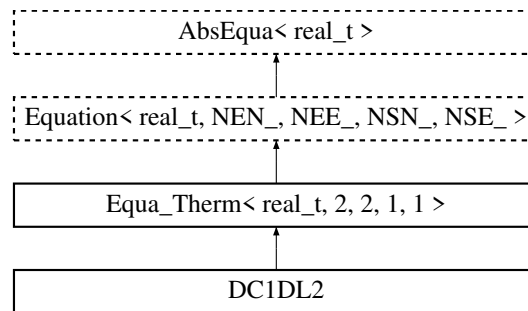

Public Member Functions

- **DC1DL2** ()
Default Constructor.
- **DC1DL2** (const **Element** *el)
Constructor for an element.
- **DC1DL2** (const **Element** *el, const **Vect**< **real_t** > &u, **real_t** time=0.)
Constructor for an element (transient case).
- **DC1DL2** (const **Element** *el, const **Vect**< **real_t** > &u, **real_t** time, **real_t** deltat, int scheme)
Constructor for an element (transient case) with specification of time integration scheme.
- **~DC1DL2** ()
Destructor.
- void **build** ()
Build the linear system without solving.
- void **LCapacityToLHS** (**real_t** coef=1)
Add lumped capacity matrix to left-hand side after multiplying it by coefficient coef
- void **LCapacityToRHS** (**real_t** coef=1)
Add lumped capacity contribution to right-hand side after multiplying it by coefficient coef
- void **LCapacity** (**real_t** coef)
Add lumped capacity contribution to left and right-hand sides after multiplying it by coefficient coef
- void **CapacityToLHS** (**real_t** coef=1)
Add Consistent capacity matrix to left-hand side after multiplying it by coefficient coef.
- void **CapacityToRHS** (**real_t** coef=1)
Add Consistent capacity contribution to right-hand side after multiplying it by coefficient coef
- void **Capacity** (**real_t** coef=1)
Add Consistent capacity contribution to left and right-hand sides after multiplying it by coefficient coef
- void **Diffusion** (**real_t** coef=1)
Add diffusion matrix to left hand side after multiplying it by coefficient coef
- void **DiffusionToRHS** (**real_t** coef=1)

- Add diffusion contribution to right hand side after multiplying it by coefficient `coef`*

 - void **Convection** (const **real.t** &**v**, **real.t** `coef`=1)
- Add convection matrix to left-hand side after multiplying it by coefficient `coef`*

 - void **Convection** (const **Vect**< **real.t** > &**v**, **real.t** `coef`=1)
- Add convection matrix to left-hand side after multiplying it by coefficient `coef`*

 - void **Convection** (**real.t** `coef`=1)
- Add convection matrix to left-hand side after multiplying it by coefficient `coef`*

 - void **ConvectionToRHS** (const **real.t** &**v**, **real.t** `coef`=1)
- Add convection contribution to right-hand side after multiplying it by coefficient `coef`*

 - void **ConvectionToRHS** (**real.t** `coef`=1)
- Add convection contribution to right-hand side after multiplying it by coefficient `coef`*

 - void **BodyRHS** (**UserData**< **real.t** > &**ud**, **real.t** `coef`=1)
- Add body right-hand side term to right hand side after multiplying it by coefficient `coef`*

 - void **BodyRHS** (const **Vect**< **real.t** > &**b**, int `opt`=**GLOBAL_ARRAY**)
- Add body right-hand side term to right hand side.*

 - void **BoundaryRHS** (**UserData**< **real.t** > &**ud**, **real.t** `coef`=1)
- Add boundary right-hand side term to right hand side after multiplying it by coefficient `coef`*

 - void **BoundaryRHS** (**real.t** `flux`)
- Add boundary right-hand side flux to right hand side.*

 - void **BoundaryRHS** (const **Vect**< **real.t** > &**b**, int `opt`=**GLOBAL_ARRAY**)
- Add boundary right-hand side term to right hand side after multiplying it by coefficient `coef`*

 - **real.t** **Flux** () const
- Return (constant) heat flux in element.*

 - void **setInput** (**EqDataType** `opt`, **Vect**< **real.t** > &**u**)
- Set equation input data.*

 - virtual void **setStab** ()
- Set stabilized formulation.*

 - void **setLumpedCapacity** ()
- Add lumped capacity contribution to left and right-hand sides taking into account time integration scheme.*

 - void **setCapacity** ()
- Add consistent capacity contribution to left and right-hand sides taking into account time integration scheme.*

 - void **setDiffusion** ()
- Add diffusion contribution to left and/or right-hand side taking into account time integration scheme.*

 - void **setConvection** ()
- Add convection contribution to left and/or right-hand side taking into account time integration scheme.*

 - void **build** (**TimeStepping** &**s**)
- Build the linear system of equations.*

 - void **build** (**EigenProblemSolver** &**e**)
- Build the linear system for an eigenvalue problem.*

 - int **runTransient** ()
- Run one time step.*

 - int **runOneTimeStep** ()
- Run one time step.*

 - int **run** ()
- Run the equation.*

 - void **setRhoCp** (const **real.t** &**rhocp**)

- Set product of Density by Specific heat (constants)*

 - void **setConductivity** (const **real_t** &diff)

Set (constant) thermal conductivity.
- void **RhoCp** (const string &exp)

Set product of Density by Specific heat given by an algebraic expression.
- void **Conduc** (const string &exp)

Set thermal conductivity given by an algebraic expression.
- void **updateBC** (const **Element** &el, const **Vect**< **real_t** > &bc)

Update Right-Hand side by taking into account essential boundary conditions.
- void **updateBC** (const **Vect**< **real_t** > &bc)

Update Right-Hand side by taking into account essential boundary conditions.
- void **DiagBC** (int dof_type=NODE.DOF, int dof=0)

Update element matrix to impose bc by diagonalization technique.
- void **LocalNodeVector** (**Vect**< **real_t** > &b)

Localize Element Vector from a Vect instance.
- void **ElementNodeVector** (const **Vect**< **real_t** > &b, **LocalVect**< **real_t**, NEE_ > &be)

Localize Element Vector from a Vect instance.
- void **ElementNodeVector** (const **Vect**< **real_t** > &b, **LocalVect**< **real_t**, NEN_ > &be, int dof)

Localize Element Vector from a Vect instance.
- void **ElementNodeVectorSingleDOF** (const **Vect**< **real_t** > &b, **LocalVect**< **real_t**, NEN_ > &be)

Localize Element Vector from a Vect instance.
- void **ElementSideVector** (const **Vect**< **real_t** > &b, **LocalVect**< **real_t**, NSE_ > &be)

Localize Element Vector from a Vect instance.
- void **ElementVector** (const **Vect**< **real_t** > &b, int dof_type=NODE.FIELD, int flag=0)

Localize Element Vector.
- void **SideVector** (const **Vect**< **real_t** > &b)

Localize Side Vector.
- void **ElementNodeCoordinates** ()

Localize coordinates of element nodes.
- void **SideNodeCoordinates** ()

Localize coordinates of side nodes.
- void **ElementAssembly** (**Matrix**< **real_t** > *A)

Assemble element matrix into global one.
- void **ElementAssembly** (**PETScMatrix**< **real_t** > &A)

Assemble element matrix into global one.
- void **ElementAssembly** (**PETScVect**< **real_t** > &b)

Assemble element right-hand side vector into global one.
- void **ElementAssembly** (**BMatrix**< **real_t** > &A)

Assemble element matrix into global one.
- void **ElementAssembly** (**SkSMatrix**< **real_t** > &A)

Assemble element matrix into global one.
- void **ElementAssembly** (**SkMatrix**< **real_t** > &A)

Assemble element matrix into global one.
- void **ElementAssembly** (**SpMatrix**< **real_t** > &A)

Assemble element matrix into global one.
- void **ElementAssembly** (**TrMatrix**< **real_t** > &A)

- Assemble element matrix into global one.*
 - void `ElementAssembly` (`Vect< real.t > &v`)
- Assemble element vector into global one.*
 - void `SideAssembly` (`PETScMatrix< real.t > &A`)
- Assemble side matrix into global one.*
 - void `SideAssembly` (`PETScVect< real.t > &b`)
- Assemble side right-hand side vector into global one.*
 - void `SideAssembly` (`Matrix< real.t > *A`)
- Assemble side (edge or face) matrix into global one.*
 - void `SideAssembly` (`SkSMatrix< real.t > &A`)
- Assemble side (edge or face) matrix into global one.*
 - void `SideAssembly` (`SkMatrix< real.t > &A`)
- Assemble side (edge or face) matrix into global one.*
 - void `SideAssembly` (`SpMatrix< real.t > &A`)
- Assemble side (edge or face) matrix into global one.*
 - void `SideAssembly` (`Vect< real.t > &v`)
- Assemble side (edge or face) vector into global one.*
 - void `DGElementAssembly` (`Matrix< real.t > *A`)
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
 - void `DGElementAssembly` (`SkSMatrix< real.t > &A`)
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
 - void `DGElementAssembly` (`SkMatrix< real.t > &A`)
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
 - void `DGElementAssembly` (`SpMatrix< real.t > &A`)
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
 - void `DGElementAssembly` (`TrMatrix< real.t > &A`)
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
 - void `AxbAssembly` (const `Element` &el, const `Vect< real.t > &x`, `Vect< real.t > &b`)
- Assemble product of element matrix by element vector into global vector.*
 - void `AxbAssembly` (const `Side` &sd, const `Vect< real.t > &x`, `Vect< real.t > &b`)
- Assemble product of side matrix by side vector into global vector.*
 - size_t `getNbNodes` () const
- Return number of element nodes.*
 - size_t `getNbEq` () const
- Return number of element equations.*
 - void `setInitialSolution` (const `Vect< real.t > &u`)
- Set initial solution (previous time step)*
 - `real.t` `setMaterialProperty` (const string &exp, const string &prop)
- Define a material property by an algebraic expression.*
 - void `setMesh` (`Mesh` &m)
- Define mesh and renumber DOFs after removing imposed ones.*
 - `Mesh` & `getMesh` () const
- Return reference to Mesh instance.*
 - `LinearSolver< real.t > &` `getLinearSolver` ()
- Return reference to linear solver instance.*
 - void `setSolver` (`Iteration` ls, `Preconditioner` pc=IDENT_PREC)
- Choose solver for the linear system.*
 - int `SolveLinearSystem` (`Matrix< real.t > *A`, `Vect< real.t > &b`, `Vect< real.t > &x`)
- Solve the linear system.*

Public Attributes

- **LocalMatrix**< **real.t**, NEE_, NEE_ > **eMat**
LocalMatrix instance containing local matrix associated to current element.
- **LocalMatrix**< **real.t**, NSE_, NSE_ > **sMat**
LocalMatrix instance containing local matrix associated to current side.
- **LocalVect**< **real.t**, NEE_ > **ePrev**
LocalVect instance containing local vector associated to current element.
- **LocalVect**< **real.t**, NEE_ > **eRHS**
LocalVect instance containing local right-hand side vector associated to current element.
- **LocalVect**< **real.t**, NEE_ > **eRes**
LocalVect instance containing local residual vector associated to current element.
- **LocalVect**< **real.t**, NSE_ > **sRHS**
LocalVect instance containing local right-hand side vector associated to current side.

Protected Member Functions

- void **setMaterial** ()
Set material properties.
- void **Init** (const **Element** *el)
Set element arrays to zero.
- void **Init** (const **Side** *sd)
Set side arrays to zero.

7.8.1 Detailed Description

Builds finite element arrays for thermal diffusion and convection in 1-D using 2-Node elements.

Note that members calculating element arrays have as an argument a real coef that will be multiplied by the contribution of the current element. This makes possible testing different algorithms.

7.8.2 Constructor & Destructor Documentation

DC1DL2 ()

Default Constructor.

Constructs an empty equation.

DC1DL2 (const **Element** * el, const **Vect**< **real.t** > & u, **real.t** time = 0.)

Constructor for an element (transient case).

Parameters

<i>el</i>	[in] Pointer to element
<i>u</i>	[in] Vect instance that contains solution at previous time step
<i>time</i>	[in] Current time value (Default value is 0)

DC1DL2 (const Element * *el*, const Vect< real.t > & *u*, real.t *time*, real.t *deltat*, int *scheme*)

Constructor for an element (transient case) with specification of time integration scheme.

Parameters

in	<i>el</i>	Pointer to element.
in	<i>u</i>	Vect instance that contains solution at previous time step.
in	<i>time</i>	Current time value (Default value is 0).
in	<i>deltat</i>	Value of time step
in	<i>scheme</i>	Time Integration Scheme: <ul style="list-style-type: none"> • FORWARD_EULER for Forward Euler scheme • BACKWARD_EULER for Backward Euler scheme • CRANK_NICOLSON for Crank-Nicolson Euler scheme

7.8.3 Member Function Documentation

void LCapacityToLHS (real.t *coef* = 1) [virtual]

Add lumped capacity matrix to left-hand side after multiplying it by coefficient *coef*

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [default: 1]
----	-------------	--

Reimplemented from [Equa.Therm< real.t, 2, 2, 1, 1 >](#).

void LCapacityToRHS (real.t *coef* = 1) [virtual]

Add lumped capacity contribution to right-hand side after multiplying it by coefficient *coef*

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [default: 1]
----	-------------	--

Reimplemented from [Equa.Therm< real.t, 2, 2, 1, 1 >](#).

void LCapacity (real.t *coef*)

Add lumped capacity contribution to left and right-hand sides after multiplying it by coefficient *coef*

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [default: 1]
----	-------------	--

void CapacityToLHS (*real_t coef* = 1) [virtual]

Add Consistent capacity matrix to left-hand side after multiplying it by coefficient *coef*.

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [default: 1]
----	-------------	--

Reimplemented from [Equa.Therm< real_t, 2, 2, 1, 1 >](#).

void CapacityToRHS (*real_t coef* = 1) [virtual]

Add Consistent capacity contribution to right-hand side after multiplying it by coefficient *coef*

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [default: 1]
----	-------------	--

Reimplemented from [Equa.Therm< real_t, 2, 2, 1, 1 >](#).

void Capacity (*real_t coef* = 1)

Add Consistent capacity contribution to left and right-hand sides after multiplying it by coefficient *coef*

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [default: 1]
----	-------------	--

void Diffusion (*real_t coef* = 1) [virtual]

Add diffusion matrix to left hand side after multiplying it by coefficient *coef*

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [default: 1]
----	-------------	--

Reimplemented from [Equa.Therm< real_t, 2, 2, 1, 1 >](#).

void DiffusionToRHS (*real_t coef* = 1) [virtual]

Add diffusion contribution to right hand side after multiplying it by coefficient *coef*
To be used for explicit diffusion term

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [default: 1]
----	-------------	--

Reimplemented from [Equa.Therm< real_t, 2, 2, 1, 1 >](#).

void Convection (const real_t & v, real_t coef = 1)

Add convection matrix to left-hand side after multiplying it by coefficient *coef*

Parameters

in	<i>v</i>	Constant velocity vector
in	<i>coef</i>	Coefficient to multiply by added term [default: 1]

void Convection (const Vect< real_t > & v, real_t coef = 1)

Add convection matrix to left-hand side after multiplying it by coefficient *coef*

Case where velocity field is given by a vector *v*

Parameters

in	<i>v</i>	Velocity vector
in	<i>coef</i>	Coefficient to multiply by added term [default: 1]

void Convection (real_t coef = 1) [virtual]

Add convection matrix to left-hand side after multiplying it by coefficient *coef*

Case where velocity field has been previously defined

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [default: 1]
----	-------------	--

Reimplemented from [Equa.Therm< real_t, 2, 2, 1, 1 >](#).

void ConvectionToRHS (const real_t & v, real_t coef = 1)

Add convection contribution to right-hand side after multiplying it by coefficient *coef*

To be used for explicit convection term.

Parameters

in	<i>v</i>	Velocity vector
in	<i>coef</i>	Coefficient to multiply by added term [default: 1]

void ConvectionToRHS (real_t coef = 1) [virtual]

Add convection contribution to right-hand side after multiplying it by coefficient *coef*

Case where velocity field has been previously defined

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [default: 1]
----	-------------	--

Reimplemented from [Equa.Therm< real.t, 2, 2, 1, 1 >](#).

void BodyRHS (UserData< real.t > &ud, real.t coef = 1)

Add body right-hand side term to right hand side after multiplying it by coefficient coef

Parameters

in	<i>ud</i>	Instance of UserData or of a derived class. Contains a member function that provides body source.
in	<i>coef</i>	Coefficient to multiply by added term [default: 1]

void BodyRHS (const Vect< real.t > &b, int opt = GLOBAL_ARRAY) [virtual]

Add body right-hand side term to right hand side.

Parameters

in	<i>b</i>	Vector containing source at element nodes.
in	<i>opt</i>	Vector is local (LOCAL_ARRAY) with size 3 or global (GLOBAL_ARRAY) with size = Number of nodes [Default: GLOBAL_ARRAY].

Reimplemented from [Equa.Therm< real.t, 2, 2, 1, 1 >](#).

void BoundaryRHS (UserData< real.t > &ud, real.t coef = 1)

Add boundary right-hand side term to right hand side after multiplying it by coefficient coef

Parameters

in	<i>ud</i>	Instance of UserData or of an inherited class. Contains a member function that provides body source.
in	<i>coef</i>	Coefficient to multiply by added term [default: 1]

void BoundaryRHS (real.t flux)

Add boundary right-hand side flux to right hand side.

Parameters

in	<i>flux</i>	Vector containing source at side nodes.
----	-------------	---

void BoundaryRHS (const Vect< real.t > &b, int opt = GLOBAL_ARRAY) [virtual]

Add boundary right-hand side term to right hand side after multiplying it by coefficient coef

Parameters

Parameters

in	<i>b</i>	Vector containing source at side nodes.
in	<i>opt</i>	Vector is local (LOCAL_ARRAY) with size 3 or global (GLOBAL_ARRAY) with size = Number of nodes [Default: GLOBAL_ARRAY].

Reimplemented from [Equa.Therm< real.t, 2, 2, 1, 1 >](#).

void setInput (EqDataType *opt*, Vect< real.t > & *u*)

Set equation input data.

Parameters

in	<i>opt</i>	Parameter that selects data type for input. This parameter is to be chosen in the enumerated variable EqDataType <ul style="list-style-type: none"> • INITIAL_FIELD: Initial temperature • BOUNDARY_CONDITION_DATA: Boundary condition (Dirichlet) • SOURCE_DATA: Heat source • FLUX_DATA: Heat flux (Neumann boundary condition) • VELOCITY: Velocity vector (for the convection term)
in	<i>u</i>	Vector containing input data

virtual void setStab () [virtual], [inherited]

Set stabilized formulation.

Stabilized variational formulations are to be used when the Pclet number is large. By default, no stabilization is used.

void build (TimeStepping & *s*) [inherited]

Build the linear system of equations.

Before using this function, one must have properly selected appropriate options for:

- The choice of a steady state or transient analysis. By default, the analysis is stationary
- In the case of transient analysis, the choice of a time integration scheme and a lumped or consistent capacity matrix. If transient analysis is chosen, the lumped capacity matrix option is chosen by default, and the implicit Euler scheme is used by default for time integration.

Parameters

in	<i>s</i>	Reference to used TimeStepping instance
----	----------	---

void build (EigenProblemSolver & *e*) [inherited]

Build the linear system for an eigenvalue problem.

Parameters

in	<i>e</i>	Reference to used EigenProblemSolver instance
----	----------	---

int runTransient () [inherited]

Run one time step.

This function performs one time step in equation solving. It is to be used only if a *TRANSIENT* analysis is required.

Returns

Return error from the linear system solver

int runOneTimeStep () [inherited]

Run one time step.

This function performs one time step in equation solving. It is identical to the function `runTransient`.

Returns

Return error from the linear system solver

int run () [inherited]

Run the equation.

If the analysis (see function `setAnalysis`) is *STEADY_STATE*, then the function solves the stationary equation.

If the analysis is *TRANSIENT*, then the function performs time stepping until the final time is reached.

void updateBC (const Element & *el*, const Vect< real_t > & *bc*) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>el</i>	Reference to current element instance
in	<i>bc</i>	Vector that contains imposed values at all DOFs

void updateBC (const Vect< real_t > & *bc*) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>bc</i>	Vector that contains imposed values at all DOFs
----	-----------	---

Remarks

The current element is pointed by `_theElement`

void DiagBC (int *dof_type* = *NODE_DOF*, int *dof* = 0) [inherited]

Update element matrix to impose bc by diagonalization technique.

Parameters

in	<i>dof_type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • <i>NODE_FIELD</i>, DOFs are supported by nodes [Default] • <i>ELEMENT_FIELD</i>, DOFs are supported by elements • <i>SIDE_FIELD</i>, DOFs are supported by sides
in	<i>dof</i>	DOF setting: <ul style="list-style-type: none"> • = 0, All DOFs are taken into account [Default] • != 0, Only DOF No. <i>dof</i> is handled in the system

void LocalNodeVector (Vect< real.t > & b) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Reference to global vector to be localized. The resulting local vector can be accessed by attribute <i>ePrev</i> . This member function is to be used if a constructor with <i>Element</i> was invoked.
----	----------	---

void ElementNodeVector (const Vect< real.t > & b, LocalVect< real.t, NEE_ > & be)
[inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

All degrees of freedom are transferred to the local vector

void ElementNodeVector (const Vect< real_t > & b, LocalVect< real_t, NEN_ > & be, int dof) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.
in	<i>dof</i>	Degree of freedom to transfer to the local vector

Remarks

Only yhe dega dof is transferred to the local vector

void ElementNodeVectorSingleDOF (const Vect< real_t > & b, LocalVect< real_t, NEN_ > & be) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

Vector b is assumed to contain only one degree of freedom by node.

void ElementSideVector (const Vect< real_t > & b, LocalVect< real_t, NSE_ > & be) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is

void ElementVector (const Vect< real_t > & b, int dof_type = NODE_FIELD, int flag = 0) [inherited]

Localize Element Vector.

Parameters

in	<i>b</i>	Global vector to be localized
in	<i>dof_type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • <code>NODE_FIELD</code>, DOFs are supported by nodes [Default] • <code>ELEMENT_FIELD</code>, DOFs are supported by elements • <code>SIDE_FIELD</code>, DOFs are supported by sides
in	<i>flag</i>	Option to set: <ul style="list-style-type: none"> • <code>= 0</code>, All DOFs are taken into account [Default] • <code>!= 0</code>, Only DOF number <code>dof</code> is handled in the system The resulting local vector can be accessed by attribute <code>ePrev</code> .

Remarks

This member function is to be used if a constructor with `Element` was invoked. It uses the `Element` pointer `_theElement`

void SideVector (const Vect< real.t > & b) [inherited]

Localize Side Vector.

Parameters

in	<i>b</i>	Global vector to be localized <ul style="list-style-type: none"> • <code>NODE_FIELD</code>, DOFs are supported by nodes [default] • <code>ELEMENT_FIELD</code>, DOFs are supported by elements • <code>SIDE_FIELD</code>, DOFs are supported by sides The resulting local vector can be accessed by attribute <code>ePrev</code> .
----	----------	---

Remarks

This member function is to be used if a constructor with `Side` was invoked. It uses the `Side` pointer `_theSide`

void ElementNodeCoordinates () [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array `_x[0]`, `_x[1]`, ... which are instances of class [Point<real.t>](#)

Remarks

This member function uses the `Side` pointer `_theSide`

void SideNodeCoordinates () [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array `_x[0]`, `_x[1]`, ... which are instances of class [Point<real_t>](#)

Remarks

This member function uses the Element pointer `_theElement`

void ElementAssembly (Matrix< real_t > * A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScMatrix< real_t > & A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Reference to global matrix
----------	----------------------------

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScVect< real_t > & b) [inherited]

Assemble element right-hand side vector into global one.

Parameters

<i>b</i>	Reference to global right-hand side vector
----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (BMatrix< real_t > & A) [inherited]

Assemble element matrix into global one.

Parameters

A	Global matrix stored as a BMatrix instance
-----	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkSMatrix< real.t > &A) [inherited]

Assemble element matrix into global one.

Parameters

A	Global matrix stored as an SkSMatrix instance
-----	---

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkMatrix< real.t > &A) [inherited]

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an SkMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SpMatrix< real.t > &A) [inherited]

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an SpMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (TrMatrix< real.t > &A) [inherited]

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an TrMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable theElement

void ElementAssembly (Vect< real.t > & v) [inherited]

Assemble element vector into global one.

Parameters

in	v	Global vector (Vect instance)
----	-----	-------------------------------

Warning

The element pointer is given by the global variable theElement

void SideAssembly (PETScMatrix< real.t > & A) [inherited]

Assemble side matrix into global one.

Parameters

A	Reference to global matrix
-----	----------------------------

Warning

The side pointer is given by the global variable theSide

void SideAssembly (PETScVect< real.t > & b) [inherited]

Assemble side right-hand side vector into global one.

Parameters

b	Reference to global right-hand side vector
-----	--

Warning

The side pointer is given by the global variable theSide

void SideAssembly (Matrix< real.t > * A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

<i>A</i>	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
----------	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SkSMatrix< real.t > & *A*) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an SkSMatrix instance
----	----------	---

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SkMatrix< real.t > & *A*) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an SkMatrix instance
----	----------	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SpMatrix< real.t > & *A*) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an SpMatrix instance
----	----------	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (Vect< real.t > & *v*) [inherited]

Assemble side (edge or face) vector into global one.

Parameters

in	v	Global vector (Vect instance)
----	-----	-------------------------------

Warning

The side pointer is given by the global variable `theSide`

void DGElementAssembly (Matrix< real.t > * A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
---	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SkSMatrix< real.t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

A	Global matrix stored as an SkSMatrix instance
---	---

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SkMatrix< real.t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SpMatrix< real.t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	<i>A</i>	Global matrix stored as an SpMatrix instance
----	----------	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (TrMatrix< real.t > & *A*) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	<i>A</i>	Global matrix stored as an TrMatrix instance
----	----------	--

Warning

The element pointer is given by the global variable `theElement`

void AxbAssembly (const Element & *el*, const Vect< real.t > & *x*, Vect< real.t > & *b*)
[inherited]

Assemble product of element matrix by element vector into global vector.

Parameters

in	<i>el</i>	Reference to Element instance
in	<i>x</i>	Global vector to multiply by (Vect instance)
out	<i>b</i>	Global vector to add (Vect instance)

void AxbAssembly (const Side & *sd*, const Vect< real.t > & *x*, Vect< real.t > & *b*)
[inherited]

Assemble product of side matrix by side vector into global vector.

Parameters

in	<i>sd</i>	Reference to Side instance
in	<i>x</i>	Global vector to multiply by (Vect instance)
out	<i>b</i>	Global vector (Vect instance)

real.t setMaterialProperty (const string & *exp*, const string & *prop*) [inherited]

Define a material property by an algebraic expression.

Parameters

in	<i>exp</i>	Algebraic expression
in	<i>prop</i>	Property name

Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

Mesh& getMesh () const [inherited]

Return reference to Mesh instance.

Returns

Reference to Mesh instance

void setSolver (Iteration *ls*, Preconditioner *pc* = IDENT_PREC) [inherited]

Choose solver for the linear system.

Parameters

in	<i>ls</i>	<p>Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER</p> <ul style="list-style-type: none"> • DIRECT_SOLVER, Use a facorization solver [default] • CG_SOLVER, Conjugate Gradient iterative solver • CGS_SOLVER, Squared Conjugate Gradient iterative solver • BICG_SOLVER, BiConjugate Gradient iterative solver • BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver • GMRES_SOLVER, GMRES iterative solver • QMR_SOLVER, QMR iterative solver
in	<i>pc</i>	<p>Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:</p> <ul style="list-style-type: none"> • IDENT_PREC, Identity preconditioner (no preconditioning [default]) • DIAG_PREC, Diagonal preconditioner • ILU_PREC, Incomplete LU factorization preconditioner

int SolveLinearSystem (Matrix< real_t > * A, Vect< real_t > & b, Vect< real_t > & x)
 [inherited]

Solve the linear system.

Parameters

in	A	Pointer to matrix of the system (Instance of class SpMatrix)
in	b	Vector containing right-hand side
in,out	x	Vector containing initial guess of solution on input, actual solution on output

7.8.4 Member Data Documentation

LocalVect<real_t,NEE_> ePrev [inherited]


LocalVect instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

7.9 DC2DT3 Class Reference

Builds finite element arrays for thermal diffusion and convection in 2-D domains using 3-Node triangles.

Inheritance diagram for DC2DT3:

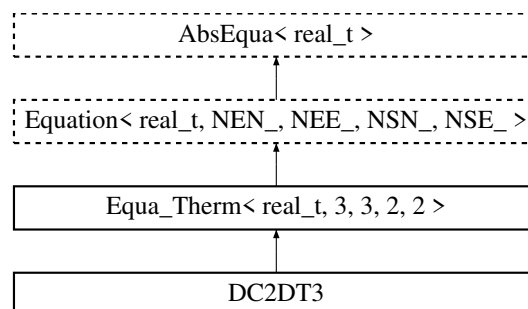

Public Member Functions

- **DC2DT3 ()**
Default Constructor. Constructs an empty equation.
- **DC2DT3 (Mesh &ms)**
Constructor using Mesh data.
- **DC2DT3 (Mesh &ms, Vect< real_t > &u)**
Constructor using Mesh and initial condition.
- **DC2DT3 (const Element *el)**
Constructor for an element.
- **DC2DT3 (const Side *sd)**
Constructor for a boundary side.
- **DC2DT3 (const Element *el, const Vect< real_t > &u, real_t time=0.)**
Constructor for an element (transient case).

- **DC2DT3** (const **Element** *el, const **Vect**< **real_t** > &u, **real_t** time, **real_t** deltat, int scheme)
Constructor for an element (transient case) with specification of time integration scheme.
- **DC2DT3** (const **Side** *sd, const **Vect**< **real_t** > &u, **real_t** time=0.)
Constructor for a boundary side (transient case).
- **DC2DT3** (const **Side** *sd, const **Vect**< **real_t** > &u, **real_t** time, **real_t** deltat, int scheme)
Constructor for a side (transient case) with specification of time integration scheme.
- **~DC2DT3** ()
Destructor.
- void **LCapacityToLHS** (**real_t** coef=1)
Add lumped capacity matrix to left-hand side after multiplying it by coefficient coef
- void **LCapacityToRHS** (**real_t** coef=1)
Add lumped capacity contribution to right-hand side after multiplying it by coefficient coef
- void **LCapacity** (**real_t** coef)
Add lumped capacity contribution to left and right-hand sides after multiplying it by coefficient coef
- void **CapacityToLHS** (**real_t** coef=1)
Add Consistent capacity matrix to left-hand side after multiplying it by coefficient coef
- void **CapacityToRHS** (**real_t** coef=1)
Add Consistent capacity contribution to right-hand side after multiplying it by coefficient coef
- void **Capacity** (**real_t** coef=1)
Add Consistent capacity contribution to left and right-hand sides after multiplying it by coefficient coef
- void **Diffusion** (**real_t** coef=1)
Add diffusion matrix to left-hand side after multiplying it by coefficient coef
- void **Diffusion** (const **LocalMatrix**< **real_t**, 2, 2 > &diff, **real_t** coef=1)
Add diffusion matrix to left-hand side after multiplying it by coefficient coef
- void **DiffusionToRHS** (**real_t** coef=1)
Add diffusion contribution to right-hand side after multiplying it by coefficient coef To be used for explicit diffusion term.
- void **Convection** (const **Point**< **real_t** > &v, **real_t** coef=1)
Add convection matrix to left-hand side after multiplying it by coefficient coef
- void **Convection** (const **Vect**< **real_t** > &v, **real_t** coef=1)
Add convection matrix to left-hand side after multiplying it by coefficient coef
- void **Convection** (**real_t** coef=1)
Add convection matrix to left-hand side after multiplying it by coefficient coef
- void **ConvectionToRHS** (const **Point**< **real_t** > &v, **real_t** coef=1)
Add convection contribution to right-hand side after multiplying it by coefficient coef
- void **ConvectionToRHS** (**real_t** coef=1)
Add convection contribution to right-hand side after multiplying it by coefficient coef
- void **LinearExchange** (**real_t** coef, **real_t** T)
Add an edge linear exchange term to left and right-hand sides.
- void **BodyRHS** (**UserData**< **real_t** > &ud, **real_t** coef=1)
Add body right-hand side term to right hand side after multiplying it by coefficient coef
- void **BodyRHS** (const **Vect**< **real_t** > &bf, int opt=GLOBAL_ARRAY)
Add body right-hand side term to right hand side.
- void **BodyRHS** (**real_t** bf)
Add body right-hand side term to right hand side.
- void **BoundaryRHS** (**UserData**< **real_t** > &ud, **real_t** coef=1)
Add boundary right-hand side term to right hand side after multiplying it by coefficient coef

- void **BoundaryRHS** (**real.t** flux)
Add boundary right-hand side flux to right hand side.
- void **BoundaryRHS** (const **Vect**< **real.t** > &b, int opt=**GLOBAL_ARRAY**)
*Add boundary right-hand side term to right hand side after multiplying it by coefficient *coef**
- void **Periodic** (**real.t** coef=1.e20)
Add contribution of periodic boundary condition (by a penalty technique).
- **Point**< **real.t** > & **Flux** () const
Return (constant) heat flux in element.
- **Point**< **real.t** > & **Grad** (const **LocalVect**< **real.t**, 3 > &u) const
Return gradient of a vector in element.
- **Point**< **real.t** > & **Grad** (const **Vect**< **real.t** > &u) const
Return gradient of a vector in element.
- void **setInput** (**EqDataType** opt, **Vect**< **real.t** > &u)
Set equation input data.
- void **JouleHeating** (const **Vect**< **real.t** > &sigma, const **Vect**< **real.t** > &psi)
Set Joule heating term as source.
- void **build** ()
Build the linear system of equations.
- virtual void **setStab** ()
Set stabilized formulation.
- void **setLumpedCapacity** ()
Add lumped capacity contribution to left and right-hand sides taking into account time integration scheme.
- void **setCapacity** ()
Add consistent capacity contribution to left and right-hand sides taking into account time integration scheme.
- void **setDiffusion** ()
Add diffusion contribution to left and/or right-hand side taking into account time integration scheme.
- void **setConvection** ()
Add convection contribution to left and/or right-hand side taking into account time integration scheme.
- void **build** (**EigenProblemSolver** &e)
Build the linear system for an eigenvalue problem.
- int **runTransient** ()
Run one time step.
- int **runOneTimeStep** ()
Run one time step.
- int **run** ()
Run the equation.
- void **setRhoCp** (const **real.t** &rhocp)
Set product of Density by Specific heat (constants)
- void **setConductivity** (const **real.t** &diff)
Set (constant) thermal conductivity.
- void **RhoCp** (const string &exp)
Set product of Density by Specific heat given by an algebraic expression.
- void **Conduc** (const string &exp)
Set thermal conductivity given by an algebraic expression.
- void **updateBC** (const **Element** &el, const **Vect**< **real.t** > &bc)
Update Right-Hand side by taking into account essential boundary conditions.

- void **updateBC** (const **Vect**< **real_t** > &bc)
Update Right-Hand side by taking into account essential boundary conditions.
- void **DiagBC** (int dof_type=NODE.DOF, int dof=0)
Update element matrix to impose bc by diagonalization technique.
- void **LocalNodeVector** (**Vect**< **real_t** > &b)
Localize Element Vector from a Vect instance.
- void **ElementNodeVector** (const **Vect**< **real_t** > &b, **LocalVect**< **real_t**, NEE_ > &be)
Localize Element Vector from a Vect instance.
- void **ElementNodeVector** (const **Vect**< **real_t** > &b, **LocalVect**< **real_t**, NEN_ > &be, int dof)
Localize Element Vector from a Vect instance.
- void **ElementNodeVectorSingleDOF** (const **Vect**< **real_t** > &b, **LocalVect**< **real_t**, NEN_ > &be)
Localize Element Vector from a Vect instance.
- void **ElementSideVector** (const **Vect**< **real_t** > &b, **LocalVect**< **real_t**, NSE_ > &be)
Localize Element Vector from a Vect instance.
- void **ElementVector** (const **Vect**< **real_t** > &b, int dof_type=NODE.FIELD, int flag=0)
Localize Element Vector.
- void **SideVector** (const **Vect**< **real_t** > &b)
Localize Side Vector.
- void **ElementNodeCoordinates** ()
Localize coordinates of element nodes.
- void **SideNodeCoordinates** ()
Localize coordinates of side nodes.
- void **ElementAssembly** (**Matrix**< **real_t** > *A)
Assemble element matrix into global one.
- void **ElementAssembly** (**PETScMatrix**< **real_t** > &A)
Assemble element matrix into global one.
- void **ElementAssembly** (**PETScVect**< **real_t** > &b)
Assemble element right-hand side vector into global one.
- void **ElementAssembly** (**BMatrix**< **real_t** > &A)
Assemble element matrix into global one.
- void **ElementAssembly** (**SkSMatrix**< **real_t** > &A)
Assemble element matrix into global one.
- void **ElementAssembly** (**SkMatrix**< **real_t** > &A)
Assemble element matrix into global one.
- void **ElementAssembly** (**SpMatrix**< **real_t** > &A)
Assemble element matrix into global one.
- void **ElementAssembly** (**TrMatrix**< **real_t** > &A)
Assemble element matrix into global one.
- void **ElementAssembly** (**Vect**< **real_t** > &v)
Assemble element vector into global one.
- void **SideAssembly** (**PETScMatrix**< **real_t** > &A)
Assemble side matrix into global one.
- void **SideAssembly** (**PETScVect**< **real_t** > &b)
Assemble side right-hand side vector into global one.
- void **SideAssembly** (**Matrix**< **real_t** > *A)
Assemble side (edge or face) matrix into global one.

- void `SideAssembly` (`SkSMatrix`< `real.t` > &A)
Assemble side (edge or face) matrix into global one.
- void `SideAssembly` (`SkMatrix`< `real.t` > &A)
Assemble side (edge or face) matrix into global one.
- void `SideAssembly` (`SpMatrix`< `real.t` > &A)
Assemble side (edge or face) matrix into global one.
- void `SideAssembly` (`Vect`< `real.t` > &v)
Assemble side (edge or face) vector into global one.
- void `DGElementAssembly` (`Matrix`< `real.t` > *A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void `DGElementAssembly` (`SkSMatrix`< `real.t` > &A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void `DGElementAssembly` (`SkMatrix`< `real.t` > &A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void `DGElementAssembly` (`SpMatrix`< `real.t` > &A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void `DGElementAssembly` (`TrMatrix`< `real.t` > &A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void `AxbAssembly` (const `Element` &el, const `Vect`< `real.t` > &x, `Vect`< `real.t` > &b)
Assemble product of element matrix by element vector into global vector.
- void `AxbAssembly` (const `Side` &sd, const `Vect`< `real.t` > &x, `Vect`< `real.t` > &b)
Assemble product of side matrix by side vector into global vector.
- size_t `getNbNodes` () const
Return number of element nodes.
- size_t `getNbEq` () const
Return number of element equations.
- void `setInitialSolution` (const `Vect`< `real.t` > &u)
Set initial solution (previous time step)
- `real.t` `setMaterialProperty` (const string &exp, const string &prop)
Define a material property by an algebraic expression.
- void `setMesh` (`Mesh` &m)
Define mesh and renumber DOFs after removing imposed ones.
- `Mesh` & `getMesh` () const
Return reference to Mesh instance.
- `LinearSolver`< `real.t` > & `getLinearSolver` ()
Return reference to linear solver instance.
- void `setSolver` (`Iteration` ls, `Preconditioner` pc=IDENT_PREC)
Choose solver for the linear system.
- int `SolveLinearSystem` (`Matrix`< `real.t` > *A, `Vect`< `real.t` > &b, `Vect`< `real.t` > &x)
Solve the linear system.

Public Attributes

- [LocalMatrix](#)< [real.t](#), NEE_, NEE_ > [eMat](#)
LocalMatrix instance containing local matrix associated to current element.
- [LocalMatrix](#)< [real.t](#), NSE_, NSE_ > [sMat](#)
LocalMatrix instance containing local matrix associated to current side.
- [LocalVect](#)< [real.t](#), NEE_ > [ePrev](#)
LocalVect instance containing local vector associated to current element.
- [LocalVect](#)< [real.t](#), NEE_ > [eRHS](#)
LocalVect instance containing local right-hand side vector associated to current element.
- [LocalVect](#)< [real.t](#), NEE_ > [eRes](#)
LocalVect instance containing local residual vector associated to current element.
- [LocalVect](#)< [real.t](#), NSE_ > [sRHS](#)
LocalVect instance containing local right-hand side vector associated to current side.

Protected Member Functions

- void [set](#) (const [Element](#) *el)
Run the equation.
- void [setMaterial](#) ()
Set material properties.
- void [Init](#) (const [Element](#) *el)
Set element arrays to zero.
- void [Init](#) (const [Side](#) *sd)
Set side arrays to zero.

7.9.1 Detailed Description

Builds finite element arrays for thermal diffusion and convection in 2-D domains using 3-Node triangles.

Note that members calculating element arrays have as an argument a real coef that will be multiplied by the contribution of the current element. This makes possible testing different algorithms.

7.9.2 Constructor & Destructor Documentation

DC2DT3 ([Mesh](#) & *ms*)

Constructor using [Mesh](#) data.

Parameters

in	<i>ms</i>	Mesh instance
----	-----------	-------------------------------

DC2DT3 ([Mesh](#) & *ms*, [Vect](#)< [real.t](#) > & *u*)

Constructor using [Mesh](#) and initial condition.

Parameters

in	<i>ms</i>	Mesh instance
----	-----------	-------------------------------

Parameters

in	<i>u</i>	Vect instance containing initial solution
----	----------	---

DC2DT3 (const Element * *el*)

Constructor for an element.

Parameters

<i>el</i>	Pointer to Element instance
-----------	---

DC2DT3 (const Side * *sd*)

Constructor for a boundary side.

Parameters

in	<i>sd</i>	Pointer to Side instance
----	-----------	--

DC2DT3 (const Element * *el*, const Vect< real.t > & *u*, real.t *time* = 0.)

Constructor for an element (transient case).

Parameters

in	<i>el</i>	Pointer to element
in	<i>u</i>	Vect instance that contains solution at previous time step
in	<i>time</i>	Current time value [Default: 0]

DC2DT3 (const Element * *el*, const Vect< real.t > & *u*, real.t *time*, real.t *deltat*, int *scheme*)

Constructor for an element (transient case) with specification of time integration scheme.

Parameters

in	<i>el</i>	Pointer to element.
in	<i>u</i>	Vect instance that contains solution at previous time step.
in	<i>time</i>	Current time value [Default: 0].
in	<i>deltat</i>	Value of time step.
in	<i>scheme</i>	Time Integration Scheme: <ul style="list-style-type: none"> • FORWARD_EULER for Forward Euler scheme • BACKWARD_EULER for Backward Euler scheme • CRANK_NICOLSON for Crank-Nicolson Euler scheme

DC2DT3 (const Side * *sd*, const Vect< real_t > & *u*, real_t *time* = 0.)

Constructor for a boundary side (transient case).

Parameters

in	<i>sd</i>	Pointer to side.
in	<i>u</i>	Vect instance that contains solution at previous time step.
in	<i>time</i>	Current time value [Default: 0]

DC2DT3 (const Side * *sd*, const Vect< real_t > & *u*, real_t *time*, real_t *deltat*, int *scheme*)

Constructor for a side (transient case) with specification of time integration scheme.

Parameters

in	<i>sd</i>	Pointer to side.
in	<i>u</i>	Vect instance that contains solution at previous time step.
in	<i>time</i>	Current time value [Default: 0].
in	<i>deltat</i>	Value of time step.
in	<i>scheme</i>	Time Integration Scheme: <ul style="list-style-type: none"> • FORWARD_EULER for Forward Euler scheme • BACKWARD_EULER for Backward Euler scheme • CRANK_NICOLSON for Crank-Nicolson Euler scheme

7.9.3 Member Function Documentation

void LCapacityToLHS (real_t *coef* = 1) [virtual]

Add lumped capacity matrix to left-hand side after multiplying it by coefficient *coef*

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [Default: 1].
----	-------------	---

Reimplemented from [Equa.Therm< real_t, 3, 3, 2, 2 >](#).

void LCapacityToRHS (real_t *coef* = 1) [virtual]

Add lumped capacity contribution to right-hand side after multiplying it by coefficient *coef*

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [Default: 1].
----	-------------	---

Reimplemented from [Equa.Therm< real_t, 3, 3, 2, 2 >](#).

void LCapacity (*real.t coef*)

Add lumped capacity contribution to left and right-hand sides after multiplying it by coefficient *coef*

Parameters

<i>in</i>	<i>coef</i>	Coefficient to multiply by added term [Default: 1]
-----------	-------------	--

void CapacityToLHS (*real.t coef = 1*) [virtual]

Add Consistent capacity matrix to left-hand side after multiplying it by coefficient *coef*

Parameters

<i>in</i>	<i>coef</i>	Coefficient to multiply by added term [Default: 1]
-----------	-------------	--

Reimplemented from [Equa.Therm< real.t, 3, 3, 2, 2 >](#).

void CapacityToRHS (*real.t coef = 1*) [virtual]

Add Consistent capacity contribution to right-hand side after multiplying it by coefficient *coef*

Parameters

<i>in</i>	<i>coef</i>	Coefficient to multiply by added term [Default: 1]
-----------	-------------	--

Reimplemented from [Equa.Therm< real.t, 3, 3, 2, 2 >](#).

void Capacity (*real.t coef = 1*)

Add Consistent capacity contribution to left and right-hand sides after multiplying it by coefficient *coef*

Parameters

<i>in</i>	<i>coef</i>	Coefficient to multiply by added term [Default: 1].
-----------	-------------	---

void Diffusion (*real.t coef = 1*) [virtual]

Add diffusion matrix to left-hand side after multiplying it by coefficient *coef*

Parameters

<i>in</i>	<i>coef</i>	Coefficient to multiply by added term [Default: 1]
-----------	-------------	--

Reimplemented from [Equa.Therm< real.t, 3, 3, 2, 2 >](#).

void Diffusion (const LocalMatrix< real_t, 2, 2 > & diff, real_t coef = 1)

Add diffusion matrix to left-hand side after multiplying it by coefficient coef
Case where the diffusivity matrix is given as an argument.

Parameters

in	<i>diff</i>	Diffusion matrix (class LocalMatrix).
in	<i>coef</i>	Coefficient to multiply by added term [Default: 1]

void DiffusionToRHS (real_t coef = 1) [virtual]

Add diffusion contribution to right-hand side after multiplying it by coefficient coef To be used for explicit diffusion term.

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [Default: 1]
----	-------------	--

Reimplemented from [Equa.Therm< real_t, 3, 3, 2, 2 >](#).

void Convection (const Point< real_t > & v, real_t coef = 1)

Add convection matrix to left-hand side after multiplying it by coefficient coef

Parameters

in	<i>v</i>	Constant velocity vector
in	<i>coef</i>	Coefficient to multiply by added term [Default: 1]

void Convection (const Vect< real_t > & v, real_t coef = 1)

Add convection matrix to left-hand side after multiplying it by coefficient coef
Case where velocity field is given by a vector v

Parameters

in	<i>v</i>	Velocity vector
in	<i>coef</i>	Coefficient to multiply by added term (Default: 1)

void Convection (real_t coef = 1) [virtual]

Add convection matrix to left-hand side after multiplying it by coefficient coef
Case where velocity field has been previously defined

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [Default: 1]
----	-------------	--

Reimplemented from [Equa.Therm< real.t, 3, 3, 2, 2 >](#).

void ConvectionToRHS (const Point< real.t > & v, real.t coef = 1)

Add convection contribution to right-hand side after multiplying it by coefficient coef
To be used for explicit convection term.

Parameters

in	<i>v</i>	Velocity vector
in	<i>coef</i>	Coefficient to multiply by added term [Default: 1]

void ConvectionToRHS (real.t coef = 1) [virtual]

Add convection contribution to right-hand side after multiplying it by coefficient coef
Case where velocity field has been previously defined

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [Default: 1]
----	-------------	--

Reimplemented from [Equa.Therm< real.t, 3, 3, 2, 2 >](#).

void LinearExchange (real.t coef, real.t T)

Add an edge linear exchange term to left and right-hand sides.

Parameters

in	<i>coef</i>	Coefficient of exchange
in	<i>T</i>	External value for exchange

Remarks

This assumes a constant value of T

void BodyRHS (UserData< real.t > & ud, real.t coef = 1)

Add body right-hand side term to right hand side after multiplying it by coefficient coef

Parameters

in	<i>ud</i>	Instance of UserData or of a derived class. Contains a member function that provides body source.
in	<i>coef</i>	Coefficient to multiply by added term [Default: 1]

void BodyRHS (const Vect< real.t > &bf, int opt = GLOBAL_ARRAY) [virtual]

Add body right-hand side term to right hand side.

Parameters

in	<i>bf</i>	Vector containing source at element nodes.
in	<i>opt</i>	Vector is local (LOCAL_ARRAY) with size 3 or global (GLOBAL_ARRAY) with size = Number of nodes [Default: GLOBAL_ARRAY].

Reimplemented from [Equa.Therm< real.t, 3, 3, 2, 2 >](#).

void BodyRHS (real.t bf)

Add body right-hand side term to right hand side.

Case where the body right-hand side is piecewise constant.

Parameters

in	<i>bf</i>	Value of thermal source (Constant in element).
----	-----------	--

void BoundaryRHS (UserData< real.t > &ud, real.t coef = 1)

Add boundary right-hand side term to right hand side after multiplying it by coefficient coef

Parameters

in	<i>ud</i>	Instance of UserData or of an inherited class. Contains a member function that provides body source.
in	<i>coef</i>	Coefficient to multiply by added term [Default: 1]

void BoundaryRHS (real.t flux)

Add boundary right-hand side flux to right hand side.

Parameters

in	<i>flux</i>	Vector containing source at side nodes.
----	-------------	---

void BoundaryRHS (const Vect< real.t > &b, int opt = GLOBAL_ARRAY) [virtual]

Add boundary right-hand side term to right hand side after multiplying it by coefficient coef

Parameters

in	<i>b</i>	Vector containing source at side nodes
in	<i>opt</i>	Vector is local (LOCAL_ARRAY) with size 2 or global (GLOBAL_ARRAY) with size = Number of nodes [Default: GLOBAL_ARRAY].

Reimplemented from [Equa.Therm< real_t, 3, 3, 2, 2 >](#).

void Periodic (real_t coef = 1.e20)

Add contribution of periodic boundary condition (by a penalty technique).

Boundary nodes where periodic boundary conditions are to be imposed must have codes equal to PERIODIC_A on one side and PERIODIC_B on the opposite side.

Parameters

in	coef	Value of penalty parameter [Default: 1.e20]
----	------	---

Point<real_t>& Grad (const LocalVect< real_t, 3 > & u) const

Return gradient of a vector in element.

Parameters

in	u	Vector for which gradient is computed.
----	---	--

Point<real_t>& Grad (const Vect< real_t > & u) const

Return gradient of a vector in element.

Parameters

in	u	Global vector for which gradient is computed. Vector u has as size the total number of nodes
----	---	--

void setInput (EqDataType opt, Vect< real_t > & u)

Set equation input data.

Parameters

in	opt	Parameter to select type of input (enumerated values) <ul style="list-style-type: none"> • INITIAL_FIELD: Initial temperature • BOUNDARY_CONDITION_DATA: Boundary condition (Dirichlet) • SOURCE_DATA: Heat source • FLUX_DATA: Heat flux (Neumann boundary condition) • VELOCITY_FIELD: Velocity vector (for the convection term)
in	u	Vector containing input data

void JouleHeating (const Vect< real_t > & *sigma*, const Vect< real_t > & *psi*)

Set Joule heating term as source.

Parameters

in	<i>sigma</i>	Vect instance containing electric conductivity (elementwise)
in	<i>psi</i>	Vect instance containing electric potential (elementwise)

void build ()

Build the linear system of equations.

Before using this function, one must have properly selected appropriate options for:

- The choice of a steady state or transient analysis. By default, the analysis is stationary
- In the case of transient analysis, the choice of a time integration scheme and a lumped or consistent capacity matrix. If transient analysis is chosen, the lumped capacity matrix option is chosen by default, and the implicit Euler scheme is used by default for time integration.

void set (const Element * *el*) [protected]

Run the equation.

If the analysis (see function setAnalysis) is STEADY_STATE, then the function solves the stationary equation.

If the analysis is TRANSIENT, then the function performs time stepping until the final time is reached.

virtual void setStab () [virtual], [inherited]

Set stabilized formulation.

Stabilized variational formulations are to be used when the Pclet number is large.

By default, no stabilization is used.

void build (EigenProblemSolver & *e*) [inherited]

Build the linear system for an eigenvalue problem.

Parameters

in	<i>e</i>	Reference to used EigenProblemSolver instance
----	----------	---

int runTransient () [inherited]

Run one time step.

This function performs one time step in equation solving. It is to be used only if a TRANSIENT analysis is required.

Returns

Return error from the linear system solver

int runOneTimeStep () [inherited]

Run one time step.

This function performs one time step in equation solving. It is identical to the function `runTransient`.

Returns

Return error from the linear system solver

int run () [inherited]

Run the equation.

If the analysis (see function `setAnalysis`) is `STEADY_STATE`, then the function solves the stationary equation.

If the analysis is `TRANSIENT`, then the function performs time stepping until the final time is reached.

void updateBC (const Element & el, const Vect< real_t > & bc) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>el</i>	Reference to current element instance
in	<i>bc</i>	Vector that contains imposed values at all DOFs

void updateBC (const Vect< real_t > & bc) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>bc</i>	Vector that contains imposed values at all DOFs
----	-----------	---

Remarks

The current element is pointed by `_theElement`

void DiagBC (int dof_type = NODE_DOF, int dof = 0) [inherited]

Update element matrix to impose bc by diagonalization technique.

Parameters

in	<i>dof_type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • <code>NODE_FIELD</code>, DOFs are supported by nodes [Default] • <code>ELEMENT_FIELD</code>, DOFs are supported by elements • <code>SIDE_FIELD</code>, DOFs are supported by sides
in	<i>dof</i>	DOF setting: <ul style="list-style-type: none"> • <code>= 0</code>, All DOFs are taken into account [Default] • <code>!= 0</code>, Only DOF No. <i>dof</i> is handled in the system

void LocalNodeVector (Vect< real.t > & b) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Reference to global vector to be localized. The resulting local vector can be accessed by attribute <i>ePrev</i> . This member function is to be used if a constructor with <i>Element</i> was invoked.
----	----------	---

void ElementNodeVector (const Vect< real.t > & b, LocalVect< real.t, NEE_ > & be)
[inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

All degrees of freedom are transferred to the local vector

void ElementNodeVector (const Vect< real.t > & b, LocalVect< real.t, NEN_ > & be, int dof) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.
in	<i>dof</i>	Degree of freedom to transfer to the local vector

Remarks

Only the dega dof is transferred to the local vector

```
void ElementNodeVectorSingleDOF ( const Vect< real_t > & b, LocalVect< real_t, NEN_ > & be ) [inherited]
```

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

Vector b is assumed to contain only one degree of freedom by node.

```
void ElementSideVector ( const Vect< real_t > & b, LocalVect< real_t, NSE_ > & be ) [inherited]
```

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is

```
void ElementVector ( const Vect< real_t > & b, int dof_type = NODE_FIELD, int flag = 0 ) [inherited]
```

Localize Element Vector.

Parameters

in	<i>b</i>	Global vector to be localized
in	<i>dof_type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • <code>NODE_FIELD</code>, DOFs are supported by nodes [Default] • <code>ELEMENT_FIELD</code>, DOFs are supported by elements • <code>SIDE_FIELD</code>, DOFs are supported by sides
in	<i>flag</i>	Option to set: <ul style="list-style-type: none"> • <code>= 0</code>, All DOFs are taken into account [Default] • <code>!= 0</code>, Only DOF number <code>dof</code> is handled in the system The resulting local vector can be accessed by attribute <code>ePrev</code> .

Remarks

This member function is to be used if a constructor with Element was invoked. It uses the Element pointer `_theElement`

void SideVector (const Vect< real_t > & b) [inherited]

Localize Side Vector.

Parameters

in	<i>b</i>	Global vector to be localized <ul style="list-style-type: none"> • <code>NODE_FIELD</code>, DOFs are supported by nodes [default] • <code>ELEMENT_FIELD</code>, DOFs are supported by elements • <code>SIDE_FIELD</code>, DOFs are supported by sides The resulting local vector can be accessed by attribute <code>ePrev</code> .
----	----------	---

Remarks

This member function is to be used if a constructor with Side was invoked. It uses the Side pointer `_theSide`

void ElementNodeCoordinates () [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array `_x[0]`, `_x[1]`, ... which are instances of class [Point<real_t>](#)

Remarks

This member function uses the Side pointer `_theSide`

void SideNodeCoordinates () [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array `_x[0]`, `_x[1]`, ... which are instances of class [Point<real_t>](#)

Remarks

This member function uses the Element pointer `_theElement`

void ElementAssembly (Matrix< real_t > * A) [inherited]

Assemble element matrix into global one.

Parameters

A	Pointer to global matrix (abstract class: can be any of classes <code>SkSMatrix</code> , <code>SkMatrix</code> , <code>SpMatrix</code>)
---	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScMatrix< real_t > &A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Reference to global matrix
----------	----------------------------

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScVect< real_t > &b) [inherited]

Assemble element right-hand side vector into global one.

Parameters

<i>b</i>	Reference to global right-hand side vector
----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (BMatrix< real_t > &A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Global matrix stored as a BMatrix instance
----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkSMatrix< real_t > &A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Global matrix stored as an SkSMatrix instance
----------	---

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkMatrix< real_t > &A) [inherited]

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SpMatrix< real_t > &A) [inherited]

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an SpMatrix instance
----	---	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (TrMatrix< real_t > &A) [inherited]

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an TrMatrix instance
----	---	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (Vect< real_t > &v) [inherited]

Assemble element vector into global one.

Parameters

in	v	Global vector (Vect instance)
----	---	-------------------------------

Warning

The element pointer is given by the global variable `theElement`

void SideAssembly (PETScMatrix< real_t > &A) [inherited]

Assemble side matrix into global one.

Parameters

<i>A</i>	Reference to global matrix
----------	----------------------------

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (PETScVect< real_t > &b) [inherited]

Assemble side right-hand side vector into global one.

Parameters

<i>b</i>	Reference to global right-hand side vector
----------	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (Matrix< real_t > *A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

<i>A</i>	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
----------	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SkSMatrix< real_t > &A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

<i>in</i>	<i>A</i>	Global matrix stored as an SkSMatrix instance
-----------	----------	---

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SkMatrix< real.t > & A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SpMatrix< real.t > & A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	A	Global matrix stored as an SpMatrix instance
----	---	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (Vect< real.t > & v) [inherited]

Assemble side (edge or face) vector into global one.

Parameters

in	v	Global vector (Vect instance)
----	---	-------------------------------

Warning

The side pointer is given by the global variable `theSide`

void DGElementAssembly (Matrix< real.t > * A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
---	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SkSMatrix< real_t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

<code>A</code>	Global matrix stored as an SkSMatrix instance
----------------	---

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SkMatrix< real_t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

<code>in</code>	<code>A</code>	Global matrix stored as an SkMatrix instance
-----------------	----------------	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SpMatrix< real_t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

<code>in</code>	<code>A</code>	Global matrix stored as an SpMatrix instance
-----------------	----------------	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (TrMatrix< real_t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

<code>in</code>	<code>A</code>	Global matrix stored as an TrMatrix instance
-----------------	----------------	--

Warning

The element pointer is given by the global variable `theElement`

void AxbAssembly (const Element & *el*, const Vect< real_t > & *x*, Vect< real_t > & *b*)
[inherited]

Assemble product of element matrix by element vector into global vector.

Parameters

in	<i>el</i>	Reference to Element instance
in	<i>x</i>	Global vector to multiply by (Vect instance)
out	<i>b</i>	Global vector to add (Vect instance)

void AxbAssembly (const Side & *sd*, const Vect< real_t > & *x*, Vect< real_t > & *b*)
[inherited]

Assemble product of side matrix by side vector into global vector.

Parameters

in	<i>sd</i>	Reference to Side instance
in	<i>x</i>	Global vector to multiply by (Vect instance)
out	<i>b</i>	Global vector (Vect instance)

real_t setMaterialProperty (const string & *exp*, const string & *prop*) [inherited]

Define a material property by an algebraic expression.

Parameters

in	<i>exp</i>	Algebraic expression
in	<i>prop</i>	Property name

Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

Mesh& getMesh () const [inherited]

Return reference to Mesh instance.

Returns

Reference to Mesh instance

void setSolver (Iteration *ls*, Preconditioner *pc* = *IDENT_PREC*) [inherited]

Choose solver for the linear system.

Parameters

in	<i>ls</i>	<p>Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER</p> <ul style="list-style-type: none"> • DIRECT_SOLVER, Use a facorization solver [default] • CG_SOLVER, Conjugate Gradient iterative solver • CGS_SOLVER, Squared Conjugate Gradient iterative solver • BICG_SOLVER, BiConjugate Gradient iterative solver • BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver • GMRES_SOLVER, GMRES iterative solver • QMR_SOLVER, QMR iterative solver
in	<i>pc</i>	<p>Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:</p> <ul style="list-style-type: none"> • IDENT_PREC, Identity preconditioner (no preconditioning [default]) • DIAG_PREC, Diagonal preconditioner • ILU_PREC, Incomplete LU factorization preconditioner

int SolveLinearSystem (Matrix< real_t > * *A*, Vect< real_t > & *b*, Vect< real_t > & *x*)
[inherited]

Solve the linear system.

Parameters

in	<i>A</i>	Pointer to matrix of the system (Instance of class SpMatrix)
in	<i>b</i>	Vector containing right-hand side
in,out	<i>x</i>	Vector containing initial guess of solution on input, actual solution on output

7.9.4 Member Data Documentation

LocalVect<real_t,NEE_> ePrev [inherited]


LocalVect instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

7.10 DC2DT6 Class Reference

Builds finite element arrays for thermal diffusion and convection in 2-D domains using 6-Node triangles.

Inheritance diagram for DC2DT6:

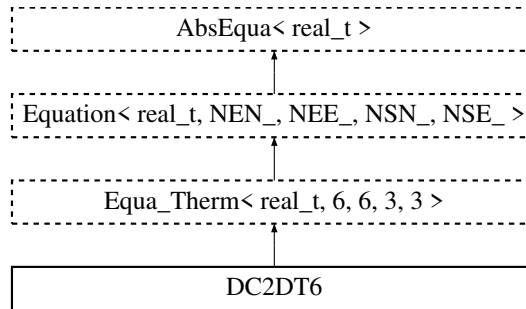

Public Member Functions

- **DC2DT6** ()
Default Constructor.
- **DC2DT6** (const **Element** *el)
Constructor for an element.
- **DC2DT6** (const **Side** *sd)
Constructor for a boundary side.
- **DC2DT6** (const **Element** *el, const **Vect**< **real_t** > &u, **real_t** time=0.)
Constructor for an element (Transient case).
- **DC2DT6** (const **Element** *el, const **Vect**< **real_t** > &u, **real_t** time, **real_t** deltat, int scheme)
Constructor for an element (transient case) with specification of time integration scheme.
- **DC2DT6** (const **Side** *sd, const **Vect**< **real_t** > &u, **real_t** time=0.)
Constructor for a boundary side (transient case).
- **DC2DT6** (const **Side** *sd, const **Vect**< **real_t** > &u, **real_t** time, **real_t** deltat, int scheme)
Constructor for a side (transient case) with specification of time integration scheme.
- **~DC2DT6** ()
Destructor.
- void **Diffusion** (**real_t** coef=1)
Add diffusion matrix to left hand side after multiplying it by coefficient coef
- void **Convection** (**real_t** coef=1)
Add convection matrix to left-hand side after multiplying it by coefficient coef
- void **Convection** (**Point**< **real_t** > &v, **real_t** coef=1)
Add convection matrix to left hand side after multiplying it by coefficient coef
- void **Convection** (const **Vect**< **real_t** > &v, **real_t** coef=1)
Add convection matrix to left-hand side after multiplying it by coefficient coef
- void **BodyRHS** (const **Vect**< **real_t** > &b, int opt=GLOBAL_ARRAY)
Add body right-hand side term to right hand side.
- void **BoundaryRHS** (const **Vect**< **real_t** > &sf, int opt=GLOBAL_ARRAY)
Add boundary right-hand side term to right hand side after multiplying it by coefficient coef
- virtual void **setStab** ()

- Set stabilized formulation.*

 - virtual void **LCapacityToLHS** (**real_t** coef=1)
Add lumped capacity contribution to left-hand side.
 - virtual void **LCapacityToRHS** (**real_t** coef=1)
Add lumped capacity contribution to right-hand side.
 - virtual void **CapacityToLHS** (**real_t** coef=1)
Add consistent capacity contribution to left-hand side.
 - virtual void **CapacityToRHS** (**real_t** coef=1)
Add consistent capacity contribution to right-hand side.
 - void **setLumpedCapacity** ()
Add lumped capacity contribution to left and right-hand sides taking into account time integration scheme.
 - void **setCapacity** ()
Add consistent capacity contribution to left and right-hand sides taking into account time integration scheme.
 - virtual void **DiffusionToRHS** (**real_t** coef=1.)
Add diffusion term to right-hand side.
 - void **setDiffusion** ()
Add diffusion contribution to left and/or right-hand side taking into account time integration scheme.
 - virtual void **ConvectionToRHS** (**real_t** coef=1.)
Add convection term to right-hand side.
 - void **setConvection** ()
Add convection contribution to left and/or right-hand side taking into account time integration scheme.
 - void **build** ()
Build the linear system of equations.
 - void **build** (**TimeStepping** &ts)
Build the linear system of equations.
 - void **build** (**EigenProblemSolver** &e)
Build the linear system for an eigenvalue problem.
 - int **runTransient** ()
Run one time step.
 - int **runOneTimeStep** ()
Run one time step.
 - int **run** ()
Run the equation.
 - void **setRhoCp** (const **real_t** &rhocp)
Set product of Density by Specific heat (constants)
 - void **setConductivity** (const **real_t** &diff)
Set (constant) thermal conductivity.
 - void **RhoCp** (const string &exp)
Set product of Density by Specific heat given by an algebraic expression.
 - void **Conduc** (const string &exp)
Set thermal conductivity given by an algebraic expression.
 - void **updateBC** (const **Element** &el, const **Vect**< **real_t** > &bc)
Update Right-Hand side by taking into account essential boundary conditions.
 - void **updateBC** (const **Vect**< **real_t** > &bc)
Update Right-Hand side by taking into account essential boundary conditions.
 - void **DiagBC** (int dof_type=NODE.DOF, int dof=0)

- Update element matrix to impose bc by diagonalization technique.*

 - void `LocalNodeVector` (`Vect< real_t > &b`)

Localize Element Vector from a Vect instance.
- void `ElementNodeVector` (`const Vect< real_t > &b`, `LocalVect< real_t, NEE_ > &be`)

Localize Element Vector from a Vect instance.
- void `ElementNodeVector` (`const Vect< real_t > &b`, `LocalVect< real_t, NEN_ > &be`, `int dof`)

Localize Element Vector from a Vect instance.
- void `ElementNodeVectorSingleDOF` (`const Vect< real_t > &b`, `LocalVect< real_t, NEN_ > &be`)

Localize Element Vector from a Vect instance.
- void `ElementSideVector` (`const Vect< real_t > &b`, `LocalVect< real_t, NSE_ > &be`)

Localize Element Vector from a Vect instance.
- void `ElementVector` (`const Vect< real_t > &b`, `int dof_type=NODE.FIELD`, `int flag=0`)

Localize Element Vector.
- void `SideVector` (`const Vect< real_t > &b`)

Localize Side Vector.
- void `ElementNodeCoordinates` ()

Localize coordinates of element nodes.
- void `SideNodeCoordinates` ()

Localize coordinates of side nodes.
- void `ElementAssembly` (`Matrix< real_t > *A`)

Assemble element matrix into global one.
- void `ElementAssembly` (`PETScMatrix< real_t > &A`)

Assemble element matrix into global one.
- void `ElementAssembly` (`PETScVect< real_t > &b`)

Assemble element right-hand side vector into global one.
- void `ElementAssembly` (`BMatrix< real_t > &A`)

Assemble element matrix into global one.
- void `ElementAssembly` (`SkSMatrix< real_t > &A`)

Assemble element matrix into global one.
- void `ElementAssembly` (`SkMatrix< real_t > &A`)

Assemble element matrix into global one.
- void `ElementAssembly` (`SpMatrix< real_t > &A`)

Assemble element matrix into global one.
- void `ElementAssembly` (`TrMatrix< real_t > &A`)

Assemble element matrix into global one.
- void `ElementAssembly` (`Vect< real_t > &v`)

Assemble element vector into global one.
- void `SideAssembly` (`PETScMatrix< real_t > &A`)

Assemble side matrix into global one.
- void `SideAssembly` (`PETScVect< real_t > &b`)

Assemble side right-hand side vector into global one.
- void `SideAssembly` (`Matrix< real_t > *A`)

Assemble side (edge or face) matrix into global one.
- void `SideAssembly` (`SkSMatrix< real_t > &A`)

Assemble side (edge or face) matrix into global one.
- void `SideAssembly` (`SkMatrix< real_t > &A`)

- Assemble side (edge or face) matrix into global one.*
 - void `SideAssembly (SpMatrix< real_t > &A)`
- Assemble side (edge or face) matrix into global one.*
 - void `SideAssembly (Vect< real_t > &v)`
- Assemble side (edge or face) vector into global one.*
 - void `DGElementAssembly (Matrix< real_t > *A)`
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
 - void `DGElementAssembly (SkSMatrix< real_t > &A)`
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
 - void `DGElementAssembly (SkMatrix< real_t > &A)`
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
 - void `DGElementAssembly (SpMatrix< real_t > &A)`
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
 - void `DGElementAssembly (TrMatrix< real_t > &A)`
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
 - void `AxbAssembly (const Element &el, const Vect< real_t > &x, Vect< real_t > &b)`
- Assemble product of element matrix by element vector into global vector.*
 - void `AxbAssembly (const Side &sd, const Vect< real_t > &x, Vect< real_t > &b)`
- Assemble product of side matrix by side vector into global vector.*
 - size_t `getNbNodes ()` const
- Return number of element nodes.*
 - size_t `getNbEq ()` const
- Return number of element equations.*
 - void `setInitialSolution (const Vect< real_t > &u)`
- Set initial solution (previous time step)*
 - real_t `setMaterialProperty (const string &exp, const string &prop)`
- Define a material property by an algebraic expression.*
 - void `setMesh (Mesh &m)`
- Define mesh and renumber DOFs after removing imposed ones.*
 - Mesh & `getMesh ()` const
- Return reference to Mesh instance.*
 - LinearSolver< real_t > & `getLinearSolver ()`
- Return reference to linear solver instance.*
 - void `setSolver (Iteration ls, Preconditioner pc=IDENT_PREC)`
- Choose solver for the linear system.*
 - int `SolveLinearSystem (Matrix< real_t > *A, Vect< real_t > &b, Vect< real_t > &x)`
- Solve the linear system.*

Public Attributes

- LocalMatrix< real_t, NEE_, NEE_ > `eMat`
- LocalMatrix instance containing local matrix associated to current element.*
- LocalMatrix< real_t, NSE_, NSE_ > `sMat`
- LocalMatrix instance containing local matrix associated to current side.*
- LocalVect< real_t, NEE_ > `ePrev`
- LocalVect instance containing local vector associated to current element.*
- LocalVect< real_t, NEE_ > `eRHS`

LocalVect instance containing local right-hand side vector associated to current element.

- `LocalVect< real_t, NEE_ > eRes`

LocalVect instance containing local residual vector associated to current element.

- `LocalVect< real_t, NSE_ > sRHS`

LocalVect instance containing local right-hand side vector associated to current side.

Protected Member Functions

- `void setMaterial ()`

Set material properties.

- `void Init (const Element *el)`

Set element arrays to zero.

- `void Init (const Side *sd)`

Set side arrays to zero.

7.10.1 Detailed Description

Builds finite element arrays for thermal diffusion and convection in 2-D domains using 6-Node triangles.

Note that members calculating element arrays have as an argument a real coef that will be multiplied by the contribution of the current element. This makes possible testing different algorithms.

7.10.2 Constructor & Destructor Documentation

DC2DT6 ()

Default Constructor.

Constructs an empty equation.

DC2DT6 (const Element * el)

Constructor for an element.

Parameters

in	el	Pointer to element.
----	----	---------------------

DC2DT6 (const Side * sd)

Constructor for a boundary side.

Parameters

in	sd	Pointer to side.
----	----	------------------

DC2DT6 (const Element * el, const Vect< real_t > & u, real_t time = 0.)

Constructor for an element (Transient case).

Parameters

in	<i>el</i>	Pointer to element.
in	<i>u</i>	Vect instance that contains solution at previous time step.
in	<i>time</i>	Current time value [Default: 0].

DC2DT6 (const Element * *el*, const Vect< real.t > & *u*, real.t *time*, real.t *deltat*, int *scheme*)

Constructor for an element (transient case) with specification of time integration scheme.

Parameters

in	<i>el</i>	Pointer to element.
in	<i>u</i>	Vect instance that contains solution at previous time step.
in	<i>time</i>	Current time value [Default: 1]
in	<i>deltat</i>	Value of time step
in	<i>scheme</i>	Time Integration Scheme: <ul style="list-style-type: none"> • FORWARD_EULER: Forward Euler scheme • BACKWARD_EULER: Backward Euler scheme, • CRANK_NICOLSON: Crank-Nicolson Euler scheme.

DC2DT6 (const Side * *sd*, const Vect< real.t > & *u*, real.t *time* = 0.)

Constructor for a boundary side (transient case).

Parameters

in	<i>sd</i>	Pointer to side.
in	<i>u</i>	Vect instance that contains solution at previous time step.
in	<i>time</i>	Current time value [Default: 0].

DC2DT6 (const Side * *sd*, const Vect< real.t > & *u*, real.t *time*, real.t *deltat*, int *scheme*)

Constructor for a side (transient case) with specification of time integration scheme.

Parameters

in	<i>sd</i>	Pointer to side.
in	<i>u</i>	Vect instance that contains solution at previous time step.
in	<i>time</i>	Current time value
in	<i>deltat</i>	Value of time step

Parameters

in	<i>scheme</i>	Time Integration Scheme: To be chosen among the enumerated values: <ul style="list-style-type: none"> • FORWARD_EULER: Forward Euler scheme • BACKWARD_EULER: Backward Euler scheme, • CRANK_NICOLSON: Crank-Nicolson Euler scheme.
----	---------------	--

7.10.3 Member Function Documentation

void Diffusion (*real_t coef* = 1) [virtual]

Add diffusion matrix to left hand side after multiplying it by coefficient *coef*

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [Default: 1].
----	-------------	---

Reimplemented from [Equa.Therm< real_t, 6, 6, 3, 3 >](#).

void Convection (*real_t coef* = 1) [virtual]

Add convection matrix to left-hand side after multiplying it by coefficient *coef*
Case where velocity field has been previously defined

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [Default: 1].
----	-------------	---

Reimplemented from [Equa.Therm< real_t, 6, 6, 3, 3 >](#).

void Convection (*Point< real_t > & v*, *real_t coef* = 1)

Add convection matrix to left hand side after multiplying it by coefficient *coef*

Parameters

in	<i>v</i>	Constant velocity vector.
in	<i>coef</i>	Coefficient to multiply by added term [Default: 1].

void Convection (*const Vect< real_t > & v*, *real_t coef* = 1)

Add convection matrix to left-hand side after multiplying it by coefficient *coef*
Case where velocity field is given by a vector *v*

Parameters

in	<i>v</i>	Velocity vector.
----	----------	------------------

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [Default: 1].
----	-------------	---

void BodyRHS (const Vect< real_t > & b, int opt = GLOBAL_ARRAY) [virtual]

Add body right-hand side term to right hand side.

Parameters

in	<i>b</i>	Local vector (of size 6) containing source at element nodes
in	<i>opt</i>	Vector is local (LOCAL_ARRAY) with size 6 or global (GLOBAL_ARRAY) with size = Number of nodes [Default: GLOBAL_ARRAY].

Reimplemented from [Equa.Therm< real_t, 6, 6, 3, 3 >](#).

void BoundaryRHS (const Vect< real_t > & sf, int opt = GLOBAL_ARRAY) [virtual]

Add boundary right-hand side term to right hand side after multiplying it by coefficient *coef*

Parameters

in	<i>sf</i>	Vector containing source at side nodes
in	<i>opt</i>	Vector is local (LOCAL_ARRAY) with size 3 or global (GLOBAL_ARRAY) with size = Number of nodes [Default: GLOBAL_ARRAY].

Reimplemented from [Equa.Therm< real_t, 6, 6, 3, 3 >](#).

virtual void setStab () [virtual], [inherited]

Set stabilized formulation.

Stabilized variational formulations are to be used when the Pclet number is large.
By default, no stabilization is used.

virtual void LCapacityToLHS (real_t coef = 1) [virtual], [inherited]

Add lumped capacity contribution to left-hand side.

Parameters

in	<i>coef</i>	coefficient to multiply by the matrix before adding [Default: 1]
----	-------------	--

virtual void LCapacityToRHS (real_t coef = 1) [virtual], [inherited]

Add lumped capacity contribution to right-hand side.

Parameters

in	<i>coef</i>	coefficient to multiply by the vector before adding [Default: 1]
----	-------------	--

virtual void CapacityToLHS (real_t *coef* = 1) [virtual], [inherited]

Add consistent capacity contribution to left-hand side.

Parameters

in	<i>coef</i>	coefficient to multiply by the matrix before adding [Default: 1]
----	-------------	--

virtual void CapacityToRHS (real_t *coef* = 1) [virtual], [inherited]

Add consistent capacity contribution to right-hand side.

Parameters

in	<i>coef</i>	coefficient to multiply by the vector before adding [Default: 1]
----	-------------	--

void build () [inherited]

Build the linear system of equations.

Before using this function, one must have properly selected appropriate options for:

- The choice of a steady state or transient analysis. By default, the analysis is stationary
- In the case of transient analysis, the choice of a time integration scheme and a lumped or consistent capacity matrix. If transient analysis is chosen, the lumped capacity matrix option is chosen by default, and the implicit Euler scheme is used by default for time integration.

void build (TimeStepping & *s*) [inherited]

Build the linear system of equations.

Before using this function, one must have properly selected appropriate options for:

- The choice of a steady state or transient analysis. By default, the analysis is stationary
- In the case of transient analysis, the choice of a time integration scheme and a lumped or consistent capacity matrix. If transient analysis is chosen, the lumped capacity matrix option is chosen by default, and the implicit Euler scheme is used by default for time integration.

Parameters

in	<i>s</i>	Reference to used TimeStepping instance
----	----------	---

void build (EigenProblemSolver & *e*) [inherited]

Build the linear system for an eigenvalue problem.

Parameters

in	<i>e</i>	Reference to used EigenProblemSolver instance
----	----------	---

int runTransient () [inherited]

Run one time step.

This function performs one time step in equation solving. It is to be used only if a *TRANSIENT* analysis is required.

Returns

Return error from the linear system solver

int runOneTimeStep () [inherited]

Run one time step.

This function performs one time step in equation solving. It is identical to the function `runTransient`.

Returns

Return error from the linear system solver

int run () [inherited]

Run the equation.

If the analysis (see function `setAnalysis`) is *STEADY_STATE*, then the function solves the stationary equation.

If the analysis is *TRANSIENT*, then the function performs time stepping until the final time is reached.

void updateBC (const Element & *el*, const Vect< real_t > & *bc*) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>el</i>	Reference to current element instance
in	<i>bc</i>	Vector that contains imposed values at all DOFs

void updateBC (const Vect< real_t > & *bc*) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>bc</i>	Vector that contains imposed values at all DOFs
----	-----------	---

Remarks

The current element is pointed by `_theElement`

void DiagBC (int *dof_type* = *NODE_DOF*, int *dof* = 0) [inherited]

Update element matrix to impose bc by diagonalization technique.

Parameters

in	<i>dof_type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • <i>NODE_FIELD</i>, DOFs are supported by nodes [Default] • <i>ELEMENT_FIELD</i>, DOFs are supported by elements • <i>SIDE_FIELD</i>, DOFs are supported by sides
in	<i>dof</i>	DOF setting: <ul style="list-style-type: none"> • = 0, All DOFs are taken into account [Default] • != 0, Only DOF No. <i>dof</i> is handled in the system

void LocalNodeVector (Vect< real.t > & *b*) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Reference to global vector to be localized. The resulting local vector can be accessed by attribute <i>ePrev</i> . This member function is to be used if a constructor with <i>Element</i> was invoked.
----	----------	---

void ElementNodeVector (const Vect< real.t > & *b*, LocalVect< real.t, NEE_ > & *be*)
[inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

All degrees of freedom are transferred to the local vector

void ElementNodeVector (const Vect< real_t > & b, LocalVect< real_t, NEN_ > & be, int dof) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.
in	<i>dof</i>	Degree of freedom to transfer to the local vector

Remarks

Only yhe dega dof is transferred to the local vector

void ElementNodeVectorSingleDOF (const Vect< real_t > & b, LocalVect< real_t, NEN_ > & be) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

Vector b is assumed to contain only one degree of freedom by node.

void ElementSideVector (const Vect< real_t > & b, LocalVect< real_t, NSE_ > & be) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is

void ElementVector (const Vect< real_t > & b, int dof_type = NODE_FIELD, int flag = 0) [inherited]

Localize Element Vector.

Parameters

in	<i>b</i>	Global vector to be localized
in	<i>dof_type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • <code>NODE_FIELD</code>, DOFs are supported by nodes [Default] • <code>ELEMENT_FIELD</code>, DOFs are supported by elements • <code>SIDE_FIELD</code>, DOFs are supported by sides
in	<i>flag</i>	Option to set: <ul style="list-style-type: none"> • <code>= 0</code>, All DOFs are taken into account [Default] • <code>!= 0</code>, Only DOF number <code>dof</code> is handled in the system The resulting local vector can be accessed by attribute <code>ePrev</code> .

Remarks

This member function is to be used if a constructor with `Element` was invoked. It uses the `Element` pointer `_theElement`

void SideVector (const Vect< real.t > & b) [inherited]

Localize Side Vector.

Parameters

in	<i>b</i>	Global vector to be localized <ul style="list-style-type: none"> • <code>NODE_FIELD</code>, DOFs are supported by nodes [default] • <code>ELEMENT_FIELD</code>, DOFs are supported by elements • <code>SIDE_FIELD</code>, DOFs are supported by sides The resulting local vector can be accessed by attribute <code>ePrev</code> .
----	----------	---

Remarks

This member function is to be used if a constructor with `Side` was invoked. It uses the `Side` pointer `_theSide`

void ElementNodeCoordinates () [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array `_x[0]`, `_x[1]`, ... which are instances of class [Point<real.t>](#)

Remarks

This member function uses the `Side` pointer `_theSide`

void SideNodeCoordinates () [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array `_x[0]`, `_x[1]`, ... which are instances of class [Point<real_t>](#)

Remarks

This member function uses the Element pointer `_theElement`

void ElementAssembly (Matrix< real_t > * A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScMatrix< real_t > & A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Reference to global matrix
----------	----------------------------

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScVect< real_t > & b) [inherited]

Assemble element right-hand side vector into global one.

Parameters

<i>b</i>	Reference to global right-hand side vector
----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (BMatrix< real_t > & A) [inherited]

Assemble element matrix into global one.

Parameters

A	Global matrix stored as a BMatrix instance
-----	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkSMatrix< real.t > &A) [inherited]

Assemble element matrix into global one.

Parameters

A	Global matrix stored as an SkSMatrix instance
-----	---

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkMatrix< real.t > &A) [inherited]

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an SkMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SpMatrix< real.t > &A) [inherited]

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an SpMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (TrMatrix< real.t > &A) [inherited]

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an TrMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable theElement

void ElementAssembly (Vect< real.t > &v) [inherited]

Assemble element vector into global one.

Parameters

in	v	Global vector (Vect instance)
----	-----	-------------------------------

Warning

The element pointer is given by the global variable theElement

void SideAssembly (PETScMatrix< real.t > &A) [inherited]

Assemble side matrix into global one.

Parameters

A	Reference to global matrix
-----	----------------------------

Warning

The side pointer is given by the global variable theSide

void SideAssembly (PETScVect< real.t > &b) [inherited]

Assemble side right-hand side vector into global one.

Parameters

b	Reference to global right-hand side vector
-----	--

Warning

The side pointer is given by the global variable theSide

void SideAssembly (Matrix< real.t > *A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

<i>A</i>	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
----------	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SkSMatrix< real.t > & *A*) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an SkSMatrix instance
----	----------	---

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SkMatrix< real.t > & *A*) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an SkMatrix instance
----	----------	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SpMatrix< real.t > & *A*) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an SpMatrix instance
----	----------	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (Vect< real.t > & *v*) [inherited]

Assemble side (edge or face) vector into global one.

Parameters

in	v	Global vector (Vect instance)
----	-----	-------------------------------

Warning

The side pointer is given by the global variable `theSide`

void DGElementAssembly (Matrix< real.t > * A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
---	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SkSMatrix< real.t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

A	Global matrix stored as an SkSMatrix instance
---	---

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SkMatrix< real.t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SpMatrix< real.t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	<i>A</i>	Global matrix stored as an SpMatrix instance
----	----------	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (TrMatrix< real.t > & *A*) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	<i>A</i>	Global matrix stored as an TrMatrix instance
----	----------	--

Warning

The element pointer is given by the global variable `theElement`

void AxbAssembly (const Element & *el*, const Vect< real.t > & *x*, Vect< real.t > & *b*)
[inherited]

Assemble product of element matrix by element vector into global vector.

Parameters

in	<i>el</i>	Reference to Element instance
in	<i>x</i>	Global vector to multiply by (Vect instance)
out	<i>b</i>	Global vector to add (Vect instance)

void AxbAssembly (const Side & *sd*, const Vect< real.t > & *x*, Vect< real.t > & *b*)
[inherited]

Assemble product of side matrix by side vector into global vector.

Parameters

in	<i>sd</i>	Reference to Side instance
in	<i>x</i>	Global vector to multiply by (Vect instance)
out	<i>b</i>	Global vector (Vect instance)

real.t setMaterialProperty (const string & *exp*, const string & *prop*) [inherited]

Define a material property by an algebraic expression.

Parameters

in	<i>exp</i>	Algebraic expression
in	<i>prop</i>	Property name

Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

Mesh& getMesh () const [inherited]

Return reference to Mesh instance.

Returns

Reference to Mesh instance

void setSolver (Iteration *ls*, Preconditioner *pc* = *IDENT_PREC*) [inherited]

Choose solver for the linear system.

Parameters

in	<i>ls</i>	<p>Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER</p> <ul style="list-style-type: none"> • DIRECT_SOLVER, Use a facorization solver [default] • CG_SOLVER, Conjugate Gradient iterative solver • CGS_SOLVER, Squared Conjugate Gradient iterative solver • BICG_SOLVER, BiConjugate Gradient iterative solver • BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver • GMRES_SOLVER, GMRES iterative solver • QMR_SOLVER, QMR iterative solver
in	<i>pc</i>	<p>Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:</p> <ul style="list-style-type: none"> • IDENT_PREC, Identity preconditioner (no preconditioning [default]) • DIAG_PREC, Diagonal preconditioner • ILU_PREC, Incomplete LU factorization preconditioner

int SolveLinearSystem (Matrix< real_t > * A, Vect< real_t > & b, Vect< real_t > & x)
 [inherited]

Solve the linear system.

Parameters

in	<i>A</i>	Pointer to matrix of the system (Instance of class SpMatrix)
in	<i>b</i>	Vector containing right-hand side
in,out	<i>x</i>	Vector containing initial guess of solution on input, actual solution on output

7.10.4 Member Data Documentation

LocalVect<real_t,NEE_> ePrev [inherited]


LocalVect instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

7.11 DC3DAT3 Class Reference

Builds finite element arrays for thermal diffusion and convection in 3-D domains with axisymmetry using 3-Node triangles.

Inheritance diagram for DC3DAT3:

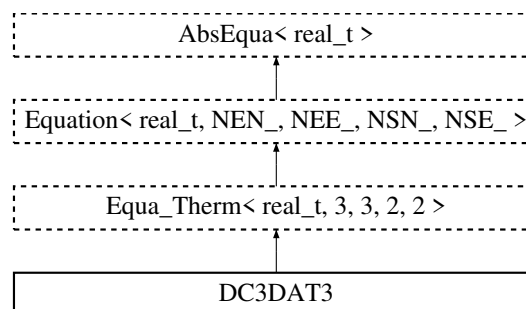

Public Member Functions

- **DC3DAT3 ()**
Default Constructor.
- **DC3DAT3 (const Element *el)**
Constructor for an element.
- **DC3DAT3 (const Side *sd)**
Constructor for a boundary side.
- **DC3DAT3 (const Element *el, const Vect< real_t > &u, real_t time=0.)**
Constructor for an element (transient case).
- **DC3DAT3 (const Element *el, const Vect< real_t > &u, real_t time, real_t deltat, int scheme)**
Constructor for an element (transient case) with specification of time integration scheme.
- **DC3DAT3 (const Side *sd, const Vect< real_t > &u, real_t time=0.)**
Constructor for a boundary side (transient case).

- **DC3DAT3** (const **Side** *sd, const **Vect**< **real_t** > &u, **real_t** time, **real_t** deltat, int scheme)
Constructor for a side (transient case) with specification of time integration scheme.
- **~DC3DAT3** ()
Destructor.
- void **LCapacityToLHS** (**real_t** coef=1)
Add lumped capacity matrix to left-hand side after multiplying it by coefficient coef.
- void **LCapacityToRHS** (**real_t** coef=1)
Add lumped capacity contribution to right-hand side after multiplying it by coefficient coef.
- void **LCapacity** (**real_t** coef=1)
Add lumped capacity contribution to left and right-hand sides after multiplying it by coefficient coef
- void **CapacityToLHS** (**real_t** coef=1)
Add Consistent capacity matrix to left-hand side after multiplying it by coefficient coef
- void **CapacityToRHS** (**real_t** coef=1)
Add Consistent capacity contribution to right-hand side after multiplying it by coefficient coef.
- void **Capacity** (**real_t** coef=1)
Add Consistent capacity contribution to left and right-hand sides after multiplying it by coefficient coef.
- void **Diffusion** (**real_t** coef=1)
Add diffusion matrix to left-hand side after multiplying it by coefficient coef
- void **Diffusion** (const **LocalMatrix**< **real_t**, 2, 2 > &diff, **real_t** coef=1)
Add diffusion matrix to left-hand side after multiplying it by coefficient coef
- void **DiffusionToRHS** (**real_t** coef=1)
Add diffusion contribution to right-hand side after multiplying it by coefficient coef
- void **BodyRHS** (**UserData**< **real_t** > &ud)
Add body right-hand side term to right-hand side after multiplying it by coefficient coef
- void **BodyRHS** (const **Vect**< **real_t** > &b, int opt=GLOBAL_ARRAY)
Add body right-hand side term to right hand side.
- void **BoundaryRHS** (**real_t** flux)
Add boundary right-hand side term to right hand side.
- void **BoundaryRHS** (const **Vect**< **real_t** > &sf, int opt=GLOBAL_ARRAY)
Add boundary right-hand side term to right hand side after multiplying it by coefficient coef
- **Point**< **real_t** > & **Grad** (const **Vect**< **real_t** > &u)
Return gradient of a vector in element.
- void **build** ()
Build the linear system without solving.
- virtual void **setStab** ()
Set stabilized formulation.
- void **setLumpedCapacity** ()
Add lumped capacity contribution to left and right-hand sides taking into account time integration scheme.
- void **setCapacity** ()
Add consistent capacity contribution to left and right-hand sides taking into account time integration scheme.
- void **setDiffusion** ()
Add diffusion contribution to left and/or right-hand side taking into account time integration scheme.
- virtual void **Convection** (**real_t** coef=1.)
Add convection term to left-hand side.
- virtual void **ConvectionToRHS** (**real_t** coef=1.)
Add convection term to right-hand side.

- void **setConvection** ()
Add convection contribution to left and/or right-hand side taking into account time integration scheme.
- void **build** (**TimeStepping** &s)
Build the linear system of equations.
- void **build** (**EigenProblemSolver** &e)
Build the linear system for an eigenvalue problem.
- int **runTransient** ()
Run one time step.
- int **runOneTimeStep** ()
Run one time step.
- int **run** ()
Run the equation.
- void **setRhoCp** (const **real_t** &rhocp)
Set product of Density by Specific heat (constants)
- void **setConductivity** (const **real_t** &diff)
Set (constant) thermal conductivity.
- void **RhoCp** (const string &exp)
Set product of Density by Specific heat given by an algebraic expression.
- void **Conduc** (const string &exp)
Set thermal conductivity given by an algebraic expression.
- void **updateBC** (const **Element** &el, const **Vect**< **real_t** > &bc)
Update Right-Hand side by taking into account essential boundary conditions.
- void **updateBC** (const **Vect**< **real_t** > &bc)
Update Right-Hand side by taking into account essential boundary conditions.
- void **DiagBC** (int dof.type=NODE.DOF, int dof=0)
Update element matrix to impose bc by diagonalization technique.
- void **LocalNodeVector** (**Vect**< **real_t** > &b)
Localize Element Vector from a Vect instance.
- void **ElementNodeVector** (const **Vect**< **real_t** > &b, **LocalVect**< **real_t**, **NEE_** > &be)
Localize Element Vector from a Vect instance.
- void **ElementNodeVector** (const **Vect**< **real_t** > &b, **LocalVect**< **real_t**, **NEN_** > &be, int dof)
Localize Element Vector from a Vect instance.
- void **ElementNodeVectorSingleDOF** (const **Vect**< **real_t** > &b, **LocalVect**< **real_t**, **NEN_** > &be)
Localize Element Vector from a Vect instance.
- void **ElementSideVector** (const **Vect**< **real_t** > &b, **LocalVect**< **real_t**, **NSE_** > &be)
Localize Element Vector from a Vect instance.
- void **ElementVector** (const **Vect**< **real_t** > &b, int dof.type=NODE.FIELD, int flag=0)
Localize Element Vector.
- void **SideVector** (const **Vect**< **real_t** > &b)
Localize Side Vector.
- void **ElementNodeCoordinates** ()
Localize coordinates of element nodes.
- void **SideNodeCoordinates** ()
Localize coordinates of side nodes.
- void **ElementAssembly** (**Matrix**< **real_t** > *A)
Assemble element matrix into global one.

- void [ElementAssembly](#) (PETScMatrix< real.t > &A)
Assemble element matrix into global one.
- void [ElementAssembly](#) (PETScVect< real.t > &b)
Assemble element right-hand side vector into global one.
- void [ElementAssembly](#) (BMatrix< real.t > &A)
Assemble element matrix into global one.
- void [ElementAssembly](#) (SkSMatrix< real.t > &A)
Assemble element matrix into global one.
- void [ElementAssembly](#) (SkMatrix< real.t > &A)
Assemble element matrix into global one.
- void [ElementAssembly](#) (SpMatrix< real.t > &A)
Assemble element matrix into global one.
- void [ElementAssembly](#) (TrMatrix< real.t > &A)
Assemble element matrix into global one.
- void [ElementAssembly](#) (Vect< real.t > &v)
Assemble element vector into global one.
- void [SideAssembly](#) (PETScMatrix< real.t > &A)
Assemble side matrix into global one.
- void [SideAssembly](#) (PETScVect< real.t > &b)
Assemble side right-hand side vector into global one.
- void [SideAssembly](#) (Matrix< real.t > *A)
Assemble side (edge or face) matrix into global one.
- void [SideAssembly](#) (SkSMatrix< real.t > &A)
Assemble side (edge or face) matrix into global one.
- void [SideAssembly](#) (SkMatrix< real.t > &A)
Assemble side (edge or face) matrix into global one.
- void [SideAssembly](#) (SpMatrix< real.t > &A)
Assemble side (edge or face) matrix into global one.
- void [SideAssembly](#) (Vect< real.t > &v)
Assemble side (edge or face) vector into global one.
- void [DGElementAssembly](#) (Matrix< real.t > *A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void [DGElementAssembly](#) (SkSMatrix< real.t > &A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void [DGElementAssembly](#) (SkMatrix< real.t > &A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void [DGElementAssembly](#) (SpMatrix< real.t > &A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void [DGElementAssembly](#) (TrMatrix< real.t > &A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void [AxbAssembly](#) (const [Element](#) &el, const Vect< real.t > &x, Vect< real.t > &b)
Assemble product of element matrix by element vector into global vector.
- void [AxbAssembly](#) (const [Side](#) &sd, const Vect< real.t > &x, Vect< real.t > &b)
Assemble product of side matrix by side vector into global vector.
- size_t [getNbNodes](#) () const
Return number of element nodes.

- `size_t getNbEq ()` const
Return number of element equations.
- `void setInitialSolution (const Vect< real_t > &u)`
Set initial solution (previous time step)
- `real_t setMaterialProperty (const string &exp, const string &prop)`
Define a material property by an algebraic expression.
- `void setMesh (Mesh &m)`
Define mesh and renumber DOFs after removing imposed ones.
- `Mesh & getMesh ()` const
Return reference to Mesh instance.
- `LinearSolver< real_t > & getLinearSolver ()`
Return reference to linear solver instance.
- `void setSolver (Iteration ls, Preconditioner pc=IDENT_PREC)`
Choose solver for the linear system.
- `int SolveLinearSystem (Matrix< real_t > *A, Vect< real_t > &b, Vect< real_t > &x)`
Solve the linear system.

Public Attributes

- `LocalMatrix< real_t, NEE_, NEE_ > eMat`
LocalMatrix instance containing local matrix associated to current element.
- `LocalMatrix< real_t, NSE_, NSE_ > sMat`
LocalMatrix instance containing local matrix associated to current side.
- `LocalVect< real_t, NEE_ > ePrev`
LocalVect instance containing local vector associated to current element.
- `LocalVect< real_t, NEE_ > eRHS`
LocalVect instance containing local right-hand side vector associated to current element.
- `LocalVect< real_t, NEE_ > eRes`
LocalVect instance containing local residual vector associated to current element.
- `LocalVect< real_t, NSE_ > sRHS`
LocalVect instance containing local right-hand side vector associated to current side.

Protected Member Functions

- `void setMaterial ()`
Set material properties.
- `void Init (const Element *el)`
Set element arrays to zero.
- `void Init (const Side *sd)`
Set side arrays to zero.

7.11.1 Detailed Description

Builds finite element arrays for thermal diffusion and convection in 3-D domains with axisymmetry using 3-Node triangles.

Note that members calculating element arrays have as an argument a real coef that will be multiplied by the contribution of the current element. This makes possible testing different algorithms.

7.11.2 Constructor & Destructor Documentation

DC3DAT3 ()

Default Constructor.

Constructs an empty equation.

DC3DAT3 (const Element * *el*)

Constructor for an element.

Parameters

in	<i>el</i>	Pointer to element.
----	-----------	---------------------

DC3DAT3 (const Side * *sd*)

Constructor for a boundary side.

Parameters

in	<i>sd</i>	Pointer to side.
----	-----------	------------------

DC3DAT3 (const Element * *el*, const Vect< real.t > & *u*, real.t *time* = 0.)

Constructor for an element (transient case).

Parameters

in	<i>el</i>	Pointer to element
in	<i>u</i>	Vect instance that contains solution at previous time step
in	<i>time</i>	Current time value [Default: 0]

DC3DAT3 (const Element * *el*, const Vect< real.t > & *u*, real.t *time*, real.t *deltat*, int *scheme*)

Constructor for an element (transient case) with specification of time integration scheme.

Parameters

in	<i>el</i>	Pointer to element.
in	<i>u</i>	Vect instance that contains solution at previous time step.
in	<i>time</i>	Current time value.
in	<i>deltat</i>	Value of time step
in	<i>scheme</i>	Time Integration Scheme (): <ul style="list-style-type: none"> • FORWARD_EULER for Forward Euler scheme, BACKWARD_EULER for Backward Euler scheme, • CRANK_NICOLSON for Crank-Nicolson Euler scheme.

DC3DAT3 (const Side * *sd*, const Vect< real.t > & *u*, real.t *time* = 0.)

Constructor for a boundary side (transient case).

Parameters

in	<i>sd</i>	Pointer to side
in	<i>u</i>	Vect instance that contains solution at previous time step
in	<i>time</i>	Current time value [Default: 0]

DC3DAT3 (const Side * *sd*, const Vect< real.t > & *u*, real.t *time*, real.t *deltat*, int *scheme*)

Constructor for a side (transient case) with specification of time integration scheme.

Parameters

in	<i>sd</i>	Pointer to side
in	<i>u</i>	Vect instance that contains solution at previous time step.
in	<i>time</i>	Current time value.
in	<i>deltat</i>	Value of time step
in	<i>scheme</i>	Time Integration Scheme (enumerated values) : <ul style="list-style-type: none"> • FORWARD_EULER: Forward Euler scheme • BACKWARD_EULER: Backward Euler scheme • CRANK_NICOLSON: Crank-Nicolson Euler scheme

7.11.3 Member Function Documentation

void LCapacityToLHS (real.t *coef* = 1) [virtual]

Add lumped capacity matrix to left-hand side after multiplying it by coefficient *coef*.

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [Default: 1].
----	-------------	---

Reimplemented from [Equa.Therm< real.t, 3, 3, 2, 2 >](#).

void LCapacityToRHS (real.t *coef* = 1) [virtual]

Add lumped capacity contribution to right-hand side after multiplying it by coefficient *coef*.

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [Default: 1].
----	-------------	---

Reimplemented from [Equa.Therm< real.t, 3, 3, 2, 2 >](#).

void LCapacity (real_t coef = 1)

Add lumped capacity contribution to left and right-hand sides after multiplying it by coefficient *coef*

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [Default: 1].
----	-------------	---

void CapacityToLHS (real_t coef = 1) [virtual]

Add Consistent capacity matrix to left-hand side after multiplying it by coefficient *coef*

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [Default: 1].
----	-------------	---

Reimplemented from [Equa_Therm< real_t, 3, 3, 2, 2 >](#).

void CapacityToRHS (real_t coef = 1) [virtual]

Add Consistent capacity contribution to right-hand side after multiplying it by coefficient *coef*.

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [Default: 1].
----	-------------	---

Reimplemented from [Equa_Therm< real_t, 3, 3, 2, 2 >](#).

void Capacity (real_t coef = 1)

Add Consistent capacity contribution to left and right-hand sides after multiplying it by coefficient *coef*.

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [Default: 1].
----	-------------	---

void Diffusion (real_t coef = 1) [virtual]

Add diffusion matrix to left-hand side after multiplying it by coefficient *coef*

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [Default: 1].
----	-------------	---

Reimplemented from [Equa_Therm< real_t, 3, 3, 2, 2 >](#).

void Diffusion (const LocalMatrix< real_t, 2, 2 > & diff, real_t coef = 1)

Add diffusion matrix to left-hand side after multiplying it by coefficient coef
Case where the diffusivity matrix is given as an argument

Parameters

in	<i>diff</i>	Instance of class DMatrix containing diffusivity matrix
in	<i>coef</i>	Coefficient to multiply by added term [Default: 1]

void DiffusionToRHS (real_t coef = 1) [virtual]

Add diffusion contribution to right-hand side after multiplying it by coefficient coef
To be used for explicit diffusion term

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [Default: 1]
----	-------------	--

Reimplemented from [Equa_Therm< real_t, 3, 3, 2, 2 >](#).

void BodyRHS (UserData< real_t > & ud)

Add body right-hand side term to right-hand side after multiplying it by coefficient coef

Parameters

in	<i>ud</i>	Instance of UserData or of an inherited class. Contains a member function that provides body source.
----	-----------	--

void BodyRHS (const Vect< real_t > & b, int opt = GLOBAL_ARRAY) [virtual]

Add body right-hand side term to right hand side.

Parameters

in	<i>b</i>	Local vector (of size 3) containing source at element nodes.
in	<i>opt</i>	Vector is local (LOCAL_ARRAY) with size 3 or global (GLOBAL_ARRAY) with size = Number of nodes [Default: GLOBAL_ARRAY].

Reimplemented from [Equa_Therm< real_t, 3, 3, 2, 2 >](#).

void BoundaryRHS (real_t flux)

Add boundary right-hand side term to right hand side.

Parameters

in	<i>flux</i>	Value of flux to impose on the side
----	-------------	-------------------------------------

void BoundaryRHS (const Vect< real_t > & sf, int opt = GLOBAL_ARRAY) [virtual]

Add boundary right-hand side term to right hand side after multiplying it by coefficient coef

Parameters

in	<i>sf</i>	Vector containing source at side nodes
in	<i>opt</i>	Vector is local (LOCAL_ARRAY) with size 2 or global (GLOBAL_ARRAY) with size = Number of nodes [Default: GLOBAL_ARRAY].

Reimplemented from [Equa.Therm< real_t, 3, 3, 2, 2 >](#).

Point<real_t>& Grad (const Vect< real_t > & u)

Return gradient of a vector in element.

Parameters

in	<i>u</i>	Vector for which gradient is computed.
----	----------	--

virtual void setStab () [virtual], [inherited]

Set stabilized formulation.

Stabilized variational formulations are to be used when the Peclet number is large.
By default, no stabilization is used.

void build (TimeStepping & s) [inherited]

Build the linear system of equations.

Before using this function, one must have properly selected appropriate options for:

- The choice of a steady state or transient analysis. By default, the analysis is stationary
- In the case of transient analysis, the choice of a time integration scheme and a lumped or consistent capacity matrix. If transient analysis is chosen, the lumped capacity matrix option is chosen by default, and the implicit Euler scheme is used by default for time integration.

Parameters

in	<i>s</i>	Reference to used TimeStepping instance
----	----------	---

void build (EigenProblemSolver & e) [inherited]

Build the linear system for an eigenvalue problem.

Parameters

in	<i>e</i>	Reference to used EigenProblemSolver instance
----	----------	---

int runTransient () [inherited]

Run one time step.

This function performs one time step in equation solving. It is to be used only if a *TRANSIENT* analysis is required.

Returns

Return error from the linear system solver

int runOneTimeStep () [inherited]

Run one time step.

This function performs one time step in equation solving. It is identical to the function `runTransient`.

Returns

Return error from the linear system solver

int run () [inherited]

Run the equation.

If the analysis (see function `setAnalysis`) is *STEADY_STATE*, then the function solves the stationary equation.

If the analysis is *TRANSIENT*, then the function performs time stepping until the final time is reached.

void updateBC (const Element & el, const Vect< real_t > & bc) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>el</i>	Reference to current element instance
in	<i>bc</i>	Vector that contains imposed values at all DOFs

void updateBC (const Vect< real_t > & bc) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>bc</i>	Vector that contains imposed values at all DOFs
----	-----------	---

Remarks

The current element is pointed by `_theElement`

void DiagBC (int dof_type = NODE_DOF, int dof = 0) [inherited]

Update element matrix to impose bc by diagonalization technique.

Parameters

in	<i>dof_type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • <code>NODE_FIELD</code>, DOFs are supported by nodes [Default] • <code>ELEMENT_FIELD</code>, DOFs are supported by elements • <code>SIDE_FIELD</code>, DOFs are supported by sides
in	<i>dof</i>	DOF setting: <ul style="list-style-type: none"> • <code>= 0</code>, All DOFs are taken into account [Default] • <code>!= 0</code>, Only DOF No. <i>dof</i> is handled in the system

void LocalNodeVector (Vect< real.t > & b) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Reference to global vector to be localized. The resulting local vector can be accessed by attribute <i>ePrev</i> . This member function is to be used if a constructor with Element was invoked.
----	----------	--

void ElementNodeVector (const Vect< real.t > & b, LocalVect< real.t, NEE_ > & be)
[inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

All degrees of freedom are transferred to the local vector

void ElementNodeVector (const Vect< real.t > & b, LocalVect< real.t, NEN_ > & be, int dof) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.
in	<i>dof</i>	Degree of freedom to transfer to the local vector

Remarks

Only yhe dega dof is transferred to the local vector

void ElementNodeVectorSingleDOF (const Vect< real_t > & b, LocalVect< real_t, NEN_ > & be) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

Vector b is assumed to contain only one degree of freedom by node.

void ElementSideVector (const Vect< real_t > & b, LocalVect< real_t, NSE_ > & be) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is

void ElementVector (const Vect< real_t > & b, int dof_type = NODE_FIELD, int flag = 0) [inherited]

Localize Element Vector.

Parameters

in	<i>b</i>	Global vector to be localized
in	<i>dof_type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • NODE_FIELD, DOFs are supported by nodes [Default] • ELEMENT_FIELD, DOFs are supported by elements • SIDE_FIELD, DOFs are supported by sides
in	<i>flag</i>	Option to set: <ul style="list-style-type: none"> • = 0, All DOFs are taken into account [Default] • != 0, Only DOF number dof is handled in the system The resulting local vector can be accessed by attribute ePrev.

Remarks

This member function is to be used if a constructor with Element was invoked. It uses the Element pointer `_theElement`

void SideVector (const Vect< real_t > & b) [inherited]

Localize Side Vector.

Parameters

in	<i>b</i>	Global vector to be localized <ul style="list-style-type: none"> • <code>NODE_FIELD</code>, DOFs are supported by nodes [default] • <code>ELEMENT_FIELD</code>, DOFs are supported by elements • <code>SIDE_FIELD</code>, DOFs are supported by sides The resulting local vector can be accessed by attribute <code>ePrev</code> .
----	----------	---

Remarks

This member function is to be used if a constructor with Side was invoked. It uses the Side pointer `_theSide`

void ElementNodeCoordinates () [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array `_x[0]`, `_x[1]`, ... which are instances of class [Point<real_t>](#)

Remarks

This member function uses the Side pointer `_theSide`

void SideNodeCoordinates () [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array `_x[0]`, `_x[1]`, ... which are instances of class [Point<real_t>](#)

Remarks

This member function uses the Element pointer `_theElement`

void ElementAssembly (Matrix< real_t > * A) [inherited]

Assemble element matrix into global one.

Parameters

A	Pointer to global matrix (abstract class: can be any of classes <code>SkSMatrix</code> , <code>SkMatrix</code> , <code>SpMatrix</code>)
---	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScMatrix< real_t > &A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Reference to global matrix
----------	----------------------------

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScVect< real_t > &b) [inherited]

Assemble element right-hand side vector into global one.

Parameters

<i>b</i>	Reference to global right-hand side vector
----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (BMatrix< real_t > &A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Global matrix stored as a BMatrix instance
----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkSMatrix< real_t > &A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Global matrix stored as an SkSMatrix instance
----------	---

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkMatrix< real.t > & A) [inherited]

Assemble element matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an SkMatrix instance
----	----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SpMatrix< real.t > & A) [inherited]

Assemble element matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an SpMatrix instance
----	----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (TrMatrix< real.t > & A) [inherited]

Assemble element matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an TrMatrix instance
----	----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (Vect< real.t > & v) [inherited]

Assemble element vector into global one.

Parameters

in	<i>v</i>	Global vector (Vect instance)
----	----------	-------------------------------

Warning

The element pointer is given by the global variable `theElement`

void SideAssembly (PETScMatrix< real_t > &A) [inherited]

Assemble side matrix into global one.

Parameters

<i>A</i>	Reference to global matrix
----------	----------------------------

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (PETScVect< real_t > &b) [inherited]

Assemble side right-hand side vector into global one.

Parameters

<i>b</i>	Reference to global right-hand side vector
----------	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (Matrix< real_t > *A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

<i>A</i>	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
----------	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SkSMatrix< real_t > &A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an SkSMatrix instance
----	----------	---

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SkMatrix< real.t > & A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SpMatrix< real.t > & A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	A	Global matrix stored as an SpMatrix instance
----	---	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (Vect< real.t > & v) [inherited]

Assemble side (edge or face) vector into global one.

Parameters

in	v	Global vector (Vect instance)
----	---	-------------------------------

Warning

The side pointer is given by the global variable `theSide`

void DGElementAssembly (Matrix< real.t > * A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
---	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SkSMatrix< real_t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

<code>A</code>	Global matrix stored as an SkSMatrix instance
----------------	---

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SkMatrix< real_t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

<code>in</code>	<code>A</code>	Global matrix stored as an SkMatrix instance
-----------------	----------------	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SpMatrix< real_t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

<code>in</code>	<code>A</code>	Global matrix stored as an SpMatrix instance
-----------------	----------------	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (TrMatrix< real_t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

<code>in</code>	<code>A</code>	Global matrix stored as an TrMatrix instance
-----------------	----------------	--

Warning

The element pointer is given by the global variable `theElement`

void AxbAssembly (const Element & *el*, const Vect< real_t > & *x*, Vect< real_t > & *b*)
[inherited]

Assemble product of element matrix by element vector into global vector.

Parameters

in	<i>el</i>	Reference to Element instance
in	<i>x</i>	Global vector to multiply by (Vect instance)
out	<i>b</i>	Global vector to add (Vect instance)

void AxbAssembly (const Side & *sd*, const Vect< real_t > & *x*, Vect< real_t > & *b*)
[inherited]

Assemble product of side matrix by side vector into global vector.

Parameters

in	<i>sd</i>	Reference to Side instance
in	<i>x</i>	Global vector to multiply by (Vect instance)
out	<i>b</i>	Global vector (Vect instance)

real_t setMaterialProperty (const string & *exp*, const string & *prop*) [inherited]

Define a material property by an algebraic expression.

Parameters

in	<i>exp</i>	Algebraic expression
in	<i>prop</i>	Property name

Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

Mesh& getMesh () const [inherited]

Return reference to Mesh instance.

Returns

Reference to Mesh instance

void setSolver (Iteration *ls*, Preconditioner *pc* = *IDENT_PREC*) [inherited]

Choose solver for the linear system.

Parameters

in	<i>ls</i>	<p>Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER</p> <ul style="list-style-type: none"> • DIRECT_SOLVER, Use a facorization solver [default] • CG_SOLVER, Conjugate Gradient iterative solver • CGS_SOLVER, Squared Conjugate Gradient iterative solver • BICG_SOLVER, BiConjugate Gradient iterative solver • BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver • GMRES_SOLVER, GMRES iterative solver • QMR_SOLVER, QMR iterative solver
in	<i>pc</i>	<p>Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:</p> <ul style="list-style-type: none"> • IDENT_PREC, Identity preconditioner (no preconditioning [default]) • DIAG_PREC, Diagonal preconditioner • ILU_PREC, Incomplete LU factorization preconditioner

int SolveLinearSystem (Matrix< real_t > * *A*, Vect< real_t > & *b*, Vect< real_t > & *x*)
[inherited]

Solve the linear system.

Parameters

in	<i>A</i>	Pointer to matrix of the system (Instance of class SpMatrix)
in	<i>b</i>	Vector containing right-hand side
in,out	<i>x</i>	Vector containing initial guess of solution on input, actual solution on output

7.11.4 Member Data Documentation

LocalVect<real_t,NEE_> ePrev [inherited]


LocalVect instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

7.12 DC3DT4 Class Reference

Builds finite element arrays for thermal diffusion and convection in 3-D domains using 4-Node tetrahedra.

Inheritance diagram for DC3DT4:

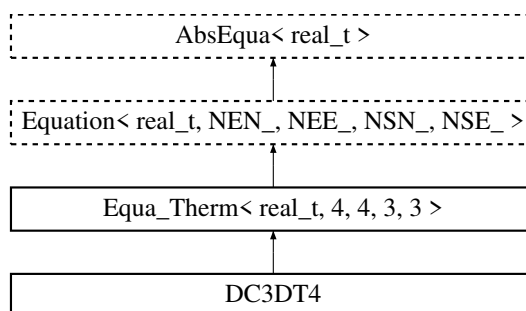

Public Member Functions

- **DC3DT4** ()
Default Constructor.
- **DC3DT4** (const **Element** *el)
Constructor for an element.
- **DC3DT4** (const **Side** *sd)
Constructor for a boundary side.
- **DC3DT4** (const **Element** *el, const **Vect**< **real_t** > &u, **real_t** time=0.)
Constructor for an element (transient case).
- **DC3DT4** (const **Side** *sd, const **Vect**< **real_t** > &u, **real_t** time=0.)
Constructor for a boundary side (transient case).
- **DC3DT4** (const **Element** *el, const **Vect**< **real_t** > &u, **real_t** time, **real_t** deltat, int scheme)
Constructor for an element (transient case) with specification of time integration scheme.
- **DC3DT4** (const **Side** *sd, const **Vect**< **real_t** > &u, **real_t** time, **real_t** deltat, int scheme)
Constructor for a side (transient case) with specification of time integration scheme.
- **~DC3DT4** ()
Destructor.
- void **build** ()
Build the linear system without solving.
- void **LCapacity** (**real_t** coef=1.)
Add lumped capacity contribution to left and right-hand sides after multiplying it by coefficient coef.
- void **LCapacityToLHS** (**real_t** coef=1)
Add lumped capacity matrix to left-hand side after multiplying it by coefficient coef
- void **LCapacityToRHS** (**real_t** coef=1)
Add lumped capacity contribution to right-hand side after multiplying it by coefficient coef
- void **Capacity** (**real_t** coef=1)
Add Consistent capacity contribution to left and right-hand sides after multiplying it by coefficient coef.
- void **CapacityToLHS** (**real_t** coef=1)
Add consistent capacity matrix to left-hand side after multiplying it by coefficient coef
- void **CapacityToRHS** (**real_t** coef=1)

- Add consistent capacity contribution to right-hand side after multiplying it by coefficient `coef`*

 - void **Diffusion** (**real.t** coef=1)

Add diffusion matrix to left hand side after multiplying it by coefficient `coef`.

 - void **Diffusion** (const **DMatrix**< **real.t** > &diff, **real.t** coef=1)

Add diffusion matrix to left hand side after multiplying it by coefficient `coef`

 - void **DiffusionToRHS** (**real.t** coef=1)

Add diffusion contribution to right hand side after multiplying it by coefficient `coef`

 - void **Convection** (**real.t** coef=1)

Add convection matrix to left-hand side after multiplying it by coefficient `coef`

 - void **Convection** (const **Point**< **real.t** > &v, **real.t** coef=1)

Add convection matrix to left-hand side after multiplying it by coefficient `coef`

 - void **Convection** (const **Vect**< **Point**< **real.t** > > &v, **real.t** coef=1)

Add convection matrix to left-hand side after multiplying it by coefficient `coef`

 - void **RHS_Convection** (const **Point**< **real.t** > &v, **real.t** coef=1.)

Add convection contribution to right-hand side after multiplying it by coefficient `coef`

 - void **BodyRHS** (**UserData**< **real.t** > &ud, **real.t** coef=1)

Add body right-hand side term to right hand side after multiplying it by coefficient `coef`

 - void **BodyRHS** (const **Vect**< **real.t** > &b, int opt=GLOBAL_ARRAY)

Add body right-hand side term to right hand side.

 - void **BoundaryRHS** (**UserData**< **real.t** > &ud, **real.t** coef=1)

Add boundary right-hand side term to right hand side after multiplying it by coefficient `coef`

 - void **BoundaryRHS** (const **Vect**< **real.t** > &b, int opt=GLOBAL_ARRAY)

Add boundary right-hand side term to right hand side after multiplying it by coefficient `coef`

 - void **BoundaryRHS** (**real.t** flux)

Add boundary right-hand side flux to right hand side.

 - **Point**< **real.t** > **Flux** () const

Return (constant) heat flux in element.

 - **Point**< **real.t** > **Grad** (const **Vect**< **real.t** > &u) const

Return gradient of vector `u` in element. `u` is a local vector.

 - void **Periodic** (**real.t** coef=1.e20)

Add contribution of periodic boundary condition (by a penalty technique).

 - virtual void **setStab** ()

Set stabilized formulation.

 - void **setLumpedCapacity** ()

Add lumped capacity contribution to left and right-hand sides taking into account time integration scheme.

 - void **setCapacity** ()

Add consistent capacity contribution to left and right-hand sides taking into account time integration scheme.

 - void **setDiffusion** ()

Add diffusion contribution to left and/or right-hand side taking into account time integration scheme.

 - virtual void **ConvectionToRHS** (**real.t** coef=1.)

Add convection term to right-hand side.

 - void **setConvection** ()

Add convection contribution to left and/or right-hand side taking into account time integration scheme.

 - void **build** (**TimeStepping** &ts)

Build the linear system of equations.

 - void **build** (**EigenProblemSolver** &e)

- Build the linear system for an eigenvalue problem.*

 - int `runTransient` ()
Run one time step.
 - int `runOneTimeStep` ()
Run one time step.
 - int `run` ()
Run the equation.
 - void `setRhoCp` (const `real_t` &rhocp)
Set product of Density by Specific heat (constants)
 - void `setConductivity` (const `real_t` &diff)
Set (constant) thermal conductivity.
 - void `RhoCp` (const string &exp)
Set product of Density by Specific heat given by an algebraic expression.
 - void `Conduc` (const string &exp)
Set thermal conductivity given by an algebraic expression.
 - void `updateBC` (const `Element` &el, const `Vect`< `real_t` > &bc)
Update Right-Hand side by taking into account essential boundary conditions.
 - void `updateBC` (const `Vect`< `real_t` > &bc)
Update Right-Hand side by taking into account essential boundary conditions.
 - void `DiagBC` (int dof_type=NODE.DOF, int dof=0)
Update element matrix to impose bc by diagonalization technique.
 - void `LocalNodeVector` (`Vect`< `real_t` > &b)
Localize Element Vector from a Vect instance.
 - void `ElementNodeVector` (const `Vect`< `real_t` > &b, `LocalVect`< `real_t`, NEE_ > &be)
Localize Element Vector from a Vect instance.
 - void `ElementNodeVector` (const `Vect`< `real_t` > &b, `LocalVect`< `real_t`, NEN_ > &be, int dof)
Localize Element Vector from a Vect instance.
 - void `ElementNodeVectorSingleDOF` (const `Vect`< `real_t` > &b, `LocalVect`< `real_t`, NEN_ > &be)
Localize Element Vector from a Vect instance.
 - void `ElementSideVector` (const `Vect`< `real_t` > &b, `LocalVect`< `real_t`, NSE_ > &be)
Localize Element Vector from a Vect instance.
 - void `ElementVector` (const `Vect`< `real_t` > &b, int dof_type=NODE.FIELD, int flag=0)
Localize Element Vector.
 - void `SideVector` (const `Vect`< `real_t` > &b)
Localize Side Vector.
 - void `ElementNodeCoordinates` ()
Localize coordinates of element nodes.
 - void `SideNodeCoordinates` ()
Localize coordinates of side nodes.
 - void `ElementAssembly` (`Matrix`< `real_t` > *A)
Assemble element matrix into global one.
 - void `ElementAssembly` (`PETScMatrix`< `real_t` > &A)
Assemble element matrix into global one.
 - void `ElementAssembly` (`PETScVect`< `real_t` > &b)
Assemble element right-hand side vector into global one.
 - void `ElementAssembly` (`BMatrix`< `real_t` > &A)

- Assemble element matrix into global one.*
 - void [ElementAssembly](#) (SkMatrix< real.t > &A)
- Assemble element matrix into global one.*
 - void [ElementAssembly](#) (SkMatrix< real.t > &A)
- Assemble element matrix into global one.*
 - void [ElementAssembly](#) (SpMatrix< real.t > &A)
- Assemble element matrix into global one.*
 - void [ElementAssembly](#) (TrMatrix< real.t > &A)
- Assemble element matrix into global one.*
 - void [ElementAssembly](#) (Vect< real.t > &v)
- Assemble element vector into global one.*
 - void [SideAssembly](#) (PETScMatrix< real.t > &A)
- Assemble side matrix into global one.*
 - void [SideAssembly](#) (PETScVect< real.t > &b)
- Assemble side right-hand side vector into global one.*
 - void [SideAssembly](#) (Matrix< real.t > *A)
- Assemble side (edge or face) matrix into global one.*
 - void [SideAssembly](#) (SkMatrix< real.t > &A)
- Assemble side (edge or face) matrix into global one.*
 - void [SideAssembly](#) (SkMatrix< real.t > &A)
- Assemble side (edge or face) matrix into global one.*
 - void [SideAssembly](#) (SpMatrix< real.t > &A)
- Assemble side (edge or face) matrix into global one.*
 - void [SideAssembly](#) (Vect< real.t > &v)
- Assemble side (edge or face) vector into global one.*
 - void [DGElementAssembly](#) (Matrix< real.t > *A)
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
 - void [DGElementAssembly](#) (SkMatrix< real.t > &A)
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
 - void [DGElementAssembly](#) (SkMatrix< real.t > &A)
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
 - void [DGElementAssembly](#) (SpMatrix< real.t > &A)
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
 - void [DGElementAssembly](#) (TrMatrix< real.t > &A)
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
 - void [AxbAssembly](#) (const [Element](#) &el, const Vect< real.t > &x, Vect< real.t > &b)
- Assemble product of element matrix by element vector into global vector.*
 - void [AxbAssembly](#) (const [Side](#) &sd, const Vect< real.t > &x, Vect< real.t > &b)
- Assemble product of side matrix by side vector into global vector.*
 - size_t [getNbNodes](#) () const
- Return number of element nodes.*
 - size_t [getNbEq](#) () const
- Return number of element equations.*
 - void [setInitialSolution](#) (const Vect< real.t > &u)
- Set initial solution (previous time step)*
 - real.t [setMaterialProperty](#) (const string &exp, const string &prop)

- *Define a material property by an algebraic expression.*
- void `setMesh (Mesh &m)`
- *Define mesh and renumber DOFs after removing imposed ones.*
- `Mesh &getMesh () const`
- *Return reference to Mesh instance.*
- `LinearSolver< real.t > &getLinearSolver ()`
- *Return reference to linear solver instance.*
- void `setSolver (Iteration ls, Preconditioner pc=IDENT_PREC)`
- *Choose solver for the linear system.*
- int `SolveLinearSystem (Matrix< real.t > *A, Vect< real.t > &b, Vect< real.t > &x)`
- *Solve the linear system.*

Public Attributes

- `LocalMatrix< real.t, NEE_, NEE_ > eMat`
- *LocalMatrix instance containing local matrix associated to current element.*
- `LocalMatrix< real.t, NSE_, NSE_ > sMat`
- *LocalMatrix instance containing local matrix associated to current side.*
- `LocalVect< real.t, NEE_ > ePrev`
- *LocalVect instance containing local vector associated to current element.*
- `LocalVect< real.t, NEE_ > eRHS`
- *LocalVect instance containing local right-hand side vector associated to current element.*
- `LocalVect< real.t, NEE_ > eRes`
- *LocalVect instance containing local residual vector associated to current element.*
- `LocalVect< real.t, NSE_ > sRHS`
- *LocalVect instance containing local right-hand side vector associated to current side.*

Protected Member Functions

- void `setMaterial ()`
- *Set material properties.*
- void `Init (const Element *el)`
- *Set element arrays to zero.*
- void `Init (const Side *sd)`
- *Set side arrays to zero.*

7.12.1 Detailed Description

Builds finite element arrays for thermal diffusion and convection in 3-D domains using 4-Node tetrahedra.

Note that members calculating element arrays have as an argument a real coef that will be multiplied by the contribution of the current element. This makes possible testing different algorithms.

7.12.2 Constructor & Destructor Documentation

`DC3DT4 ()`

Default Constructor.

Constructs an empty equation.

DC3DT4 (const Element * *el*)

Constructor for an element.

Parameters

in	<i>el</i>	Pointer to element.
----	-----------	---------------------

DC3DT4 (const Side * *sd*)

Constructor for a boundary side.

Parameters

<i>sd</i>	[in]	Pointer to side.
-----------	------	------------------

DC3DT4 (const Element * *el*, const Vect< real.t > & *u*, real.t *time* = 0.)

Constructor for an element (transient case).

Parameters

in	<i>el</i>	Pointer to element.
in	<i>u</i>	Vect instance that contains solution at previous time step.
in	<i>time</i>	Current time value [Default: 0].

DC3DT4 (const Side * *sd*, const Vect< real.t > & *u*, real.t *time* = 0.)

Constructor for a boundary side (transient case).

Parameters

in	<i>sd</i>	Pointer to side.
in	<i>u</i>	Vect instance that contains solution at previous time step.
in	<i>time</i>	Current time value [Default: 0].

DC3DT4 (const Element * *el*, const Vect< real.t > & *u*, real.t *time*, real.t *deltat*, int *scheme*)

Constructor for an element (transient case) with specification of time integration scheme.

Parameters

in	<i>el</i>	Pointer to element.
in	<i>u</i>	Vect instance that contains solution at previous time step.
in	<i>time</i>	Current time value.
in	<i>deltat</i>	Value of time step

Parameters

in	<i>scheme</i>	Time Integration Scheme: <ul style="list-style-type: none"> • FORWARD_EULER: Forward Euler scheme • BACKWARD_EULER: Backward Euler scheme • CRANK_NICOLSON: Crank-Nicolson Euler scheme
----	---------------	--

DC3DT4 (const Side * *sd*, const Vect< real.t > &*u*, real.t *time*, real.t *deltat*, int *scheme*)

Constructor for a side (transient case) with specification of time integration scheme.

Parameters

in	<i>sd</i>	Pointer to side.
in	<i>u</i>	Vect instance that contains solution at previous time step.
in	<i>time</i>	Current time value.
in	<i>deltat</i>	Value of time step
in	<i>scheme</i>	Time Integration Scheme (): <ul style="list-style-type: none"> • FORWARD_EULER: for Forward Euler scheme • BACKWARD_EULER: for Backward Euler scheme • CRANK_NICOLSON: for Crank-Nicolson Euler scheme

7.12.3 Member Function Documentation

void LCapacity (real.t *coef* = 1.)

Add lumped capacity contribution to left and right-hand sides after multiplying it by coefficient *coef*.

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [Default: 1].
----	-------------	---

void LCapacityToLHS (real.t *coef* = 1) [virtual]

Add lumped capacity matrix to left-hand side after multiplying it by coefficient *coef*

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [Default: 1].
----	-------------	---

Reimplemented from [Equa.Therm< real.t, 4, 4, 3, 3 >](#).

void LCapacityToRHS (real_t coef = 1) [virtual]

Add lumped capacity contribution to right-hand side after multiplying it by coefficient *coef*

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [Default: 1].
----	-------------	---

Reimplemented from [Equa.Therm< real_t, 4, 4, 3, 3 >](#).

void Capacity (real_t coef = 1)

Add Consistent capacity contribution to left and right-hand sides after multiplying it by coefficient *coef*.

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [Default: 1].
----	-------------	---

void CapacityToLHS (real_t coef = 1) [virtual]

Add consistent capacity matrix to left-hand side after multiplying it by coefficient *coef*

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [Default: 1].
----	-------------	---

Reimplemented from [Equa.Therm< real_t, 4, 4, 3, 3 >](#).

void CapacityToRHS (real_t coef = 1) [virtual]

Add consistent capacity contribution to right-hand side after multiplying it by coefficient *coef*

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [Default: 1].
----	-------------	---

Reimplemented from [Equa.Therm< real_t, 4, 4, 3, 3 >](#).

void Diffusion (real_t coef = 1) [virtual]

Add diffusion matrix to left hand side after multiplying it by coefficient *coef*.

Parameters

in	<i>coef</i>	Coefficient to multiply by added term (default value = 1).
----	-------------	--

Reimplemented from [Equa.Therm< real_t, 4, 4, 3, 3 >](#).

void Diffusion (const DMatrix< real.t > & diff, real.t coef = 1)

Add diffusion matrix to left hand side after multiplying it by coefficient coef
Case where the diffusivity matrix is given as an argument.

Parameters

in	<i>diff</i>	Diffusion matrix (class DMatrix).
in	<i>coef</i>	Coefficient to multiply by added term [Default: 1].

void DiffusionToRHS (real.t coef = 1) [virtual]

Add diffusion contribution to right hand side after multiplying it by coefficient coef
To be used for explicit diffusion term

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [Default: 1].
----	-------------	---

Reimplemented from [Equa.Therm< real.t, 4, 4, 3, 3 >](#).

void Convection (real.t coef = 1) [virtual]

Add convection matrix to left-hand side after multiplying it by coefficient coef
Case where velocity field has been previously defined

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [Default: 1].
----	-------------	---

Reimplemented from [Equa.Therm< real.t, 4, 4, 3, 3 >](#).

void Convection (const Point< real.t > & v, real.t coef = 1)

Add convection matrix to left-hand side after multiplying it by coefficient coef

Parameters

in	<i>v</i>	Constant velocity vector
in	<i>coef</i>	Coefficient to multiply by added term [Default: 1].

void Convection (const Vect< Point< real.t > > & v, real.t coef = 1)

Add convection matrix to left-hand side after multiplying it by coefficient coef
Case where velocity field is given by a vector v.

Parameters

in	<i>v</i>	Velocity vector.
in	<i>coef</i>	Coefficient to multiply by added term [Default: 1].

void RHS.Convection (const Point< real.t > & v, real.t coef = 1.)

Add convection contribution to right-hand side after multiplying it by coefficient coef
To be used for explicit convection term.

Parameters

in	<i>v</i>	Velocity vector.
in	<i>coef</i>	Coefficient to multiply by added term [Default: 1].

void BodyRHS (UserData< real.t > & ud, real.t coef = 1)

Add body right-hand side term to right hand side after multiplying it by coefficient coef

Parameters

in	<i>ud</i>	Instance of UserData or of an inherited class. Contains a member function that provides body source.
in	<i>coef</i>	Coefficient to multiply by added term [Default: 1].

void BodyRHS (const Vect< real.t > & b, int opt = GLOBAL_ARRAY) [virtual]

Add body right-hand side term to right hand side.

Parameters

in	<i>b</i>	Local vector containing source at element nodes.
in	<i>opt</i>	Vector is local (LOCAL_ARRAY) with size 4 or global (GLOBAL_ARRAY) with size = Number of nodes [Default: GLOBAL_ARRAY].

Reimplemented from [Equa.Therm< real.t, 4, 4, 3, 3 >](#).

void BoundaryRHS (UserData< real.t > & ud, real.t coef = 1)

Add boundary right-hand side term to right hand side after multiplying it by coefficient coef

Parameters

in	<i>ud</i>	Instance of UserData or of an inherited class. Contains a member function that provides body source.
in	<i>coef</i>	Value by which the added term is multiplied [Default: 1].

void BoundaryRHS (const Vect< real.t > & b, int opt = GLOBAL_ARRAY) [virtual]

Add boundary right-hand side term to right hand side after multiplying it by coefficient coef
Case where body source is given by a vector

Parameters

in	<i>b</i>	Vector containing source at side nodes.
in	<i>opt</i>	Vector is local (LOCAL_ARRAY) with size 3 or global (GLOBAL_ARRAY) with size = Number of nodes [Default: GLOBAL_ARRAY].

Reimplemented from [Equa.Therm< real.t, 4, 4, 3, 3 >](#).

void BoundaryRHS (real.t *flux*)

Add boundary right-hand side flux to right hand side.

Parameters

in	<i>flux</i>	Vector containing source at side nodes.
----	-------------	---

void Periodic (real.t *coef* = 1.e20)

Add contribution of periodic boundary condition (by a penalty technique).

Boundary nodes where periodic boundary conditions are to be imposed must have codes equal to PERIODIC.A on one side and PERIODIC.B on the opposite side.

Parameters

in	<i>coef</i>	Value of penalty parameter [Default: 1.e20].
----	-------------	--

virtual void setStab () [virtual], [inherited]

Set stabilized formulation.

Stabilized variational formulations are to be used when the Pclet number is large.

By default, no stabilization is used.

void build (TimeStepping & *s*) [inherited]

Build the linear system of equations.

Before using this function, one must have properly selected appropriate options for:

- The choice of a steady state or transient analysis. By default, the analysis is stationary
- In the case of transient analysis, the choice of a time integration scheme and a lumped or consistent capacity matrix. If transient analysis is chosen, the lumped capacity matrix option is chosen by default, and the implicit Euler scheme is used by default for time integration.

Parameters

in	<i>s</i>	Reference to used TimeStepping instance
----	----------	---

void build (EigenProblemSolver & *e*) [inherited]

Build the linear system for an eigenvalue problem.

Parameters

in	<i>e</i>	Reference to used EigenProblemSolver instance
----	----------	---

int runTransient () [inherited]

Run one time step.

This function performs one time step in equation solving. It is to be used only if a *TRANSIENT* analysis is required.

Returns

Return error from the linear system solver

int runOneTimeStep () [inherited]

Run one time step.

This function performs one time step in equation solving. It is identical to the function `runTransient`.

Returns

Return error from the linear system solver

int run () [inherited]

Run the equation.

If the analysis (see function `setAnalysis`) is *STEADY_STATE*, then the function solves the stationary equation.

If the analysis is *TRANSIENT*, then the function performs time stepping until the final time is reached.

void updateBC (const Element & *el*, const Vect< real_t > & *bc*) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>el</i>	Reference to current element instance
in	<i>bc</i>	Vector that contains imposed values at all DOFs

void updateBC (const Vect< real_t > & *bc*) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>bc</i>	Vector that contains imposed values at all DOFs
----	-----------	---

Remarks

The current element is pointed by `_theElement`

void DiagBC (int *dof_type* = *NODE_DOF*, int *dof* = 0) [inherited]

Update element matrix to impose bc by diagonalization technique.

Parameters

in	<i>dof_type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • <i>NODE_FIELD</i>, DOFs are supported by nodes [Default] • <i>ELEMENT_FIELD</i>, DOFs are supported by elements • <i>SIDE_FIELD</i>, DOFs are supported by sides
in	<i>dof</i>	DOF setting: <ul style="list-style-type: none"> • = 0, All DOFs are taken into account [Default] • != 0, Only DOF No. <i>dof</i> is handled in the system

void LocalNodeVector (Vect< real.t > & b) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Reference to global vector to be localized. The resulting local vector can be accessed by attribute <i>ePrev</i> . This member function is to be used if a constructor with <i>Element</i> was invoked.
----	----------	---

void ElementNodeVector (const Vect< real.t > & b, LocalVect< real.t, NEE_ > & be)
[inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

All degrees of freedom are transferred to the local vector

void ElementNodeVector (const Vect< real_t > & b, LocalVect< real_t, NEN_ > & be, int dof) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.
in	<i>dof</i>	Degree of freedom to transfer to the local vector

Remarks

Only the dega dof is transferred to the local vector

void ElementNodeVectorSingleDOF (const Vect< real_t > & b, LocalVect< real_t, NEN_ > & be) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

Vector b is assumed to contain only one degree of freedom by node.

void ElementSideVector (const Vect< real_t > & b, LocalVect< real_t, NSE_ > & be) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is

void ElementVector (const Vect< real_t > & b, int dof_type = NODE_FIELD, int flag = 0) [inherited]

Localize Element Vector.

Parameters

in	<i>b</i>	Global vector to be localized
in	<i>dof_type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • <code>NODE_FIELD</code>, DOFs are supported by nodes [Default] • <code>ELEMENT_FIELD</code>, DOFs are supported by elements • <code>SIDE_FIELD</code>, DOFs are supported by sides
in	<i>flag</i>	Option to set: <ul style="list-style-type: none"> • <code>= 0</code>, All DOFs are taken into account [Default] • <code>!= 0</code>, Only DOF number <code>dof</code> is handled in the system The resulting local vector can be accessed by attribute <code>ePrev</code> .

Remarks

This member function is to be used if a constructor with `Element` was invoked. It uses the `Element` pointer `_theElement`

void SideVector (const Vect< real.t > & b) [inherited]

Localize Side Vector.

Parameters

in	<i>b</i>	Global vector to be localized <ul style="list-style-type: none"> • <code>NODE_FIELD</code>, DOFs are supported by nodes [default] • <code>ELEMENT_FIELD</code>, DOFs are supported by elements • <code>SIDE_FIELD</code>, DOFs are supported by sides The resulting local vector can be accessed by attribute <code>ePrev</code> .
----	----------	---

Remarks

This member function is to be used if a constructor with `Side` was invoked. It uses the `Side` pointer `_theSide`

void ElementNodeCoordinates () [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array `_x[0]`, `_x[1]`, ... which are instances of class [Point<real.t>](#)

Remarks

This member function uses the `Side` pointer `_theSide`

void SideNodeCoordinates () [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array `_x[0]`, `_x[1]`, ... which are instances of class [Point<real_t>](#)

Remarks

This member function uses the Element pointer `_theElement`

void ElementAssembly (Matrix< real_t > * A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScMatrix< real_t > & A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Reference to global matrix
----------	----------------------------

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScVect< real_t > & b) [inherited]

Assemble element right-hand side vector into global one.

Parameters

<i>b</i>	Reference to global right-hand side vector
----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (BMatrix< real_t > & A) [inherited]

Assemble element matrix into global one.

Parameters

A	Global matrix stored as a BMatrix instance
-----	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkSMatrix< real.t > &A) [inherited]

Assemble element matrix into global one.

Parameters

A	Global matrix stored as an SkSMatrix instance
-----	---

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkMatrix< real.t > &A) [inherited]

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an SkMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SpMatrix< real.t > &A) [inherited]

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an SpMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (TrMatrix< real.t > &A) [inherited]

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an TrMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable theElement

void ElementAssembly (Vect< real.t > & v) [inherited]

Assemble element vector into global one.

Parameters

in	v	Global vector (Vect instance)
----	-----	-------------------------------

Warning

The element pointer is given by the global variable theElement

void SideAssembly (PETScMatrix< real.t > & A) [inherited]

Assemble side matrix into global one.

Parameters

A	Reference to global matrix
-----	----------------------------

Warning

The side pointer is given by the global variable theSide

void SideAssembly (PETScVect< real.t > & b) [inherited]

Assemble side right-hand side vector into global one.

Parameters

b	Reference to global right-hand side vector
-----	--

Warning

The side pointer is given by the global variable theSide

void SideAssembly (Matrix< real.t > * A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

<i>A</i>	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
----------	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SkSMatrix< real.t > & *A*) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an SkSMatrix instance
----	----------	---

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SkMatrix< real.t > & *A*) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an SkMatrix instance
----	----------	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SpMatrix< real.t > & *A*) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an SpMatrix instance
----	----------	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (Vect< real.t > & *v*) [inherited]

Assemble side (edge or face) vector into global one.

Parameters

in	v	Global vector (Vect instance)
----	-----	-------------------------------

Warning

The side pointer is given by the global variable `theSide`

void DGElementAssembly (Matrix< real.t > * A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
---	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SkSMatrix< real.t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

A	Global matrix stored as an SkSMatrix instance
---	---

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SkMatrix< real.t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SpMatrix< real.t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	A	Global matrix stored as an SpMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (TrMatrix< real.t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	A	Global matrix stored as an TrMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void AxbAssembly (const Element & el , const Vect< real.t > & x , Vect< real.t > & b)
[inherited]

Assemble product of element matrix by element vector into global vector.

Parameters

in	el	Reference to Element instance
in	x	Global vector to multiply by (Vect instance)
out	b	Global vector to add (Vect instance)

void AxbAssembly (const Side & sd , const Vect< real.t > & x , Vect< real.t > & b)
[inherited]

Assemble product of side matrix by side vector into global vector.

Parameters

in	sd	Reference to Side instance
in	x	Global vector to multiply by (Vect instance)
out	b	Global vector (Vect instance)

real.t setMaterialProperty (const string & exp , const string & $prop$) [inherited]

Define a material property by an algebraic expression.

Parameters

in	<i>exp</i>	Algebraic expression
in	<i>prop</i>	Property name

Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

Mesh& getMesh () const [inherited]

Return reference to Mesh instance.

Returns

Reference to Mesh instance

void setSolver (Iteration *ls*, Preconditioner *pc* = IDENT_PREC) [inherited]

Choose solver for the linear system.

Parameters

in	<i>ls</i>	<p>Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER</p> <ul style="list-style-type: none"> • DIRECT_SOLVER, Use a facorization solver [default] • CG_SOLVER, Conjugate Gradient iterative solver • CGS_SOLVER, Squared Conjugate Gradient iterative solver • BICG_SOLVER, BiConjugate Gradient iterative solver • BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver • GMRES_SOLVER, GMRES iterative solver • QMR_SOLVER, QMR iterative solver
in	<i>pc</i>	<p>Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:</p> <ul style="list-style-type: none"> • IDENT_PREC, Identity preconditioner (no preconditioning [default]) • DIAG_PREC, Diagonal preconditioner • ILU_PREC, Incomplete LU factorization preconditioner

int SolveLinearSystem (Matrix< real_t > * A, Vect< real_t > & b, Vect< real_t > & x)
 [inherited]

Solve the linear system.

Parameters

in	A	Pointer to matrix of the system (Instance of class SpMatrix)
in	b	Vector containing right-hand side
in,out	x	Vector containing initial guess of solution on input, actual solution on output

7.12.4 Member Data Documentation

LocalVect<real_t,NEE_> ePrev [inherited]


LocalVect instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

7.13 DG Class Reference

Enables preliminary operations and utilities for the Discontinuous Galerkin method.

Inheritance diagram for DG:

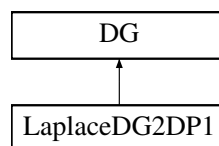

Public Member Functions

- **DG** (Mesh &ms, size_t degree=1)
Constructor with mesh and degree of the method.
- **~DG** ()
Destructor.
- **int setGraph** ()
Set matrix graph.

7.13.1 Detailed Description

Enables preliminary operations and utilities for the Discontinuous Galerkin method.

7.13.2 Constructor & Destructor Documentation

DG (Mesh & ms, size_t degree = 1)

Constructor with mesh and degree of the method.

Parameters

in	ms	Mesh instance
----	----	---------------


Parameters

in	<i>degree</i>	Polynomial degree of the DG method [Default: 1]
----	---------------	---

7.14 DMATRIX< T_ > Class Template Reference

To handle dense matrices.

Inheritance diagram for DMATRIX< T_ >:

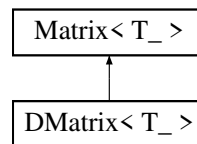

Public Member Functions

- [DMATRIX](#) ()
Default constructor.
- [DMATRIX](#) (size_t nr)
*Constructor for a matrix with **nr** rows and **nr** columns.*
- [DMATRIX](#) (size_t nr, size_t nc)
*Constructor for a matrix with **nr** rows and **nc** columns.*
- [DMATRIX](#) (Vect< T_ > &v)
Constructor that uses a [Vect](#) instance. The class uses the memory space occupied by this vector.
- [DMATRIX](#) (const [DMATRIX](#)< T_ > &m)
Copy Constructor.
- [~DMATRIX](#) ()
Destructor.
- void [setDiag](#) ()
Store diagonal entries in a separate internal vector.
- void [setDiag](#) (const T_ &a)
Set matrix as diagonal and assign its diagonal entries as a constant.
- void [setDiag](#) (const vector< T_ > &d)
Set matrix as diagonal and assign its diagonal entries.
- void [setSize](#) (size_t size)
Set size (number of rows) of matrix.
- void [setSize](#) (size_t nr, size_t nc)
Set size (number of rows and columns) of matrix.
- void [getColumn](#) (size_t j, Vect< T_ > &v) const
*Get *j*-th column vector.*
- Vect< T_ > [getColumn](#) (size_t j) const
*Get *j*-th column vector.*
- void [getRow](#) (size_t i, Vect< T_ > &v) const
*Get *i*-th row vector.*
- Vect< T_ > [getRow](#) (size_t i) const

- Get i -th row vector.*

 - void **set** (size_t i , size_t j , const T_ &val)

Assign a constant value to an entry of the matrix.
- void **setRow** (size_t i , const Vect< T_ > &v)

Copy a given vector to a prescribed row in the matrix.
- void **setColumn** (size_t i , const Vect< T_ > &v)

Copy a given vector to a prescribed column in the matrix.
- void **MultAdd** (T_ a, const Vect< T_ > &x, Vect< T_ > &y) const

*Multiply matrix by vector $a*x$ and add result to y .*
- void **MultAdd** (const Vect< T_ > &x, Vect< T_ > &y) const

Multiply matrix by vector x and add result to y .
- void **Mult** (const Vect< T_ > &x, Vect< T_ > &y) const

Multiply matrix by vector x and save result in y .
- void **TMult** (const Vect< T_ > &x, Vect< T_ > &y) const

Multiply transpose of matrix by vector x and add result in y .
- void **add** (size_t i , size_t j , const T_ &val)

Add constant val to entry (i, j) of the matrix.
- void **Axpy** (T_ a, const DMatrix< T_ > &m)

Add to matrix the product of a matrix by a scalar.
- void **Axpy** (T_ a, const Matrix< T_ > *m)

Add to matrix the product of a matrix by a scalar.
- int **setQR** ()

Construct a QR factorization of the matrix.
- int **setTransQR** ()

Construct a QR factorization of the transpose of the matrix.
- int **solveQR** (const Vect< T_ > &b, Vect< T_ > &x)

Solve a linear system by QR decomposition.
- int **solveTransQR** (const Vect< T_ > &b, Vect< T_ > &x)

Solve a transpose linear system by QR decomposition.
- T_ **operator()** (size_t i , size_t j) const

Operator () (Constant version). Return $a(i, j)$
- T_ & **operator()** (size_t i , size_t j)

Operator () (Non constant version). Return $a(i, j)$
- int **setLU** ()

Factorize the matrix (LU factorization)
- int **setTransLU** ()

Factorize the transpose of the matrix (LU factorization)
- int **solve** (Vect< T_ > &b)

Solve linear system.
- int **solveTrans** (Vect< T_ > &b)

Solve the transpose linear system.
- int **solve** (const Vect< T_ > &b, Vect< T_ > &x)

Solve linear system.
- int **solveTrans** (const Vect< T_ > &b, Vect< T_ > &x)

Solve the transpose linear system.
- DMatrix & **operator=** (DMatrix< T_ > &m)

- Operator =
- **DMatrix** & **operator+=** (const **DMatrix**< T_ > &m)
Operator +=.
- **DMatrix** & **operator-=** (const **DMatrix**< T_ > &m)
Operator -=.
- **DMatrix** & **operator=** (const T_ &x)
Operator =
- **DMatrix** & **operator*=** (const T_ &x)
Operator *=
- **DMatrix** & **operator+=** (const T_ &x)
Operator +=
- **DMatrix** & **operator-=** (const T_ &x)
Operator -=
- T_ * **getArray** () const
Return matrix as C-Array.
- T_ **get** (size_t i, size_t j) const
Return entry (i, j) of matrix.
- size_t **getNbRows** () const
Return number of rows.
- size_t **getNbColumns** () const
Return number of columns.
- void **setPenal** (real_t p)
Set Penalty Parameter (For boundary condition prescription).
- void **setDiagonal** ()
Set the matrix as diagonal.
- void **setDiagonal** (**Mesh** &mesh)
Initialize matrix storage in the case where only diagonal terms are stored.
- T_ **getDiag** (size_t k) const
Return k-th diagonal entry of matrix.
- size_t **size** () const
Return matrix dimension (Number of rows and columns).
- void **Assembly** (const **Element** &el, T_ *a)
Assembly of element matrix into global matrix.
- void **Assembly** (const **Element** &el, const **DMatrix**< T_ > &a)
Assembly of element matrix into global matrix.
- void **Assembly** (const **Side** &sd, T_ *a)
Assembly of side matrix into global matrix.
- void **Assembly** (const **Side** &sd, const **DMatrix**< T_ > &a)
Assembly of side matrix into global matrix.
- void **Prescribe** (**Vect**< T_ > &b, const **Vect**< T_ > &u, int flag=0)
Impose by a penalty method an essential boundary condition, using the **Mesh** instance provided by the constructor.
- void **Prescribe** (int dof, int code, **Vect**< T_ > &b, const **Vect**< T_ > &u, int flag=0)
Impose by a penalty method an essential boundary condition to a given degree of freedom for a given code.
- void **Prescribe** (**Vect**< T_ > &b, int flag=0)
Impose by a penalty method a homogeneous (=0) essential boundary condition.
- void **Prescribe** (size_t dof, **Vect**< T_ > &b, const **Vect**< T_ > &u, int flag=0)

- *Impose by a penalty method an essential boundary condition when only one DOF is treated.*
void [PrescribeSide](#) ()
- *Impose by a penalty method an essential boundary condition when DOFs are supported by sides.*
virtual int [Factor](#) ()=0
- *Factorize matrix. Available only if the storage class enables it.*
int [FactorAndSolve](#) ([Vect](#)< T_ > &b)
- *Factorize matrix and solve the linear system.*
int [FactorAndSolve](#) (const [Vect](#)< T_ > &b, [Vect](#)< T_ > &x)
- *Factorize matrix and solve the linear system.*
size_t [getLength](#) () const
- *Return number of stored terms in matrix.*
int [isDiagonal](#) () const
- *Say if matrix is diagonal or not.*
int [isFactorized](#) () const
- *Say if matrix is factorized or not.*
virtual size_t [getColInd](#) (size_t i) const
- *Return Column index for column i (See the description for class [SpMatrix](#)).*
virtual size_t [getRowPtr](#) (size_t i) const
- *Return Row pointer for row i (See the description for class [SpMatrix](#)).*
T_ [operator](#)() (size_t i) const
- *Operator () with one argument (Constant version).*
T_ & [operator](#)() (size_t i)
- *Operator () with one argument (Non Constant version).*
T_ & [operator](#)[] (size_t k)
- *Operator [] (Non constant version).*
T_ [operator](#)[] (size_t k) const
- *Operator [] (Constant version).*
[Matrix](#) & [operator](#)+= (const [Matrix](#)< T_ > &m)
- *Operator +=.*
[Matrix](#) & [operator](#)-= (const [Matrix](#)< T_ > &m)
- *Operator -=.*

7.14.1 Detailed Description

```
template<class T_>
class OFELI::DMatrix< T_ >
```

To handle dense matrices.

This class enables storing and manipulating general dense matrices. Matrices can be square or rectangle ones.

Template Parameters

$T_ \leftrightarrow$	Data type (double, float, complex<double>, ...)
$_ \leftrightarrow$	

7.14.2 Constructor & Destructor Documentation

DMatrix ()

Default constructor.

Initializes a zero-dimension matrix.

DMatrix (size_t nr)

Constructor for a matrix with nr rows and nr columns.

Matrix entries are set to 0.

DMatrix (size_t nr, size_t nc)

Constructor for a matrix with nr rows and nc columns.

[Matrix](#) entries are set to 0.

DMatrix (Vect< T_ > & v)

Constructor that uses a [Vect](#) instance. The class uses the memory space occupied by this vector.

Parameters

in	<i>v</i>	Vector to copy
----	----------	----------------

DMatrix (const DMatrix< T_ > & m)

Copy Constructor.

Parameters

in	<i>m</i>	Matrix to copy
----	----------	----------------

7.14.3 Member Function Documentation

void setDiag (const T_ & a)

Set matrix as diagonal and assign its diagonal entries as a constant.

Parameters

in	<i>a</i>	Value to assign to all diagonal entries
----	----------	---

void setDiag (const vector< T_ > & d)

Set matrix as diagonal and assign its diagonal entries.

Parameters

in	<i>d</i>	Vector entries to assign to matrix diagonal entries
----	----------	---

void setSize (size_t size)

Set size (number of rows) of matrix.

Parameters

in	<i>size</i>	Number of rows and columns.
----	-------------	-----------------------------

void setSize (size_t nr, size_t nc)

Set size (number of rows and columns) of matrix.

Parameters

in	<i>nr</i>	Number of rows.
in	<i>nc</i>	Number of columns.

void getColumn (size_t j, Vect< T_ > & v) const

Get j-th column vector.

Parameters

in	<i>j</i>	Index of column to extract
out	<i>v</i>	Reference to Vect instance where the column is stored

Remarks

Vector v does not need to be sized before. It is resized in the function

Vect<T_> getColumn (size_t j) const

Get j-th column vector.

Parameters

in	<i>j</i>	Index of column to extract
----	----------	----------------------------

Returns

[Vect](#) instance where the column is stored

Remarks

Vector v does not need to be sized before. It is resized in the function

void getRow (size_t i, Vect< T_ > & v) const

Get i-th row vector.

Parameters

in	<i>i</i>	Index of row to extract
out	<i>v</i>	Reference to Vect instance where the row is stored

Remarks

Vector *v* does not need to be sized before. It is resized in the function

Vect<T_> getRow (size_t *i*) const

Get *i*-th row vector.

Parameters

in	<i>i</i>	Index of row to extract
----	----------	-------------------------

Returns

[Vect](#) instance where the row is stored

Remarks

Vector *v* does not need to be sized before. It is resized in the function

void set (size_t *i*, size_t *j*, const T_ & *val*) [virtual]

Assign a constant value to an entry of the matrix.

Parameters

in	<i>i</i>	row index of matrix
in	<i>j</i>	column index of matrix
in	<i>val</i>	Value to assign to <i>a</i> (<i>i</i> , <i>j</i>).

Implements [Matrix< T_ >](#).

void setRow (size_t *i*, const Vect< T_ > & *v*)

Copy a given vector to a prescribed row in the matrix.

Parameters

in	<i>i</i>	row index to be assigned
in	<i>v</i>	Vect instance to copy

void setColumn (size_t *i*, const Vect< T_ > & *v*)

Copy a given vector to a prescribed column in the matrix.

Parameters

in	<i>i</i>	column index to be assigned
in	<i>v</i>	Vect instance to copy

void MultAdd (T_ a, const Vect< T_ > & x, Vect< T_ > & y) const [virtual]

Multiply matrix by vector a*x and add result to y.

Parameters

in	<i>a</i>	constant to multiply by
in	<i>x</i>	Vector to multiply by a
in,out	<i>y</i>	on input, vector to add to. On output, result.

Implements [Matrix< T_ >](#).

void MultAdd (const Vect< T_ > & x, Vect< T_ > & y) const [virtual]

Multiply matrix by vector x and add result to y.

Parameters

in	<i>x</i>	Vector to add to y
in,out	<i>y</i>	on input, vector to add to. On output, result.

Implements [Matrix< T_ >](#).

void Mult (const Vect< T_ > & x, Vect< T_ > & y) const [virtual]

Multiply matrix by vector x and save result in y.

Parameters

in	<i>x</i>	Vector to add to y
out	<i>y</i>	Result.

Implements [Matrix< T_ >](#).

void TMult (const Vect< T_ > & x, Vect< T_ > & y) const [virtual]

Multiply transpose of matrix by vector x and add result in y.

Parameters

in	<i>x</i>	Vector to add to y
in,out	<i>y</i>	on input, vector to add to. On output, result.

Implements [Matrix< T_ >](#).

void add (size_t *i*, size_t *j*, const T_ & *val*) [virtual]

Add constant *val* to entry (*i*, *j*) of the matrix.

Parameters

in	<i>i</i>	row index
in	<i>j</i>	column index
in	<i>val</i>	Constant to add

Implements [Matrix< T_ >](#).

void Axy (T_ *a*, const DMatrix< T_ > & *m*)

Add to matrix the product of a matrix by a scalar.

Parameters

in	<i>a</i>	Scalar to premultiply
in	<i>m</i>	Matrix by which <i>a</i> is multiplied. The result is added to current instance

void Axy (T_ *a*, const Matrix< T_ > * *m*) [virtual]

Add to matrix the product of a matrix by a scalar.

Parameters

in	<i>a</i>	Scalar to premultiply
in	<i>m</i>	Matrix by which <i>a</i> is multiplied. The result is added to current instance

Implements [Matrix< T_ >](#).

int setQR ()

Construct a QR factorization of the matrix.

This function constructs the QR decomposition using the Householder method. The upper triangular matrix *R* is returned in the upper triangle of the current matrix, except for the diagonal elements of *R* which are stored in an internal vector. The orthogonal matrix *Q* is represented as a product of *n*-1 Householder matrices *Q*₁ . . . *Q*_{*n*-1}, where *Q*_{*j*} = 1 - *u_j.u_j* / *c_j*. The *i*-th component of *u_j* is zero for *i* = 1, ..., *j*-1 while the nonzero components are returned in *a*[*i*][*j*] for *i* = *j*, ..., *n*.

Returns

0 if the decomposition was successful, *k* is the *k*-th row is singular

Remarks

The matrix can be square or rectangle

int setTransQR ()

Construct a QR factorization of the transpose of the matrix.

This function constructs the QR decomposition using the Householder method. The upper triangular matrix R is returned in the upper triangle of the current matrix, except for the diagonal elements of R which are stored in an internal vector. The orthogonal matrix Q is represented as a product of n-1 Householder matrices $Q_1 \dots Q_{n-1}$, where $Q_j = 1 - u_j u_j / c_j$. The i-th component of u_j is zero for $i = 1, \dots, j-1$ while the nonzero components are returned in $a[i][j]$ for $i = j, \dots, n$.

Returns

0 if the decomposition was successful, k is the k-th row is singular

Remarks

The matrix can be square or rectangle

int solveQR (const Vect< T_ > & b, Vect< T_ > & x)

Solve a linear system by QR decomposition.

This function constructs the QR decomposition, if this was not already done by using the member function QR and solves the linear system

Parameters

in	b	Right-hand side vector
out	x	Solution vector. Must have been sized before using this function.

Returns

The same value as returned by the function QR

int solveTransQR (const Vect< T_ > & b, Vect< T_ > & x)

Solve a transpose linear system by QR decomposition.

This function constructs the QR decomposition, if this was not already done by using the member function QR and solves the linear system

Parameters

in	b	Right-hand side vector
out	x	Solution vector. Must have been sized before using this function.

Returns

The same value as returned by the function QR

T_ operator() (size_t i, size_t j) const [virtual]

Operator () (Constant version). Return $a(i, j)$

Parameters

in	i	row index
in	j	column index

Implements [Matrix< T_ >](#).

T_& operator() (size_t i , size_t j) [virtual]

Operator () (Non constant version). Return $a(i, j)$

Parameters

in	i	row index
in	j	column index

Implements [Matrix< T_ >](#).

int setLU ()

Factorize the matrix (LU factorization)

LU factorization of the matrix is realized. Note that since this is an in place factorization, the contents of the matrix are modified.

Returns

- 0 if factorization was normally performed,
- n if the n -th pivot is null.

Remarks

A flag in this class indicates after factorization that this one has been realized, so that, if the member function solve is called after this no further factorization is done.

int setTransLU ()

Factorize the transpose of the matrix (LU factorization)

LU factorization of the transpose of the matrix is realized. Note that since this is an in place factorization, the contents of the matrix are modified.

Returns

- 0 if factorization was normally performed,
- n if the n -th pivot is null.

Remarks

A flag in this class indicates after factorization that this one has been realized, so that, if the member function solve is called after this no further factorization is done.

int solve (Vect< T_ > & b) [virtual]

Solve linear system.

The linear system having the current instance as a matrix is solved by using the LU decomposition. Solution is thus realized after a factorization step and a forward/backward substitution step. The factorization step is realized only if this was not already done.

Note that this function modifies the matrix contents is a factorization is performed. Naturally, if the the matrix has been modified after using this function, the user has to refactorize it using the function setLU. This is because the class has no non-expensive way to detect if the matrix has been modified. The function setLU realizes the factorization step only.

Parameters

in,out	b	Vect instance that contains right-hand side on input and solution on output.
--------	---	--

Returns

- 0 if solution was normally performed,
- n if the n-th pivot is null.

Implements [Matrix< T_ >](#).

int solveTrans (Vect< T_ > & b)

Solve the transpose linear system.

The linear system having the current instance as a transpose matrix is solved by using the LU decomposition. Solution is thus realized after a factorization step and a forward/backward substitution step. The factorization step is realized only if this was not already done.

Note that this function modifies the matrix contents is a factorization is performed. Naturally, if the the matrix has been modified after using this function, the user has to refactorize it using the function setLU. This is because the class has no non-expensive way to detect if the matrix has been modified. The function setLU realizes the factorization step only.

Parameters

in,out	b	Vect instance that contains right-hand side on input and solution on output.
--------	---	--

Returns

- 0 if solution was normally performed,
- n if the n-th pivot is null.

int solve (const Vect< T_ > & b, Vect< T_ > & x)

Solve linear system.

The linear system having the current instance as a matrix is solved by using the LU decomposition. Solution is thus realized after a factorization step and a forward/backward substitution step. The factorization step is realized only if this was not already done.

Note that this function modifies the matrix contents is a factorization is performed. Naturally, if the the matrix has been modified after using this function, the user has to refactorize it using the function setLU. This is because the class has no non-expensive way to detect if the matrix has been modified. The function setLU realizes the factorization step only.

Parameters

in	b	Vect instance that contains right-hand side.
out	x	Vect instance that contains solution

Returns

- 0 if solution was normally performed,
- n if the n -th pivot is null.

int solveTrans (const Vect< T_ > & b , Vect< T_ > & x)

Solve the transpose linear system.

The linear system having the current instance as a transpose matrix is solved by using the LU decomposition. Solution is thus realized after a factorization step and a forward/backward substitution step. The factorization step is realized only if this was not already done.

Note that this function modifies the matrix contents is a factorization is performed. Naturally, if the the matrix has been modified after using this function, the user has to refactorize it using the function setLU. This is because the class has no non-expensive way to detect if the matrix has been modified. The function setLU realizes the factorization step only.

Parameters

in	b	Vect instance that contains right-hand side.
out	x	Vect instance that contains solution

Returns

- 0 if solution was normally performed,
- n if the n -th pivot is null.

DMatrix& operator= (DMatrix< T_ > & m)

Operator =

Copy matrix m to current matrix instance.

DMatrix& operator+= (const DMatrix< T_ > & m)

Operator +=.

Add matrix m to current matrix instance.

DMatrix& operator-= (const DMatrix< T_ > & m)

Operator -=.

Subtract matrix m from current matrix instance.

DMatrix& operator= (const T_ & x)

Operator =

Assign matrix to identity times x

DMatrix& operator*= (const T_ & x)

Operator *=
Premultiply matrix entries by constant value x.

DMatrix& operator+= (const T_ & x)

Operator +=
Add constant value x to matrix entries

DMatrix& operator-= (const T_ & x)

Operator -=
Subtract constant value x from matrix entries.

T_* getArray () const

Return matrix as C-Array.
Matrix is stored row by row.

void setDiagonal (Mesh & mesh) [inherited]

Initialize matrix storage in the case where only diagonal terms are stored.
This member function is to be used for explicit time integration schemes

T_ getDiag (size_t k) const [inherited]

Return k-th diagonal entry of matrix.
First entry is given by **getDiag(1)**.

void Assembly (const Element & el, T_* a) [inherited]

Assembly of element matrix into global matrix.
Case where element matrix is given by a C-array.

Parameters

in	<i>el</i>	Pointer to element instance
in	<i>a</i>	Element matrix as a C-array

void Assembly (const Element & el, const DMatrix< T_ > & a) [inherited]

Assembly of element matrix into global matrix.
Case where element matrix is given by a [DMatrix](#) instance.

Parameters

in	<i>el</i>	Pointer to element instance
in	<i>a</i>	Element matrix as a DMatrix instance

void Assembly (const Side & *sd*, T_ * *a*) [inherited]

Assembly of side matrix into global matrix.

Case where side matrix is given by a C-array.

Parameters

in	<i>sd</i>	Pointer to side instance
in	<i>a</i>	Side matrix as a C-array instance

void Assembly (const Side & *sd*, const DMatrix< T_ > & *a*) [inherited]

Assembly of side matrix into global matrix.

Case where side matrix is given by a [DMatrix](#) instance.

Parameters

in	<i>sd</i>	Pointer to side instance
in	<i>a</i>	Side matrix as a DMatrix instance

void Prescribe (Vect< T_ > & *b*, const Vect< T_ > & *u*, int *flag* = 0) [inherited]

Impose by a penalty method an essential boundary condition, using the [Mesh](#) instance provided by the constructor.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function `setPenal(..)`.

Parameters

in,out	<i>b</i>	Vect instance that contains right-hand side.
in	<i>u</i>	Vect instance that contains imposed valued at DOFs where they are to be imposed.
in	<i>flag</i>	Parameter to determine whether only the right-hand side is to be modified (<i>dof</i> >0) or both matrix and right-hand side (<i>dof</i> =0, default value).

void Prescribe (int *dof*, int *code*, Vect< T_ > & *b*, const Vect< T_ > & *u*, int *flag* = 0)
[inherited]

Impose by a penalty method an essential boundary condition to a given degree of freedom for a given code.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function `setPenal(..)`.

Parameters

in	<i>dof</i>	Degree of freedom for which a boundary condition is to be enforced
in	<i>code</i>	Code for which a boundary condition is to be enforced
in,out	<i>b</i>	Vect instance that contains right-hand side.
in	<i>u</i>	Vect instance that contains imposed valued at DOFs where they are to be imposed.
in	<i>flag</i>	Parameter to determine whether only the right-hand side is to be modified (<i>dof</i> >0) or both matrix and right-hand side (<i>dof</i> =0, default value).

void Prescribe ([Vect](#)< T_ > & *b*, int *flag* = 0) [inherited]

Impose by a penalty method a homegeneous (=0) essential boundary condition.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function **setPenal**(..).

Parameters

in,out	<i>b</i>	Vect instance that contains right-hand side.
in	<i>flag</i>	Parameter to determine whether only the right-hand side is to be modified (<i>dof</i> >0) or both matrix and right-hand side (<i>dof</i> =0, default value).

void Prescribe (size_t *dof*, [Vect](#)< T_ > & *b*, const [Vect](#)< T_ > & *u*, int *flag* = 0) [inherited]

Impose by a penalty method an essential boundary condition when only one DOF is treated.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. This gunction is to be used if only one DOF per node is treated in the linear system. The penalty parameter is by default equal to 1.e20. It can be modified by member function **setPenal**.

Parameters

in	<i>dof</i>	Label of the concerned degree of freedom (DOF).
in,out	<i>b</i>	Vect instance that contains right-hand side.
in	<i>u</i>	Vect instance that conatins imposed valued at DOFs where they are to be imposed.
in	<i>flag</i>	Parameter to determine whether only the right-hand side is to be modified (<i>dof</i> >0) or both matrix and right-hand side (<i>dof</i> =0, default value).

void PrescribeSide () [inherited]

Impose by a penalty method an essential boundary condition when DOFs are supported by sides.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function `setPenal(..)`.

int FactorAndSolve (Vect< T_ > & b) [inherited]

Factorize matrix and solve the linear system.

This is available only if the storage class enables it.

Parameters

in,out	<i>b</i>	Vect instance that contains right-hand side on input and solution on output
--------	----------	---

int FactorAndSolve (const Vect< T_ > & b, Vect< T_ > & x) [inherited]

Factorize matrix and solve the linear system.

This is available only if the storage class enables it.

Parameters

in	<i>b</i>	Vect instance that contains right-hand side
out	<i>x</i>	Vect instance that contains solution

Returns

- 0 if solution was normally performed
- n if the n-th pivot is nul

int isFactorized () const [inherited]

Say if matrix is factorized or not.

If the matrix was not factorized, the class does not allow solving by a direct solver.

T_ operator() (size_t i) const [inherited]

Operator () with one argument (Constant version).

Returns i-th position in the array storing matrix entries. The first entry is at location 1. Entries are stored row by row.

Parameters

in	<i>i</i>	entry index
----	----------	-------------

T_& operator() (size_t i) [inherited]

Operator () with one argument (Non Constant version).

Returns i-th position in the array storing matrix entries. The first entry is at location 1. Entries are stored row by row.

Parameters

in	<i>i</i>	entry index
----	----------	-------------

T_& operator[] (size_t k) [inherited]

Operator [] (Non constant version).

Returns k-th stored element in matrix Index k starts at 0.

T_ operator[] (size_t k) const [inherited]

Operator [] (Constant version).

Returns k-th stored element in matrix Index k starts at 0.

Matrix& operator+= (const Matrix< T_ > & m) [inherited]

Operator +=.

Add matrix m to current matrix instance.

Matrix& operator-= (const Matrix< T_ > & m) [inherited]

Operator -=.

Subtract matrix m from current matrix instance.

7.15 Domain Class Reference

To store and treat finite element geometric information.

Public Member Functions

- [Domain](#) ()
Constructor of a null domain.
- [Domain](#) (const string &file)
Constructor with an input file.
- [~Domain](#) ()
Destructor.
- void [setFile](#) (string file)
Set file containing [Domain](#) data.
- void [setDim](#) (size_t d)
Set space dimension.
- size_t [getDim](#) () const
Return space dimension.
- void [setNbDOF](#) (size_t n)
Set number of degrees of freedom.
- size_t [getNbDOF](#) () const
Return number of degrees of freedom.
- size_t [getNbVertices](#) () const
Return number of vertices.
- size_t [getNbLines](#) () const

- Return number of lines.*

 - `size_t getNbContours () const`

Return number of contours.

 - `size_t getNbHoles () const`

Return number of holes.

 - `size_t getNbSubDomains () const`

Return number of sub-domains.

 - `int get ()`

Read domain data interactively.

 - `void get (const string &file)`

Read domain data from a data file.

 - `Mesh & getMesh () const`

*Return reference to generated *Mesh* instance.*

 - `void genGeo (string file)`

Generate geometry file.

 - `void genMesh ()`

Generate 2-D mesh.

 - `void genMesh (const string &file)`

*Generate 2-D mesh and save in file (*OFELI* format)*

 - `void genMesh (string geo_file, string bamg_file, string mesh_file)`

*Generate 2-D mesh and save geo, bamg and mesh file (*OFELI* format)*

 - `void generateMesh ()`

Generate 2-D mesh using the BAMG mesh generator.

 - `Domain & operator*= (real_t a)`

*Operator *=*

 - `void insertVertex (real_t x, real_t y, real_t h, int code)`

Insert a vertex.

 - `void insertLine (size_t n1, size_t n2, int dc, int nc)`

Insert a straight line.

 - `void insertCircle (size_t n1, size_t n2, size_t n3, int dc, int nc)`

Insert a circular arc.

 - `void insertRequiredVertex (size_t v)`

Insert a required (imposed) vertex.

 - `void insertRequiredEdge (size_t e)`

Insert a required (imposed) edge (or line)

 - `void insertSubDomain (size_t n, int code)`

Insert subdomain.

 - `void insertSubDomain (size_t ln, int orient, int code)`

Insert subdomain.

 - `Point< real_t > getMinCoord () const`

Return minimum coordinates of vertices.

 - `Point< real_t > getMaxCoord () const`

Return maximum coordinates of vertices.

 - `real_t getMinh () const`

Return minimal value of mesh size.

 - `void setOutputFile (string file)`

Define output mesh file.

7.15.1 Detailed Description

To store and treat finite element geometric information.

This class is essentially useful to construct data for mesh generators.

7.15.2 Constructor & Destructor Documentation

Domain ()

Constructor of a null domain.

This constructor assigns maximal values of parameters.

Domain (const string & *file*)

Constructor with an input file.

Parameters

in	<i>file</i>	Input file in the XML format defining the domain
----	-------------	--

7.15.3 Member Function Documentation

void get (const string & *file*)

Read domain data from a data file.

Parameters

in	<i>file</i>	Input file in Domain XML format
----	-------------	---

void genMesh (const string & *file*)

Generate 2-D mesh and save in file ([OFELI](#) format)

Parameters

in	<i>file</i>	File where the generated mesh is saved
----	-------------	--

void genMesh (string *geo_file*, string *bamg_file*, string *mesh_file*)

Generate 2-D mesh and save geo, bamg and mesh file ([OFELI](#) format)

Parameters

in	<i>geo_file</i>	Geo file
in	<i>bamg_file</i>	Bamg file
in	<i>mesh_file</i>	File where the generated mesh is saved

Domain& operator*= (real_t a)

Operator *=

Rescale domain coordinates by multiplying by a factor

Parameters

in	<i>a</i>	Value to multiply by
----	----------	----------------------

void insertVertex (real_t x, real_t y, real_t h, int code)

Insert a vertex.

Parameters

in	<i>x</i>	x-coordinate of vertex
in	<i>y</i>	y-coordinate of vertex
in	<i>h</i>	mesh size around vertex
in	<i>code</i>	code of coordinate

void insertLine (size_t n1, size_t n2, int dc, int nc)

Insert a straight line.

Parameters

in	<i>n1</i>	Label of the first vertex of line
in	<i>n2</i>	Label of the second vertex of line
in	<i>dc</i>	Code to associate to created nodes (Dirichlet)
in	<i>nc</i>	Code to associate to line (Neumann)

void insertCircle (size_t n1, size_t n2, size_t n3, int dc, int nc)

Insert a circular arc.

Parameters

in	<i>n1</i>	Label of vertex defining the first end of the arc
in	<i>n2</i>	Label of vertex defining the second end of the arc
in	<i>n3</i>	Label of vertex defining the center of the arc
in	<i>dc</i>	Dirichlet code for nodes on the arc
in	<i>nc</i>	Neumann code for sides on the arc

void insertRequiredVertex (size_t v)

Insert a required (imposed) vertex.

Parameters

in	<i>v</i>	Label of vertex
----	----------	-----------------

void insertRequiredEdge (size_t *e*)

Insert a required (imposed) edge (or line)

Parameters

in	<i>e</i>	Label of line
----	----------	---------------

void insertSubDomain (size_t *n*, int *code*)

Insert subdomain.

Parameters

in	<i>n</i>	
in	<i>code</i>	

void insertSubDomain (size_t *ln*, int *orient*, int *code*)

Insert subdomain.

Parameters

in	<i>ln</i>	Line label
in	<i>orient</i>	Orientation (1 or -1)
in	<i>code</i>	Subdomain code or reference

void setOutputFile (string *file*)

Define output mesh file.


Parameters

in	<i>file</i>	String defining output mesh file
----	-------------	----------------------------------

7.16 DSMatrix< T_ > Class Template Reference

To handle symmetric dense matrices.

Inheritance diagram for DSMatrix< T_ >:

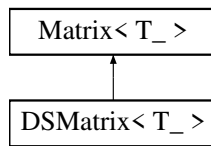

Public Member Functions

- [DSMatrix \(\)](#)
Default constructor.
- [DSMatrix \(size_t dim\)](#)
Constructor that for a symmetric matrix with given number of rows.
- [DSMatrix \(const DSMatrix< T_ > &m\)](#)
Copy Constructor.
- [~DSMatrix \(\)](#)
Destructor.
- void [setDiag \(\)](#)
Store diagonal entries in a separate internal vector.
- void [setSize](#) (size_t dim)
Set size (number of rows) of matrix.
- void [set](#) (size_t i, size_t j, const T_ &val)
Assign constant to entry (i, j) of the matrix.
- void [getColumn](#) (size_t j, [Vect< T_ > &v](#)) const
Get j-th column vector.
- [Vect< T_ > getColumn](#) (size_t j) const
Get j-th column vector.
- void [getRow](#) (size_t i, [Vect< T_ > &v](#)) const
Get i-th row vector.
- [Vect< T_ > getRow](#) (size_t i) const
Get i-th row vector.
- void [setRow](#) (size_t i, const [Vect< T_ > &v](#))
Copy a given vector to a prescribed row in the matrix.
- void [setColumn](#) (size_t i, const [Vect< T_ > &v](#))
Copy a given vector to a prescribed column in the matrix.
- void [setDiag](#) (const T_ &a)
Set matrix as diagonal and assign its diagonal entries as a constant.
- void [setDiag](#) (const [vector< T_ > &d](#))
Set matrix as diagonal and assign its diagonal entries.
- void [add](#) (size_t i, size_t j, const T_ &val)
Add constant to an entry of the matrix.
- T_ [operator\(\)](#) (size_t i, size_t j) const
Operator () (Constant version).
- T_ & [operator\(\)](#) (size_t i, size_t j)
Operator () (Non constant version).
- [DSMatrix< T_ > & operator=](#) (const [DSMatrix< T_ > &m](#))
Operator = Copy matrix m to current matrix instance.
- [DSMatrix< T_ > & operator=](#) (const T_ &x)

- Operator = Assign matrix to identity times α .
- `DSMatrix & operator+= (const T_ &x)`
Operator +=.
- `DSMatrix & operator-= (const T_ &x)`
Operator -=.
- `int setLDLt ()`
Factorize matrix (LDL^T)
- `void MultAdd (const Vect< T_ > &x, Vect< T_ > &y) const`
Multiply matrix by vector $\alpha \cdot x$ and add result to y .
- `void MultAdd (T_ a, const Vect< T_ > &x, Vect< T_ > &y) const`
Multiply matrix by vector $\alpha \cdot x$ and add to y .
- `void Mult (const Vect< T_ > &x, Vect< T_ > &y) const`
Multiply matrix by vector x and save result in y .
- `void TMult (const Vect< T_ > &x, Vect< T_ > &y) const`
Multiply transpose of matrix by vector x and add result in y .
- `void Apxy (T_ a, const DSMatrix< T_ > &m)`
Add to matrix the product of a matrix by a scalar.
- `void Apxy (T_ a, const Matrix< T_ > *m)`
Add to matrix the product of a matrix by a scalar.
- `int solve (Vect< T_ > &b)`
Solve linear system.
- `int solve (const Vect< T_ > &b, Vect< T_ > &x)`
Solve linear system.
- `int setLDLt (const Vect< T_ > &b, Vect< T_ > &x)`
Solve a linear system using the LDLt (Crout) factorization.
- `T_ * getArray () const`
Return matrix as C-Array. *Matrix* is stored row by row. Only lower triangle is stored.
- `T_ get (size_t i, size_t j) const`
Return entry (i, j) of matrix.
- `size_t getNbRows () const`
Return number of rows.
- `size_t getNbColumns () const`
Return number of columns.
- `void setPenal (real_t p)`
Set Penalty Parameter (For boundary condition prescription).
- `void setDiagonal ()`
Set the matrix as diagonal.
- `void setDiagonal (Mesh &mesh)`
Initialize matrix storage in the case where only diagonal terms are stored.
- `T_ getDiag (size_t k) const`
Return k -th diagonal entry of matrix.
- `size_t size () const`
Return matrix dimension (Number of rows and columns).
- `void Assembly (const Element &el, T_ *a)`
Assembly of element matrix into global matrix.
- `void Assembly (const Element &el, const DMatrix< T_ > &a)`

- Assembly of element matrix into global matrix.*

 - void **Assembly** (const **Side** &sd, T_ *a)
- Assembly of side matrix into global matrix.*

 - void **Assembly** (const **Side** &sd, const **DMatrix**< T_ > &a)
- Assembly of side matrix into global matrix.*

 - void **Prescribe** (**Vect**< T_ > &b, const **Vect**< T_ > &u, int flag=0)

*Impose by a penalty method an essential boundary condition, using the **Mesh** instance provided by the constructor.*
- Impose by a penalty method an essential boundary condition to a given degree of freedom for a given code.*

 - void **Prescribe** (int dof, int code, **Vect**< T_ > &b, const **Vect**< T_ > &u, int flag=0)
- Impose by a penalty method a homegeneous (=0) essential boundary condition.*

 - void **Prescribe** (**Vect**< T_ > &b, int flag=0)
- Impose by a penalty method an essential boundary condition when only one DOF is treated.*

 - void **PrescribeSide** ()
- Impose by a penalty method an essential boundary condition when DOFs are supported by sides.*

 - virtual int **Factor** ()=0
- Factorize matrix. Available only if the storage class enables it.*

 - int **FactorAndSolve** (**Vect**< T_ > &b)
- Factorize matrix and solve the linear system.*

 - int **FactorAndSolve** (const **Vect**< T_ > &b, **Vect**< T_ > &x)
- Factorize matrix and solve the linear system.*

 - size_t **getLength** () const
- Return number of stored terms in matrix.*

 - int **isDiagonal** () const
- Say if matrix is diagonal or not.*

 - int **isFactorized** () const
- Say if matrix is factorized or not.*

 - virtual size_t **getColInd** (size_t i) const
- Return Column index for column i (See the description for class **SpMatrix**).*

 - virtual size_t **getRowPtr** (size_t i) const
- Return Row pointer for row i (See the description for class **SpMatrix**).*

 - T_ **operator()** (size_t i) const
- Operator () with one argument (Constant version).*

 - T_ & **operator()** (size_t i)
- Operator () with one argument (Non Constant version).*

 - T_ & **operator[]** (size_t k)
- Operator [] (Non constant version).*

 - T_ **operator[]** (size_t k) const
- Operator [] (Constant version).*

 - **Matrix** & **operator+=** (const **Matrix**< T_ > &m)
- Operator +=.*

 - **Matrix** & **operator-=** (const **Matrix**< T_ > &m)
- Operator -=.*

 - **Matrix** & **operator*=** (const T_ &x)
- Operator *.=.*

7.16.1 Detailed Description

template<class T_>
class OFELI::DSMatrix< T_ >

To handle symmetric dense matrices.

This class enables storing and manipulating symmetric dense matrices.

Template Parameters

T_{\leftrightarrow}	Data type (double, float, complex<double>, ...)
$_{\leftrightarrow}$	

7.16.2 Member Function Documentation

int setLDLt (const Vect< T_ > & *b*, Vect< T_ > & *x*)

Solve a linear system using the LDLt (Crout) factorization.

This function solves a linear system. The LDLt factorization is performed if this was not already done using the function setLU.

Parameters

in	<i>b</i>	Vect instance that contains right-hand side
out	<i>x</i>	Vect instance that contains solution

Returns

- 0 if solution was normally performed
- *n* if the *n*-th pivot is null

void setDiagonal (Mesh & *mesh*) [inherited]

Initialize matrix storage in the case where only diagonal terms are stored.

This member function is to be used for explicit time integration schemes

T_ getDiag (size_t *k*) const [inherited]

Return *k*-th diagonal entry of matrix.

First entry is given by **getDiag(1)**.

void Assembly (const Element & *el*, T_ * *a*) [inherited]

Assembly of element matrix into global matrix.

Case where element matrix is given by a C-array.

Parameters

in	<i>el</i>	Pointer to element instance
in	<i>a</i>	Element matrix as a C-array

void Assembly (const Element & *el*, const DMatrix< T_ > & *a*) [inherited]

Assembly of element matrix into global matrix.

Case where element matrix is given by a [DMatrix](#) instance.

Parameters

in	<i>el</i>	Pointer to element instance
in	<i>a</i>	Element matrix as a DMatrix instance

void Assembly (const Side & *sd*, T_ * *a*) [inherited]

Assembly of side matrix into global matrix.

Case where side matrix is given by a C-array.

Parameters

in	<i>sd</i>	Pointer to side instance
in	<i>a</i>	Side matrix as a C-array instance

void Assembly (const Side & *sd*, const DMatrix< T_ > & *a*) [inherited]

Assembly of side matrix into global matrix.

Case where side matrix is given by a [DMatrix](#) instance.

Parameters

in	<i>sd</i>	Pointer to side instance
in	<i>a</i>	Side matrix as a DMatrix instance

void Prescribe (Vect< T_ > & *b*, const Vect< T_ > & *u*, int *flag* = 0) [inherited]

Impose by a penalty method an essential boundary condition, using the [Mesh](#) instance provided by the constructor.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function **setPenal(..)**.

Parameters

in,out	<i>b</i>	Vect instance that contains right-hand side.
in	<i>u</i>	Vect instance that contains imposed valued at DOFs where they are to be imposed.
in	<i>flag</i>	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).

void Prescribe (int dof, int code, Vect< T_ > & b, const Vect< T_ > & u, int flag = 0)
[inherited]

Impose by a penalty method an essential boundary condition to a given degree of freedom for a given code.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function **setPenal(..)**.

Parameters

in	<i>dof</i>	Degree of freedom for which a boundary condition is to be enforced
in	<i>code</i>	Code for which a boundary condition is to be enforced
in,out	<i>b</i>	Vect instance that contains right-hand side.
in	<i>u</i>	Vect instance that contains imposed valued at DOFs where they are to be imposed.
in	<i>flag</i>	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).

void Prescribe (Vect< T_ > & b, int flag = 0) [inherited]

Impose by a penalty method a homegeneous (=0) essential boundary condition.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function **setPenal(..)**.

Parameters

in,out	<i>b</i>	Vect instance that contains right-hand side.
in	<i>flag</i>	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).

void Prescribe (size_t dof, Vect< T_ > & b, const Vect< T_ > & u, int flag = 0) [inherited]

Impose by a penalty method an essential boundary condition when only one DOF is treated.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. This gunction is to be used if only one DOF per node is treated in the linear system. The penalty parameter is by default equal to 1.e20. It can be modified by member function **setPenal**.

Parameters

in	<i>dof</i>	Label of the concerned degree of freedom (DOF).
in,out	<i>b</i>	Vect instance that contains right-hand side.
in	<i>u</i>	Vect instance that conatins imposed valued at DOFs where they are to be imposed.

Parameters

in	<i>flag</i>	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).
----	-------------	--

void PrescribeSide () [inherited]

Impose by a penalty method an essential boundary condition when DOFs are supported by sides.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function **setPenal**(..).

int FactorAndSolve (Vect< T_ > & b) [inherited]

Factorize matrix and solve the linear system.

This is available only if the storage class enables it.

Parameters

in,out	<i>b</i>	Vect instance that contains right-hand side on input and solution on output
--------	----------	---

int FactorAndSolve (const Vect< T_ > & b, Vect< T_ > & x) [inherited]

Factorize matrix and solve the linear system.

This is available only if the storage class enables it.

Parameters

in	<i>b</i>	Vect instance that contains right-hand side
out	<i>x</i>	Vect instance that contains solution

Returns

- 0 if solution was normally performed
- n if the n-th pivot is nul

int isFactorized () const [inherited]

Say if matrix is factorized or not.

If the matrix was not factorized, the class does not allow solving by a direct solver.

T_ operator() (size_t i) const [inherited]

Operator () with one argument (Constant version).

Returns i-th position in the array storing matrix entries. The first entry is at location 1. Entries are stored row by row.

Parameters

in	<i>i</i>	entry index
----	----------	-------------

T_& operator() (size_t *i*) [inherited]

Operator () with one argument (Non Constant version).

Returns *i*-th position in the array storing matrix entries. The first entry is at location 1. Entries are stored row by row.

Parameters

in	<i>i</i>	entry index
----	----------	-------------

T_& operator[] (size_t *k*) [inherited]

Operator [] (Non constant version).

Returns *k*-th stored element in matrix Index *k* starts at 0.

T_ operator[] (size_t *k*) const [inherited]

Operator [] (Constant version).

Returns *k*-th stored element in matrix Index *k* starts at 0.

Matrix& operator+= (const Matrix< T_ > & *m*) [inherited]

Operator +=.

Add matrix *m* to current matrix instance.

Matrix& operator-= (const Matrix< T_ > & *m*) [inherited]

Operator -=.

Subtract matrix *m* from current matrix instance.

Matrix& operator*= (const T_ & *x*) [inherited]


Operator * =.

Premultiply matrix entries by constant value *x*

7.17 EC2D1T3 Class Reference

Eddy current problems in 2-D domains using solenoidal approximation.

Inheritance diagram for EC2D1T3:

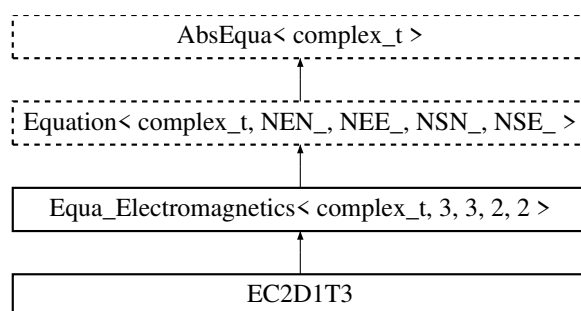

Public Member Functions

- **EC2D1T3** ()
Default constructor.
- **EC2D1T3** (const **Element** *el)
Constructor using element data.
- **EC2D1T3** (const **Side** *side)
Constructor using side data.
- **EC2D1T3** (const **Element** *el, const **Vect**< **complex.t** > &u, const **real.t** &time=0.)
Constructor using element and previous time data.
- **EC2D1T3** (const **Side** *sd, const **Vect**< **complex.t** > &u, const **real.t** &time=0.)
Constructor using side and previous time data.
- **~EC2D1T3** ()
Destructor.
- void **Magnetic** (**real.t** omega, **real.t** coef=1.)
Add magnetic contribution to matrix.
- void **Electric** (**real.t** coef=1.)
Add electric contribution to matrix.
- **real.t** **Joule** ()
Compute Joule density in element.
- **complex.t** **IntegMF** ()
Add element integral contribution.
- **complex.t** **IntegND** (const **Vect**< **complex.t** > &h, int opt=GLOBAL_ARRAY)
Compute integral of normal derivative on edge.
- **real.t** **VacuumArea** ()
Add contribution to vacuum area calculation.
- void **updateBC** (const **Element** &el, const **Vect**< **complex.t** > &bc)
Update Right-Hand side by taking into account essential boundary conditions.
- void **updateBC** (const **Vect**< **complex.t** > &bc)
Update Right-Hand side by taking into account essential boundary conditions.
- void **DiagBC** (int dof_type=NODE.DOF, int dof=0)
Update element matrix to impose bc by diagonalization technique.
- void **LocalNodeVector** (**Vect**< **complex.t** > &b)
Localize Element Vector from a Vect instance.
- void **ElementNodeVector** (const **Vect**< **complex.t** > &b, **LocalVect**< **complex.t**, **NEE_** > &be)
Localize Element Vector from a Vect instance.

- void [ElementNodeVector](#) (const [Vect](#)< [complex_t](#) > &b, [LocalVect](#)< [complex_t](#), [NEN_](#) > &be, int dof)
Localize Element Vector from a Vect instance.
- void [ElementNodeVectorSingleDOF](#) (const [Vect](#)< [complex_t](#) > &b, [LocalVect](#)< [complex_t](#), [NEN_](#) > &be)
Localize Element Vector from a Vect instance.
- void [ElementSideVector](#) (const [Vect](#)< [complex_t](#) > &b, [LocalVect](#)< [complex_t](#), [NSE_](#) > &be)
Localize Element Vector from a Vect instance.
- void [ElementVector](#) (const [Vect](#)< [complex_t](#) > &b, int dof_type=NODE_FIELD, int flag=0)
Localize Element Vector.
- void [SideVector](#) (const [Vect](#)< [complex_t](#) > &b)
Localize Side Vector.
- void [ElementNodeCoordinates](#) ()
Localize coordinates of element nodes.
- void [SideNodeCoordinates](#) ()
Localize coordinates of side nodes.
- void [ElementAssembly](#) ([Matrix](#)< [complex_t](#) > *A)
Assemble element matrix into global one.
- void [ElementAssembly](#) ([PETScMatrix](#)< [complex_t](#) > &A)
Assemble element matrix into global one.
- void [ElementAssembly](#) ([PETScVect](#)< [complex_t](#) > &b)
Assemble element right-hand side vector into global one.
- void [ElementAssembly](#) ([BMatrix](#)< [complex_t](#) > &A)
Assemble element matrix into global one.
- void [ElementAssembly](#) ([SkSMatrix](#)< [complex_t](#) > &A)
Assemble element matrix into global one.
- void [ElementAssembly](#) ([SkMatrix](#)< [complex_t](#) > &A)
Assemble element matrix into global one.
- void [ElementAssembly](#) ([SpMatrix](#)< [complex_t](#) > &A)
Assemble element matrix into global one.
- void [ElementAssembly](#) ([TrMatrix](#)< [complex_t](#) > &A)
Assemble element matrix into global one.
- void [ElementAssembly](#) ([Vect](#)< [complex_t](#) > &v)
Assemble element vector into global one.
- void [SideAssembly](#) ([PETScMatrix](#)< [complex_t](#) > &A)
Assemble side matrix into global one.
- void [SideAssembly](#) ([PETScVect](#)< [complex_t](#) > &b)
Assemble side right-hand side vector into global one.
- void [SideAssembly](#) ([Matrix](#)< [complex_t](#) > *A)
Assemble side (edge or face) matrix into global one.
- void [SideAssembly](#) ([SkSMatrix](#)< [complex_t](#) > &A)
Assemble side (edge or face) matrix into global one.
- void [SideAssembly](#) ([SkMatrix](#)< [complex_t](#) > &A)
Assemble side (edge or face) matrix into global one.
- void [SideAssembly](#) ([SpMatrix](#)< [complex_t](#) > &A)
Assemble side (edge or face) matrix into global one.
- void [SideAssembly](#) ([Vect](#)< [complex_t](#) > &v)

- Assemble side (edge or face) vector into global one.*
 - void [DGElementAssembly](#) ([Matrix](#)< [complex.t](#) > *A)
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
 - void [DGElementAssembly](#) ([SkMatrix](#)< [complex.t](#) > &A)
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
 - void [DGElementAssembly](#) ([SkMatrix](#)< [complex.t](#) > &A)
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
 - void [DGElementAssembly](#) ([SpMatrix](#)< [complex.t](#) > &A)
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
 - void [DGElementAssembly](#) ([TrMatrix](#)< [complex.t](#) > &A)
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
 - void [AxbAssembly](#) (const [Element](#) &el, const [Vect](#)< [complex.t](#) > &x, [Vect](#)< [complex.t](#) > &b)
- Assemble product of element matrix by element vector into global vector.*
 - void [AxbAssembly](#) (const [Side](#) &sd, const [Vect](#)< [complex.t](#) > &x, [Vect](#)< [complex.t](#) > &b)
- Assemble product of side matrix by side vector into global vector.*
 - size_t [getNbNodes](#) () const
- Return number of element nodes.*
 - size_t [getNbEq](#) () const
- Return number of element equations.*
 - void [setInitialSolution](#) (const [Vect](#)< [complex.t](#) > &u)
- Set initial solution (previous time step)*
 - [real.t](#) [setMaterialProperty](#) (const string &exp, const string &prop)
- Define a material property by an algebraic expression.*
 - void [setMesh](#) ([Mesh](#) &m)
- Define mesh and renumber DOFs after removing imposed ones.*
 - [Mesh](#) & [getMesh](#) () const
- Return reference to Mesh instance.*
 - [LinearSolver](#)< [complex.t](#) > & [getLinearSolver](#) ()
- Return reference to linear solver instance.*
 - void [setSolver](#) ([Iteration](#) ls, [Preconditioner](#) pc=IDENT_PREC)
- Choose solver for the linear system.*
 - int [SolveLinearSystem](#) ([Matrix](#)< [complex.t](#) > *A, [Vect](#)< [complex.t](#) > &b, [Vect](#)< [complex.t](#) > &x)
- Solve the linear system.*

Public Attributes

- [LocalMatrix](#)< [complex.t](#), NEE_, NEE_ > eMat
- LocalMatrix instance containing local matrix associated to current element.*
- [LocalMatrix](#)< [complex.t](#), NSE_, NSE_ > sMat
- LocalMatrix instance containing local matrix associated to current side.*
- [LocalVect](#)< [complex.t](#), NEE_ > ePrev
- LocalVect instance containing local vector associated to current element.*
- [LocalVect](#)< [complex.t](#), NEE_ > eRHS
- LocalVect instance containing local right-hand side vector associated to current element.*
- [LocalVect](#)< [complex.t](#), NEE_ > eRes
- LocalVect instance containing local residual vector associated to current element.*
- [LocalVect](#)< [complex.t](#), NSE_ > sRHS
- LocalVect instance containing local right-hand side vector associated to current side.*

Protected Member Functions

- void [MagneticPermeability](#) (const [real_t](#) &mu)
Set (constant) magnetic permeability.
- void [MagneticPermeability](#) (const string &exp)
Set magnetic permeability given by an algebraic expression.
- void [ElectricConductivity](#) (const [real_t](#) &sigma)
Set (constant) electric conductivity.
- void [ElectricConductivity](#) (const string &exp)
set electric conductivity given by an algebraic expression
- void [ElectricResistivity](#) (const [real_t](#) &rho)
Set (constant) electric resistivity.
- void [ElectricResistivity](#) (const string &exp)
Set electric resistivity given by an algebraic expression.
- void [setMaterial](#) ()
Set material properties.
- void [Init](#) (const [Element](#) *el)
Set element arrays to zero.
- void [Init](#) (const [Side](#) *sd)
Set side arrays to zero.

7.17.1 Detailed Description

Eddy current problems in 2-D domains using solenoidal approximation.

Builds finite element arrays for time harmonic eddy current problems in 2-D domains with solenoidal configurations (Magnetic field has only one nonzero component). Magnetic field is constant in the vacuum, and then zero in the outer vacuum.

Uses 3-Node triangles.

The unknown is the time-harmonic magnetic induction (complex valued).

7.17.2 Constructor & Destructor Documentation

EC2D1T3 (const [Element](#) * *el*)

Constructor using element data.

Parameters

in	<i>el</i>	Pointer to Element instance
----	-----------	---

EC2D1T3 (const [Side](#) * *side*)

Constructor using side data.

Parameters

in	<i>side</i>	Pointer to Side instance
----	-------------	--

EC2D1T3 (const Element * *el*, const Vect< complex_t > & *u*, const real_t & *time* = 0.)

Constructor using element and previous time data.

Parameters

in	<i>el</i>	Pointer to Element instance
in	<i>u</i>	Solution at previous iteration
in	<i>time</i>	Time value [Default: 0]

EC2D1T3 (const Side * *sd*, const Vect< complex_t > & *u*, const real_t & *time* = 0.)

Constructor using side and previous time data.

Parameters

in	<i>sd</i>	Pointer to Side instance
in	<i>u</i>	Solution at previous iteration
in	<i>time</i>	Time value [Default: 0]

7.17.3 Member Function Documentation

void Magnetic (real_t *omega*, real_t *coef* = 1.)

Add magnetic contribution to matrix.

Parameters

in	<i>omega</i>	Angular frequency
in	<i>coef</i>	Coefficient to multiply by [Default: 1]

void Electric (real_t *coef* = 1.)

Add electric contribution to matrix.

Parameters

in	<i>coef</i>	Coefficient to multiply by [Default: 1]
----	-------------	---

complex_t IntegND (const Vect< complex_t > & *h*, int *opt* = GLOBAL_ARRAY)

Compute integral of normal derivative on edge.

Parameters

in	<i>h</i>	Vect instance containing magnetic field at element nodes
in	<i>opt</i>	Vector <i>h</i> is local (LOCAL_ARRAY) with size 3 or global (GLOBAL_ARRAY) with size = Number of nodes [Default: GLOBAL_ARRAY].

Note

This member function is to be called within each element, it detects boundary sides as the ones with nonzero code

void updateBC (const Element & *el*, const Vect< complex.t > & *bc*) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>el</i>	Reference to current element instance
in	<i>bc</i>	Vector that contains imposed values at all DOFs

void updateBC (const Vect< complex.t > & *bc*) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>bc</i>	Vector that contains imposed values at all DOFs
----	-----------	---

Remarks

The current element is pointed by `_theElement`

void DiagBC (int *dof.type* = *NODE_DOF*, int *dof* = 0) [inherited]

Update element matrix to impose bc by diagonalization technique.

Parameters

in	<i>dof.type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • <code>NODE_FIELD</code>, DOFs are supported by nodes [Default] • <code>ELEMENT_FIELD</code>, DOFs are supported by elements • <code>SIDE_FIELD</code>, DOFs are supported by sides
in	<i>dof</i>	DOF setting: <ul style="list-style-type: none"> • <code>= 0</code>, All DOFs are taken into account [Default] • <code>!= 0</code>, Only DOF No. <i>dof</i> is handled in the system

void LocalNodeVector (Vect< complex.t > & *b*) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Reference to global vector to be localized. The resulting local vector can be accessed by attribute ePrev. This member function is to be used if a constructor with Element was invoked.
----	----------	--

void ElementNodeVector (const Vect< complex.t > & *b*, LocalVect< complex.t , NEE_ > & *be*) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

All degrees of freedom are transferred to the local vector

void ElementNodeVector (const Vect< complex.t > & *b*, LocalVect< complex.t , NEN_ > & *be*, int *dof*) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.
in	<i>dof</i>	Degree of freedom to transfer to the local vector

Remarks

Only yhe dega dof is transferred to the local vector

void ElementNodeVectorSingleDOF (const Vect< complex.t > & *b*, LocalVect< complex.t , NEN_ > & *be*) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

Vector *b* is assumed to contain only one degree of freedom by node.

void ElementSideVector (const Vect< complex.t > & b, LocalVect< complex.t, NSE_ > & be) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is

void ElementVector (const Vect< complex.t > & b, int dof_type = NODE_FIELD, int flag = 0) [inherited]

Localize Element Vector.

Parameters

in	<i>b</i>	Global vector to be localized
in	<i>dof_type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • NODE_FIELD, DOFs are supported by nodes [Default] • ELEMENT_FIELD, DOFs are supported by elements • SIDE_FIELD, DOFs are supported by sides
in	<i>flag</i>	Option to set: <ul style="list-style-type: none"> • = 0, All DOFs are taken into account [Default] • != 0, Only DOF number dof is handled in the system The resulting local vector can be accessed by attribute ePrev.

Remarks

This member function is to be used if a constructor with Element was invoked. It uses the Element pointer *_theElement*

void SideVector (const Vect< complex.t > & b) [inherited]

Localize Side Vector.

Parameters

in	<i>b</i>	Global vector to be localized <ul style="list-style-type: none"> • NODE_FIELD, DOFs are supported by nodes [default] • ELEMENT_FIELD, DOFs are supported by elements • SIDE_FIELD, DOFs are supported by sides The resulting local vector can be accessed by attribute ePrev.
----	----------	--

Remarks

This member function is to be used if a constructor with Side was invoked. It uses the Side pointer `_theSide`

void ElementNodeCoordinates () [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array `_x[0]`, `_x[1]`, ... which are instances of class [Point<real.t>](#)

Remarks

This member function uses the Side pointer `_theSide`

void SideNodeCoordinates () [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array `_x[0]`, `_x[1]`, ... which are instances of class [Point<real.t>](#)

Remarks

This member function uses the Element pointer `_theElement`

void ElementAssembly (Matrix< complex.t > * A) [inherited]

Assemble element matrix into global one.

Parameters

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
---	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScMatrix< complex.t > & A) [inherited]

Assemble element matrix into global one.

Parameters

A	Reference to global matrix
---	----------------------------

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScVect< complex.t > & b) [inherited]

Assemble element right-hand side vector into global one.

Parameters

<i>b</i>	Reference to global right-hand side vector
----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (BMatrix< complex.t > &A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Global matrix stored as a BMatrix instance
----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkSMatrix< complex.t > &A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Global matrix stored as an SkSMatrix instance
----------	---

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkMatrix< complex.t > &A) [inherited]

Assemble element matrix into global one.

Parameters

<i>in</i>	<i>A</i>	Global matrix stored as an SkMatrix instance
-----------	----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SpMatrix< complex.t > &A) [inherited]

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an SpMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable theElement

void ElementAssembly (TrMatrix< complex_t > &A) [inherited]

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an TrMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable theElement

void ElementAssembly (Vect< complex_t > &v) [inherited]

Assemble element vector into global one.

Parameters

in	v	Global vector (Vect instance)
----	-----	-------------------------------

Warning

The element pointer is given by the global variable theElement

void SideAssembly (PETScMatrix< complex_t > &A) [inherited]

Assemble side matrix into global one.

Parameters

A	Reference to global matrix
-----	----------------------------

Warning

The side pointer is given by the global variable theSide

void SideAssembly (PETScVect< complex_t > &b) [inherited]

Assemble side right-hand side vector into global one.

Parameters

<i>b</i>	Reference to global right-hand side vector
----------	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (Matrix< complex.t > * A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

<i>A</i>	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
----------	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SkSMatrix< complex.t > & A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an SkSMatrix instance
----	----------	---

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SkMatrix< complex.t > & A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an SkMatrix instance
----	----------	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SpMatrix< complex.t > & A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	A	Global matrix stored as an SpMatrix instance
----	-----	--

Warning

The side pointer is given by the global variable theSide

void SideAssembly (Vect< complex.t > & v) [inherited]

Assemble side (edge or face) vector into global one.

Parameters

in	v	Global vector (Vect instance)
----	-----	-------------------------------

Warning

The side pointer is given by the global variable theSide

void DGElementAssembly (Matrix< complex.t > * A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
-----	--

Warning

The element pointer is given by the global variable theElement

void DGElementAssembly (SkSMatrix< complex.t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

A	Global matrix stored as an SkSMatrix instance
-----	---

Warning

The element pointer is given by the global variable theElement

void DGElementAssembly (SkMatrix< complex.t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	A	Global matrix stored as an SkMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SpMatrix< complex.t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	A	Global matrix stored as an SpMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (TrMatrix< complex.t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	A	Global matrix stored as an TrMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void AxbAssembly (const Element & el , const Vect< complex.t > & x , Vect< complex.t > & b) [inherited]

Assemble product of element matrix by element vector into global vector.

Parameters

in	el	Reference to Element instance
in	x	Global vector to multiply by (Vect instance)
out	b	Global vector to add (Vect instance)

void AxbAssembly (const Side & sd , const Vect< complex.t > & x , Vect< complex.t > & b) [inherited]

Assemble product of side matrix by side vector into global vector.

Parameters

in	<i>sd</i>	Reference to Side instance
in	<i>x</i>	Global vector to multiply by (Vect instance)
out	<i>b</i>	Global vector (Vect instance)

real.t setMaterialProperty (const string & *exp*, const string & *prop*) [inherited]

Define a material property by an algebraic expression.

Parameters

in	<i>exp</i>	Algebraic expression
in	<i>prop</i>	Property name

Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

Mesh& getMesh () const [inherited]

Return reference to Mesh instance.

Returns

Reference to Mesh instance

void setSolver (Iteration *ls*, Preconditioner *pc* = IDENT_PREC) [inherited]

Choose solver for the linear system.

Parameters

in	<i>ls</i>	<p>Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER</p> <ul style="list-style-type: none"> • DIRECT_SOLVER, Use a facorization solver [default] • CG_SOLVER, Conjugate Gradient iterative solver • CGS_SOLVER, Squared Conjugate Gradient iterative solver • BICG_SOLVER, BiConjugate Gradient iterative solver • BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver • GMRES_SOLVER, GMRES iterative solver • QMR_SOLVER, QMR iterative solver
----	-----------	---

Parameters

in	<i>pc</i>	Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values: <ul style="list-style-type: none"> • IDENT_PREC, Identity preconditioner (no preconditioning [default]) • DIAG_PREC, Diagonal preconditioner • ILU_PREC, Incomplete LU factorization preconditioner
----	-----------	---

int SolveLinearSystem (Matrix< complex.t > * A, Vect< complex.t > & b, Vect< complex.t > & x) [inherited]

Solve the linear system.

Parameters

in	<i>A</i>	Pointer to matrix of the system (Instance of class SpMatrix)
in	<i>b</i>	Vector containing right-hand side
in,out	<i>x</i>	Vector containing initial guess of solution on input, actual solution on output

7.17.4 Member Data Documentation

LocalVect<complex.t,NEE_> ePrev [inherited]

LocalVect instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

7.18 Edge Class Reference

To describe an edge.

Public Member Functions

- [Edge](#) ()
Default Constructor.
- [Edge](#) (size_t label)
Constructor with label.
- [Edge](#) (const [Edge](#) &ed)
Copy constructor.
- [~Edge](#) ()
Destructor.
- void [Add](#) ([Node](#) *node)
Insert a node at end of list of nodes of edge.
- void [setLabel](#) (size_t i)
Assign label of edge.

- void `setFirstDOF` (size_t `n`)
Define First DOF.
- void `setNbDOF` (size_t `nb_dof`)
Define number of DOF of edge.
- void `DOF` (size_t `i`, size_t `dof`)
Define label of DOF.
- void `setDOF` (size_t &`first_dof`, size_t `nb_dof`)
Define number of DOF.
- void `setCode` (size_t `dof`, int `code`)
Assign code `code` to DOF number `dof`.
- void `AddNeighbor` (Side *`sd`)
Add side pointed by `sd` to list of edge sides.
- size_t `getLabel` () const
Return label of edge.
- size_t `n` () const
Return label of edge.
- size_t `getNbEq` () const
Return number of edge equations.
- size_t `getNbDOF` () const
Return number of DOF.
- int `getCode` (size_t `dof=1`) const
Return code for a given DOF of node.
- size_t `getDOF` (size_t `i`) const
*Return label of *i*-th DOF.*
- size_t `getFirstDOF` () const
Return number of first dof of node.
- Node * `getPtrNode` (size_t `i`) const
List of element nodes.
- Node * `operator()` (size_t `i`) const
Operator ().
- size_t `getNodeLabel` (size_t `i`) const
Return node label.
- Side * `getNeighborSide` (size_t `i`) const
*Return pointer to neighbor *i*-th side.*
- int `isOnBoundary` () const
Say if current edge is a boundary edge or not.
- void `setOnBoundary` ()
Say that the edge is on the boundary.
- Node * `operator()` (size_t `i`)
Operator ().

7.18.1 Detailed Description

To describe an edge.

Defines an edge of a 3-D finite element mesh. The edges are given in particular by a list of nodes. Each node can be accessed by the member function `getPtrNode`.

7.18.2 Constructor & Destructor Documentation

Edge ()

Default Constructor.

Initializes data to zero

Edge (size_t *label*)

Constructor with label.

Define an edge by giving its *label*

7.18.3 Member Function Documentation

void DOF (size_t *i*, size_t *dof*)

Define label of DOF.

Parameters

in	<i>i</i>	DOF index
in	<i>dof</i>	Its label

void setDOF (size_t &*first_dof*, size_t *nb_dof*)

Define number of DOF.

Parameters

in,out	<i>first_dof</i>	Label of the first DOF in input that is actualized
in	<i>nb_dof</i>	Number of DOF

void setCode (size_t *dof*, int *code*)

Assign code *code* to DOF number *dof*.

Parameters

in	<i>dof</i>	index of dof for assignment.
in	<i>code</i>	Value of code to assign.

int getCode (size_t *dof* = 1) const

Return code for a given DOF of node.

Default value is 1

Node* operator() (size_t *i*) const

Operator ().

Return pointer to node of local label *i*.

size_t getNodeLabel (size_t i) const

Return node label.

Parameters

in	<i>i</i>	Local label of node for which global label is returned
----	----------	--

int isOnBoundary () const

Say if current edge is a boundary edge or not.

Note this information is available only if boundary edges were determined. See class [Mesh](#)

Node* operator() (size_t i)

Operator ().

Returns pointer to node of local label *i*

7.19 EdgeList Class Reference

Class to construct a list of edges having some common properties.

Public Member Functions

- [EdgeList](#) ([Mesh](#) &ms)
Constructor using a [Mesh](#) instance.
- [~EdgeList](#) ()
Destructor.
- void [selectCode](#) (int code, int dof=1)
Select edges having a given code for a given degree of freedom.
- void [unselectCode](#) (int code, int dof=1)
Unselect edges having a given code for a given degree of freedom.
- size_t [getNbEdges](#) () const
Return number of selected edges.
- void [top](#) ()
Reset list of edges at its top position (Non constant version)
- void [top](#) () const
Reset list of edges at its top position (Constant version)
- [Edge](#) * [get](#) ()
Return pointer to current edge and move to next one (Non constant version)
- [Edge](#) * [get](#) () const
Return pointer to current edge and move to next one (Constant version)

7.19.1 Detailed Description

Class to construct a list of edges having some common properties.

This class enables choosing multiple selection criteria by using function `select...`. However, the intersection of these properties must be empty.

7.19.2 Member Function Documentation

void selectCode (int code, int dof = 1)

Select edges having a given code for a given degree of freedom.

Parameters

in	code	Code that edges share
in	dof	Degree of Freedom label [Default: 1]

void unselectCode (int code, int dof = 1)

Unselect edges having a given code for a given degree of freedom.

Parameters

in	code	Code of edges to exclude
in	dof	Degree of Freedom label [Default: 1]

7.20 EigenProblemSolver Class Reference

Class to find eigenvalues and corresponding eigenvectors of a given matrix in a generalized eigenproblem, *i.e.* Find scalars λ and non-null vectors v such that $[K]\{v\} = \lambda[M]\{v\}$ where $[K]$ and $[M]$ are symmetric matrices. The eigenproblem can be originated from a PDE. For this, we will refer to the matrices K and M as *Stiffness* and *Mass* matrices respectively.

Public Member Functions

- [EigenProblemSolver \(\)](#)
Default constructor.
- [EigenProblemSolver \(DSMatrix< real_t > &K, int n=0\)](#)
Constructor for a dense symmetric matrix that computes the eigenvalues.
- [EigenProblemSolver \(SkSMatrix< real_t > &K, SkSMatrix< real_t > &M, int n=0\)](#)
Constructor for Symmetric Skyline Matrices.
- [EigenProblemSolver \(SkSMatrix< real_t > &K, Vect< real_t > &M, int n=0\)](#)
Constructor for Symmetric Skyline Matrices.
- [EigenProblemSolver \(DSMatrix< real_t > &A, Vect< real_t > &ev, int n=0\)](#)
Constructor for a dense matrix that compute the eigenvalues.
- [EigenProblemSolver \(AbsEqua< real_t > &eq, bool lumped=true\)](#)
Constrtuctor using partial differential equation.
- [~EigenProblemSolver \(\)](#)
Destructor.
- void [setMatrix](#) (SkSMatrix< real_t > &K, SkSMatrix< real_t > &M)
Set matrix instances (Symmetric matrices).
- void [setMatrix](#) (SkSMatrix< real_t > &K, Vect< real_t > &M)
Set matrix instances (Symmetric matrices).

- void `setMatrix` (`DSMatrix< real.t > &K`)
Set matrix instance (Symmetric matrix).
- void `setPDE` (`AbsEqua< real.t > &eq`, `bool lumped=true`)
Define partial differential equation to solve.
- int `run` (`int nb=0`)
Run the eigenproblem solver.
- void `Assembly` (`const Element &el`, `real.t *eK`, `real.t *eM`)
Assemble element arrays into global matrices.
- void `SAssembly` (`const Side &sd`, `real.t *sK`)
Assemble side arrays into global matrix and right-hand side.
- int `runSubSpace` (`size_t nb_eigv`, `size_t ss_dim=0`)
Run the subspace iteration solver.
- void `setSubspaceDimension` (`int dim`)
Define the subspace dimension.
- void `setMaxIter` (`int max_it`)
set maximal number of iterations.
- void `setTolerance` (`real.t eps`)
set tolerance value
- int `checkSturm` (`int &nb_found`, `int &nb_lost`)
Check how many eigenvalues have been found using Sturm sequence method.
- int `getNbIter` () const
Return actual number of performed iterations.
- `real.t` `getEigenValue` (`int n`) const
Return the n-th eigenvalue.
- void `getEigenvector` (`int n`, `Vect< real.t > &v`) const
Return the n-th eigenvector.

7.20.1 Detailed Description

Class to find eigenvalues and corresponding eigenvectors of a given matrix in a generalized eigenproblem, *i.e.* Find scalars λ and non-null vectors \mathbf{v} such that $[\mathbf{K}]\{\mathbf{v}\} = \lambda[\mathbf{M}]\{\mathbf{v}\}$ where $[\mathbf{K}]$ and $[\mathbf{M}]$ are symmetric matrices. The eigenproblem can be originated from a PDE. For this, we will refer to the matrices \mathbf{K} and \mathbf{M} as *Stiffness* and *Mass* matrices respectively.

7.20.2 Constructor & Destructor Documentation

EigenProblemSolver (`DSMatrix< real.t > & K`, `int n = 0`)

Constructor for a dense symmetric matrix that computes the eigenvalues.

This constructor solves in place the eigenvalues problem and stores them in a vector (No need to use the function `runSubSpace`). The eigenvectors can be obtained by calling the member function `getEigenvector`.

Parameters

in	K	<code>Matrix</code> for which eigenmodes are sought.
in	n	Number of eigenvalues to extract. By default all eigenvalues are computed.

EigenProblemSolver (SkSMatrix< real.t > & K, SkSMatrix< real.t > & M, int n = 0)

Constructor for Symmetric Skyline Matrices.

Parameters

in	K	"Stiffness" matrix
in	M	"Mass" matrix
in	n	Number of eigenvalues to extract. By default all eigenvalues are computed.

Note

The generalized eigenvalue problem is defined by $Kx = \lambda Mx$, where K and M are referred to as stiffness and mass matrix.

EigenProblemSolver (SkSMatrix< real.t > & K, Vect< real.t > & M, int n = 0)

Constructor for Symmetric Skyline Matrices.

Parameters

in	K	"Stiffness" matrix
in	M	Diagonal "Mass" matrix stored as a Vect instance
in	n	Number of eigenvalues to extract. By default all eigenvalues are computed.

Note

The generalized eigenvalue problem is defined by $Kx = \lambda Mx$, where K and M are referred to as stiffness and mass matrix.

EigenProblemSolver (DSMatrix< real.t > & A, Vect< real.t > & ev, int n = 0)

Constructor for a dense matrix that compute the eigenvalues.

This constructor solves in place the eigenvalues problem and stores them in a vector (No need to use the function `runSubSpace`). The eigenvectors can be obtained by calling the member function `getEigenvector`.

Parameters

in	A	Matrix for which eigenmodes are sought.
in	ev	Vector containing all computed eigenvalues sorted increasingly.
in	n	Number of eigenvalues to extract. By default all eigenvalues are computed.

Remarks

The vector `ev` does not need to be sized before.

EigenProblemSolver (AbsEqua< real.t > & eq, bool lumped = true)

Consructor using partial differential equation.

The used equation class must have been constructed using the [Mesh](#) instance

Parameters

in	<i>eq</i>	Reference to equation instance
in	<i>lumped</i>	Mass matrix is lumped (<i>true</i>) or not (<i>false</i>) [Default: <code>true</code>]

7.20.3 Member Function Documentation

void setMatrix (SkSMatrix< real.t > & K, SkSMatrix< real.t > & M)

Set matrix instances (Symmetric matrices).

This function is to be used when the default constructor is applied. Case where the mass matrix is consistent.

Parameters

in	<i>K</i>	Stiffness matrix instance
in	<i>M</i>	Mass matrix instance

void setMatrix (SkSMatrix< real.t > & K, Vect< real.t > & M)

Set matrix instances (Symmetric matrices).

This function is to be used when the default constructor is applied. Case where the mass matrix is (lumped) diagonal and stored in a vector.

Parameters

in	<i>K</i>	Stiffness matrix instance
in	<i>M</i>	Mass matrix instance where diagonal terms are stored as a vector.

void setMatrix (DSMatrix< real.t > & K)

Set matrix instance (Symmetric matrix).

This function is to be used when the default constructor is applied. Case of a standard (not generalized) eigen problem is to be solved

Parameters

in	<i>K</i>	Stiffness matrix instance
----	----------	---------------------------

void setPDE (AbsEqua< real.t > & eq, bool lumped = true)

Define partial differential equation to solve.

The used equation class must have been constructed using the [Mesh](#) instance

Parameters

Parameters

in	<i>eq</i>	Reference to equation instance
in	<i>lumped</i>	Mass matrix is lumped (<i>true</i>) or not (<i>false</i>) [Default: <code>true</code>]

int run (int *nb* = 0)

Run the eigenproblem solver.

Parameters

in	<i>nb</i>	Number of eigenvalues to be computed. By default, all eigenvalues are computed.
----	-----------	---

void Assembly (const Element & *el*, real_t * *eK*, real_t * *eM*)

Assemble element arrays into global matrices.

This member function is to be called from finite element equation classes

Parameters

in	<i>el</i>	Reference to Element class
in	<i>eK</i>	Pointer to element stiffness (or assimilated) matrix
in	<i>eM</i>	Pointer to element mass (or assimilated) matrix

void SAssembly (const Side & *sd*, real_t * *sK*)

Assemble side arrays into global matrix and right-hand side.

This member function is to be called from finite element equation classes

Parameters

in	<i>sd</i>	Reference to Side class
in	<i>sK</i>	Pointer to side stiffness

int runSubSpace (size_t *nb_eigv*, size_t *ss_dim* = 0)

Run the subspace iteration solver.

This function runs the Bathe subspace iteration method.

Parameters

in	<i>nb_eigv</i>	Number of eigenvalues to be extracted
in	<i>ss_dim</i>	Subspace dimension. Must be at least equal to the number eigenvalues to seek. [Default: <code>nb_eigv</code>]

Returns

1: Normal execution. Convergence has been achieved. 2: Convergence for eigenvalues has not been attained.

void setSubspaceDimension (int *dim*)

Define the subspace dimension.

Parameters

in	<i>dim</i>	Subspace dimension. Must be larger or equal to the number of wanted eigenvalues. By default this value will be set to the number of wanted eigenvalues
----	------------	--

void setTolerance (real.t *eps*)

set tolerance value

Parameters

in	<i>eps</i>	Convergence tolerance for eigenvalues [Default: 1.e-8]
----	------------	--

int checkSturm (int & *nb_found*, int & *nb_lost*)

Check how many eigenvalues have been found using Sturm sequence method.

Parameters

out	<i>nb_found</i>	number of eigenvalues actually found
out	<i>nb_lost</i>	number of eigenvalues missing

Returns

- 0, Successful completion of subroutine.
- 1, No convergent eigenvalues found.

void getEigenvector (int *n*, Vect< real.t > & *v*) const

Return the n-th eigenvector.


Parameters

in	<i>n</i>	Label of eigenvector (They are stored in ascending order of eigenvalues)
in,out	<i>v</i>	Vect instance where the eigenvector is stored.

7.21 Elas2DQ4 Class Reference

To build element equations for 2-D linearized elasticity using 4-node quadrilaterals.

Inheritance diagram for Elas2DQ4:

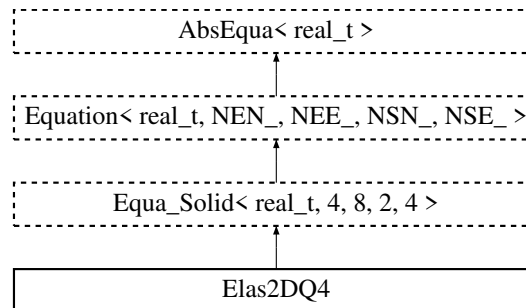

Public Member Functions

- **Elas2DQ4** ()
Default Constructor.
- **Elas2DQ4** (const **Element** *el)
Constructor using element data.
- **Elas2DQ4** (const **Side** *sd)
Constructor using side data.
- **Elas2DQ4** (const **Element** *element, const **Vect**< **real_t** > &u, const **real_t** &time=0.)
Constructor using element and previous time data.
- **Elas2DQ4** (const **Side** *side, const **Vect**< **real_t** > &u, const **real_t** &time=0.)
Constructor using side and previous time data.
- **~Elas2DQ4** ()
Destructor.
- void **PlaneStrain** ()
Set plane strain hypothesis.
- void **PlaneStrain** (**real_t** E, **real_t** nu)
Set plane strain hypothesis by giving values of Young's modulus and Poisson ratio.
- void **PlaneStress** ()
Set plane stress hypothesis.
- void **PlaneStress** (**real_t** E, **real_t** nu)
Set plane stress hypothesis by giving values of Young's modulus and Poisson ratio.
- void **LMassToLHS** (**real_t** coef=1.)
Add element lumped mass contribution to matrix after multiplication by coef [Default: 1].
- void **LMassToRHS** (**real_t** coef=1.)
Add element lumped mass contribution to right-hand side after multiplication by coef [Default: 1].
- void **LMass** (**real_t** coef=1.)
Add element lumped mass contribution to matrix and right-hand side after multiplication by coef [Default:↔ : 1].
- void **Mass** (**real_t** coef=1.)
Add element consistent mass contribution to matrix and right-hand side after multiplication by coef [Default: 1].
- void **Deviator** (**real_t** coef=1.)

- Add element deviatoric matrix to left-hand side after multiplication by `coef` [Default: 1].*

 - void **DeviatorToRHS** (**real.t** coef=1.)
- Add element deviatoric contribution to right-hand side after multiplication by `coef` [Default: 1].*

 - void **Dilatation** (**real.t** coef=1.)
- Add element dilatational contribution to left-hand side after multiplication by `coef` [Default: 1].*

 - void **DilatationToRHS** (**real.t** coef=1.)
- Add element dilatational contribution to right hand side after multiplication by `coef` [Default: 1].*

 - void **BodyRHS** (**UserData**< **real.t** > &ud)
- Add body right-hand side term to right hand side after multiplication by `coef`*

 - void **BodyRHS** (const **Vect**< **real.t** > &bf, int opt=**GLOBAL_ARRAY**)
- Add body right-hand side term to right hand side.*

 - void **BoundaryRHS** (**UserData**< **real.t** > &ud)
- Add boundary right-hand side term to right hand side after multiplication by `coef`*

 - void **BoundaryRHS** (const **Vect**< **real.t** > &sf)
- Add boundary right-hand side term to right hand side.*

 - int **SignoriniContact** (**UserData**< **real.t** > &ud, **real.t** coef=1.e07)
- Penalty Signorini contact side contribution to matrix and right-hand side.*

 - void **Strain** (**LocalVect**< **real.t**, 3 > &eps)
- Calculate strains at element barycenter.*

 - void **Stress** (**LocalVect**< **real.t**, 3 > &s, **real.t** &vm)
- Calculate principal stresses and Von-Mises stress at element barycenter.*

 - void **Stress** (**LocalVect**< **real.t**, 3 > &sigma, **LocalVect**< **real.t**, 3 > &s, **real.t** &vm)
- Calculate principal stresses and Von-Mises stress at element barycenter.*

 - virtual void **MassToLHS** (**real.t** coef=1)
- Add consistent mass contribution to left-hand side.*

 - virtual void **MassToRHS** (**real.t** coef=1)
- Add consistent mass contribution to right-hand side.*

 - void **setLumpedMass** ()
- Add lumped mass contribution to left and right-hand sides taking into account time integration scheme.*

 - void **setMass** ()
- Add consistent mass contribution to left and right-hand sides taking into account time integration scheme.*

 - virtual void **Stiffness** (**real.t** coef=1)
- Add stiffness matrix to left-hand side taking into account time integration scheme, after multiplication by `coef` [Default: 1].*

 - virtual void **StiffnessToRHS** (**real.t** coef=1)
- Add stiffness matrix to right-hand side taking into account time integration scheme, after multiplication by `coef` [Default: 1].*

 - void **setDilatation** ()
- Add dilatation matrix to left and/or right-hand side taking into account time.*

 - void **setDeviator** ()
- Add deviator matrix to left and/or right-hand side taking into account time integration scheme.*

 - void **setStiffness** ()
- Add convection contribution to left and/or right-hand side taking into account time integration scheme.*

 - void **updateBC** (const **Element** &el, const **Vect**< **real.t** > &bc)
- Update Right-Hand side by taking into account essential boundary conditions.*

 - void **updateBC** (const **Vect**< **real.t** > &bc)
- Update Right-Hand side by taking into account essential boundary conditions.*

- void **DiagBC** (int dof_type=NODE.DOF, int dof=0)
Update element matrix to impose bc by diagonalization technique.
- void **LocalNodeVector** (Vect< real_t > &b)
Localize Element Vector from a Vect instance.
- void **ElementNodeVector** (const Vect< real_t > &b, LocalVect< real_t, NEE_ > &be)
Localize Element Vector from a Vect instance.
- void **ElementNodeVector** (const Vect< real_t > &b, LocalVect< real_t, NEN_ > &be, int dof)
Localize Element Vector from a Vect instance.
- void **ElementNodeVectorSingleDOF** (const Vect< real_t > &b, LocalVect< real_t, NEN_ > &be)
Localize Element Vector from a Vect instance.
- void **ElementSideVector** (const Vect< real_t > &b, LocalVect< real_t, NSE_ > &be)
Localize Element Vector from a Vect instance.
- void **ElementVector** (const Vect< real_t > &b, int dof_type=NODE.FIELD, int flag=0)
Localize Element Vector.
- void **SideVector** (const Vect< real_t > &b)
Localize Side Vector.
- void **ElementNodeCoordinates** ()
Localize coordinates of element nodes.
- void **SideNodeCoordinates** ()
Localize coordinates of side nodes.
- void **ElementAssembly** (Matrix< real_t > *A)
Assemble element matrix into global one.
- void **ElementAssembly** (PETScMatrix< real_t > &A)
Assemble element matrix into global one.
- void **ElementAssembly** (PETScVect< real_t > &b)
Assemble element right-hand side vector into global one.
- void **ElementAssembly** (BMatrix< real_t > &A)
Assemble element matrix into global one.
- void **ElementAssembly** (SkSMatrix< real_t > &A)
Assemble element matrix into global one.
- void **ElementAssembly** (SkMatrix< real_t > &A)
Assemble element matrix into global one.
- void **ElementAssembly** (SpMatrix< real_t > &A)
Assemble element matrix into global one.
- void **ElementAssembly** (TrMatrix< real_t > &A)
Assemble element matrix into global one.
- void **ElementAssembly** (Vect< real_t > &v)
Assemble element vector into global one.
- void **SideAssembly** (PETScMatrix< real_t > &A)
Assemble side matrix into global one.
- void **SideAssembly** (PETScVect< real_t > &b)
Assemble side right-hand side vector into global one.
- void **SideAssembly** (Matrix< real_t > *A)
Assemble side (edge or face) matrix into global one.
- void **SideAssembly** (SkSMatrix< real_t > &A)
Assemble side (edge or face) matrix into global one.

- void **SideAssembly** (SkMatrix< real.t > &A)
Assemble side (edge or face) matrix into global one.
- void **SideAssembly** (SpMatrix< real.t > &A)
Assemble side (edge or face) matrix into global one.
- void **SideAssembly** (Vect< real.t > &v)
Assemble side (edge or face) vector into global one.
- void **DGElementAssembly** (Matrix< real.t > *A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void **DGElementAssembly** (SkSMMatrix< real.t > &A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void **DGElementAssembly** (SkMatrix< real.t > &A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void **DGElementAssembly** (SpMatrix< real.t > &A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void **DGElementAssembly** (TrMatrix< real.t > &A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void **AxbAssembly** (const Element &el, const Vect< real.t > &x, Vect< real.t > &b)
Assemble product of element matrix by element vector into global vector.
- void **AxbAssembly** (const Side &sd, const Vect< real.t > &x, Vect< real.t > &b)
Assemble product of side matrix by side vector into global vector.
- size_t **getNbNodes** () const
Return number of element nodes.
- size_t **getNbEq** () const
Return number of element equations.
- void **setInitialSolution** (const Vect< real.t > &u)
Set initial solution (previous time step)
- real.t **setMaterialProperty** (const string &exp, const string &prop)
Define a material property by an algebraic expression.
- void **setMesh** (Mesh &m)
Define mesh and renumber DOFs after removing imposed ones.
- Mesh & **getMesh** () const
Return reference to Mesh instance.
- LinearSolver< real.t > & **getLinearSolver** ()
Return reference to linear solver instance.
- void **setSolver** (Iteration ls, Preconditioner pc=IDENT_PREC)
Choose solver for the linear system.
- int **SolveLinearSystem** (Matrix< real.t > *A, Vect< real.t > &b, Vect< real.t > &x)
Solve the linear system.

Public Attributes

- LocalMatrix< real.t, NEE_, NEE_ > **eMat**
LocalMatrix instance containing local matrix associated to current element.
- LocalMatrix< real.t, NSE_, NSE_ > **sMat**
LocalMatrix instance containing local matrix associated to current side.
- LocalVect< real.t, NEE_ > **ePrev**
LocalVect instance containing local vector associated to current element.

- `LocalVect< real_t, NEE_ > eRHS`
LocalVect instance containing local right-hand side vector associated to current element.
- `LocalVect< real_t, NEE_ > eRes`
LocalVect instance containing local residual vector associated to current element.
- `LocalVect< real_t, NSE_ > sRHS`
LocalVect instance containing local right-hand side vector associated to current side.

Protected Member Functions

- `void Young (const real_t &E)`
Set (constant) Young modulus.
- `void Young (const string &exp)`
Set Young modulus given by an algebraic expression.
- `void Poisson (const real_t &nu)`
Set (constant) Poisson ratio.
- `void Poisson (const string &exp)`
Set Poisson ratio given by an algebraic expression.
- `void Density (const real_t &rho)`
Set (constant) density.
- `void Density (const string &exp)`
Set density given by an algebraic expression.
- `void setMaterial ()`
Set material properties.
- `void Init (const Element *el)`
Set element arrays to zero.
- `void Init (const Side *sd)`
Set side arrays to zero.

7.21.1 Detailed Description

To build element equations for 2-D linearized elasticity using 4-node quadrilaterals.

This class enables building finite element arrays for linearized isotropic elasticity problem in 2-D domains using 4-Node quadrilaterals.

Unilateral contact is handled using a penalty function. Note that members calculating element arrays have as an argument a real coef that is multiplied by the contribution of the current element. This makes possible testing different algorithms.

7.21.2 Constructor & Destructor Documentation

`Elas2DQ4 ()`

Default Constructor.

Constructs an empty equation.

Parameters

Elas2DQ4 (**const** **Element** * *element*, **const** **Vect**< **real.t** > & *u*, **const** **real.t** & *time* = 0.)

Constructor using element and previous time data.

Parameters

in	<i>element</i>	Pointer to element
in	<i>u</i>	Vect instance containing solution at previous time step
in	<i>time</i>	Current time value [Default: 0]

Elas2DQ4 (**const** **Side** * *side*, **const** **Vect**< **real.t** > & *u*, **const** **real.t** & *time* = 0.)

Constructor using side and previous time data.

Parameters

in	<i>side</i>	Pointer to side
in	<i>u</i>	Vect instance containing solution at previous time step
in	<i>time</i>	Current time value [Default: 0]

7.21.3 Member Function Documentation

void **PlaneStrain** (**real.t** *E*, **real.t** *nu*)

Set plane strain hypothesis by giving values of Young's modulus and Poisson ratio.

Parameters

in	<i>E</i>	Young's modulus
in	<i>nu</i>	Poisson ratio

void **PlaneStress** (**real.t** *E*, **real.t** *nu*)

Set plane stress hypothesis by giving values of Young's modulus and Poisson ratio.

Parameters

in	<i>E</i>	Young's modulus
in	<i>nu</i>	Poisson ratio

void **DilatationToRHS** (**real.t** *coef* = 1.) [virtual]

Add element dilatational contribution to right hand side after multiplication by *coef* [Default: 1].

To use for explicit formulations

Reimplemented from [Equa.Solid< real_t, 4, 8, 2, 4 >](#).

void BodyRHS (UserData< real_t > & ud)

Add body right-hand side term to right hand side after multiplication by coef
Body forces are deduced from [UserData](#) instance ud

void BodyRHS (const Vect< real_t > & bf, int opt = GLOBAL_ARRAY)

Add body right-hand side term to right hand side.

Parameters

in	<i>bf</i>	Vector containing source at element nodes (DOF by DOF).
in	<i>opt</i>	Vector is local (LOCAL_ARRAY) with size 8 or global (GLOBAL_ARRAY) with size = Total number of DOF [Default: GLOBAL_ARRAY].

void BoundaryRHS (UserData< real_t > & ud)

Add boundary right-hand side term to right hand side after multiplication by coef
Boundary forces are deduced from [UserData](#) instance ud

void BoundaryRHS (const Vect< real_t > & sf)

Add boundary right-hand side term to right hand side.

Parameters

in	<i>sf</i>	Vector containing source at element nodes (DOF by DOF).
----	-----------	---

Warning

The vector *sf* is sidewise constant, *i.e.* its size is twice the number of sides.

int SignoriniContact (UserData< real_t > & ud, real_t coef = 1.e07)

Penalty Signorini contact side contribution to matrix and right-hand side.

Parameters

in	<i>ud</i>	UserData instance defining contact data
in	<i>coef</i>	Penalty value by which the added term is multiplied [Default: 1.e07]

Returns

0 if no contact was realized on this side, 1 otherwise

void Strain (LocalVect< real_t, 3 > & eps)

Calculate strains at element barycenter.

Parameters

out	<i>eps</i>	Vector containing strains in element
-----	------------	--------------------------------------

void Stress (LocalVect< real_t, 3 > & s, real_t & vm)

Calculate principal stresses and Von-Mises stress at element barycenter.

Parameters

out	<i>s</i>	LocalVect containing principal stresses in element
out	<i>vm</i>	Value of Von-Mises stress in element

void Stress (LocalVect< real_t, 3 > & sigma, LocalVect< real_t, 3 > & s, real_t & vm)

Calculate principal stresses and Von-Mises stress at element barycenter.

Parameters

out	<i>sigma</i>	Vector containing principal stresses in element
out	<i>s</i>	Vector containing principal stresses in element
out	<i>vm</i>	Value of Von-Mises stress in element

virtual void MassToLHS (real_t coef = 1) [virtual], [inherited]

Add consistent mass contribution to left-hand side.

Parameters

in	<i>coef</i>	coefficient to multiply by the matrix before adding [Default: 1]
----	-------------	--

virtual void MassToRHS (real_t coef = 1) [virtual], [inherited]

Add consistent mass contribution to right-hand side.

Parameters

in	<i>coef</i>	coefficient to multiply by the vector before adding [Default: 1]
----	-------------	--

void updateBC (const Element & el, const Vect< real_t > & bc) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>el</i>	Reference to current element instance
----	-----------	---------------------------------------

Parameters

in	<i>bc</i>	Vector that contains imposed values at all DOFs
----	-----------	---

void updateBC (const Vect< real.t > &bc) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>bc</i>	Vector that contains imposed values at all DOFs
----	-----------	---

Remarks

The current element is pointed by `_theElement`

void DiagBC (int dof.type = NODE_DOF, int dof = 0) [inherited]

Update element matrix to impose bc by diagonalization technique.

Parameters

in	<i>dof.type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • <code>NODE_FIELD</code>, DOFs are supported by nodes [Default] • <code>ELEMENT_FIELD</code>, DOFs are supported by elements • <code>SIDE_FIELD</code>, DOFs are supported by sides
in	<i>dof</i>	DOF setting: <ul style="list-style-type: none"> • <code>= 0</code>, All DOFs are taken into account [Default] • <code>!= 0</code>, Only DOF No. <code>dof</code> is handled in the system

void LocalNodeVector (Vect< real.t > &b) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Reference to global vector to be localized. The resulting local vector can be accessed by attribute <code>ePrev</code> . This member function is to be used if a constructor with <code>Element</code> was invoked.
----	----------	---

void ElementNodeVector (const Vect< real_t > & b, LocalVect< real_t, NEE_ > & be)
[inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

All degrees of freedom are transferred to the local vector

void ElementNodeVector (const Vect< real_t > & b, LocalVect< real_t, NEN_ > & be, int dof)
[inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.
in	<i>dof</i>	Degree of freedom to transfer to the local vector

Remarks

Only yhe dega dof is transferred to the local vector

void ElementNodeVectorSingleDOF (const Vect< real_t > & b, LocalVect< real_t, NEN_ > & be)
[inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

Vector b is assumed to contain only one degree of freedom by node.

void ElementSideVector (const Vect< real_t > & b, LocalVect< real_t, NSE_ > & be)
[inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
----	----------	--------------------------------

Parameters

out	<i>be</i>	Local vector, the length of which is
-----	-----------	--------------------------------------

void ElementVector (const Vect< real_t > & b, int dof_type = NODE_FIELD, int flag = 0)
[inherited]

Localize Element Vector.

Parameters

in	<i>b</i>	Global vector to be localized
in	<i>dof_type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • NODE_FIELD, DOFs are supported by nodes [Default] • ELEMENT_FIELD, DOFs are supported by elements • SIDE_FIELD, DOFs are supported by sides
in	<i>flag</i>	Option to set: <ul style="list-style-type: none"> • = 0, All DOFs are taken into account [Default] • != 0, Only DOF number dof is handled in the system The resulting local vector can be accessed by attribute ePrev.

Remarks

This member function is to be used if a constructor with Element was invoked. It uses the Element pointer `_theElement`

void SideVector (const Vect< real_t > & b) [inherited]

Localize Side Vector.

Parameters

in	<i>b</i>	Global vector to be localized <ul style="list-style-type: none"> • NODE_FIELD, DOFs are supported by nodes [default] • ELEMENT_FIELD, DOFs are supported by elements • SIDE_FIELD, DOFs are supported by sides The resulting local vector can be accessed by attribute ePrev.
----	----------	--

Remarks

This member function is to be used if a constructor with Side was invoked. It uses the Side pointer `_theSide`

void ElementNodeCoordinates () [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array `_x[0]`, `_x[1]`, ... which are instances of class [Point<real_t>](#)

Remarks

This member function uses the Side pointer `_theSide`

void SideNodeCoordinates () [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array `_x[0]`, `_x[1]`, ... which are instances of class [Point<real_t>](#)

Remarks

This member function uses the Element pointer `_theElement`

void ElementAssembly (Matrix< real_t > * A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Pointer to global matrix (abstract class: can be any of classes <code>SkSMatrix</code> , <code>SkMatrix</code> , <code>SpMatrix</code>)
----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScMatrix< real_t > & A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Reference to global matrix
----------	----------------------------

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScVect< real_t > & b) [inherited]

Assemble element right-hand side vector into global one.

Parameters

<i>b</i>	Reference to global right-hand side vector
----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (BMatrix< real_t > & A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Global matrix stored as a BMatrix instance
----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkSMatrix< real_t > & A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Global matrix stored as an SkSMatrix instance
----------	---

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkMatrix< real_t > & A) [inherited]

Assemble element matrix into global one.

Parameters

<i>in</i>	<i>A</i>	Global matrix stored as an SkMatrix instance
-----------	----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SpMatrix< real_t > & A) [inherited]

Assemble element matrix into global one.

Parameters

<i>in</i>	<i>A</i>	Global matrix stored as an SpMatrix instance
-----------	----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (TrMatrix< real.t > & A) [inherited]

Assemble element matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an TrMatrix instance
----	----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (Vect< real.t > & v) [inherited]

Assemble element vector into global one.

Parameters

in	<i>v</i>	Global vector (Vect instance)
----	----------	-------------------------------

Warning

The element pointer is given by the global variable `theElement`

void SideAssembly (PETScMatrix< real.t > & A) [inherited]

Assemble side matrix into global one.

Parameters

<i>A</i>	Reference to global matrix
----------	----------------------------

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (PETScVect< real.t > & b) [inherited]

Assemble side right-hand side vector into global one.

Parameters

<i>b</i>	Reference to global right-hand side vector
----------	--

Warning

The side pointer is given by the global variable theSide

void SideAssembly (Matrix< real.t > * A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
---	--

Warning

The side pointer is given by the global variable theSide

void SideAssembly (SkSMatrix< real.t > & A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	A	Global matrix stored as an SkSMatrix instance
----	---	---

Warning

The side pointer is given by the global variable theSide

void SideAssembly (SkMatrix< real.t > & A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

Warning

The side pointer is given by the global variable theSide

void SideAssembly (SpMatrix< real.t > & A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	A	Global matrix stored as an SpMatrix instance
----	---	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (Vect< real_t > & v) [inherited]

Assemble side (edge or face) vector into global one.

Parameters

in	<i>v</i>	Global vector (Vect instance)
----	----------	-------------------------------

Warning

The side pointer is given by the global variable `theSide`

void DGElementAssembly (Matrix< real_t > * A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

<i>A</i>	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
----------	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SkSMatrix< real_t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

<i>A</i>	Global matrix stored as an SkSMatrix instance
----------	---

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SkMatrix< real_t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	<i>A</i>	Global matrix stored as an SkMatrix instance
----	----------	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SpMatrix< real.t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	<i>A</i>	Global matrix stored as an SpMatrix instance
----	----------	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (TrMatrix< real.t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	<i>A</i>	Global matrix stored as an TrMatrix instance
----	----------	--

Warning

The element pointer is given by the global variable `theElement`

void AxbAssembly (const Element & *el*, const Vect< real.t > & *x*, Vect< real.t > & *b*)
[inherited]

Assemble product of element matrix by element vector into global vector.

Parameters

in	<i>el</i>	Reference to Element instance
in	<i>x</i>	Global vector to multiply by (Vect instance)
out	<i>b</i>	Global vector to add (Vect instance)

void AxbAssembly (const Side & *sd*, const Vect< real.t > & *x*, Vect< real.t > & *b*)
[inherited]

Assemble product of side matrix by side vector into global vector.

Parameters

in	<i>sd</i>	Reference to Side instance
in	<i>x</i>	Global vector to multiply by (Vect instance)
out	<i>b</i>	Global vector (Vect instance)

real.t setMaterialProperty (const string & *exp*, const string & *prop*) [inherited]

Define a material property by an algebraic expression.

Parameters

in	<i>exp</i>	Algebraic expression
in	<i>prop</i>	Property name

Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

Mesh& getMesh () const [inherited]

Return reference to Mesh instance.

Returns

Reference to Mesh instance

void setSolver (Iteration *ls*, Preconditioner *pc* = *IDENT_PREC*) [inherited]

Choose solver for the linear system.

Parameters

in	<i>ls</i>	<p>Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER</p> <ul style="list-style-type: none"> • DIRECT_SOLVER, Use a facorization solver [default] • CG_SOLVER, Conjugate Gradient iterative solver • CGS_SOLVER, Squared Conjugate Gradient iterative solver • BICG_SOLVER, BiConjugate Gradient iterative solver • BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver • GMRES_SOLVER, GMRES iterative solver • QMR_SOLVER, QMR iterative solver
in	<i>pc</i>	<p>Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:</p> <ul style="list-style-type: none"> • IDENT_PREC, Identity preconditioner (no preconditioning [default]) • DIAG_PREC, Diagonal preconditioner • ILU_PREC, Incomplete LU factorization preconditioner

int SolveLinearSystem (Matrix< real_t > * A, Vect< real_t > & b, Vect< real_t > & x)
 [inherited]

Solve the linear system.

Parameters

in	<i>A</i>	Pointer to matrix of the system (Instance of class SpMatrix)
in	<i>b</i>	Vector containing right-hand side
in,out	<i>x</i>	Vector containing initial guess of solution on input, actual solution on output

7.21.4 Member Data Documentation

LocalVect<real_t,NEE_> ePrev [inherited]


LocalVect instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

7.22 Elas2DT3 Class Reference

To build element equations for 2-D linearized elasticity using 3-node triangles.

Inheritance diagram for Elas2DT3:

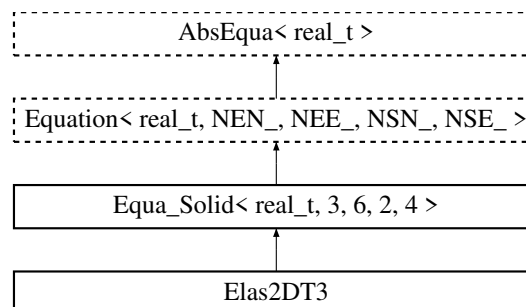

Public Member Functions

- [Elas2DT3 \(\)](#)
Default Constructor.
- [Elas2DT3 \(Mesh &ms\)](#)
Constructor using [Mesh](#) data.
- [Elas2DT3 \(const Element *el\)](#)
Constructor using element data.
- [Elas2DT3 \(const Side *sd\)](#)
Constructor using side data.
- [Elas2DT3 \(const Element *el, const Vect< real_t > &u, real_t time=0.\)](#)
Constructor using element, previous time solution [u](#) and time value.
- [Elas2DT3 \(const Element *el, const Vect< real_t > &u, real_t time, real_t deltat, int scheme\)](#)
Constructor for an element (transient case) with specification of time integration scheme.
- [Elas2DT3 \(const Side *sd, const Vect< real_t > &u, real_t time=0.\)](#)

- Constructor using *side*, previous time solution *u* and time value.

 - `Elas2DT3` (const `Side` *sd, const `Vect`< `real_t` > &u, `real_t` time, `real_t` deltat, int scheme)

Constructor for a *side* (transient case) with specification of time integration scheme.
- `~Elas2DT3` ()
- Destructor.

 - void `Media` (`real_t` E, `real_t` nu, `real_t` rho)

Set media properties.
- void `PlaneStrain` ()
- Set plane strain hypothesis.

 - void `PlaneStrain` (`real_t` E, `real_t` nu)

Set plane strain hypothesis by giving values of Young's modulus *E* and Poisson ratio *nu*
- void `PlaneStress` ()
- Set plane stress hypothesis.

 - void `PlaneStress` (`real_t` E, `real_t` nu)

Set plane stress hypothesis by giving values of Young's modulus *E* and Poisson ratio *nu*
- void `LMassToLHS` (`real_t` coef=1.)
- Add element lumped mass contribution to matrix after multiplication by *coef*
- void `LMassToRHS` (`real_t` coef=1.)
- Add element lumped mass contribution to right-hand side after multiplication by *coef*
- void `LMass` (`real_t` coef=1.)
- Add element lumped mass contribution to matrix and right-hand side after multiplication by *coef*
- void `MassToLHS` (`real_t` coef=1.)
- Add element consistent mass contribution to matrix after multiplication by *coef*
- void `MassToRHS` (`real_t` coef=1.)
- Add element consistent mass contribution to right-hand side after multiplication by *coef*
- void `Mass` (`real_t` coef=1.)
- Add element consistent mass contribution to matrix and right-hand side after multiplication by *coef*
- void `Deviator` (`real_t` coef=1.)
- Add element deviatoric matrix to left-hand side after multiplication by *coef*
- void `DeviatorToRHS` (`real_t` coef=1.)
- Add element deviatoric contribution to right-hand side after multiplication by *coef*
- void `Dilatation` (`real_t` coef=1.)
- Add element dilatational contribution to left-hand side after multiplication by *coef*
- void `DilatationToRHS` (`real_t` coef=1.)
- Add element dilatational contribution to right-hand side after multiplication by *coef*
- void `BodyRHS` (`UserData`< `real_t` > &ud)
- Add body right-hand side term to right-hand side after multiplication by *coef*
- void `BodyRHS` (const `Vect`< `real_t` > &f, int opt=GLOBAL_ARRAY)
- Add body right-hand side term to right hand side.
- void `BoundaryRHS` (`UserData`< `real_t` > &ud)
- Add boundary right-hand side term to right hand side after multiplication by *coef*
- void `BoundaryRHS` (const `Vect`< `real_t` > &f)
- Add boundary right-hand side term to right hand side.
- int `SignoriniContact` (`UserData`< `real_t` > &ud, `real_t` coef=1.e07)
- Penalty Signorini contact side contribution to matrix and right-hand side.
- int `SignoriniContact` (`Vect`< `real_t` > &f, `real_t` coef=1.e07)

- Penalty Signorini contact side contribution to matrix and right-hand side.*

 - void **Reaction** (**Vect**< **real.t** > &r)

Calculate reactions.
- void **ContactPressure** (const **Vect**< **real.t** > &f, **real.t** penal, **Point**< **real.t** > &p)

Calculate contact pressure.
- void **Strain** (**Vect**< **real.t** > &eps)

Calculate strains in element.
- void **Stress** (**Vect**< **real.t** > &s, **real.t** &vm)

Calculate principal stresses and Von-Mises stress in element.
- void **Periodic** (**real.t** coef=1.e20)

Add contribution of periodic boundary condition (by a penalty technique).
- void **setLumpedMass** ()

Add lumped mass contribution to left and right-hand sides taking into account time integration scheme.
- void **setMass** ()

Add consistent mass contribution to left and right-hand sides taking into account time integration scheme.
- virtual void **Stiffness** (**real.t** coef=1)

Add stiffness matrix to left-hand side taking into account time integration scheme, after multiplication by coef [Default: 1].
- virtual void **StiffnessToRHS** (**real.t** coef=1)

Add stiffness matrix to right-hand side taking into account time integration scheme, after multiplication by coef [Default: 1].
- void **setDilatation** ()

Add dilatation matrix to left and/or right-hand side taking into account time.
- void **setDeviator** ()

Add deviator matrix to left and/or right-hand side taking into account time integration scheme.
- void **setStiffness** ()

Add convection contribution to left and/or right-hand side taking into account time integration scheme.
- void **updateBC** (const **Element** &el, const **Vect**< **real.t** > &bc)

Update Right-Hand side by taking into account essential boundary conditions.
- void **updateBC** (const **Vect**< **real.t** > &bc)

Update Right-Hand side by taking into account essential boundary conditions.
- void **DiagBC** (int dof_type=NODE.DOF, int dof=0)

Update element matrix to impose bc by diagonalization technique.
- void **LocalNodeVector** (**Vect**< **real.t** > &b)

Localize Element Vector from a Vect instance.
- void **ElementNodeVector** (const **Vect**< **real.t** > &b, **LocalVect**< **real.t**, **NEE_** > &be)

Localize Element Vector from a Vect instance.
- void **ElementNodeVector** (const **Vect**< **real.t** > &b, **LocalVect**< **real.t**, **NEN_** > &be, int dof)

Localize Element Vector from a Vect instance.
- void **ElementNodeVectorSingleDOF** (const **Vect**< **real.t** > &b, **LocalVect**< **real.t**, **NEN_** > &be)

Localize Element Vector from a Vect instance.
- void **ElementSideVector** (const **Vect**< **real.t** > &b, **LocalVect**< **real.t**, **NSE_** > &be)

Localize Element Vector from a Vect instance.
- void **ElementVector** (const **Vect**< **real.t** > &b, int dof_type=NODE.FIELD, int flag=0)

Localize Element Vector.
- void **SideVector** (const **Vect**< **real.t** > &b)

Localize Side Vector.

- void [ElementNodeCoordinates](#) ()
Localize coordinates of element nodes.
- void [SideNodeCoordinates](#) ()
Localize coordinates of side nodes.
- void [ElementAssembly](#) (Matrix< real_t > *A)
Assemble element matrix into global one.
- void [ElementAssembly](#) (PETScMatrix< real_t > &A)
Assemble element matrix into global one.
- void [ElementAssembly](#) (PETScVect< real_t > &b)
Assemble element right-hand side vector into global one.
- void [ElementAssembly](#) (BMatrix< real_t > &A)
Assemble element matrix into global one.
- void [ElementAssembly](#) (SkSMatrix< real_t > &A)
Assemble element matrix into global one.
- void [ElementAssembly](#) (SkMatrix< real_t > &A)
Assemble element matrix into global one.
- void [ElementAssembly](#) (SpMatrix< real_t > &A)
Assemble element matrix into global one.
- void [ElementAssembly](#) (TrMatrix< real_t > &A)
Assemble element matrix into global one.
- void [ElementAssembly](#) (Vect< real_t > &v)
Assemble element vector into global one.
- void [SideAssembly](#) (PETScMatrix< real_t > &A)
Assemble side matrix into global one.
- void [SideAssembly](#) (PETScVect< real_t > &b)
Assemble side right-hand side vector into global one.
- void [SideAssembly](#) (Matrix< real_t > *A)
Assemble side (edge or face) matrix into global one.
- void [SideAssembly](#) (SkSMatrix< real_t > &A)
Assemble side (edge or face) matrix into global one.
- void [SideAssembly](#) (SkMatrix< real_t > &A)
Assemble side (edge or face) matrix into global one.
- void [SideAssembly](#) (SpMatrix< real_t > &A)
Assemble side (edge or face) matrix into global one.
- void [SideAssembly](#) (Vect< real_t > &v)
Assemble side (edge or face) vector into global one.
- void [DGElementAssembly](#) (Matrix< real_t > *A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void [DGElementAssembly](#) (SkSMatrix< real_t > &A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void [DGElementAssembly](#) (SkMatrix< real_t > &A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void [DGElementAssembly](#) (SpMatrix< real_t > &A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void [DGElementAssembly](#) (TrMatrix< real_t > &A)

- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
 - void **AxbAssembly** (const **Element** &el, const **Vect**< **real.t** > &x, **Vect**< **real.t** > &b)
- Assemble product of element matrix by element vector into global vector.*
 - void **AxbAssembly** (const **Side** &sd, const **Vect**< **real.t** > &x, **Vect**< **real.t** > &b)
- Assemble product of side matrix by side vector into global vector.*
 - size_t **getNbNodes** () const
- Return number of element nodes.*
 - size_t **getNbEq** () const
- Return number of element equations.*
 - void **setInitialSolution** (const **Vect**< **real.t** > &u)
- Set initial solution (previous time step)*
 - **real.t** **setMaterialProperty** (const string &exp, const string &prop)
- Define a material property by an algebraic expression.*
 - void **setMesh** (**Mesh** &m)
- Define mesh and renumber DOFs after removing imposed ones.*
 - **Mesh** & **getMesh** () const
- Return reference to Mesh instance.*
 - **LinearSolver**< **real.t** > & **getLinearSolver** ()
- Return reference to linear solver instance.*
 - void **setSolver** (**Iteration** ls, **Preconditioner** pc=IDENT_PREC)
- Choose solver for the linear system.*
 - int **SolveLinearSystem** (**Matrix**< **real.t** > *A, **Vect**< **real.t** > &b, **Vect**< **real.t** > &x)
- Solve the linear system.*

Public Attributes

- **LocalMatrix**< **real.t**, NEE_, NEE_ > **eMat**
- LocalMatrix instance containing local matrix associated to current element.*
- **LocalMatrix**< **real.t**, NSE_, NSE_ > **sMat**
- LocalMatrix instance containing local matrix associated to current side.*
- **LocalVect**< **real.t**, NEE_ > **ePrev**
- LocalVect instance containing local vector associated to current element.*
- **LocalVect**< **real.t**, NEE_ > **eRHS**
- LocalVect instance containing local right-hand side vector associated to current element.*
- **LocalVect**< **real.t**, NEE_ > **eRes**
- LocalVect instance containing local residual vector associated to current element.*
- **LocalVect**< **real.t**, NSE_ > **sRHS**
- LocalVect instance containing local right-hand side vector associated to current side.*

Protected Member Functions

- void **Young** (const **real.t** &E)
- Set (constant) Young modulus.*
- void **Young** (const string &exp)
- Set Young modulus given by an algebraic expression.*
- void **Poisson** (const **real.t** &nu)
- Set (constant) Poisson ratio.*

- void **Poisson** (const string &exp)
Set Poisson ratio given by an algebraic expression.
- void **Density** (const **real.t** &rho)
Set (constant) density.
- void **Density** (const string &exp)
Set density given by an algebraic expression.
- void **setMaterial** ()
Set material properties.
- void **Init** (const **Element** *el)
Set element arrays to zero.
- void **Init** (const **Side** *sd)
Set side arrays to zero.

7.22.1 Detailed Description

To build element equations for 2-D linearized elasticity using 3-node triangles.

This class enables building finite element arrays for linearized isotropic elasticity problem in 2-D domains using 3-Node triangles.

Unilateral contact is handled using a penalty function. Note that members calculating element arrays have as an argument a real coef that is multiplied by the contribution of the current element. This makes possible testing different algorithms.

7.22.2 Constructor & Destructor Documentation

Elas2DT3 ()

Default Constructor.

Constructs an empty equation.

Elas2DT3 (Mesh & ms)

Constructor using **Mesh** data.

Parameters

in	ms	Mesh instance
-----------	-----------	----------------------

Elas2DT3 (const Element * el)

Constructor using element data.

Parameters

el	Pointer to Element instance
-----------	------------------------------------

Elas2DT3 (const Side * sd)

Constructor using side data.

Parameters

<i>sd</i>	Pointer to Side instance
-----------	--

Elas2DT3 (const Element * *el*, const Vect< real_t > & *u*, real_t *time* = 0.)

Constructor using element, previous time solution *u* and time value.

Parameters

in	<i>el</i>	Pointer to element.
in	<i>u</i>	Vect instance that contains solution at previous time step.
in	<i>time</i>	Current time value [Default: 0].

Elas2DT3 (const Element * *el*, const Vect< real_t > & *u*, real_t *time*, real_t *deltat*, int *scheme*)

Constructor for an element (transient case) with specification of time integration scheme.

Parameters

in	<i>el</i>	Pointer to element.
in	<i>u</i>	Vect instance that contains solution at previous time step.
in	<i>time</i>	Current time value.
in	<i>deltat</i>	Time step.
in	<i>scheme</i>	Time Integration Scheme: To be chosen among the enumerated values: <ul style="list-style-type: none"> • FORWARD_EULER: Forward Euler scheme • BACKWARD_EULER: Backward Euler scheme, • CRANK_NICOLSON: Crank-Nicolson Euler scheme.

Elas2DT3 (const Side * *sd*, const Vect< real_t > & *u*, real_t *time* = 0.)

Constructor using side, previous time solution *u* and time value.

Parameters

in	<i>sd</i>	Pointer to side.
in	<i>u</i>	Vect instance that contains solution at previous time step.
in	<i>time</i>	Current time value [Default: 0].

Elas2DT3 (const Side * *sd*, const Vect< real_t > & *u*, real_t *time*, real_t *deltat*, int *scheme*)

Constructor for a side (transient case) with specification of time integration scheme.

Parameters

in	<i>sd</i>	Pointer to side.
in	<i>u</i>	Vect instance that contains solution at previous time step.
in	<i>time</i>	Current time value [Default: 0].
in	<i>deltat</i>	Time step.
in	<i>scheme</i>	Time Integration Scheme

7.22.3 Member Function Documentation

void Media (real.t *E*, real.t *nu*, real.t *rho*)

Set media properties.

Useful to override material properties deduced from mesh file.

void LMassToLHS (real.t *coef* = 1.) [virtual]

Add element lumped mass contribution to matrix after multiplication by *coef*

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [Default: 1].
----	-------------	---

Reimplemented from [Equa.Solid< real.t, 3, 6, 2, 4 >](#).

void LMassToRHS (real.t *coef* = 1.) [virtual]

Add element lumped mass contribution to right-hand side after multiplication by *coef*

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [Default: 1].
----	-------------	---

Reimplemented from [Equa.Solid< real.t, 3, 6, 2, 4 >](#).

void LMass (real.t *coef* = 1.) [virtual]

Add element lumped mass contribution to matrix and right-hand side after multiplication by *coef*

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [Default: 1].
----	-------------	---

Reimplemented from [Equa.Solid< real.t, 3, 6, 2, 4 >](#).

void MassToLHS (real.t *coef* = 1.) [virtual]

Add element consistent mass contribution to matrix after multiplication by *coef*

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [Default: 1].
----	-------------	---

Reimplemented from [Equa.Solid< real.t, 3, 6, 2, 4 >](#).

void MassToRHS (real.t *coef* = 1.) [virtual]

Add element consistent mass contribution to right-hand side after multiplication by *coef*

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [Default: 1].
----	-------------	---

Reimplemented from [Equa.Solid< real.t, 3, 6, 2, 4 >](#).

void Mass (real.t *coef* = 1.) [virtual]

Add element consistent mass contribution to matrix and right-hand side after multiplication by *coef*

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [Default: 1].
----	-------------	---

Reimplemented from [Equa.Solid< real.t, 3, 6, 2, 4 >](#).

void Deviator (real.t *coef* = 1.) [virtual]

Add element deviatoric matrix to left-hand side after multiplication by *coef*

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [Default: 1].
----	-------------	---

Reimplemented from [Equa.Solid< real.t, 3, 6, 2, 4 >](#).

void DeviatorToRHS (real.t *coef* = 1.) [virtual]

Add element deviatoric contribution to right-hand side after multiplication by *coef*

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [Default: 1].
----	-------------	---

Reimplemented from [Equa.Solid< real.t, 3, 6, 2, 4 >](#).

void Dilatation (real.t *coef* = 1.) [virtual]

Add element dilatational contribution to left-hand side after multiplication by *coef*

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [Default: 1].
----	-------------	---

Reimplemented from [Equa.Solid< real.t, 3, 6, 2, 4 >](#).

void DilatationToRHS (real.t *coef* = 1.) [virtual]

Add element dilatational contribution to right-hand side after multiplication by *coef*
To use for explicit formulations

Parameters

in	<i>coef</i>	Coefficient to multiply by added term [Default: 1]
----	-------------	--

Reimplemented from [Equa.Solid< real.t, 3, 6, 2, 4 >](#).

void BodyRHS (UserData< real.t > &*ud*)

Add body right-hand side term to right-hand side after multiplication by *coef*
Body forces are deduced from [UserData](#) instance *ud*

void BodyRHS (const Vect< real.t > &*f*, int *opt* = GLOBAL_ARRAY)

Add body right-hand side term to right hand side.

Parameters

in	<i>f</i>	Vector containing source at element nodes (DOF by DOF)
in	<i>opt</i>	Vector is local (LOCAL_ARRAY) with size 6 or global (GLOBAL_ARRAY) with size = Number of element DOF [Default: GLOBAL_ARRAY].

void BoundaryRHS (UserData< real.t > &*ud*)

Add boundary right-hand side term to right hand side after multiplication by *coef*

Parameters

in	<i>ud</i>	UserData instance defining boundary forces
----	-----------	--

void BoundaryRHS (const Vect< real.t > &*f*)

Add boundary right-hand side term to right hand side.

Parameters

in	<i>f</i>	Vect instance that contains constant traction to impose to side.
----	----------	--

int SignoriniContact (UserData< real_t > &ud, real_t coef = 1.e07)

Penalty Signorini contact side contribution to matrix and right-hand side.

Parameters

in	<i>ud</i>	UserData instance defining contact data
in	<i>coef</i>	Penalty value by which the added term is multiplied [Default: 1.e07]

Returns

= 0 if no contact is achieved on this side, 1 otherwise

int SignoriniContact (Vect< real_t > &f, real_t coef = 1.e07)

Penalty Signorini contact side contribution to matrix and right-hand side.

Parameters

in	<i>f</i>	Vect instance that contains contact data
in	<i>coef</i>	Penalty value by which the added term is multiplied [Default: 1.e07]

Returns

= 0 if no contact is achieved on this side, 1 otherwise

void Reaction (Vect< real_t > &r)

Calculate reactions.

This function can be invoked in postprocessing

Parameters

in	<i>r</i>	Reaction on the side
----	----------	----------------------

void ContactPressure (const Vect< real_t > &f, real_t penal, Point< real_t > &p)

Calculate contact pressure.

This function can be invoked in postprocessing

Parameters

in	<i>f</i>	
in	<i>penal</i>	Penalty parameter that was used to impose contact condition
out	<i>p</i>	Contact pressure

void Strain (Vect< real_t > & *eps*)

Calculate strains in element.

This function can be invoked in postprocessing.

void Stress (Vect< real_t > & *s*, real_t & *vm*)

Calculate principal stresses and Von-Mises stress in element.

Parameters

in	<i>s</i>	vector of principal stresses
in	<i>vm</i>	Von-Mises stress. This function can be invoked in postprocessing.

void Periodic (real_t *coef* = 1.e20)

Add contribution of periodic boundary condition (by a penalty technique).

Boundary nodes where periodic boundary conditions are to be imposed must have codes equal to PERIODIC.A on one side and PERIODIC.B on the opposite side.

Parameters

in	<i>coef</i>	Value of penalty parameter [Default: 1.e20]
----	-------------	---

void updateBC (const Element & *el*, const Vect< real_t > & *bc*) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>el</i>	Reference to current element instance
in	<i>bc</i>	Vector that contains imposed values at all DOFs

void updateBC (const Vect< real_t > & *bc*) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>bc</i>	Vector that contains imposed values at all DOFs
----	-----------	---

Remarks

The current element is pointed by `_theElement`

void DiagBC (int *dof_type* = NODE_DOF, int *dof* = 0) [inherited]

Update element matrix to impose bc by diagonalization technique.

Parameters

in	<i>dof_type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • <code>NODE_FIELD</code>, DOFs are supported by nodes [Default] • <code>ELEMENT_FIELD</code>, DOFs are supported by elements • <code>SIDE_FIELD</code>, DOFs are supported by sides
in	<i>dof</i>	DOF setting: <ul style="list-style-type: none"> • <code>= 0</code>, All DOFs are taken into account [Default] • <code>!= 0</code>, Only DOF No. <i>dof</i> is handled in the system

void LocalNodeVector (Vect< real.t > & b) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Reference to global vector to be localized. The resulting local vector can be accessed by attribute <i>ePrev</i> . This member function is to be used if a constructor with Element was invoked.
----	----------	--

void ElementNodeVector (const Vect< real.t > & b, LocalVect< real.t, NEE_ > & be)
[inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

All degrees of freedom are transferred to the local vector

void ElementNodeVector (const Vect< real.t > & b, LocalVect< real.t, NEN_ > & be, int dof) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.
in	<i>dof</i>	Degree of freedom to transfer to the local vector

Remarks

Only the dega dof is transferred to the local vector

void ElementNodeVectorSingleDOF (const Vect< real_t > & b, LocalVect< real_t, NEN_ > & be) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

Vector b is assumed to contain only one degree of freedom by node.

void ElementSideVector (const Vect< real_t > & b, LocalVect< real_t, NSE_ > & be) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is

void ElementVector (const Vect< real_t > & b, int dof_type = NODE_FIELD, int flag = 0) [inherited]

Localize Element Vector.

Parameters

in	<i>b</i>	Global vector to be localized
in	<i>dof_type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • NODE_FIELD, DOFs are supported by nodes [Default] • ELEMENT_FIELD, DOFs are supported by elements • SIDE_FIELD, DOFs are supported by sides
in	<i>flag</i>	Option to set: <ul style="list-style-type: none"> • = 0, All DOFs are taken into account [Default] • != 0, Only DOF number dof is handled in the system The resulting local vector can be accessed by attribute ePrev.

Remarks

This member function is to be used if a constructor with Element was invoked. It uses the Element pointer `_theElement`

void SideVector (const Vect< real_t > & b) [inherited]

Localize Side Vector.

Parameters

in	<i>b</i>	Global vector to be localized <ul style="list-style-type: none"> • <code>NODE_FIELD</code>, DOFs are supported by nodes [default] • <code>ELEMENT_FIELD</code>, DOFs are supported by elements • <code>SIDE_FIELD</code>, DOFs are supported by sides The resulting local vector can be accessed by attribute <code>ePrev</code> .
----	----------	---

Remarks

This member function is to be used if a constructor with Side was invoked. It uses the Side pointer `_theSide`

void ElementNodeCoordinates () [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array `_x[0]`, `_x[1]`, ... which are instances of class [Point<real_t>](#)

Remarks

This member function uses the Side pointer `_theSide`

void SideNodeCoordinates () [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array `_x[0]`, `_x[1]`, ... which are instances of class [Point<real_t>](#)

Remarks

This member function uses the Element pointer `_theElement`

void ElementAssembly (Matrix< real_t > * A) [inherited]

Assemble element matrix into global one.

Parameters

A	Pointer to global matrix (abstract class: can be any of classes <code>SkSMatrix</code> , <code>SkMatrix</code> , <code>SpMatrix</code>)
---	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScMatrix< real_t > &A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Reference to global matrix
----------	----------------------------

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScVect< real_t > &b) [inherited]

Assemble element right-hand side vector into global one.

Parameters

<i>b</i>	Reference to global right-hand side vector
----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (BMatrix< real_t > &A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Global matrix stored as a BMatrix instance
----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkSMatrix< real_t > &A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Global matrix stored as an SkSMatrix instance
----------	---

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkMatrix< real.t > & A) [inherited]

Assemble element matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an SkMatrix instance
----	----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SpMatrix< real.t > & A) [inherited]

Assemble element matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an SpMatrix instance
----	----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (TrMatrix< real.t > & A) [inherited]

Assemble element matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an TrMatrix instance
----	----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (Vect< real.t > & v) [inherited]

Assemble element vector into global one.

Parameters

in	<i>v</i>	Global vector (Vect instance)
----	----------	-------------------------------

Warning

The element pointer is given by the global variable `theElement`

void SideAssembly (PETScMatrix< real_t > &A) [inherited]

Assemble side matrix into global one.

Parameters

<i>A</i>	Reference to global matrix
----------	----------------------------

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (PETScVect< real_t > &b) [inherited]

Assemble side right-hand side vector into global one.

Parameters

<i>b</i>	Reference to global right-hand side vector
----------	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (Matrix< real_t > *A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

<i>A</i>	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
----------	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SkSMatrix< real_t > &A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

<i>in</i>	<i>A</i>	Global matrix stored as an SkSMatrix instance
-----------	----------	---

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SkMatrix< real.t > & A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SpMatrix< real.t > & A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	A	Global matrix stored as an SpMatrix instance
----	---	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (Vect< real.t > & v) [inherited]

Assemble side (edge or face) vector into global one.

Parameters

in	v	Global vector (Vect instance)
----	---	-------------------------------

Warning

The side pointer is given by the global variable `theSide`

void DGElementAssembly (Matrix< real.t > * A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
---	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SkSMatrix< real_t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

<code>A</code>	Global matrix stored as an SkSMatrix instance
----------------	---

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SkMatrix< real_t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

<code>in</code>	<code>A</code>	Global matrix stored as an SkMatrix instance
-----------------	----------------	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SpMatrix< real_t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

<code>in</code>	<code>A</code>	Global matrix stored as an SpMatrix instance
-----------------	----------------	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (TrMatrix< real_t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

<code>in</code>	<code>A</code>	Global matrix stored as an TrMatrix instance
-----------------	----------------	--

Warning

The element pointer is given by the global variable `theElement`

void AxbAssembly (const Element & *el*, const Vect< real_t > & *x*, Vect< real_t > & *b*)
[inherited]

Assemble product of element matrix by element vector into global vector.

Parameters

in	<i>el</i>	Reference to Element instance
in	<i>x</i>	Global vector to multiply by (Vect instance)
out	<i>b</i>	Global vector to add (Vect instance)

void AxbAssembly (const Side & *sd*, const Vect< real_t > & *x*, Vect< real_t > & *b*)
[inherited]

Assemble product of side matrix by side vector into global vector.

Parameters

in	<i>sd</i>	Reference to Side instance
in	<i>x</i>	Global vector to multiply by (Vect instance)
out	<i>b</i>	Global vector (Vect instance)

real_t setMaterialProperty (const string & *exp*, const string & *prop*) [inherited]

Define a material property by an algebraic expression.

Parameters

in	<i>exp</i>	Algebraic expression
in	<i>prop</i>	Property name

Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

Mesh& getMesh () const [inherited]

Return reference to Mesh instance.

Returns

Reference to Mesh instance

void setSolver (Iteration *ls*, Preconditioner *pc* = *IDENT_PREC*) [inherited]

Choose solver for the linear system.

Parameters

in	<i>ls</i>	<p>Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER</p> <ul style="list-style-type: none"> • DIRECT_SOLVER, Use a facorization solver [default] • CG_SOLVER, Conjugate Gradient iterative solver • CGS_SOLVER, Squared Conjugate Gradient iterative solver • BICG_SOLVER, BiConjugate Gradient iterative solver • BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver • GMRES_SOLVER, GMRES iterative solver • QMR_SOLVER, QMR iterative solver
in	<i>pc</i>	<p>Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:</p> <ul style="list-style-type: none"> • IDENT_PREC, Identity preconditioner (no preconditioning [default]) • DIAG_PREC, Diagonal preconditioner • ILU_PREC, Incomplete LU factorization preconditioner

int SolveLinearSystem (Matrix< real_t > * *A*, Vect< real_t > & *b*, Vect< real_t > & *x*)
[inherited]

Solve the linear system.

Parameters

in	<i>A</i>	Pointer to matrix of the system (Instance of class SpMatrix)
in	<i>b</i>	Vector containing right-hand side
in,out	<i>x</i>	Vector containing initial guess of solution on input, actual solution on output

7.22.4 Member Data Documentation

LocalVect<real_t,NEE_> ePrev [inherited]


LocalVect instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

7.23 Elas3DH8 Class Reference

To build element equations for 3-D linearized elasticity using 8-node hexahedra.

Inheritance diagram for Elas3DH8:

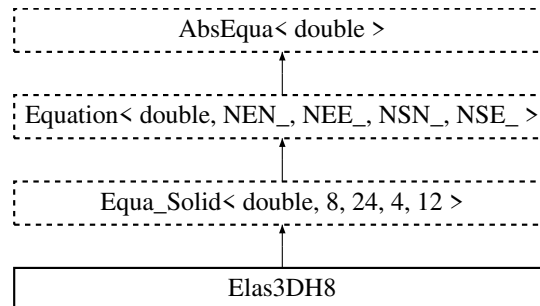

Public Member Functions

- **Elas3DH8** ()
Default Constructor.
- **Elas3DH8** (const **Element** *el)
Constructor using element data.
- **Elas3DH8** (const **Side** *sd)
Constructor using side data.
- **Elas3DH8** (const **Element** *element, const **Vect**< **real_t** > &u, const **real_t** &time=0.)
Constructor using element, previous time solution u and time value.
- **Elas3DH8** (const **Side** *side, const **Vect**< **real_t** > &u, const **real_t** &time=0.)
Constructor using side, previous time solution u and time value.
- **~Elas3DH8** ()
Destructor.
- void **LMassToLHS** (**real_t** coef=1.)
Add element lumped mass contribution to matrix after multiplication by coef.
- void **LMassToRHS** (**real_t** coef=1.)
Add element lumped mass contribution to right-hand side after multiplication by coef.
- void **LMass** (**real_t** coef)
Add element lumped mass contribution to right-hand and left-hand sides after multiplication by coef.
- void **Mass** (**real_t** coef=1.)
Add element lumped mass contribution to matrix and right-hand side after multiplication by coef.
- void **Deviator** (**real_t** coef=1.)
Add element deviatoric matrix to left-hand side after multiplication by coef.
- void **DeviatorToRHS** (**real_t** coef=1.)
Add element deviatoric matrix to right-hand side after multiplication by coef.
- void **Dilatation** (**real_t** coef=1.)
Add element dilatational contribution to left hand-side after multiplication by coef.
- void **DilatationToRHS** (**real_t** coef=1.)
Add element dilatational contribution to right hand-side after multiplication by coef.
- void **BodyRHS** (**UserData**< **real_t** > &ud)
Add body right-hand side term to right hand side.

- void **BoundaryRHS** (const **Vect**< **real_t** > &f)
Add boundary right-hand side term to right hand side.
- void **BodyRHS** (const **Vect**< **real_t** > &bf, int opt=**LOCAL_ARRAY**)
Add body right-hand side term to right hand side.
- virtual void **MassToLHS** (**real_t** coef=1)
Add consistent mass contribution to left-hand side.
- virtual void **MassToRHS** (**real_t** coef=1)
Add consistent mass contribution to right-hand side.
- void **setLumpedMass** ()
Add lumped mass contribution to left and right-hand sides taking into account time integration scheme.
- void **setMass** ()
Add consistent mass contribution to left and right-hand sides taking into account time integration scheme.
- virtual void **Stiffness** (**real_t** coef=1)
Add stiffness matrix to left-hand side taking into account time integration scheme, after multiplication by coef [Default: 1].
- virtual void **StiffnessToRHS** (**real_t** coef=1)
Add stiffness matrix to right-hand side taking into account time integration scheme, after multiplication by coef [Default: 1].
- void **setDilatation** ()
Add dilatation matrix to left and/or right-hand side taking into account time.
- void **setDeviator** ()
Add deviator matrix to left and/or right-hand side taking into account time integration scheme.
- void **setStiffness** ()
Add convection contribution to left and/or right-hand side taking into account time integration scheme.
- void **updateBC** (const **Element** &el, const **Vect**< **double** > &bc)
Update Right-Hand side by taking into account essential boundary conditions.
- void **updateBC** (const **Vect**< **double** > &bc)
Update Right-Hand side by taking into account essential boundary conditions.
- void **DiagBC** (int dof_type=**NODE.DOF**, int dof=0)
Update element matrix to impose bc by diagonalization technique.
- void **LocalNodeVector** (**Vect**< **double** > &b)
Localize Element Vector from a Vect instance.
- void **ElementNodeVector** (const **Vect**< **double** > &b, **LocalVect**< **double**, **NEE_** > &be)
Localize Element Vector from a Vect instance.
- void **ElementNodeVector** (const **Vect**< **double** > &b, **LocalVect**< **double**, **NEN_** > &be, int dof)
Localize Element Vector from a Vect instance.
- void **ElementNodeVectorSingleDOF** (const **Vect**< **double** > &b, **LocalVect**< **double**, **NE↔N_** > &be)
Localize Element Vector from a Vect instance.
- void **ElementSideVector** (const **Vect**< **double** > &b, **LocalVect**< **double**, **NSE_** > &be)
Localize Element Vector from a Vect instance.
- void **ElementVector** (const **Vect**< **double** > &b, int dof_type=**NODE.FIELD**, int flag=0)
Localize Element Vector.
- void **SideVector** (const **Vect**< **double** > &b)
Localize Side Vector.
- void **ElementNodeCoordinates** ()

- Localize coordinates of element nodes.*

 - void [SideNodeCoordinates](#) ()
- Localize coordinates of side nodes.*

 - void [ElementAssembly](#) ([Matrix](#)< double > *[A](#))

Assemble element matrix into global one.
- void [ElementAssembly](#) ([PETScMatrix](#)< double > &[A](#))

Assemble element matrix into global one.
- void [ElementAssembly](#) ([PETScVect](#)< double > &[b](#))

Assemble element right-hand side vector into global one.
- void [ElementAssembly](#) ([BMatrix](#)< double > &[A](#))

Assemble element matrix into global one.
- void [ElementAssembly](#) ([SkSMatrix](#)< double > &[A](#))

Assemble element matrix into global one.
- void [ElementAssembly](#) ([SkMatrix](#)< double > &[A](#))

Assemble element matrix into global one.
- void [ElementAssembly](#) ([SpMatrix](#)< double > &[A](#))

Assemble element matrix into global one.
- void [ElementAssembly](#) ([TrMatrix](#)< double > &[A](#))

Assemble element matrix into global one.
- void [ElementAssembly](#) ([Vect](#)< double > &[v](#))

Assemble element vector into global one.
- void [SideAssembly](#) ([PETScMatrix](#)< double > &[A](#))

Assemble side matrix into global one.
- void [SideAssembly](#) ([PETScVect](#)< double > &[b](#))

Assemble side right-hand side vector into global one.
- void [SideAssembly](#) ([Matrix](#)< double > *[A](#))

Assemble side (edge or face) matrix into global one.
- void [SideAssembly](#) ([SkSMatrix](#)< double > &[A](#))

Assemble side (edge or face) matrix into global one.
- void [SideAssembly](#) ([SkMatrix](#)< double > &[A](#))

Assemble side (edge or face) matrix into global one.
- void [SideAssembly](#) ([SpMatrix](#)< double > &[A](#))

Assemble side (edge or face) matrix into global one.
- void [SideAssembly](#) ([Vect](#)< double > &[v](#))

Assemble side (edge or face) vector into global one.
- void [DGElementAssembly](#) ([Matrix](#)< double > *[A](#))

Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void [DGElementAssembly](#) ([SkSMatrix](#)< double > &[A](#))

Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void [DGElementAssembly](#) ([SkMatrix](#)< double > &[A](#))

Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void [DGElementAssembly](#) ([SpMatrix](#)< double > &[A](#))

Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void [DGElementAssembly](#) ([TrMatrix](#)< double > &[A](#))

Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void [AxbAssembly](#) (const [Element](#) &[el](#), const [Vect](#)< double > &[x](#), [Vect](#)< double > &[b](#))

- Assemble product of element matrix by element vector into global vector.*
 - void **AxbAssembly** (const **Side** &sd, const **Vect**< double > &x, **Vect**< double > &b)
- Assemble product of side matrix by side vector into global vector.*
 - size_t **getNbNodes** () const
- Return number of element nodes.*
 - size_t **getNbEq** () const
- Return number of element equations.*
 - void **setInitialSolution** (const **Vect**< double > &u)
- Set initial solution (previous time step)*
 - **real.t** **setMaterialProperty** (const string &exp, const string &prop)
- Define a material property by an algebraic expression.*
 - void **setMesh** (**Mesh** &m)
- Define mesh and renumber DOFs after removing imposed ones.*
 - **Mesh** & **getMesh** () const
- Return reference to Mesh instance.*
 - **LinearSolver**< double > & **getLinearSolver** ()
- Return reference to linear solver instance.*
 - void **setSolver** (**Iteration** ls, **Preconditioner** pc=**IDENT_PREC**)
- Choose solver for the linear system.*
 - int **SolveLinearSystem** (**Matrix**< double > *A, **Vect**< double > &b, **Vect**< double > &x)
- Solve the linear system.*

Public Attributes

- **LocalMatrix**< double, NEE_, NEE_ > **eMat**
- LocalMatrix instance containing local matrix associated to current element.*
- **LocalMatrix**< double, NSE_, NSE_ > **sMat**
- LocalMatrix instance containing local matrix associated to current side.*
- **LocalVect**< double, NEE_ > **ePrev**
- LocalVect instance containing local vector associated to current element.*
- **LocalVect**< double, NEE_ > **eRHS**
- LocalVect instance containing local right-hand side vector associated to current element.*
- **LocalVect**< double, NEE_ > **eRes**
- LocalVect instance containing local residual vector associated to current element.*
- **LocalVect**< double, NSE_ > **sRHS**
- LocalVect instance containing local right-hand side vector associated to current side.*

Protected Member Functions

- void **Young** (const **real.t** &E)
- Set (constant) Young modulus.*
- void **Young** (const string &exp)
- Set Young modulus given by an algebraic expression.*
- void **Poisson** (const **real.t** &nu)
- Set (constant) Poisson ratio.*
- void **Poisson** (const string &exp)
- Set Poisson ratio given by an algebraic expression.*

- void **Density** (const **real_t** &rho)
Set (constant) density.
- void **Density** (const string &exp)
Set density given by an algebraic expression.
- void **setMaterial** ()
Set material properties.
- void **Init** (const **Element** *el)
Set element arrays to zero.
- void **Init** (const **Side** *sd)
Set side arrays to zero.

7.23.1 Detailed Description

To build element equations for 3-D linearized elasticity using 8-node hexahedra.

This class enables building finite element arrays for linearized isotropic elasticity problem in 3-D domains using 8-Node hexahedra.

Note that members calculating element arrays have as an argument a double **coef** that is multiplied by the contribution of the current element. This makes possible testing different algorithms.

7.23.2 Constructor & Destructor Documentation

Elas3DH8 ()

Default Constructor.

Constructs an empty equation.

7.23.3 Member Function Documentation

void BodyRHS (**UserData**< **real_t** > &*ud*)

Add body right-hand side term to right hand side.

Body forces are deduced from **UserData** instance *ud*.

void BoundaryRHS (const **Vect**< **real_t** > &*f*)

Add boundary right-hand side term to right hand side.

Parameters

in	<i>f</i>	Vector containing traction (boundary force) at sides
----	----------	--

void BodyRHS (const **Vect**< **real_t** > &*bf*, int *opt* = **LOCAL_ARRAY**)

Add body right-hand side term to right hand side.

Parameters

in	<i>bf</i>	Vector containing source at element nodes (DOF by DOF).
in	<i>opt</i>	Vector is local (LOCAL_ARRAY) with size 24 or global (GLOBAL_ARRAY) with size = Number of element DOF.

virtual void MassToLHS (*real_t coef* = 1) [virtual], [inherited]

Add consistent mass contribution to left-hand side.

Parameters

<i>in</i>	<i>coef</i>	coefficient to multiply by the matrix before adding [Default: 1]
-----------	-------------	--

virtual void MassToRHS (*real_t coef* = 1) [virtual], [inherited]

Add consistent mass contribution to right-hand side.

Parameters

<i>in</i>	<i>coef</i>	coefficient to multiply by the vector before adding [Default: 1]
-----------	-------------	--

void updateBC (*const Element & el*, *const Vect< double > & bc*) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

<i>in</i>	<i>el</i>	Reference to current element instance
<i>in</i>	<i>bc</i>	Vector that contains imposed values at all DOFs

void updateBC (*const Vect< double > & bc*) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

<i>in</i>	<i>bc</i>	Vector that contains imposed values at all DOFs
-----------	-----------	---

Remarks

The current element is pointed by *_theElement*

void DiagBC (*int dof_type* = *NODE_DOF*, *int dof* = 0) [inherited]

Update element matrix to impose bc by diagonalization technique.

Parameters

in	<i>dof_type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • <code>NODE_FIELD</code>, DOFs are supported by nodes [Default] • <code>ELEMENT_FIELD</code>, DOFs are supported by elements • <code>SIDE_FIELD</code>, DOFs are supported by sides
in	<i>dof</i>	DOF setting: <ul style="list-style-type: none"> • <code>= 0</code>, All DOFs are taken into account [Default] • <code>!= 0</code>, Only DOF No. <i>dof</i> is handled in the system

void LocalNodeVector (Vect< double > & b) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Reference to global vector to be localized. The resulting local vector can be accessed by attribute <i>ePrev</i> . This member function is to be used if a constructor with Element was invoked.
----	----------	--

void ElementNodeVector (const Vect< double > & b, LocalVect< double , NEE_ > & be)
[inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

All degrees of freedom are transferred to the local vector

void ElementNodeVector (const Vect< double > & b, LocalVect< double , NEN_ > & be, int *dof*) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.
in	<i>dof</i>	Degree of freedom to transfer to the local vector

Remarks

Only the dega dof is transferred to the local vector

void ElementNodeVectorSingleDOF (const Vect< double > & b, LocalVect< double , NEN_ > & be) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

Vector b is assumed to contain only one degree of freedom by node.

void ElementSideVector (const Vect< double > & b, LocalVect< double , NSE_ > & be) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is

void ElementVector (const Vect< double > & b, int dof_type = NODE_FIELD, int flag = 0) [inherited]

Localize Element Vector.

Parameters

in	<i>b</i>	Global vector to be localized
in	<i>dof_type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • NODE_FIELD, DOFs are supported by nodes [Default] • ELEMENT_FIELD, DOFs are supported by elements • SIDE_FIELD, DOFs are supported by sides
in	<i>flag</i>	Option to set: <ul style="list-style-type: none"> • = 0, All DOFs are taken into account [Default] • != 0, Only DOF number dof is handled in the system The resulting local vector can be accessed by attribute ePrev.

Remarks

This member function is to be used if a constructor with Element was invoked. It uses the Element pointer `_theElement`

void SideVector (const Vect< double > & b) [inherited]

Localize Side Vector.

Parameters

in	<i>b</i>	Global vector to be localized <ul style="list-style-type: none"> • <code>NODE_FIELD</code>, DOFs are supported by nodes [default] • <code>ELEMENT_FIELD</code>, DOFs are supported by elements • <code>SIDE_FIELD</code>, DOFs are supported by sides The resulting local vector can be accessed by attribute <code>ePrev</code> .
----	----------	---

Remarks

This member function is to be used if a constructor with Side was invoked. It uses the Side pointer `_theSide`

void ElementNodeCoordinates () [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array `_x[0]`, `_x[1]`, ... which are instances of class [Point<real.t>](#)

Remarks

This member function uses the Side pointer `_theSide`

void SideNodeCoordinates () [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array `_x[0]`, `_x[1]`, ... which are instances of class [Point<real.t>](#)

Remarks

This member function uses the Element pointer `_theElement`

void ElementAssembly (Matrix< double > * A) [inherited]

Assemble element matrix into global one.

Parameters

A	Pointer to global matrix (abstract class: can be any of classes <code>SkSMatrix</code> , <code>SkMatrix</code> , <code>SpMatrix</code>)
---	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScMatrix< double > & A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Reference to global matrix
----------	----------------------------

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScVect< double > & b) [inherited]

Assemble element right-hand side vector into global one.

Parameters

<i>b</i>	Reference to global right-hand side vector
----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (BMatrix< double > & A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Global matrix stored as a BMatrix instance
----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkSMatrix< double > & A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Global matrix stored as an SkSMatrix instance
----------	---

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkMatrix< double > & A) [inherited]

Assemble element matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an SkMatrix instance
----	----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SpMatrix< double > & A) [inherited]

Assemble element matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an SpMatrix instance
----	----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (TrMatrix< double > & A) [inherited]

Assemble element matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an TrMatrix instance
----	----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (Vect< double > & v) [inherited]

Assemble element vector into global one.

Parameters

in	<i>v</i>	Global vector (Vect instance)
----	----------	-------------------------------

Warning

The element pointer is given by the global variable `theElement`

void SideAssembly (PETScMatrix< double > & A) [inherited]

Assemble side matrix into global one.

Parameters

<i>A</i>	Reference to global matrix
----------	----------------------------

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (PETScVect< double > & b) [inherited]

Assemble side right-hand side vector into global one.

Parameters

<i>b</i>	Reference to global right-hand side vector
----------	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (Matrix< double > * A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

<i>A</i>	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
----------	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SkSMatrix< double > & A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

<i>in</i>	<i>A</i>	Global matrix stored as an SkSMatrix instance
-----------	----------	---

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SkMatrix< double > & A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SpMatrix< double > & A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	A	Global matrix stored as an SpMatrix instance
----	---	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (Vect< double > & v) [inherited]

Assemble side (edge or face) vector into global one.

Parameters

in	v	Global vector (Vect instance)
----	---	-------------------------------

Warning

The side pointer is given by the global variable `theSide`

void DGElementAssembly (Matrix< double > * A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
---	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SkSMatrix< double > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

<code>A</code>	Global matrix stored as an SkSMatrix instance
----------------	---

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SkMatrix< double > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

<code>in</code>	<code>A</code>	Global matrix stored as an SkMatrix instance
-----------------	----------------	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SpMatrix< double > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

<code>in</code>	<code>A</code>	Global matrix stored as an SpMatrix instance
-----------------	----------------	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (TrMatrix< double > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

<code>in</code>	<code>A</code>	Global matrix stored as an TrMatrix instance
-----------------	----------------	--

Warning

The element pointer is given by the global variable `theElement`

void AxbAssembly (const Element & *el*, const Vect< double > & *x*, Vect< double > & *b*)
[inherited]

Assemble product of element matrix by element vector into global vector.

Parameters

in	<i>el</i>	Reference to Element instance
in	<i>x</i>	Global vector to multiply by (Vect instance)
out	<i>b</i>	Global vector to add (Vect instance)

void AxbAssembly (const Side & *sd*, const Vect< double > & *x*, Vect< double > & *b*)
[inherited]

Assemble product of side matrix by side vector into global vector.

Parameters

in	<i>sd</i>	Reference to Side instance
in	<i>x</i>	Global vector to multiply by (Vect instance)
out	<i>b</i>	Global vector (Vect instance)

real.t setMaterialProperty (const string & *exp*, const string & *prop*) [inherited]

Define a material property by an algebraic expression.

Parameters

in	<i>exp</i>	Algebraic expression
in	<i>prop</i>	Property name

Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

Mesh& getMesh () const [inherited]

Return reference to Mesh instance.

Returns

Reference to Mesh instance

void setSolver (Iteration *ls*, Preconditioner *pc* = *IDENT_PREC*) [inherited]

Choose solver for the linear system.

Parameters

in	<i>ls</i>	<p>Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER</p> <ul style="list-style-type: none"> • DIRECT_SOLVER, Use a facorization solver [default] • CG_SOLVER, Conjugate Gradient iterative solver • CGS_SOLVER, Squared Conjugate Gradient iterative solver • BICG_SOLVER, BiConjugate Gradient iterative solver • BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver • GMRES_SOLVER, GMRES iterative solver • QMR_SOLVER, QMR iterative solver
in	<i>pc</i>	<p>Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:</p> <ul style="list-style-type: none"> • IDENT_PREC, Identity preconditioner (no preconditioning [default]) • DIAG_PREC, Diagonal preconditioner • ILU_PREC, Incomplete LU factorization preconditioner

int SolveLinearSystem (Matrix< double > * *A*, Vect< double > & *b*, Vect< double > & *x*)
[inherited]

Solve the linear system.

Parameters

in	<i>A</i>	Pointer to matrix of the system (Instance of class SpMatrix)
in	<i>b</i>	Vector containing right-hand side
in,out	<i>x</i>	Vector containing initial guess of solution on input, actual solution on output

7.23.4 Member Data Documentation

LocalVect<double ,NEE_> ePrev [inherited]


LocalVect instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

7.24 Elas3DT4 Class Reference

To build element equations for 3-D linearized elasticity using 4-node tetrahedra.

Inheritance diagram for Elas3DT4:

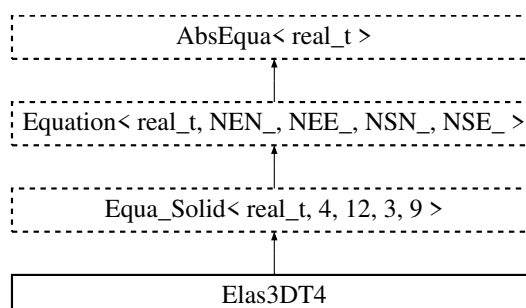

Public Member Functions

- [Elas3DT4](#) ()
Default Constructor.
- [Elas3DT4](#) (const [Element](#) *el)
Constructor using element data.
- [Elas3DT4](#) (const [Side](#) *sd)
Constructor using side data.
- [Elas3DT4](#) (const [Element](#) *element, const [Vect](#)< [real_t](#) > &u, const [real_t](#) &time=0.)
Constructor using element and previous time data.
- [Elas3DT4](#) (const [Side](#) *side, const [Vect](#)< [real_t](#) > &u, const [real_t](#) &time=0.)
Constructor using side and previous time data.
- [~Elas3DT4](#) ()
Destructor.
- void [Media](#) ([real_t](#) E, [real_t](#) nu, [real_t](#) rho)
Set Media properties.
- void [LMassToLHS](#) ([real_t](#) coef=1)
Add element lumped mass contribution to matrix after multiplication by coef.
- void [LMassToRHS](#) ([real_t](#) coef=1)
Add element lumped mass contribution to right-hand side after multiplication by coef.
- void [LMass](#) ([real_t](#) coef)
Add element lumped mass contribution to matrix and right-hand side after multiplication by coef.
- void [Deviator](#) ([real_t](#) coef=1.)
Add element deviatoric matrix to left hand-side after multiplication by coef.
- void [DeviatorToRHS](#) ([real_t](#) coef=1.)
Add element deviatoric matrix to right hand-side after multiplication by coef.
- void [Dilatation](#) ([real_t](#) coef=1.)
Add element dilatational contribution to left-hand side after multiplication by coef.
- void [DilatationToRHS](#) ([real_t](#) coef=1.)
Add element dilatational contribution to right-hand side after multiplication by coef.
- void [BodyRHS](#) ([UserData](#)< [real_t](#) > &ud)
Add body right-hand side term to right hand side after multiplication by coef.

- void **BodyRHS** (const **Vect**< **real.t** > &f, int opt=**LOCAL_ARRAY**)
Add body right-hand side term to right hand side.
- void **BoundaryRHS** (const **Vect**< **real.t** > &f)
Add boundary right-hand side term to right hand side.
- void **buildEigen** (**SkSMatrix**< **real.t** > &K, **Vect**< **real.t** > &M)
Build global stiffness and mass matrices for the eigen system.
- virtual void **MassToLHS** (**real.t** coef=1)
Add consistent mass contribution to left-hand side.
- virtual void **MassToRHS** (**real.t** coef=1)
Add consistent mass contribution to right-hand side.
- void **setLumpedMass** ()
Add lumped mass contribution to left and right-hand sides taking into account time integration scheme.
- void **setMass** ()
Add consistent mass contribution to left and right-hand sides taking into account time integration scheme.
- virtual void **Mass** (**real.t** coef=1)
Add consistent mass matrix to left-hand side after multiplication by coef [Default: 1].
- virtual void **Stiffness** (**real.t** coef=1)
Add stiffness matrix to left-hand side taking into account time integration scheme, after multiplication by coef [Default: 1].
- virtual void **StiffnessToRHS** (**real.t** coef=1)
Add stiffness matrix to right-hand side taking into account time integration scheme, after multiplication by coef [Default: 1].
- void **setDilatation** ()
Add dilatation matrix to left and/or right-hand side taking into account time.
- void **setDeviator** ()
Add deviator matrix to left and/or right-hand side taking into account time integration scheme.
- void **setStiffness** ()
Add convection contribution to left and/or right-hand side taking into account time integration scheme.
- void **updateBC** (const **Element** &el, const **Vect**< **real.t** > &bc)
Update Right-Hand side by taking into account essential boundary conditions.
- void **updateBC** (const **Vect**< **real.t** > &bc)
Update Right-Hand side by taking into account essential boundary conditions.
- void **DiagBC** (int dof.type=**NODE.DOF**, int dof=0)
Update element matrix to impose bc by diagonalization technique.
- void **LocalNodeVector** (**Vect**< **real.t** > &b)
Localize Element Vector from a Vect instance.
- void **ElementNodeVector** (const **Vect**< **real.t** > &b, **LocalVect**< **real.t**, **NEE_** > &be)
Localize Element Vector from a Vect instance.
- void **ElementNodeVector** (const **Vect**< **real.t** > &b, **LocalVect**< **real.t**, **NEN_** > &be, int dof)
Localize Element Vector from a Vect instance.
- void **ElementNodeVectorSingleDOF** (const **Vect**< **real.t** > &b, **LocalVect**< **real.t**, **NEN_** > &be)
Localize Element Vector from a Vect instance.
- void **ElementSideVector** (const **Vect**< **real.t** > &b, **LocalVect**< **real.t**, **NSE_** > &be)
Localize Element Vector from a Vect instance.
- void **ElementVector** (const **Vect**< **real.t** > &b, int dof.type=**NODE.FIELD**, int flag=0)
Localize Element Vector.

- void `SideVector` (const `Vect< real_t >` &b)
Localize Side Vector.
- void `ElementNodeCoordinates` ()
Localize coordinates of element nodes.
- void `SideNodeCoordinates` ()
Localize coordinates of side nodes.
- void `ElementAssembly` (`Matrix< real_t >` *A)
Assemble element matrix into global one.
- void `ElementAssembly` (`PETScMatrix< real_t >` &A)
Assemble element matrix into global one.
- void `ElementAssembly` (`PETScVect< real_t >` &b)
Assemble element right-hand side vector into global one.
- void `ElementAssembly` (`BMatrix< real_t >` &A)
Assemble element matrix into global one.
- void `ElementAssembly` (`SkSMatrix< real_t >` &A)
Assemble element matrix into global one.
- void `ElementAssembly` (`SkMatrix< real_t >` &A)
Assemble element matrix into global one.
- void `ElementAssembly` (`SpMatrix< real_t >` &A)
Assemble element matrix into global one.
- void `ElementAssembly` (`TrMatrix< real_t >` &A)
Assemble element matrix into global one.
- void `ElementAssembly` (`Vect< real_t >` &v)
Assemble element vector into global one.
- void `SideAssembly` (`PETScMatrix< real_t >` &A)
Assemble side matrix into global one.
- void `SideAssembly` (`PETScVect< real_t >` &b)
Assemble side right-hand side vector into global one.
- void `SideAssembly` (`Matrix< real_t >` *A)
Assemble side (edge or face) matrix into global one.
- void `SideAssembly` (`SkSMatrix< real_t >` &A)
Assemble side (edge or face) matrix into global one.
- void `SideAssembly` (`SkMatrix< real_t >` &A)
Assemble side (edge or face) matrix into global one.
- void `SideAssembly` (`SpMatrix< real_t >` &A)
Assemble side (edge or face) matrix into global one.
- void `SideAssembly` (`Vect< real_t >` &v)
Assemble side (edge or face) vector into global one.
- void `DGElementAssembly` (`Matrix< real_t >` *A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void `DGElementAssembly` (`SkSMatrix< real_t >` &A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void `DGElementAssembly` (`SkMatrix< real_t >` &A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void `DGElementAssembly` (`SpMatrix< real_t >` &A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.

- void **DGElementAssembly** (**TrMatrix**< **real.t** > &A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void **AxbAssembly** (const **Element** &el, const **Vect**< **real.t** > &x, **Vect**< **real.t** > &b)
Assemble product of element matrix by element vector into global vector.
- void **AxbAssembly** (const **Side** &sd, const **Vect**< **real.t** > &x, **Vect**< **real.t** > &b)
Assemble product of side matrix by side vector into global vector.
- size_t **getNbNodes** () const
Return number of element nodes.
- size_t **getNbEq** () const
Return number of element equations.
- void **setInitialSolution** (const **Vect**< **real.t** > &u)
Set initial solution (previous time step)
- **real.t** **setMaterialProperty** (const string &exp, const string &prop)
Define a material property by an algebraic expression.
- void **setMesh** (**Mesh** &m)
Define mesh and renumber DOFs after removing imposed ones.
- **Mesh** & **getMesh** () const
Return reference to Mesh instance.
- **LinearSolver**< **real.t** > & **getLinearSolver** ()
Return reference to linear solver instance.
- void **setSolver** (**Iteration** ls, **Preconditioner** pc=IDENT_PREC)
Choose solver for the linear system.
- int **SolveLinearSystem** (**Matrix**< **real.t** > *A, **Vect**< **real.t** > &b, **Vect**< **real.t** > &x)
Solve the linear system.

Public Attributes

- **LocalMatrix**< **real.t**, NEE_, NEE_ > **eMat**
LocalMatrix instance containing local matrix associated to current element.
- **LocalMatrix**< **real.t**, NSE_, NSE_ > **sMat**
LocalMatrix instance containing local matrix associated to current side.
- **LocalVect**< **real.t**, NEE_ > **ePrev**
LocalVect instance containing local vector associated to current element.
- **LocalVect**< **real.t**, NEE_ > **eRHS**
LocalVect instance containing local right-hand side vector associated to current element.
- **LocalVect**< **real.t**, NEE_ > **eRes**
LocalVect instance containing local residual vector associated to current element.
- **LocalVect**< **real.t**, NSE_ > **sRHS**
LocalVect instance containing local right-hand side vector associated to current side.

Protected Member Functions

- void **Young** (const **real.t** &E)
Set (constant) Young modulus.
- void **Young** (const string &exp)
Set Young modulus given by an algebraic expression.
- void **Poisson** (const **real.t** &nu)

- *Set (constant) Poisson ratio.*
- void **Poisson** (const string &exp)
Set Poisson ratio given by an algebraic expression.
- void **Density** (const real_t &rho)
Set (constant) density.
- void **Density** (const string &exp)
Set density given by an algebraic expression.
- void **setMaterial** ()
Set material properties.
- void **Init** (const **Element** *el)
Set element arrays to zero.
- void **Init** (const **Side** *sd)
Set side arrays to zero.

7.24.1 Detailed Description

To build element equations for 3-D linearized elasticity using 4-node tetrahedra.

This class enables building finite element arrays for linearized isotropic elasticity problem in 3-D domains using 4-Node tetrahedra.

7.24.2 Member Function Documentation

void Media (real_t E, real_t nu, real_t rho)

Set Media properties.

Parameters

in	<i>E</i>	Young's modulus
in	<i>nu</i>	Poisson ratio
in	<i>rho</i>	Density

void BodyRHS (UserData< real_t > &ud)

Add body right-hand side term to right hand side after multiplication by *coef*.

Body forces are deduced from **UserData** instance *ud*.

void BodyRHS (const Vect< real_t > &f, int opt = LOCAL_ARRAY)

Add body right-hand side term to right hand side.

Parameters

in	<i>f</i>	Vect instance containing source at element nodes (DOF by DOF).
in	<i>opt</i>	Vector is local (LOCAL_ARRAY) with size 12 or global (GLOBAL_ARRAY) with size = Number of element DOF.

void BoundaryRHS (const Vect< real_t > &f)

Add boundary right-hand side term to right hand side.

Parameters

in	<i>f</i>	Vect instance that contains constant traction to impose to side.
----	----------	--

void buildEigen (SkSMatrix< real_t > &K, Vect< real_t > &M)

Build global stiffness and mass matrices for the eigen system.

Case where the mass matrix is lumped

Parameters

in	<i>K</i>	Stiffness matrix
in	<i>M</i>	Vector containing diagonal mass matrix

virtual void MassToLHS (real_t coef = 1) [virtual], [inherited]

Add consistent mass contribution to left-hand side.

Parameters

in	<i>coef</i>	coefficient to multiply by the matrix before adding [Default: 1]
----	-------------	--

virtual void MassToRHS (real_t coef = 1) [virtual], [inherited]

Add consistent mass contribution to right-hand side.

Parameters

in	<i>coef</i>	coefficient to multiply by the vector before adding [Default: 1]
----	-------------	--

void updateBC (const Element &el, const Vect< real_t > &bc) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>el</i>	Reference to current element instance
in	<i>bc</i>	Vector that contains imposed values at all DOFs

void updateBC (const Vect< real_t > &bc) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>bc</i>	Vector that contains imposed values at all DOFs
----	-----------	---

Remarks

The current element is pointed by `_theElement`

void DiagBC (int *dof.type* = *NODE_DOF*, int *dof* = 0) [inherited]

Update element matrix to impose bc by diagonalization technique.

Parameters

in	<i>dof.type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • <i>NODE_FIELD</i>, DOFs are supported by nodes [Default] • <i>ELEMENT_FIELD</i>, DOFs are supported by elements • <i>SIDE_FIELD</i>, DOFs are supported by sides
in	<i>dof</i>	DOF setting: <ul style="list-style-type: none"> • = 0, All DOFs are taken into account [Default] • != 0, Only DOF No. <i>dof</i> is handled in the system

void LocalNodeVector (Vect< real.t > &*b*) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Reference to global vector to be localized. The resulting local vector can be accessed by attribute <code>ePrev</code> . This member function is to be used if a constructor with <code>Element</code> was invoked.
----	----------	---

void ElementNodeVector (const Vect< real.t > &*b*, LocalVect< real.t, NEE_ > &*be*)
[inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

All degrees of freedom are transferred to the local vector

void ElementNodeVector (const Vect< real_t > & b, LocalVect< real_t, NEN_ > & be, int dof) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.
in	<i>dof</i>	Degree of freedom to transfer to the local vector

Remarks

Only yhe dega dof is transferred to the local vector

void ElementNodeVectorSingleDOF (const Vect< real_t > & b, LocalVect< real_t, NEN_ > & be) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

Vector b is assumed to contain only one degree of freedom by node.

void ElementSideVector (const Vect< real_t > & b, LocalVect< real_t, NSE_ > & be) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is

void ElementVector (const Vect< real_t > & b, int dof_type = NODE_FIELD, int flag = 0) [inherited]

Localize Element Vector.

Parameters

in	<i>b</i>	Global vector to be localized
in	<i>dof_type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • <code>NODE_FIELD</code>, DOFs are supported by nodes [Default] • <code>ELEMENT_FIELD</code>, DOFs are supported by elements • <code>SIDE_FIELD</code>, DOFs are supported by sides
in	<i>flag</i>	Option to set: <ul style="list-style-type: none"> • <code>= 0</code>, All DOFs are taken into account [Default] • <code>!= 0</code>, Only DOF number <code>dof</code> is handled in the system The resulting local vector can be accessed by attribute <code>ePrev</code> .

Remarks

This member function is to be used if a constructor with `Element` was invoked. It uses the `Element` pointer `_theElement`

void SideVector (const Vect< real.t > & b) [inherited]

Localize Side Vector.

Parameters

in	<i>b</i>	Global vector to be localized <ul style="list-style-type: none"> • <code>NODE_FIELD</code>, DOFs are supported by nodes [default] • <code>ELEMENT_FIELD</code>, DOFs are supported by elements • <code>SIDE_FIELD</code>, DOFs are supported by sides The resulting local vector can be accessed by attribute <code>ePrev</code> .
----	----------	---

Remarks

This member function is to be used if a constructor with `Side` was invoked. It uses the `Side` pointer `_theSide`

void ElementNodeCoordinates () [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array `_x[0]`, `_x[1]`, ... which are instances of class [Point<real.t>](#)

Remarks

This member function uses the `Side` pointer `_theSide`

void SideNodeCoordinates () [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array `_x[0]`, `_x[1]`, ... which are instances of class [Point<real_t>](#)

Remarks

This member function uses the Element pointer `_theElement`

void ElementAssembly (Matrix< real_t > * A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Pointer to global matrix (abstract class: can be any of classes <code>SkSMatrix</code> , <code>SkMatrix</code> , <code>SpMatrix</code>)
----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScMatrix< real_t > & A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Reference to global matrix
----------	----------------------------

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScVect< real_t > & b) [inherited]

Assemble element right-hand side vector into global one.

Parameters

<i>b</i>	Reference to global right-hand side vector
----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (BMatrix< real_t > & A) [inherited]

Assemble element matrix into global one.

Parameters

A	Global matrix stored as a BMatrix instance
-----	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkSMatrix< real.t > &A) [inherited]

Assemble element matrix into global one.

Parameters

A	Global matrix stored as an SkSMatrix instance
-----	---

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkMatrix< real.t > &A) [inherited]

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an SkMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SpMatrix< real.t > &A) [inherited]

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an SpMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (TrMatrix< real.t > &A) [inherited]

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an TrMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable theElement

void ElementAssembly (Vect< real.t > & v) [inherited]

Assemble element vector into global one.

Parameters

in	v	Global vector (Vect instance)
----	-----	-------------------------------

Warning

The element pointer is given by the global variable theElement

void SideAssembly (PETScMatrix< real.t > & A) [inherited]

Assemble side matrix into global one.

Parameters

A	Reference to global matrix
-----	----------------------------

Warning

The side pointer is given by the global variable theSide

void SideAssembly (PETScVect< real.t > & b) [inherited]

Assemble side right-hand side vector into global one.

Parameters

b	Reference to global right-hand side vector
-----	--

Warning

The side pointer is given by the global variable theSide

void SideAssembly (Matrix< real.t > * A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

<i>A</i>	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
----------	--

Warning

The side pointer is given by the global variable theSide

void SideAssembly (SkSMatrix< real.t > &A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an SkSMatrix instance
----	----------	---

Warning

The side pointer is given by the global variable theSide

void SideAssembly (SkMatrix< real.t > &A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an SkMatrix instance
----	----------	--

Warning

The side pointer is given by the global variable theSide

void SideAssembly (SpMatrix< real.t > &A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an SpMatrix instance
----	----------	--

Warning

The side pointer is given by the global variable theSide

void SideAssembly (Vect< real.t > &v) [inherited]

Assemble side (edge or face) vector into global one.

Parameters

in	v	Global vector (Vect instance)
----	-----	-------------------------------

Warning

The side pointer is given by the global variable `theSide`

void DGElementAssembly (Matrix< real.t > * A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
---	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SkSMatrix< real.t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

A	Global matrix stored as an SkSMatrix instance
---	---

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SkMatrix< real.t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SpMatrix< real.t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	<i>A</i>	Global matrix stored as an SpMatrix instance
----	----------	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (TrMatrix< real.t > & *A*) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	<i>A</i>	Global matrix stored as an TrMatrix instance
----	----------	--

Warning

The element pointer is given by the global variable `theElement`

void AxbAssembly (const Element & *el*, const Vect< real.t > & *x*, Vect< real.t > & *b*)
[inherited]

Assemble product of element matrix by element vector into global vector.

Parameters

in	<i>el</i>	Reference to Element instance
in	<i>x</i>	Global vector to multiply by (Vect instance)
out	<i>b</i>	Global vector to add (Vect instance)

void AxbAssembly (const Side & *sd*, const Vect< real.t > & *x*, Vect< real.t > & *b*)
[inherited]

Assemble product of side matrix by side vector into global vector.

Parameters

in	<i>sd</i>	Reference to Side instance
in	<i>x</i>	Global vector to multiply by (Vect instance)
out	<i>b</i>	Global vector (Vect instance)

real.t setMaterialProperty (const string & *exp*, const string & *prop*) [inherited]

Define a material property by an algebraic expression.

Parameters

in	<i>exp</i>	Algebraic expression
in	<i>prop</i>	Property name

Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

Mesh& getMesh () const [inherited]

Return reference to Mesh instance.

Returns

Reference to Mesh instance

void setSolver (Iteration *ls*, Preconditioner *pc* = *IDENT_PREC*) [inherited]

Choose solver for the linear system.

Parameters

in	<i>ls</i>	<p>Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER</p> <ul style="list-style-type: none"> • DIRECT_SOLVER, Use a facorization solver [default] • CG_SOLVER, Conjugate Gradient iterative solver • CGS_SOLVER, Squared Conjugate Gradient iterative solver • BICG_SOLVER, BiConjugate Gradient iterative solver • BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver • GMRES_SOLVER, GMRES iterative solver • QMR_SOLVER, QMR iterative solver
in	<i>pc</i>	<p>Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:</p> <ul style="list-style-type: none"> • IDENT_PREC, Identity preconditioner (no preconditioning [default]) • DIAG_PREC, Diagonal preconditioner • ILU_PREC, Incomplete LU factorization preconditioner

int SolveLinearSystem (Matrix< real_t > * A, Vect< real_t > & b, Vect< real_t > & x)
 [inherited]

Solve the linear system.

Parameters

in	<i>A</i>	Pointer to matrix of the system (Instance of class SpMatrix)
in	<i>b</i>	Vector containing right-hand side
in,out	<i>x</i>	Vector containing initial guess of solution on input, actual solution on output

7.24.3 Member Data Documentation

LocalVect<real_t,NEE_> ePrev [inherited]

LocalVect instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

7.25 Element Class Reference

To store and treat finite element geometric information.

Public Member Functions

- [Element](#) ()
Default constructor.
- [Element](#) (size_t label, const string &shape)
Constructor initializing label, shape of element.
- [Element](#) (size_t label, int shape)
Constructor initializing label, shape of element.
- [Element](#) (size_t label, const string &shape, int c)
Constructor initializing label, shape and code of element.
- [Element](#) (size_t label, int shape, int c)
Constructor initializing label, shape and code of element.
- [Element](#) (const [Element](#) &el)
Copy constructor.
- [~Element](#) ()
Destructor.
- void [setLabel](#) (size_t i)
Define label of element.
- void [setCode](#) (int c)
Define code of element.
- void [setCode](#) (const string &exp, int code)
Define code by a boolean algebraic expression invoking coordinates of element nodes.
- void [Add](#) ([Node](#) *node)
Insert a node at end of list of nodes of element.
- void [Add](#) ([Node](#) *node, int n)
Insert a node and set its local node number.

- void **Replace** (size_t label, **Node** *node)
Replace a node at a given local label.
- void **Replace** (size_t label, **Side** *side)
Replace a side at a given local label.
- void **Add** (**Side** *sd)
Assign Side to Element.
- void **Add** (**Side** *sd, int k)
Assign Side to Element with assigned local label.
- void **Add** (**Element** *el)
Add a neighbor element.
- void **set** (**Element** *el, int n)
Add a neighbor element and set its label.
- void **setDOF** (size_t i, size_t dof)
Define label of DOF.
- void **setCode** (size_t dof, int code)
Assign code to a DOF.
- void **setNode** (size_t i, **Node** *node)
Assign a node given by its pointer as the i-th node of element.
- void **setNbDOF** (size_t i)
Set number of degrees of freedom of element.
- void **setFirstDOF** (size_t i)
Set label of first DOF in element.
- int **getShape** () const
Return element shape.
- size_t **getLabel** () const
Return label of element.
- size_t **n** () const
Return label of element.
- int **getCode** () const
Return code of element.
- size_t **getNbNodes** () const
Return number of element nodes.
- size_t **getNbVertices** () const
Return number of element vertices.
- size_t **getNbSides** () const
Return number of element sides (Constant version)
- size_t **getNbEq** () const
Return number of element equations.
- size_t **getNbDOF** () const
return element nb of DOF
- size_t **getDOF** (size_t i=1) const
Return element DOF label.
- size_t **getFirstDOF** () const
Return element first DOF label.
- size_t **getNodeLabel** (size_t n) const
Return global label of node of local label i.

- `size_t getSideLabel (size_t n) const`
Return global label of side of local label *i*.
- `Node * getPtrNode (size_t i) const`
Return pointer to node of label *i* (Local labelling).
- `Node * operator() (size_t i) const`
Operator ().
- `Side * getPtrSide (size_t i) const`
Return pointer to side of label *i* (Local labelling).
- `int Contains (const Node *nd) const`
Say if element contains given node.
- `int Contains (const Node &nd) const`
Say if element contains given node.
- `int Contains (const Side *sd) const`
Say if element contains given side.
- `int Contains (const Side &sd) const`
Say if element contains given side.
- `Element * getNeighborElement (size_t i) const`
Return pointer to element Neighboring element.
- `size_t getNbNeigElements () const`
Return number of neighboring elements.
- `real_t getMeasure () const`
Return measure of element.
- `Point< real_t > getUnitNormal (size_t i) const`
Return outward unit normal to *i*-th side of element.
- `bool isOnBoundary () const`
Say if current element is a boundary element or not.
- `Node * operator() (size_t i)`
Operator ().
- `int setSide (size_t n, size_t *nd)`
Initialize information on element sides.
- `bool isActive () const`
Return *true* or *false* whether element is active or not.
- `int getLevel () const`
Return element level *Element* level decreases when element is refined (starting from 0). If the level is 0, then the element has no father.
- `void setChild (Element *el)`
Assign element as child of current one and assign current element as father This function is principally used when refining is invoked (e.g. for mesh adaption)
- `Element * getChild (size_t i) const`
Return pointer to *i*-th child element Return null pointer is no childs.
- `size_t getNbChilds () const`
Return number of children of element.
- `Element * getParent () const`
Return pointer to parent element Return null if no parent.
- `size_t IsIn (const Node *nd)`
Check if a given node belongs to current element.

7.25.1 Detailed Description

To store and treat finite element geometric information.

Class [Element](#) enables defining an element of a finite element mesh. The element is given in particular by its shape and a list of nodes. Each node can be accessed by the member function `getPtrNode`. Moreover, class [Mesh](#) can generate for each element its list of sides. The string that defines the element shape must be chosen according to the following list :

Remarks

Once a [Mesh](#) instance is constructed, one has access for each [Element](#) of the mesh to pointers to element sides provided the member function `getAllSides` of [Mesh](#) has been invoked. With this, an element can be tested to see if it is on the boundary, i.e. if it has at least one side on the boundary

7.25.2 Constructor & Destructor Documentation

Element (`size_t label`, `const string & shape`)

Constructor initializing label, shape of element.

Parameters

in	<i>label</i>	Label to assign to element.
in	<i>shape</i>	Shape of element (See class description).

Element (`size_t label`, `int shape`)

Constructor initializing label, shape of element.

Parameters

in	<i>label</i>	Label to assign to element.
in	<i>shape</i>	Shape of element (See enum <code>ElementShape</code> in Mesh)

Element (`size_t label`, `const string & shape`, `int c`)

Constructor initializing label, shape and code of element.

Parameters

in	<i>label</i>	Label to assign to element.
in	<i>shape</i>	Shape of element (See class description).
in	<i>c</i>	Code to assign to element (useful for media properties).

Element (`size_t label`, `int shape`, `int c`)

Constructor initializing label, shape and code of element.

Parameters

in	<i>label</i>	Label to assign to element.
in	<i>shape</i>	Shape of element (See enum ElementShape in Mesh).
in	<i>c</i>	Code to assign to element (useful for media properties).

7.25.3 Member Function Documentation

void setLabel (size_t *i*)

Define label of element.

Parameters

in	<i>i</i>	Label to assign to element
----	----------	----------------------------

void setCode (int *c*)

Define code of element.

Parameters

in	<i>c</i>	Code to assign to element.
----	----------	----------------------------

void setCode (const string & *exp*, int *code*)

Define code by a boolean algebraic expression invoking coordinates of element nodes.

Parameters

in	<i>exp</i>	Boolean algebraic expression as required by <code>fparser</code>
in	<i>code</i>	Code to assign to node if the algebraic expression is true

void Add (Node * *node*)

Insert a node at end of list of nodes of element.

Parameters

in	<i>node</i>	Pointer to Node instance.
----	-------------	---

void Add (Node * *node*, int *n*)

Insert a node and set its local node number.

Parameters

	<i>node</i>	[in] Pointer to Node instance
in	<i>n</i>	Element node number to assign

void Replace (size_t *label*, Node * *node*)

Replace a node at a given local label.

Parameters

in	<i>label</i>	Node to replace.
in	<i>node</i>	Pointer to Node instance to copy to current instance.

void Replace (size_t *label*, Side * *side*)

Replace a side at a given local label.

Parameters

in	<i>label</i>	Side to replace.
in	<i>side</i>	Pointer to Side instance to copy to current instance.

void Add (Side * *sd*)

Assign [Side](#) to [Element](#).

Parameters

in	<i>sd</i>	Pointer to Side instance.
----	-----------	---

void Add (Side * *sd*, int *k*)

Assign [Side](#) to [Element](#) with assigned local label.

Parameters

in	<i>sd</i>	Pointer to Side instance.
in	<i>k</i>	Local label.

void Add (Element * *el*)

Add a neighbor element.

Parameters

in	<i>el</i>	Pointer to Element instance
----	-----------	---

void set (Element * *el*, int *n*)

Add a neighbor element and set its label.

Parameters

in	<i>el</i>	Pointer to Element instance
in	<i>n</i>	Neighbor element number to assign

void setDOF (size_t *i*, size_t *dof*)

Define label of DOF.

Parameters

in	<i>i</i>	Index of DOF.
in	<i>dof</i>	Label of DOF to assign.

void setCode (size_t *dof*, int *code*)

Assign code to a DOF.

Parameters

in	<i>dof</i>	Index of dof for assignment.
in	<i>code</i>	Code to assign.

Node* operator() (size_t *i*) const

Operator ().

Return pointer to node of local label *i*.

int Contains (const Node * *nd*) const

Say if element contains given node.

This function tests if the element contains a node with the same pointer at the sought one

Parameters

in	<i>nd</i>	Pointer to Node instance
----	-----------	--

Returns

Local node label in element. If 0, the element does not contain this node

int Contains (const Node & *nd*) const

Say if element contains given node.

This function tests if the element contains a node with the same label at the sought one

Parameters

in	<i>nd</i>	Reference to Node instance
----	-----------	--

Returns

Local node label in element. If 0, the element does not contain this node

int Contains (const Side * *sd*) const

Say if element contains given side.

This function tests if the element contains a side with the same pointer at the sought one

Parameters

in	<i>sd</i>	Pointer to Side instance
----	-----------	--

Returns

Local side label in element. If 0, the element does not contain this side

int Contains (const Side & *sd*) const

Say if element contains given side.

This function tests if the element contains a side with the same label at the sought one

Parameters

in	<i>sd</i>	Reference to Side instance
----	-----------	--

Returns

Local side label in element. If 0, the element does not contain this side

Element* getNeighborElement (size_t *i*) const

Return pointer to element Neighboring element.

Parameters

in	<i>i</i>	Index of element to look for.
----	----------	-------------------------------

Note

This method returns valid information only if the [Mesh](#) member function [Mesh::getElement↵NeighborElements\(\)](#) has been called before.

size_t getNbNeigElements () const

Return number of neighboring elements.

Note

This method returns valid information only if the [Mesh](#) member function [Mesh::getElement↵NeighborElements\(\)](#) has been called before.

real_t getMeasure () const

Return measure of element.

This member function returns length, area or volume of element. In case of quadrilaterals and hexahedrals it returns determinant of Jacobian of mapping between reference and actual element

Point<real_t> getUnitNormal (size_t i) const

Return outward unit normal to i-th side of element.

Sides are ordered [node_1,node_2], [node_2,node_3], ...

bool isOnBoundary () const

Say if current element is a boundary element or not.

Note

this information is available only if boundary elements were determined i.e. if member function [Mesh::getBoundarySides](#) or [Mesh::getAllSides](#) has been invoked before.

Node* operator() (size_t i)

Operator ().

Return pointer to node of local label i.

int setSide (size_t n, size_t * nd)

Initialize information on element sides.

This function is to be used to initialize loops over sides.

Parameters

in	<i>n</i>	Label of side.
in	<i>nd</i>	Array of pointers to nodes of the side (nd[0] , nd[1] , ... point to first, second nodes, ...

void setChild (Element * el)

Assign element as child of current one and assign current element as father This function is principally used when refining is invoked (e.g. for mesh adaption)

Parameters

in	<i>el</i>	Pointer to element to assign
----	-----------	------------------------------

size_t IsIn (const Node * nd)

Check if a given node belongs to current element.

Parameters

in	<i>nd</i>	Pointer to node to locate
----	-----------	---------------------------

Returns

local label of node if this one is found, 0 otherwise

7.26 ElementList Class Reference

Class to construct a list of elements having some common properties.

Public Member Functions

- [ElementList](#) ([Mesh](#) &ms)
Constructor using a [Mesh](#) instance.
- [~ElementList](#) ()
Destructor.
- void [selectCode](#) (int code)
Select elements having a given code.
- void [unselectCode](#) (int code)
Unselect elements having a given code.
- void [selectLevel](#) (int level)
Select elements having a given level.
- size_t [getNbElements](#) () const
Return number of selected elements.
- void [top](#) ()
Reset list of elements at its top position (Non constant version)
- void [top](#) () const
Reset list of elements at its top position (Constant version)
- [Element](#) * [get](#) ()
Return pointer to current element and move to next one (Non constant version)
- [Element](#) * [get](#) () const
Return pointer to current element and move to next one (Constant version)

7.26.1 Detailed Description

Class to construct a list of elements having some common properties.

This class enables choosing multiple selection criteria by using function `select...`. However, the intersection of these properties must be empty.

7.26.2 Member Function Documentation

void unselectCode (int *code*)

Unselect elements having a given code.

Parameters

in	<i>code</i>	Code of elements to exclude
----	-------------	-----------------------------

void selectLevel (int *level*)

Select elements having a given level.

Parameters


in	<i>level</i>	Level of elements to select
----	--------------	-----------------------------

Elements having a given level (for mesh adaption) are selected in a list

7.27 Ellipse Class Reference

To store and treat an ellipsoidal figure.

Inheritance diagram for Ellipse:

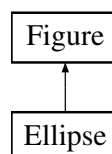

Public Member Functions

- [Ellipse](#) ()
Default constructor.
- [Ellipse](#) ([Point](#)< [real_t](#) > c, [real_t](#) a, [real_t](#) b, int code=1)
Constructor with given data.
- [real_t](#) [getSignedDistance](#) (const [Point](#)< [real_t](#) > &p) const
Return signed distance of a given point from the current ellipse.
- [Ellipse](#) & [operator+=](#) ([Point](#)< [real_t](#) > a)
Operator +=
- [Ellipse](#) & [operator+=](#) ([real_t](#) a)
*Operator *=*

- void `setCode` (int code)
Choose a code for the domain defined by the figure.
- void `getSignedDistance` (const `Grid` &g, `Vect`< `real.t` > &d) const
Calculate signed distance to current figure with respect to grid points.
- `real.t dLine` (const `Point`< `real.t` > &p, const `Point`< `real.t` > &a, const `Point`< `real.t` > &b) const
Compute signed distance from a line.

7.27.1 Detailed Description

To store and treat an ellipsoidal figure.

7.27.2 Constructor & Destructor Documentation

`Ellipse ()`

Default constructor.

Constructs an ellipse with semimajor axis = 1, and semiminor axis = 1

`Ellipse (Point< real.t > c, real.t a, real.t b, int code = 1)`

Constructor with given data.

Parameters

in	<i>c</i>	Coordinates of center
in	<i>a</i>	Semimajor axis
in	<i>b</i>	Semiminor axis
in	<i>code</i>	Code to assign to the generated figure [Default: 1]

7.27.3 Member Function Documentation

`real.t getSignedDistance (const Point< real.t > &p) const` [virtual]

Return signed distance of a given point from the current ellipse.

The computed distance is negative if p lies in the ellipse, positive if it is outside, and 0 on its boundary

Parameters

in	<i>p</i>	Point<double> instance
----	----------	------------------------

Reimplemented from [Figure](#).

`Ellipse& operator+= (Point< real.t > a)`

Operator +=

Translate ellipse by a vector a

Ellipse& operator+= (real_t a)

Operator **=

Scale ellipse by a factor a

void getSignedDistance (const Grid &g, Vect< real_t > &d) const [inherited]

Calculate signed distance to current figure with respect to grid points.

Parameters

in	<i>g</i>	Grid instance
in	<i>d</i>	Vect instance containing calculated distance from each grid index to Figure

Remarks

Vector d doesn't need to be sized before invoking this function

real_t dLine (const Point< real_t > &p, const Point< real_t > &a, const Point< real_t > &b) const [inherited]

Compute signed distance from a line.

Parameters

in	<i>p</i>	Point for which distance is computed
in	<i>a</i>	First vertex of line
in	<i>b</i>	Second vertex of line


Returns

Signed distance

7.28 Equa_Electromagnetics< T_, NEN_, NEE_, NSN_, NSE_ > Class Template Reference

Abstract class for Electromagnetics [Equation](#) classes.

Inheritance diagram for Equa_Electromagnetics< T_, NEN_, NEE_, NSN_, NSE_ >:

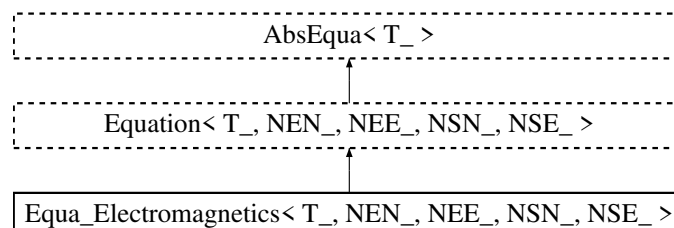

Public Member Functions

- void [updateBC](#) (const [Element](#) &el, const [Vect](#)< T_ > &bc)

- Update Right-Hand side by taking into account essential boundary conditions.*
- void [updateBC](#) (const [Vect](#)< T_ > &bc)
- Update Right-Hand side by taking into account essential boundary conditions.*
- void [DiagBC](#) (int dof_type=NODE.DOF, int dof=0)
- Update element matrix to impose bc by diagonalization technique.*
- void [LocalNodeVector](#) ([Vect](#)< T_ > &b)
- Localize [Element](#) Vector from a [Vect](#) instance.*
- void [ElementNodeVector](#) (const [Vect](#)< T_ > &b, [LocalVect](#)< T_, NEE_ > &be)
- Localize [Element](#) Vector from a [Vect](#) instance.*
- void [ElementNodeVector](#) (const [Vect](#)< T_ > &b, [LocalVect](#)< T_, NEN_ > &be, int dof)
- Localize [Element](#) Vector from a [Vect](#) instance.*
- void [ElementNodeVectorSingleDOF](#) (const [Vect](#)< T_ > &b, [LocalVect](#)< T_, NEN_ > &be)
- Localize [Element](#) Vector from a [Vect](#) instance.*
- void [ElementSideVector](#) (const [Vect](#)< T_ > &b, [LocalVect](#)< T_, NSE_ > &be)
- Localize [Element](#) Vector from a [Vect](#) instance.*
- void [ElementVector](#) (const [Vect](#)< T_ > &b, int dof_type=NODE.FIELD, int flag=0)
- Localize [Element](#) Vector.*
- void [SideVector](#) (const [Vect](#)< T_ > &b)
- Localize [Side](#) Vector.*
- void [ElementNodeCoordinates](#) ()
- Localize coordinates of element nodes.*
- void [SideNodeCoordinates](#) ()
- Localize coordinates of side nodes.*
- void [ElementAssembly](#) ([Matrix](#)< T_ > *A)
- Assemble element matrix into global one.*
- void [ElementAssembly](#) ([PETScMatrix](#)< T_ > &A)
- Assemble element matrix into global one.*
- void [ElementAssembly](#) ([PETScVect](#)< T_ > &b)
- Assemble element right-hand side vector into global one.*
- void [ElementAssembly](#) ([BMatrix](#)< T_ > &A)
- Assemble element matrix into global one.*
- void [ElementAssembly](#) ([SkSMatrix](#)< T_ > &A)
- Assemble element matrix into global one.*
- void [ElementAssembly](#) ([SkMatrix](#)< T_ > &A)
- Assemble element matrix into global one.*
- void [ElementAssembly](#) ([SpMatrix](#)< T_ > &A)
- Assemble element matrix into global one.*
- void [ElementAssembly](#) ([TrMatrix](#)< T_ > &A)
- Assemble element matrix into global one.*
- void [ElementAssembly](#) ([Vect](#)< T_ > &v)
- Assemble element vector into global one.*
- void [SideAssembly](#) ([PETScMatrix](#)< T_ > &A)
- Assemble side matrix into global one.*
- void [SideAssembly](#) ([PETScVect](#)< T_ > &b)
- Assemble side right-hand side vector into global one.*
- void [SideAssembly](#) ([Matrix](#)< T_ > *A)

- Assemble side (edge or face) matrix into global one.*
- void [SideAssembly](#) ([SkMatrix](#)< T_ > &A)
- Assemble side (edge or face) matrix into global one.*
- void [SideAssembly](#) ([SkMatrix](#)< T_ > &A)
- Assemble side (edge or face) matrix into global one.*
- void [SideAssembly](#) ([SpMatrix](#)< T_ > &A)
- Assemble side (edge or face) matrix into global one.*
- void [SideAssembly](#) ([Vect](#)< T_ > &v)
- Assemble side (edge or face) vector into global one.*
- void [DGElementAssembly](#) ([Matrix](#)< T_ > *A)
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
- void [DGElementAssembly](#) ([SkMatrix](#)< T_ > &A)
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
- void [DGElementAssembly](#) ([SkMatrix](#)< T_ > &A)
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
- void [DGElementAssembly](#) ([SpMatrix](#)< T_ > &A)
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
- void [DGElementAssembly](#) ([TrMatrix](#)< T_ > &A)
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
- void [AxbAssembly](#) (const [Element](#) &el, const [Vect](#)< T_ > &x, [Vect](#)< T_ > &b)
- Assemble product of element matrix by element vector into global vector.*
- void [AxbAssembly](#) (const [Side](#) &sd, const [Vect](#)< T_ > &x, [Vect](#)< T_ > &b)
- Assemble product of side matrix by side vector into global vector.*
- size_t [getNbNodes](#) () const
- Return number of element nodes.*
- size_t [getNbEq](#) () const
- Return number of element equations.*
- void [setInitialSolution](#) (const [Vect](#)< T_ > &u)
- Set initial solution (previous time step)*
- [real_t](#) [setMaterialProperty](#) (const string &exp, const string &prop)
- Define a material property by an algebraic expression.*
- void [setMesh](#) ([Mesh](#) &m)
- Define mesh and renumber DOFs after removing imposed ones.*
- [Mesh](#) & [getMesh](#) () const
- Return reference to [Mesh](#) instance.*
- [LinearSolver](#)< T_ > & [getLinearSolver](#) ()
- Return reference to linear solver instance.*
- void [setSolver](#) ([Iteration](#) ls, [Preconditioner](#) pc=IDENT_PREC)
- Choose solver for the linear system.*
- int [SolveLinearSystem](#) ([Matrix](#)< T_ > *A, [Vect](#)< T_ > &b, [Vect](#)< T_ > &x)
- Solve the linear system.*

Public Attributes

- [LocalMatrix](#)< T_, NEE_, NEE_ > [eMat](#)
LocalMatrix instance containing local matrix associated to current element.
- [LocalMatrix](#)< T_, NSE_, NSE_ > [sMat](#)
LocalMatrix instance containing local matrix associated to current side.
- [LocalVect](#)< T_, NEE_ > [ePrev](#)
LocalVect instance containing local vector associated to current element.
- [LocalVect](#)< T_, NEE_ > [eRHS](#)
LocalVect instance containing local right-hand side vector associated to current element.
- [LocalVect](#)< T_, NEE_ > [eRes](#)
LocalVect instance containing local residual vector associated to current element.
- [LocalVect](#)< T_, NSE_ > [sRHS](#)
LocalVect instance containing local right-hand side vector associated to current side.

Protected Member Functions

- void [MagneticPermeability](#) (const [real_t](#) &mu)
Set (constant) magnetic permeability.
- void [MagneticPermeability](#) (const string &exp)
Set magnetic permeability given by an algebraic expression.
- void [ElectricConductivity](#) (const [real_t](#) &sigma)
Set (constant) electric conductivity.
- void [ElectricConductivity](#) (const string &exp)
set electric conductivity given by an algebraic expression
- void [ElectricResistivity](#) (const [real_t](#) &rho)
Set (constant) electric resistivity.
- void [ElectricResistivity](#) (const string &exp)
Set electric resistivity given by an algebraic expression.
- void [setMaterial](#) ()
Set material properties.
- void [Init](#) (const [Element](#) *el)
Set element arrays to zero.
- void [Init](#) (const [Side](#) *sd)
Set side arrays to zero.

7.28.1 Detailed Description

template<class T_, size_t NEN_, size_t NEE_, size_t NSN_, size_t NSE_>
class OFELI::Equa.Electromagnetics< T_, NEN_, NEE_, NSN_, NSE_ >

Abstract class for Electromagnetics [Equation](#) classes.

Template Parameters

<T_>	data type (double, float, ...)
<NEN>	Number of element nodes
<NEE_<_>	Number of element equations

Template Parameters

<NSN_>	Number of side nodes
<NSE_>	Number of side equations

7.28.2 Member Function Documentation

void updateBC (const Element & *el*, const Vect< T_ > & *bc*) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>el</i>	Reference to current element instance
in	<i>bc</i>	Vector that contains imposed values at all DOFs

void updateBC (const Vect< T_ > & *bc*) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>bc</i>	Vector that contains imposed values at all DOFs
----	-----------	---

Remarks

The current element is pointed by *_theElement*

void DiagBC (int *dof.type* = *NODE_DOF*, int *dof* = 0) [inherited]

Update element matrix to impose bc by diagonalization technique.

Parameters

in	<i>dof.type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • <i>NODE_FIELD</i>, DOFs are supported by nodes [Default] • <i>ELEMENT_FIELD</i>, DOFs are supported by elements • <i>SIDE_FIELD</i>, DOFs are supported by sides
in	<i>dof</i>	DOF setting: <ul style="list-style-type: none"> • = 0, All DOFs are taken into account [Default] • != 0, Only DOF No. <i>dof</i> is handled in the system

void LocalNodeVector (Vect< T_ > & b) [inherited]

Localize [Element](#) Vector from a [Vect](#) instance.

Parameters

in	<i>b</i>	Reference to global vector to be localized. The resulting local vector can be accessed by attribute ePrev. This member function is to be used if a constructor with Element was invoked.
----	----------	--

void ElementNodeVector (const Vect< T_ > & b, LocalVect< T_, NEE_ > & be)
[inherited]

Localize [Element](#) Vector from a [Vect](#) instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

All degrees of freedom are transferred to the local vector

void ElementNodeVector (const Vect< T_ > & b, LocalVect< T_, NEN_ > & be, int dof)
[inherited]

Localize [Element](#) Vector from a [Vect](#) instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.
in	<i>dof</i>	Degree of freedom to transfer to the local vector

Remarks

Only yhe dega dof is transferred to the local vector

void ElementNodeVectorSingleDOF (const Vect< T_ > & b, LocalVect< T_, NEN_ > & be)
[inherited]

Localize [Element](#) Vector from a [Vect](#) instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

Vector **b** is assumed to contain only one degree of freedom by node.

void ElementSideVector (const Vect< T_ > & b, LocalVect< T_, NSE_ > & be) [inherited]

Localize [Element](#) Vector from a [Vect](#) instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is

void ElementVector (const Vect< T_ > & b, int dof.type = NODE_FIELD, int flag = 0)
 [inherited]

Localize [Element](#) Vector.

Parameters

in	<i>b</i>	Global vector to be localized
in	<i>dof.type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • NODE_FIELD, DOFs are supported by nodes [Default] • ELEMENT_FIELD, DOFs are supported by elements • SIDE_FIELD, DOFs are supported by sides
in	<i>flag</i>	Option to set: <ul style="list-style-type: none"> • = 0, All DOFs are taken into account [Default] • != 0, Only DOF number dof is handled in the system The resulting local vector can be accessed by attribute ePrev.

Remarks

This member function is to be used if a constructor with [Element](#) was invoked. It uses the [Element](#) pointer `_theElement`

void SideVector (const Vect< T_ > & b) [inherited]

Localize [Side](#) Vector.

Parameters

in	<i>b</i>	Global vector to be localized <ul style="list-style-type: none"> • <code>NODE_FIELD</code>, DOFs are supported by nodes [default] • <code>ELEMENT_FIELD</code>, DOFs are supported by elements • <code>SIDE_FIELD</code>, DOFs are supported by sides The resulting local vector can be accessed by attribute <code>ePrev</code> .
----	----------	---

Remarks

This member function is to be used if a constructor with [Side](#) was invoked. It uses the [Side](#) pointer `_theSide`

void ElementNodeCoordinates () [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array `_x[0]`, `_x[1]`, ... which are instances of class [Point<real.t>](#)

Remarks

This member function uses the [Side](#) pointer `_theSide`

void SideNodeCoordinates () [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array `_x[0]`, `_x[1]`, ... which are instances of class [Point<real.t>](#)

Remarks

This member function uses the [Element](#) pointer `_theElement`

void ElementAssembly (Matrix< T_ > * A) [inherited]

Assemble element matrix into global one.

Parameters

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix , SkMatrix , SpMatrix)
---	---

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScMatrix< T_ > & A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Reference to global matrix
----------	----------------------------

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScVect< T_ > & *b*) [inherited]

Assemble element right-hand side vector into global one.

Parameters

<i>b</i>	Reference to global right-hand side vector
----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (BMatrix< T_ > & *A*) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Global matrix stored as a BMatrix instance
----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkSMatrix< T_ > & *A*) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Global matrix stored as an SkSMatrix instance
----------	---

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkMatrix< T_ > & *A*) [inherited]

Assemble element matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an SkMatrix instance
----	----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SpMatrix< T_ > & A) [inherited]

Assemble element matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an SpMatrix instance
----	----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (TrMatrix< T_ > & A) [inherited]

Assemble element matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an TrMatrix instance
----	----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (Vect< T_ > & v) [inherited]

Assemble element vector into global one.

Parameters

in	<i>v</i>	Global vector (Vect instance)
----	----------	--

Warning

The element pointer is given by the global variable `theElement`

void SideAssembly (PETScMatrix< T_ > & A) [inherited]

Assemble side matrix into global one.

Parameters

A	Reference to global matrix
-----	----------------------------

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (PETScVect< T_ > & b) [inherited]

Assemble side right-hand side vector into global one.

Parameters

b	Reference to global right-hand side vector
-----	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (Matrix< T_ > * A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix , SkMatrix , SpMatrix)
-----	---

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SkSMatrix< T_ > & A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	A	Global matrix stored as an SkSMatrix instance
----	-----	---

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SkMatrix< T_ > & A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	A	Global matrix stored as an SkMatrix instance
----	-----	--

Warning

The side pointer is given by the global variable theSide

void SideAssembly (SpMatrix< T₋ > & A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	A	Global matrix stored as an SpMatrix instance
----	-----	--

Warning

The side pointer is given by the global variable theSide

void SideAssembly (Vect< T₋ > & v) [inherited]

Assemble side (edge or face) vector into global one.

Parameters

in	v	Global vector (Vect instance)
----	-----	--

Warning

The side pointer is given by the global variable theSide

void DGElementAssembly (Matrix< T₋ > * A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix , SkMatrix , SpMatrix)
-----	---

Warning

The element pointer is given by the global variable theElement

void DGElementAssembly (SkSMatrix< T₋ > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

A	Global matrix stored as an SkMatrix instance
---	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SkMatrix< T₋ > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SpMatrix< T₋ > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	A	Global matrix stored as an SpMatrix instance
----	---	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (TrMatrix< T₋ > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	A	Global matrix stored as an TrMatrix instance
----	---	--

Warning

The element pointer is given by the global variable `theElement`

void AxbAssembly (const Element & el, const Vect< T₋ > & x, Vect< T₋ > & b)
 [inherited]

Assemble product of element matrix by element vector into global vector.

Parameters

in	<i>el</i>	Reference to Element instance
in	<i>x</i>	Global vector to multiply by (Vect instance)
out	<i>b</i>	Global vector to add (Vect instance)

void AxbAssembly (const Side &sd, const Vect< T_ > &x, Vect< T_ > &b) [inherited]

Assemble product of side matrix by side vector into global vector.

Parameters

in	<i>sd</i>	Reference to Side instance
in	<i>x</i>	Global vector to multiply by (Vect instance)
out	<i>b</i>	Global vector (Vect instance)

real_t setMaterialProperty (const string &exp, const string &prop) [inherited]

Define a material property by an algebraic expression.

Parameters

in	<i>exp</i>	Algebraic expression
in	<i>prop</i>	Property name

Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

Mesh& getMesh () const [inherited]

Return reference to [Mesh](#) instance.

Returns

Reference to [Mesh](#) instance

void setSolver (Iteration ls, Preconditioner pc = IDENT_PREC) [inherited]

Choose solver for the linear system.

Parameters

in	<i>ls</i>	<p>Solver of the linear system. To choose among the enumerated values: <code>DIRECT_SOLVER</code>, <code>CG_SOLVER</code>, <code>GMRES_SOLVER</code></p> <ul style="list-style-type: none"> • <code>DIRECT_SOLVER</code>, Use a facorization solver [default] • <code>CG_SOLVER</code>, Conjugate Gradient iterative solver • <code>CGS_SOLVER</code>, Squared Conjugate Gradient iterative solver • <code>BICG_SOLVER</code>, BiConjugate Gradient iterative solver • <code>BICG_STAB_SOLVER</code>, BiConjugate Gradient Stabilized iterative solver • <code>GMRES_SOLVER</code>, GMRES iterative solver • <code>QMR_SOLVER</code>, QMR iterative solver
in	<i>pc</i>	<p>Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:</p> <ul style="list-style-type: none"> • <code>IDENT_PREC</code>, Identity preconditioner (no preconditioning [default]) • <code>DIAG_PREC</code>, Diagonal preconditioner • <code>ILU_PREC</code>, Incomplete LU factorization preconditioner

int SolveLinearSystem (Matrix< T_ > * A, Vect< T_ > & b, Vect< T_ > & x) [inherited]

Solve the linear system.

Parameters

in	<i>A</i>	Pointer to matrix of the system (Instance of class SpMatrix)
in	<i>b</i>	Vector containing right-hand side
in,out	<i>x</i>	Vector containing initial guess of solution on input, actual solution on output

7.28.3 Member Data Documentation

LocalVect<T_,NEE_> ePrev [inherited]


[LocalVect](#) instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

7.29 Equa_Fluid< T_, NEN_, NEE_, NSN_, NSE_ > Class Template Reference

Abstract class for Fluid Dynamics [Equation](#) classes.

Inheritance diagram for `Equa_Fluid< T_, NEN_, NEE_, NSN_, NSE_ >`:

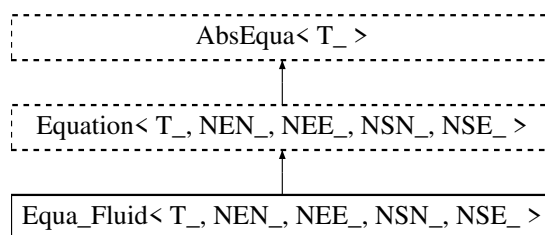

Public Member Functions

- `Equa_Fluid ()`
Default constructor.
- `virtual ~Equa_Fluid ()`
Destructor.
- `void updateBC (const Element &el, const Vect< T_ > &bc)`
Update Right-Hand side by taking into account essential boundary conditions.
- `void updateBC (const Vect< T_ > &bc)`
Update Right-Hand side by taking into account essential boundary conditions.
- `void DiagBC (int dof_type=NODE_DOF, int dof=0)`
Update element matrix to impose bc by diagonalization technique.
- `void LocalNodeVector (Vect< T_ > &b)`
Localize Element Vector from a Vect instance.
- `void ElementNodeVector (const Vect< T_ > &b, LocalVect< T_, NEE_ > &be)`
Localize Element Vector from a Vect instance.
- `void ElementNodeVector (const Vect< T_ > &b, LocalVect< T_, NEN_ > &be, int dof)`
Localize Element Vector from a Vect instance.
- `void ElementNodeVectorSingleDOF (const Vect< T_ > &b, LocalVect< T_, NEN_ > &be)`
Localize Element Vector from a Vect instance.
- `void ElementSideVector (const Vect< T_ > &b, LocalVect< T_, NSE_ > &be)`
Localize Element Vector from a Vect instance.
- `void ElementVector (const Vect< T_ > &b, int dof_type=NODE_FIELD, int flag=0)`
Localize Element Vector.
- `void SideVector (const Vect< T_ > &b)`
Localize Side Vector.
- `void ElementNodeCoordinates ()`
Localize coordinates of element nodes.
- `void SideNodeCoordinates ()`
Localize coordinates of side nodes.
- `void ElementAssembly (Matrix< T_ > *A)`
Assemble element matrix into global one.
- `void ElementAssembly (PETScMatrix< T_ > &A)`
Assemble element matrix into global one.
- `void ElementAssembly (PETScVect< T_ > &b)`
Assemble element right-hand side vector into global one.
- `void ElementAssembly (BMatrix< T_ > &A)`
Assemble element matrix into global one.
- `void ElementAssembly (SkSMatrix< T_ > &A)`

- *Assemble element matrix into global one.*
- void [ElementAssembly](#) ([SkMatrix](#)< T_ > &A)
- *Assemble element matrix into global one.*
- void [ElementAssembly](#) ([SpMatrix](#)< T_ > &A)
- *Assemble element matrix into global one.*
- void [ElementAssembly](#) ([TrMatrix](#)< T_ > &A)
- *Assemble element matrix into global one.*
- void [ElementAssembly](#) ([Vect](#)< T_ > &v)
- *Assemble element vector into global one.*
- void [SideAssembly](#) ([PETScMatrix](#)< T_ > &A)
- *Assemble side matrix into global one.*
- void [SideAssembly](#) ([PETScVect](#)< T_ > &b)
- *Assemble side right-hand side vector into global one.*
- void [SideAssembly](#) ([Matrix](#)< T_ > *A)
- *Assemble side (edge or face) matrix into global one.*
- void [SideAssembly](#) ([SkSMatrix](#)< T_ > &A)
- *Assemble side (edge or face) matrix into global one.*
- void [SideAssembly](#) ([SkMatrix](#)< T_ > &A)
- *Assemble side (edge or face) matrix into global one.*
- void [SideAssembly](#) ([SpMatrix](#)< T_ > &A)
- *Assemble side (edge or face) matrix into global one.*
- void [SideAssembly](#) ([Vect](#)< T_ > &v)
- *Assemble side (edge or face) vector into global one.*
- void [DGElementAssembly](#) ([Matrix](#)< T_ > *A)
- *Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
- void [DGElementAssembly](#) ([SkSMatrix](#)< T_ > &A)
- *Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
- void [DGElementAssembly](#) ([SkMatrix](#)< T_ > &A)
- *Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
- void [DGElementAssembly](#) ([SpMatrix](#)< T_ > &A)
- *Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
- void [DGElementAssembly](#) ([TrMatrix](#)< T_ > &A)
- *Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
- void [AxbAssembly](#) (const [Element](#) &el, const [Vect](#)< T_ > &x, [Vect](#)< T_ > &b)
- *Assemble product of element matrix by element vector into global vector.*
- void [AxbAssembly](#) (const [Side](#) &sd, const [Vect](#)< T_ > &x, [Vect](#)< T_ > &b)
- *Assemble product of side matrix by side vector into global vector.*
- size_t [getNbNodes](#) () const
- *Return number of element nodes.*
- size_t [getNbEq](#) () const
- *Return number of element equations.*
- void [setInitialSolution](#) (const [Vect](#)< T_ > &u)
- *Set initial solution (previous time step)*
- real_t [setMaterialProperty](#) (const string &exp, const string &prop)
- *Define a material property by an algebraic expression.*
- void [setMesh](#) ([Mesh](#) &m)

Define mesh and renumber DOFs after removing imposed ones.

- **Mesh** & **getMesh** () const
*Return reference to **Mesh** instance.*
- **LinearSolver**< T_ > & **getLinearSolver** ()
Return reference to linear solver instance.
- void **setSolver** (**Iteration** ls, **Preconditioner** pc=IDENT_PREC)
Choose solver for the linear system.
- int **SolveLinearSystem** (**Matrix**< T_ > *A, **Vect**< T_ > &b, **Vect**< T_ > &x)
Solve the linear system.

Public Attributes

- **LocalMatrix**< T_, NEE_, NEE_ > **eMat**
***LocalMatrix** instance containing local matrix associated to current element.*
- **LocalMatrix**< T_, NSE_, NSE_ > **sMat**
***LocalMatrix** instance containing local matrix associated to current side.*
- **LocalVect**< T_, NEE_ > **ePrev**
***LocalVect** instance containing local vector associated to current element.*
- **LocalVect**< T_, NEE_ > **eRHS**
***LocalVect** instance containing local right-hand side vector associated to current element.*
- **LocalVect**< T_, NEE_ > **eRes**
***LocalVect** instance containing local residual vector associated to current element.*
- **LocalVect**< T_, NSE_ > **sRHS**
***LocalVect** instance containing local right-hand side vector associated to current side.*

Protected Member Functions

- void **Viscosity** (const **real.t** &visc)
Set (constant) Viscosity.
- void **Viscosity** (const string &exp)
Set viscosity given by an algebraic expression.
- void **Density** (const **real.t** &dens)
Set (constant) Viscosity.
- void **Density** (const string &exp)
Set Density given by an algebraic expression.
- void **ThermalExpansion** (const **real.t** *e)
Set (constant) thermal expansion coefficient.
- void **ThermalExpansion** (const string &exp)
Set thermal expansion coefficient given by an algebraic expression.
- void **setMaterial** ()
Set material properties.
- void **Init** (const **Element** *el)
Set element arrays to zero.
- void **Init** (const **Side** *sd)
Set side arrays to zero.

7.29.1 Detailed Description

```
template<class T_ = real_t, size_t NEN_ = 3, size_t NEE_ = 3, size_t NSN_ = 2, size_t NSE_ = 2>
class OFELI::Equa_Fluid< T_, NEN_, NEE_, NSN_, NSE_ >
```

Abstract class for Fluid Dynamics [Equation](#) classes.

Template Parameters

<code><T_></code>	data type (double, float, ...)
<code><NEN></code>	Number of element nodes
<code><NEE_></code>	Number of element equations
<code><NSN_></code>	Number of side nodes
<code><NSE_></code>	Number of side equations

7.29.2 Constructor & Destructor Documentation

Equa_Fluid ()

Default constructor.

Constructs an empty equation.

7.29.3 Member Function Documentation

void updateBC (const Element & *el*, const Vect< T_ > & *bc*) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>el</i>	Reference to current element instance
in	<i>bc</i>	Vector that contains imposed values at all DOFs

void updateBC (const Vect< T_ > & *bc*) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>bc</i>	Vector that contains imposed values at all DOFs
----	-----------	---

Remarks

The current element is pointed by `_theElement`

void DiagBC (int *dof.type* = *NODE_DOF*, int *dof* = 0) [inherited]

Update element matrix to impose bc by diagonalization technique.

Parameters

in	<i>dof_type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • <code>NODE_FIELD</code>, DOFs are supported by nodes [Default] • <code>ELEMENT_FIELD</code>, DOFs are supported by elements • <code>SIDE_FIELD</code>, DOFs are supported by sides
in	<i>dof</i>	DOF setting: <ul style="list-style-type: none"> • <code>= 0</code>, All DOFs are taken into account [Default] • <code>!= 0</code>, Only DOF No. <i>dof</i> is handled in the system

void LocalNodeVector (Vect< T_ > & b) [inherited]

Localize [Element](#) Vector from a [Vect](#) instance.

Parameters

in	<i>b</i>	Reference to global vector to be localized. The resulting local vector can be accessed by attribute <code>ePrev</code> . This member function is to be used if a constructor with Element was invoked.
----	----------	--

void ElementNodeVector (const Vect< T_ > & b, LocalVect< T_, NEE_ > & be)
[inherited]

Localize [Element](#) Vector from a [Vect](#) instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

All degrees of freedom are transferred to the local vector

void ElementNodeVector (const Vect< T_ > & b, LocalVect< T_, NEN_ > & be, int dof)
[inherited]

Localize [Element](#) Vector from a [Vect](#) instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.
in	<i>dof</i>	Degree of freedom to transfer to the local vector

Remarks

Only the dega dof is transferred to the local vector

void ElementNodeVectorSingleDOF (const Vect< T_ > & b, LocalVect< T_, NEN_ > & be)
[inherited]

Localize [Element](#) Vector from a [Vect](#) instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

Vector b is assumed to contain only one degree of freedom by node.

void ElementSideVector (const Vect< T_ > & b, LocalVect< T_, NSE_ > & be) [inherited]

Localize [Element](#) Vector from a [Vect](#) instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is

void ElementVector (const Vect< T_ > & b, int dof_type = NODE_FIELD, int flag = 0)
[inherited]

Localize [Element](#) Vector.

Parameters

in	<i>b</i>	Global vector to be localized
in	<i>dof_type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • NODE_FIELD, DOFs are supported by nodes [Default] • ELEMENT_FIELD, DOFs are supported by elements • SIDE_FIELD, DOFs are supported by sides
in	<i>flag</i>	Option to set: <ul style="list-style-type: none"> • = 0, All DOFs are taken into account [Default] • != 0, Only DOF number dof is handled in the system <p>The resulting local vector can be accessed by attribute ePrev.</p>

Remarks

This member function is to be used if a constructor with [Element](#) was invoked. It uses the [Element](#) pointer `_theElement`

void SideVector (const Vect< T_ > & b) [inherited]

Localize [Side](#) Vector.

Parameters

in	<i>b</i>	Global vector to be localized <ul style="list-style-type: none"> • <code>NODE_FIELD</code>, DOFs are supported by nodes [default] • <code>ELEMENT_FIELD</code>, DOFs are supported by elements • <code>SIDE_FIELD</code>, DOFs are supported by sides The resulting local vector can be accessed by attribute <code>ePrev</code> .
----	----------	---

Remarks

This member function is to be used if a constructor with [Side](#) was invoked. It uses the [Side](#) pointer `_theSide`

void ElementNodeCoordinates () [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array `_x[0]` , `_x[1]` , ... which are instances of class [Point<real.t>](#)

Remarks

This member function uses the [Side](#) pointer `_theSide`

void SideNodeCoordinates () [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array `_x[0]` , `_x[1]` , ... which are instances of class [Point<real.t>](#)

Remarks

This member function uses the [Element](#) pointer `_theElement`

void ElementAssembly (Matrix< T_ > * A) [inherited]

Assemble element matrix into global one.

Parameters

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix , SkMatrix , SpMatrix)
---	---

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScMatrix< T_ > & A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Reference to global matrix
----------	----------------------------

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScVect< T_ > & b) [inherited]

Assemble element right-hand side vector into global one.

Parameters

<i>b</i>	Reference to global right-hand side vector
----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (BMatrix< T_ > & A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Global matrix stored as a BMatrix instance
----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkSMatrix< T_ > & A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Global matrix stored as an SkSMatrix instance
----------	---

Warning

The element pointer is given by the global variable `theElement`

`void ElementAssembly (SkMatrix< T_ > & A)` [inherited]

Assemble element matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an SkMatrix instance
----	----------	--

Warning

The element pointer is given by the global variable `theElement`

`void ElementAssembly (SpMatrix< T_ > & A)` [inherited]

Assemble element matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an SpMatrix instance
----	----------	--

Warning

The element pointer is given by the global variable `theElement`

`void ElementAssembly (TrMatrix< T_ > & A)` [inherited]

Assemble element matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an TrMatrix instance
----	----------	--

Warning

The element pointer is given by the global variable `theElement`

`void ElementAssembly (Vect< T_ > & v)` [inherited]

Assemble element vector into global one.

Parameters

in	<i>v</i>	Global vector (Vect instance)
----	----------	--

Warning

The element pointer is given by the global variable `theElement`

void SideAssembly (PETScMatrix< T_ > & A) [inherited]

Assemble side matrix into global one.

Parameters

<i>A</i>	Reference to global matrix
----------	----------------------------

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (PETScVect< T_ > & b) [inherited]

Assemble side right-hand side vector into global one.

Parameters

<i>b</i>	Reference to global right-hand side vector
----------	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (Matrix< T_ > * A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

<i>A</i>	Pointer to global matrix (abstract class: can be any of classes SkSMatrix , SkMatrix , SpMatrix)
----------	---

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SkSMatrix< T_ > & A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

<i>in</i>	<i>A</i>	Global matrix stored as an SkSMatrix instance
-----------	----------	---

Warning

The side pointer is given by the global variable theSide

void SideAssembly (SkMatrix< T_ > & A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

Warning

The side pointer is given by the global variable theSide

void SideAssembly (SpMatrix< T_ > & A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	A	Global matrix stored as an SpMatrix instance
----	---	--

Warning

The side pointer is given by the global variable theSide

void SideAssembly (Vect< T_ > & v) [inherited]

Assemble side (edge or face) vector into global one.

Parameters

in	v	Global vector (Vect instance)
----	---	--

Warning

The side pointer is given by the global variable theSide

void DGElementAssembly (Matrix< T_ > * A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix , SkMatrix , SpMatrix)
---	---

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SkSMatrix< T_ > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

<code>A</code>	Global matrix stored as an SkSMatrix instance
----------------	---

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SkMatrix< T_ > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

<code>in</code>	<code>A</code>	Global matrix stored as an SkMatrix instance
-----------------	----------------	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SpMatrix< T_ > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

<code>in</code>	<code>A</code>	Global matrix stored as an SpMatrix instance
-----------------	----------------	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (TrMatrix< T_ > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

<code>in</code>	<code>A</code>	Global matrix stored as an TrMatrix instance
-----------------	----------------	--

Warning

The element pointer is given by the global variable `theElement`

void AxbAssembly (const Element & *el*, const Vect< T_ > & *x*, Vect< T_ > & *b*)
[inherited]

Assemble product of element matrix by element vector into global vector.

Parameters

in	<i>el</i>	Reference to Element instance
in	<i>x</i>	Global vector to multiply by (Vect instance)
out	<i>b</i>	Global vector to add (Vect instance)

void AxbAssembly (const Side & *sd*, const Vect< T_ > & *x*, Vect< T_ > & *b*) [inherited]

Assemble product of side matrix by side vector into global vector.

Parameters

in	<i>sd</i>	Reference to Side instance
in	<i>x</i>	Global vector to multiply by (Vect instance)
out	<i>b</i>	Global vector (Vect instance)

real_t setMaterialProperty (const string & *exp*, const string & *prop*) [inherited]

Define a material property by an algebraic expression.

Parameters

in	<i>exp</i>	Algebraic expression
in	<i>prop</i>	Property name

Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

Mesh& getMesh () const [inherited]

Return reference to [Mesh](#) instance.

Returns

Reference to [Mesh](#) instance

void setSolver (Iteration *ls*, Preconditioner *pc* = IDENT_PREC) [inherited]

Choose solver for the linear system.

Parameters

in	<i>ls</i>	<p>Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER</p> <ul style="list-style-type: none"> • DIRECT_SOLVER, Use a facorization solver [default] • CG_SOLVER, Conjugate Gradient iterative solver • CGS_SOLVER, Squared Conjugate Gradient iterative solver • BICG_SOLVER, BiConjugate Gradient iterative solver • BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver • GMRES_SOLVER, GMRES iterative solver • QMR_SOLVER, QMR iterative solver
in	<i>pc</i>	<p>Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:</p> <ul style="list-style-type: none"> • IDENT_PREC, Identity preconditioner (no preconditioning [default]) • DIAG_PREC, Diagonal preconditioner • ILU_PREC, Incomplete LU factorization preconditioner

int SolveLinearSystem (Matrix< T_ > * A, Vect< T_ > & b, Vect< T_ > & x) [inherited]

Solve the linear system.

Parameters

in	<i>A</i>	Pointer to matrix of the system (Instance of class SpMatrix)
in	<i>b</i>	Vector containing right-hand side
in,out	<i>x</i>	Vector containing initial guess of solution on input, actual solution on output

7.29.4 Member Data Documentation

LocalVect<T_,NEE_> ePrev [inherited]


[LocalVect](#) instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

7.30 Equa_Laplace< T_, NEN_, NEE_, NSN_, NSE_ > Class Template Reference

Abstract class for classes about the Laplace equation.

Inheritance diagram for Equa_Laplace< T_, NEN_, NEE_, NSN_, NSE_ >:

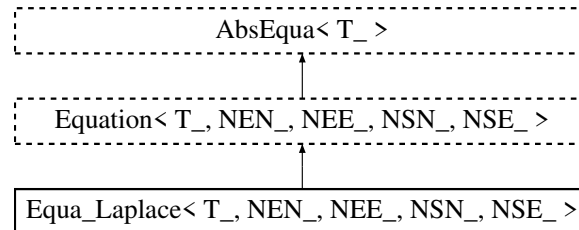

Public Member Functions

- [Equa_Laplace](#) ()
Default constructor.
- virtual [~Equa_Laplace](#) ()
Destructor.
- virtual void [build](#) ()
Solve the equation.
- virtual void [buildEigen](#) (int opt=0)
Build matrices for an eigenvalue problem.
- void [build](#) ([EigenProblemSolver](#) &e)
Build the linear system for an eigenvalue problem.
- void [updateBC](#) (const [Element](#) &el, const [Vect](#)< T_ > &bc)
Update Right-Hand side by taking into account essential boundary conditions.
- void [updateBC](#) (const [Vect](#)< T_ > &bc)
Update Right-Hand side by taking into account essential boundary conditions.
- void [DiagBC](#) (int dof_type=NODE.DOF, int dof=0)
Update element matrix to impose bc by diagonalization technique.
- void [LocalNodeVector](#) ([Vect](#)< T_ > &b)
Localize [Element](#) Vector from a [Vect](#) instance.
- void [ElementNodeVector](#) (const [Vect](#)< T_ > &b, [LocalVect](#)< T_, NEE_ > &be)
Localize [Element](#) Vector from a [Vect](#) instance.
- void [ElementNodeVector](#) (const [Vect](#)< T_ > &b, [LocalVect](#)< T_, NEN_ > &be, int dof)
Localize [Element](#) Vector from a [Vect](#) instance.
- void [ElementNodeVectorSingleDOF](#) (const [Vect](#)< T_ > &b, [LocalVect](#)< T_, NEN_ > &be)
Localize [Element](#) Vector from a [Vect](#) instance.
- void [ElementSideVector](#) (const [Vect](#)< T_ > &b, [LocalVect](#)< T_, NSE_ > &be)
Localize [Element](#) Vector from a [Vect](#) instance.
- void [ElementVector](#) (const [Vect](#)< T_ > &b, int dof_type=NODE.FIELD, int flag=0)
Localize [Element](#) Vector.
- void [SideVector](#) (const [Vect](#)< T_ > &b)
Localize [Side](#) Vector.
- void [ElementNodeCoordinates](#) ()

- Localize coordinates of element nodes.*

 - void [SideNodeCoordinates](#) ()
- Localize coordinates of side nodes.*

 - void [ElementAssembly](#) (Matrix< T_ > *A)

Assemble element matrix into global one.
- void [ElementAssembly](#) (PETScMatrix< T_ > &A)

Assemble element matrix into global one.
- void [ElementAssembly](#) (PETScVect< T_ > &b)

Assemble element right-hand side vector into global one.
- void [ElementAssembly](#) (BMatrix< T_ > &A)

Assemble element matrix into global one.
- void [ElementAssembly](#) (SkSMatrix< T_ > &A)

Assemble element matrix into global one.
- void [ElementAssembly](#) (SkMatrix< T_ > &A)

Assemble element matrix into global one.
- void [ElementAssembly](#) (SpMatrix< T_ > &A)

Assemble element matrix into global one.
- void [ElementAssembly](#) (TrMatrix< T_ > &A)

Assemble element matrix into global one.
- void [ElementAssembly](#) (Vect< T_ > &v)

Assemble element vector into global one.
- void [SideAssembly](#) (PETScMatrix< T_ > &A)

Assemble side matrix into global one.
- void [SideAssembly](#) (PETScVect< T_ > &b)

Assemble side right-hand side vector into global one.
- void [SideAssembly](#) (Matrix< T_ > *A)

Assemble side (edge or face) matrix into global one.
- void [SideAssembly](#) (SkSMatrix< T_ > &A)

Assemble side (edge or face) matrix into global one.
- void [SideAssembly](#) (SkMatrix< T_ > &A)

Assemble side (edge or face) matrix into global one.
- void [SideAssembly](#) (SpMatrix< T_ > &A)

Assemble side (edge or face) matrix into global one.
- void [SideAssembly](#) (Vect< T_ > &v)

Assemble side (edge or face) vector into global one.
- void [DGElementAssembly](#) (Matrix< T_ > *A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void [DGElementAssembly](#) (SkSMatrix< T_ > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void [DGElementAssembly](#) (SkMatrix< T_ > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void [DGElementAssembly](#) (SpMatrix< T_ > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void [DGElementAssembly](#) (TrMatrix< T_ > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void [AxbAssembly](#) (const [Element](#) &el, const Vect< T_ > &x, Vect< T_ > &b)

Assemble product of element matrix by element vector into global vector.

- void **AxbAssembly** (const **Side** &sd, const **Vect**< T_ > &x, **Vect**< T_ > &b)

Assemble product of side matrix by side vector into global vector.

- `size_t getNbNodes () const`

Return number of element nodes.

- `size_t getNbEq () const`

Return number of element equations.

- void **setInitialSolution** (const **Vect**< T_ > &u)

Set initial solution (previous time step)

- `real_t setMaterialProperty` (const string &exp, const string &prop)

Define a material property by an algebraic expression.

- void setMesh (Mesh &m)

Define mesh and renumber DOFs after removing imposed ones.

- `Mesh` & `getMesh()` const

Return reference to [Mesh](#) instance.

- `LinearSolver< T_ > & getLinearSolver ()`

Return reference to linear solver instance.

- void **setSolver** (Iteration ls, Preconditioner pc=IDENT_PREC)

Choose solver for the linear system.

- `int SolveLinearSystem (Matrix< T_ > *A, Vect< T_ > &b, Vect< T_ > &x)`

Solve the linear system.

Public Attributes

- LocalMatrix< T_, NEE_, NEE_ > eMat

LocalMatrix instance containing local matrix associated to current element.

- LocalMatrix< T_, NSE_, NSE_ > sMat

LocalMatrix instance containing local matrix associated to current side.

- LocalVect < T₋, NEE₋ > ePrev

LocalVect instance containing local vector associated to current element.

- LocalVect < T₋, NEE₋ > eRHS

LocalVect instance containing local right-hand side vector associated to current element.

- LocalVect< T₋, NEE₋ > eRes

LocalVect instance containing local residual vector associated to current element.

- LocalVect< T_, NSE_ > sRHS

LocalVect instance containing local right-hand side vector associated to current side.

Protected Member Functions

- void **Init** (const **Element** *el)

Set element arrays to zero.

- void **Init** (const **Side** *sd)

Set side arrays to zero.

7.30.1 Detailed Description

```
template<class T_, size_t NEN_, size_t NEE_, size_t NSN_, size_t NSE_>
class OFELI::Equa_Laplace< T_, NEN_, NEE_, NSN_, NSE_ >
```

Abstract class for classes about the Laplace equation.

Template Arguments:

- **T_** : data type (double, float, ...)
- **NEN_** : Number of element nodes
- **NEE_** : Number of element equations
- **NSN_** : Number of side nodes
- **NSE_** : Number of side equations

7.30.2 Constructor & Destructor Documentation

Equa_Laplace ()

Default constructor.

Constructs an empty equation.

7.30.3 Member Function Documentation

void build (EigenProblemSolver & *e*)

Build the linear system for an eigenvalue problem.

Parameters

in	<i>e</i>	Reference to used EigenProblemSolver instance
----	----------	---

void updateBC (const Element & *el*, const Vect< T_ > & *bc*) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>el</i>	Reference to current element instance
in	<i>bc</i>	Vector that contains imposed values at all DOFs

void updateBC (const Vect< T_ > & *bc*) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>bc</i>	Vector that contains imposed values at all DOFs
----	-----------	---

Remarks

The current element is pointed by `_theElement`

void DiagBC (int *dof_type* = *NODE_DOF*, int *dof* = 0) [inherited]

Update element matrix to impose bc by diagonalization technique.

Parameters

in	<i>dof_type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • <i>NODE_FIELD</i>, DOFs are supported by nodes [Default] • <i>ELEMENT_FIELD</i>, DOFs are supported by elements • <i>SIDE_FIELD</i>, DOFs are supported by sides
in	<i>dof</i>	DOF setting: <ul style="list-style-type: none"> • = 0, All DOFs are taken into account [Default] • != 0, Only DOF No. <i>dof</i> is handled in the system

void LocalNodeVector (Vect< T_ > & *b*) [inherited]

Localize [Element](#) Vector from a [Vect](#) instance.

Parameters

in	<i>b</i>	Reference to global vector to be localized. The resulting local vector can be accessed by attribute <code>ePrev</code> . This member function is to be used if a constructor with Element was invoked.
----	----------	--

void ElementNodeVector (const Vect< T_ > & *b*, LocalVect< T_, NEE_ > & *be*)
[inherited]

Localize [Element](#) Vector from a [Vect](#) instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

All degrees of freedom are transferred to the local vector

void ElementNodeVector (const Vect< T_ > & b, LocalVect< T_, NEN_ > & be, int dof)
[inherited]

Localize [Element](#) Vector from a [Vect](#) instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.
in	<i>dof</i>	Degree of freedom to transfer to the local vector

Remarks

Only yhe dega dof is transferred to the local vector

void ElementNodeVectorSingleDOF (const Vect< T_ > & b, LocalVect< T_, NEN_ > & be)
[inherited]

Localize [Element](#) Vector from a [Vect](#) instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

Vector b is assumed to contain only one degree of freedom by node.

void ElementSideVector (const Vect< T_ > & b, LocalVect< T_, NSE_ > & be) [inherited]

Localize [Element](#) Vector from a [Vect](#) instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is

void ElementVector (const Vect< T_ > & b, int dof_type = NODE_FIELD, int flag = 0)
[inherited]

Localize [Element](#) Vector.

Parameters

in	<i>b</i>	Global vector to be localized
----	----------	-------------------------------

Parameters

in	<i>dof_type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • <code>NODE_FIELD</code>, DOFs are supported by nodes [Default] • <code>ELEMENT_FIELD</code>, DOFs are supported by elements • <code>SIDE_FIELD</code>, DOFs are supported by sides
in	<i>flag</i>	Option to set: <ul style="list-style-type: none"> • <code>= 0</code>, All DOFs are taken into account [Default] • <code>!= 0</code>, Only DOF number <code>dof</code> is handled in the system The resulting local vector can be accessed by attribute <code>ePrev</code> .

Remarks

This member function is to be used if a constructor with [Element](#) was invoked. It uses the [Element](#) pointer `_theElement`

void SideVector (const Vect< T_ > & b) [inherited]

Localize [Side](#) Vector.

Parameters

in	<i>b</i>	Global vector to be localized <ul style="list-style-type: none"> • <code>NODE_FIELD</code>, DOFs are supported by nodes [default] • <code>ELEMENT_FIELD</code>, DOFs are supported by elements • <code>SIDE_FIELD</code>, DOFs are supported by sides The resulting local vector can be accessed by attribute <code>ePrev</code> .
----	----------	---

Remarks

This member function is to be used if a constructor with [Side](#) was invoked. It uses the [Side](#) pointer `_theSide`

void ElementNodeCoordinates () [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array `_x[0]` , `_x[1]` , ... which are instances of class [Point<real.t>](#)

Remarks

This member function uses the [Side](#) pointer `_theSide`

void SideNodeCoordinates () [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array `_x[0]`, `_x[1]`, ... which are instances of class [Point<real_t>](#)

Remarks

This member function uses the [Element](#) pointer `_theElement`

void ElementAssembly (Matrix< T_ > * A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Pointer to global matrix (abstract class: can be any of classes SkSMatrix , SkMatrix , SpMatrix)
----------	---

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScMatrix< T_ > & A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Reference to global matrix
----------	----------------------------

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScVect< T_ > & b) [inherited]

Assemble element right-hand side vector into global one.

Parameters

<i>b</i>	Reference to global right-hand side vector
----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (BMatrix< T_ > & A) [inherited]

Assemble element matrix into global one.

Parameters

A	Global matrix stored as a BMatrix instance
---	--

Warning

The element pointer is given by the global variable `theElement`

```
void ElementAssembly ( SkSMatrix< T_ > & A ) [inherited]
```

Assemble element matrix into global one.

Parameters

A	Global matrix stored as an <code>SkSMatrix</code> instance
-----	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkMatrix< T_ > & A) [inherited]

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an SkMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SpMatrix< T_ > & A) [inherited]

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an <code>SpMatrix</code> instance
----	-----	---

Warning

The element pointer is given by the global variable `theElement`.

```
void ElementAssembly ( TrMatrix< T_ > & A ) [inherited]
```

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an TrMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (Vect< T_ > & v) [inherited]

Assemble element vector into global one.

Parameters

in	v	Global vector (Vect instance)
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void SideAssembly (PETScMatrix< T_ > & A) [inherited]

Assemble side matrix into global one.

Parameters

A	Reference to global matrix
-----	----------------------------

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (PETScVect< T_ > & b) [inherited]

Assemble side right-hand side vector into global one.

Parameters

b	Reference to global right-hand side vector
-----	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (Matrix< T_ > * A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	v	Global vector (Vect instance)
----	-----	--

Warning

The side pointer is given by the global variable `theSide`

void DGElementAssembly ([Matrix](#)< $T_$ > * A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix , SkMatrix , SpMatrix)
-----	---

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly ([SkSMatrix](#)< $T_$ > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

A	Global matrix stored as an SkSMatrix instance
-----	---

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly ([SkMatrix](#)< $T_$ > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	A	Global matrix stored as an SkMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly ([SpMatrix](#)< $T_$ > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	<i>A</i>	Global matrix stored as an SpMatrix instance
----	----------	--

Warning

The element pointer is given by the global variable `theElement`

void DGELEMENTAssembly (TrMatrix< T_ > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	<i>A</i>	Global matrix stored as an TrMatrix instance
----	----------	--

Warning

The element pointer is given by the global variable `theElement`

void AxbAssembly (const Element & el, const Vect< T_ > & x, Vect< T_ > & b)
[inherited]

Assemble product of element matrix by element vector into global vector.

Parameters

in	<i>el</i>	Reference to Element instance
in	<i>x</i>	Global vector to multiply by (Vect instance)
out	<i>b</i>	Global vector to add (Vect instance)

void AxbAssembly (const Side & sd, const Vect< T_ > & x, Vect< T_ > & b) [inherited]

Assemble product of side matrix by side vector into global vector.

Parameters

in	<i>sd</i>	Reference to Side instance
in	<i>x</i>	Global vector to multiply by (Vect instance)
out	<i>b</i>	Global vector (Vect instance)

real t setMaterialProperty (const string & exp, const string & prop) [inherited]

Define a material property by an algebraic expression.

Parameters

Parameters

in	<i>exp</i>	Algebraic expression
in	<i>prop</i>	Property name

Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

Mesh& getMesh () const [inherited]

Return reference to [Mesh](#) instance.

Returns

Reference to [Mesh](#) instance

void setSolver (Iteration *ls*, Preconditioner *pc* = IDENT_PREC) [inherited]

Choose solver for the linear system.

Parameters

in	<i>ls</i>	<p>Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER</p> <ul style="list-style-type: none"> • DIRECT_SOLVER, Use a facorization solver [default] • CG_SOLVER, Conjugate Gradient iterative solver • CGS_SOLVER, Squared Conjugate Gradient iterative solver • BICG_SOLVER, BiConjugate Gradient iterative solver • BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver • GMRES_SOLVER, GMRES iterative solver • QMR_SOLVER, QMR iterative solver
in	<i>pc</i>	<p>Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:</p> <ul style="list-style-type: none"> • IDENT_PREC, Identity preconditioner (no preconditioning [default]) • DIAG_PREC, Diagonal preconditioner • ILU_PREC, Incomplete LU factorization preconditioner

int SolveLinearSystem (Matrix< T_ > * A, Vect< T_ > & b, Vect< T_ > & x) [inherited]

Solve the linear system.

Parameters

in	A	Pointer to matrix of the system (Instance of class SpMatrix)
in	b	Vector containing right-hand side
in,out	x	Vector containing initial guess of solution on input, actual solution on output

7.30.4 Member Data Documentation

LocalVect<T_,NEE_> ePrev [inherited]


[LocalVect](#) instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

7.31 Equa_Porous< T_, NEN_, NEE_, NSN_, NSE_ > Class Template Reference

Abstract class for Porous Media Finite Element classes.

Inheritance diagram for Equa_Porous< T_, NEN_, NEE_, NSN_, NSE_ >:

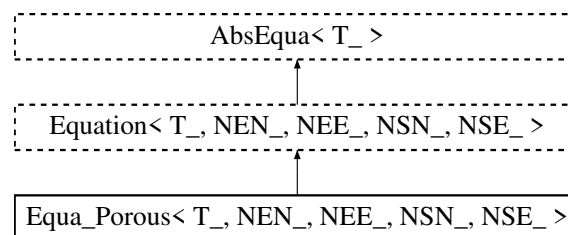

Public Member Functions

- [Equa_Porous](#) ()
Default constructor.
- virtual [~Equa_Porous](#) ()
Destructor.
- virtual void [Mobility](#) ()
Add mobility term to the 0-th order element matrix.
- virtual void [Mass](#) ()
Add porosity term to the 1-st order element matrix.
- virtual void [BodyRHS](#) (const Vect< [real.t](#) > &bf, int opt=[GLOBAL_ARRAY](#))
Add source right-hand side term to right-hand side.
- virtual void [BoundaryRHS](#) (const Vect< [real.t](#) > &sf, int opt=[GLOBAL_ARRAY](#))
Add boundary right-hand side term to right-hand side.
- void [build](#) ()
Build the linear system of equations.

- void **build** (**TimeStepping** &s)
Build the linear system of equations.
- void **build** (**EigenProblemSolver** &e)
Build the linear system for an eigenvalue problem.
- int **run** ()
Run the equation.
- void **Mu** (const string &exp)
Set viscosity given by an algebraic expression.
- void **updateBC** (const **Element** &el, const **Vect**< T_ > &bc)
Update Right-Hand side by taking into account essential boundary conditions.
- void **updateBC** (const **Vect**< T_ > &bc)
Update Right-Hand side by taking into account essential boundary conditions.
- void **DiagBC** (int dof_type=NODE.DOF, int dof=0)
Update element matrix to impose bc by diagonalization technique.
- void **LocalNodeVector** (**Vect**< T_ > &b)
*Localize **Element** Vector from a **Vect** instance.*
- void **ElementNodeVector** (const **Vect**< T_ > &b, **LocalVect**< T_, NEE_ > &be)
*Localize **Element** Vector from a **Vect** instance.*
- void **ElementNodeVector** (const **Vect**< T_ > &b, **LocalVect**< T_, NEN_ > &be, int dof)
*Localize **Element** Vector from a **Vect** instance.*
- void **ElementNodeVectorSingleDOF** (const **Vect**< T_ > &b, **LocalVect**< T_, NEN_ > &be)
*Localize **Element** Vector from a **Vect** instance.*
- void **ElementSideVector** (const **Vect**< T_ > &b, **LocalVect**< T_, NSE_ > &be)
*Localize **Element** Vector from a **Vect** instance.*
- void **ElementVector** (const **Vect**< T_ > &b, int dof_type=NODE.FIELD, int flag=0)
*Localize **Element** Vector.*
- void **SideVector** (const **Vect**< T_ > &b)
*Localize **Side** Vector.*
- void **ElementNodeCoordinates** ()
Localize coordinates of element nodes.
- void **SideNodeCoordinates** ()
Localize coordinates of side nodes.
- void **ElementAssembly** (**Matrix**< T_ > *A)
Assemble element matrix into global one.
- void **ElementAssembly** (**PETScMatrix**< T_ > &A)
Assemble element matrix into global one.
- void **ElementAssembly** (**PETScVect**< T_ > &b)
Assemble element right-hand side vector into global one.
- void **ElementAssembly** (**BMatrix**< T_ > &A)
Assemble element matrix into global one.
- void **ElementAssembly** (**SkSMatrix**< T_ > &A)
Assemble element matrix into global one.
- void **ElementAssembly** (**SkMatrix**< T_ > &A)
Assemble element matrix into global one.
- void **ElementAssembly** (**SpMatrix**< T_ > &A)
Assemble element matrix into global one.

- void [ElementAssembly](#) ([TrMatrix](#)< T_ > &A)
Assemble element matrix into global one.
- void [ElementAssembly](#) ([Vect](#)< T_ > &v)
Assemble element vector into global one.
- void [SideAssembly](#) ([PETScMatrix](#)< T_ > &A)
Assemble side matrix into global one.
- void [SideAssembly](#) ([PETScVect](#)< T_ > &b)
Assemble side right-hand side vector into global one.
- void [SideAssembly](#) ([Matrix](#)< T_ > *A)
Assemble side (edge or face) matrix into global one.
- void [SideAssembly](#) ([SkSMatrix](#)< T_ > &A)
Assemble side (edge or face) matrix into global one.
- void [SideAssembly](#) ([SkMatrix](#)< T_ > &A)
Assemble side (edge or face) matrix into global one.
- void [SideAssembly](#) ([SpMatrix](#)< T_ > &A)
Assemble side (edge or face) matrix into global one.
- void [SideAssembly](#) ([Vect](#)< T_ > &v)
Assemble side (edge or face) vector into global one.
- void [DGElementAssembly](#) ([Matrix](#)< T_ > *A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void [DGElementAssembly](#) ([SkSMatrix](#)< T_ > &A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void [DGElementAssembly](#) ([SkMatrix](#)< T_ > &A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void [DGElementAssembly](#) ([SpMatrix](#)< T_ > &A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void [DGElementAssembly](#) ([TrMatrix](#)< T_ > &A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void [AxbAssembly](#) (const [Element](#) &el, const [Vect](#)< T_ > &x, [Vect](#)< T_ > &b)
Assemble product of element matrix by element vector into global vector.
- void [AxbAssembly](#) (const [Side](#) &sd, const [Vect](#)< T_ > &x, [Vect](#)< T_ > &b)
Assemble product of side matrix by side vector into global vector.
- size_t [getNbNodes](#) () const
Return number of element nodes.
- size_t [getNbEq](#) () const
Return number of element equations.
- void [setInitialSolution](#) (const [Vect](#)< T_ > &u)
Set initial solution (previous time step)
- real_t [setMaterialProperty](#) (const string &exp, const string &prop)
Define a material property by an algebraic expression.
- void [setMesh](#) ([Mesh](#) &m)
Define mesh and renumber DOFs after removing imposed ones.
- [Mesh](#) & [getMesh](#) () const
Return reference to [Mesh](#) instance.
- [LinearSolver](#)< T_ > & [getLinearSolver](#) ()
Return reference to linear solver instance.

- void [setSolver](#) ([Iteration](#) ls, [Preconditioner](#) pc=IDENT_PREC)
Choose solver for the linear system.
- int [SolveLinearSystem](#) ([Matrix](#)< T_ > *A, [Vect](#)< T_ > &b, [Vect](#)< T_ > &x)
Solve the linear system.

Public Attributes

- [LocalMatrix](#)< T_, NEE_, NEE_ > [eMat](#)
LocalMatrix instance containing local matrix associated to current element.
- [LocalMatrix](#)< T_, NSE_, NSE_ > [sMat](#)
LocalMatrix instance containing local matrix associated to current side.
- [LocalVect](#)< T_, NEE_ > [ePrev](#)
LocalVect instance containing local vector associated to current element.
- [LocalVect](#)< T_, NEE_ > [eRHS](#)
LocalVect instance containing local right-hand side vector associated to current element.
- [LocalVect](#)< T_, NEE_ > [eRes](#)
LocalVect instance containing local residual vector associated to current element.
- [LocalVect](#)< T_, NSE_ > [sRHS](#)
LocalVect instance containing local right-hand side vector associated to current side.

Protected Member Functions

- void [setMaterial](#) ()
Set material properties.
- void [Init](#) (const [Element](#) *el)
Set element arrays to zero.
- void [Init](#) (const [Side](#) *sd)
Set side arrays to zero.

7.31.1 Detailed Description

template<class T_, size_t NEN_, size_t NEE_, size_t NSN_, size_t NSE_>
class OFELI::Equa.Porous< T_, NEN_, NEE_, NSN_, NSE_ >

Abstract class for Porous Media Finite Element classes.

Template Parameters

<T_>	data type (real_t, float, ...)
<NEN>	Number of element nodes
<NEE_>	Number of element equations
<NSN_>	Number of side nodes
<NSE_>	Number of side equations

7.31.2 Constructor & Destructor Documentation

Equa_Porous ()

Default constructor.

Constructs an empty equation.

7.31.3 Member Function Documentation

virtual void BodyRHS (const Vect< real_t > &bf, int opt = GLOBAL_ARRAY) [virtual]

Add source right-hand side term to right-hand side.

Parameters

in	<i>bf</i>	Vector containing source at element nodes.
in	<i>opt</i>	Vector is local (LOCAL_ARRAY) with size 3 or global (GLOBAL_ARRAY) with size = Number of nodes [Default: GLOBAL_ARRAY].

Reimplemented in [WaterPorous2D](#).

virtual void BoundaryRHS (const Vect< real_t > &sf, int opt = GLOBAL_ARRAY)
[virtual]

Add boundary right-hand side term to right-hand side.

Parameters

in	<i>sf</i>	Vector containing source at side nodes.
in	<i>opt</i>	Vector is local (LOCAL_ARRAY) with size 3 or global (GLOBAL_ARRAY) with size = Number of nodes [Default: GLOBAL_ARRAY].

Reimplemented in [WaterPorous2D](#).

void build ()

Build the linear system of equations.

Before using this function, one must have properly selected appropriate options for:

- The choice of a steady state or transient analysis. By default, the analysis is stationary
- In the case of transient analysis, the choice of a time integration scheme and a lumped or consistent capacity matrix. If transient analysis is chosen, the lumped capacity matrix option is chosen by default, and the implicit Euler scheme is used by default for time integration.

void build (TimeStepping & s)

Build the linear system of equations.

Before using this function, one must have properly selected appropriate options for:

- The choice of a steady state or transient analysis. By default, the analysis is stationary
- In the case of transient analysis, the choice of a time integration scheme. If transient analysis is chosen, the implicit Euler scheme is used by default for time integration.

Parameters

in	<i>s</i>	Reference to used TimeStepping instance
----	----------	---

void build (EigenProblemSolver & *e*)

Build the linear system for an eigenvalue problem.

Parameters

in	<i>e</i>	Reference to used EigenProblemSolver instance
----	----------	---

int run ()

Run the equation.

If the analysis (see function setAnalysis) is STEADY_STATE, then the function solves the stationary equation.

If the analysis is TRANSIENT, then the function performs time stepping until the final time is reached.

void updateBC (const Element & *el*, const Vect< T_ > & *bc*) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>el</i>	Reference to current element instance
in	<i>bc</i>	Vector that contains imposed values at all DOFs

void updateBC (const Vect< T_ > & *bc*) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>bc</i>	Vector that contains imposed values at all DOFs
----	-----------	---

Remarks

The current element is pointed by `_theElement`

void DiagBC (int *dof_type* = NODE_DOF, int *dof* = 0) [inherited]

Update element matrix to impose bc by diagonalization technique.

Parameters

in	<i>dof_type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • <code>NODE_FIELD</code>, DOFs are supported by nodes [Default] • <code>ELEMENT_FIELD</code>, DOFs are supported by elements • <code>SIDE_FIELD</code>, DOFs are supported by sides
in	<i>dof</i>	DOF setting: <ul style="list-style-type: none"> • <code>= 0</code>, All DOFs are taken into account [Default] • <code>!= 0</code>, Only DOF No. <i>dof</i> is handled in the system

void LocalNodeVector (Vect< T_ > & b) [inherited]

Localize [Element](#) Vector from a [Vect](#) instance.

Parameters

in	<i>b</i>	Reference to global vector to be localized. The resulting local vector can be accessed by attribute <code>ePrev</code> . This member function is to be used if a constructor with Element was invoked.
----	----------	--

void ElementNodeVector (const Vect< T_ > & b, LocalVect< T_, NEE_ > & be)
[inherited]

Localize [Element](#) Vector from a [Vect](#) instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

All degrees of freedom are transferred to the local vector

void ElementNodeVector (const Vect< T_ > & b, LocalVect< T_, NEN_ > & be, int dof)
[inherited]

Localize [Element](#) Vector from a [Vect](#) instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.
in	<i>dof</i>	Degree of freedom to transfer to the local vector

Remarks

Only the dega dof is transferred to the local vector

void ElementNodeVectorSingleDOF (const Vect< T_ > & b, LocalVect< T_, NEN_ > & be)
[inherited]

Localize [Element](#) Vector from a [Vect](#) instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

Vector b is assumed to contain only one degree of freedom by node.

void ElementSideVector (const Vect< T_ > & b, LocalVect< T_, NSE_ > & be) [inherited]

Localize [Element](#) Vector from a [Vect](#) instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is

void ElementVector (const Vect< T_ > & b, int dof_type = NODE_FIELD, int flag = 0)
[inherited]

Localize [Element](#) Vector.

Parameters

in	<i>b</i>	Global vector to be localized
in	<i>dof_type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • NODE_FIELD, DOFs are supported by nodes [Default] • ELEMENT_FIELD, DOFs are supported by elements • SIDE_FIELD, DOFs are supported by sides
in	<i>flag</i>	Option to set: <ul style="list-style-type: none"> • = 0, All DOFs are taken into account [Default] • != 0, Only DOF number dof is handled in the system The resulting local vector can be accessed by attribute ePrev.

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScMatrix< T_ > & A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Reference to global matrix
----------	----------------------------

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScVect< T_ > & b) [inherited]

Assemble element right-hand side vector into global one.

Parameters

<i>b</i>	Reference to global right-hand side vector
----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (BMatrix< T_ > & A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Global matrix stored as a BMatrix instance
----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkSMatrix< T_ > & A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Global matrix stored as an SkSMatrix instance
----------	---

Warning

The element pointer is given by the global variable `theElement`

```
void ElementAssembly ( SkMatrix< T_ > & A ) [inherited]
```

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an SkMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SpMatrix< T_ > & A) [inherited]

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an <code>SpMatrix</code> instance
----	-----	---

Warning

The element pointer is given by the global variable `theElement`

```
void ElementAssembly ( TrMatrix< T_ > & A ) [inherited]
```

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an TrMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`.

```
void ElementAssembly ( Vect< T_ > &v ) [inherited]
```

Assemble element vector into global one.

Parameters

in	v	Global vector (Vect instance)
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void SideAssembly (PETScMatrix< T_ > & A) [inherited]

Assemble side matrix into global one.

Parameters

<i>A</i>	Reference to global matrix
----------	----------------------------

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (PETScVect< T_ > & b) [inherited]

Assemble side right-hand side vector into global one.

Parameters

<i>b</i>	Reference to global right-hand side vector
----------	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (Matrix< T_ > * A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

<i>A</i>	Pointer to global matrix (abstract class: can be any of classes SkSMatrix , SkMatrix , SpMatrix)
----------	---

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SkSMatrix< T_ > & A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

<i>in</i>	<i>A</i>	Global matrix stored as an SkSMatrix instance
-----------	----------	---

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SkMatrix< T_ > & A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an SkMatrix instance
----	----------	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SpMatrix< T_ > & A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an SpMatrix instance
----	----------	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (Vect< T_ > & v) [inherited]

Assemble side (edge or face) vector into global one.

Parameters

in	<i>v</i>	Global vector (Vect instance)
----	----------	--

Warning

The side pointer is given by the global variable `theSide`

void DGElementAssembly (Matrix< T_ > * A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

<i>A</i>	Pointer to global matrix (abstract class: can be any of classes SkSMatrix , SkMatrix , SpMatrix)
----------	---

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SkSMatrix< T_ > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

<code>A</code>	Global matrix stored as an SkSMatrix instance
----------------	---

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SkMatrix< T_ > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

<code>in</code>	<code>A</code>	Global matrix stored as an SkMatrix instance
-----------------	----------------	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SpMatrix< T_ > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

<code>in</code>	<code>A</code>	Global matrix stored as an SpMatrix instance
-----------------	----------------	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (TrMatrix< T_ > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

<code>in</code>	<code>A</code>	Global matrix stored as an TrMatrix instance
-----------------	----------------	--

Warning

The element pointer is given by the global variable `theElement`

void AxbAssembly (const Element & *el*, const Vect< T_ > & *x*, Vect< T_ > & *b*)
[inherited]

Assemble product of element matrix by element vector into global vector.

Parameters

in	<i>el</i>	Reference to Element instance
in	<i>x</i>	Global vector to multiply by (Vect instance)
out	<i>b</i>	Global vector to add (Vect instance)

void AxbAssembly (const Side & *sd*, const Vect< T_ > & *x*, Vect< T_ > & *b*) [inherited]

Assemble product of side matrix by side vector into global vector.

Parameters

in	<i>sd</i>	Reference to Side instance
in	<i>x</i>	Global vector to multiply by (Vect instance)
out	<i>b</i>	Global vector (Vect instance)

real_t setMaterialProperty (const string & *exp*, const string & *prop*) [inherited]

Define a material property by an algebraic expression.

Parameters

in	<i>exp</i>	Algebraic expression
in	<i>prop</i>	Property name

Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

Mesh& getMesh () const [inherited]

Return reference to [Mesh](#) instance.

Returns

Reference to [Mesh](#) instance

void setSolver (Iteration *ls*, Preconditioner *pc* = IDENT_PREC) [inherited]

Choose solver for the linear system.

Parameters

in	<i>ls</i>	<p>Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER</p> <ul style="list-style-type: none"> • DIRECT_SOLVER, Use a facorization solver [default] • CG_SOLVER, Conjugate Gradient iterative solver • CGS_SOLVER, Squared Conjugate Gradient iterative solver • BICG_SOLVER, BiConjugate Gradient iterative solver • BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver • GMRES_SOLVER, GMRES iterative solver • QMR_SOLVER, QMR iterative solver
in	<i>pc</i>	<p>Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:</p> <ul style="list-style-type: none"> • IDENT_PREC, Identity preconditioner (no preconditioning [default]) • DIAG_PREC, Diagonal preconditioner • ILU_PREC, Incomplete LU factorization preconditioner

int SolveLinearSystem (Matrix< T_ > * A, Vect< T_ > & b, Vect< T_ > & x) [inherited]

Solve the linear system.

Parameters

in	<i>A</i>	Pointer to matrix of the system (Instance of class SpMatrix)
in	<i>b</i>	Vector containing right-hand side
in,out	<i>x</i>	Vector containing initial guess of solution on input, actual solution on output

7.31.4 Member Data Documentation

LocalVect<T_,NEE_> ePrev [inherited]


[LocalVect](#) instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

7.32 Equa_Solid< T_, NEN_, NEE_, NSN_, NSE_ > Class Template Reference

Abstract class for Solid Mechanics Finite Element classes.

Inheritance diagram for Equa_Solid< T_, NEN_, NEE_, NSN_, NSE_ >:

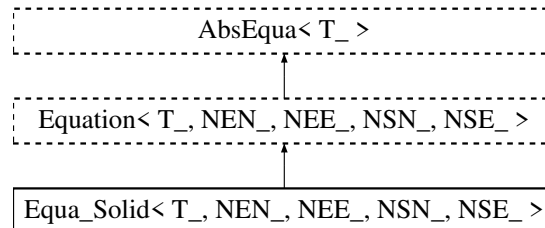

Public Member Functions

- [Equa_Solid](#) ()
Default constructor.
- virtual [~Equa_Solid](#) ()
Destructor.
- virtual void [LMassToLHS](#) ([real.t](#) coef=1)
Add lumped mass contribution to left-hand side.
- virtual void [LMassToRHS](#) ([real.t](#) coef=1)
Add lumped mass contribution to right-hand side.
- virtual void [MassToLHS](#) ([real.t](#) coef=1)
Add consistent mass contribution to left-hand side.
- virtual void [MassToRHS](#) ([real.t](#) coef=1)
Add consistent mass contribution to right-hand side.
- void [setLumpedMass](#) ()
Add lumped mass contribution to left and right-hand sides taking into account time integration scheme.
- void [setMass](#) ()
Add consistent mass contribution to left and right-hand sides taking into account time integration scheme.
- virtual void [Mass](#) ([real.t](#) coef=1)
Add consistent mass matrix to left-hand side after multiplication by coef [Default: 1].
- virtual void [LMass](#) ([real.t](#) coef=1)
Add lumped mass matrix to left-hand side after multiplication by coef [Default: 1].
- virtual void [Deviator](#) ([real.t](#) coef=1)
Add deviator matrix to left-hand side taking into account time integration scheme, after multiplication by coef [Default: 1].
- virtual void [Dilatation](#) ([real.t](#) coef=1)
Add dilatation matrix to left-hand side taking into account time integration scheme, after multiplication by coef [Default: 1].
- virtual void [DilatationToRHS](#) ([real.t](#) coef=1)
Add dilatation vector to right-hand side taking into account time integration scheme, after multiplication by coef [Default: 1].
- virtual void [DeviatorToRHS](#) ([real.t](#) coef=1)
Add deviator vector to right-hand side taking into account time integration scheme, after multiplication by coef [Default: 1].

- virtual void **Stiffness** (real_t coef=1)
Add stiffness matrix to left-hand side taking into account time integration scheme, after multiplication by coef [Default: 1].
- virtual void **StiffnessToRHS** (real_t coef=1)
Add stiffness matrix to right-hand side taking into account time integration scheme, after multiplication by coef [Default: 1].
- void **setDilatation** ()
Add dilatation matrix to left and/or right-hand side taking into account time.
- void **setDeviator** ()
Add deviator matrix to left and/or right-hand side taking into account time integration scheme.
- void **setStiffness** ()
Add convection contribution to left and/or right-hand side taking into account time integration scheme.
- void **updateBC** (const **Element** &el, const **Vect**< T_ > &bc)
Update Right-Hand side by taking into account essential boundary conditions.
- void **updateBC** (const **Vect**< T_ > &bc)
Update Right-Hand side by taking into account essential boundary conditions.
- void **DiagBC** (int dof_type=NODE.DOF, int dof=0)
Update element matrix to impose bc by diagonalization technique.
- void **LocalNodeVector** (**Vect**< T_ > &b)
*Localize **Element** Vector from a **Vect** instance.*
- void **ElementNodeVector** (const **Vect**< T_ > &b, **LocalVect**< T_, NEE_ > &be)
*Localize **Element** Vector from a **Vect** instance.*
- void **ElementNodeVector** (const **Vect**< T_ > &b, **LocalVect**< T_, NEN_ > &be, int dof)
*Localize **Element** Vector from a **Vect** instance.*
- void **ElementNodeVectorSingleDOF** (const **Vect**< T_ > &b, **LocalVect**< T_, NEN_ > &be)
*Localize **Element** Vector from a **Vect** instance.*
- void **ElementSideVector** (const **Vect**< T_ > &b, **LocalVect**< T_, NSE_ > &be)
*Localize **Element** Vector from a **Vect** instance.*
- void **ElementVector** (const **Vect**< T_ > &b, int dof_type=NODE.FIELD, int flag=0)
*Localize **Element** Vector.*
- void **SideVector** (const **Vect**< T_ > &b)
*Localize **Side** Vector.*
- void **ElementNodeCoordinates** ()
Localize coordinates of element nodes.
- void **SideNodeCoordinates** ()
Localize coordinates of side nodes.
- void **ElementAssembly** (**Matrix**< T_ > *A)
Assemble element matrix into global one.
- void **ElementAssembly** (**PETScMatrix**< T_ > &A)
Assemble element matrix into global one.
- void **ElementAssembly** (**PETScVect**< T_ > &b)
Assemble element right-hand side vector into global one.
- void **ElementAssembly** (**BMatrix**< T_ > &A)
Assemble element matrix into global one.
- void **ElementAssembly** (**SkSMatrix**< T_ > &A)
Assemble element matrix into global one.
- void **ElementAssembly** (**SkMatrix**< T_ > &A)

- Assemble element matrix into global one.*
- void [ElementAssembly](#) ([SpMatrix](#)< T_ > &A)
- Assemble element matrix into global one.*
- void [ElementAssembly](#) ([TrMatrix](#)< T_ > &A)
- Assemble element matrix into global one.*
- void [ElementAssembly](#) ([Vect](#)< T_ > &v)
- Assemble element vector into global one.*
- void [SideAssembly](#) ([PETScMatrix](#)< T_ > &A)
- Assemble side matrix into global one.*
- void [SideAssembly](#) ([PETScVect](#)< T_ > &b)
- Assemble side right-hand side vector into global one.*
- void [SideAssembly](#) ([Matrix](#)< T_ > *A)
- Assemble side (edge or face) matrix into global one.*
- void [SideAssembly](#) ([SkSMatrix](#)< T_ > &A)
- Assemble side (edge or face) matrix into global one.*
- void [SideAssembly](#) ([SkMatrix](#)< T_ > &A)
- Assemble side (edge or face) matrix into global one.*
- void [SideAssembly](#) ([SpMatrix](#)< T_ > &A)
- Assemble side (edge or face) matrix into global one.*
- void [SideAssembly](#) ([Vect](#)< T_ > &v)
- Assemble side (edge or face) vector into global one.*
- void [DGElementAssembly](#) ([Matrix](#)< T_ > *A)
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
- void [DGElementAssembly](#) ([SkSMatrix](#)< T_ > &A)
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
- void [DGElementAssembly](#) ([SkMatrix](#)< T_ > &A)
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
- void [DGElementAssembly](#) ([SpMatrix](#)< T_ > &A)
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
- void [DGElementAssembly](#) ([TrMatrix](#)< T_ > &A)
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
- void [AxbAssembly](#) (const [Element](#) &el, const [Vect](#)< T_ > &x, [Vect](#)< T_ > &b)
- Assemble product of element matrix by element vector into global vector.*
- void [AxbAssembly](#) (const [Side](#) &sd, const [Vect](#)< T_ > &x, [Vect](#)< T_ > &b)
- Assemble product of side matrix by side vector into global vector.*
- size_t [getNbNodes](#) () const
- Return number of element nodes.*
- size_t [getNbEq](#) () const
- Return number of element equations.*
- void [setInitialSolution](#) (const [Vect](#)< T_ > &u)
- Set initial solution (previous time step)*
- [real_t](#) [setMaterialProperty](#) (const string &exp, const string &prop)
- Define a material property by an algebraic expression.*
- void [setMesh](#) ([Mesh](#) &m)
- Define mesh and renumber DOFs after removing imposed ones.*
- [Mesh](#) & [getMesh](#) () const

- *Return reference to [Mesh](#) instance.*
- [LinearSolver](#)< T_ > & [getLinearSolver](#) ()
- *Return reference to linear solver instance.*
- void [setSolver](#) ([Iteration](#) ls, [Preconditioner](#) pc=[IDENT_PREC](#))
- *Choose solver for the linear system.*
- int [SolveLinearSystem](#) ([Matrix](#)< T_ > *A, [Vect](#)< T_ > &b, [Vect](#)< T_ > &x)
- *Solve the linear system.*

Public Attributes

- [LocalMatrix](#)< T_, NEE_, NEE_ > [eMat](#)
- *[LocalMatrix](#) instance containing local matrix associated to current element.*
- [LocalMatrix](#)< T_, NSE_, NSE_ > [sMat](#)
- *[LocalMatrix](#) instance containing local matrix associated to current side.*
- [LocalVect](#)< T_, NEE_ > [ePrev](#)
- *[LocalVect](#) instance containing local vector associated to current element.*
- [LocalVect](#)< T_, NEE_ > [eRHS](#)
- *[LocalVect](#) instance containing local right-hand side vector associated to current element.*
- [LocalVect](#)< T_, NEE_ > [eRes](#)
- *[LocalVect](#) instance containing local residual vector associated to current element.*
- [LocalVect](#)< T_, NSE_ > [sRHS](#)
- *[LocalVect](#) instance containing local right-hand side vector associated to current side.*

Protected Member Functions

- void [Young](#) (const [real_t](#) &E)
- *Set (constant) Young modulus.*
- void [Poisson](#) (const [real_t](#) &nu)
- *Set (constant) Poisson ratio.*
- void [Density](#) (const [real_t](#) &rho)
- *Set (constant) density.*
- void [Young](#) (const string &exp)
- *Set Young modulus given by an algebraic expression.*
- void [Poisson](#) (const string &exp)
- *Set Poisson ratio given by an algebraic expression.*
- void [Density](#) (const string &exp)
- *Set density given by an algebraic expression.*
- void [setMaterial](#) ()
- *Set material properties.*
- void [Init](#) (const [Element](#) *el)
- *Set element arrays to zero.*
- void [Init](#) (const [Side](#) *sd)
- *Set side arrays to zero.*

7.32.1 Detailed Description

```
template<class T_, size_t NEN_, size_t NEE_, size_t NSN_, size_t NSE_>
class OFELI::Equa.Solid< T_, NEN_, NEE_, NSN_, NSE_ >
```

Abstract class for Solid Mechanics Finite Element classes.

Template Parameters

<T_>	data type (double, float, ...)
<NEN>	Number of element nodes
<NEE_ _>	Number of element equations
<NSN_ _>	Number of side nodes
<NSE_>	Number of side equations

7.32.2 Constructor & Destructor Documentation

Equa_Solid ()

Default constructor.

Constructs an empty equation.

7.32.3 Member Function Documentation

virtual void LMassToLHS (real_t coef = 1) [virtual]

Add lumped mass contribution to left-hand side.

Parameters

in	<i>coef</i>	coefficient to multiply by the matrix before adding [Default: 1]
----	-------------	--

Reimplemented in [Elas2DT3](#), [Elas2DQ4](#), [Beam3DL2](#), [Elas3DH8](#), [Elas3DT4](#), and [Bar2DL2](#).**virtual void LMassToRHS (real_t coef = 1)** [virtual]

Add lumped mass contribution to right-hand side.

Parameters

in	<i>coef</i>	coefficient to multiply by the vector before adding [Default: 1]
----	-------------	--

Reimplemented in [Elas2DT3](#), [Elas2DQ4](#), [Beam3DL2](#), [Elas3DH8](#), [Elas3DT4](#), and [Bar2DL2](#).**virtual void MassToLHS (real_t coef = 1)** [virtual]

Add consistent mass contribution to left-hand side.

Parameters

in	<i>coef</i>	coefficient to multiply by the matrix before adding [Default: 1]
----	-------------	--

Reimplemented in [Elas2DT3](#), [Beam3DL2](#), and [Bar2DL2](#).

virtual void MassToRHS (real_t coef = 1) [virtual]

Add consistent mass contribution to right-hand side.

Parameters

in	<i>coef</i>	coefficient to multiply by the vector before adding [Default: 1]
----	-------------	--

Reimplemented in [Elas2DT3](#), [Beam3DL2](#), and [Bar2DL2](#).

void updateBC (const Element & el, const Vect< T_ > & bc) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>el</i>	Reference to current element instance
in	<i>bc</i>	Vector that contains imposed values at all DOFs

void updateBC (const Vect< T_ > & bc) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>bc</i>	Vector that contains imposed values at all DOFs
----	-----------	---

Remarks

The current element is pointed by `_theElement`

void DiagBC (int dof_type = NODE_DOF, int dof = 0) [inherited]

Update element matrix to impose bc by diagonalization technique.

Parameters

in	<i>dof_type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • <code>NODE_FIELD</code>, DOFs are supported by nodes [Default] • <code>ELEMENT_FIELD</code>, DOFs are supported by elements • <code>SIDE_FIELD</code>, DOFs are supported by sides
in	<i>dof</i>	DOF setting: <ul style="list-style-type: none"> • <code>= 0</code>, All DOFs are taken into account [Default] • <code>!= 0</code>, Only DOF No. <code>dof</code> is handled in the system

void LocalNodeVector (Vect< T_ > & b) [inherited]

Localize [Element](#) Vector from a [Vect](#) instance.

Parameters

in	<i>b</i>	Reference to global vector to be localized. The resulting local vector can be accessed by attribute ePrev. This member function is to be used if a constructor with Element was invoked.
----	----------	--

void ElementNodeVector (const Vect< T_ > & b, LocalVect< T_, NEE_ > & be)
[inherited]

Localize [Element](#) Vector from a [Vect](#) instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

All degrees of freedom are transferred to the local vector

void ElementNodeVector (const Vect< T_ > & b, LocalVect< T_, NEN_ > & be, int dof)
[inherited]

Localize [Element](#) Vector from a [Vect](#) instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.
in	<i>dof</i>	Degree of freedom to transfer to the local vector

Remarks

Only yhe dega dof is transferred to the local vector

void ElementNodeVectorSingleDOF (const Vect< T_ > & b, LocalVect< T_, NEN_ > & be)
[inherited]

Localize [Element](#) Vector from a [Vect](#) instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

Vector **b** is assumed to contain only one degree of freedom by node.

void ElementSideVector (const Vect< T_ > & b, LocalVect< T_, NSE_ > & be) [inherited]

Localize **Element** Vector from a **Vect** instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is

void ElementVector (const Vect< T_ > & b, int dof.type = NODE_FIELD, int flag = 0)
[inherited]

Localize **Element** Vector.

Parameters

in	<i>b</i>	Global vector to be localized
in	<i>dof.type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • NODE_FIELD, DOFs are supported by nodes [Default] • ELEMENT_FIELD, DOFs are supported by elements • SIDE_FIELD, DOFs are supported by sides
in	<i>flag</i>	Option to set: <ul style="list-style-type: none"> • = 0, All DOFs are taken into account [Default] • != 0, Only DOF number dof is handled in the system The resulting local vector can be accessed by attribute ePrev.

Remarks

This member function is to be used if a constructor with **Element** was invoked. It uses the **Element** pointer `_theElement`

void SideVector (const Vect< T_ > & b) [inherited]

Localize **Side** Vector.

Parameters

in	<i>b</i>	Global vector to be localized <ul style="list-style-type: none"> • NODE_FIELD, DOFs are supported by nodes [default] • ELEMENT_FIELD, DOFs are supported by elements • SIDE_FIELD, DOFs are supported by sides The resulting local vector can be accessed by attribute ePrev.
----	----------	--

Remarks

This member function is to be used if a constructor with [Side](#) was invoked. It uses the [Side](#) pointer `_theSide`

void ElementNodeCoordinates () [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array `_x[0]`, `_x[1]`, ... which are instances of class [Point<real.t>](#)

Remarks

This member function uses the [Side](#) pointer `_theSide`

void SideNodeCoordinates () [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array `_x[0]`, `_x[1]`, ... which are instances of class [Point<real.t>](#)

Remarks

This member function uses the [Element](#) pointer `_theElement`

void ElementAssembly (Matrix< T_ > * A) [inherited]

Assemble element matrix into global one.

Parameters

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix , SkMatrix , SpMatrix)
---	---

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScMatrix< T_ > & A) [inherited]

Assemble element matrix into global one.

Parameters

A	Reference to global matrix
-----	----------------------------

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScVect< T_ > & b) [inherited]

Assemble element right-hand side vector into global one.

Parameters

b	Reference to global right-hand side vector
-----	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (BMatrix< T_ > & A) [inherited]

Assemble element matrix into global one.

Parameters

A	Global matrix stored as a BMatrix instance
-----	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkSMatrix< T_ > & A) [inherited]

Assemble element matrix into global one.

Parameters

A	Global matrix stored as an SkSMatrix instance
-----	---

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkMatrix< T_ > & A) [inherited]

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an SkMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SpMatrix< T_ > & A) [inherited]

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an SpMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (TrMatrix< T_ > & A) [inherited]

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an TrMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (Vect< T_ > & v) [inherited]

Assemble element vector into global one.

Parameters

in	v	Global vector (Vect instance)
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void SideAssembly (PETScMatrix< T_ > & A) [inherited]

Assemble side matrix into global one.

Parameters

A	Reference to global matrix
-----	----------------------------

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (PETScVect< T_ > & b) [inherited]

Assemble side right-hand side vector into global one.

Parameters

b	Reference to global right-hand side vector
-----	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (Matrix< T_ > * A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix , SkMatrix , SpMatrix)
-----	---

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SkSMatrix< T_ > & A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	A	Global matrix stored as an SkSMatrix instance
----	-----	---

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SkMatrix< T_ > & A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	A	Global matrix stored as an SkMatrix instance
----	-----	--

Warning

The side pointer is given by the global variable theSide

void SideAssembly (SpMatrix< T_ > & A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	A	Global matrix stored as an SpMatrix instance
----	-----	--

Warning

The side pointer is given by the global variable theSide

void SideAssembly (Vect< T_ > & v) [inherited]

Assemble side (edge or face) vector into global one.

Parameters

in	v	Global vector (Vect instance)
----	-----	--

Warning

The side pointer is given by the global variable theSide

void DGElementAssembly (Matrix< T_ > * A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix , SkMatrix , SpMatrix)
-----	---

Warning

The element pointer is given by the global variable theElement

void DGElementAssembly (SkSMatrix< T_ > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

<i>A</i>	Global matrix stored as an SkMatrix instance
----------	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SkMatrix< T_ > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	<i>A</i>	Global matrix stored as an SkMatrix instance
----	----------	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SpMatrix< T_ > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	<i>A</i>	Global matrix stored as an SpMatrix instance
----	----------	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (TrMatrix< T_ > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	<i>A</i>	Global matrix stored as an TrMatrix instance
----	----------	--

Warning

The element pointer is given by the global variable `theElement`

void AxbAssembly (const Element & el, const Vect< T_ > & x, Vect< T_ > & b)
[inherited]

Assemble product of element matrix by element vector into global vector.

Parameters

in	<i>el</i>	Reference to Element instance
in	<i>x</i>	Global vector to multiply by (Vect instance)
out	<i>b</i>	Global vector to add (Vect instance)

void AxbAssembly (const Side &sd, const Vect< T_ > &x, Vect< T_ > &b) [inherited]

Assemble product of side matrix by side vector into global vector.

Parameters

in	<i>sd</i>	Reference to Side instance
in	<i>x</i>	Global vector to multiply by (Vect instance)
out	<i>b</i>	Global vector (Vect instance)

real_t setMaterialProperty (const string &exp, const string &prop) [inherited]

Define a material property by an algebraic expression.

Parameters

in	<i>exp</i>	Algebraic expression
in	<i>prop</i>	Property name

Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

Mesh& getMesh () const [inherited]

Return reference to [Mesh](#) instance.

Returns

Reference to [Mesh](#) instance

void setSolver (Iteration ls, Preconditioner pc = IDENT_PREC) [inherited]

Choose solver for the linear system.

Parameters

in	ls	<p>Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER</p> <ul style="list-style-type: none"> • DIRECT_SOLVER, Use a facorization solver [default] • CG_SOLVER, Conjugate Gradient iterative solver • CGS_SOLVER, Squared Conjugate Gradient iterative solver • BICG_SOLVER, BiConjugate Gradient iterative solver • BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver • GMRES_SOLVER, GMRES iterative solver • QMR_SOLVER, QMR iterative solver
in	pc	<p>Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:</p> <ul style="list-style-type: none"> • IDENT_PREC, Identity preconditioner (no preconditioning [default]) • DIAG_PREC, Diagonal preconditioner • ILU_PREC, Incomplete LU factorization preconditioner

int SolveLinearSystem (Matrix< T_ > * A, Vect< T_ > & b, Vect< T_ > & x) [inherited]

Solve the linear system.

Parameters

in	A	Pointer to matrix of the system (Instance of class SpMatrix)
in	b	Vector containing right-hand side
in,out	x	Vector containing initial guess of solution on input, actual solution on output

7.32.4 Member Data Documentation

LocalVect<T_,NEE_> ePrev [inherited]


[LocalVect](#) instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

7.33 Equa_Therm< T_, NEN_, NEE_, NSN_, NSE_ > Class Template Reference

Abstract class for Heat transfer Finite Element classes.

Inheritance diagram for Equa_Therm< T_, NEN_, NEE_, NSN_, NSE_ >:

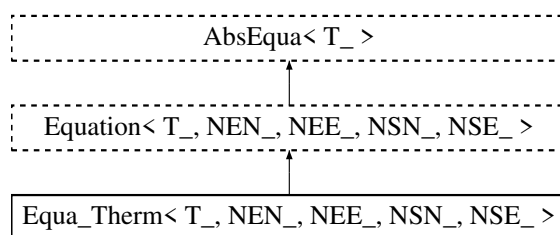

Public Member Functions

- [Equa_Therm](#) ()
Default constructor.
- virtual [~Equa_Therm](#) ()
Destructor.
- virtual void [setStab](#) ()
Set stabilized formulation.
- virtual void [LCapacityToLHS](#) ([real_t](#) coef=1)
Add lumped capacity contribution to left-hand side.
- virtual void [LCapacityToRHS](#) ([real_t](#) coef=1)
Add lumped capacity contribution to right-hand side.
- virtual void [CapacityToLHS](#) ([real_t](#) coef=1)
Add consistent capacity contribution to left-hand side.
- virtual void [CapacityToRHS](#) ([real_t](#) coef=1)
Add consistent capacity contribution to right-hand side.
- void [setLumpedCapacity](#) ()
Add lumped capacity contribution to left and right-hand sides taking into account time integration scheme.
- void [setCapacity](#) ()
Add consistent capacity contribution to left and right-hand sides taking into account time integration scheme.
- virtual void [Diffusion](#) ([real_t](#) coef=1.)
Add diffusion term to left-hand side.
- virtual void [DiffusionToRHS](#) ([real_t](#) coef=1.)
Add diffusion term to right-hand side.
- void [setDiffusion](#) ()
Add diffusion contribution to left and/or right-hand side taking into account time integration scheme.
- virtual void [Convection](#) ([real_t](#) coef=1.)
Add convection term to left-hand side.
- virtual void [ConvectionToRHS](#) ([real_t](#) coef=1.)
Add convection term to right-hand side.
- void [setConvection](#) ()
Add convection contribution to left and/or right-hand side taking into account time integration scheme.
- virtual void [BodyRHS](#) (const [Vect](#)< [real_t](#) > &bf, int opt=[GLOBAL_ARRAY](#))
Add body right-hand side term to right-hand side.
- virtual void [BoundaryRHS](#) (const [Vect](#)< [real_t](#) > &sf, int opt=[GLOBAL_ARRAY](#))
Add boundary right-hand side term to right-hand side.
- void [build](#) ()
Build the linear system of equations.

- void `build` (`TimeStepping` &s)
Build the linear system of equations.
- void `build` (`EigenProblemSolver` &e)
Build the linear system for an eigenvalue problem.
- int `runTransient` ()
Run one time step.
- int `runOneTimeStep` ()
Run one time step.
- int `run` ()
Run the equation.
- void `setRhoCp` (const `real_t` &rhocp)
Set product of Density by Specific heat (constants)
- void `setConductivity` (const `real_t` &diff)
Set (constant) thermal conductivity.
- void `RhoCp` (const string &exp)
Set product of Density by Specific heat given by an algebraic expression.
- void `Conduc` (const string &exp)
Set thermal conductivity given by an algebraic expression.
- void `updateBC` (const `Element` &el, const `Vect`< `T_` > &bc)
Update Right-Hand side by taking into account essential boundary conditions.
- void `updateBC` (const `Vect`< `T_` > &bc)
Update Right-Hand side by taking into account essential boundary conditions.
- void `DiagBC` (int dof_type=NODE.DOF, int dof=0)
Update element matrix to impose bc by diagonalization technique.
- void `LocalNodeVector` (`Vect`< `T_` > &b)
Localize `Element` Vector from a `Vect` instance.
- void `ElementNodeVector` (const `Vect`< `T_` > &b, `LocalVect`< `T_`, `NEE_` > &be)
Localize `Element` Vector from a `Vect` instance.
- void `ElementNodeVector` (const `Vect`< `T_` > &b, `LocalVect`< `T_`, `NEN_` > &be, int dof)
Localize `Element` Vector from a `Vect` instance.
- void `ElementNodeVectorSingleDOF` (const `Vect`< `T_` > &b, `LocalVect`< `T_`, `NEN_` > &be)
Localize `Element` Vector from a `Vect` instance.
- void `ElementSideVector` (const `Vect`< `T_` > &b, `LocalVect`< `T_`, `NSE_` > &be)
Localize `Element` Vector from a `Vect` instance.
- void `ElementVector` (const `Vect`< `T_` > &b, int dof_type=NODE.FIELD, int flag=0)
Localize `Element` Vector.
- void `SideVector` (const `Vect`< `T_` > &b)
Localize `Side` Vector.
- void `ElementNodeCoordinates` ()
Localize coordinates of element nodes.
- void `SideNodeCoordinates` ()
Localize coordinates of side nodes.
- void `ElementAssembly` (`Matrix`< `T_` > *A)
Assemble element matrix into global one.
- void `ElementAssembly` (`PETScMatrix`< `T_` > &A)
Assemble element matrix into global one.

- void **ElementAssembly** (PETScVect< T_ > &b)
Assemble element right-hand side vector into global one.
- void **ElementAssembly** (BMatrix< T_ > &A)
Assemble element matrix into global one.
- void **ElementAssembly** (SkSMatrix< T_ > &A)
Assemble element matrix into global one.
- void **ElementAssembly** (SkMatrix< T_ > &A)
Assemble element matrix into global one.
- void **ElementAssembly** (SpMatrix< T_ > &A)
Assemble element matrix into global one.
- void **ElementAssembly** (TrMatrix< T_ > &A)
Assemble element matrix into global one.
- void **ElementAssembly** (Vect< T_ > &v)
Assemble element vector into global one.
- void **SideAssembly** (PETScMatrix< T_ > &A)
Assemble side matrix into global one.
- void **SideAssembly** (PETScVect< T_ > &b)
Assemble side right-hand side vector into global one.
- void **SideAssembly** (Matrix< T_ > *A)
Assemble side (edge or face) matrix into global one.
- void **SideAssembly** (SkSMatrix< T_ > &A)
Assemble side (edge or face) matrix into global one.
- void **SideAssembly** (SkMatrix< T_ > &A)
Assemble side (edge or face) matrix into global one.
- void **SideAssembly** (SpMatrix< T_ > &A)
Assemble side (edge or face) matrix into global one.
- void **SideAssembly** (Vect< T_ > &v)
Assemble side (edge or face) vector into global one.
- void **DGElementAssembly** (Matrix< T_ > *A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void **DGElementAssembly** (SkSMatrix< T_ > &A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void **DGElementAssembly** (SkMatrix< T_ > &A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void **DGElementAssembly** (SpMatrix< T_ > &A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void **DGElementAssembly** (TrMatrix< T_ > &A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void **AxbAssembly** (const **Element** &el, const Vect< T_ > &x, Vect< T_ > &b)
Assemble product of element matrix by element vector into global vector.
- void **AxbAssembly** (const **Side** &sd, const Vect< T_ > &x, Vect< T_ > &b)
Assemble product of side matrix by side vector into global vector.
- size_t **getNbNodes** () const
Return number of element nodes.
- size_t **getNbEq** () const
Return number of element equations.

- void `setInitialSolution` (const `Vect< T_ > &u`)
Set initial solution (previous time step)
- `real_t setMaterialProperty` (const string &exp, const string &prop)
Define a material property by an algebraic expression.
- void `setMesh` (`Mesh &m`)
Define mesh and renumber DOFs after removing imposed ones.
- `Mesh &getMesh` () const
Return reference to `Mesh` instance.
- `LinearSolver< T_ > &getLinearSolver` ()
Return reference to linear solver instance.
- void `setSolver` (`Iteration ls`, `Preconditioner pc=IDENT_PREC`)
Choose solver for the linear system.
- int `SolveLinearSystem` (`Matrix< T_ > *A`, `Vect< T_ > &b`, `Vect< T_ > &x`)
Solve the linear system.

Public Attributes

- `LocalMatrix< T_, NEE_, NEE_ > eMat`
`LocalMatrix` instance containing local matrix associated to current element.
- `LocalMatrix< T_, NSE_, NSE_ > sMat`
`LocalMatrix` instance containing local matrix associated to current side.
- `LocalVect< T_, NEE_ > ePrev`
`LocalVect` instance containing local vector associated to current element.
- `LocalVect< T_, NEE_ > eRHS`
`LocalVect` instance containing local right-hand side vector associated to current element.
- `LocalVect< T_, NEE_ > eRes`
`LocalVect` instance containing local residual vector associated to current element.
- `LocalVect< T_, NSE_ > sRHS`
`LocalVect` instance containing local right-hand side vector associated to current side.

Protected Member Functions

- void `setMaterial` ()
Set material properties.
- void `Init` (const `Element *el`)
Set element arrays to zero.
- void `Init` (const `Side *sd`)
Set side arrays to zero.

7.33.1 Detailed Description

```
template<class T_, size_t NEN_, size_t NEE_, size_t NSN_, size_t NSE_>
class OFELI::Equa_Therm< T_, NEN_, NEE_, NSN_, NSE_ >
```

Abstract class for Heat transfer Finite Element classes.

Template Parameters

<code><T_></code>	data type (real_t, float, ...)
-------------------------	--------------------------------

Template Parameters

<NEN>	Number of element nodes
<NEE<_>	Number of element equations
<NSN<_>	Number of side nodes
<NSE->	Number of side equations

7.33.2 Constructor & Destructor Documentation**Equa_Therm ()**

Default constructor.

Constructs an empty equation.

7.33.3 Member Function Documentation**virtual void setStab () [virtual]**

Set stabilized formulation.

Stabilized variational formulations are to be used when the Pclet number is large.
By default, no stabilization is used.

virtual void LCapacityToLHS (real_t coef = 1) [virtual]

Add lumped capacity contribution to left-hand side.

Parameters

in	<i>coef</i>	coefficient to multiply by the matrix before adding [Default: 1]
----	-------------	--

Reimplemented in [DC2DT3](#), [DC3DT4](#), [DC3DAT3](#), and [DC1DL2](#).**virtual void LCapacityToRHS (real_t coef = 1) [virtual]**

Add lumped capacity contribution to right-hand side.

Parameters

in	<i>coef</i>	coefficient to multiply by the vector before adding [Default: 1]
----	-------------	--

Reimplemented in [DC2DT3](#), [DC3DT4](#), [DC3DAT3](#), and [DC1DL2](#).**virtual void CapacityToLHS (real_t coef = 1) [virtual]**

Add consistent capacity contribution to left-hand side.

Parameters

in	<i>coef</i>	coefficient to multiply by the matrix before adding [Default: 1]
----	-------------	--

Reimplemented in [DC2DT3](#), [DC3DT4](#), [DC3DAT3](#), and [DC1DL2](#).

virtual void CapacityToRHS (real_t coef = 1) [virtual]

Add consistent capacity contribution to right-hand side.

Parameters

in	<i>coef</i>	coefficient to multiply by the vector before adding [Default: 1]
----	-------------	--

Reimplemented in [DC2DT3](#), [DC3DT4](#), [DC3DAT3](#), and [DC1DL2](#).

virtual void BodyRHS (const Vect< real_t > &bf, int opt = GLOBAL_ARRAY) [virtual]

Add body right-hand side term to right-hand side.

Parameters

in	<i>bf</i>	Vector containing source at element nodes.
in	<i>opt</i>	Vector is local (LOCAL_ARRAY) with size 3 or global (GLOBAL_ARRAY) with size = Number of nodes [Default: GLOBAL_ARRAY].

Reimplemented in [DC2DT3](#), [DC3DT4](#), [DC2DT6](#), [DC1DL2](#), and [DC3DAT3](#).

virtual void BoundaryRHS (const Vect< real_t > &sf, int opt = GLOBAL_ARRAY)
[virtual]

Add boundary right-hand side term to right-hand side.

Parameters

in	<i>sf</i>	Vector containing source at side nodes.
in	<i>opt</i>	Vector is local (LOCAL_ARRAY) with size 3 or global (GLOBAL_ARRAY) with size = Number of nodes [Default: GLOBAL_ARRAY].

Reimplemented in [DC2DT3](#), [DC3DT4](#), [DC2DT6](#), [DC1DL2](#), and [DC3DAT3](#).

void build ()

Build the linear system of equations.

Before using this function, one must have properly selected appropriate options for:

- The choice of a steady state or transient analysis. By default, the analysis is stationary
- In the case of transient analysis, the choice of a time integration scheme and a lumped or consistent capacity matrix. If transient analysis is chosen, the lumped capacity matrix option is chosen by default, and the implicit Euler scheme is used by default for time integration.

void build (TimeStepping & s)

Build the linear system of equations.

Before using this function, one must have properly selected appropriate options for:

- The choice of a steady state or transient analysis. By default, the analysis is stationary
- In the case of transient analysis, the choice of a time integration scheme and a lumped or consistent capacity matrix. If transient analysis is chosen, the lumped capacity matrix option is chosen by default, and the implicit Euler scheme is used by default for time integration.

Parameters

in	s	Reference to used TimeStepping instance
----	---	---

void build (EigenProblemSolver & e)

Build the linear system for an eigenvalue problem.

Parameters

in	e	Reference to used EigenProblemSolver instance
----	---	---

int runTransient ()

Run one time step.

This function performs one time step in equation solving. It is to be used only if a *TRANSIENT* analysis is required.

Returns

Return error from the linear system solver

int runOneTimeStep ()

Run one time step.

This function performs one time step in equation solving. It is identical to the function `runTransient`.

Returns

Return error from the linear system solver

int run ()

Run the equation.

If the analysis (see function `setAnalysis`) is *STEADY_STATE*, then the function solves the stationary equation.

If the analysis is *TRANSIENT*, then the function performs time stepping until the final time is reached.

void updateBC (const Element & el, const Vect< T_ > & bc) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>el</i>	Reference to current element instance
in	<i>bc</i>	Vector that contains imposed values at all DOFs

void updateBC (const Vect< T_ > & bc) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>bc</i>	Vector that contains imposed values at all DOFs
----	-----------	---

Remarks

The current element is pointed by `_theElement`

void DiagBC (int dof.type = NODE_DOF, int dof = 0) [inherited]

Update element matrix to impose bc by diagonalization technique.

Parameters

in	<i>dof.type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • <code>NODE_FIELD</code>, DOFs are supported by nodes [Default] • <code>ELEMENT_FIELD</code>, DOFs are supported by elements • <code>SIDE_FIELD</code>, DOFs are supported by sides
in	<i>dof</i>	DOF setting: <ul style="list-style-type: none"> • <code>= 0</code>, All DOFs are taken into account [Default] • <code>!= 0</code>, Only DOF No. <code>dof</code> is handled in the system

void LocalNodeVector (Vect< T_ > & b) [inherited]

Localize [Element](#) Vector from a [Vect](#) instance.

Parameters

in	<i>b</i>	Reference to global vector to be localized. The resulting local vector can be accessed by attribute <code>ePrev</code> . This member function is to be used if a constructor with Element was invoked.
----	----------	--

void ElementNodeVector (const Vect< T_ > & b, LocalVect< T_, NEE_ > & be)
[inherited]

Localize [Element](#) Vector from a [Vect](#) instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

All degrees of freedom are transferred to the local vector

void ElementNodeVector (const Vect< T_ > & b, LocalVect< T_, NEN_ > & be, int dof)
[inherited]

Localize [Element](#) Vector from a [Vect](#) instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.
in	<i>dof</i>	Degree of freedom to transfer to the local vector

Remarks

Only yhe dega dof is transferred to the local vector

void ElementNodeVectorSingleDOF (const Vect< T_ > & b, LocalVect< T_, NEN_ > & be)
[inherited]

Localize [Element](#) Vector from a [Vect](#) instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

Vector b is assumed to contain only one degree of freedom by node.

void ElementSideVector (const Vect< T_ > & b, LocalVect< T_, NSE_ > & be) [inherited]

Localize [Element](#) Vector from a [Vect](#) instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is

void ElementVector (const Vect< T_ > & b, int dof_type = NODE_FIELD, int flag = 0)
[inherited]

Localize [Element](#) Vector.

Parameters

in	<i>b</i>	Global vector to be localized
in	<i>dof_type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • NODE_FIELD, DOFs are supported by nodes [Default] • ELEMENT_FIELD, DOFs are supported by elements • SIDE_FIELD, DOFs are supported by sides
in	<i>flag</i>	Option to set: <ul style="list-style-type: none"> • = 0, All DOFs are taken into account [Default] • != 0, Only DOF number dof is handled in the system The resulting local vector can be accessed by attribute ePrev.

Remarks

This member function is to be used if a constructor with [Element](#) was invoked. It uses the [Element](#) pointer `_theElement`

void SideVector (const Vect< T_ > & b) [inherited]

Localize [Side](#) Vector.

Parameters

in	<i>b</i>	Global vector to be localized <ul style="list-style-type: none"> • NODE_FIELD, DOFs are supported by nodes [default] • ELEMENT_FIELD, DOFs are supported by elements • SIDE_FIELD, DOFs are supported by sides The resulting local vector can be accessed by attribute ePrev.
----	----------	--

Remarks

This member function is to be used if a constructor with [Side](#) was invoked. It uses the [Side](#) pointer `_theSide`

void ElementNodeCoordinates () [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array `_x[0]`, `_x[1]`, ... which are instances of class [Point<real.t>](#)

Remarks

This member function uses the [Side](#) pointer `_theSide`

void SideNodeCoordinates () [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array `_x[0]`, `_x[1]`, ... which are instances of class [Point<real.t>](#)

Remarks

This member function uses the [Element](#) pointer `_theElement`

void ElementAssembly (Matrix< T_ > * A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Pointer to global matrix (abstract class: can be any of classes SkSMatrix , SkMatrix , SpMatrix)
----------	---

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScMatrix< T_ > & A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Reference to global matrix
----------	----------------------------

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScVect< T_ > & b) [inherited]

Assemble element right-hand side vector into global one.

Parameters

<i>b</i>	Reference to global right-hand side vector
----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (BMatrix< T_ > & A) [inherited]

Assemble element matrix into global one.

Parameters

A	Global matrix stored as a BMatrix instance
---	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkSMatrix< T_ > & A) [inherited]

Assemble element matrix into global one.

Parameters

A	Global matrix stored as an SkSMatrix instance
---	---

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkMatrix< T_ > & A) [inherited]

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SpMatrix< T_ > & A) [inherited]

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an SpMatrix instance
----	---	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (TrMatrix< T_ > & A) [inherited]

Assemble element matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an TrMatrix instance
----	----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (Vect< T_ > & v) [inherited]

Assemble element vector into global one.

Parameters

in	<i>v</i>	Global vector (Vect instance)
----	----------	--

Warning

The element pointer is given by the global variable `theElement`

void SideAssembly (PETScMatrix< T_ > & A) [inherited]

Assemble side matrix into global one.

Parameters

<i>A</i>	Reference to global matrix
----------	----------------------------

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (PETScVect< T_ > & b) [inherited]

Assemble side right-hand side vector into global one.

Parameters

<i>b</i>	Reference to global right-hand side vector
----------	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (Matrix< T_ > * A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix , SkMatrix , SpMatrix)
---	---

Warning

The side pointer is given by the global variable theSide

void SideAssembly (SkSMatrix< T_ > & A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	A	Global matrix stored as an SkSMatrix instance
----	---	---

Warning

The side pointer is given by the global variable theSide

void SideAssembly (SkMatrix< T_ > & A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

Warning

The side pointer is given by the global variable theSide

void SideAssembly (SpMatrix< T_ > & A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	A	Global matrix stored as an SpMatrix instance
----	---	--

Warning

The side pointer is given by the global variable theSide

void SideAssembly (Vect< T_ > & v) [inherited]

Assemble side (edge or face) vector into global one.

Parameters

in	v	Global vector (Vect instance)
----	---	--

Warning

The side pointer is given by the global variable theSide

void DGElementAssembly (Matrix< T_ > * A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix , SkMatrix , SpMatrix)
---	---

Warning

The element pointer is given by the global variable theElement

void DGElementAssembly (SkSMatrix< T_ > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

A	Global matrix stored as an SkSMatrix instance
---	---

Warning

The element pointer is given by the global variable theElement

void DGElementAssembly (SkMatrix< T_ > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

Warning

The element pointer is given by the global variable theElement

void DGElementAssembly (SpMatrix< T_ > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	<i>A</i>	Global matrix stored as an SpMatrix instance
----	----------	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (TrMatrix< T_ > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	<i>A</i>	Global matrix stored as an TrMatrix instance
----	----------	--

Warning

The element pointer is given by the global variable `theElement`

void AxbAssembly (const Element & *el*, const Vect< T_ > & *x*, Vect< T_ > & *b*)
[inherited]

Assemble product of element matrix by element vector into global vector.

Parameters

in	<i>el</i>	Reference to Element instance
in	<i>x</i>	Global vector to multiply by (Vect instance)
out	<i>b</i>	Global vector to add (Vect instance)

void AxbAssembly (const Side & *sd*, const Vect< T_ > & *x*, Vect< T_ > & *b*) [inherited]

Assemble product of side matrix by side vector into global vector.

Parameters

in	<i>sd</i>	Reference to Side instance
in	<i>x</i>	Global vector to multiply by (Vect instance)
out	<i>b</i>	Global vector (Vect instance)

real.t setMaterialProperty (const string & *exp*, const string & *prop*) [inherited]

Define a material property by an algebraic expression.

Parameters

in	<i>exp</i>	Algebraic expression
in	<i>prop</i>	Property name

Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

Mesh& getMesh () const [inherited]

Return reference to [Mesh](#) instance.

Returns

Reference to [Mesh](#) instance

void setSolver (Iteration *ls*, Preconditioner *pc* = IDENT_PREC) [inherited]

Choose solver for the linear system.

Parameters

in	<i>ls</i>	<p>Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER</p> <ul style="list-style-type: none"> • DIRECT_SOLVER, Use a facorization solver [default] • CG_SOLVER, Conjugate Gradient iterative solver • CGS_SOLVER, Squared Conjugate Gradient iterative solver • BICG_SOLVER, BiConjugate Gradient iterative solver • BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver • GMRES_SOLVER, GMRES iterative solver • QMR_SOLVER, QMR iterative solver
in	<i>pc</i>	<p>Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:</p> <ul style="list-style-type: none"> • IDENT_PREC, Identity preconditioner (no preconditioning [default]) • DIAG_PREC, Diagonal preconditioner • ILU_PREC, Incomplete LU factorization preconditioner

int SolveLinearSystem (Matrix< T_ > * A, Vect< T_ > & b, Vect< T_ > & x) [inherited]

Solve the linear system.

Parameters

in	A	Pointer to matrix of the system (Instance of class SpMatrix)
in	b	Vector containing right-hand side
in,out	x	Vector containing initial guess of solution on input, actual solution on output

7.33.4 Member Data Documentation

LocalVect<T_,NEE_> ePrev [inherited]


[LocalVect](#) instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

7.34 Equation< T_ , NEN_ , NEE_ , NSN_ , NSE_ > Class Template Reference

Abstract class for all equation classes.

Inheritance diagram for $\text{Equation} < T_ , NEN_ , NEE_ , NSN_ , NSE_ >$:

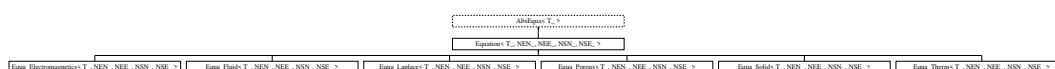

Public Member Functions

- [Equation](#) ()
Constructor with mesh instance.
- [Equation](#) ([Mesh](#) &mesh)
Constructor with mesh instance, matrix and right-hand side.
- [Equation](#) ([Mesh](#) &mesh, Vect< T_ > &b, [real.t](#) &t, [real.t](#) &ts)
Constructor with mesh instance, matrix and right-hand side.
- [Equation](#) (const [Element](#) *el)
Constructor using [Element](#) data.
- [Equation](#) (const [Side](#) *sd)
Constructor using [Side](#) data.
- [Equation](#) (const [Element](#) *el, const Vect< T_ > &u, [real.t](#) time=0)
Constructor using element data, solution at previous time step and time value.
- [Equation](#) (const [Side](#) *sd, const Vect< T_ > &u, [real.t](#) time=0)
Constructor using side data, solution at previous time step and time value.
- virtual [~Equation](#) ()
Destructor.
- void [updateBC](#) (const [Element](#) &el, const Vect< T_ > &bc)
Update Right-Hand side by taking into account essential boundary conditions.
- void [updateBC](#) (const Vect< T_ > &bc)
Update Right-Hand side by taking into account essential boundary conditions.

- void **DiagBC** (int dof_type=NODE.DOF, int dof=0)
Update element matrix to impose bc by diagonalization technique.
- void **LocalNodeVector** (Vect< T_ > &b)
Localize Element Vector from a Vect instance.
- void **ElementNodeVector** (const Vect< T_ > &b, LocalVect< T_, NEE_ > &be)
Localize Element Vector from a Vect instance.
- void **ElementNodeVectorSingleDOF** (const Vect< T_ > &b, LocalVect< T_, NEN_ > &be)
Localize Element Vector from a Vect instance.
- void **ElementNodeVector** (const Vect< T_ > &b, LocalVect< T_, NEN_ > &be, int dof)
Localize Element Vector from a Vect instance.
- void **ElementSideVector** (const Vect< T_ > &b, LocalVect< T_, NSE_ > &be)
Localize Element Vector from a Vect instance.
- void **ElementVector** (const Vect< T_ > &b, int dof_type=NODE.FIELD, int flag=0)
Localize Element Vector.
- void **SideVector** (const Vect< T_ > &b)
Localize Side Vector.
- void **ElementNodeCoordinates** ()
Localize coordinates of element nodes.
- void **SideNodeCoordinates** ()
Localize coordinates of side nodes.
- void **ElementAssembly** (Matrix< T_ > *A)
Assemble element matrix into global one.
- void **ElementAssembly** (PETScMatrix< T_ > &A)
Assemble element matrix into global one.
- void **SideAssembly** (PETScMatrix< T_ > &A)
Assemble side matrix into global one.
- void **ElementAssembly** (PETScVect< T_ > &b)
Assemble element right-hand side vector into global one.
- void **SideAssembly** (PETScVect< T_ > &b)
Assemble side right-hand side vector into global one.
- void **ElementAssembly** (BMatrix< T_ > &A)
Assemble element matrix into global one.
- void **ElementAssembly** (SkSMatrix< T_ > &A)
Assemble element matrix into global one.
- void **ElementAssembly** (SkMatrix< T_ > &A)
Assemble element matrix into global one.
- void **ElementAssembly** (SpMatrix< T_ > &A)
Assemble element matrix into global one.
- void **ElementAssembly** (TrMatrix< T_ > &A)
Assemble element matrix into global one.
- void **DGElementAssembly** (Matrix< T_ > *A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void **DGElementAssembly** (SkSMatrix< T_ > &A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void **DGElementAssembly** (SkMatrix< T_ > &A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.

- void [DGElementAssembly](#) ([SpMatrix](#)< `T_` > &`A`)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void [DGElementAssembly](#) ([TrMatrix](#)< `T_` > &`A`)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void [SideAssembly](#) ([Matrix](#)< `T_` > *`A`)
Assemble side (edge or face) matrix into global one.
- void [SideAssembly](#) ([SkSMatrix](#)< `T_` > &`A`)
Assemble side (edge or face) matrix into global one.
- void [SideAssembly](#) ([SkMatrix](#)< `T_` > &`A`)
Assemble side (edge or face) matrix into global one.
- void [SideAssembly](#) ([SpMatrix](#)< `T_` > &`A`)
Assemble side (edge or face) matrix into global one.
- void [ElementAssembly](#) ([Vect](#)< `T_` > &`v`)
Assemble element vector into global one.
- void [SideAssembly](#) ([Vect](#)< `T_` > &`v`)
Assemble side (edge or face) vector into global one.
- void [AxbAssembly](#) (const [Element](#) &`el`, const [Vect](#)< `T_` > &`x`, [Vect](#)< `T_` > &`b`)
Assemble product of element matrix by element vector into global vector.
- void [AxbAssembly](#) (const [Side](#) &`sd`, const [Vect](#)< `T_` > &`x`, [Vect](#)< `T_` > &`b`)
Assemble product of side matrix by side vector into global vector.
- [size_t](#) [getNbNodes](#) () const
Return number of element nodes.
- [size_t](#) [getNbEq](#) () const
Return number of element equations.
- void [setInitialSolution](#) (const [Vect](#)< `T_` > &`u`)
Set initial solution (previous time step)
- [real_t](#) [setMaterialProperty](#) (const string &`exp`, const string &`prop`)
Define a material property by an algebraic expression.
- void [setMesh](#) ([Mesh](#) &`m`)
Define mesh and renumber DOFs after removing imposed ones.
- [Mesh](#) & [getMesh](#) () const
Return reference to [Mesh](#) instance.
- [LinearSolver](#)< `T_` > & [getLinearSolver](#) ()
Return reference to linear solver instance.
- void [setSolver](#) ([Iteration](#) `ls`, [Preconditioner](#) `pc`=`IDENT_PREC`)
Choose solver for the linear system.
- int [SolveLinearSystem](#) ([Matrix](#)< `T_` > *`A`, [Vect](#)< `T_` > &`b`, [Vect](#)< `T_` > &`x`)
Solve the linear system.

Public Attributes

- [LocalMatrix](#)< `T_`, `NEE_`, `NEE_` > [eMat](#)
[LocalMatrix](#) instance containing local matrix associated to current element.
- [LocalMatrix](#)< `T_`, `NSE_`, `NSE_` > [sMat](#)
[LocalMatrix](#) instance containing local matrix associated to current side.
- [LocalVect](#)< `T_`, `NEE_` > [ePrev](#)
[LocalVect](#) instance containing local vector associated to current element.

- [LocalVect](#)< T_, NEE_ > [eRHS](#)
LocalVect instance containing local right-hand side vector associated to current element.
- [LocalVect](#)< T_, NEE_ > [eRes](#)
LocalVect instance containing local residual vector associated to current element.
- [LocalVect](#)< T_, NSE_ > [sRHS](#)
LocalVect instance containing local right-hand side vector associated to current side.

Protected Member Functions

- void [Init](#) (const [Element](#) *el)
Set element arrays to zero.
- void [Init](#) (const [Side](#) *sd)
Set side arrays to zero.

7.34.1 Detailed Description

```
template<class T_, size_t NEN_, size_t NEE_, size_t NSN_, size_t NSE_>
class OFELI::Equation< T_, NEN_, NEE_, NSN_, NSE_ >
```

Abstract class for all equation classes.

Template Arguments:

- T_ : data type (real.t, float, ...)
- NEN_ : Number of element nodes
- NEE_ : Number of element equations
- NSN_ : Number of side nodes
- NSE_ : Number of side equations

7.34.2 Constructor & Destructor Documentation

Equation ()

Default constructor. Constructs an "empty" equation

Equation (Mesh & mesh)

Constructor with mesh instance.

Parameters

in	mesh	Mesh instance
----	------	-------------------------------

Equation (Mesh & mesh, Vect< T_ > & b, real.t & t, real.t & ts)

Constructor with mesh instance, matrix and right-hand side.

Parameters

in	mesh	Mesh instance
----	------	-------------------------------

Parameters

in	<i>b</i>	Vect instance containing Right-hand side.
in	<i>t</i>	Time value
in	<i>ts</i>	Time step

Equation (const Element * *el*)

Constructor using [Element](#) data.

Parameters

in	<i>el</i>	Pointer to Element
----	-----------	------------------------------------

Equation (const Element * *el*, const Vect< T_ > & *u*, real_t *time* = 0)

Constructor using element data, solution at previous time step and time value.

Parameters

in	<i>el</i>	Pointer to element
in	<i>u</i>	Vect instance containing solution at previous time step
in	<i>time</i>	Time value (Default value is 0)

Equation (const Side * *sd*, const Vect< T_ > & *u*, real_t *time* = 0)

Constructor using side data, solution at previous time step and time value.

Parameters

in	<i>sd</i>	Pointer to side
in	<i>u</i>	Vect instance containing solution at previous time step
in	<i>time</i>	Time value (Default value is 0)

7.3.4.3 Member Function Documentation

void updateBC (const Element & *el*, const Vect< T_ > & *bc*)

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>el</i>	Reference to current element instance
in	<i>bc</i>	Vector that contains imposed values at all DOFs

void updateBC (const Vect< T_ > & bc)

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>bc</i>	Vector that contains imposed values at all DOFs
----	-----------	---

Remarks

The current element is pointed by *_theElement*

void DiagBC (int dof.type = NODE_DOF, int dof = 0)

Update element matrix to impose bc by diagonalization technique.

Parameters

in	<i>dof.type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • NODE_FIELD, DOFs are supported by nodes [Default] • ELEMENT_FIELD, DOFs are supported by elements • SIDE_FIELD, DOFs are supported by sides
in	<i>dof</i>	DOF setting: <ul style="list-style-type: none"> • = 0, All DOFs are taken into account [Default] • != 0, Only DOF No. dof is handled in the system

void LocalNodeVector (Vect< T_ > & b)

Localize [Element](#) Vector from a [Vect](#) instance.

Parameters

in	<i>b</i>	Reference to global vector to be localized. The resulting local vector can be accessed by attribute ePrev. This member function is to be used if a constructor with Element was invoked.
----	----------	--

void ElementNodeVector (const Vect< T_ > & b, LocalVect< T_, NEE_ > & be)

Localize [Element](#) Vector from a [Vect](#) instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

All degrees of freedom are transferred to the local vector

void ElementNodeVectorSingleDOF (const Vect< T_ > & b, LocalVect< T_, NEN_ > & be)

Localize [Element](#) Vector from a [Vect](#) instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

Vector b is assumed to contain only one degree of freedom by node.

void ElementNodeVector (const Vect< T_ > & b, LocalVect< T_, NEN_ > & be, int dof)

Localize [Element](#) Vector from a [Vect](#) instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.
in	<i>dof</i>	Degree of freedom to transfer to the local vector

Remarks

Only the dof is transferred to the local vector

void ElementSideVector (const Vect< T_ > & b, LocalVect< T_, NSE_ > & be)

Localize [Element](#) Vector from a [Vect](#) instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is

void ElementVector (const Vect< T_ > & b, int dof_type = NODE_FIELD, int flag = 0)

Localize [Element](#) Vector.

Parameters

in	<i>b</i>	Global vector to be localized
----	----------	-------------------------------

Parameters

in	<i>dof_type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • <code>NODE_FIELD</code>, DOFs are supported by nodes [Default] • <code>ELEMENT_FIELD</code>, DOFs are supported by elements • <code>SIDE_FIELD</code>, DOFs are supported by sides
in	<i>flag</i>	Option to set: <ul style="list-style-type: none"> • <code>= 0</code>, All DOFs are taken into account [Default] • <code>!= 0</code>, Only DOF number <code>dof</code> is handled in the system The resulting local vector can be accessed by attribute <code>ePrev</code> .

Remarks

This member function is to be used if a constructor with [Element](#) was invoked. It uses the [Element](#) pointer `_theElement`

void SideVector (const Vect< T_ > & b)

Localize [Side](#) Vector.

Parameters

in	<i>b</i>	Global vector to be localized <ul style="list-style-type: none"> • <code>NODE_FIELD</code>, DOFs are supported by nodes [default] • <code>ELEMENT_FIELD</code>, DOFs are supported by elements • <code>SIDE_FIELD</code>, DOFs are supported by sides The resulting local vector can be accessed by attribute <code>ePrev</code> .
----	----------	---

Remarks

This member function is to be used if a constructor with [Side](#) was invoked. It uses the [Side](#) pointer `_theSide`

void ElementNodeCoordinates ()

Localize coordinates of element nodes.

Coordinates are stored in array `_x[0]` , `_x[1]` , ... which are instances of class [Point<real_t>](#)

Remarks

This member function uses the [Side](#) pointer `_theSide`

void SideNodeCoordinates ()

Localize coordinates of side nodes.

Coordinates are stored in array `_x[0]`, `_x[1]`, ... which are instances of class [Point<real_t>](#)

Remarks

This member function uses the [Element](#) pointer `_theElement`

void ElementAssembly (Matrix< T_ > * A)

Assemble element matrix into global one.

Parameters

<i>A</i>	Pointer to global matrix (abstract class: can be any of classes SkSMatrix , SkMatrix , SpMatrix)
----------	---

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScMatrix< T_ > & A)

Assemble element matrix into global one.

Parameters

<i>A</i>	Reference to global matrix
----------	----------------------------

Warning

The element pointer is given by the global variable `theElement`

void SideAssembly (PETScMatrix< T_ > & A)

Assemble side matrix into global one.

Parameters

<i>A</i>	Reference to global matrix
----------	----------------------------

Warning

The side pointer is given by the global variable `theSide`

void ElementAssembly (PETScVect< T_ > & b)

Assemble element right-hand side vector into global one.

Parameters

<i>b</i>	Reference to global right-hand side vector
----------	--

Warning

The element pointer is given by the global variable theElement

void SideAssembly (PETScVect< T₋ > & *b*)

Assemble side right-hand side vector into global one.

Parameters

<i>b</i>	Reference to global right-hand side vector
----------	--

Warning

The side pointer is given by the global variable theSide

void ElementAssembly (BMatrix< T₋ > & *A*)

Assemble element matrix into global one.

Parameters

<i>A</i>	Global matrix stored as a BMatrix instance
----------	--

Warning

The element pointer is given by the global variable theElement

void ElementAssembly (SkSMatrix< T₋ > & *A*)

Assemble element matrix into global one.

Parameters

<i>A</i>	Global matrix stored as an SkSMatrix instance
----------	---

Warning

The element pointer is given by the global variable theElement

void ElementAssembly (SkMatrix< T₋ > & *A*)

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an SkMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SpMatrix< T_ > & A)

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an SpMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (TrMatrix< T_ > & A)

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an TrMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (Matrix< T_ > * A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix , SkMatrix , SpMatrix)
-----	---

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SkSMatrix< T_ > & A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

A	Global matrix stored as an SkMatrix instance
-----	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SkMatrix< T_ > & A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	A	Global matrix stored as an SkMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SpMatrix< T_ > & A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	A	Global matrix stored as an SpMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (TrMatrix< T_ > & A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	A	Global matrix stored as an TrMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void SideAssembly (Matrix< T_ > * A)

Assemble side (edge or face) matrix into global one.

Parameters

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix , SkMatrix , SpMatrix)
---	---

Warning

The side pointer is given by the global variable theSide

void SideAssembly (SkSMatrix< T_ > & A)

Assemble side (edge or face) matrix into global one.

Parameters

in	A	Global matrix stored as an SkSMatrix instance
----	---	---

Warning

The side pointer is given by the global variable theSide

void SideAssembly (SkMatrix< T_ > & A)

Assemble side (edge or face) matrix into global one.

Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

Warning

The side pointer is given by the global variable theSide

void SideAssembly (SpMatrix< T_ > & A)

Assemble side (edge or face) matrix into global one.

Parameters

in	A	Global matrix stored as an SpMatrix instance
----	---	--

Warning

The side pointer is given by the global variable theSide

void ElementAssembly (Vect< T_ > & v)

Assemble element vector into global one.

Parameters

in	<i>v</i>	Global vector (Vect instance)
----	----------	--

Warning

The element pointer is given by the global variable `theElement`

void SideAssembly (Vect< T_ > & *v*)

Assemble side (edge or face) vector into global one.

Parameters

in	<i>v</i>	Global vector (Vect instance)
----	----------	--

Warning

The side pointer is given by the global variable `theSide`

void AxbAssembly (const Element & *el*, const Vect< T_ > & *x*, Vect< T_ > & *b*)

Assemble product of element matrix by element vector into global vector.

Parameters

in	<i>el</i>	Reference to Element instance
in	<i>x</i>	Global vector to multiply by (Vect instance)
out	<i>b</i>	Global vector to add (Vect instance)

void AxbAssembly (const Side & *sd*, const Vect< T_ > & *x*, Vect< T_ > & *b*)

Assemble product of side matrix by side vector into global vector.

Parameters

in	<i>sd</i>	Reference to Side instance
in	<i>x</i>	Global vector to multiply by (Vect instance)
out	<i>b</i>	Global vector (Vect instance)

real.t setMaterialProperty (const string & *exp*, const string & *prop*)

Define a material property by an algebraic expression.

Parameters

in	<i>exp</i>	Algebraic expression
----	------------	----------------------

Parameters

in	<i>prop</i>	Property name
----	-------------	---------------

Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

Mesh& getMesh () const [inherited]

Return reference to [Mesh](#) instance.

Returns

Reference to [Mesh](#) instance

void setSolver (Iteration *ls*, Preconditioner *pc* = IDENT_PREC) [inherited]

Choose solver for the linear system.

Parameters

in	<i>ls</i>	<p>Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER</p> <ul style="list-style-type: none"> • DIRECT_SOLVER, Use a facorization solver [default] • CG_SOLVER, Conjugate Gradient iterative solver • CGS_SOLVER, Squared Conjugate Gradient iterative solver • BICG_SOLVER, BiConjugate Gradient iterative solver • BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver • GMRES_SOLVER, GMRES iterative solver • QMR_SOLVER, QMR iterative solver
in	<i>pc</i>	<p>Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:</p> <ul style="list-style-type: none"> • IDENT_PREC, Identity preconditioner (no preconditioning [default]) • DIAG_PREC, Diagonal preconditioner • ILU_PREC, Incomplete LU factorization preconditioner

int SolveLinearSystem (Matrix< T_ > * *A*, Vect< T_ > & *b*, Vect< T_ > & *x*) [inherited]

Solve the linear system.

Parameters

in	A	Pointer to matrix of the system (Instance of class SpMatrix)
in	b	Vector containing right-hand side
in,out	x	Vector containing initial guess of solution on input, actual solution on output

7.34.4 Member Data Documentation

LocalVect<T_,NEE_> ePrev

[LocalVect](#) instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

7.35 Estimator Class Reference

To calculate an a posteriori estimator of the solution.

Public Types

Public Member Functions

- [Estimator](#) ()
Default Constructor.
- [Estimator](#) ([Mesh](#) &m)
Constructor using finite element mesh.
- [~Estimator](#) ()
Destructor.
- void [setType](#) ([EstimatorType](#) t=[ESTIM_ZZ](#))
Select type of a posteriori estimator.
- void [setSolution](#) (const [Vect](#)< [real_t](#) > &u)
Provide solution vector in order to determine error index.
- void [getElementWiseIndex](#) ([Vect](#)< [real_t](#) > &e)
Get vector containing elementwise error index.
- [real_t](#) [getAverage](#) () const
Return averaged error.
- [Mesh](#) & [getMesh](#) () const
Return a reference to the finite element mesh.

7.35.1 Detailed Description

To calculate an a posteriori estimator of the solution.

This class enables calculating an estimator of a solution in order to evaluate reliability. Estimation uses the so-called Zienkiewicz-Zhu estimator.

7.35.2 Member Enumeration Documentation

enum EstimatorType

Enumerate variable that selects an error estimator for mesh adaptation purposes

Enumerator

ESTIM_ZZ Zhu-Zienckiewicz elementwise estimator

ESTIM_ND_JUMP Normal derivative jump sidewise estimator

7.35.3 Constructor & Destructor Documentation

Estimator (Mesh & m)

Constructor using finite element mesh.

Parameters

in	m	Mesh instance
----	-----	-------------------------------

7.35.4 Member Function Documentation

void setType (EstimatorType t = ESTIM_ZZ)

Select type of a posteriori estimator.

Parameters

in	t	Type of estimator. It has to be chosen among the enumerated values: <ul style="list-style-type: none"> • ESTIM_ZZ: The Zhu-Zienckiewicz estimator (Default value) • ESTIM_ND_JUMP: An estimator based on the jump of normal derivatives of the solution across mesh sides
----	-----	---

void setSolution (const Vect< real_t > & u)

Provide solution vector in order to determine error index.

Parameters

in	u	Vector containing solution at mesh nodes
----	-----	--

void getElementWiseIndex (Vect< real_t > & e)

Get vector containing elementwise error index.

Parameters

in,out	e	Vector that contains once the member function setError is invoked a posteriori estimator at each element
--------	-----	--

7.36 FastMarching2D Class Reference

To run a Fast Marching Method on 2-D structured uniform grids.

Public Member Functions

- [FastMarching2D](#) ()
Default constructor.
- [FastMarching2D](#) (const [Grid](#) &g, [Vect](#)< [real_t](#) > &ls)
Constructor using grid and level set function.
- [FastMarching2D](#) (const [Grid](#) &g, [Vect](#)< [real_t](#) > &ls, [Vect](#)< [real_t](#) > &F)
Constructor using grid, level set function and velocity to extend.
- [~FastMarching2D](#) ()
Destructor.
- void [execute](#) ()
Execute Fast Marching Procedure.
- void [Check](#) ()
Check distance function.

7.36.1 Detailed Description

To run a Fast Marching Method on 2-D structured uniform grids.

This class enables running a Fast Marching procedure to calculate the signed distance function and extend a given front speed.

7.36.2 Constructor & Destructor Documentation

[FastMarching2D](#) (const [Grid](#) &g, [Vect](#)< [real_t](#) > &ls)

Constructor using grid and level set function.

Parameters

in	g	Instance of class Grid
in	ls	Vector containing the level set function at grid nodes. The values are 0 on the interface (from which the distance is computed), positive on one side and negative on the other side. They must contain the signed distance on the nodes surrounding the interface but can take any value on other nodes, provided they have the right sign.

[FastMarching2D](#) (const [Grid](#) &g, [Vect](#)< [real_t](#) > &ls, [Vect](#)< [real_t](#) > &F)

Constructor using grid, level set function and velocity to extend.

Parameters

in	g	Instance of class Grid
----	-------------------	--

Parameters

in	ls	Vector containing the level set function at grid nodes. The values are 0 on the interface (from which the distance is computed), positive on one side and negative on the other side. They must contain the signed distance on the nodes surrounding the interface but can take any value on other nodes, provided their sign is right.
in	F	Vector containing the front speed at grid nodes. Only values on nodes surrounding the interface are relevant.

7.36.3 Member Function Documentation

void execute ()


Execute Fast Marching Procedure.

Once this function was called, the vector ls used in the constructor will contain the signed distance function and F will contain the extended speed.

7.37 FEShape Class Reference

Parent class from which inherit all finite element shape classes.

Inheritance diagram for FEShape:

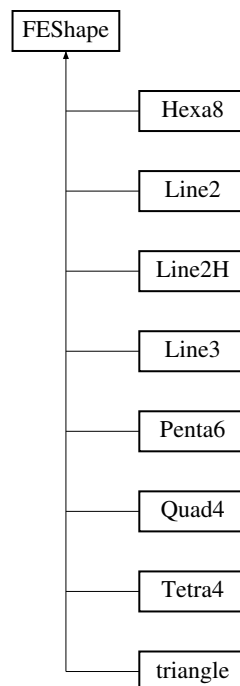

Public Member Functions

- [FEShape \(\)](#)
Default Constructor.
- [FEShape \(const \[Element\]\(#\) *el\)](#)
Constructor for an element.

- **FEShape** (const **Side** *sd)
Constructor for a side.
- virtual **~FEShape** ()
Destructor.
- **real.t Sh** (size_t i) const
Return shape function of node i at given point.
- **real.t Sh** (size_t i, **Point**< **real.t** > s) const
Calculate shape function of node i at a given point s.
- **Point**< **real.t** > **DSh** (size_t i) const
Return derivatives of shape function of node i at a given point.
- **real.t getDet** () const
Return determinant of jacobian.
- **Point**< **real.t** > **getCenter** () const
Return coordinates of center of element.
- **Point**< **real.t** > **getLocalPoint** () const
Localize a point in the element.
- **Point**< **real.t** > **getLocalPoint** (const **Point**< **real.t** > &s) const
Localize a point in the element.

7.37.1 Detailed Description

Parent class from which inherit all finite element shape classes.

7.37.2 Constructor & Destructor Documentation

FEShape (const **Element** * el)

Constructor for an element.

Parameters

in	el	Pointer to element
----	----	--------------------

FEShape (const **Side** * sd)

Constructor for a side.

Parameters

in	sd	Pointer to side
----	----	-----------------

7.37.3 Member Function Documentation

real.t Sh (size_t i, **Point**< **real.t** > s) const

Calculate shape function of node i at a given point s.

Parameters

in	i	Local node label
----	---	------------------

Parameters

in	s	Point in the reference triangle where the shape function is evaluated
----	---	---

Point<real_t> DSh (size_t i) const

Return derivatives of shape function of node i at a given point.

If the transformation (Reference element -> Actual element) is not affine, member function `setLocal()` must have been called before in order to calculate relevant quantities.

Parameters

in	i	Partial derivative index (1, 2 or 3)
----	---	--------------------------------------

real_t getDet () const

Return determinant of jacobian.

If the transformation (Reference element -> Actual element) is not affine, member function `setLocal()` must have been called before in order to calculate relevant quantities.

Point<real_t> getLocalPoint () const

Localize a point in the element.

Return actual coordinates in the reference element. If the transformation (Reference element -> Actual element) is not affine, member function `setLocal()` must have been called before in order to calculate relevant quantities.

Point<real_t> getLocalPoint (const Point< real_t > & s) const


Localize a point in the element.

Return actual coordinates where s are coordinates in the reference element.

7.38 Figure Class Reference

To store and treat a figure (or shape) information.

Inheritance diagram for Figure:

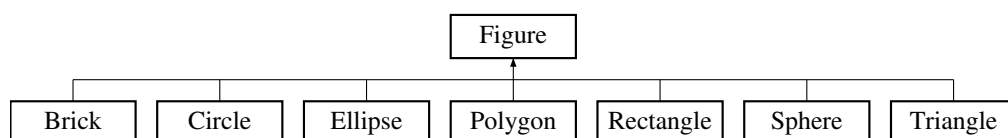

Public Member Functions

- [Figure](#) ()
Default constructor.
- [Figure](#) (const [Figure](#) &f)
Copy constructor.

- virtual `~Figure ()`
Destructor.
- void `setCode (int code)`
Choose a code for the domain defined by the figure.
- virtual `real_t getSignedDistance (const Point< real_t > &p) const`
Return signed distance from a given point to current figure.
- `Figure & operator= (const Figure &f)`
Operator =.
- void `getSignedDistance (const Grid &g, Vect< real_t > &d) const`
Calculate signed distance to current figure with respect to grid points.
- `real_t dLine (const Point< real_t > &p, const Point< real_t > &a, const Point< real_t > &b) const`
Compute signed distance from a line.

7.38.1 Detailed Description

To store and treat a figure (or shape) information.

This class is essentially useful to construct data for mesh generators and for distance calculations.

7.38.2 Member Function Documentation

virtual real_t getSignedDistance (const Point< real_t > & p) const [virtual]

Return signed distance from a given point to current figure.

Parameters

in	<i>p</i>	Point instance from which distance is computed
----	----------	--

Reimplemented in [Polygon](#), [Triangle](#), [Ellipse](#), [Sphere](#), [Circle](#), [Brick](#), and [Rectangle](#).

void getSignedDistance (const Grid &g, Vect< real_t > & d) const

Calculate signed distance to current figure with respect to grid points.

Parameters

in	<i>g</i>	Grid instance
in	<i>d</i>	Vect instance containing calculated distance from each grid index to Figure

Remarks

Vector d doesn't need to be sized before invoking this function

real_t dLine (const Point< real_t > & p, const Point< real_t > & a, const Point< real_t > & b) const

Compute signed distance from a line.

Parameters

in	p	Point for which distance is computed
in	a	First vertex of line
in	b	Second vertex of line

Returns

Signed distance

7.39 FMM2D Class Reference

class for the fast marching 2-D algorithm

Inherits FMM.

Public Member Functions

- [FMM2D](#) (const [Grid](#) &g, [Vect](#)< [real_t](#) > *phi, bool HA)
Constructor.
- void [InitHeap](#) (Heap &NarrowPt)
- void [solve](#) ()
Execute Fast Marching Procedure.
- void [Evaluate](#) (IPoint &pt, int sign)
compute the distance from node to interface
- void [ExtendSpeed](#) ([Vect](#)< [real_t](#) > &F)
Extend the speed function to the whole grid.
- [real_t](#) [check_error](#) ()
Check error by comparing with the gradient norm.

7.39.1 Detailed Description

class for the fast marching 2-D algorithm

This class manages the 2-D Fast Marching method

7.39.2 Constructor & Destructor Documentation

[FMM2D](#) (const [Grid](#) &g, [Vect](#)< [real_t](#) > *phi, bool HA)

Constructor.

Parameters

in	g	Instance of class Grid
in	phi	Vector containing the level set function at grid nodes. The values are 0 on the interface (from which the distance is computed), positive on one side and negative on the other side. They must contain the signed distance on the nodes surrounding the interface but can take any value on other nodes, provided they have the right sign.
in	HA	true if the program must be executed with high accuracy, false otherwise

7.39.3 Member Function Documentation

void InitHeap (Heap & NarrowPt)

Initialize the heap

Parameters

in,out	<i>NarrowPt</i>	Heap containing Narrow points
--------	-----------------	-------------------------------

void Evaluate (IPoint & pt, int sign)

compute the distance from node to interface

Parameters

in	<i>pt</i>	node to treat
in	<i>sign</i>	Node sign

Returns

distance from node pt to interface

void ExtendSpeed (Vect< real.t > & F)

Extend the speed function to the whole grid.

Parameters

in,out	<i>F</i>	Vector containing the speed at interface nodes on input and extended speed to all grid nodes
--------	----------	--

real.t check_error ()

Check error by comparing with the gradient norm.

This function returns discrete L^2 and Max. errors

7.40 FMM3D Class Reference

class for the 3-D fast marching algorithm

Inherits FMM.

Public Member Functions

- [FMM3D](#) (const [Grid](#) &g, [Vect< real.t >](#) *phi, bool HA)
Constructor.
- void [InitHeap](#) (Heap &NarrowPt)
Initialize heap.

- void `solve` ()
Execute Fast Marching Procedure.
- void `Evaluate` (IPoint &pt, int sign)
Compute the distance from node to interface.
- void `ExtendSpeed` (Vect< real_t > &F)
Extend the speed function to the whole grid.
- `real_t check_error` ()
Check error by comparing with the gradient norm.

7.40.1 Detailed Description

class for the 3-D fast marching algorithm

This class manages the 3-D Fast Marching Method

7.40.2 Constructor & Destructor Documentation

FMM3D (const Grid &g, Vect< real_t > *phi, bool HA)

Constructor.

Parameters

in	<i>g</i>	Instance of class Grid
in	<i>phi</i>	Vector containing the level set function at grid nodes. The values are 0 on the interface (from which the distance is computed), positive on one side and negative on the other side. They must contain the signed distance on the nodes surrounding the interface but can take any value on other nodes, provided they have the right sign.
in	<i>HA</i>	true if the program must be executed with high accuracy, false otherwise

7.40.3 Member Function Documentation

void InitHeap (Heap & NarrowPt)

Initialize heap.

Parameters

<i>NarrowPt</i>	
-----------------	--

void Evaluate (IPoint &pt, int sign)

Compute the distance from node to interface.

Parameters

in	<i>pt</i>	node to treat
in	<i>sign</i>	the node's sign

Returns

distance from node `pt` to interface

void ExtendSpeed (Vect< real_t > &F)

Extend the speed function to the whole grid.

Parameters

in,out	F	Vector containing the speed at interface nodes on input and extended speed at whole grid nodes
--------	---	--

real_t check.error ()

Check error by comparing with the gradient norm.

This function prints discrete L^2 and Max. errors

7.41 FMMSolver Class Reference

The Fast Marching Method solver.

Public Member Functions

- **FMMSolver** (const [Grid](#) &g, Vect< [real_t](#) > &phi, bool ha=false)
Constructor.
- **~FMMSolver** ()
Destructor.
- void **solve** ()
Execute the fast marching program.
- void **ExtendSpeed** (Vect< [real_t](#) > &F)
Extend speed by Sethian's method.
- **real_t check.error** ()
Return the consistency error of the method.

7.41.1 Detailed Description

The Fast Marching Method solver.

This class enables computing the signed distance function with respect to an interface. It works in 2-D and 3-D on a structured grid. The class is an interface for client. It points to FMM

7.41.2 Constructor & Destructor Documentation

FMMSolver (const [Grid](#) &g, Vect< [real_t](#) > &phi, bool ha = false)

Constructor.

Parameters

in	g	Instance of class Grid defining the grid on which the distance is computed.
----	---	---

Parameters

in	<i>phi</i>	Vector containing the level set function at grid nodes. The vector entries are 0 on the interface (from which the distance is computed), positive on one side and negative on the other side. They must contain the signed distance on the nodes surrounding the interface. These values identify by linear interpolation the interface position. The vector entries can take any value on other grid nodes, provided they have the right sign.
in	<i>ha</i>	true if high accuracy FMM is active. The high accuracy version is more accurate but requires more accurate values on the nodes neighbouring the interface.

7.41.3 Member Function Documentation

void ExtendSpeed (Vect< real.t > &F)

Extend speed by Sethian's method.

The method consists in calculating a speed F such that its gradient is orthogonal to the gradient of the level set function

Parameters

in,out	<i>F</i>	Speed function where on input the value of the function is meaningful on the interface. On output F contains the extended speed
--------	----------	---

real.t check_error ()

Return the consistency error of the method.

Consistency is measured by computing the discrete value of the norm of the gradient of the signed distance and subtracting the obtained norm from 1. The absolute value of the result is returned.

7.42 Funct Class Reference

A simple class to parse real valued functions.

Public Member Functions

- [Funct](#) ()
Default constructor.
- [Funct](#) (string v)
Constructor for a function of one variable.
- [Funct](#) (string v1, string v2)
Constructor for a function of two variables.
- [Funct](#) (string v1, string v2, string v3)
Constructor for a function of three variables.
- [Funct](#) (string v1, string v2, string v3, string v4)
Constructor for a function of four variables.
- [~Funct](#) ()

Destructor.

- `real.t operator()` (`real.t x`) `const`
Operator () to evaluate the function with one variable x
- `real.t operator()` (`real.t x`, `real.t y`) `const`
Operator () to evaluate the function with two variables x, y
- `real.t operator()` (`real.t x`, `real.t y`, `real.t z`) `const`
Operator () to evaluate the function with three variables x, y, z
- `real.t operator()` (`real.t x`, `real.t y`, `real.t z`, `real.t t`) `const`
Operator () to evaluate the function with four variables x, y, z
- `void operator=` (`string e`)
Operator =.

7.42.1 Detailed Description

A simple class to parse real valued functions.

Functions must have 1, 2, 3 or at most 4 variables.

Warning

Data in the file must be listed in the following order:

```
for x=x_0,...,x_I
  for y=y_0,...,y_J
    for z=z_0,...,z_K
      read v(x,y,z)
```

7.42.2 Constructor & Destructor Documentation

Funct (string v)

Constructor for a function of one variable.

Parameters

in	v	Name of the variable
----	-----	----------------------

Funct (string $v1$, string $v2$)

Constructor for a function of two variables.

Parameters

in	$v1$	Name of the first variable
in	$v2$	Name of the second variable

Funct (string $v1$, string $v2$, string $v3$)

Constructor for a function of three variables.

Parameters

in	$v1$	Name of the first variable
----	------	----------------------------

Parameters

in	<i>v2</i>	Name of the second variable
in	<i>v3</i>	Name of the third variable

Func(*string v1*, *string v2*, *string v3*, *string v4*)

Constructor for a function of four variables.

Parameters

in	<i>v1</i>	Name of the first variable
in	<i>v2</i>	Name of the second variable
in	<i>v3</i>	Name of the third variable
in	<i>v4</i>	Name of the fourth variable

7.42.3 Member Function Documentation

void operator=(*string e*)

Operator =.

Define the function by an algebraic expression following regexp rules

Parameters

in	<i>e</i>	Algebraic expression defining the function.
----	----------	---

7.43 Gauss Class Reference

Calculate data for Gauss integration.

Public Member Functions

- [Gauss](#) ()
Default constructor.
- [Gauss](#) (size_t np)
Constructor using number of [Gauss](#) points.
- void [setTriangle](#) (LocalVect< [real_t](#), 7 > &*w*, LocalVect< [Point](#)< [real_t](#) >, 7 > &*x*)
Choose integration on triangle (7-point formula)
- [real_t](#) *x* (size_t *i*) const
*Return coordinate of *i*-th Gauss-Legendre point.*
- const [Point](#)< [real_t](#) > & *xt* (size_t *i*) const
Return coordinates of points in the reference triangle.
- [real_t](#) *w* (size_t *i*) const
*Return weight of *i*-th Gauss-Legendre point.*

7.43.1 Detailed Description

Calculate data for Gauss integration.

7.43.2 Member Function Documentation

void setTriangle (LocalVect< real_t, 7 > & w, LocalVect< Point< real_t >, 7 > & x)

Choose integration on triangle (7-point formula)

If this is not selected, [Gauss](#) integration formula on $[-1, 1]$ is calculated.

7.44 Grid Class Reference

To manipulate structured grids.

Public Member Functions

- [Grid](#) ()
Construct a default grid with 10 intervals in each direction.
- [Grid](#) (real_t xm, real_t xM, size_t npX)
Construct a 1-D structured grid given its extremal coordinates and number of intervals.
- [Grid](#) (real_t xm, real_t xM, real_t ym, real_t yM, size_t npX, size_t npY)
Construct a 2-D structured grid given its extremal coordinates and number of intervals.
- [Grid](#) (Point< real_t > m, Point< real_t > M, size_t npX, size_t npY)
Construct a 2-D structured grid given its extremal coordinates and number of intervals.
- [Grid](#) (real_t xm, real_t xM, real_t ym, real_t yM, real_t zm, real_t zM, size_t npX, size_t npY, size_t npZ)
Construct a 3-D structured grid given its extremal coordinates and number of intervals.
- [Grid](#) (Point< real_t > m, Point< real_t > M, size_t npX, size_t npY, size_t npZ)
Construct a 3-D structured grid given its extremal coordinates and number of intervals.
- void [setXMin](#) (const Point< real_t > &x)
Set min. coordinates of the domain.
- void [setXMax](#) (const Point< real_t > &x)
- void [setDomain](#) (real_t xmin, real_t xmax)
Set Dimensions of the domain: 1-D case.
- void [setDomain](#) (real_t xmin, real_t xmax, real_t ymin, real_t ymax)
Set Dimensions of the domain: 2-D case.
- void [setDomain](#) (real_t xmin, real_t xmax, real_t ymin, real_t ymax, real_t zmin, real_t zmax)
Set Dimensions of the domain: 3-D case.
- void [setDomain](#) (Point< real_t > xmin, Point< real_t > xmax)
Set Dimensions of the domain: 3-D case.
- const Point< real_t > & [getXMin](#) () const
Return min. Coordinates of the domain.
- const Point< real_t > & [getXMax](#) () const
Return max. Coordinates of the domain.
- void [setN](#) (size_t nx, size_t ny=0, size_t nz=0)
Set number of grid intervals in the x, y and z-directions.
- size_t [getNx](#) () const
Return number of grid intervals in the x-direction.

- `size_t getNy () const`
Return number of grid intervals in the y-direction.
- `size_t getNz () const`
Return number of grid intervals in the z-direction.
- `real_t getHx () const`
Return grid size in the x-direction.
- `real_t getHy () const`
Return grid size in the y-direction.
- `real_t getHz () const`
Return grid size in the z-direction.
- `Point< real_t > getCoord (size_t i) const`
Return coordinates a point with label i in a 1-D grid.
- `Point< real_t > getCoord (size_t i, size_t j) const`
Return coordinates a point with label (i, j) in a 2-D grid.
- `Point< real_t > getCoord (size_t i, size_t j, size_t k) const`
Return coordinates a point with label (i, j, k) in a 3-D grid.
- `real_t getX (size_t i) const`
Return x-coordinate of point with index i
- `real_t getY (size_t j) const`
Return y-coordinate of point with index j
- `real_t getZ (size_t k) const`
Return z-coordinate of point with index k
- `Point2D< real_t > getXY (size_t i, size_t j) const`
Return coordinates of point with indices (i, j)
- `Point< real_t > getXYZ (size_t i, size_t j, size_t k) const`
Return coordinates of point with indices (i, j, k)
- `real_t getCenter (size_t i) const`
Return coordinates of center of a 1-D cell with indices i, i+1
- `Point< real_t > getCenter (size_t i, size_t j) const`
Return coordinates of center of a 2-D cell with indices (i, j), (i+1, j), (i+1, j+1), (i, j+1)
- `Point< real_t > getCenter (size_t i, size_t j, size_t k) const`
Return coordinates of center of a 3-D cell with indices (i, j, k), (i+1, j, k), (i+1, j+1, k), (i, j+1, k), (i, j, k+1), (i+1, j, k+1), (i+1, j+1, k+1), (i, j+1, k+1)
- `void setCode (string exp, int code)`
Set a code for some grid points.
- `void setCode (int side, int code)`
Set a code for grid points on sides.
- `int getCode (int side) const`
Return code for a side number.
- `int getCode (size_t i, size_t j) const`
Return code for a grid point.
- `int getCode (size_t i, size_t j, size_t k) const`
Return code for a grid point.
- `size_t getDim () const`
Return space dimension.
- `void Deactivate (size_t i)`
Change state of a cell from active to inactive (1-D grid)

- void [Deactivate](#) (size_t i, size_t j)
Change state of a cell from active to inactive (2-D grid)
- void [Deactivate](#) (size_t i, size_t j, size_t k)
Change state of a cell from active to inactive (2-D grid)
- int [isActive](#) (size_t i) const
Say if cell is active or not (1-D grid)
- int [isActive](#) (size_t i, size_t j) const
Say if cell is active or not (2-D grid)
- int [isActive](#) (size_t i, size_t j, size_t k) const
Say if cell is active or not (3-D grid)


7.44.1 Detailed Description

To manipulate structured grids.

7.45 HelmholtzBT3 Class Reference

Builds finite element arrays for Helmholtz equations in a bounded media using 3-Node triangles.

Inheritance diagram for HelmholtzBT3:

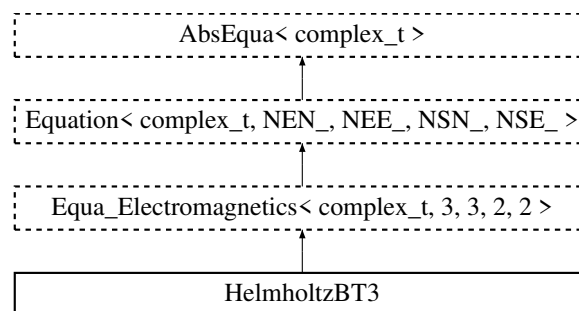

Public Member Functions

- [HelmholtzBT3](#) ()
Default Constructor.
- [HelmholtzBT3](#) ([Element](#) *el)
Constructor using element data.
- [HelmholtzBT3](#) ([Side](#) *sd)
Constructor using side data.
- [~HelmholtzBT3](#) ()
Destructor.
- void [LHS](#) ([real_t](#) wave_nb)
Add element Left-Hand Side.
- void [BoundaryRHS](#) ([UserData](#)< [complex_t](#) > &ud)
Add element Right-Hand Side using a UserData instance.
- void [updateBC](#) (const [Element](#) &el, const [Vect](#)< [complex_t](#) > &bc)
Update Right-Hand side by taking into account essential boundary conditions.
- void [updateBC](#) (const [Vect](#)< [complex_t](#) > &bc)

- Update Right-Hand side by taking into account essential boundary conditions.*

 - void [DiagBC](#) (int dof_type=NODE.DOF, int dof=0)

Update element matrix to impose bc by diagonalization technique.

 - void [LocalNodeVector](#) ([Vect](#)< [complex_t](#) > &b)

Localize Element Vector from a Vect instance.

 - void [ElementNodeVector](#) (const [Vect](#)< [complex_t](#) > &b, [LocalVect](#)< [complex_t](#), NEE_ > &be)

Localize Element Vector from a Vect instance.

 - void [ElementNodeVector](#) (const [Vect](#)< [complex_t](#) > &b, [LocalVect](#)< [complex_t](#), NEN_ > &be, int dof)

Localize Element Vector from a Vect instance.

 - void [ElementNodeVectorSingleDOF](#) (const [Vect](#)< [complex_t](#) > &b, [LocalVect](#)< [complex_t](#), NEN_ > &be)

Localize Element Vector from a Vect instance.

 - void [ElementSideVector](#) (const [Vect](#)< [complex_t](#) > &b, [LocalVect](#)< [complex_t](#), NSE_ > &be)

Localize Element Vector from a Vect instance.

 - void [ElementVector](#) (const [Vect](#)< [complex_t](#) > &b, int dof_type=NODE.FIELD, int flag=0)

Localize Element Vector.

 - void [SideVector](#) (const [Vect](#)< [complex_t](#) > &b)

Localize Side Vector.

 - void [ElementNodeCoordinates](#) ()

Localize coordinates of element nodes.

 - void [SideNodeCoordinates](#) ()

Localize coordinates of side nodes.

 - void [ElementAssembly](#) ([Matrix](#)< [complex_t](#) > *A)

Assemble element matrix into global one.

 - void [ElementAssembly](#) ([PETScMatrix](#)< [complex_t](#) > &A)

Assemble element matrix into global one.

 - void [ElementAssembly](#) ([PETScVect](#)< [complex_t](#) > &b)

Assemble element right-hand side vector into global one.

 - void [ElementAssembly](#) ([BMatrix](#)< [complex_t](#) > &A)

Assemble element matrix into global one.

 - void [ElementAssembly](#) ([SkSMatrix](#)< [complex_t](#) > &A)

Assemble element matrix into global one.

 - void [ElementAssembly](#) ([SkMatrix](#)< [complex_t](#) > &A)

Assemble element matrix into global one.

 - void [ElementAssembly](#) ([SpMatrix](#)< [complex_t](#) > &A)

Assemble element matrix into global one.

 - void [ElementAssembly](#) ([TrMatrix](#)< [complex_t](#) > &A)

Assemble element matrix into global one.

 - void [ElementAssembly](#) ([Vect](#)< [complex_t](#) > &v)

Assemble element vector into global one.

 - void [SideAssembly](#) ([PETScMatrix](#)< [complex_t](#) > &A)

Assemble side matrix into global one.

 - void [SideAssembly](#) ([PETScVect](#)< [complex_t](#) > &b)

Assemble side right-hand side vector into global one.

 - void [SideAssembly](#) ([Matrix](#)< [complex_t](#) > *A)

- Assemble side (edge or face) matrix into global one.*

 - void `SideAssembly` (`SkMatrix`< `complex.t` > &`A`)
- Assemble side (edge or face) matrix into global one.*

 - void `SideAssembly` (`SkMatrix`< `complex.t` > &`A`)
- Assemble side (edge or face) matrix into global one.*

 - void `SideAssembly` (`SpMatrix`< `complex.t` > &`A`)
- Assemble side (edge or face) matrix into global one.*

 - void `SideAssembly` (`Vect`< `complex.t` > &`v`)
- Assemble side (edge or face) vector into global one.*

 - void `DGElementAssembly` (`Matrix`< `complex.t` > *`A`)
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*

 - void `DGElementAssembly` (`SkMatrix`< `complex.t` > &`A`)
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*

 - void `DGElementAssembly` (`SkMatrix`< `complex.t` > &`A`)
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*

 - void `DGElementAssembly` (`SpMatrix`< `complex.t` > &`A`)
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*

 - void `DGElementAssembly` (`TrMatrix`< `complex.t` > &`A`)
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*

 - void `AxbAssembly` (const `Element` &`el`, const `Vect`< `complex.t` > &`x`, `Vect`< `complex.t` > &`b`)
- Assemble product of element matrix by element vector into global vector.*

 - void `AxbAssembly` (const `Side` &`sd`, const `Vect`< `complex.t` > &`x`, `Vect`< `complex.t` > &`b`)
- Assemble product of side matrix by side vector into global vector.*

 - `size_t` `getNbNodes` () const
- Return number of element nodes.*

 - `size_t` `getNbEq` () const
- Return number of element equations.*

 - void `setInitialSolution` (const `Vect`< `complex.t` > &`u`)
- Set initial solution (previous time step)*

 - `real.t` `setMaterialProperty` (const string &`exp`, const string &`prop`)
- Define a material property by an algebraic expression.*

 - void `setMesh` (`Mesh` &`m`)
- Define mesh and renumber DOFs after removing imposed ones.*

 - `Mesh` & `getMesh` () const
- Return reference to Mesh instance.*

 - `LinearSolver`< `complex.t` > & `getLinearSolver` ()
- Return reference to linear solver instance.*

 - void `setSolver` (`Iteration` `ls`, `Preconditioner` `pc`=`IDENT_PREC`)
- Choose solver for the linear system.*

 - int `SolveLinearSystem` (`Matrix`< `complex.t` > *`A`, `Vect`< `complex.t` > &`b`, `Vect`< `complex.t` > &`x`)
- Solve the linear system.*

Public Attributes

- [LocalMatrix](#)< [complex_t](#), NEE_, NEE_ > [eMat](#)
LocalMatrix instance containing local matrix associated to current element.
- [LocalMatrix](#)< [complex_t](#), NSE_, NSE_ > [sMat](#)
LocalMatrix instance containing local matrix associated to current side.
- [LocalVect](#)< [complex_t](#), NEE_ > [ePrev](#)
LocalVect instance containing local vector associated to current element.
- [LocalVect](#)< [complex_t](#), NEE_ > [eRHS](#)
LocalVect instance containing local right-hand side vector associated to current element.
- [LocalVect](#)< [complex_t](#), NEE_ > [eRes](#)
LocalVect instance containing local residual vector associated to current element.
- [LocalVect](#)< [complex_t](#), NSE_ > [sRHS](#)
LocalVect instance containing local right-hand side vector associated to current side.

Protected Member Functions

- void [MagneticPermeability](#) (const [real_t](#) &mu)
Set (constant) magnetic permeability.
- void [MagneticPermeability](#) (const string &exp)
Set magnetic permeability given by an algebraic expression.
- void [ElectricConductivity](#) (const [real_t](#) &sigma)
Set (constant) electric conductivity.
- void [ElectricConductivity](#) (const string &exp)
set electric conductivity given by an algebraic expression
- void [ElectricResistivity](#) (const [real_t](#) &rho)
Set (constant) electric resistivity.
- void [ElectricResistivity](#) (const string &exp)
Set electric resistivity given by an algebraic expression.
- void [setMaterial](#) ()
Set material properties.
- void [Init](#) (const [Element](#) *el)
Set element arrays to zero.
- void [Init](#) (const [Side](#) *sd)
Set side arrays to zero.

7.45.1 Detailed Description

Builds finite element arrays for Helmholtz equations in a bounded media using 3-Node triangles.
Problem being formulated in time harmonics, the solution is complex valued.

7.45.2 Member Function Documentation

void updateBC (const [Element](#) &el, const [Vect](#)< [complex_t](#) > &bc) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>el</i>	Reference to current element instance
in	<i>bc</i>	Vector that contains imposed values at all DOFs

void updateBC (const Vect< complex.t > & bc) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>bc</i>	Vector that contains imposed values at all DOFs
----	-----------	---

Remarks

The current element is pointed by *_theElement*

void DiagBC (int dof.type = NODE_DOF, int dof = 0) [inherited]

Update element matrix to impose bc by diagonalization technique.

Parameters

in	<i>dof.type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • NODE_FIELD, DOFs are supported by nodes [Default] • ELEMENT_FIELD, DOFs are supported by elements • SIDE_FIELD, DOFs are supported by sides
in	<i>dof</i>	DOF setting: <ul style="list-style-type: none"> • = 0, All DOFs are taken into account [Default] • != 0, Only DOF No. dof is handled in the system

void LocalNodeVector (Vect< complex.t > & b) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Reference to global vector to be localized. The resulting local vector can be accessed by attribute <i>ePrev</i> . This member function is to be used if a constructor with <i>Element</i> was invoked.
----	----------	---

void ElementNodeVector (const Vect< complex.t > & b, LocalVect< complex.t, NEE_ > & be) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

All degrees of freedom are transferred to the local vector

void ElementNodeVector (const Vect< complex.t > & *b*, LocalVect< complex.t , NEN_ > & *be*, int *dof*) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.
in	<i>dof</i>	Degree of freedom to transfer to the local vector

Remarks

Only yhe dega dof is transferred to the local vector

void ElementNodeVectorSingleDOF (const Vect< complex.t > & *b*, LocalVect< complex.t , NEN_ > & *be*) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

Vector *b* is assumed to contain only one degree of freedom by node.

void ElementSideVector (const Vect< complex.t > & *b*, LocalVect< complex.t , NSE_ > & *be*) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is

void ElementVector (const Vect< complex.t > & *b*, int *dof_type* = *NODE_FIELD*, int *flag* = 0) [inherited]

Localize Element Vector.

Parameters

in	<i>b</i>	Global vector to be localized
in	<i>dof_type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • <code>NODE_FIELD</code>, DOFs are supported by nodes [Default] • <code>ELEMENT_FIELD</code>, DOFs are supported by elements • <code>SIDE_FIELD</code>, DOFs are supported by sides
in	<i>flag</i>	Option to set: <ul style="list-style-type: none"> • <code>= 0</code>, All DOFs are taken into account [Default] • <code>!= 0</code>, Only DOF number <code>dof</code> is handled in the system The resulting local vector can be accessed by attribute <code>ePrev</code> .

Remarks

This member function is to be used if a constructor with `Element` was invoked. It uses the `Element` pointer `_theElement`

void SideVector (const Vect< complex.t > & b) [inherited]

Localize Side Vector.

Parameters

in	<i>b</i>	Global vector to be localized <ul style="list-style-type: none"> • <code>NODE_FIELD</code>, DOFs are supported by nodes [default] • <code>ELEMENT_FIELD</code>, DOFs are supported by elements • <code>SIDE_FIELD</code>, DOFs are supported by sides The resulting local vector can be accessed by attribute <code>ePrev</code> .
----	----------	---

Remarks

This member function is to be used if a constructor with `Side` was invoked. It uses the `Side` pointer `_theSide`

void ElementNodeCoordinates () [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array `_x[0]`, `_x[1]`, ... which are instances of class [Point<real.t>](#)

Remarks

This member function uses the `Side` pointer `_theSide`

void SideNodeCoordinates () [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array `_x[0]`, `_x[1]`, ... which are instances of class [Point<real.t>](#)

Remarks

This member function uses the Element pointer `_theElement`

void ElementAssembly (Matrix< complex.t > * A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScMatrix< complex.t > & A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Reference to global matrix
----------	----------------------------

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScVect< complex.t > & b) [inherited]

Assemble element right-hand side vector into global one.

Parameters

<i>b</i>	Reference to global right-hand side vector
----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (BMatrix< complex.t > & A) [inherited]

Assemble element matrix into global one.

Parameters

A	Global matrix stored as a BMatrix instance
-----	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkSMatrix< complex.t > &A) [inherited]

Assemble element matrix into global one.

Parameters

A	Global matrix stored as an SkSMatrix instance
-----	---

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkMatrix< complex.t > &A) [inherited]

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an SkMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SpMatrix< complex.t > &A) [inherited]

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an SpMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (TrMatrix< complex.t > &A) [inherited]

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an TrMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable theElement

void ElementAssembly (Vect< complex.t > & v) [inherited]

Assemble element vector into global one.

Parameters

in	v	Global vector (Vect instance)
----	-----	-------------------------------

Warning

The element pointer is given by the global variable theElement

void SideAssembly (PETScMatrix< complex.t > & A) [inherited]

Assemble side matrix into global one.

Parameters

A	Reference to global matrix
-----	----------------------------

Warning

The side pointer is given by the global variable theSide

void SideAssembly (PETScVect< complex.t > & b) [inherited]

Assemble side right-hand side vector into global one.

Parameters

b	Reference to global right-hand side vector
-----	--

Warning

The side pointer is given by the global variable theSide

void SideAssembly (Matrix< complex.t > * A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

<i>A</i>	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
----------	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SkSMatrix< complex.t > &A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an SkSMatrix instance
----	----------	---

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SkMatrix< complex.t > &A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an SkMatrix instance
----	----------	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SpMatrix< complex.t > &A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an SpMatrix instance
----	----------	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (Vect< complex.t > &v) [inherited]

Assemble side (edge or face) vector into global one.

Parameters

in	v	Global vector (Vect instance)
----	-----	-------------------------------

Warning

The side pointer is given by the global variable `theSide`

void DGElementAssembly (Matrix< complex.t > * A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
---	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SkSMatrix< complex.t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

A	Global matrix stored as an SkSMatrix instance
---	---

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SkMatrix< complex.t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SpMatrix< complex.t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	A	Global matrix stored as an SpMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (TrMatrix< complex.t > &A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	A	Global matrix stored as an TrMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void AxbAssembly (const Element &el, const Vect< complex.t > &x, Vect< complex.t > &b) [inherited]

Assemble product of element matrix by element vector into global vector.

Parameters

in	el	Reference to Element instance
in	x	Global vector to multiply by (Vect instance)
out	b	Global vector to add (Vect instance)

void AxbAssembly (const Side &sd, const Vect< complex.t > &x, Vect< complex.t > &b) [inherited]

Assemble product of side matrix by side vector into global vector.

Parameters

in	sd	Reference to Side instance
in	x	Global vector to multiply by (Vect instance)
out	b	Global vector (Vect instance)

real.t setMaterialProperty (const string &exp, const string &prop) [inherited]

Define a material property by an algebraic expression.

Parameters

in	<i>exp</i>	Algebraic expression
in	<i>prop</i>	Property name

Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

Mesh& getMesh () const [inherited]

Return reference to Mesh instance.

Returns

Reference to Mesh instance

void setSolver (Iteration *ls*, Preconditioner *pc* = *IDENT_PREC*) [inherited]

Choose solver for the linear system.

Parameters

in	<i>ls</i>	<p>Solver of the linear system. To choose among the enumerated values: <i>DIRECT_SOLVER</i>, <i>CG_SOLVER</i>, <i>GMRES_SOLVER</i></p> <ul style="list-style-type: none"> • <i>DIRECT_SOLVER</i>, Use a facorization solver [default] • <i>CG_SOLVER</i>, Conjugate Gradient iterative solver • <i>CGS_SOLVER</i>, Squared Conjugate Gradient iterative solver • <i>BICG_SOLVER</i>, BiConjugate Gradient iterative solver • <i>BICG_STAB_SOLVER</i>, BiConjugate Gradient Stabilized iterative solver • <i>GMRES_SOLVER</i>, GMRES iterative solver • <i>QMR_SOLVER</i>, QMR iterative solver
in	<i>pc</i>	<p>Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:</p> <ul style="list-style-type: none"> • <i>IDENT_PREC</i>, Identity preconditioner (no preconditioning [default]) • <i>DIAG_PREC</i>, Diagonal preconditioner • <i>ILU_PREC</i>, Incomplete LU factorization preconditioner

```
int SolveLinearSystem ( Matrix< complex.t > * A, Vect< complex.t > & b, Vect< complex.t > & x ) [inherited]
```

Solve the linear system.

Parameters

in	<i>A</i>	Pointer to matrix of the system (Instance of class SpMatrix)
in	<i>b</i>	Vector containing right-hand side
in,out	<i>x</i>	Vector containing initial guess of solution on input, actual solution on output

7.45.3 Member Data Documentation

```
LocalVect<complex.t,NEE_> ePrev [inherited]
```


LocalVect instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

7.46 Hexa8 Class Reference

Defines a three-dimensional 8-node hexahedral finite element using Q1-isoparametric interpolation.

Inheritance diagram for Hexa8:

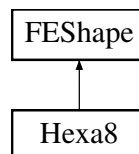

Public Member Functions

- [Hexa8](#) ()
Default Constructor.
- [Hexa8](#) (const [Element](#) *el)
Constructor when data of [Element](#) el are given.
- [~Hexa8](#) ()
Destructor.
- void [setLocal](#) (const [Point](#)< [real.t](#) > &cs)
Initialize local point coordinates in element.
- [Point](#)< [real.t](#) > [DSh](#) (size_t i)
Return x, y and z partial derivatives of shape function of node i at a given point.
- void [atGauss1](#) ([LocalVect](#)< [Point](#)< [real.t](#) >, 8 > &dsh, [real.t](#) &w)
Calculate shape function derivatives and integration weights for 1-point [Gauss](#) rule.
- void [atGauss2](#) ([LocalMatrix](#)< [Point](#)< [real.t](#) >, 8, 8 > &dsh, [LocalVect](#)< [real.t](#), 8 > &w)
Calculate shape function derivatives and integration weights for 2x2x2-point [Gauss](#) rule.
- [real.t](#) [getMaxEdgeLength](#) () const
Return maximal edge length.

- `real_t getMinEdgeLength ()` const
Return minimal edge length.
- `real_t Sh (size_t i)` const
Return shape function of node i at given point.
- `real_t Sh (size_t i, Point< real_t > s)` const
Calculate shape function of node i at a given point s .
- `Point< real_t > DSh (size_t i)` const
Return derivatives of shape function of node i at a given point.
- `real_t getDet ()` const
Return determinant of jacobian.
- `Point< real_t > getCenter ()` const
Return coordinates of center of element.
- `Point< real_t > getLocalPoint ()` const
Localize a point in the element.
- `Point< real_t > getLocalPoint (const Point< real_t > &s)` const
Localize a point in the element.

7.46.1 Detailed Description

Defines a three-dimensional 8-node hexahedral finite element using Q1-isoparametric interpolation.

The reference element is the cube $[-1, 1] \times [-1, 1] \times [-1, 1]$. The user must take care to the fact that determinant of jacobian and other quantities depend on the point in the reference element where they are calculated. For this, before any utilization of shape functions or jacobian, function `getLocal(s)` must be invoked.

7.46.2 Member Function Documentation

void setLocal (const Point< real_t > & s)

Initialize local point coordinates in element.

Parameters

in	s	Point in the reference element This function computes jacobian, shape functions and their partial derivatives at s. Other member functions only return these values.
----	---	--

Point<real_t> DSh (size_t i)

Return x, y and z partial derivatives of shape function of node i at a given point.

Member function `setLocal` must have been called before in order to calculate relevant quantities.

void atGauss1 (LocalVect< Point< real_t >, 8 > & dsh, real_t & w)

Calculate shape function derivatives and integration weights for 1-point Gauss rule.

Parameters

in	dsh	Vector of shape function derivatives at the Gauss point
----	-----	---

Parameters

in	<i>w</i>	Weight of integration formula at Gauss point
----	----------	--

void atGauss2 (LocalMatrix< Point< real_t >, 8, 8 > & dsh, LocalVect< real_t, 8 > & w)

Calculate shape function derivatives and integration weights for 2x2x2-point [Gauss](#) rule.

Parameters

in	<i>dsh</i>	Vector of shape function derivatives at the Gauss points
in	<i>w</i>	Weights of integration formula at Gauss points

real_t Sh (size_t i, Point< real_t > s) const [inherited]

Calculate shape function of node *i* at a given point *s*.

Parameters

in	<i>i</i>	Local node label
in	<i>s</i>	Point in the reference triangle where the shape function is evaluated

Point<real_t> DSh (size_t i) const [inherited]

Return derivatives of shape function of node *i* at a given point.

If the transformation (Reference element -> Actual element) is not affine, member function `setLocal()` must have been called before in order to calculate relevant quantities.

Parameters

in	<i>i</i>	Partial derivative index (1, 2 or 3)
----	----------	--------------------------------------

real_t getDet () const [inherited]

Return determinant of jacobian.

If the transformation (Reference element -> Actual element) is not affine, member function `setLocal()` must have been called before in order to calculate relevant quantities.

Point<real_t> getLocalPoint () const [inherited]

Localize a point in the element.

Return actual coordinates in the reference element. If the transformation (Reference element -> Actual element) is not affine, member function `setLocal()` must have been called before in order to calculate relevant quantities.

Point<real_t> getLocalPoint (const Point< real_t > & s) const [inherited]


Localize a point in the element.

Return actual coordinates where s are coordinates in the reference element.

7.47 ICPG1D Class Reference

Class to solve the Inviscid compressible fluid flows (Euler equations) for perfect gas in 1-D.

Inheritance diagram for ICPG1D:

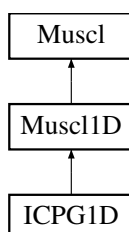

Public Types

Public Member Functions

- **ICPG1D** (**Mesh** &ms)
*Constructor using **Mesh** instance.*
- **ICPG1D** (**Mesh** &ms, **Vect**< **real.t** > &r, **Vect**< **real.t** > &v, **Vect**< **real.t** > &p)
Constructor using mesh and initial data.
- **~ICPG1D** ()
Destructor.
- void **setReconstruction** ()
*Set reconstruction from class **Muscl**.*
- **real.t** **runOneTimeStep** ()
Advance one time step.
- void **Forward** (const **Vect**< **real.t** > &flux, **Vect**< **real.t** > &field)
Add flux to field.
- void **setSolver** (**SolverType** solver)
Choose solver type.
- void **setGamma** (**real.t** gamma)
Set value of constant Gamma for gases.
- void **setCv** (**real.t** Cv)
Set value of Cv (specific heat at constant volume)
- void **setCp** (**real.t** Cp)
Set value of Cp (specific heat at constant pressure)
- void **setKappa** (**real.t** Kappa)
Set value of constant Kappa.
- **real.t** **getGamma** () const
Return value of constant Gamma.
- **real.t** **getCv** () const
Return value of Cv (specific heat at constant volume)
- **real.t** **getCp** () const
Return value of Cp (specific heat at constant pressure)

- `real_t getKappa () const`
Return value of constant Kappa.
- `void getMomentum (Vect< real_t > &m) const`
Get vector of momentum at elements.
- `void getInternalEnergy (Vect< real_t > &ie) const`
Get vector of internal energy at elements.
- `void getTotalEnergy (Vect< real_t > &te) const`
Get vector of total energy at elements.
- `void getSoundSpeed (Vect< real_t > &s) const`
Get vector of sound speed at elements.
- `void getMach (Vect< real_t > &m) const`
Get vector of elementwise Mach number.
- `void setInitialCondition_shock_tube (const LocalVect< real_t, 3 > &BcG, const LocalVect< real_t, 3 > &BcD, real_t x0)`
Initial condition corresponding to the shock tube.
- `void setInitialCondition (const LocalVect< real_t, 3 > &u)`
A constant initial condition.
- `void setBC (const Side &sd, real_t u)`
Assign a boundary condition as a constant to a given side.
- `void setBC (int code, real_t a)`
Assign a boundary condition value.
- `void setBC (real_t a)`
Assign a boundary condition value.
- `void setBC (const Side &sd, const LocalVect< real_t, 3 > &u)`
Assign a Dirichlet boundary condition vector.
- `void setBC (int code, const LocalVect< real_t, 3 > &U)`
Assign a Dirichlet boundary condition vector.
- `void setBC (const LocalVect< real_t, 3 > &u)`
Assign a Dirichlet boundary condition vector.
- `void setInOutflowBC (const Side &sd, const LocalVect< real_t, 3 > &u)`
Impose a constant inflow or outflow boundary condition on a given side.
- `void setInOutflowBC (int code, const LocalVect< real_t, 3 > &u)`
Impose a constant inflow or outflow boundary condition on sides with a given code.
- `void setInOutflowBC (const LocalVect< real_t, 3 > &u)`
Impose a constant inflow or outflow boundary condition on boundary sides.
- `real_t getMeanLength () const`
Return mean length.
- `real_t getMaximumLength () const`
Return maximal length.
- `real_t getMinimumLength () const`
Return mimal length.
- `real_t getTauLim () const`
Return mean length.
- `void print_mesh_stat ()`
Output mesh information.
- `void setTimeStep (real_t dt)`
Assign time step value.

- `real_t getTimeStep () const`
Return time step value.
- `void setCFL (real_t CFL)`
Assign CFL value.
- `real_t getCFL () const`
Return CFL value.
- `void setReferenceLength (real_t dx)`
Assign reference length value.
- `real_t getReferenceLength () const`
Return reference length.
- `Mesh & getMesh () const`
*Return reference to *Mesh* instance.*
- `void setVerbose (int v)`
Set verbosity parameter.
- `bool setReconstruction (const Vect< real_t > &U, Vect< real_t > &LU, Vect< real_t > &RU, size_t dof)`
*Function to reconstruct by the *Muscl* method.*
- `void setMethod (const Method &s)`
Choose a flux solver.
- `void setSolidZoneCode (int c)`
Choose a code for solid zone.
- `bool getSolidZone () const`
Return flag for presence of solid zones.
- `int getSolidZoneCode () const`
Return code of solid zone, 0 if this one is not present.
- `void setLimiter (Limiter l)`
Choose a flux limiter.

7.47.1 Detailed Description

Class to solve the Inviscid compressible fluid flows (Euler equations) for perfect gas in 1-D.
Solution method is a second-order MUSCL Finite Volume scheme

7.47.2 Member Enumeration Documentation

enum Method [inherited]

Enumeration for flux choice.

Enumerator

FIRST_ORDER_METHOD First Order upwind method

MULTI_SLOPE_Q_METHOD Multislope Q method

MULTI_SLOPE_M_METHOD Multislope M method

enum Limiter [inherited]

Enumeration of flux limiting methods.

Enumerator

MINMOD_LIMITER MinMod limiter
VANLEER_LIMITER Van Leer limiter
SUPERBEE_LIMITER Superbee limiter
VANALBADA_LIMITER Van Albada limiter
MAX_LIMITER Max limiter

enum SolverType [inherited]

Enumeration of various solvers for the Riemann problem.

Enumerator

ROE_SOLVER Roe solver
VFROE_SOLVER Finite Volume Roe solver
LF_SOLVER LF solver
RUSANOV_SOLVER Rusanov solver
HLL_SOLVER HLL solver
HLLC_SOLVER HLLC solver
MAX_SOLVER Max solver

7.47.3 Constructor & Destructor Documentation

ICPG1D (*Mesh* & *ms*, *Vect*< *real_t* > & *r*, *Vect*< *real_t* > & *v*, *Vect*< *real_t* > & *p*)

Constructor using mesh and initial data.

Parameters

in	<i>ms</i>	Reference to Mesh instance
in	<i>r</i>	Vector containing initial (elementwise) density
in	<i>v</i>	Vector containing initial (elementwise) velocity
in	<i>p</i>	Vector containing initial (elementwise) pressure

7.47.4 Member Function Documentation

void Forward (*const Vect*< *real_t* > & *flux*, *Vect*< *real_t* > & *field*)

Add flux to field.

If this function is used, the user must call `getFlux` himself

Parameters

in	<i>flux</i>	Vector containing fluxes at sides (points)
out	<i>field</i>	Vector containing solution vector

void getMomentum (Vect< real_t > & *m*) const

Get vector of momentum at elements.

Parameters

in,out	<i>m</i>	Vect instance that contains on output element momentum
--------	----------	--

void getInternalEnergy (Vect< real_t > & *ie*) const

Get vector of internal energy at elements.

Parameters

in,out	<i>ie</i>	Vect instance that contains on output element internal energy
--------	-----------	---

void getTotalEnergy (Vect< real_t > & *te*) const

Get vector of total energy at elements.

Parameters

in,out	<i>te</i>	Vect instance that contains on output element total energy
--------	-----------	--

void getSoundSpeed (Vect< real_t > & *s*) const

Get vector of sound speed at elements.

Parameters

in,out	<i>s</i>	Vect instance that contains on output element sound speed
--------	----------	---

void getMach (Vect< real_t > & *m*) const

Get vector of elementwise Mach number.

Parameters

in,out	<i>m</i>	Vect instance that contains on output element Mach number
--------	----------	---

void setInitialCondition (const LocalVect< real_t, 3 > & *u*)

A constant initial condition.

Parameters

in	<i>u</i>	LocalVect instance containing density, velocity and pressure
----	----------	--

void setBC (const Side & *sd*, real_t *u*)

Assign a boundary condition as a constant to a given side.

Parameters

in	<i>sd</i>	Side to which the value is assigned
in	<i>u</i>	Value to assign

void setBC (int *code*, real_t *a*)

Assign a boundary condition value.

Parameters

in	<i>code</i>	Code value to which boundary condition is assigned
in	<i>a</i>	Value to assign to sides that have code <i>code</i>

void setBC (real_t *a*)

Assign a boundary condition value.

Parameters

in	<i>a</i>	Value to assign to all boundary sides
----	----------	---------------------------------------

void setBC (const Side & *sd*, const LocalVect< real_t, 3 > & *u*)

Assign a Dirichlet boundary condition vector.

Parameters

in	<i>sd</i>	Side instance to which the values are assigned
in	<i>u</i>	LocalVect instance that contains values to assign to the side

void setBC (int *code*, const LocalVect< real_t, 3 > & *U*)

Assign a Dirichlet boundary condition vector.

Parameters

in	<i>code</i>	Side code for which the values are assigned
in	<i>U</i>	LocalVect instance that contains values to assign to sides with code <i>code</i>

void setBC (const LocalVect< real.t, 3 > & *u*)

Assign a Dirichlet boundary condition vector.

Parameters

in	<i>u</i>	LocalVect instance that contains values to assign to all boundary sides
----	----------	---

void setInOutflowBC (const Side & *sd*, const LocalVect< real.t, 3 > & *u*)

Impose a constant inflow or outflow boundary condition on a given side.

Parameters

in	<i>sd</i>	Instance of Side on which the condition is prescribed
in	<i>u</i>	LocalVect instance that contains values to assign to the side

void setInOutflowBC (int *code*, const LocalVect< real.t, 3 > & *u*)

Impose a constant inflow or outflow boundary condition on sides with a given code.

Parameters

in	<i>code</i>	Value of code for which the condition is prescribed
in	<i>u</i>	LocalVect instance that contains values to assign to the sides

void setInOutflowBC (const LocalVect< real.t, 3 > & *u*)

Impose a constant inflow or outflow boundary condition on boundary sides.

Parameters

in	<i>u</i>	LocalVect instance that contains values to assign to the sides
----	----------	--

void setTimeStep (real.t *dt*) [inherited]

Assign time step value.

Parameters

in	<i>dt</i>	Time step value
----	-----------	-----------------

void setCFL (real.t *CFL*) [inherited]

Assign CFL value.

Parameters

in	<i>CFL</i>	Value of CFL
----	------------	--------------

void setReferenceLength (real.t *dx*) [inherited]

Assign reference length value.

Parameters

in	<i>dx</i>	Value of reference length
----	-----------	---------------------------

void setVerbose (int *v*) [inherited]

Set verbosity parameter.

Parameters

in	<i>v</i>	Value of verbosity parameter
----	----------	------------------------------

bool setReconstruction (const Vect< real.t > & *U*, Vect< real.t > & *LU*, Vect< real.t > & *RU*, size.t *dof*) [inherited]

Function to reconstruct by the [Muscl](#) method.

Parameters

in	<i>U</i>	Field to reconstruct
out	<i>LU</i>	Left gradient vector
out	<i>RU</i>	Right gradient vector
in	<i>dof</i>	Label of dof to reconstruct

void setMethod (const Method & *s*) [inherited]

Choose a flux solver.

Parameters

in	<i>s</i>	Solver to choose
----	----------	------------------

void setLimiter (Limiter *l*) [inherited]

Choose a flux limiter.


Parameters

in	<i>l</i>	Limiter to choose
----	----------	-------------------

7.48 ICPG2DT Class Reference

Class to solve the Inviscid compressible fluid flows (Euler equations) for perfect gas in 2-D.

Inheritance diagram for ICPG2DT:

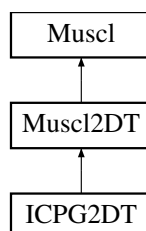

Public Types

Public Member Functions

- [ICPG2DT](#) ([Mesh](#) &ms)
Constructor using mesh instance.
- [ICPG2DT](#) ([Mesh](#) &ms, [Vect](#)< [real_t](#) > &r, [Vect](#)< [real_t](#) > &v, [Vect](#)< [real_t](#) > &p)
Constructor using mesh and initial data.
- [~ICPG2DT](#) ()
Destructor.
- void [setReconstruction](#) ()
Reconstruct.
- [real_t](#) [runOneTimeStep](#) ()
Advance one time step.
- void [Forward](#) (const [Vect](#)< [real_t](#) > &Flux, [Vect](#)< [real_t](#) > &Field)
Add Flux to Field.
- [real_t](#) [getFlux](#) ()
Get flux.
- void [setSolver](#) ([SolverType](#) s)
Choose solver.
- void [setGamma](#) ([real_t](#) gamma)
Set Gamma value.
- void [setCv](#) ([real_t](#) Cv)
Set value of heat capacity at constant volume.
- void [setCp](#) ([real_t](#) Cp)
Set value of heat capacity at constant pressure.
- void [setKappa](#) ([real_t](#) Kappa)
Set Kappa value.
- [real_t](#) [getGamma](#) () const
Return value of Gamma.
- [real_t](#) [getCv](#) () const
Return value of heat capacity at constant volume.
- [real_t](#) [getCp](#) () const
Return value of heat capacity at constant pressure.
- [real_t](#) [getKappa](#) () const

- Return value of Kappa.*

 - `Mesh & getMesh ()`

Return reference to mesh instance.
- `void getMomentum (Vect< real.t > &m) const`

Calculate elementwise momentum.
- `void getInternalEnergy (Vect< real.t > &e) const`

Calculate elementwise internal energy.
- `void getTotalEnergy (Vect< real.t > &e) const`

Return elementwise total energy.
- `void getSoundSpeed (Vect< real.t > &s) const`

Return elementwise sound speed.
- `void getMach (Vect< real.t > &m) const`

Return elementwise Mach number.
- `void setBC (const Side &sd, real.t a)`

Prescribe a constant boundary condition at given side.
- `void setBC (int code, real.t a)`

Prescribe a constant boundary condition for a given code.
- `void setBC (real.t u)`

Prescribe a constant boundary condition on all boundary sides.
- `void setBC (const Side &sd, const LocalVect< real.t, 4 > &u)`

Prescribe a constant boundary condition at a given side.
- `void setBC (int code, const LocalVect< real.t, 4 > &u)`

Prescribe a constant boundary condition for a given code.
- `void setBC (const LocalVect< real.t, 4 > &u)`

Prescribe a constant boundary condition at all boundary sides.
- `real.t getR (size_t i) const`

Return density at given element label.
- `real.t getV (size_t i, size_t j) const`
- `real.t getP (size_t i) const`

Return pressure at given element label.
- `bool setReconstruction (const Vect< real.t > &U, Vect< real.t > &LU, Vect< real.t > &RU, size_t dof)`

Function to reconstruct by the Muscl method.
- `void setTimeStep (real.t dt)`

Assign time step value.
- `real.t getTimeStep () const`

Return time step value.
- `void setCFL (real.t CFL)`

Assign CFL value.
- `real.t getCFL () const`

Return CFL value.
- `void setReferenceLength (real.t dx)`

Assign reference length value.
- `real.t getReferenceLength () const`

Return reference length.
- `Mesh & getMesh () const`

Return reference to Mesh instance.

- void `setVerbose` (int v)
Set verbosity parameter.
- void `setMethod` (const `Method` &s)
Choose a flux solver.
- void `setSolidZoneCode` (int c)
Choose a code for solid zone.
- bool `getSolidZone` () const
Return flag for presence of solid zones.
- int `getSolidZoneCode` () const
Return code of solid zone, 0 if this one is not present.
- void `setLimiter` (`Limiter` l)
Choose a flux limiter.

Protected Member Functions

- void `Initialize` ()
Construction of normals to sides.

7.48.1 Detailed Description

Class to solve the Inviscid compressible fluid flows (Euler equations) for perfect gas in 2-D.
Solution method is a second-order MUSCL Finite Volume scheme on triangles

7.48.2 Member Enumeration Documentation

enum Method [inherited]

Enumeration for flux choice.

Enumerator

`FIRST_ORDER_METHOD` First Order upwind method

`MULTI_SLOPE_Q_METHOD` Multislope Q method

`MULTI_SLOPE_M_METHOD` Multislope M method

enum Limiter [inherited]

Enumeration of flux limiting methods.

Enumerator

`MINMOD_LIMITER` MinMod limiter

`VANLEER_LIMITER` Van Leer limiter

`SUPERBEE_LIMITER` Superbee limiter

`VANALBADA_LIMITER` Van Albada limiter

`MAX_LIMITER` Max limiter

enum SolverType [inherited]

Enumeration of various solvers for the Riemann problem.

Enumerator

ROE_SOLVER Roe solver
VFROE_SOLVER Finite Volume Roe solver
LF_SOLVER LF solver
RUSANOV_SOLVER Rusanov solver
HLL_SOLVER HLL solver
HLLC_SOLVER HLLC solver
MAX_SOLVER Max solver

7.48.3 Constructor & Destructor Documentation

ICPG2DT (**Mesh** & *ms*, **Vect**< **real.t** > & *r*, **Vect**< **real.t** > & *v*, **Vect**< **real.t** > & *p*)

Constructor using mesh and initial data.

Parameters

in	<i>ms</i>	Mesh instance
in	<i>r</i>	Initial density vector (as instance of Vect)
in	<i>v</i>	Initial velocity vector (as instance of Vect)
in	<i>p</i>	Initial pressure vector (as instance of Vect)

7.48.4 Member Function Documentation

void setReconstruction ()

Reconstruct.

exit(3) if reconstruction fails

void Forward (**const Vect**< **real.t** > & *Flux*, **Vect**< **real.t** > & *Field*)

Add Flux to Field.

If this function is used, the function `getFlux` must be called

void setSolver (**SolverType** *s*)

Choose solver.

Parameters

in	<i>s</i>	Index of solver in the enumerated variable <code>SolverType</code> Available values are: ROE_SOLVER, VFROE_SOLVER, LF_SOLVER, RUSANOV_SOLVER, HLL_SOLVER, HLLC_SOLVER, MAX_SOLVER
----	----------	---

void setBC (const Side & *sd*, real_t *a*)

Prescribe a constant boundary condition at given side.

Parameters

in	<i>sd</i>	Reference to Side instance
in	<i>a</i>	Value to prescribe

void setBC (int *code*, real_t *a*)

Prescribe a constant boundary condition for a given code.

Parameters

in	<i>code</i>	Code for which value is imposed
in	<i>a</i>	Value to prescribe

void setBC (real_t *u*)

Prescribe a constant boundary condition on all boundary sides.

Parameters

in	<i>u</i>	Value to prescribe
----	----------	--------------------

void setBC (const Side & *sd*, const LocalVect< real_t, 4 > & *u*)

Prescribe a constant boundary condition at a given side.

Parameters

in	<i>sd</i>	Reference to Side instance
in	<i>u</i>	Vector (instance of class LocalVect) with as components the constant values to prescribe for the four fields (r, vx, vy, p)

void setBC (int *code*, const LocalVect< real_t, 4 > & *u*)

Prescribe a constant boundary condition for a given code.

Parameters

in	<i>code</i>	Code for which value is imposed
in	<i>u</i>	Vector (instance of class LocalVect) with as components the constant values to prescribe for the four fields (r, vx, vy, p)

void setBC (const LocalVect< real_t, 4 > & u)

Prescribe a constant boundary condition at all boundary sides.

Parameters

in	<i>u</i>	Vector (instance of class LocalVect) with as components the constant values to prescribe for the four fields (r, vx, vy, p)
----	----------	--

real_t getR (size_t i) const

Return density at given element label.

Parameters

in	<i>i</i>	Element label
----	----------	-------------------------------

real_t getV (size_t i, size_t j) const

Return velocity at given element label

Parameters

in	<i>i</i>	Element label
in	<i>j</i>	component index (1 or 2)

real_t getP (size_t i) const

Return pressure at given element label.

Parameters

in	<i>i</i>	Element label
----	----------	-------------------------------

bool setReconstruction (const Vect< real_t > & U, Vect< real_t > & LU, Vect< real_t > & RU, size_t dof) [inherited]

Function to reconstruct by the [Muscl](#) method.

Parameters

in	<i>U</i>	Field to reconstruct
out	<i>LU</i>	Left gradient vector
out	<i>RU</i>	Right gradient vector
in	<i>dof</i>	Label of dof to reconstruct

void Initialize () [protected], [inherited]

Construction of normals to sides.

Convention: for a given side, `getPtrElement(1)` is the left element and `getPtrElement(2)` is the right element. The normal goes from left to right. For boundary sides, the normal points outward.

void setTimeStep (real.t *dt*) [inherited]

Assign time step value.

Parameters

in	<i>dt</i>	Time step value
----	-----------	-----------------

void setCFL (real.t *CFL*) [inherited]

Assign CFL value.

Parameters

in	<i>CFL</i>	Value of CFL
----	------------	--------------

void setReferenceLength (real.t *dx*) [inherited]

Assign reference length value.

Parameters

in	<i>dx</i>	Value of reference length
----	-----------	---------------------------

void setVerbose (int *v*) [inherited]

Set verbosity parameter.

Parameters

in	<i>v</i>	Value of verbosity parameter
----	----------	------------------------------

void setMethod (const Method & *s*) [inherited]

Choose a flux solver.

Parameters

in	<i>s</i>	Solver to choose
----	----------	------------------

void setLimiter (Limiter *l*) [inherited]

Choose a flux limiter.


Parameters

in	<i>l</i>	Limiter to choose
----	----------	-------------------

7.49 ICPG3DT Class Reference

Class to solve the Inviscid compressible fluid flows (Euler equations) for perfect gas in 3-D.

Inheritance diagram for ICPG3DT:

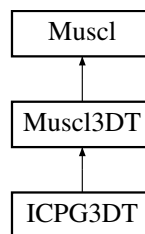

Public Types

Public Member Functions

- [ICPG3DT \(Mesh &ms\)](#)
Constructor using mesh data.
- [ICPG3DT \(Mesh &ms, Vect< real_t > &r, Vect< real_t > &v, Vect< real_t > &p\)](#)
Constructor using mesh and initial data.
- [~ICPG3DT \(\)](#)
Destructor.
- void [setReconstruction \(\)](#)
Reconstruct.
- [real_t runOneTimeStep \(\)](#)
Advance one time step.
- void [Forward \(const Vect< real_t > &flux, Vect< real_t > &field\)](#)
Add flux to field.
- [real_t getFlux \(\)](#)
Return flux.
- void [setReferenceLength \(real_t dx\)](#)
Assign a reference length.
- void [setTimeStep \(real_t dt\)](#)
Assign a time step.
- void [setCFL \(real_t CFL\)](#)
Assign CFL value.
- [real_t getReferenceLength \(\)](#) const
Return reference length.
- [real_t getTimeStep \(\)](#) const

- Return time step.*

 - `real.t getCFL ()` const
- Return CFL.*

 - `void setGamma (real.t gamma)`
- Set γ value.*

 - `void setCv (real.t Cv)`
- Set value of C_v (Heat capacity at constant volume)*

 - `void setCp (real.t Cp)`
- Set value of C_p (Heat capacity at constant pressure)*

 - `void setKappa (real.t Kappa)`
- Set Kappa value.*

 - `real.t getGamma ()` const
- Return value of γ .*

 - `real.t getCv ()` const
- Return value of C_v (Heat capacity at constant volume)*

 - `real.t getCp ()` const
- Return value of C_p (Heat capacity at constant pressure)*

 - `real.t getKappa ()` const
- Return value of κ .*

 - `Mesh & getMesh ()`
- Return reference to mesh instance.*

 - `Mesh * getPtrMesh ()`
- Return pointer to mesh.*

 - `void getMomentum (Vect< real.t > &m) const`
- Calculate elementwise momentum.*

 - `void getInternalEnergy (Vect< real.t > &e) const`
- Calculate elementwise internal energy.*

 - `void getTotalEnergy (Vect< real.t > &e) const`
- Return elementwise total energy.*

 - `void getSoundSpeed (Vect< real.t > &s) const`
- Return elementwise sound speed.*

 - `void getMach (Vect< real.t > &m) const`
- Return elementwise Mach number.*

 - `bool setReconstruction (const Vect< real.t > &U, Vect< real.t > &LU, Vect< real.t > &RU, size.t dof)`
- Function to reconstruct by the *Muscl* method.*

 - `real.t getMinimumFaceArea ()` const
- Return minimum area of faces in the mesh.*

 - `real.t getMinimumElementVolume ()` const
- Return minimum volume of elements in the mesh.*

 - `real.t getMaximumFaceArea ()` const
- Return maximum area of faces in the mesh.*

 - `real.t getMaximumElementVolume ()` const
- Return maximum volume of elements in the mesh.*

 - `real.t getMeanFaceArea ()` const
- Return mean area of faces in the mesh.*

 - `real.t getMeanElementVolume ()` const

- Return mean volume of elements in the mesh.*
- `real.t getMinimumEdgeLength () const`
Return minimum length of edges in the mesh.
- `real.t getMinimumVolumebyArea () const`
Return minimum volume by area in the mesh.
- `real.t getMaximumEdgeLength () const`
Return maximum length of edges in the mesh.
- `real.t getTauLim () const`
Return value of tau lim.
- `real.t getComega () const`
Return value of Comega.
- `void setbetalim (real.t bl)`
Assign value of beta lim.
- `Mesh & getMesh () const`
Return reference to Mesh instance.
- `void setVerbose (int v)`
Set verbosity parameter.
- `void setMethod (const Method &ts)`
Choose a flux solver.
- `void setSolidZoneCode (int c)`
Choose a code for solid zone.
- `bool getSolidZone () const`
Return flag for presence of solid zones.
- `int getSolidZoneCode () const`
Return code of solid zone, 0 if this one is not present.
- `void setLimiter (Limiter l)`
Choose a flux limiter.

7.49.1 Detailed Description

Class to solve the Inviscid compressible fluid flows (Euler equations) for perfect gas in 3-D.
Solution method is a second-order MUSCL Finite Volume scheme with tetrahedra

7.49.2 Member Enumeration Documentation

enum Method [inherited]

Enumeration for flux choice.

Enumerator

`FIRST_ORDER_METHOD` First Order upwind method

`MULTI_SLOPE_Q_METHOD` Multislope Q method

`MULTI_SLOPE_M_METHOD` Multislope M method

enum Limiter [inherited]

Enumeration of flux limiting methods.

Enumerator

MINMOD_LIMITER MinMod limiter
VANLEER_LIMITER Van Leer limiter
SUPERBEE_LIMITER Superbee limiter
VANALBADA_LIMITER Van Albada limiter
MAX_LIMITER Max limiter

enum SolverType [inherited]

Enumeration of various solvers for the Riemann problem.

Enumerator

ROE_SOLVER Roe solver
VFROE_SOLVER Finite Volume Roe solver
LF_SOLVER LF solver
RUSANOV_SOLVER Rusanov solver
HLL_SOLVER HLL solver
HLLC_SOLVER HLLC solver
MAX_SOLVER Max solver

7.49.3 Constructor & Destructor Documentation**ICPG3DT (Mesh & *ms*)**

Constructor using mesh data.

Parameters

in	<i>ms</i>	Mesh instance
----	-----------	-------------------------------

ICPG3DT (Mesh & *ms*, Vect< real.t > & *r*, Vect< real.t > & *v*, Vect< real.t > & *p*)

Constructor using mesh and initial data.

Parameters

in	<i>ms</i>	Mesh instance
in	<i>r</i>	Elementwise initial density vector (as instance of Element Vect)
in	<i>v</i>	Elementwise initial velocity vector (as instance of Element Vect)
in	<i>p</i>	Elementwise initial pressure vector (as instance of Element Vect)

7.49.4 Member Function Documentation

void setReconstruction ()

Reconstruct.

exit(3) if reconstruction failed

bool setReconstruction (const Vect< real_t > & *U*, Vect< real_t > & *LU*, Vect< real_t > & *RU*, size_t *dof*) [inherited]

Function to reconstruct by the [Muscl](#) method.

Parameters

in	<i>U</i>	Field to reconstruct
out	<i>LU</i>	Left gradient vector
out	<i>RU</i>	Right gradient vector
in	<i>dof</i>	Label of dof to reconstruct

void setVerbose (int *v*) [inherited]

Set verbosity parameter.

Parameters

in	<i>v</i>	Value of verbosity parameter
----	----------	------------------------------

void setMethod (const Method & *s*) [inherited]

Choose a flux solver.

Parameters

in	<i>s</i>	Solver to choose
----	----------	------------------

void setLimiter (Limiter *l*) [inherited]

Choose a flux limiter.

Parameters

in	<i>l</i>	Limiter to choose
----	----------	-------------------

7.50 IOField Class Reference

Enables working with files in the XML Format.

Inherits XMLParser.

Public Types

Public Member Functions

- [IOField](#) ()
Default constructor.
- [IOField](#) (const string &file, [AccessType](#) access, bool compact=true)
Constructor using file name.
- [IOField](#) (const string &mesh_file, const string &file, [Mesh](#) &ms, [AccessType](#) access, bool compact=true)
Constructor using file name, mesh file and mesh.
- [IOField](#) (const string &file, [Mesh](#) &ms, [AccessType](#) access, bool compact=true)
Constructor using file name and mesh.
- [IOField](#) (const string &file, [AccessType](#) access, const string &name)
Constructor using file name and field name.
- [~IOField](#) ()
Destructor.
- void [setMeshFile](#) (const string &file)
Set mesh file.
- void [open](#) ()
Open file.
- void [open](#) (const string &file, [AccessType](#) access)
Open file.
- void [close](#) ()
Close file.
- void [put](#) ([Mesh](#) &ms)
Store mesh in file.
- void [put](#) (const [Vect](#)< [real_t](#) > &v)
Store Vect instance v in file.
- void [put](#) (const [PETScVect](#)< [real_t](#) > &v)
Store PETScVect instance v in file.
- [real_t](#) [get](#) ([Vect](#)< [real_t](#) > &v)
Get Vect v instance from file.
- int [get](#) ([Vect](#)< [real_t](#) > &v, const string &name)
Get Vect v instance from file if the field has the given name.
- int [get](#) ([DMatrix](#)< [real_t](#) > &A, const string &name)
Get DMatrix A instance from file if the field has the given name.
- int [get](#) ([DSMatrix](#)< [real_t](#) > &A, const string &name)
Get DSMatrix A instance from file if the field has the given name.
- int [get](#) ([Vect](#)< [real_t](#) > &v, [real_t](#) t)
Get Vect v instance from file corresponding to a specific time value.
- void [saveGMSH](#) (string output_file, string mesh_file)
Save field vectors in a file using GMSH format.

7.50.1 Detailed Description

Enables working with files in the XML Format.

This class has methods to store vectors in files and read from files.

7.51 IPF Class Reference

To read project parameters from a file in [IPF](#) format.

Public Member Functions

- [IPF](#) ()
Default constructor.
- [IPF](#) (const string &file)
Constructor that gives the data file name.
- [IPF](#) (const string &prog, const string &file)
*Constructor that reads parameters in file *file* and prints header information for the calling program *prog*. It reads parameters in [IPF](#) Format from this file.*
- [~IPF](#) ()
Destructor.
- [real.t getDisplay](#) ()
Display acquired parameters.
- int [getVerbose](#) () const
*Return parameter read using keyword **Verbose**.*
- int [getOutput](#) () const
*Return parameter read using keyword **Output**.*
- int [getSave](#) () const
*Return parameter read using keyword **Save**.*
- int [getPlot](#) () const
*Return parameter read using keyword **Plot**.*
- int [getBC](#) () const
*Return parameter read using keyword **BC**.*
- int [getBF](#) () const
*Return parameter read using keyword **BF**.*
- int [getSF](#) () const
*Return parameter read using keyword **SF**.*
- int [getInit](#) () const
*Return parameter read using keyword **Init**.*
- int [getData](#) () const
*Return parameter read using keyword **Data**.*
- size_t [getNbSteps](#) () const
*Return parameter read using keyword **NbSteps**.*
- size_t [getNbIter](#) () const
*Return parameter read using keyword **NbIter**.*
- [real.t getTimeStep](#) () const
*Return parameter read using keyword **TimeStep**.*
- [real.t getMaxTime](#) () const
*Return parameter read using keyword **MaxTime**.*
- [real.t getTolerance](#) () const
*Return parameter read using keyword **Tolerance**.*
- int [getIntPar](#) (size_t n=1) const
*Return *n*-th parameter read using keyword **IntPar**.*
- string [getStringPar](#) (size_t n=1) const

- Return n -th parameter read using keyword **StringPar**.*

 - `real.t getDoublePar (size.t n=1) const`

*Return n -th parameter read using keyword **DoublePar**.*

 - `Point< real.t > getPointDoublePar (size.t n=1) const`
- Return n -th parameter read using keyword **PointDoublePar**.*
- `complex.t getComplexPar (size.t n=1) const`
- Return n -th parameter read using keyword **StringPar**.*
- `string getString (const string &label) const`
- Return parameter corresponding to a given label, when its value is a string.*
- `string getString (const string &label, string def) const`
- Return parameter corresponding to a given label, when its value is a string.*
- `int getInteger (const string &label) const`
- Return parameter corresponding to a given label, when its value is an integer.*
- `int getInteger (const string &label, int def) const`
- Return parameter corresponding to a given label, when its value is an integer.*
- `real.t getDouble (const string &label) const`
- Return parameter corresponding to a given label, when its value is a real.t.*
- `real.t getDouble (const string &label, real.t def) const`
- Return parameter corresponding to a given label, when its value is a real.t.*
- `complex.t getComplex (const string &label) const`
- Return parameter corresponding to a given label, when its value is a complex number.*
- `complex.t getComplex (const string &label, complex.t def) const`
- Return parameter corresponding to a given label, when its value is a complex number.*
- `int contains (const string &label) const`
- check if the project file contains a given parameter*
- `void get (const string &label, Vect< real.t > &a) const`
- Read an array of real values, corresponding to a given label.*
- `real.t getArraySize (const string &label, size.t j) const`
- Return an array entry for a given label.*
- `void get (const string &label, int &a) const`
- Return integer parameter corresponding to a given label.*
- `void get (const string &label, real.t &a) const`
- Return real parameter corresponding to a given label.*
- `void get (const string &label, complex.t &a) const`
- Return complex parameter corresponding to a given label.*
- `void get (const string &label, string &a) const`
- Return string parameter corresponding to a given label.*
- `string getProject () const`
- Return parameter read using keyword **Project**.*
- `string getDomainFile () const`
- Return parameter using keyword **Mesh**.*
- `string getMeshFile (size.t i=1) const`
- Return i -th parameter read using keyword **mesh.file**.*
- `string getInitFile () const`
- Return parameter read using keyword **InitFile**.*
- `string getRestartFile () const`

- Return parameter read using keyword **RestartFile**.*

 - string `getBCFile ()` const

*Return parameter read using keyword **BCFile**.*

 - string `getBFFile ()` const
- Return parameter read using keyword **BFFile**.*
- string `getSFFile ()` const
- Return parameter read using keyword **SFFile**.*
- string `getSaveFile ()` const
- Return parameter read using keyword **SaveFile**.*
- string `getPlotFile (int i=1)` const
- Return *i*-th parameter read using keyword **PlotFile**.*
- string `getPrescriptionFile (int i=1)` const
- Return parameter read using keyword **DataFile**.*
- string `getAuxFile (size_t i=1)` const
- Return *i*-th parameter read using keyword **Auxfile**.*
- string `getDensity ()` const
- Return expression (to be parsed, function of *x*, *y*, *z*, *t*) for density function.*
- string `getElectricConductivity ()` const
- Return expression (to be parsed, function of *x*, *y*, *z*, *t*) for electric conductivity.*
- string `getElectricPermittivity ()` const
- Return expression (to be parsed, function of *x*, *y*, *z*, *t*) for electric permittivity.*
- string `getMagneticPermeability ()` const
- Return expression (to be parsed, function of *x*, *y*, *z*, *t*) for magnetic permeability.*
- string `getPoissonRatio ()` const
- Return expression (to be parsed, function of *x*, *y*, *z*, *t*) for Poisson ratio.*
- string `getThermalConductivity ()` const
- Return expression (to be parsed, function of *x*, *y*, *z*, *t*) for thermal conductivity.*
- string `getRhoCp ()` const
- Return expression (to be parsed, function of *x*, *y*, *z*, *t*) for density * specific heat.*
- string `getViscosity ()` const
- Return expression (to be parsed, function of *x*, *y*, *z*, *t*) for viscosity.*
- string `getYoungModulus ()` const
- Return expression (to be parsed, function of *x*, *y*, *z*, *t*) for Young's modulus.*

7.51.1 Detailed Description

To read project parameters from a file in [IPF](#) format.

This class can be used to acquire various parameters from a parameter file of [IPF](#) (Input Project File). The declaration of an instance of this class avoids reading data in your main program. The acquired parameters are retrieved through information members of the class. Note that all the parameters have default values

7.51.2 Constructor & Destructor Documentation

IPF (const string & file)

Constructor that gives the data file name.

It reads parameters in [IPF](#) Format from this file.

7.51.3 Member Function Documentation

int getOutput () const

Return parameter read using keyword **Output**.

This parameter can be used to control output behavior in a program.

int getSave () const

Return parameter read using keyword **Save**.

This parameter can be used to control result saving in a program (*e.g.* for a restarting purpose).

int getPlot () const

Return parameter read using keyword **Plot**.

This parameter can be used to control result saving for plotting in a program.

int getBC () const

Return parameter read using keyword **BC**.

This parameter can be used to set a boundary condition flag.

int getBF () const

Return parameter read using keyword **BF**.

This parameter can be used to set a body force flag.

int getSF () const

Return parameter read using keyword **SF**.

This parameter can be used to set a surface force flag.

int getInit () const

Return parameter read using keyword **Init**.

This parameter can be used to set an initial data flag.

int getData () const

Return parameter read using keyword **Data**.

This parameter can be used to set a various data flag.

size_t getNbSteps () const

Return parameter read using keyword **NbSteps**.

This parameter can be used to read a number of time steps.

size_t getNbIter () const

Return parameter read using keyword **NbIter**.

This parameter can be used to read a number of iterations.

real_t getTimeStep () const

Return parameter read using keyword **TimeStep**.

This parameter can be used to read a time step value.

real_t getMaxTime () const

Return parameter read using keyword **MaxTime**.

This parameter can be used to read a maximum time value.

real_t getTolerance () const

Return parameter read using keyword **Tolerance**.

This parameter can be used to read a tolerance value to control convergence.

int getIntPar (size_t n = 1) const

Return n-th parameter read using keyword **IntPar**

Here we have at most 20 integer extra parameters that can be used for any purpose. Default value for n is 1

string getStringPar (size_t n = 1) const

Return n-th parameter read using keyword **StringPar**.

Here we have at most 20 integer extra parameters that can be used for any purpose. Default value for n is 1

real_t getDoublePar (size_t n = 1) const

Return n-th parameter read using keyword **DoublePar**.

Here we have at most 20 integer extra parameters that can be used for any purpose. Default value for n is 1

Point<real_t> getPointDoublePar (size_t n = 1) const

Return n-th parameter read using keyword **PointDoublePar**.

Here we have at most 20 integer extra parameters that can be used for any purpose. Default value for n is 1

complex_t getComplexPar (size_t n = 1) const

Return n-th parameter read using keyword **StringPar**.

Here we have at most 20 integer extra parameters that can be used for any purpose. Default value for n is 1

string getString (const string & label) const

Return parameter corresponding to a given label, when its value is a string.

Parameters

in	label	Label that identifies the string (read from input file) If this label is not found an error message is displayed and program stops
----	-------	--

string getString (const string & *label*, string *def*) const

Return parameter corresponding to a given label, when its value is a string.

Case where a default value is provided

Parameters

in	<i>label</i>	Label that identifies the string (read from input file)
in	<i>def</i>	Default value: Value to assign if the sought parameter is not found

int getInteger (const string & *label*) const

Return parameter corresponding to a given label, when its value is an integer.

Parameters

in	<i>label</i>	Label that identifies the integer number (read from input file) If this label is not found an error message is displayed and program stops
----	--------------	--

int getInteger (const string & *label*, int *def*) const

Return parameter corresponding to a given label, when its value is an integer.

Case where a default value is provided

Parameters

in	<i>label</i>	Label that identifies the integer number (read from input file).
in	<i>def</i>	Default value: Value to assign if the sought parameter is not found

real_t getDouble (const string & *label*) const

Return parameter corresponding to a given label, when its value is a real.t.

Parameters

in	<i>label</i>	Label that identifies the real number (read from input file). If this label is not found an error message is displayed and program stops.
----	--------------	---

real_t getDouble (const string & *label*, real_t *def*) const

Return parameter corresponding to a given label, when its value is a real.t.

Case where a default value is provided

Parameters

in	<i>label</i>	Label that identifies the real number (read from input file)
in	<i>def</i>	Default value: Value to assign if the sought parameter is not found

complex.t getComplex (const string & label) const

Return parameter corresponding to a given label, when its value is a complex number.

Parameters

in	<i>label</i>	Label that identifies the complex number (read from input file) If this label is not found an error message is displayed and program stops
----	--------------	--

complex.t getComplex (const string & label, complex.t def) const

Return parameter corresponding to a given label, when its value is a complex number.

Case where a default value is provided

Parameters

in	<i>label</i>	Label that identifies the complex number (read from input file)
in	<i>def</i>	Default value: Value to assign if the sought parameter is not found

int contains (const string & label) const

check if the project file contains a given parameter

Parameters

in	<i>label</i>	Label that identifies the label to seek in file
----	--------------	---

Returns

0 if the parameter is not found, n if the parameter is found, where n is the parameter index in the parameter list

void get (const string & label, Vect< real.t > & a) const

Read an array of real values, corresponding to a given label.

Parameters

in	<i>label</i>	Label that identifies the array (read from input file).
in	<i>a</i>	Vector that contain the array. The vector is properly resized before filling.

Remarks

If this label is not found an error message is displayed.

real.t getArraySize (const string & label, size.t j) const

Return an array entry for a given label.

Parameters

in	<i>label</i>	Label that identifies the array (read from input file).
in	<i>j</i>	Index of entry in the array (Starting from 1)

Remarks

If this label is not found an error message is displayed and program stops.

void get (const string & *label*, int & *a*) const

Return integer parameter corresponding to a given label.

Parameters

in	<i>label</i>	Label that identifies the integer number (read from input file).
out	<i>a</i>	Returned value. If this label is not found an error message is displayed and program stops. Note: This member function can be used instead of getInteger

void get (const string & *label*, real.t & *a*) const

Return real parameter corresponding to a given label.

Parameters

in	<i>label</i>	Label that identifies the real (real.t) number (read from input file).
out	<i>a</i>	Returned value. If this label is not found an error message is displayed and program stops. Note: This member function can be used instead of getReal.T

void get (const string & *label*, complex.t & *a*) const

Return complex parameter corresponding to a given label.

Parameters

in	<i>label</i>	Label that identifies the complex number (read from input file).
out	<i>a</i>	Returned value. If this label is not found an error message is displayed and program stops.

void get (const string & *label*, string & *a*) const

Return string parameter corresponding to a given label.

Parameters

in	<i>label</i>	Label that identifies the atring (read from input file).
----	--------------	--

Parameters

out	<i>a</i>	Returned value. Note: This member function can be used instead of getString If this label is not found an error message is displayed and program stops. Note: This member function can be used instead of getString
-----	----------	---

string getProject () const

Return parameter read using keyword **Project**.
This parameter can be used to read a project's name.

string getMeshFile (size_t *i* = 1) const

Return *i*-th parameter read using keyword **mesh_file**.
Here we have at most 10 integer extra parameters that can be used for any purpose. Default value for *i* is 1

string getInitFile () const

Return parameter read using keyword **InitFile**.
This parameter can be used to read an initial data file name.

string getRestartFile () const

Return parameter read using keyword **RestartFile**.
This parameter can be used to read a restart file name.

string getBCFile () const

Return parameter read using keyword **BCFile**.
This parameter can be used to read a boundary condition file name.

string getBFFile () const

Return parameter read using keyword **BFFile**.
This parameter can be used to read a body force file name.

string getSFFile () const

Return parameter read using keyword **SFFile**.
This parameter can be used to read a source force file name.

string getSaveFile () const

Return parameter read using keyword **SaveFile**.
This parameter can be used to read a save file name.

string getPlotFile (int *i* = 1) const

Return *i*-th parameter read using keyword **PlotFile**.
Here we have at most 10 integer extra parameters that can be used for plot file names. Default value for *i* is 1

string getPrescriptionFile (int *i* = 1) const

Return parameter read using keyword **DataFile**.

This parameter can be used to read a [Prescription](#) file.

string getAuxFile (size_t *i* = 1) const

Return *i*-th parameter read using keyword **Auxfile**.

Here we have at most 10 integer extra parameters that can be used for any auxiliary file names.
Default value for *i* is 1

7.52 Iter< T_ > Class Template Reference

Class to drive an iterative process.

Public Member Functions

- [Iter](#) ()
Default Constructor.
- [Iter](#) (int max_it, [real_t](#) toler, int verbose=0)
Constructor with iteration parameters.
- [~Iter](#) ()
Destructor.
- void [setMaxIter](#) (int max_it)
Set maximal number of iterations.
- void [setTolerance](#) ([real_t](#) toler)
Set tolerance value for convergence.
- void [setVerbose](#) (int v)
Set verbosity parameter.
- bool [check](#) ([Vect](#)< T_ > &u, const [Vect](#)< T_ > &v, int opt=2)
Check convergence.

7.52.1 Detailed Description

```
template<class T_>
class OFELI::Iter< T_ >
```


Class to drive an iterative process.

This template class enables monitoring any iterative process. It simply sets default values for tolerance, maximal number of iterations and enables checking convergence using two successive iterates.

7.53 Laplace1DL2 Class Reference

To build element equation for a 1-D elliptic equation using the 2-Node line element (P₁).

Inheritance diagram for Laplace1DL2:

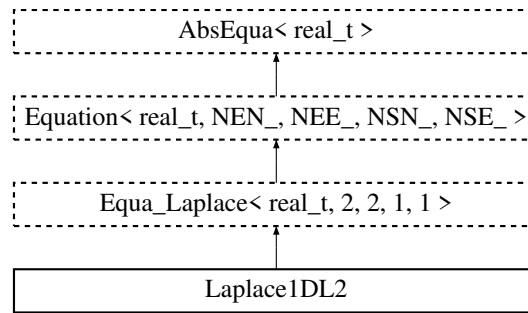

Public Member Functions

- **Laplace1DL2** (**Element** *el)
Constructor for an element.
- **Laplace1DL2** (**Mesh** &ms, **Vect**< **real_t** > &u)
- **~Laplace1DL2** ()
Destructor.
- void **Matrix** (**real_t** coef=1.)
Add finite element matrix to left hand side.
- void **BodyRHS** (const **Vect**< **real_t** > &f)
Add Right-Hand Side Contribution.
- void **BoundaryRHS** (int n, **real_t** p)
Add Neumann contribution to Right-Hand Side.
- void **setBoundaryCondition** (**real_t** f, int lr)
Set Dirichlet boundary data.
- void **setTraction** (**real_t** f, int lr)
Set Traction data.
- int **run** ()
- virtual void **build** ()
Solve the equation.
- void **build** (**EigenProblemSolver** &e)
Build the linear system for an eigenvalue problem.
- virtual void **buildEigen** (int opt=0)
Build matrices for an eigenvalue problem.
- void **updateBC** (const **Element** &el, const **Vect**< **real_t** > &bc)
Update Right-Hand side by taking into account essential boundary conditions.
- void **updateBC** (const **Vect**< **real_t** > &bc)
Update Right-Hand side by taking into account essential boundary conditions.
- void **DiagBC** (int dof_type=NODE.DOF, int dof=0)
Update element matrix to impose bc by diagonalization technique.
- void **LocalNodeVector** (**Vect**< **real_t** > &b)
Localize Element Vector from a Vect instance.
- void **ElementNodeVector** (const **Vect**< **real_t** > &b, **LocalVect**< **real_t**, NEE_ > &be)
Localize Element Vector from a Vect instance.
- void **ElementNodeVector** (const **Vect**< **real_t** > &b, **LocalVect**< **real_t**, NEN_ > &be, int dof)
Localize Element Vector from a Vect instance.

- void `ElementNodeVectorSingleDOF` (const `Vect< real_t >` &b, `LocalVect< real_t, NEN_ >` &be)
Localize Element Vector from a Vect instance.
- void `ElementSideVector` (const `Vect< real_t >` &b, `LocalVect< real_t, NSE_ >` &be)
Localize Element Vector from a Vect instance.
- void `ElementVector` (const `Vect< real_t >` &b, int dof_type=NODE.FIELD, int flag=0)
Localize Element Vector.
- void `SideVector` (const `Vect< real_t >` &b)
Localize Side Vector.
- void `ElementNodeCoordinates` ()
Localize coordinates of element nodes.
- void `SideNodeCoordinates` ()
Localize coordinates of side nodes.
- void `ElementAssembly` (`Matrix< real_t >` *A)
Assemble element matrix into global one.
- void `ElementAssembly` (`PETScMatrix< real_t >` &A)
Assemble element matrix into global one.
- void `ElementAssembly` (`PETScVect< real_t >` &b)
Assemble element right-hand side vector into global one.
- void `ElementAssembly` (`BMatrix< real_t >` &A)
Assemble element matrix into global one.
- void `ElementAssembly` (`SkSMatrix< real_t >` &A)
Assemble element matrix into global one.
- void `ElementAssembly` (`SkMatrix< real_t >` &A)
Assemble element matrix into global one.
- void `ElementAssembly` (`SpMatrix< real_t >` &A)
Assemble element matrix into global one.
- void `ElementAssembly` (`TrMatrix< real_t >` &A)
Assemble element matrix into global one.
- void `ElementAssembly` (`Vect< real_t >` &v)
Assemble element vector into global one.
- void `SideAssembly` (`PETScMatrix< real_t >` &A)
Assemble side matrix into global one.
- void `SideAssembly` (`PETScVect< real_t >` &b)
Assemble side right-hand side vector into global one.
- void `SideAssembly` (`Matrix< real_t >` *A)
Assemble side (edge or face) matrix into global one.
- void `SideAssembly` (`SkSMatrix< real_t >` &A)
Assemble side (edge or face) matrix into global one.
- void `SideAssembly` (`SkMatrix< real_t >` &A)
Assemble side (edge or face) matrix into global one.
- void `SideAssembly` (`SpMatrix< real_t >` &A)
Assemble side (edge or face) matrix into global one.
- void `SideAssembly` (`Vect< real_t >` &v)
Assemble side (edge or face) vector into global one.
- void `DGElementAssembly` (`Matrix< real_t >` *A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.

- void `DGElementAssembly` (`SkMatrix`< `real_t` > &A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void `DGElementAssembly` (`SkMatrix`< `real_t` > &A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void `DGElementAssembly` (`SpMatrix`< `real_t` > &A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void `DGElementAssembly` (`TrMatrix`< `real_t` > &A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void `AxbAssembly` (const `Element` &el, const `Vect`< `real_t` > &x, `Vect`< `real_t` > &b)
Assemble product of element matrix by element vector into global vector.
- void `AxbAssembly` (const `Side` &sd, const `Vect`< `real_t` > &x, `Vect`< `real_t` > &b)
Assemble product of side matrix by side vector into global vector.
- `size_t` `getNbNodes` () const
Return number of element nodes.
- `size_t` `getNbEq` () const
Return number of element equations.
- void `setInitialSolution` (const `Vect`< `real_t` > &u)
Set initial solution (previous time step)
- `real_t` `setMaterialProperty` (const string &exp, const string &prop)
Define a material property by an algebraic expression.
- void `setMesh` (`Mesh` &m)
Define mesh and renumber DOFs after removing imposed ones.
- `Mesh` & `getMesh` () const
Return reference to Mesh instance.
- `LinearSolver`< `real_t` > & `getLinearSolver` ()
Return reference to linear solver instance.
- void `setSolver` (`Iteration` ls, `Preconditioner` pc=`IDENT_PREC`)
Choose solver for the linear system.
- int `SolveLinearSystem` (`Matrix`< `real_t` > *A, `Vect`< `real_t` > &b, `Vect`< `real_t` > &x)
Solve the linear system.

Public Attributes

- `LocalMatrix`< `real_t`, `NEE_`, `NEE_` > `eMat`
LocalMatrix instance containing local matrix associated to current element.
- `LocalMatrix`< `real_t`, `NSE_`, `NSE_` > `sMat`
LocalMatrix instance containing local matrix associated to current side.
- `LocalVect`< `real_t`, `NEE_` > `ePrev`
LocalVect instance containing local vector associated to current element.
- `LocalVect`< `real_t`, `NEE_` > `eRHS`
LocalVect instance containing local right-hand side vector associated to current element.
- `LocalVect`< `real_t`, `NEE_` > `eRes`
LocalVect instance containing local residual vector associated to current element.
- `LocalVect`< `real_t`, `NSE_` > `sRHS`
LocalVect instance containing local right-hand side vector associated to current side.

Protected Member Functions

- void **Init** (const **Element** *el)
Set element arrays to zero.
- void **Init** (const **Side** *sd)
Set side arrays to zero.

7.53.1 Detailed Description

To build element equation for a 1-D elliptic equation using the 2-Node line element (P_1).

7.53.2 Constructor & Destructor Documentation

Laplace1DL2 (**Mesh** & *ms*, **Vect**< **real.t** > & *u*)

Constructor using mesh instance and solution vector

Parameters

in	<i>ms</i>	Mesh instance
in,out	<i>u</i>	Vect instance that contains, after execution of run() the solution

7.53.3 Member Function Documentation

void Matrix (**real.t** *coef* = 1.)

Add finite element matrix to left hand side.

Parameters

in	<i>coef</i>	Value to multiply by the added matrix
----	-------------	---------------------------------------

void BodyRHS (**const Vect**< **real.t** > & *f*)

Add Right-Hand Side Contribution.

Parameters

in	<i>f</i>	Vector containing the source given function at mesh nodes
----	----------	---

void BoundaryRHS (**int** *n*, **real.t** *p*)

Add Neumann contribution to Right-Hand Side.

Parameters

in	<i>n</i>	Parameter to select equal to 0 if the condition is at the left end of the domain and different if it is at the right of it
in	<i>p</i>	Value of flux to add

Note

This member function is to be called only for the first or last element

void setBoundaryCondition (real.t *f*, int *lr*)

Set Dirichlet boundary data.

Parameters

in	<i>f</i>	Value to assign
in	<i>lr</i>	Option to choose location of the value (-1: Left end, 1: Right end)

void setTraction (real.t *f*, int *lr*)

Set Traction data.

Parameters

in	<i>f</i>	Value of traction (Neumann boundary condition)
in	<i>lr</i>	Option to choose location of the traction (-1: Left end, 1: Right end)

int run ()

Run solution procedure This function is to be called when the constructor **Laplace1DL2(mesh,u)** is used.

Returns

return code for the solution of the linear system

void build (EigenProblemSolver & *e*) [inherited]

Build the linear system for an eigenvalue problem.

Parameters

in	<i>e</i>	Reference to used EigenProblemSolver instance
----	----------	---

void updateBC (const Element & *el*, const Vect< real.t > & *bc*) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>el</i>	Reference to current element instance
in	<i>bc</i>	Vector that contains imposed values at all DOFs

void updateBC (const Vect< real.t > & bc) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>bc</i>	Vector that contains imposed values at all DOFs
----	-----------	---

Remarks

The current element is pointed by `_theElement`

void DiagBC (int dof.type = NODE_DOF, int dof = 0) [inherited]

Update element matrix to impose bc by diagonalization technique.

Parameters

in	<i>dof.type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • <code>NODE_FIELD</code>, DOFs are supported by nodes [Default] • <code>ELEMENT_FIELD</code>, DOFs are supported by elements • <code>SIDE_FIELD</code>, DOFs are supported by sides
in	<i>dof</i>	DOF setting: <ul style="list-style-type: none"> • <code>= 0</code>, All DOFs are taken into account [Default] • <code>!= 0</code>, Only DOF No. <code>dof</code> is handled in the system

void LocalNodeVector (Vect< real.t > & b) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Reference to global vector to be localized. The resulting local vector can be accessed by attribute <code>ePrev</code> . This member function is to be used if a constructor with <code>Element</code> was invoked.
----	----------	---

void ElementNodeVector (const Vect< real.t > & b, LocalVect< real.t, NEE_ > & be)
[inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

All degrees of freedom are transferred to the local vector

```
void ElementNodeVector ( const Vect< real_t > & b, LocalVect< real_t, NEN_ > & be, int dof ) [inherited]
```

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.
in	<i>dof</i>	Degree of freedom to transfer to the local vector

Remarks

Only yhe dega dof is transferred to the local vector

```
void ElementNodeVectorSingleDOF ( const Vect< real_t > & b, LocalVect< real_t, NEN_ > & be ) [inherited]
```

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

Vector b is assumed to contain only one degree of freedom by node.

```
void ElementSideVector ( const Vect< real_t > & b, LocalVect< real_t, NSE_ > & be ) [inherited]
```

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is

```
void ElementVector ( const Vect< real_t > & b, int dof_type = NODE_FIELD, int flag = 0 ) [inherited]
```

Localize Element Vector.

Parameters

in	<i>b</i>	Global vector to be localized
in	<i>dof_type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • <code>NODE_FIELD</code>, DOFs are supported by nodes [Default] • <code>ELEMENT_FIELD</code>, DOFs are supported by elements • <code>SIDE_FIELD</code>, DOFs are supported by sides
in	<i>flag</i>	Option to set: <ul style="list-style-type: none"> • <code>= 0</code>, All DOFs are taken into account [Default] • <code>!= 0</code>, Only DOF number <code>dof</code> is handled in the system The resulting local vector can be accessed by attribute <code>ePrev</code> .

Remarks

This member function is to be used if a constructor with `Element` was invoked. It uses the `Element` pointer `_theElement`

void SideVector (const Vect< real.t > & b) [inherited]

Localize Side Vector.

Parameters

in	<i>b</i>	Global vector to be localized <ul style="list-style-type: none"> • <code>NODE_FIELD</code>, DOFs are supported by nodes [default] • <code>ELEMENT_FIELD</code>, DOFs are supported by elements • <code>SIDE_FIELD</code>, DOFs are supported by sides The resulting local vector can be accessed by attribute <code>ePrev</code> .
----	----------	---

Remarks

This member function is to be used if a constructor with `Side` was invoked. It uses the `Side` pointer `_theSide`

void ElementNodeCoordinates () [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array `_x[0]`, `_x[1]`, ... which are instances of class [Point<real.t>](#)

Remarks

This member function uses the `Side` pointer `_theSide`

void SideNodeCoordinates () [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array `_x[0]`, `_x[1]`, ... which are instances of class [Point<real_t>](#)

Remarks

This member function uses the Element pointer `_theElement`

void ElementAssembly (Matrix< real_t > * A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScMatrix< real_t > & A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Reference to global matrix
----------	----------------------------

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScVect< real_t > & b) [inherited]

Assemble element right-hand side vector into global one.

Parameters

<i>b</i>	Reference to global right-hand side vector
----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (BMatrix< real_t > & A) [inherited]

Assemble element matrix into global one.

Parameters

A	Global matrix stored as a BMatrix instance
-----	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkSMatrix< real.t > &A) [inherited]

Assemble element matrix into global one.

Parameters

A	Global matrix stored as an SkSMatrix instance
-----	---

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkMatrix< real.t > &A) [inherited]

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an SkMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SpMatrix< real.t > &A) [inherited]

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an SpMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (TrMatrix< real.t > &A) [inherited]

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an TrMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable theElement

void ElementAssembly (Vect< real.t > & v) [inherited]

Assemble element vector into global one.

Parameters

in	v	Global vector (Vect instance)
----	-----	-------------------------------

Warning

The element pointer is given by the global variable theElement

void SideAssembly (PETScMatrix< real.t > & A) [inherited]

Assemble side matrix into global one.

Parameters

A	Reference to global matrix
-----	----------------------------

Warning

The side pointer is given by the global variable theSide

void SideAssembly (PETScVect< real.t > & b) [inherited]

Assemble side right-hand side vector into global one.

Parameters

b	Reference to global right-hand side vector
-----	--

Warning

The side pointer is given by the global variable theSide

void SideAssembly (Matrix< real.t > * A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

<i>A</i>	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
----------	--

Warning

The side pointer is given by the global variable theSide

void SideAssembly (SkSMatrix< real.t > & *A*) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an SkSMatrix instance
----	----------	---

Warning

The side pointer is given by the global variable theSide

void SideAssembly (SkMatrix< real.t > & *A*) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an SkMatrix instance
----	----------	--

Warning

The side pointer is given by the global variable theSide

void SideAssembly (SpMatrix< real.t > & *A*) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an SpMatrix instance
----	----------	--

Warning

The side pointer is given by the global variable theSide

void SideAssembly (Vect< real.t > & *v*) [inherited]

Assemble side (edge or face) vector into global one.

Parameters

in	v	Global vector (Vect instance)
----	-----	-------------------------------

Warning

The side pointer is given by the global variable `theSide`

void DGElementAssembly (Matrix< real.t > * A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
---	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SkSMatrix< real.t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

A	Global matrix stored as an SkSMatrix instance
---	---

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SkMatrix< real.t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SpMatrix< real.t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	A	Global matrix stored as an SpMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (TrMatrix< real.t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	A	Global matrix stored as an TrMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void AxbAssembly (const Element & el , const Vect< real.t > & x , Vect< real.t > & b)
[inherited]

Assemble product of element matrix by element vector into global vector.

Parameters

in	el	Reference to Element instance
in	x	Global vector to multiply by (Vect instance)
out	b	Global vector to add (Vect instance)

void AxbAssembly (const Side & sd , const Vect< real.t > & x , Vect< real.t > & b)
[inherited]

Assemble product of side matrix by side vector into global vector.

Parameters

in	sd	Reference to Side instance
in	x	Global vector to multiply by (Vect instance)
out	b	Global vector (Vect instance)

real.t setMaterialProperty (const string & exp , const string & $prop$) [inherited]

Define a material property by an algebraic expression.

Parameters

in	<i>exp</i>	Algebraic expression
in	<i>prop</i>	Property name

Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

Mesh& getMesh () const [inherited]

Return reference to Mesh instance.

Returns

Reference to Mesh instance

void setSolver (Iteration *ls*, Preconditioner *pc* = IDENT_PREC) [inherited]

Choose solver for the linear system.

Parameters

in	<i>ls</i>	<p>Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER</p> <ul style="list-style-type: none"> • DIRECT_SOLVER, Use a facorization solver [default] • CG_SOLVER, Conjugate Gradient iterative solver • CGS_SOLVER, Squared Conjugate Gradient iterative solver • BICG_SOLVER, BiConjugate Gradient iterative solver • BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver • GMRES_SOLVER, GMRES iterative solver • QMR_SOLVER, QMR iterative solver
in	<i>pc</i>	<p>Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:</p> <ul style="list-style-type: none"> • IDENT_PREC, Identity preconditioner (no preconditioning [default]) • DIAG_PREC, Diagonal preconditioner • ILU_PREC, Incomplete LU factorization preconditioner

int SolveLinearSystem (Matrix< real_t > * A, Vect< real_t > & b, Vect< real_t > & x)
 [inherited]

Solve the linear system.

Parameters

in	A	Pointer to matrix of the system (Instance of class SpMatrix)
in	b	Vector containing right-hand side
in,out	x	Vector containing initial guess of solution on input, actual solution on output

7.53.4 Member Data Documentation

LocalVect<real_t,NEE_> ePrev [inherited]


LocalVect instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

7.54 Laplace1DL3 Class Reference

To build element equation for the 1-D elliptic equation using the 3-Node line (P₂).

Inheritance diagram for Laplace1DL3:

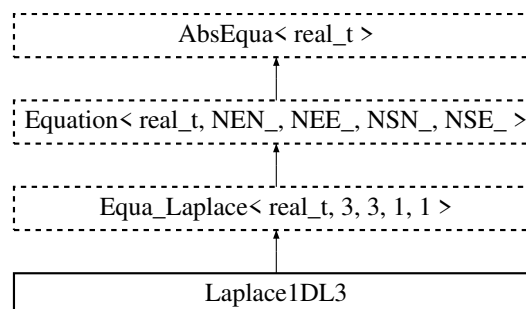

Public Member Functions

- **Laplace1DL3** (Mesh &ms, Vect< real_t > &u)
- **Laplace1DL3** (Element *el)
Constructor for an element.
- **~Laplace1DL3** ()
Destructor.
- void **Matrix** (real_t coef=1.)
Add finite element matrix to left hand side.
- void **BodyRHS** (const Vect< real_t > &f)
Add Right-hand side contribution.
- void **BoundaryRHS** (int n, real_t p)
Add Neumann contribution to Right-Hand Side.
- void **setTraction** (real_t f, int lr)
Set Traction data.

- int `run` ()
- virtual void `build` ()
Solve the equation.
- void `build` (`EigenProblemSolver` &`e`)
Build the linear system for an eigenvalue problem.
- virtual void `buildEigen` (int `opt`=0)
Build matrices for an eigenvalue problem.
- void `updateBC` (const `Element` &`el`, const `Vect`< `real.t` > &`bc`)
Update Right-Hand side by taking into account essential boundary conditions.
- void `updateBC` (const `Vect`< `real.t` > &`bc`)
Update Right-Hand side by taking into account essential boundary conditions.
- void `DiagBC` (int `dof.type`=`NODE.DOF`, int `dof`=0)
Update element matrix to impose bc by diagonalization technique.
- void `LocalNodeVector` (`Vect`< `real.t` > &`b`)
Localize Element Vector from a Vect instance.
- void `ElementNodeVector` (const `Vect`< `real.t` > &`b`, `LocalVect`< `real.t`, `NEE_` > &`be`)
Localize Element Vector from a Vect instance.
- void `ElementNodeVector` (const `Vect`< `real.t` > &`b`, `LocalVect`< `real.t`, `NEN_` > &`be`, int `dof`)
Localize Element Vector from a Vect instance.
- void `ElementNodeVectorSingleDOF` (const `Vect`< `real.t` > &`b`, `LocalVect`< `real.t`, `NEN_` > &`be`)
Localize Element Vector from a Vect instance.
- void `ElementSideVector` (const `Vect`< `real.t` > &`b`, `LocalVect`< `real.t`, `NSE_` > &`be`)
Localize Element Vector from a Vect instance.
- void `ElementVector` (const `Vect`< `real.t` > &`b`, int `dof.type`=`NODE.FIELD`, int `flag`=0)
Localize Element Vector.
- void `SideVector` (const `Vect`< `real.t` > &`b`)
Localize Side Vector.
- void `ElementNodeCoordinates` ()
Localize coordinates of element nodes.
- void `SideNodeCoordinates` ()
Localize coordinates of side nodes.
- void `ElementAssembly` (`Matrix`< `real.t` > *`A`)
Assemble element matrix into global one.
- void `ElementAssembly` (`PETScMatrix`< `real.t` > &`A`)
Assemble element matrix into global one.
- void `ElementAssembly` (`PETScVect`< `real.t` > &`b`)
Assemble element right-hand side vector into global one.
- void `ElementAssembly` (`BMatrix`< `real.t` > &`A`)
Assemble element matrix into global one.
- void `ElementAssembly` (`SkSMatrix`< `real.t` > &`A`)
Assemble element matrix into global one.
- void `ElementAssembly` (`SkMatrix`< `real.t` > &`A`)
Assemble element matrix into global one.
- void `ElementAssembly` (`SpMatrix`< `real.t` > &`A`)
Assemble element matrix into global one.
- void `ElementAssembly` (`TrMatrix`< `real.t` > &`A`)

- Assemble element matrix into global one.*
 - void [ElementAssembly](#) ([Vect](#)< [real.t](#) > &[v](#))
- Assemble element vector into global one.*
 - void [SideAssembly](#) ([PETScMatrix](#)< [real.t](#) > &[A](#))
- Assemble side matrix into global one.*
 - void [SideAssembly](#) ([PETScVect](#)< [real.t](#) > &[b](#))
- Assemble side right-hand side vector into global one.*
 - void [SideAssembly](#) ([Matrix](#)< [real.t](#) > *[A](#))
- Assemble side (edge or face) matrix into global one.*
 - void [SideAssembly](#) ([SkSMatrix](#)< [real.t](#) > &[A](#))
- Assemble side (edge or face) matrix into global one.*
 - void [SideAssembly](#) ([SkMatrix](#)< [real.t](#) > &[A](#))
- Assemble side (edge or face) matrix into global one.*
 - void [SideAssembly](#) ([SpMatrix](#)< [real.t](#) > &[A](#))
- Assemble side (edge or face) matrix into global one.*
 - void [SideAssembly](#) ([Vect](#)< [real.t](#) > &[v](#))
- Assemble side (edge or face) vector into global one.*
 - void [DGElementAssembly](#) ([Matrix](#)< [real.t](#) > *[A](#))
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
 - void [DGElementAssembly](#) ([SkSMatrix](#)< [real.t](#) > &[A](#))
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
 - void [DGElementAssembly](#) ([SkMatrix](#)< [real.t](#) > &[A](#))
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
 - void [DGElementAssembly](#) ([SpMatrix](#)< [real.t](#) > &[A](#))
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
 - void [DGElementAssembly](#) ([TrMatrix](#)< [real.t](#) > &[A](#))
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
 - void [AxbAssembly](#) (const [Element](#) &[el](#), const [Vect](#)< [real.t](#) > &[x](#), [Vect](#)< [real.t](#) > &[b](#))
- Assemble product of element matrix by element vector into global vector.*
 - void [AxbAssembly](#) (const [Side](#) &[sd](#), const [Vect](#)< [real.t](#) > &[x](#), [Vect](#)< [real.t](#) > &[b](#))
- Assemble product of side matrix by side vector into global vector.*
 - [size.t](#) [getNbNodes](#) () const
- Return number of element nodes.*
 - [size.t](#) [getNbEq](#) () const
- Return number of element equations.*
 - void [setInitialSolution](#) (const [Vect](#)< [real.t](#) > &[u](#))
- Set initial solution (previous time step)*
 - [real.t](#) [setMaterialProperty](#) (const string &[exp](#), const string &[prop](#))
- Define a material property by an algebraic expression.*
 - void [setMesh](#) ([Mesh](#) &[m](#))
- Define mesh and renumber DOFs after removing imposed ones.*
 - [Mesh](#) & [getMesh](#) () const
- Return reference to Mesh instance.*
 - [LinearSolver](#)< [real.t](#) > & [getLinearSolver](#) ()
- Return reference to linear solver instance.*
 - void [setSolver](#) ([Iteration](#) [ls](#), [Preconditioner](#) [pc](#)=[IDENT_PREC](#))
- Choose solver for the linear system.*
 - int [SolveLinearSystem](#) ([Matrix](#)< [real.t](#) > *[A](#), [Vect](#)< [real.t](#) > &[b](#), [Vect](#)< [real.t](#) > &[x](#))
- Solve the linear system.*

Public Attributes

- **LocalMatrix**< [real.t](#), NEE_, NEE_ > **eMat**
LocalMatrix instance containing local matrix associated to current element.
- **LocalMatrix**< [real.t](#), NSE_, NSE_ > **sMat**
LocalMatrix instance containing local matrix associated to current side.
- **LocalVect**< [real.t](#), NEE_ > **ePrev**
LocalVect instance containing local vector associated to current element.
- **LocalVect**< [real.t](#), NEE_ > **eRHS**
LocalVect instance containing local right-hand side vector associated to current element.
- **LocalVect**< [real.t](#), NEE_ > **eRes**
LocalVect instance containing local residual vector associated to current element.
- **LocalVect**< [real.t](#), NSE_ > **sRHS**
LocalVect instance containing local right-hand side vector associated to current side.

Protected Member Functions

- void **Init** (const [Element](#) *el)
Set element arrays to zero.
- void **Init** (const [Side](#) *sd)
Set side arrays to zero.

7.54.1 Detailed Description

To build element equation for the 1-D elliptic equation using the 3-Node line (P_2).

7.54.2 Constructor & Destructor Documentation

Laplace1DL3 ([Mesh](#) & *ms*, [Vect](#)< [real.t](#) > & *u*)

Constructor using mesh instance and solution vector

Parameters

in	<i>ms</i>	Mesh instance
in,out	<i>u</i>	Vect instance that contains, after execution of run() the solution

7.54.3 Member Function Documentation

void Matrix ([real.t](#) *coef* = 1.)

Add finite element matrix to left hand side.

Parameters

in	<i>coef</i>	Value to multiply by the added matrix
----	-------------	---------------------------------------

void BodyRHS (const [Vect](#)< [real.t](#) > & *f*)

Add Right-hand side contribution.

Parameters

in	f	Vector of right-hand side of the Poisson equation at nodes
----	-----	--

void BoundaryRHS (int n , real_t p)

Add Neumann contribution to Right-Hand Side.

Parameters

in	n	Parameter to select equal to 0 if the condition is at the left end of the domain and different if it is at the right of it
in	p	Value of flux to add

Note

This member function is to be invoked only for the first or last element

void setTraction (real_t f , int lr)

Set Traction data.

Parameters

in	f	Value of traction (Neumann boundary condition)
in	lr	Option to choose location of the traction (-1: Left end, 1: Right end)

int run ()

Run solution procedure This function is to be called when the constructor **Laplace1DL2(mesh,u)** is used.

Returns

return code for the solution of the linear system

void build (EigenProblemSolver & e) [inherited]

Build the linear system for an eigenvalue problem.

Parameters

in	e	Reference to used EigenProblemSolver instance
----	-----	---

void updateBC (const Element & el , const Vect< real_t > & bc) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>el</i>	Reference to current element instance
in	<i>bc</i>	Vector that contains imposed values at all DOFs

void updateBC (const Vect< real.t > & bc) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>bc</i>	Vector that contains imposed values at all DOFs
----	-----------	---

Remarks

The current element is pointed by `_theElement`

void DiagBC (int dof.type = NODE_DOF, int dof = 0) [inherited]

Update element matrix to impose bc by diagonalization technique.

Parameters

in	<i>dof.type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • <code>NODE_FIELD</code>, DOFs are supported by nodes [Default] • <code>ELEMENT_FIELD</code>, DOFs are supported by elements • <code>SIDE_FIELD</code>, DOFs are supported by sides
in	<i>dof</i>	DOF setting: <ul style="list-style-type: none"> • <code>= 0</code>, All DOFs are taken into account [Default] • <code>!= 0</code>, Only DOF No. <code>dof</code> is handled in the system

void LocalNodeVector (Vect< real.t > & b) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Reference to global vector to be localized. The resulting local vector can be accessed by attribute <code>ePrev</code> . This member function is to be used if a constructor with <code>Element</code> was invoked.
----	----------	---

void ElementNodeVector (const Vect< real_t > & b, LocalVect< real_t, NEE_ > & be)
[inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

All degrees of freedom are transferred to the local vector

void ElementNodeVector (const Vect< real_t > & b, LocalVect< real_t, NEN_ > & be, int dof)
[inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.
in	<i>dof</i>	Degree of freedom to transfer to the local vector

Remarks

Only yhe dega dof is transferred to the local vector

void ElementNodeVectorSingleDOF (const Vect< real_t > & b, LocalVect< real_t, NEN_ > & be)
[inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

Vector b is assumed to contain only one degree of freedom by node.

void ElementSideVector (const Vect< real_t > & b, LocalVect< real_t, NSE_ > & be)
[inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
----	----------	--------------------------------

Parameters

out	<i>be</i>	Local vector, the length of which is
-----	-----------	--------------------------------------

void ElementVector (const Vect< real_t > & b, int dof_type = NODE_FIELD, int flag = 0)
[inherited]

Localize Element Vector.

Parameters

in	<i>b</i>	Global vector to be localized
in	<i>dof_type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • NODE_FIELD, DOFs are supported by nodes [Default] • ELEMENT_FIELD, DOFs are supported by elements • SIDE_FIELD, DOFs are supported by sides
in	<i>flag</i>	Option to set: <ul style="list-style-type: none"> • = 0, All DOFs are taken into account [Default] • != 0, Only DOF number dof is handled in the system The resulting local vector can be accessed by attribute ePrev.

Remarks

This member function is to be used if a constructor with Element was invoked. It uses the Element pointer `_theElement`

void SideVector (const Vect< real_t > & b) [inherited]

Localize Side Vector.

Parameters

in	<i>b</i>	Global vector to be localized <ul style="list-style-type: none"> • NODE_FIELD, DOFs are supported by nodes [default] • ELEMENT_FIELD, DOFs are supported by elements • SIDE_FIELD, DOFs are supported by sides The resulting local vector can be accessed by attribute ePrev.
----	----------	--

Remarks

This member function is to be used if a constructor with Side was invoked. It uses the Side pointer `_theSide`

void ElementNodeCoordinates () [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array `_x[0]`, `_x[1]`, ... which are instances of class [Point<real_t>](#)

Remarks

This member function uses the Side pointer `_theSide`

void SideNodeCoordinates () [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array `_x[0]`, `_x[1]`, ... which are instances of class [Point<real_t>](#)

Remarks

This member function uses the Element pointer `_theElement`

void ElementAssembly (Matrix< real_t > * A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Pointer to global matrix (abstract class: can be any of classes <code>SkSMatrix</code> , <code>SkMatrix</code> , <code>SpMatrix</code>)
----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScMatrix< real_t > & A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Reference to global matrix
----------	----------------------------

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScVect< real_t > & b) [inherited]

Assemble element right-hand side vector into global one.

Parameters

<i>b</i>	Reference to global right-hand side vector
----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (BMatrix< real_t > & A) [inherited]

Assemble element matrix into global one.

Parameters

<code>A</code>	Global matrix stored as a BMatrix instance
----------------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkSMatrix< real_t > & A) [inherited]

Assemble element matrix into global one.

Parameters

<code>A</code>	Global matrix stored as an SkSMatrix instance
----------------	---

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkMatrix< real_t > & A) [inherited]

Assemble element matrix into global one.

Parameters

<code>in</code>	<code>A</code>	Global matrix stored as an SkMatrix instance
-----------------	----------------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SpMatrix< real_t > & A) [inherited]

Assemble element matrix into global one.

Parameters

<code>in</code>	<code>A</code>	Global matrix stored as an SpMatrix instance
-----------------	----------------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (TrMatrix< real.t > & A) [inherited]

Assemble element matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an TrMatrix instance
----	----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (Vect< real.t > & v) [inherited]

Assemble element vector into global one.

Parameters

in	<i>v</i>	Global vector (Vect instance)
----	----------	-------------------------------

Warning

The element pointer is given by the global variable `theElement`

void SideAssembly (PETScMatrix< real.t > & A) [inherited]

Assemble side matrix into global one.

Parameters

<i>A</i>	Reference to global matrix
----------	----------------------------

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (PETScVect< real.t > & b) [inherited]

Assemble side right-hand side vector into global one.

Parameters

<i>b</i>	Reference to global right-hand side vector
----------	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (Matrix< real.t > * A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
---	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SkSMatrix< real.t > & A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	A	Global matrix stored as an SkSMatrix instance
----	---	---

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SkMatrix< real.t > & A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SpMatrix< real.t > & A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	A	Global matrix stored as an SpMatrix instance
----	---	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (Vect< real_t > & v) [inherited]

Assemble side (edge or face) vector into global one.

Parameters

in	<i>v</i>	Global vector (Vect instance)
----	----------	-------------------------------

Warning

The side pointer is given by the global variable `theSide`

void DGElementAssembly (Matrix< real_t > * A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

<i>A</i>	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
----------	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SkSMatrix< real_t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

<i>A</i>	Global matrix stored as an SkSMatrix instance
----------	---

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SkMatrix< real_t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	<i>A</i>	Global matrix stored as an SkMatrix instance
----	----------	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SpMatrix< real.t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	<i>A</i>	Global matrix stored as an SpMatrix instance
----	----------	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (TrMatrix< real.t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	<i>A</i>	Global matrix stored as an TrMatrix instance
----	----------	--

Warning

The element pointer is given by the global variable `theElement`

void AxbAssembly (const Element & *el*, const Vect< real.t > & *x*, Vect< real.t > & *b*)
[inherited]

Assemble product of element matrix by element vector into global vector.

Parameters

in	<i>el</i>	Reference to Element instance
in	<i>x</i>	Global vector to multiply by (Vect instance)
out	<i>b</i>	Global vector to add (Vect instance)

void AxbAssembly (const Side & *sd*, const Vect< real.t > & *x*, Vect< real.t > & *b*)
[inherited]

Assemble product of side matrix by side vector into global vector.

Parameters

in	<i>sd</i>	Reference to Side instance
in	<i>x</i>	Global vector to multiply by (Vect instance)
out	<i>b</i>	Global vector (Vect instance)

real.t setMaterialProperty (const string & *exp*, const string & *prop*) [inherited]

Define a material property by an algebraic expression.

Parameters

in	<i>exp</i>	Algebraic expression
in	<i>prop</i>	Property name

Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

Mesh& getMesh () const [inherited]

Return reference to Mesh instance.

Returns

Reference to Mesh instance

void setSolver (Iteration *ls*, Preconditioner *pc* = IDENT_PREC) [inherited]

Choose solver for the linear system.

Parameters

in	<i>ls</i>	<p>Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER</p> <ul style="list-style-type: none"> • DIRECT_SOLVER, Use a facorization solver [default] • CG_SOLVER, Conjugate Gradient iterative solver • CGS_SOLVER, Squared Conjugate Gradient iterative solver • BICG_SOLVER, BiConjugate Gradient iterative solver • BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver • GMRES_SOLVER, GMRES iterative solver • QMR_SOLVER, QMR iterative solver
in	<i>pc</i>	<p>Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:</p> <ul style="list-style-type: none"> • IDENT_PREC, Identity preconditioner (no preconditioning [default]) • DIAG_PREC, Diagonal preconditioner • ILU_PREC, Incomplete LU factorization preconditioner

int SolveLinearSystem (Matrix< real_t > * A, Vect< real_t > & b, Vect< real_t > & x)
 [inherited]

Solve the linear system.

Parameters

in	<i>A</i>	Pointer to matrix of the system (Instance of class SpMatrix)
in	<i>b</i>	Vector containing right-hand side
in,out	<i>x</i>	Vector containing initial guess of solution on input, actual solution on output

7.54.4 Member Data Documentation

LocalVect<real_t,NEE_> ePrev [inherited]


LocalVect instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

7.55 Laplace2DFVT Class Reference

To build and solve the Laplace equation using a standard Finite Volume method.

Inheritance diagram for Laplace2DFVT:

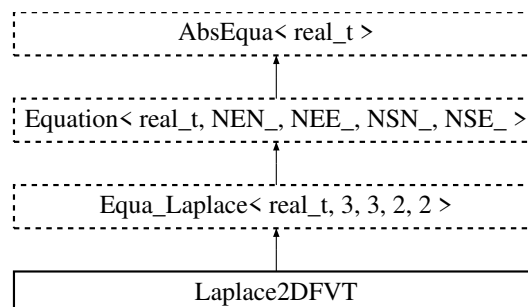

Public Member Functions

- **Laplace2DFVT** (Mesh &ms, Vect< real_t > &b, Vect< real_t > &u)
Standard constructor.
- **Laplace2DFVT** (Mesh &ms, SpMatrix< real_t > &A, Vect< real_t > &b)
Standard constructor.
- **~Laplace2DFVT** ()
Destructor.
- **int checkDelaunay** (int verb=0)
Check whether triangles are Delaunay ones.
- **void build** (const Vect< real_t > &f)
Build the linear system of equations.
- **int run** (const Vect< real_t > &f)
Build and solve the linear system of equations.
- **void LHS** (const Element *e1, const Element *e2)

- Calculate left-hand side.*
- void **RHS** (const **Vect**< **real_t** > &f)
 - Add right-hand side Contribution.*
- virtual void **build** ()
 - Solve the equation.*
- void **build** (**EigenProblemSolver** &e)
 - Build the linear system for an eigenvalue problem.*
- virtual void **buildEigen** (int opt=0)
 - Build matrices for an eigenvalue problem.*
- void **updateBC** (const **Element** &el, const **Vect**< **real_t** > &bc)
 - Update Right-Hand side by taking into account essential boundary conditions.*
- void **updateBC** (const **Vect**< **real_t** > &bc)
 - Update Right-Hand side by taking into account essential boundary conditions.*
- void **DiagBC** (int dof_type=NODE.DOF, int dof=0)
 - Update element matrix to impose bc by diagonalization technique.*
- void **LocalNodeVector** (**Vect**< **real_t** > &b)
 - Localize Element Vector from a Vect instance.*
- void **ElementNodeVector** (const **Vect**< **real_t** > &b, **LocalVect**< **real_t**, NEE_ > &be)
 - Localize Element Vector from a Vect instance.*
- void **ElementNodeVector** (const **Vect**< **real_t** > &b, **LocalVect**< **real_t**, NEN_ > &be, int dof)
 - Localize Element Vector from a Vect instance.*
- void **ElementNodeVectorSingleDOF** (const **Vect**< **real_t** > &b, **LocalVect**< **real_t**, NEN_ > &be)
 - Localize Element Vector from a Vect instance.*
- void **ElementSideVector** (const **Vect**< **real_t** > &b, **LocalVect**< **real_t**, NSE_ > &be)
 - Localize Element Vector from a Vect instance.*
- void **ElementVector** (const **Vect**< **real_t** > &b, int dof_type=NODE.FIELD, int flag=0)
 - Localize Element Vector.*
- void **SideVector** (const **Vect**< **real_t** > &b)
 - Localize Side Vector.*
- void **ElementNodeCoordinates** ()
 - Localize coordinates of element nodes.*
- void **SideNodeCoordinates** ()
 - Localize coordinates of side nodes.*
- void **ElementAssembly** (**Matrix**< **real_t** > *A)
 - Assemble element matrix into global one.*
- void **ElementAssembly** (**PETScMatrix**< **real_t** > &A)
 - Assemble element matrix into global one.*
- void **ElementAssembly** (**PETScVect**< **real_t** > &b)
 - Assemble element right-hand side vector into global one.*
- void **ElementAssembly** (**BMatrix**< **real_t** > &A)
 - Assemble element matrix into global one.*
- void **ElementAssembly** (**SkSMatrix**< **real_t** > &A)
 - Assemble element matrix into global one.*
- void **ElementAssembly** (**SkMatrix**< **real_t** > &A)
 - Assemble element matrix into global one.*
- void **ElementAssembly** (**SpMatrix**< **real_t** > &A)

- Assemble element matrix into global one.*
 - void [ElementAssembly](#) ([TrMatrix](#)< [real.t](#) > &A)
- Assemble element matrix into global one.*
 - void [ElementAssembly](#) ([Vect](#)< [real.t](#) > &v)
- Assemble element vector into global one.*
 - void [SideAssembly](#) ([PETScMatrix](#)< [real.t](#) > &A)
- Assemble side matrix into global one.*
 - void [SideAssembly](#) ([PETScVect](#)< [real.t](#) > &b)
- Assemble side right-hand side vector into global one.*
 - void [SideAssembly](#) ([Matrix](#)< [real.t](#) > *A)
- Assemble side (edge or face) matrix into global one.*
 - void [SideAssembly](#) ([SkSMatrix](#)< [real.t](#) > &A)
- Assemble side (edge or face) matrix into global one.*
 - void [SideAssembly](#) ([SkMatrix](#)< [real.t](#) > &A)
- Assemble side (edge or face) matrix into global one.*
 - void [SideAssembly](#) ([SpMatrix](#)< [real.t](#) > &A)
- Assemble side (edge or face) matrix into global one.*
 - void [SideAssembly](#) ([Vect](#)< [real.t](#) > &v)
- Assemble side (edge or face) vector into global one.*
 - void [DGElementAssembly](#) ([Matrix](#)< [real.t](#) > *A)
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
 - void [DGElementAssembly](#) ([SkSMatrix](#)< [real.t](#) > &A)
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
 - void [DGElementAssembly](#) ([SkMatrix](#)< [real.t](#) > &A)
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
 - void [DGElementAssembly](#) ([SpMatrix](#)< [real.t](#) > &A)
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
 - void [DGElementAssembly](#) ([TrMatrix](#)< [real.t](#) > &A)
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
 - void [AxbAssembly](#) (const [Element](#) &el, const [Vect](#)< [real.t](#) > &x, [Vect](#)< [real.t](#) > &b)
- Assemble product of element matrix by element vector into global vector.*
 - void [AxbAssembly](#) (const [Side](#) &sd, const [Vect](#)< [real.t](#) > &x, [Vect](#)< [real.t](#) > &b)
- Assemble product of side matrix by side vector into global vector.*
 - size_t [getNbNodes](#) () const
- Return number of element nodes.*
 - size_t [getNbEq](#) () const
- Return number of element equations.*
 - void [setInitialSolution](#) (const [Vect](#)< [real.t](#) > &u)
- Set initial solution (previous time step)*
 - [real.t](#) [setMaterialProperty](#) (const string &exp, const string &prop)
- Define a material property by an algebraic expression.*
 - void [setMesh](#) ([Mesh](#) &m)
- Define mesh and renumber DOFs after removing imposed ones.*
 - [Mesh](#) & [getMesh](#) () const
- Return reference to Mesh instance.*
 - [LinearSolver](#)< [real.t](#) > & [getLinearSolver](#) ()

Return reference to linear solver instance.

- void [setSolver](#) ([Iteration](#) ls, [Preconditioner](#) pc=IDENT_PREC)

Choose solver for the linear system.

- int [SolveLinearSystem](#) ([Matrix](#)< real.t > *A, [Vect](#)< real.t > &b, [Vect](#)< real.t > &x)

Solve the linear system.

Public Attributes

- [LocalMatrix](#)< real.t, NEE_, NEE_ > [eMat](#)

LocalMatrix instance containing local matrix associated to current element.

- [LocalMatrix](#)< real.t, NSE_, NSE_ > [sMat](#)

LocalMatrix instance containing local matrix associated to current side.

- [LocalVect](#)< real.t, NEE_ > [ePrev](#)

LocalVect instance containing local vector associated to current element.

- [LocalVect](#)< real.t, NEE_ > [eRHS](#)

LocalVect instance containing local right-hand side vector associated to current element.

- [LocalVect](#)< real.t, NEE_ > [eRes](#)

LocalVect instance containing local residual vector associated to current element.

- [LocalVect](#)< real.t, NSE_ > [sRHS](#)

LocalVect instance containing local right-hand side vector associated to current side.

Protected Member Functions

- void [Init](#) (const [Element](#) *el)

Set element arrays to zero.

- void [Init](#) (const [Side](#) *sd)

Set side arrays to zero.

7.55.1 Detailed Description

To build and solve the Laplace equation using a standard Finite Volume method.

7.55.2 Constructor & Destructor Documentation

[Laplace2DFVT](#) ([Mesh](#) & *ms*, [Vect](#)< real.t > & *b*, [Vect](#)< real.t > & *u*)

Standard constructor.

Parameters

in	<i>ms</i>	Mesh instance
in	<i>b</i>	Vect instance that contains Right-hand side
in	<i>u</i>	Vect instance that contains solution

[Laplace2DFVT](#) ([Mesh](#) & *ms*, [SpMatrix](#)< real.t > & *A*, [Vect](#)< real.t > & *b*)

Standard constructor.

Parameters

in	<i>ms</i>	Mesh instance. The mesh must have been assigned the attribute <code>ELEMENT_DOF</code> to say that unknowns are supported by elements.
in	<i>A</i>	Problem matrix to be stored in sparse format (class SpMatrix)
in	<i>b</i>	Vect instance that contains Right-hand side

7.55.3 Member Function Documentation

int checkDelaunay (int *verb* = 0)

Check whether triangles are Delaunay ones.

Parameters

in	<i>verb</i>	Output (>0) or not (0) list of failing elements
----	-------------	---

Returns

ret Number of Non Delaunay triangles

void build (EigenProblemSolver & *e*) [inherited]

Build the linear system for an eigenvalue problem.

Parameters

in	<i>e</i>	Reference to used EigenProblemSolver instance
----	----------	---

void updateBC (const Element & *el*, const Vect< real_t > & *bc*) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>el</i>	Reference to current element instance
in	<i>bc</i>	Vector that contains imposed values at all DOFs

void updateBC (const Vect< real_t > & *bc*) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>bc</i>	Vector that contains imposed values at all DOFs
----	-----------	---

Remarks

The current element is pointed by `_theElement`

void DiagBC (int *dof_type* = *NODE_DOF*, int *dof* = 0) [inherited]

Update element matrix to impose bc by diagonalization technique.

Parameters

in	<i>dof_type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • <i>NODE_FIELD</i>, DOFs are supported by nodes [Default] • <i>ELEMENT_FIELD</i>, DOFs are supported by elements • <i>SIDE_FIELD</i>, DOFs are supported by sides
in	<i>dof</i>	DOF setting: <ul style="list-style-type: none"> • = 0, All DOFs are taken into account [Default] • != 0, Only DOF No. <i>dof</i> is handled in the system

void LocalNodeVector (Vect< real.t > & *b*) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Reference to global vector to be localized. The resulting local vector can be accessed by attribute <i>ePrev</i> . This member function is to be used if a constructor with <i>Element</i> was invoked.
----	----------	---

void ElementNodeVector (const Vect< real.t > & *b*, LocalVect< real.t, NEE_ > & *be*)
[inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

All degrees of freedom are transferred to the local vector

void ElementNodeVector (const Vect< real_t > & b, LocalVect< real_t, NEN_ > & be, int dof) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.
in	<i>dof</i>	Degree of freedom to transfer to the local vector

Remarks

Only yhe dega dof is transferred to the local vector

void ElementNodeVectorSingleDOF (const Vect< real_t > & b, LocalVect< real_t, NEN_ > & be) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

Vector b is assumed to contain only one degree of freedom by node.

void ElementSideVector (const Vect< real_t > & b, LocalVect< real_t, NSE_ > & be) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is

void ElementVector (const Vect< real_t > & b, int dof_type = NODE_FIELD, int flag = 0) [inherited]

Localize Element Vector.

Parameters

in	<i>b</i>	Global vector to be localized
in	<i>dof_type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • <code>NODE_FIELD</code>, DOFs are supported by nodes [Default] • <code>ELEMENT_FIELD</code>, DOFs are supported by elements • <code>SIDE_FIELD</code>, DOFs are supported by sides
in	<i>flag</i>	Option to set: <ul style="list-style-type: none"> • <code>= 0</code>, All DOFs are taken into account [Default] • <code>!= 0</code>, Only DOF number <code>dof</code> is handled in the system The resulting local vector can be accessed by attribute <code>ePrev</code> .

Remarks

This member function is to be used if a constructor with `Element` was invoked. It uses the `Element` pointer `_theElement`

void SideVector (const Vect< real.t > & b) [inherited]

Localize Side Vector.

Parameters

in	<i>b</i>	Global vector to be localized <ul style="list-style-type: none"> • <code>NODE_FIELD</code>, DOFs are supported by nodes [default] • <code>ELEMENT_FIELD</code>, DOFs are supported by elements • <code>SIDE_FIELD</code>, DOFs are supported by sides The resulting local vector can be accessed by attribute <code>ePrev</code> .
----	----------	---

Remarks

This member function is to be used if a constructor with `Side` was invoked. It uses the `Side` pointer `_theSide`

void ElementNodeCoordinates () [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array `_x[0]`, `_x[1]`, ... which are instances of class [Point<real.t>](#)

Remarks

This member function uses the `Side` pointer `_theSide`

void SideNodeCoordinates () [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array `_x[0]`, `_x[1]`, ... which are instances of class [Point<real_t>](#)

Remarks

This member function uses the Element pointer `_theElement`

void ElementAssembly (Matrix< real_t > * A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScMatrix< real_t > & A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Reference to global matrix
----------	----------------------------

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScVect< real_t > & b) [inherited]

Assemble element right-hand side vector into global one.

Parameters

<i>b</i>	Reference to global right-hand side vector
----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (BMatrix< real_t > & A) [inherited]

Assemble element matrix into global one.

Parameters

A	Global matrix stored as a BMatrix instance
-----	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkSMatrix< real.t > &A) [inherited]

Assemble element matrix into global one.

Parameters

A	Global matrix stored as an SkSMatrix instance
-----	---

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkMatrix< real.t > &A) [inherited]

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an SkMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SpMatrix< real.t > &A) [inherited]

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an SpMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (TrMatrix< real.t > &A) [inherited]

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an TrMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable theElement

void ElementAssembly (Vect< real.t > & v) [inherited]

Assemble element vector into global one.

Parameters

in	v	Global vector (Vect instance)
----	-----	-------------------------------

Warning

The element pointer is given by the global variable theElement

void SideAssembly (PETScMatrix< real.t > & A) [inherited]

Assemble side matrix into global one.

Parameters

A	Reference to global matrix
-----	----------------------------

Warning

The side pointer is given by the global variable theSide

void SideAssembly (PETScVect< real.t > & b) [inherited]

Assemble side right-hand side vector into global one.

Parameters

b	Reference to global right-hand side vector
-----	--

Warning

The side pointer is given by the global variable theSide

void SideAssembly (Matrix< real.t > * A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

<i>A</i>	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
----------	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SkSMatrix< real.t > & *A*) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an SkSMatrix instance
----	----------	---

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SkMatrix< real.t > & *A*) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an SkMatrix instance
----	----------	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SpMatrix< real.t > & *A*) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an SpMatrix instance
----	----------	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (Vect< real.t > & *v*) [inherited]

Assemble side (edge or face) vector into global one.

Parameters

in	v	Global vector (Vect instance)
----	-----	-------------------------------

Warning

The side pointer is given by the global variable `theSide`

void DGElementAssembly (Matrix< real.t > * A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
---	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SkSMatrix< real.t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

A	Global matrix stored as an SkSMatrix instance
---	---

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SkMatrix< real.t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SpMatrix< real.t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	A	Global matrix stored as an SpMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (TrMatrix< real.t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	A	Global matrix stored as an TrMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void AxbAssembly (const Element & el , const Vect< real.t > & x , Vect< real.t > & b)
[inherited]

Assemble product of element matrix by element vector into global vector.

Parameters

in	el	Reference to Element instance
in	x	Global vector to multiply by (Vect instance)
out	b	Global vector to add (Vect instance)

void AxbAssembly (const Side & sd , const Vect< real.t > & x , Vect< real.t > & b)
[inherited]

Assemble product of side matrix by side vector into global vector.

Parameters

in	sd	Reference to Side instance
in	x	Global vector to multiply by (Vect instance)
out	b	Global vector (Vect instance)

real.t setMaterialProperty (const string & exp , const string & $prop$) [inherited]

Define a material property by an algebraic expression.

Parameters

in	<i>exp</i>	Algebraic expression
in	<i>prop</i>	Property name

Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

Mesh& getMesh () const [inherited]

Return reference to Mesh instance.

Returns

Reference to Mesh instance

void setSolver (Iteration *ls*, Preconditioner *pc* = IDENT_PREC) [inherited]

Choose solver for the linear system.

Parameters

in	<i>ls</i>	<p>Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER</p> <ul style="list-style-type: none"> • DIRECT_SOLVER, Use a facorization solver [default] • CG_SOLVER, Conjugate Gradient iterative solver • CGS_SOLVER, Squared Conjugate Gradient iterative solver • BICG_SOLVER, BiConjugate Gradient iterative solver • BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver • GMRES_SOLVER, GMRES iterative solver • QMR_SOLVER, QMR iterative solver
in	<i>pc</i>	<p>Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:</p> <ul style="list-style-type: none"> • IDENT_PREC, Identity preconditioner (no preconditioning [default]) • DIAG_PREC, Diagonal preconditioner • ILU_PREC, Incomplete LU factorization preconditioner

int SolveLinearSystem (Matrix< real_t > * A, Vect< real_t > & b, Vect< real_t > & x)
 [inherited]

Solve the linear system.

Parameters

in	A	Pointer to matrix of the system (Instance of class SpMatrix)
in	b	Vector containing right-hand side
in,out	x	Vector containing initial guess of solution on input, actual solution on output

7.55.4 Member Data Documentation

LocalVect<real_t,NEE_> ePrev [inherited]


LocalVect instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

7.56 Laplace2DMHRT0 Class Reference

To build element equation for the 2-D elliptic equation using the Mixed Hybrid finite element at lowest degree (Raviart-Thomas RT_0).

Inheritance diagram for Laplace2DMHRT0:

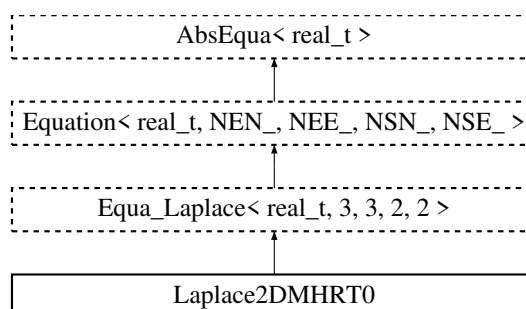

Public Member Functions

- [Laplace2DMHRT0 \(\)](#)
Default Constructor.
- [Laplace2DMHRT0 \(Mesh &ms, SpMatrix< real_t > &A, Vect< real_t > &b\)](#)
Constructor with problem data.
- [~Laplace2DMHRT0 \(\)](#)
Destructor.
- void [setDiffusivity](#) (const [LocalMatrix< real_t, 2, 2 > &K](#))
Define Diffusivity (or permeability) matrix.
- void [build](#) ()
Build global matrix and right-hand side.
- void [Post](#) (const [Vect< real_t > &lambda](#), const [Vect< real_t > &f](#), [Vect< real_t > &v](#), [Vect< Point< real_t > > &p](#), [Vect< real_t > &u](#))

- Perform post calculations.*
- `int solve (Vect< real.t > &u)`
Solve the linear system of equations using the Conjugate Gradient iterative method.
- `void build (EigenProblemSolver &e)`
Build the linear system for an eigenvalue problem.
- `virtual void buildEigen (int opt=0)`
Build matrices for an eigenvalue problem.
- `void updateBC (const Element &el, const Vect< real.t > &bc)`
Update Right-Hand side by taking into account essential boundary conditions.
- `void updateBC (const Vect< real.t > &bc)`
Update Right-Hand side by taking into account essential boundary conditions.
- `void DiagBC (int dof.type=NODE.DOF, int dof=0)`
Update element matrix to impose bc by diagonalization technique.
- `void LocalNodeVector (Vect< real.t > &b)`
Localize Element Vector from a Vect instance.
- `void ElementNodeVector (const Vect< real.t > &b, LocalVect< real.t, NEE_ > &be)`
Localize Element Vector from a Vect instance.
- `void ElementNodeVector (const Vect< real.t > &b, LocalVect< real.t, NEN_ > &be, int dof)`
Localize Element Vector from a Vect instance.
- `void ElementNodeVectorSingleDOF (const Vect< real.t > &b, LocalVect< real.t, NEN_ > &be)`
Localize Element Vector from a Vect instance.
- `void ElementSideVector (const Vect< real.t > &b, LocalVect< real.t, NSE_ > &be)`
Localize Element Vector from a Vect instance.
- `void ElementVector (const Vect< real.t > &b, int dof.type=NODE.FIELD, int flag=0)`
Localize Element Vector.
- `void SideVector (const Vect< real.t > &b)`
Localize Side Vector.
- `void ElementNodeCoordinates ()`
Localize coordinates of element nodes.
- `void SideNodeCoordinates ()`
Localize coordinates of side nodes.
- `void ElementAssembly (Matrix< real.t > *A)`
Assemble element matrix into global one.
- `void ElementAssembly (PETScMatrix< real.t > &A)`
Assemble element matrix into global one.
- `void ElementAssembly (PETScVect< real.t > &b)`
Assemble element right-hand side vector into global one.
- `void ElementAssembly (BMatrix< real.t > &A)`
Assemble element matrix into global one.
- `void ElementAssembly (SkSMatrix< real.t > &A)`
Assemble element matrix into global one.
- `void ElementAssembly (SkMatrix< real.t > &A)`
Assemble element matrix into global one.
- `void ElementAssembly (SpMatrix< real.t > &A)`
Assemble element matrix into global one.
- `void ElementAssembly (TrMatrix< real.t > &A)`

- Assemble element matrix into global one.*
 - void [ElementAssembly](#) ([Vect](#)< [real.t](#) > &[v](#))
- Assemble element vector into global one.*
 - void [SideAssembly](#) ([PETScMatrix](#)< [real.t](#) > &[A](#))
- Assemble side matrix into global one.*
 - void [SideAssembly](#) ([PETScVect](#)< [real.t](#) > &[b](#))
- Assemble side right-hand side vector into global one.*
 - void [SideAssembly](#) ([Matrix](#)< [real.t](#) > *[A](#))
- Assemble side (edge or face) matrix into global one.*
 - void [SideAssembly](#) ([SkSMatrix](#)< [real.t](#) > &[A](#))
- Assemble side (edge or face) matrix into global one.*
 - void [SideAssembly](#) ([SkMatrix](#)< [real.t](#) > &[A](#))
- Assemble side (edge or face) matrix into global one.*
 - void [SideAssembly](#) ([SpMatrix](#)< [real.t](#) > &[A](#))
- Assemble side (edge or face) matrix into global one.*
 - void [SideAssembly](#) ([Vect](#)< [real.t](#) > &[v](#))
- Assemble side (edge or face) vector into global one.*
 - void [DGElementAssembly](#) ([Matrix](#)< [real.t](#) > *[A](#))
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
 - void [DGElementAssembly](#) ([SkSMatrix](#)< [real.t](#) > &[A](#))
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
 - void [DGElementAssembly](#) ([SkMatrix](#)< [real.t](#) > &[A](#))
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
 - void [DGElementAssembly](#) ([SpMatrix](#)< [real.t](#) > &[A](#))
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
 - void [DGElementAssembly](#) ([TrMatrix](#)< [real.t](#) > &[A](#))
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
 - void [AxbAssembly](#) (const [Element](#) &[el](#), const [Vect](#)< [real.t](#) > &[x](#), [Vect](#)< [real.t](#) > &[b](#))
- Assemble product of element matrix by element vector into global vector.*
 - void [AxbAssembly](#) (const [Side](#) &[sd](#), const [Vect](#)< [real.t](#) > &[x](#), [Vect](#)< [real.t](#) > &[b](#))
- Assemble product of side matrix by side vector into global vector.*
 - [size.t](#) [getNbNodes](#) () const
- Return number of element nodes.*
 - [size.t](#) [getNbEq](#) () const
- Return number of element equations.*
 - void [setInitialSolution](#) (const [Vect](#)< [real.t](#) > &[u](#))
- Set initial solution (previous time step)*
 - [real.t](#) [setMaterialProperty](#) (const string &[exp](#), const string &[prop](#))
- Define a material property by an algebraic expression.*
 - void [setMesh](#) ([Mesh](#) &[m](#))
- Define mesh and renumber DOFs after removing imposed ones.*
 - [Mesh](#) & [getMesh](#) () const
- Return reference to Mesh instance.*
 - [LinearSolver](#)< [real.t](#) > & [getLinearSolver](#) ()
- Return reference to linear solver instance.*
 - void [setSolver](#) ([Iteration](#) [ls](#), [Preconditioner](#) [pc](#)=[IDENT_PREC](#))
- Choose solver for the linear system.*
 - int [SolveLinearSystem](#) ([Matrix](#)< [real.t](#) > *[A](#), [Vect](#)< [real.t](#) > &[b](#), [Vect](#)< [real.t](#) > &[x](#))
- Solve the linear system.*

Public Attributes

- [LocalMatrix](#)< [real.t](#), NEE_, NEE_ > [eMat](#)
LocalMatrix instance containing local matrix associated to current element.
- [LocalMatrix](#)< [real.t](#), NSE_, NSE_ > [sMat](#)
LocalMatrix instance containing local matrix associated to current side.
- [LocalVect](#)< [real.t](#), NEE_ > [ePrev](#)
LocalVect instance containing local vector associated to current element.
- [LocalVect](#)< [real.t](#), NEE_ > [eRHS](#)
LocalVect instance containing local right-hand side vector associated to current element.
- [LocalVect](#)< [real.t](#), NEE_ > [eRes](#)
LocalVect instance containing local residual vector associated to current element.
- [LocalVect](#)< [real.t](#), NSE_ > [sRHS](#)
LocalVect instance containing local right-hand side vector associated to current side.

Protected Member Functions

- void [Init](#) (const [Element](#) *el)
Set element arrays to zero.
- void [Init](#) (const [Side](#) *sd)
Set side arrays to zero.

7.56.1 Detailed Description

To build element equation for the 2-D elliptic equation using the Mixed Hybrid finite element at lowest degree (Raviart-Thomas RT_0).

7.56.2 Constructor & Destructor Documentation

[Laplace2DMHRT0](#) ()

Default Constructor.

Constructs an empty equation.

[Laplace2DMHRT0](#) ([Mesh](#) & *ms*, [SpMatrix](#)< [real.t](#) > & *A*, [Vect](#)< [real.t](#) > & *b*)

Constructor with problem data.

Parameters

in	<i>ms</i>	Mesh instance
in	<i>A</i>	Problem matrix in Sparse format. This matrix must be zeroed before calling the constructor
in	<i>b</i>	Problem right-hand side

7.56.3 Member Function Documentation

[void setDiffusivity](#) (const [LocalMatrix](#)< [real.t](#), 2, 2 > & *K*)

Define Diffusivity (or permeability) matrix.

By default (if this function is not called) the identity matrix (Laplace equation) is used.

Parameters

in	<i>K</i>	Diffusivity matrix as LocalMatrix instance. Must be symmetric positive definite
----	----------	---

void build () [virtual]

Build global matrix and right-hand side.

The problem matrix and right-hand side are the ones used in the constructor. They are updated in this member function.

Reimplemented from [Equa.Laplace< real_t, 3, 3, 2, 2 >](#).

void Post (const Vect< real_t > & *lambda*, const Vect< real_t > & *f*, Vect< real_t > & *v*, Vect< Point< real_t > > & *p*, Vect< real_t > & *u*)

Perform post calculations.

Parameters

in	<i>lambda</i>	Solution (Lagrange multiplier) calculated at edges
in	<i>f</i>	Vect instance containing the right-hand side of the Laplace equation
in	<i>v</i>	Vect instance containing solution at mesh nodes
in	<i>p</i>	Vect instance containing gradient at elements
in	<i>u</i>	Vect instance containing solution at elements

int solve (Vect< real_t > & *u*)

Solve the linear system of equations using the Conjugate Gradient iterative method.

The matrix is preconditioned by an ILU method.

Parameters

out	<i>u</i>	Vector containing the solution at all sides (Sides where boundary conditions are prescribed are included).
-----	----------	--

Returns

Number of performed iterations in the CG method. Note that the maximal number is 1000 and the tolerance is 1.e-8

void build (EigenProblemSolver & *e*) [inherited]

Build the linear system for an eigenvalue problem.

Parameters

in	<i>e</i>	Reference to used EigenProblemSolver instance
----	----------	---

void updateBC (const Element & *el*, const Vect< real.t > & *bc*) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>el</i>	Reference to current element instance
in	<i>bc</i>	Vector that contains imposed values at all DOFs

void updateBC (const Vect< real.t > & *bc*) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>bc</i>	Vector that contains imposed values at all DOFs
----	-----------	---

Remarks

The current element is pointed by `_theElement`

void DiagBC (int *dof_type* = *NODE_DOF*, int *dof* = 0) [inherited]

Update element matrix to impose bc by diagonalization technique.

Parameters

in	<i>dof_type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • <code>NODE_FIELD</code>, DOFs are supported by nodes [Default] • <code>ELEMENT_FIELD</code>, DOFs are supported by elements • <code>SIDE_FIELD</code>, DOFs are supported by sides
in	<i>dof</i>	DOF setting: <ul style="list-style-type: none"> • <code>= 0</code>, All DOFs are taken into account [Default] • <code>!= 0</code>, Only DOF No. <i>dof</i> is handled in the system

void LocalNodeVector (Vect< real.t > & *b*) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Reference to global vector to be localized. The resulting local vector can be accessed by attribute <code>ePrev</code> . This member function is to be used if a constructor with <code>Element</code> was invoked.
----	----------	---

void ElementNodeVector (const Vect< real.t > & b, LocalVect< real.t, NEE_ > & be)
[inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

All degrees of freedom are transferred to the local vector

void ElementNodeVector (const Vect< real.t > & b, LocalVect< real.t, NEN_ > & be, int dof) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.
in	<i>dof</i>	Degree of freedom to transfer to the local vector

Remarks

Only yhe dega dof is transferred to the local vector

void ElementNodeVectorSingleDOF (const Vect< real.t > & b, LocalVect< real.t, NEN_ > & be) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

Vector b is assumed to contain only one degree of freedom by node.

void ElementSideVector (const Vect< real.t > & b, LocalVect< real.t, NSE_ > & be)
[inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
----	----------	--------------------------------

Parameters

out	<i>be</i>	Local vector, the length of which is
-----	-----------	--------------------------------------

void ElementVector (const Vect< real_t > & b, int dof_type = NODE_FIELD, int flag = 0)
[inherited]

Localize Element Vector.

Parameters

in	<i>b</i>	Global vector to be localized
in	<i>dof_type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • NODE_FIELD, DOFs are supported by nodes [Default] • ELEMENT_FIELD, DOFs are supported by elements • SIDE_FIELD, DOFs are supported by sides
in	<i>flag</i>	Option to set: <ul style="list-style-type: none"> • = 0, All DOFs are taken into account [Default] • != 0, Only DOF number dof is handled in the system The resulting local vector can be accessed by attribute ePrev.

Remarks

This member function is to be used if a constructor with Element was invoked. It uses the Element pointer `_theElement`

void SideVector (const Vect< real_t > & b) [inherited]

Localize Side Vector.

Parameters

in	<i>b</i>	Global vector to be localized <ul style="list-style-type: none"> • NODE_FIELD, DOFs are supported by nodes [default] • ELEMENT_FIELD, DOFs are supported by elements • SIDE_FIELD, DOFs are supported by sides The resulting local vector can be accessed by attribute ePrev.
----	----------	--

Remarks

This member function is to be used if a constructor with Side was invoked. It uses the Side pointer `_theSide`

void ElementNodeCoordinates () [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array `_x[0]`, `_x[1]`, ... which are instances of class [Point<real_t>](#)

Remarks

This member function uses the Side pointer `_theSide`

void SideNodeCoordinates () [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array `_x[0]`, `_x[1]`, ... which are instances of class [Point<real_t>](#)

Remarks

This member function uses the Element pointer `_theElement`

void ElementAssembly (Matrix< real_t > * A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Pointer to global matrix (abstract class: can be any of classes <code>SkSMatrix</code> , <code>SkMatrix</code> , <code>SpMatrix</code>)
----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScMatrix< real_t > & A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Reference to global matrix
----------	----------------------------

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScVect< real_t > & b) [inherited]

Assemble element right-hand side vector into global one.

Parameters

<i>b</i>	Reference to global right-hand side vector
----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (BMatrix< real_t > & A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Global matrix stored as a BMatrix instance
----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkSMatrix< real_t > & A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Global matrix stored as an SkSMatrix instance
----------	---

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkMatrix< real_t > & A) [inherited]

Assemble element matrix into global one.

Parameters

<i>in</i>	<i>A</i>	Global matrix stored as an SkMatrix instance
-----------	----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SpMatrix< real_t > & A) [inherited]

Assemble element matrix into global one.

Parameters

<i>in</i>	<i>A</i>	Global matrix stored as an SpMatrix instance
-----------	----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (TrMatrix< real.t > & A) [inherited]

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an TrMatrix instance
----	---	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (Vect< real.t > & v) [inherited]

Assemble element vector into global one.

Parameters

in	v	Global vector (Vect instance)
----	---	-------------------------------

Warning

The element pointer is given by the global variable `theElement`

void SideAssembly (PETScMatrix< real.t > & A) [inherited]

Assemble side matrix into global one.

Parameters

A	Reference to global matrix
---	----------------------------

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (PETScVect< real.t > & b) [inherited]

Assemble side right-hand side vector into global one.

Parameters

b	Reference to global right-hand side vector
---	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (Matrix< real.t > * A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
---	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SkSMatrix< real.t > & A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	A	Global matrix stored as an SkSMatrix instance
----	---	---

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SkMatrix< real.t > & A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SpMatrix< real.t > & A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	A	Global matrix stored as an SpMatrix instance
----	---	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (Vect< real_t > & v) [inherited]

Assemble side (edge or face) vector into global one.

Parameters

in	<i>v</i>	Global vector (Vect instance)
----	----------	-------------------------------

Warning

The side pointer is given by the global variable `theSide`

void DGElementAssembly (Matrix< real_t > * A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

<i>A</i>	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
----------	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SkSMatrix< real_t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

<i>A</i>	Global matrix stored as an SkSMatrix instance
----------	---

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SkMatrix< real_t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	<i>A</i>	Global matrix stored as an SkMatrix instance
----	----------	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SpMatrix< real.t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	<i>A</i>	Global matrix stored as an SpMatrix instance
----	----------	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (TrMatrix< real.t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	<i>A</i>	Global matrix stored as an TrMatrix instance
----	----------	--

Warning

The element pointer is given by the global variable `theElement`

void AxbAssembly (const Element & *el*, const Vect< real.t > & *x*, Vect< real.t > & *b*)
[inherited]

Assemble product of element matrix by element vector into global vector.

Parameters

in	<i>el</i>	Reference to Element instance
in	<i>x</i>	Global vector to multiply by (Vect instance)
out	<i>b</i>	Global vector to add (Vect instance)

void AxbAssembly (const Side & *sd*, const Vect< real.t > & *x*, Vect< real.t > & *b*)
[inherited]

Assemble product of side matrix by side vector into global vector.

Parameters

in	<i>sd</i>	Reference to Side instance
in	<i>x</i>	Global vector to multiply by (Vect instance)
out	<i>b</i>	Global vector (Vect instance)

real.t setMaterialProperty (const string & *exp*, const string & *prop*) [inherited]

Define a material property by an algebraic expression.

Parameters

in	<i>exp</i>	Algebraic expression
in	<i>prop</i>	Property name

Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

Mesh& getMesh () const [inherited]

Return reference to Mesh instance.

Returns

Reference to Mesh instance

void setSolver (Iteration *ls*, Preconditioner *pc* = IDENT_PREC) [inherited]

Choose solver for the linear system.

Parameters

in	<i>ls</i>	<p>Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER</p> <ul style="list-style-type: none"> • DIRECT_SOLVER, Use a facorization solver [default] • CG_SOLVER, Conjugate Gradient iterative solver • CGS_SOLVER, Squared Conjugate Gradient iterative solver • BICG_SOLVER, BiConjugate Gradient iterative solver • BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver • GMRES_SOLVER, GMRES iterative solver • QMR_SOLVER, QMR iterative solver
in	<i>pc</i>	<p>Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:</p> <ul style="list-style-type: none"> • IDENT_PREC, Identity preconditioner (no preconditioning [default]) • DIAG_PREC, Diagonal preconditioner • ILU_PREC, Incomplete LU factorization preconditioner

int SolveLinearSystem (Matrix< real_t > * A, Vect< real_t > & b, Vect< real_t > & x)
 [inherited]

Solve the linear system.

Parameters

in	<i>A</i>	Pointer to matrix of the system (Instance of class SpMatrix)
in	<i>b</i>	Vector containing right-hand side
in,out	<i>x</i>	Vector containing initial guess of solution on input, actual solution on output

7.56.4 Member Data Documentation

LocalVect<real_t,NEE_> ePrev [inherited]


LocalVect instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

7.57 Laplace2DT3 Class Reference

To build element equation for the Laplace equation using the 2-D triangle element (P_1).

Inheritance diagram for Laplace2DT3:

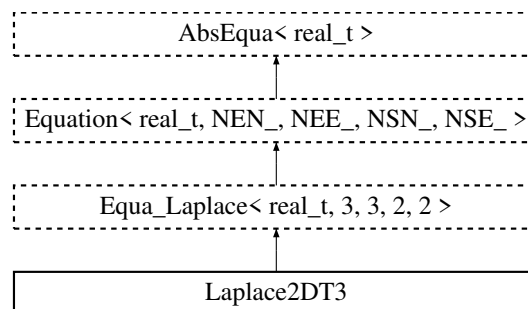

Public Member Functions

- [Laplace2DT3 \(Mesh &ms\)](#)
Constructor with mesh.
- [Laplace2DT3 \(Mesh &ms, SpMatrix< real_t > &A, Vect< real_t > &b\)](#)
Constructor with problem data.
- [Laplace2DT3 \(Mesh &ms, Vect< real_t > &b\)](#)
Constructor using mesh and solution vector.
- [Laplace2DT3 \(Mesh &ms, Vect< real_t > &b, Vect< real_t > &Dbc, Vect< real_t > &Nbc, Vect< real_t > &u\)](#)
Constructor that initializes a standard Poisson equation.
- [Laplace2DT3 \(Element *el\)](#)
Constructor for an element.
- [Laplace2DT3 \(Side *sd\)](#)
Constructor for a side.

- `~Laplace2DT3 ()`
Destructor.
- `void LHS (real.t coef=1.)`
Add finite element matrix to left-hand side.
- `void BodyRHS (const Vect< real.t > &f)`
Add body source term to right-hand side.
- `void BoundaryRHS (const Vect< real.t > &h)`
Add boundary source term to right-hand side.
- `void setSource (const Vect< real.t > &f)`
Define Source right-hand side of the equation.
- `void build ()`
Build global matrix and right-hand side.
- `void buildEigen (int opt=0)`
Build global stiffness and mass matrices for the eigen system.
- `void Post (const Vect< real.t > &u, Vect< Point< real.t > > &p)`
Perform post calculations.
- `int solve (Vect< real.t > &u)`
Solve the linear system of equations using the Conjugate Gradient iterative method.
- `void Axb (const Vect< real.t > &x, Vect< real.t > &b)`
Compute the product of the stiffness matrix by a given vector.
- `int run ()`
Build and solve the linear system of equations using an iterative method.
- `void build (EigenProblemSolver &e)`
Build the linear system for an eigenvalue problem.
- `void updateBC (const Element &el, const Vect< real.t > &bc)`
Update Right-Hand side by taking into account essential boundary conditions.
- `void updateBC (const Vect< real.t > &bc)`
Update Right-Hand side by taking into account essential boundary conditions.
- `void DiagBC (int dof_type=NODE.DOF, int dof=0)`
Update element matrix to impose bc by diagonalization technique.
- `void LocalNodeVector (Vect< real.t > &b)`
Localize Element Vector from a Vect instance.
- `void ElementNodeVector (const Vect< real.t > &b, LocalVect< real.t, NEE_ > &be)`
Localize Element Vector from a Vect instance.
- `void ElementNodeVector (const Vect< real.t > &b, LocalVect< real.t, NEN_ > &be, int dof)`
Localize Element Vector from a Vect instance.
- `void ElementNodeVectorSingleDOF (const Vect< real.t > &b, LocalVect< real.t, NEN_ > &be)`
Localize Element Vector from a Vect instance.
- `void ElementSideVector (const Vect< real.t > &b, LocalVect< real.t, NSE_ > &be)`
Localize Element Vector from a Vect instance.
- `void ElementVector (const Vect< real.t > &b, int dof_type=NODE.FIELD, int flag=0)`
Localize Element Vector.
- `void SideVector (const Vect< real.t > &b)`
Localize Side Vector.
- `void ElementNodeCoordinates ()`
Localize coordinates of element nodes.

- void [SideNodeCoordinates](#) ()
Localize coordinates of side nodes.
- void [ElementAssembly](#) (Matrix< real_t > *A)
Assemble element matrix into global one.
- void [ElementAssembly](#) (PETScMatrix< real_t > &A)
Assemble element matrix into global one.
- void [ElementAssembly](#) (PETScVect< real_t > &b)
Assemble element right-hand side vector into global one.
- void [ElementAssembly](#) (BMatrix< real_t > &A)
Assemble element matrix into global one.
- void [ElementAssembly](#) (SkSMatrix< real_t > &A)
Assemble element matrix into global one.
- void [ElementAssembly](#) (SkMatrix< real_t > &A)
Assemble element matrix into global one.
- void [ElementAssembly](#) (SpMatrix< real_t > &A)
Assemble element matrix into global one.
- void [ElementAssembly](#) (TrMatrix< real_t > &A)
Assemble element matrix into global one.
- void [ElementAssembly](#) (Vect< real_t > &v)
Assemble element vector into global one.
- void [SideAssembly](#) (PETScMatrix< real_t > &A)
Assemble side matrix into global one.
- void [SideAssembly](#) (PETScVect< real_t > &b)
Assemble side right-hand side vector into global one.
- void [SideAssembly](#) (Matrix< real_t > *A)
Assemble side (edge or face) matrix into global one.
- void [SideAssembly](#) (SkSMatrix< real_t > &A)
Assemble side (edge or face) matrix into global one.
- void [SideAssembly](#) (SkMatrix< real_t > &A)
Assemble side (edge or face) matrix into global one.
- void [SideAssembly](#) (SpMatrix< real_t > &A)
Assemble side (edge or face) matrix into global one.
- void [SideAssembly](#) (Vect< real_t > &v)
Assemble side (edge or face) vector into global one.
- void [DGElementAssembly](#) (Matrix< real_t > *A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void [DGElementAssembly](#) (SkSMatrix< real_t > &A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void [DGElementAssembly](#) (SkMatrix< real_t > &A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void [DGElementAssembly](#) (SpMatrix< real_t > &A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void [DGElementAssembly](#) (TrMatrix< real_t > &A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void [AxbAssembly](#) (const [Element](#) &el, const Vect< real_t > &x, Vect< real_t > &b)
Assemble product of element matrix by element vector into global vector.

- void **AxbAssembly** (const **Side** &sd, const **Vect**< **real_t** > &x, **Vect**< **real_t** > &b)
Assemble product of side matrix by side vector into global vector.
- size_t **getNbNodes** () const
Return number of element nodes.
- size_t **getNbEq** () const
Return number of element equations.
- void **setInitialSolution** (const **Vect**< **real_t** > &u)
Set initial solution (previous time step)
- **real_t** **setMaterialProperty** (const string &exp, const string &prop)
Define a material property by an algebraic expression.
- void **setMesh** (**Mesh** &m)
Define mesh and renumber DOFs after removing imposed ones.
- **Mesh** & **getMesh** () const
Return reference to Mesh instance.
- **LinearSolver**< **real_t** > & **getLinearSolver** ()
Return reference to linear solver instance.
- void **setSolver** (**Iteration** ls, **Preconditioner** pc=IDENT_PREC)
Choose solver for the linear system.
- int **SolveLinearSystem** (**Matrix**< **real_t** > *A, **Vect**< **real_t** > &b, **Vect**< **real_t** > &x)
Solve the linear system.

Public Attributes

- **LocalMatrix**< **real_t**, NEE_, NEE_ > **eMat**
LocalMatrix instance containing local matrix associated to current element.
- **LocalMatrix**< **real_t**, NSE_, NSE_ > **sMat**
LocalMatrix instance containing local matrix associated to current side.
- **LocalVect**< **real_t**, NEE_ > **ePrev**
LocalVect instance containing local vector associated to current element.
- **LocalVect**< **real_t**, NEE_ > **eRHS**
LocalVect instance containing local right-hand side vector associated to current element.
- **LocalVect**< **real_t**, NEE_ > **eRes**
LocalVect instance containing local residual vector associated to current element.
- **LocalVect**< **real_t**, NSE_ > **sRHS**
LocalVect instance containing local right-hand side vector associated to current side.

Protected Member Functions

- void **Init** (const **Element** *el)
Set element arrays to zero.
- void **Init** (const **Side** *sd)
Set side arrays to zero.

7.57.1 Detailed Description

To build element equation for the Laplace equation using the 2-D triangle element (P_1).

To build element equation for the Laplace equation using the 3-D tetrahedral element (P_1).

7.57.2 Constructor & Destructor Documentation

Laplace2DT3 (Mesh & *ms*)

Constructor with mesh.

Parameters

in	<i>ms</i>	Mesh instance
----	-----------	-------------------------------

Laplace2DT3 (Mesh & *ms*, SpMatrix< real.t > & *A*, Vect< real.t > & *b*)

Constructor with problem data.

Parameters

in	<i>ms</i>	Mesh instance
in	<i>A</i>	Problem matrix in Sparse format. This matrix must be zeroed before calling the constructor
in	<i>b</i>	Problem right-hand side

Laplace2DT3 (Mesh & *ms*, Vect< real.t > & *b*)

Constructor using mesh and solution vector.

Parameters

in	<i>ms</i>	Mesh instance
in	<i>b</i>	Problem right-hand side

Laplace2DT3 (Mesh & *ms*, Vect< real.t > & *b*, Vect< real.t > & *Dbc*, Vect< real.t > & *Nbc*, Vect< real.t > & *u*)

Constructor that initializes a standard Poisson equation.

This constructor sets data for the Poisson equation with mixed (Dirichlet and Neumann) boundary conditions.

Parameters

in	<i>ms</i>	Mesh instance
in	<i>b</i>	Vector containing the source term (right-hand side of the equation) at mesh nodes
in	<i>Dbc</i>	Vector containing prescribed values of the solution (Dirichlet boundary condition) at nodes with positive code. Its size is the total number of nodes
in	<i>Nbc</i>	Vector containing prescribed fluxes (Neumann boundary conditions) at sides, its size is the total number of sides
in	<i>u</i>	Vector to contain the finite element solution at nodes once the member function run() is called.

7.57.3 Member Function Documentation

void LHS (*real.t coef* = 1.)

Add finite element matrix to left-hand side.

Parameters

in	<i>coef</i>	Value to multiply by the added matrix
----	-------------	---------------------------------------

void BodyRHS (*const Vect< real.t > &f*)

Add body source term to right-hand side.

Parameters

in	<i>f</i>	Vector containing the source given function at mesh nodes
----	----------	---

void BoundaryRHS (*const Vect< real.t > &h*)

Add boundary source term to right-hand side.

Parameters

in	<i>h</i>	Vector containing the source given function at mesh nodes
----	----------	---

void setSource (*const Vect< real.t > &f*)

Define Source right-hand side of the equation.

Parameters

<i>f</i>	[in] Vector containing source values at nodes
----------	---

void build () [virtual]

Build global matrix and right-hand side.

The problem matrix and right-hand side are the ones used in the constructor. They are updated in this member function.

Reimplemented from [Equa.Laplace< real.t, 3, 3, 2, 2 >](#).

void buildEigen (*int opt* = 0) [virtual]

Build global stiffness and mass matrices for the eigen system.

Parameters

in	<i>opt</i>	Flag to choose a lumped mass matrix (0) or consistent (1) [Default: 0]
----	------------	--

Reimplemented from [Equa.Laplace< real_t, 3, 3, 2, 2 >](#).

void Post (const Vect< real_t > & *u*, Vect< Point< real_t > > & *p*)

Perform post calculations.

Parameters

in	<i>u</i>	Solution at nodes
out	<i>p</i>	Vector containing gradient at elements

int solve (Vect< real_t > & *u*)

Solve the linear system of equations using the Conjugate Gradient iterative method.

The matrix is preconditioned by an ILU method.

Parameters

in	<i>u</i>	Vector containing the solution at all sides (Sides where boundary conditions are prescribed are included).
----	----------	--

Returns

Number of performed iterations in the CG method. Note that the maximal number is 1000 and the tolerance is 1.e-8

void Axb (const Vect< real_t > & *x*, Vect< real_t > & *b*)

Compute the product of the stiffness matrix by a given vector.

Parameters

in	<i>x</i>	Vector by which the matrix is multiplied
in	<i>b</i>	Product vector

int run ()

Build and solve the linear system of equations using an iterative method.

The matrix is preconditioned by the diagonal ILU method. The linear system is solved either by the Conjugate Gradient method if the matrix is symmetric positive definite (eps=-1) or the GMRES method if not. The solution is stored in the vector *u* given in the constructor.

Returns

Number of performed iterations. Note that the maximal number is 1000 and the tolerance is 1.e-8

void build (EigenProblemSolver & *e*) [inherited]

Build the linear system for an eigenvalue problem.

Parameters

in	<i>e</i>	Reference to used EigenProblemSolver instance
----	----------	---

void updateBC (const Element & *el*, const Vect< real.t > & *bc*) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>el</i>	Reference to current element instance
in	<i>bc</i>	Vector that contains imposed values at all DOFs

void updateBC (const Vect< real.t > & *bc*) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>bc</i>	Vector that contains imposed values at all DOFs
----	-----------	---

Remarks

The current element is pointed by `_theElement`

void DiagBC (int *dof.type* = *NODE_DOF*, int *dof* = 0) [inherited]

Update element matrix to impose bc by diagonalization technique.

Parameters

in	<i>dof.type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • <code>NODE_FIELD</code>, DOFs are supported by nodes [Default] • <code>ELEMENT_FIELD</code>, DOFs are supported by elements • <code>SIDE_FIELD</code>, DOFs are supported by sides
in	<i>dof</i>	DOF setting: <ul style="list-style-type: none"> • <code>= 0</code>, All DOFs are taken into account [Default] • <code>!= 0</code>, Only DOF No. <i>dof</i> is handled in the system

void LocalNodeVector (Vect< real.t > & *b*) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Reference to global vector to be localized. The resulting local vector can be accessed by attribute ePrev. This member function is to be used if a constructor with Element was invoked.
----	----------	--

void ElementNodeVector (const Vect< real_t > & *b*, LocalVect< real_t, NEE_ > & *be*)
[inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

All degrees of freedom are transferred to the local vector

void ElementNodeVector (const Vect< real_t > & *b*, LocalVect< real_t, NEN_ > & *be*, int *dof*)
[inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.
in	<i>dof</i>	Degree of freedom to transfer to the local vector

Remarks

Only yhe dega dof is transferred to the local vector

void ElementNodeVectorSingleDOF (const Vect< real_t > & *b*, LocalVect< real_t, NEN_ > & *be*)
[inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

Vector *b* is assumed to contain only one degree of freedom by node.

void ElementSideVector (const Vect< real_t > & b, LocalVect< real_t, NSE_ > & be)
[inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is

void ElementVector (const Vect< real_t > & b, int dof_type = NODE_FIELD, int flag = 0)
[inherited]

Localize Element Vector.

Parameters

in	<i>b</i>	Global vector to be localized
in	<i>dof_type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • NODE_FIELD, DOFs are supported by nodes [Default] • ELEMENT_FIELD, DOFs are supported by elements • SIDE_FIELD, DOFs are supported by sides
in	<i>flag</i>	Option to set: <ul style="list-style-type: none"> • = 0, All DOFs are taken into account [Default] • != 0, Only DOF number dof is handled in the system The resulting local vector can be accessed by attribute ePrev.

Remarks

This member function is to be used if a constructor with Element was invoked. It uses the Element pointer *_theElement*

void SideVector (const Vect< real_t > & b) [inherited]

Localize Side Vector.

Parameters

in	<i>b</i>	Global vector to be localized <ul style="list-style-type: none"> • NODE_FIELD, DOFs are supported by nodes [default] • ELEMENT_FIELD, DOFs are supported by elements • SIDE_FIELD, DOFs are supported by sides The resulting local vector can be accessed by attribute ePrev.
----	----------	--

Remarks

This member function is to be used if a constructor with Side was invoked. It uses the Side pointer `_theSide`

void ElementNodeCoordinates () [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array `_x[0]`, `_x[1]`, ... which are instances of class [Point<real.t>](#)

Remarks

This member function uses the Side pointer `_theSide`

void SideNodeCoordinates () [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array `_x[0]`, `_x[1]`, ... which are instances of class [Point<real.t>](#)

Remarks

This member function uses the Element pointer `_theElement`

void ElementAssembly (Matrix< real.t > * A) [inherited]

Assemble element matrix into global one.

Parameters

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
---	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScMatrix< real.t > & A) [inherited]

Assemble element matrix into global one.

Parameters

A	Reference to global matrix
---	----------------------------

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScVect< real.t > & b) [inherited]

Assemble element right-hand side vector into global one.

Parameters

b	Reference to global right-hand side vector
-----	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (BMatrix< real_t > & A) [inherited]

Assemble element matrix into global one.

Parameters

A	Global matrix stored as a BMatrix instance
-----	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkSMatrix< real_t > & A) [inherited]

Assemble element matrix into global one.

Parameters

A	Global matrix stored as an SkSMatrix instance
-----	---

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkMatrix< real_t > & A) [inherited]

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an SkMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SpMatrix< real_t > & A) [inherited]

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an SpMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable theElement

void ElementAssembly (TrMatrix< real.t > &A) [inherited]

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an TrMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable theElement

void ElementAssembly (Vect< real.t > &v) [inherited]

Assemble element vector into global one.

Parameters

in	v	Global vector (Vect instance)
----	-----	-------------------------------

Warning

The element pointer is given by the global variable theElement

void SideAssembly (PETScMatrix< real.t > &A) [inherited]

Assemble side matrix into global one.

Parameters

A	Reference to global matrix
-----	----------------------------

Warning

The side pointer is given by the global variable theSide

void SideAssembly (PETScVect< real.t > &b) [inherited]

Assemble side right-hand side vector into global one.

Parameters

b	Reference to global right-hand side vector
-----	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (Matrix< real_t > * A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

A	Pointer to global matrix (abstract class: can be any of classes <code>SkSMatrix</code> , <code>SkMatrix</code> , <code>SpMatrix</code>)
-----	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SkSMatrix< real_t > & A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	A	Global matrix stored as an <code>SkSMatrix</code> instance
----	-----	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SkMatrix< real_t > & A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	A	Global matrix stored as an <code>SkMatrix</code> instance
----	-----	---

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SpMatrix< real_t > & A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	A	Global matrix stored as an SpMatrix instance
----	-----	--

Warning

The side pointer is given by the global variable theSide

void SideAssembly (Vect< real.t > & v) [inherited]

Assemble side (edge or face) vector into global one.

Parameters

in	v	Global vector (Vect instance)
----	-----	-------------------------------

Warning

The side pointer is given by the global variable theSide

void DGElementAssembly (Matrix< real.t > * A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
-----	--

Warning

The element pointer is given by the global variable theElement

void DGElementAssembly (SkSMatrix< real.t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

A	Global matrix stored as an SkSMatrix instance
-----	---

Warning

The element pointer is given by the global variable theElement

void DGElementAssembly (SkMatrix< real.t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	A	Global matrix stored as an SkMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SpMatrix< real.t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	A	Global matrix stored as an SpMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (TrMatrix< real.t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	A	Global matrix stored as an TrMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void AxbAssembly (const Element & el , const Vect< real.t > & x , Vect< real.t > & b)
[inherited]

Assemble product of element matrix by element vector into global vector.

Parameters

in	el	Reference to Element instance
in	x	Global vector to multiply by (Vect instance)
out	b	Global vector to add (Vect instance)

void AxbAssembly (const Side & sd , const Vect< real.t > & x , Vect< real.t > & b)
[inherited]

Assemble product of side matrix by side vector into global vector.

Parameters

in	<i>sd</i>	Reference to Side instance
in	<i>x</i>	Global vector to multiply by (Vect instance)
out	<i>b</i>	Global vector (Vect instance)

real.t setMaterialProperty (const string & *exp*, const string & *prop*) [inherited]

Define a material property by an algebraic expression.

Parameters

in	<i>exp</i>	Algebraic expression
in	<i>prop</i>	Property name

Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

Mesh& getMesh () const [inherited]

Return reference to Mesh instance.

Returns

Reference to Mesh instance

void setSolver (Iteration *ls*, Preconditioner *pc* = IDENT_PREC) [inherited]

Choose solver for the linear system.

Parameters

in	<i>ls</i>	<p>Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER</p> <ul style="list-style-type: none"> • DIRECT_SOLVER, Use a facorization solver [default] • CG_SOLVER, Conjugate Gradient iterative solver • CGS_SOLVER, Squared Conjugate Gradient iterative solver • BICG_SOLVER, BiConjugate Gradient iterative solver • BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver • GMRES_SOLVER, GMRES iterative solver • QMR_SOLVER, QMR iterative solver
----	-----------	---

Parameters

in	<i>pc</i>	Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values: <ul style="list-style-type: none"> • IDENT_PREC, Identity preconditioner (no preconditioning [default]) • DIAG_PREC, Diagonal preconditioner • ILU_PREC, Incomplete LU factorization preconditioner
----	-----------	---

int SolveLinearSystem (Matrix< real.t > * A, Vect< real.t > & b, Vect< real.t > & x)
[inherited]

Solve the linear system.

Parameters

in	<i>A</i>	Pointer to matrix of the system (Instance of class SpMatrix)
in	<i>b</i>	Vector containing right-hand side
in,out	<i>x</i>	Vector containing initial guess of solution on input, actual solution on output

7.57.4 Member Data Documentation

LocalVect<real.t,NEE-> ePrev [inherited]


LocalVect instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

7.58 LaplaceDG2DP1 Class Reference

To build and solve the linear system for the Poisson problem using the [DG](#) P_1 2-D triangle element.

Inheritance diagram for LaplaceDG2DP1:

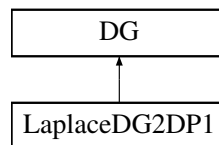

Public Member Functions

- [LaplaceDG2DP1](#) (Mesh &ms, Vect< real.t > &f, Vect< real.t > &Dbc, Vect< real.t > &Nbc, Vect< real.t > &u)
Constructor with mesh and vector data.
- [~LaplaceDG2DP1](#) ()
Destructor.

- void **set** ([real.t](#) sigma, [real.t](#) eps)
Set parameters for the DG method.
- void **set** (const [LocalMatrix](#)< [real.t](#), 2, 2 > &K)
Set diffusivity matrix.
- void **build** ()
Build global matrix and right-hand side.
- void **Smooth** ([Vect](#)< [real.t](#) > &u)
Perform post calculations.
- int **run** ()
Build and solve the linear system of equations using an iterative method.
- int **setGraph** ()
Set matrix graph.

7.58.1 Detailed Description

To build and solve the linear system for the Poisson problem using the [DG](#) P_1 2-D triangle element.

This class build the linear system of equations for a standard elliptic equation using the Discontinuous Galerkin P_1 finite element method.

7.58.2 Constructor & Destructor Documentation

LaplaceDG2DP1 ([Mesh](#) & *ms*, [Vect](#)< [real.t](#) > & *f*, [Vect](#)< [real.t](#) > & *Dbc*, [Vect](#)< [real.t](#) > & *Nbc*, [Vect](#)< [real.t](#) > & *u*)

Constructor with mesh and vector data.

Parameters

in	<i>ms</i>	Mesh instance
in	<i>f</i>	Vector containing the right-hand side of the elliptic equation at triangle vertices
in	<i>Dbc</i>	Vector containing prescribed values of the solution (Dirichlet boundary condition) at nodes having a positive code
in	<i>Nbc</i>	Vector containing prescribed values of the flux (Neumann boundary condition) at each side having a positive code
in	<i>u</i>	Vector where the solution is stored once the linear system is solved

7.58.3 Member Function Documentation

void set ([real.t](#) *sigma*, [real.t](#) *eps*)

Set parameters for the [DG](#) method.

Parameters

in	<i>sigma</i>	Penalty parameters to enforce continuity at nodes (Must be positive) [Default: 100]
----	--------------	---

Parameters

in	<i>eps</i>	<p>Epsilon value of the DG method to choose among the values:</p> <ul style="list-style-type: none"> • 0 Incomplete Interior Penalty Galerkin method (IIPG) • -1 Symmetric Interior Penalty Galerkin method (SIPG) • 1 Non symmetric interior penalty Galerkin method (NIPG) <p>For a user not familiar with the method, please choose the value of <i>eps</i>=-1 and <i>sigma</i>>100 which leads to a symmetric positive definite matrix [Default: -1]</p>
----	------------	--

void set (const LocalMatrix< real_t, 2, 2 > & K)

Set diffusivity matrix.

This function provides the diffusivity matrix as instance of class [LocalMatrix](#). The default diffusivity matrix is the identity matrix

Parameters

in	<i>K</i>	Diffusivity matrix
----	----------	--------------------

void build ()

Build global matrix and right-hand side.

The problem matrix and right-hand side are the ones used in the constructor. They are updated in this member function.

void Smooth (Vect< real_t > & u)

Perform post calculations.

This function gives an averaged solution given at mesh nodes (triangle vertices) by a standard L_2 -projection method.

Parameters

in	<i>u</i>	Solution at nodes
----	----------	-------------------

int run ()

Build and solve the linear system of equations using an iterative method.

The matrix is preconditioned by the diagonal ILU method. The linear system is solved either by the Conjugate Gradient method if the matrix is symmetric positive definite (*eps*=-1) or the GMRES method if not. The solution is stored in the vector *u* given in the constructor.


Returns

Number of performed iterations. Note that the maximal number is 1000 and the tolerance is 1.e-8

7.59 LCL1D Class Reference

Class to solve the linear conservation law (Hyperbolic equation) in 1-D by a MUSCL Finite Volume scheme.

Inheritance diagram for LCL1D:

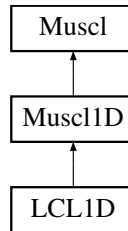

Public Types

Public Member Functions

- **LCL1D** (**Mesh** &m)
Constructor using mesh instance.
- **LCL1D** (**Mesh** &m, **Vect**< **real.t** > &U)
Constructor.
- **~LCL1D** ()
Destructor.
- **Vect**< **real.t** > & **getFlux** ()
Return sidewise fluxes.
- void **setInitialCondition** (**Vect**< **real.t** > &u)
Assign initial condition by a vector.
- void **setInitialCondition** (**real.t** u)
Assign a constant initial condition.
- void **setReconstruction** ()
Run MUSCL reconstruction.
- **real.t** **runOneTimeStep** ()
Run one time step of the linear conservation law.
- void **setBC** (**real.t** u)
Set Dirichlet boundary condition.
- void **setBC** (const **Side** &sd, **real.t** u)
Set Dirichlet boundary condition.
- void **setBC** (int code, **real.t** u)
Set Dirichlet boundary condition.
- void **setVelocity** (**Vect**< **real.t** > &v)
Set convection velocity.
- void **setVelocity** (**real.t** v)
Set (constant) convection velocity.
- void **setReferenceLength** (**real.t** dx)
Assign reference length value.
- **real.t** **getReferenceLength** () const
Return reference length.

- void **Forward** (const **Vect**< **real_t** > &Flux, **Vect**< **real_t** > &Field)
Computation of the primal variable $n \rightarrow n+1$.
- **real_t** **getMeanLength** () const
Return mean length.
- **real_t** **getMaximumLength** () const
Return maximal length.
- **real_t** **getMinimumLength** () const
Return mimal length.
- **real_t** **getTauLim** () const
Return mean length.
- void **print_mesh_stat** ()
Output mesh information.
- void **setTimeStep** (**real_t** dt)
Assign time step value.
- **real_t** **getTimeStep** () const
Return time step value.
- void **setCFL** (**real_t** CFL)
Assign CFL value.
- **real_t** **getCFL** () const
Return CFL value.
- **Mesh** & **getMesh** () const
*Return reference to *Mesh* instance.*
- void **setVerbose** (int v)
Set verbosity parameter.
- bool **setReconstruction** (const **Vect**< **real_t** > &U, **Vect**< **real_t** > &LU, **Vect**< **real_t** > &RU, size_t dof)
*Function to reconstruct by the *Muscl* method.*
- void **setMethod** (const **Method** &s)
Choose a flux solver.
- void **setSolidZoneCode** (int c)
Choose a code for solid zone.
- bool **getSolidZone** () const
Return flag for presence of solid zones.
- int **getSolidZoneCode** () const
Return code of solid zone, 0 if this one is not present.
- void **setLimiter** (**Limiter** l)
Choose a flux limiter.

7.59.1 Detailed Description

Class to solve the linear conservation law (Hyperbolic equation) in 1-D by a MUSCL Finite Volume scheme.

7.59.2 Member Enumeration Documentation

enum Method [inherited]

Enumeration for flux choice.

Enumerator

FIRST_ORDER_METHOD First Order upwind method

MULTI_SLOPE_Q_METHOD Multislope Q method

MULTI_SLOPE_M_METHOD Multislope M method

enum Limiter [inherited]

Enumeration of flux limiting methods.

Enumerator

MINMOD_LIMITER MinMod limiter

VANLEER_LIMITER Van Leer limiter

SUPERBEE_LIMITER Superbee limiter

VANALBADA_LIMITER Van Albada limiter

MAX_LIMITER Max limiter

enum SolverType [inherited]

Enumeration of various solvers for the Riemann problem.

Enumerator

ROE_SOLVER Roe solver

VROE_SOLVER Finite Volume Roe solver

LF_SOLVER LF solver

RUSANOV_SOLVER Rusanov solver

HLL_SOLVER HLL solver

HLLC_SOLVER HLLC solver

MAX_SOLVER Max solver

7.59.3 Member Function Documentation

void setInitialCondition (Vect< real_t > & u)

Assign initial condition by a vector.

Parameters

in	<i>u</i>	Vector containing initial condition
----	----------	-------------------------------------

void setInitialCondition (real_t u)

Assign a constant initial condition.

Parameters

in	u	Constant value for the initial condition
----	-----	--

real.t runOneTimeStep ()

Run one time step of the linear conservation law.

Returns

Value of the time step

void setBC (real.t u)

Set Dirichlet boundary condition.

Assign a constant value u to all boundary sides

void setBC (const Side & sd , real.t u)

Set Dirichlet boundary condition.

Assign a constant value to a side

Parameters

in	sd	Side to which value is prescribed
in	u	Value to prescribe

void setBC (int $code$, real.t u)

Set Dirichlet boundary condition.

Assign a constant value sides with a given code

Parameters

in	$code$	Code of sides to which value is prescribed
in	u	Value to prescribe

void setVelocity (Vect< real.t > & v)

Set convection velocity.

Parameters

in	v	Vect instance containing velocity
----	-----	---

void Forward (const Vect< real.t > & $Flux$, Vect< real.t > & $Field$)

Computation of the primal variable $n \rightarrow n+1$.

Vector **Flux** contains elementwise fluxes issued from the Riemann problem, calculated with, as left element, **getNeighborElement(1)** and right element **getNeighborElement(2)** if **getNeighborElement(2)** doesn't exist, we are on a boundary and we prescribe a symmetry condition

void setTimeStep (real.t *dt*) [inherited]

Assign time step value.

Parameters

in	<i>dt</i>	Time step value
----	-----------	-----------------

void setCFL (real.t *CFL*) [inherited]

Assign CFL value.

Parameters

in	<i>CFL</i>	Value of CFL
----	------------	--------------

void setVerbose (int *v*) [inherited]

Set verbosity parameter.

Parameters

in	<i>v</i>	Value of verbosity parameter
----	----------	------------------------------

bool setReconstruction (const Vect< real.t > & *U*, Vect< real.t > & *LU*, Vect< real.t > & *RU*, size.t *dof*) [inherited]

Function to reconstruct by the [Muscl](#) method.

Parameters

in	<i>U</i>	Field to reconstruct
out	<i>LU</i>	Left gradient vector
out	<i>RU</i>	Right gradient vector
in	<i>dof</i>	Label of dof to reconstruct

void setMethod (const Method & *s*) [inherited]

Choose a flux solver.

Parameters

in	<i>s</i>	Solver to choose
----	----------	------------------

void setLimiter (Limiter l) [inherited]

Choose a flux limiter.


Parameters

in	<i>l</i>	Limiter to choose
----	----------	-------------------

7.60 LCL2DT Class Reference

Class to solve the linear hyperbolic equation in 2-D by a MUSCL Finite Volume scheme on triangles.

Inheritance diagram for LCL2DT:

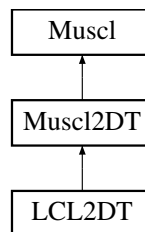

Public Types

Public Member Functions

- **LCL2DT (Mesh &m)**
Constructor using [Mesh](#) instance.
- **LCL2DT (Mesh &m, Vect< real.t > &U)**
Constructor using mesh and initial data.
- **~LCL2DT ()**
Destructor.
- **Vect< real.t > & getFlux ()**
Return sidewise flux vector.
- **void setInitialCondition (Vect< real.t > &u)**
Set elementwise initial condition.
- **void setInitialCondition (real.t u)**
Set a constant initial condition.
- **void setReconstruction ()**
Reconstruct flux using [Muscl](#) scheme.
- **real.t runOneTimeStep ()**
Run one time step of the linear conservation law.
- **void setBC (real.t u)**
Set Dirichlet boundary condition.
- **void setBC (const Side &sd, real.t u)**
Set Dirichlet boundary condition.
- **void setBC (int code, real.t u)**
Set Dirichlet boundary condition.

- void `setVelocity` (const `Vect< real_t >` &v)
Set convection velocity.
- void `setVelocity` (const `LocalVect< real_t, 2 >` &v)
Set (constant) convection velocity.
- void `Forward` (const `Vect< real_t >` &Flux, `Vect< real_t >` &Field)
Computation of the primal variable $n \rightarrow n+1$.
- bool `setReconstruction` (const `Vect< real_t >` &U, `Vect< real_t >` &LU, `Vect< real_t >` &RU, size_t dof)
*Function to reconstruct by the *Muscl* method.*
- void `setTimeStep` (real_t dt)
Assign time step value.
- real_t `getTimeStep` () const
Return time step value.
- void `setCFL` (real_t CFL)
Assign CFL value.
- real_t `getCFL` () const
Return CFL value.
- void `setReferenceLength` (real_t dx)
Assign reference length value.
- real_t `getReferenceLength` () const
Return reference length.
- `Mesh` & `getMesh` () const
*Return reference to *Mesh* instance.*
- void `setVerbose` (int v)
Set verbosity parameter.
- void `setMethod` (const `Method` &s)
Choose a flux solver.
- void `setSolidZoneCode` (int c)
Choose a code for solid zone.
- bool `getSolidZone` () const
Return flag for presence of solid zones.
- int `getSolidZoneCode` () const
Return code of solid zone, 0 if this one is not present.
- void `setLimiter` (`Limiter` l)
Choose a flux limiter.

Protected Member Functions

- void `Initialize` ()
Construction of normals to sides.

7.60.1 Detailed Description

Class to solve the linear hyperbolic equation in 2-D by a MUSCL Finite Volume scheme on triangles.

7.60.2 Member Enumeration Documentation

enum Method [inherited]

Enumeration for flux choice.

Enumerator

FIRST_ORDER_METHOD First Order upwind method

MULTI_SLOPE_Q_METHOD Multislope Q method

MULTI_SLOPE_M_METHOD Multislope M method

enum Limiter [inherited]

Enumeration of flux limiting methods.

Enumerator

MINMOD_LIMITER MinMod limiter

VANLEER_LIMITER Van Leer limiter

SUPERBEE_LIMITER Superbee limiter

VANALBADA_LIMITER Van Albada limiter

MAX_LIMITER Max limiter

enum SolverType [inherited]

Enumeration of various solvers for the Riemann problem.

Enumerator

ROE_SOLVER Roe solver

VROE_SOLVER Finite Volume Roe solver

LF_SOLVER LF solver

RUSANOV_SOLVER Rusanov solver

HLL_SOLVER HLL solver

HLLC_SOLVER HLLC solver

MAX_SOLVER Max solver

7.60.3 Constructor & Destructor Documentation

LCL2DT (Mesh & *m*, Vect< real_t > & *U*)

Constructor using mesh and initial data.

Parameters

in	<i>m</i>	Reference to Mesh instance
in	<i>U</i>	Vector containing initial (elementwise) solution

7.60.4 Member Function Documentation

void setInitialCondition (Vect< real_t > & u)

Set elementwise initial condition.

Parameters

in	<i>u</i>	Vect instance containing initial condition values
----	----------	---

void setInitialCondition (real_t u)

Set a constant initial condition.

Parameters

in	<i>u</i>	Value of initial condition to assign to all elements
----	----------	--

real_t runOneTimeStep ()

Run one time step of the linear conservation law.

Returns

Value of the time step

void setBC (real_t u)

Set Dirichlet boundary condition.

Assign a constant value *u* to all boundary sides

void setBC (const Side & sd, real_t u)

Set Dirichlet boundary condition.

Assign a constant value to a side

Parameters

in	<i>sd</i>	Side to which value is prescribed
in	<i>u</i>	Value to prescribe

void setBC (int code, real_t u)

Set Dirichlet boundary condition.

Assign a constant value sides with a given code

Parameters

in	<i>code</i>	Code of sides to which value is prescribed
in	<i>u</i>	Value to prescribe

void setVelocity (const Vect< real_t > & v)

Set convection velocity.

Parameters

in	<i>v</i>	Vect instance containing velocity
----	----------	-----------------------------------

void setVelocity (const LocalVect< real_t, 2 > & v)

Set (constant) convection velocity.

Parameters

in	<i>v</i>	Vector containing constant velocity to prescribe
----	----------	--

void Forward (const Vect< real_t > & Flux, Vect< real_t > & Field)

Computation of the primal variable $n \rightarrow n+1$.

Vector *Flux* contains elementwise fluxes issued from the Riemann problem, calculated with, as left element, **getNeighborElement(1)** and right element **getNeighborElement(2)** if **getNeighborElement(2)** doesn't exist, we are on a boundary and we prescribe a symmetry condition

bool setReconstruction (const Vect< real_t > & U, Vect< real_t > & LU, Vect< real_t > & RU, size_t dof) [inherited]

Function to reconstruct by the **Muscl** method.

Parameters

in	<i>U</i>	Field to reconstruct
out	<i>LU</i>	Left gradient vector
out	<i>RU</i>	Right gradient vector
in	<i>dof</i>	Label of dof to reconstruct

void Initialize () [protected], [inherited]

Construction of normals to sides.

Convention: for a given side, **getPtrElement(1)** is the left element and **getPtrElement(2)** is the right element. The normal goes from left to right. For boundary sides, the normal points outward.

void setTimeStep (real_t dt) [inherited]

Assign time step value.

Parameters

in	<i>dt</i>	Time step value
----	-----------	-----------------

void setCFL (real.t CFL) [inherited]

Assign CFL value.

Parameters

in	<i>CFL</i>	Value of CFL
----	------------	--------------

void setReferenceLength (real.t dx) [inherited]

Assign reference length value.

Parameters

in	<i>dx</i>	Value of reference length
----	-----------	---------------------------

void setVerbose (int v) [inherited]

Set verbosity parameter.

Parameters

in	<i>v</i>	Value of verbosity parameter
----	----------	------------------------------

void setMethod (const Method & s) [inherited]

Choose a flux solver.

Parameters

in	<i>s</i>	Solver to choose
----	----------	------------------

void setLimiter (Limiter l) [inherited]

Choose a flux limiter.


Parameters

in	<i>l</i>	Limiter to choose
----	----------	-------------------

7.61 LCL3DT Class Reference

Class to solve the linear conservation law equation in 3-D by a MUSCL Finite Volume scheme on tetrahedra.

Inheritance diagram for LCL3DT:

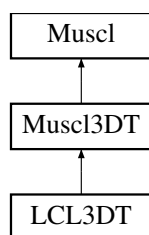

Public Types

Public Member Functions

- `LCL3DT (Mesh &m)`
Constructor using mesh.
- `LCL3DT (Mesh &m, Vect< real_t > &U)`
Constructor using mesh and initial field.
- `~LCL3DT ()`
Destructor.
- `void setInitialCondition (Vect< real_t > &u)`
Set elementwise initial condition.
- `void setInitialCondition (real_t u)`
Set a constant initial condition.
- `void setReconstruction ()`
*Reconstruct flux using *Muscl* scheme.*
- `real_t runOneTimeStep ()`
Run one time step.
- `void setBC (real_t u)`
*Set Dirichlet boundary condition. Assign a constant value *u* to all boundary sides.*
- `void setBC (const Side &sd, real_t u)`
Set Dirichlet boundary condition.
- `void setBC (int code, real_t u)`
Set Dirichlet boundary condition.
- `void setVelocity (const Vect< real_t > &v)`
Set convection velocity.
- `void setVelocity (const LocalVect< real_t, 3 > &v)`
Set (constant) convection velocity.
- `void setReferenceLength (real_t dx)`
Assign reference length value.
- `real_t getReferenceLength () const`
Return reference length.
- `void Forward (const Vect< real_t > &Flux, Vect< real_t > &Field)`
Computation of the primal variable $n \rightarrow n+1$.
- `bool setReconstruction (const Vect< real_t > &U, Vect< real_t > &LU, Vect< real_t > &RU, size_t dof)`
*Function to reconstruct by the *Muscl* method.*
- `real_t getMinimumFaceArea () const`
Return minimum area of faces in the mesh.

- `real.t getMinimumElementVolume ()` const
Return minimum volume of elements in the mesh.
- `real.t getMaximumFaceArea ()` const
Return maximum area of faces in the mesh.
- `real.t getMaximumElementVolume ()` const
Return maximum volume of elements in the mesh.
- `real.t getMeanFaceArea ()` const
Return mean area of faces in the mesh.
- `real.t getMeanElementVolume ()` const
Return mean volume of elements in the mesh.
- `real.t getMinimumEdgeLength ()` const
Return minimum length of edges in the mesh.
- `real.t getMinimumVolumebyArea ()` const
Return minimum volume by area in the mesh.
- `real.t getMaximumEdgeLength ()` const
Return maximum length of edges in the mesh.
- `real.t getTauLim ()` const
Return value of tau lim.
- `real.t getComega ()` const
Return value of Comega.
- `void setbetalim (real.t bl)`
Assign value of beta lim.
- `void setTimeStep (real.t dt)`
Assign time step value.
- `real.t getTimeStep ()` const
Return time step value.
- `void setCFL (real.t CFL)`
Assign CFL value.
- `real.t getCFL ()` const
Return CFL value.
- `Mesh & getMesh ()` const
Return reference to [Mesh](#) instance.
- `void setVerbose (int v)`
Set verbosity parameter.
- `void setMethod (const Method &s)`
Choose a flux solver.
- `void setSolidZoneCode (int c)`
Choose a code for solid zone.
- `bool getSolidZone ()` const
Return flag for presence of solid zones.
- `int getSolidZoneCode ()` const
Return code of solid zone, 0 if this one is not present.
- `void setLimiter (Limiter l)`
Choose a flux limiter.

7.61.1 Detailed Description

Class to solve the linear conservation law equation in 3-D by a MUSCL Finite Volume scheme on tetrahedra.

7.61.2 Member Enumeration Documentation

enum Method [inherited]

Enumeration for flux choice.

Enumerator

FIRST_ORDER_METHOD First Order upwind method

MULTI_SLOPE_Q_METHOD Multislope Q method

MULTI_SLOPE_M_METHOD Multislope M method

enum Limiter [inherited]

Enumeration of flux limiting methods.

Enumerator

MINMOD_LIMITER MinMod limiter

VANLEER_LIMITER Van Leer limiter

SUPERBEE_LIMITER Superbee limiter

VANALBADA_LIMITER Van Albada limiter

MAX_LIMITER Max limiter

enum SolverType [inherited]

Enumeration of various solvers for the Riemann problem.

Enumerator

ROE_SOLVER Roe solver

VROE_SOLVER Finite Volume Roe solver

LF_SOLVER LF solver

RUSANOV_SOLVER Rusanov solver

HLL_SOLVER HLL solver

HLLC_SOLVER HLLC solver

MAX_SOLVER Max solver

7.61.3 Constructor & Destructor Documentation

LCL3DT (*Mesh* & *m*, *Vect*< *real_t* > & *U*)

Constructor using mesh and initial field.

Parameters

in	<i>m</i>	Reference to Mesh instance
in	<i>U</i>	Vector containing initial (elementwise) solution

7.61.4 Member Function Documentation

void setInitialCondition (Vect< real_t > & *u*)

Set elementwise initial condition.

Parameters

in	<i>u</i>	Vect instance containing initial condition values
----	----------	---

void setInitialCondition (real_t *u*)

Set a constant initial condition.

Parameters

in	<i>u</i>	Value of initial condition to assign to all elements
----	----------	--

void setBC (const Side & *sd*, real_t *u*)

Set Dirichlet boundary condition.
Assign a constant value to a side

Parameters

in	<i>sd</i>	Side to which value is prescribed
in	<i>u</i>	Value to prescribe

void setBC (int *code*, real_t *u*)

Set Dirichlet boundary condition.
Assign a constant value sides with a given code

Parameters

in	<i>code</i>	Code of sides to which value is prescribed
in	<i>u</i>	Value to prescribe

void setVelocity (const Vect< real_t > & *v*)

Set convection velocity.

Parameters

in	<i>v</i>	Vect instance containing velocity
----	----------	-----------------------------------

void setVelocity (const LocalVect< real_t, 3 > & v)

Set (constant) convection velocity.

Parameters

in	<i>v</i>	Vector containing constant velocity to prescribe
----	----------	--

void Forward (const Vect< real_t > & Flux, Vect< real_t > & Field)

Computation of the primal variable $n \rightarrow n+1$.

Vector Flux contains elementwise fluxes issued from the Riemann problem, calculated with, as left element, **getNeighborElement(1)** and right element **getNeighborElement(2)** if **getNeighborElement(2)** doesn't exist, we are on a boundary and we prescribe a symmetry condition

bool setReconstruction (const Vect< real_t > & U, Vect< real_t > & LU, Vect< real_t > & RU, size_t dof) [inherited]

Function to reconstruct by the [Muscl](#) method.

Parameters

in	<i>U</i>	Field to reconstruct
out	<i>LU</i>	Left gradient vector
out	<i>RU</i>	Right gradient vector
in	<i>dof</i>	Label of dof to reconstruct

void setTimeStep (real_t dt) [inherited]

Assign time step value.

Parameters

in	<i>dt</i>	Time step value
----	-----------	-----------------

void setCFL (real_t CFL) [inherited]

Assign CFL value.

Parameters

in	<i>CFL</i>	Value of CFL
----	------------	--------------

void setVerbose (int v) [inherited]

Set verbosity parameter.

Parameters

in	<i>v</i>	Value of verbosity parameter
----	----------	------------------------------

void setMethod (const Method & s) [inherited]

Choose a flux solver.

Parameters

in	<i>s</i>	Solver to choose
----	----------	------------------

void setLimiter (Limiter l) [inherited]

Choose a flux limiter.


Parameters

in	<i>l</i>	Limiter to choose
----	----------	-------------------

7.62 Line2 Class Reference

To describe a 2-Node planar line finite element.

Inheritance diagram for Line2:

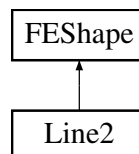

Public Member Functions

- [Line2](#) ()
Default Constructor.
- [Line2](#) (const [Element](#) *el)
Constructor for an element.
- [Line2](#) (const [Side](#) *side)
Constructor for a side.
- [Line2](#) (const [Edge](#) *edge)
Constructor for an edge.
- [~Line2](#) ()
Destructor.
- [real.t getLength](#) () const
Return element length.
- [Point< real.t > getNormal](#) () const

- Return unit normal vector to line.*
- `Point< real_t > getTangent () const`
- Return unit tangent vector to line.*
- `real_t Sh (size_t i, real_t s) const`
- Calculate shape function of a given node at a given point.*
- `real_t DSh (size_t i) const`
- Calculate partial derivative of shape function of a node.*
- `Point< real_t > getRefCoord (const Point< real_t > &x)`
- Return reference coordinates of a point x in element.*
- `bool isIn (const Point< real_t > &x)`
- Check whether point x is in current line element or not.*
- `real_t getInterpolate (const Point< real_t > &x, const LocalVect< real_t, 2 > &v)`
- Return interpolated value at a given point.*
- `real_t Sh (size_t i) const`
- Return shape function of node i at given point.*
- `real_t Sh (size_t i, Point< real_t > s) const`
- Calculate shape function of node i at a given point s .*
- `real_t getDet () const`
- Return determinant of jacobian.*
- `Point< real_t > getCenter () const`
- Return coordinates of center of element.*
- `Point< real_t > getLocalPoint () const`
- Localize a point in the element.*
- `Point< real_t > getLocalPoint (const Point< real_t > &s) const`
- Localize a point in the element.*

7.62.1 Detailed Description

To describe a 2-Node planar line finite element.

Defines geometric quantities associated to 2-node linear segment element P_1 in the space. The reference element is the segment $[-1, 1]$. Note that the line length is not checked unless the function check is called.

7.62.2 Constructor & Destructor Documentation

Line2 (const Element * *el*)

Constructor for an element.

Parameters

in	<i>el</i>	Pointer to element
----	-----------	--------------------

Line2 (const Side * *side*)

Constructor for a side.

Parameters

in	<i>side</i>	Pointer to side
----	-------------	-----------------

Line2 (const Edge * *edge*)

Constructor for an edge.

Parameters

in	<i>edge</i>	Pointer to edge
----	-------------	-----------------

7.62.3 Member Function Documentation

real_t Sh (size_t *i*, real_t *s*) const

Calculate shape function of a given node at a given point.

Parameters

in	<i>i</i>	Node number (1 or 2).
in	<i>s</i>	Localization of point in natural coordinates (must be between -1 and 1).

real_t DSh (size_t *i*) const

Calculate partial derivative of shape function of a node.

Parameters

in	<i>i</i>	Node number (1 or 2).
----	----------	-----------------------

Point<real_t> getRefCoord (const Point< real_t > & *x*)

Return reference coordinates of a point *x* in element.

Only the x-coordinate of the returned value has a meaning

real_t getInterpolate (const Point< real_t > & *x*, const LocalVect< real_t, 2 > & *v*)

Return interpolated value at a given point.

Parameters

in	<i>x</i>	Point where interpolation is evaluated (in the reference element).
out	<i>v</i>	Computed value.

real_t Sh (size_t *i*, Point< real_t > *s*) const [inherited]

Calculate shape function of node *i* at a given point *s*.

Parameters

in	<i>i</i>	Local node label
----	----------	------------------

Parameters

in	s	Point in the reference triangle where the shape function is evaluated
----	---	---

real_t getDet () const [inherited]

Return determinant of jacobian.

If the transformation (Reference element -> Actual element) is not affine, member function **setLocal()** must have been called before in order to calculate relevant quantities.

Point<real_t> getLocalPoint () const [inherited]

Localize a point in the element.

Return actual coordinates in the reference element. If the transformation (Reference element -> Actual element) is not affine, member function **setLocal()** must have been called before in order to calculate relevant quantities.

Point<real_t> getLocalPoint (const Point< real_t > & s) const [inherited]


Localize a point in the element.

Return actual coordinates where s are coordinates in the reference element.

7.63 Line2H Class Reference

To describe a 2-Node Hermite planar line finite element.

Inheritance diagram for Line2H:

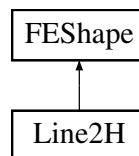

Public Member Functions

- [Line2H](#) ()
Default Constructor.
- [Line2H](#) (const [Element](#) *el)
Constructor for an element.
- [Line2H](#) (const [Side](#) *side)
Constructor for a side.
- [~Line2H](#) ()
Destructor.
- [Point< real_t > getLocalPoint](#) ([real_t](#) s) const
Localize a point in the element.
- [real_t Sh](#) (size_t i, [real_t](#) s) const
Return shape function value of node i at given point s
- [real_t DSh](#) (size_t i, [real_t](#) s) const
Return first derivative (along the abscissa) of shape function of node i at a given point.

- **real_t D2Sh** (size_t i, real_t s) const
Return second derivatives (along the abscissa) of shape function of node i
- **real_t getDet** () const
Return determinant of jacobian.
- **real_t getLength** ()
Return element length.
- **real_t check** () const
Check line length and number of line nodes.
- **real_t Sh** (size_t i) const
Return shape function of node i at given point.
- **real_t Sh** (size_t i, Point< real_t > s) const
Calculate shape function of node i at a given point s.
- **Point< real_t > DSh** (size_t i) const
Return derivatives of shape function of node i at a given point.
- **Point< real_t > getCenter** () const
Return coordinates of center of element.
- **Point< real_t > getLocalPoint** () const
Localize a point in the element.
- **Point< real_t > getLocalPoint** (const Point< real_t > &s) const
Localize a point in the element.

7.63.1 Detailed Description

To describe a 2-Node Hermite planar line finite element.

Defines geometric quantities associated to 2-node segment element in the space using Hermite (C^1) interpolation. The interpolation functions are polynomials of degree 3. The reference element is the segment $[-1, 1]$. The unknowns are supported by extremities of the interval: each extremity supports two unknowns, the function and its line derivative.

7.63.2 Member Function Documentation

Point<real_t> getLocalPoint (real_t s) const

Localize a point in the element.

For a point s in the reference element, return coordinates in the real element.

real_t check () const

Check line length and number of line nodes.

Returns

- > 0: m is the length
- = 0: zero length (=> Error)

real_t Sh (size_t i, Point< real_t > s) const [inherited]

Calculate shape function of node i at a given point s.

Parameters

in	<i>i</i>	Local node label
in	<i>s</i>	Point in the reference triangle where the shape function is evaluated

Point<real_t> DSh (size_t *i*) const [inherited]

Return derivatives of shape function of node *i* at a given point.

If the transformation (Reference element -> Actual element) is not affine, member function `setLocal()` must have been called before in order to calculate relevant quantities.

Parameters

in	<i>i</i>	Partial derivative index (1, 2 or 3)
----	----------	--------------------------------------

Point<real_t> getLocalPoint () const [inherited]

Localize a point in the element.

Return actual coordinates in the reference element. If the transformation (Reference element -> Actual element) is not affine, member function `setLocal()` must have been called before in order to calculate relevant quantities.

Point<real_t> getLocalPoint (const Point<real_t> & *s*) const [inherited]


Localize a point in the element.

Return actual coordinates where *s* are coordinates in the reference element.

7.64 Line3 Class Reference

To describe a 3-Node quadratic planar line finite element.

Inheritance diagram for Line3:

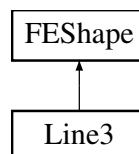

Public Member Functions

- [Line3](#) ()
Default Constructor.
- [Line3](#) (const [Element](#) *el)
Constructor for an element.
- [Line3](#) (const [Side](#) *sd)
Constructor for a side.
- [~Line3](#) ()
Destructor.

- `void setLocal (real_t s)`
Initialize local point coordinates in element.
- `real_t DSh (size_t i) const`
Return derivatives of shape function of node i at a given point.
- `Point< real_t > getLocalPoint () const`
Return actual coordinates of localized point.
- `real_t Sh (size_t i) const`
Return shape function of node i at given point.
- `real_t Sh (size_t i, Point< real_t > s) const`
Calculate shape function of node i at a given point s .
- `real_t getDet () const`
Return determinant of jacobian.
- `Point< real_t > getCenter () const`
Return coordinates of center of element.
- `Point< real_t > getLocalPoint (const Point< real_t > &s) const`
Localize a point in the element.

7.64.1 Detailed Description

To describe a 3-Node quadratic planar line finite element.

Defines geometric quantities associated to 3-node quadratic element P_2 in the space. The reference element is the segment $[-1, 1]$. The user must take care to the fact that determinant of jacobian and other quantities depend on the point in the reference element where they are calculated. For this, before any utilization of shape functions or jacobian, function `setLocal()` must be invoked.

`Element` nodes are ordered as the following: the left one, the central one and the right one.

7.64.2 Member Function Documentation

`real_t Sh (size_t i, Point< real_t > s) const` [inherited]

Calculate shape function of node i at a given point s .

Parameters

in	i	Local node label
in	s	<code>Point</code> in the reference triangle where the shape function is evaluated

`real_t getDet () const` [inherited]

Return determinant of jacobian.

If the transformation (Reference element \rightarrow Actual element) is not affine, member function `setLocal()` must have been called before in order to calculate relevant quantities.

`Point<real_t> getLocalPoint (const Point< real_t > &s) const` [inherited]

Localize a point in the element.

Return actual coordinates where s are coordinates in the reference element.

7.65 LinearSolver< T_ > Class Template Reference

Class to solve systems of linear equations by iterative methods.

Public Member Functions

- [LinearSolver](#) ()
Default Constructor.
- [LinearSolver](#) (int max_it, [real_t](#) tolerance, int verbose)
Constructor with iteration parameters.
- [LinearSolver](#) ([SpMatrix](#)< T_ > &A, const [Vect](#)< T_ > &b, [Vect](#)< T_ > &x)
Constructor using matrix, right-hand side and solution vector.
- [LinearSolver](#) ([SkMatrix](#)< T_ > &A, const [Vect](#)< T_ > &b, [Vect](#)< T_ > &x)
Constructor using skyline-stored matrix, right-hand side and solution vector.
- [LinearSolver](#) ([TrMatrix](#)< T_ > &A, const [Vect](#)< T_ > &b, [Vect](#)< T_ > &x)
Constructor using a tridiagonal matrix, right-hand side and solution vector.
- [LinearSolver](#) ([BMatrix](#)< T_ > &A, const [Vect](#)< T_ > &b, [Vect](#)< T_ > &x)
Constructor using a banded matrix, right-hand side and solution vector.
- [LinearSolver](#) ([DMatrix](#)< T_ > &A, const [Vect](#)< T_ > &b, [Vect](#)< T_ > &x)
Constructor using a dense matrix, right-hand side and solution vector.
- [LinearSolver](#) ([DSMatrix](#)< T_ > &A, const [Vect](#)< T_ > &b, [Vect](#)< T_ > &x)
Constructor using a dense symmetric matrix, right-hand side and solution vector.
- [LinearSolver](#) ([SkSMatrix](#)< T_ > &A, const [Vect](#)< T_ > &b, [Vect](#)< T_ > &x)
Constructor using skyline-stored symmetric matrix, right-hand side and solution vector.
- [LinearSolver](#) ([SkMatrix](#)< T_ > &A, [Vect](#)< T_ > &b, [Vect](#)< T_ > &x)
Constructor using matrix, right-hand side.
- virtual [~LinearSolver](#) ()
Destructor.
- void [setVerbose](#) (int verb)
Set message level.
- void [setMaxIter](#) (int m)
Set Maximum number of iterations.
- void [setTolerance](#) ([real_t](#) tol)
Set tolerance value.
- void [setSolution](#) ([Vect](#)< T_ > &x)
Set solution vector.
- void [setRHS](#) ([Vect](#)< T_ > &b)
Set right-hand side vector.
- void [setMatrix](#) ([OFELI::Matrix](#)< T_ > *A)
Set matrix in the case of a pointer to [Matrix](#).
- void [setMatrix](#) ([SpMatrix](#)< T_ > &A)
Set matrix in the case of a pointer to matrix.
- void [setMatrix](#) ([SkMatrix](#)< T_ > &A)
Set matrix in the case of a skyline matrix.
- void [set](#) ([SpMatrix](#)< T_ > &A, const [Vect](#)< T_ > &b, [Vect](#)< T_ > &x)
Set matrix, right-hand side and initial guess.
- void [setSolver](#) ([Iteration](#) s, [Preconditioner](#) p=[DIAG_PREC](#))

- Set solver and preconditioner.*
- `int getSolver () const`
Return solver code.
- `int solve (SpMatrix< T_ > &A, const Vect< T_ > &b, Vect< T_ > &x, Iteration s, Preconditioner p=DIAG.PREC)`
Solve equations using system data, prescribed solver and preconditioner.
- `int solve (Iteration s, Preconditioner p=DIAG.PREC)`
Solve equations using prescribed solver and preconditioner.
- `int solve ()`
Solve equations all arguments must have given by other member functions.
- `void setFact ()`
Factorize matrix.
- `void setNoFact ()`
Do not factorize matrix.

7.65.1 Detailed Description

```
template<class T_>
class OFELI::LinearSolver< T_ >
```

Class to solve systems of linear equations by iterative methods.

7.65.2 Constructor & Destructor Documentation

LinearSolver ()

Default Constructor.
Initializes default parameters and pointers to 0.

LinearSolver (int max_it, real_t tolerance, int verbose)

Constructor with iteration parameters.

Parameters

in	<i>max_it</i>	Maximal number of iterations
in	<i>tolerance</i>	Tolerance for convergence (measured in relative weighted 2-Norm) in input, effective discrepancy in output.
in	<i>verbose</i>	Information output parameter <ul style="list-style-type: none">• 0: No output• 1: Output iteration information,• 2 and greater: Output iteration information and solution at each iteration.

LinearSolver (SpMatrix< T_ > &A, const Vect< T_ > &b, Vect< T_ > &x)

Constructor using matrix, right-hand side and solution vector.

Parameters

in	A	Reference to instance of class SpMatrix
in	b	Vect instance that contains the right-hand side
in,out	x	Vect instance that contains initial guess on input and solution on output

LinearSolver (SkMatrix< T_ > & A, const Vect< T_ > & b, Vect< T_ > & x)

Constructor using skyline-stored matrix, right-hand side and solution vector.

Parameters

in	A	SkMatrix instance that contains matrix
in	b	Vect instance that contains the right-hand side
in,out	x	Vect instance that contains initial guess on input and solution on output

LinearSolver (TrMatrix< T_ > & A, const Vect< T_ > & b, Vect< T_ > & x)

Constructor using a tridiagonal matrix, right-hand side and solution vector.

Parameters

in	A	TrMatrix instance that contains matrix
in	b	Vect instance that contains the right-hand side
in,out	x	Vect instance that contains initial guess on input and solution on output

LinearSolver (BMatrix< T_ > & A, const Vect< T_ > & b, Vect< T_ > & x)

Constructor using a banded matrix, right-hand side and solution vector.

Parameters

in	A	BMatrix instance that contains matrix
in	b	Vect instance that contains the right-hand side
in,out	x	Vect instance that contains initial guess on input and solution on output

LinearSolver (DMatrix< T_ > & A, const Vect< T_ > & b, Vect< T_ > & x)

Constructor using a dense matrix, right-hand side and solution vector.

Parameters

in	A	DMatrix instance that contains matrix
in	b	Vect instance that contains the right-hand side
in,out	x	Vect instance that contains initial guess on input and solution on output

LinearSolver (DSMatrix< T_ > & A, const Vect< T_ > & b, Vect< T_ > & x)

Constructor using a dense symmetric matrix, right-hand side and solution vector.

Parameters

in	<i>A</i>	DSMatrix instance that contains matrix
in	<i>b</i>	Vect instance that contains the right-hand side
in,out	<i>x</i>	Vect instance that contains initial guess on input and solution on output

LinearSolver (SkSMatrix< T_ > & A, const Vect< T_ > & b, Vect< T_ > & x)

Constructor using skyline-stored symmetric matrix, right-hand side and solution vector.

Parameters

in	<i>A</i>	SkMatrix instance that contains matrix
in	<i>b</i>	Vect instance that contains the right-hand side
in,out	<i>x</i>	Vect instance that contains initial guess on input and solution on output

LinearSolver (SkMatrix< T_ > & A, Vect< T_ > & b, Vect< T_ > & x)

Constructor using matrix, right-hand side.

Parameters

in	<i>A</i>	SkMatrix instance that contains matrix
in	<i>b</i>	Vect instance that contains the right-hand side
in,out	<i>x</i>	Vect instance that contains the initial guess on input and solution on output

7.65.3 Member Function Documentation

void setVerbose (int *verb*)

Set message level.

Default value is 0

void setMaxIter (int *m*)

Set Maximum number of iterations.

Default value is 1000

void setMatrix (OFELI::Matrix< T_ > * A)

Set matrix in the case of a pointer to [Matrix](#).

Parameters

in	<i>A</i>	Pointer to abstract Matrix class
----	----------	--

void setMatrix (SpMatrix< T_ > & A)

Set matrix in the case of a pointer to matrix.

Parameters

in	<i>A</i>	Pointer to abstract Matrix class
----	----------	--

void setMatrix (SkMatrix< T_ > & A)

Set matrix in the case of a skyline matrix.

Parameters

in	<i>A</i>	Matrix as instance of class SkMatrix
----	----------	--

void set (SpMatrix< T_ > & A, const Vect< T_ > & b, Vect< T_ > & x)

Set matrix, right-hand side and initial guess.

Parameters

in	<i>A</i>	Reference to matrix as a SpMatrix instance
in	<i>b</i>	Vector containing right-hand side
in,out	<i>x</i>	Vector containing initial guess on input and solution on output

void setSolver (Iteration *s*, Preconditioner *p* = DIAG_PREC)

Set solver and preconditioner.

Parameters

in	<i>s</i>	Solver identification parameter. To be chosen in the enumeration variable Iteration: DIRECT_SOLVER, CG_SOLVER, CGS_SOLVER, BICG_SOLVER, BICG_STAB_SOLVER, GMRES_SOLVER, QMR_SOLVER
in	<i>p</i>	Preconditioner identification parameter. By default, the diagonal preconditioner is used. To be chosen in the enumeration variable Preconditioner: IDENT_PREC, DIAG_PREC, SSOR_PREC, ILU_PREC [Default: ILU_PREC]

Note

The argument *p* has no effect if the solver is DIRECT_SOLVER

int solve (SpMatrix< T_ > & A, const Vect< T_ > & b, Vect< T_ > & x, Iteration *s*, Preconditioner *p* = DIAG_PREC)

Solve equations using system data, prescribed solver and preconditioner.

Parameters

in	A	Reference to matrix as a SpMatrix instance
in	b	Vector containing right-hand side
in,out	x	Vector containing initial guess on input and solution on output
in	s	Solver identification parameter To be chosen in the enumeration variable Iteration: DIRECT_SOLVER, CG_SOLVER, CGS_SOLVER, BICG_SOLVER, BICG_STAB_SOLVER, GMRES_SOLVER, QMR_SOLVER [Default: CGS_SOLVER]
in	p	Preconditioner identification parameter. To be chosen in the enumeration variable Preconditioner: IDENT_PREC, DIAG_PREC, SSOR_PREC, ILU_PREC, DILU_PREC [Default: DIAG_PREC]

Remarks

The argument p has no effect if the solver is DIRECT_SOLVER

Warning

If the library `eigen` is used, only the preconditioners IDENT_PREC, DIAG_PREC and ILU_PREC are available.

int solve ()

Solve equations all arguments must have given by other member functions.

Solver and preconditioner parameters must have been set by function `setSolver`. Otherwise, default values are set.

7.66 LocalMatrix< T_, NR_, NC_ > Class Template Reference

Handles small size matrices like element matrices, with a priori known size.

Public Member Functions

- [LocalMatrix](#) ()
Default constructor.
- [LocalMatrix](#) (const [LocalMatrix](#)< T_, NR_, NC_ > &m)
Copy constructor.
- [LocalMatrix](#) ([Element](#) *el, const [SpMatrix](#)< T_ > &a)
Constructor of a local matrix associated to element from a [SpMatrix](#).
- [LocalMatrix](#) ([Element](#) *el, const [SkMatrix](#)< T_ > &a)
Constructor of a local matrix associated to element from a [SkMatrix](#).
- [LocalMatrix](#) ([Element](#) *el, const [SkSMatrix](#)< T_ > &a)
Constructor of a local matrix associated to element from a [SkSMatrix](#).
- [~LocalMatrix](#) ()
Destructor.
- T_ & [operator\(\)](#) (size_t i, size_t j)
Operator () (Non constant version)

- `T_ operator() (size_t i, size_t j) const`
Operator () (Constant version)
- `void Localize (Element *el, const SpMatrix< T_ > &a)`
Initialize matrix as element matrix from global *SpMatrix*.
- `void Localize (Element *el, const SkMatrix< T_ > &a)`
Initialize matrix as element matrix from global *SkMatrix*.
- `void Localize (Element *el, const SkSMatrix< T_ > &a)`
Initialize matrix as element matrix from global *SkSMatrix*.
- `LocalMatrix< T_, NR_, NC_ > & operator= (const LocalMatrix< T_, NR_, NC_ > &m)`
Operator =
- `LocalMatrix< T_, NR_, NC_ > & operator= (const T_ &x)`
Operator =
- `LocalMatrix< T_, NR_, NC_ > & operator+= (const LocalMatrix< T_, NR_, NC_ > &m)`
Operator +=
- `LocalMatrix< T_, NR_, NC_ > & operator-= (const LocalMatrix< T_, NR_, NC_ > &m)`
Operator -=
- `LocalVect< T_, NR_ > operator* (LocalVect< T_, NC_ > &x)`
Operator *
- `LocalMatrix< T_, NR_, NC_ > & operator+= (const T_ &x)`
Operator +=
- `LocalMatrix< T_, NR_, NC_ > & operator-= (const T_ &x)`
Operator -=
- `LocalMatrix< T_, NR_, NC_ > & operator*= (const T_ &x)`
Operator *=
- `LocalMatrix< T_, NR_, NC_ > & operator/= (const T_ &x)`
Operator /=
- `void MultAdd (const LocalVect< T_, NC_ > &x, LocalVect< T_, NR_ > &y)`
Multiply matrix by vector and add result to vector.
- `void MultAddScal (const T_ &a, const LocalVect< T_, NC_ > &x, LocalVect< T_, NR_ > &y)`
Multiply matrix by scaled vector and add result to vector.
- `void Mult (const LocalVect< T_, NC_ > &x, LocalVect< T_, NR_ > &y)`
Multiply matrix by vector.
- `void Symmetrize ()`
Symmetrize matrix.
- `int Factor ()`
Factorize matrix.
- `int Solve (LocalVect< T_, NR_ > &b)`
Forward and backsubstitute to solve a linear system.
- `int FactorAndSolve (LocalVect< T_, NR_ > &b)`
Factorize matrix and solve linear system.
- `void Invert (LocalMatrix< T_, NR_, NC_ > &A)`
Calculate inverse of matrix.
- `T_ getInnerProduct (const LocalVect< T_, NC_ > &x, const LocalVect< T_, NR_ > &y)`
Calculate inner product with respect to matrix.
- `T_ * get ()`
Return pointer to matrix as a C-array.

7.66.1 Detailed Description

template<class T_, size_t NR_, size_t NC_>
class OFELI::LocalMatrix< T_, NR_, NC_ >

Handles small size matrices like element matrices, with a priori known size.

The template class [LocalMatrix](#) treats small size matrices. Typically, this class is recommended to store element and side arrays.

Internally, no dynamic storage is used.

Template Parameters

T_{\leftarrow} -	Data type (double, float, complex<double>, ...)
N_{\leftarrow} R_{\leftarrow} -	number of rows of matrix
N_{\leftarrow} C_{\leftarrow} -	number of columns of matrix

7.66.2 Member Function Documentation

T_& operator() (size_t *i*, size_t *j*)

Operator () (Non constant version)

Returns entry at row *i* and column *j*.

T_ operator() (size_t *i*, size_t *j*) const

Operator () (Constant version)

Returns entry at row *i* and column *j*.

7.67 LocalVect< T_, N_ > Class Template Reference

Handles small size vectors like element vectors.

Public Member Functions

- [LocalVect](#) ()
Default constructor.
- [LocalVect](#) (const T_ *a)
Constructor using a C-array.
- [LocalVect](#) (const [Element](#) *el)
Constructor using [Element](#) pointer.
- [LocalVect](#) (const [Side](#) *sd)
Constructor using [Side](#) pointer.
- [LocalVect](#) (const [LocalVect](#)< T_, N_ > &v)
Copy constructor.
- [LocalVect](#) (const [Element](#) *el, const [Vect](#)< T_ > &v, int opt=0)
Constructor of an element vector from a global [Vect](#) instance.

- **LocalVect** (const **Side** *sd, const **Vect**< T_ > &v, int opt=0)
Constructor of a side vector from a global Vect instance.
- **~LocalVect** ()
Destructor.
- void **getLocal** (const **Element** &el, const **Vect**< T_ > &v, int type)
Localize an element vector from a global Vect instance.
- void **Localize** (const **Element** *el, const **Vect**< T_ > &v, size_t k=0)
Localize an element vector from a global Vect instance.
- void **Localize** (const **Side** *sd, const **Vect**< T_ > &v, size_t k=0)
Localize a side vector from a global Vect instance.
- T_ & **operator[]** (size_t i)
Operator [] (Non constant version).
- T_ **operator[]** (size_t i) const
Operator [] (Constant version).
- T_ & **operator()** (size_t i)
Operator () (Non constant version).
- T_ **operator()** (size_t i) const
Operator () (Constant version).
- **Element** * **El** ()
Return pointer to Element if vector was constructed using an element and NULL otherwise.
- **Side** * **Sd** ()
Return pointer to Side if vector was constructed using a side and NULL otherwise.
- **LocalVect**< T_, N_ > & **operator=** (const **LocalVect**< T_, N_ > &v)
Operator =
- **LocalVect**< T_, N_ > & **operator=** (const T_ &x)
Operator =
- **LocalVect**< T_, N_ > & **operator+=** (const **LocalVect**< T_, N_ > &v)
Operator +=
- **LocalVect**< T_, N_ > & **operator+=** (const T_ &a)
Operator +=
- **LocalVect**< T_, N_ > & **operator-=** (const **LocalVect**< T_, N_ > &v)
Operator -=
- **LocalVect**< T_, N_ > & **operator-=** (const T_ &a)
Operator -=
- **LocalVect**< T_, N_ > & **operator*=** (const T_ &a)
*Operator *=*
- **LocalVect**< T_, N_ > & **operator/=** (const T_ &a)
Operator /=
- T_ * **get** ()
Return pointer to vector as a C-Array.
- T_ **operator,** (const **LocalVect**< T_, N_ > &v) const
Return Dot (scalar) product of two vectors.

7.67.1 Detailed Description

template<class T_, size_t N_>
class OFELI::LocalVect< T_, N_ >

Handles small size vectors like element vectors.

The template class [LocalVect](#) treats small size vectors. Typically, this class is recommended to store element and side arrays. Operators =, [] and () are overloaded so that one can write for instance:

```
LocalVect<double,10> u, v;
v = -1.0;
u = v;
u(3) = -2.0;
```

to set vector **v** entries to **-1**, copy vector **v** into vector **u** and assign third entry of **v** to **-2**. Notice that entries of **v** are here **v(1)**, **v(2)**, ..., **v(10)**, *i.e.* vector entries start at index **1**. Internally, no dynamic storage is used.

Template Parameters

T_{\leftrightarrow} $_{\leftrightarrow}$	Data type (double, float, complex<double>, ...)
N_{\leftrightarrow} $_{\leftrightarrow}$	Vector size

7.67.2 Member Function Documentation

T_& operator[] (size_t i)

Operator [] (Non constant version).
v[i] starts at **v[0]** to **v[size()-1]**

T_ operator[] (size_t i) const

Operator [] (Constant version).
v[i] starts at **v[0]** to **v[size()-1]**

T_& operator() (size_t i)

Operator () (Non constant version).
v(i) starts at **v(1)** to **v(size())**. **v(i)** is the same element as **v[i-1]**

T_ operator() (size_t i) const

Operator () (Constant version).
v(i) starts at **v(1)** to **v(size())** **v(i)** is the same element as **v[i-1]**

7.68 Material Class Reference

To treat material data. This class enables reading material data in material data files. It also returns these informations by means of its members.

Public Member Functions

- [Material](#) ()
Default constructor.
- [Material](#) (const [Material](#) &m)
Copy constructor.
- [~Material](#) ()
Destructor.
- int [set](#) (int m, const string &name)
Associate to material code number n the material named $name$
- string [getName](#) (int m) const
Return material name for material with code m
- int [getCode](#) (size_t i) const
Return material code for i -th material.
- size_t [getNbMat](#) () const
Return Number of read materials.
- void [setCode](#) (int m)
Associate code m to current material.
- int [check](#) (int c)
- [real_t](#) [Density](#) ()
Return constant density.
- [real_t](#) [Density](#) (const [Point](#)< [real_t](#) > &x, [real_t](#) t)
Return density at point x and time t
- [real_t](#) [SpecificHeat](#) ()
Return constant specific heat.
- [real_t](#) [SpecificHeat](#) (const [Point](#)< [real_t](#) > &x, [real_t](#) t)
Return specific heat at point x and time t
- [real_t](#) [ThermalConductivity](#) ()
Return constant thermal conductivity.
- [real_t](#) [ThermalConductivity](#) (const [Point](#)< [real_t](#) > &x, [real_t](#) t)
Return thermal conductivity at point x and time t
- [real_t](#) [MeltingTemperature](#) ()
Return constant melting temperature.
- [real_t](#) [MeltingTemperature](#) (const [Point](#)< [real_t](#) > &x, [real_t](#) t)
Return melting temperature at point x and time t
- [real_t](#) [EvaporationTemperature](#) ()
Return constant evaporation temperature.
- [real_t](#) [EvaporationTemperature](#) (const [Point](#)< [real_t](#) > &x, [real_t](#) t)
Return evaporation temperature at point x and time t
- [real_t](#) [ThermalExpansion](#) ()
Return constant thermal expansion coefficient.
- [real_t](#) [ThermalExpansion](#) (const [Point](#)< [real_t](#) > &x, [real_t](#) t)
Return thermal expansion coefficient at point x and time t
- [real_t](#) [LatentHeatForMelting](#) ()
Return constant latent heat for melting.
- [real_t](#) [LatentHeatForMelting](#) (const [Point](#)< [real_t](#) > &x, [real_t](#) t)
Return latent heat for melting at point x and time t

- [real.t LatentHeatForEvaporation \(\)](#)
Return constant latent heat for evaporation.
- [real.t LatentHeatForEvaporation \(const Point< real.t > &x, real.t t\)](#)
Return latent heat for evaporation at point x and time t
- [real.t DielectricConstant \(\)](#)
Return constant dielectric constant.
- [real.t DielectricConstant \(const Point< real.t > &x, real.t t\)](#)
Return dielectric constant at point x and time t
- [real.t ElectricConductivity \(\)](#)
Return constant electric conductivity.
- [real.t ElectricConductivity \(const Point< real.t > &x, real.t t\)](#)
Return electric conductivity at point x and time t
- [real.t ElectricResistivity \(\)](#)
Return constant electric resistivity.
- [real.t ElectricResistivity \(const Point< real.t > &x, real.t t\)](#)
Return electric resistivity at point x and time t
- [real.t MagneticPermeability \(\)](#)
Return constant magnetic permeability.
- [real.t MagneticPermeability \(const Point< real.t > &x, real.t t\)](#)
Return magnetic permeability at point x and time t
- [real.t Viscosity \(\)](#)
Return constant viscosity.
- [real.t Viscosity \(const Point< real.t > &x, real.t t\)](#)
Return viscosity at point x and time t
- [real.t YoungModulus \(\)](#)
Return constant Young modulus.
- [real.t YoungModulus \(const Point< real.t > &x, real.t t\)](#)
Return Young modulus at point x and time t
- [real.t PoissonRatio \(\)](#)
Return constant Poisson ratio.
- [real.t PoissonRatio \(const Point< real.t > &x, real.t t\)](#)
Return Poisson ratio at point x and time t
- [real.t Property \(int i\)](#)
Return constant i -th property.
- [real.t Property \(int i, const Point< real.t > &x, real.t t\)](#)
Return i -th property at point x and time t
- [Material & operator= \(const Material &m\)](#)
Operator =.

7.68.1 Detailed Description

To treat material data. This class enables reading material data in material data files. It also returns these informations by means of its members.

7.68.2 Constructor & Destructor Documentation

Material ()

Default constructor.

It initializes the class and searches for the path where are material data files.

7.68.3 Member Function Documentation

int set (int *m*, const string & *name*)

Associate to material code number *n* the material named *name*

Returns

Number of materials

string getName (int *m*) const

Return material name for material with code *m*

If such a material is not found, return a blank string.

int check (int *c*)

Check if material code *c* is present.


Returns

0 if succeeded, 1 if not.

7.69 Matrix< T_ > Class Template Reference

Virtual class to handle matrices for all storage formats.

Inheritance diagram for Matrix< T_ >:

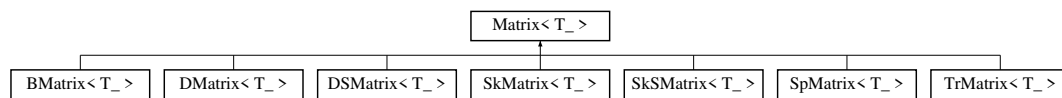

Public Member Functions

- [Matrix](#) ()
Default constructor.
- [Matrix](#) (const [Matrix](#)< T_ > &*m*)
Copy Constructor.
- virtual [~Matrix](#) ()
Destructor.
- size_t [getNbRows](#) () const
Return number of rows.
- size_t [getNbColumns](#) () const
Return number of columns.
- void [setPenal](#) (real_t *p*)
Set Penalty Parameter (For boundary condition prescription).
- void [setDiagonal](#) ()
Set the matrix as diagonal.
- T_ [getDiag](#) (size_t *k*) const
Return k-th diagonal entry of matrix.
- size_t [size](#) () const

- Return matrix dimension (Number of rows and columns).*

 - virtual void **MultAdd** (const **Vect**< T_ > &x, **Vect**< T_ > &y) const =0

Multiply matrix by vector x and add to y
- virtual void **MultAdd** (T_ a, const **Vect**< T_ > &x, **Vect**< T_ > &y) const =0

*Multiply matrix by vector a*x and add to y*
- virtual void **Mult** (const **Vect**< T_ > &x, **Vect**< T_ > &y) const =0

Multiply matrix by vector x and save in y
- virtual void **TMult** (const **Vect**< T_ > &v, **Vect**< T_ > &w) const =0

Multiply transpose of matrix by vector x and save in y
- virtual void **Axpy** (T_ a, const **Matrix**< T_ > *x)=0

Add to matrix the product of a matrix by a scalar.
- void **setDiagonal** (**Mesh** &mesh)

Initialize matrix storage in the case where only diagonal terms are stored.
- void **Assembly** (const **Element** &el, T_ *a)

Assembly of element matrix into global matrix.
- void **Assembly** (const **Element** &el, const **DMatrix**< T_ > &a)

Assembly of element matrix into global matrix.
- void **Assembly** (const **Side** &sd, T_ *a)

Assembly of side matrix into global matrix.
- void **Assembly** (const **Side** &sd, const **DMatrix**< T_ > &a)

Assembly of side matrix into global matrix.
- void **Prescribe** (**Vect**< T_ > &b, const **Vect**< T_ > &u, int flag=0)

*Impose by a penalty method an essential boundary condition, using the **Mesh** instance provided by the constructor.*
- void **Prescribe** (int dof, int code, **Vect**< T_ > &b, const **Vect**< T_ > &u, int flag=0)

Impose by a penalty method an essential boundary condition to a given degree of freedom for a given code.
- void **Prescribe** (**Vect**< T_ > &b, int flag=0)

Impose by a penalty method a homogeneous (=0) essential boundary condition.
- void **Prescribe** (size_t dof, **Vect**< T_ > &b, const **Vect**< T_ > &u, int flag=0)

Impose by a penalty method an essential boundary condition when only one DOF is treated.
- void **PrescribeSide** ()

Impose by a penalty method an essential boundary condition when DOFs are supported by sides.
- virtual void **add** (size_t i, size_t j, const T_ &val)=0

Add val to entry (i, j).
- virtual int **Factor** ()=0

Factorize matrix. Available only if the storage class enables it.
- virtual int **solve** (**Vect**< T_ > &b, **Vect**< T_ > &x)

Solve the linear system by a direct method.
- int **solve** (const **Vect**< T_ > &b, **Vect**< T_ > &x)

Solve system with factorized matrix (forward and back substitution).
- int **FactorAndSolve** (**Vect**< T_ > &b)

Factorize matrix and solve the linear system.
- int **FactorAndSolve** (const **Vect**< T_ > &b, **Vect**< T_ > &x)

Factorize matrix and solve the linear system.
- size_t **getLength** () const

Return number of stored terms in matrix.
- int **isDiagonal** () const

- *Say if matrix is diagonal or not.*
int **isFactorized** () const
- *Say if matrix is factorized or not.*
virtual size_t **getColInd** (size_t i) const
Return Column index for column i (See the description for class [SpMatrix](#)).
- virtual size_t **getRowPtr** (size_t i) const
Return Row pointer for row i (See the description for class [SpMatrix](#)).
- virtual void **set** (size_t i, size_t j, const T_ &val)=0
Assign a value to an entry of the matrix.
- virtual T_ & **operator**() (size_t i, size_t j)=0
Operator () (Non constant version).
- virtual T_ **operator**() (size_t i, size_t j) const =0
Operator () (Non constant version).
- T_ **operator**() (size_t i) const
Operator () with one argument (Constant version).
- T_ & **operator**() (size_t i)
Operator () with one argument (Non Constant version).
- T_ & **operator**[] (size_t k)
Operator [] (Non constant version).
- T_ **operator**[] (size_t k) const
Operator [] (Constant version).
- **Matrix** & **operator=** (**Matrix**< T_ > &m)
Operator =.
- **Matrix** & **operator+=** (const **Matrix**< T_ > &m)
Operator +=.
- **Matrix** & **operator-=** (const **Matrix**< T_ > &m)
Operator -=.
- **Matrix** & **operator=** (const T_ &x)
Operator =.
- **Matrix** & **operator*=** (const T_ &x)
*Operator *=.*
- **Matrix** & **operator+=** (const T_ &x)
Operator +=.
- **Matrix** & **operator-=** (const T_ &x)
Operator -=.
- virtual T_ **get** (size_t i, size_t j) const =0
Return entry (i, j) of matrix if this one is stored, 0 else.

7.69.1 Detailed Description

```
template<class T_>
class OFELI::Matrix< T_ >
```

Virtual class to handle matrices for all storage formats.

Template Parameters

$\langle T_ \leftarrow$ ->	Data type (real_t, float, complex<real_t>, ...)
-------------------------------	---

7.69.2 Constructor & Destructor Documentation

Matrix ()

Default constructor.

Initializes a zero-size matrix.

7.69.3 Member Function Documentation

T_ getDiag (size_t k) const

Return k-th diagonal entry of matrix.

First entry is given by `getDiag(1)`.

virtual void Axy (T_ a, const Matrix< T_ > * x) [pure virtual]

Add to matrix the product of a matrix by a scalar.

Parameters

in	<i>a</i>	Scalar to premultiply
in	<i>x</i>	Matrix by which a is multiplied. The result is added to current instance

Implemented in [SpMatrix< T_ >](#), [DSMatrix< T_ >](#), [DMatrix< T_ >](#), [SkSMMatrix< T_ >](#), [SkMatrix< T_ >](#), [TrMatrix< T_ >](#), and [BMatrix< T_ >](#).

void setDiagonal (Mesh & mesh)

Initialize matrix storage in the case where only diagonal terms are stored.

This member function is to be used for explicit time integration schemes

void Assembly (const Element & el, T_ * a)

Assembly of element matrix into global matrix.

Case where element matrix is given by a C-array.

Parameters

in	<i>el</i>	Pointer to element instance
in	<i>a</i>	Element matrix as a C-array

void Assembly (const Element & el, const DMatrix< T_ > & a)

Assembly of element matrix into global matrix.

Case where element matrix is given by a [DMatrix](#) instance.

Parameters

in	<i>el</i>	Pointer to element instance
in	<i>a</i>	Element matrix as a DMatrix instance

void Assembly (const Side & *sd*, T_ * *a*)

Assembly of side matrix into global matrix.

Case where side matrix is given by a C-array.

Parameters

in	<i>sd</i>	Pointer to side instance
in	<i>a</i>	Side matrix as a C-array instance

void Assembly (const Side & *sd*, const DMatrix< T_ > & *a*)

Assembly of side matrix into global matrix.

Case where side matrix is given by a [DMatrix](#) instance.

Parameters

in	<i>sd</i>	Pointer to side instance
in	<i>a</i>	Side matrix as a DMatrix instance

void Prescribe (Vect< T_ > & *b*, const Vect< T_ > & *u*, int *flag* = 0)

Impose by a penalty method an essential boundary condition, using the [Mesh](#) instance provided by the constructor.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function `setPenal(..)`.

Parameters

in,out	<i>b</i>	Vect instance that contains right-hand side.
in	<i>u</i>	Vect instance that contains imposed valued at DOFs where they are to be imposed.
in	<i>flag</i>	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).

void Prescribe (int *dof*, int *code*, Vect< T_ > & *b*, const Vect< T_ > & *u*, int *flag* = 0)

Impose by a penalty method an essential boundary condition to a given degree of freedom for a given code.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function `setPenal(..)`.

Parameters

in	<i>dof</i>	Degree of freedom for which a boundary condition is to be enforced
in	<i>code</i>	Code for which a boundary condition is to be enforced
in,out	<i>b</i>	Vect instance that contains right-hand side.
in	<i>u</i>	Vect instance that contains imposed valued at DOFs where they are to be imposed.
in	<i>flag</i>	Parameter to determine whether only the right-hand side is to be modified (<i>dof</i> >0) or both matrix and right-hand side (<i>dof</i> =0, default value).

void Prescribe (Vect< T_ > & b, int flag = 0)

Impose by a penalty method a homegeneous (=0) essential boundary condition.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function **setPenal(..)**.

Parameters

in,out	<i>b</i>	Vect instance that contains right-hand side.
in	<i>flag</i>	Parameter to determine whether only the right-hand side is to be modified (<i>dof</i> >0) or both matrix and right-hand side (<i>dof</i> =0, default value).

void Prescribe (size_t dof, Vect< T_ > & b, const Vect< T_ > & u, int flag = 0)

Impose by a penalty method an essential boundary condition when only one DOF is treated.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. This gunction is to be used if only one DOF per node is treated in the linear system. The penalty parameter is by default equal to 1.e20. It can be modified by member function **setPenal**.

Parameters

in	<i>dof</i>	Label of the concerned degree of freedom (DOF).
in,out	<i>b</i>	Vect instance that contains right-hand side.
in	<i>u</i>	Vect instance that conatins imposed valued at DOFs where they are to be imposed.
in	<i>flag</i>	Parameter to determine whether only the right-hand side is to be modified (<i>dof</i> >0) or both matrix and right-hand side (<i>dof</i> =0, default value).

void PrescribeSide ()

Impose by a penalty method an essential boundary condition when DOFs are supported by sides.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function `setPenal(..)`.

virtual int solve (Vect< T_ > & b) [pure virtual]

Solve the linear system by a direct method.

This is available only if the storage class enables it and if matrix has been primarily factorized (See `isFactorized`).

Implemented in `SpMatrix< T_ >`, `DMatrix< T_ >`, `SkSMatrix< T_ >`, `SkMatrix< T_ >`, `DSMatrix< T_ >`, `BMatrix< T_ >`, and `TrMatrix< T_ >`.

int solve (const Vect< T_ > & b, Vect< T_ > & x)

Solve system with factorized matrix (forward and back substitution).

Parameters

in	<i>b</i>	Vect instance that contains right-hand side
out	<i>x</i>	Vect instance that contains solution

Returns

- - 0 if solution was normally performed
 - *n* if the *n*-th pivot is null
- Solution is performed only is factorization has previously been invoked.

int FactorAndSolve (Vect< T_ > & b)

Factorize matrix and solve the linear system.

This is available only if the storage class enables it.

Parameters

in,out	<i>b</i>	Vect instance that contains right-hand side on input and solution on output
--------	----------	---

int FactorAndSolve (const Vect< T_ > & b, Vect< T_ > & x)

Factorize matrix and solve the linear system.

This is available only if the storage class enables it.

Parameters

in	<i>b</i>	Vect instance that contains right-hand side
out	<i>x</i>	Vect instance that contains solution

Returns

- 0 if solution was normally performed
- *n* if the *n*-th pivot is nul

int isFactorized () const

Say if matrix is factorized or not.

If the matrix was not factorized, the class does not allow solving by a direct solver.

virtual void set (size_t *i*, size_t *j*, const T_ & *val*) [pure virtual]

Assign a value to an entry of the matrix.

Parameters

in	<i>i</i>	Row index
in	<i>j</i>	Column index
in	<i>val</i>	Value to assign

Implemented in [SpMatrix< T_ >](#), [SkSMatrix< T_ >](#), [DMatrix< T_ >](#), [SkMatrix< T_ >](#), [TrMatrix< T_ >](#), [BMatrix< T_ >](#), and [DSMatrix< T_ >](#).

virtual T_ & operator() (size_t *i*, size_t *j*) [pure virtual]

Operator () (Non constant version).

Returns the (*i*, *j*) entry of the matrix.

Parameters

in	<i>i</i>	Row index
in	<i>j</i>	Column index

Implemented in [SpMatrix< T_ >](#), [DMatrix< T_ >](#), [SkSMatrix< T_ >](#), [SkMatrix< T_ >](#), [DSMatrix< T_ >](#), [TrMatrix< T_ >](#), and [BMatrix< T_ >](#).

virtual T_ operator() (size_t *i*, size_t *j*) const [pure virtual]

Operator () (Non constant version).

Returns the (*i*, *j*) entry of the matrix.

Parameters

in	<i>i</i>	Row index
in	<i>j</i>	Column index

Implemented in [SpMatrix< T_ >](#), [DMatrix< T_ >](#), [SkSMatrix< T_ >](#), [SkMatrix< T_ >](#), [DSMatrix< T_ >](#), [TrMatrix< T_ >](#), and [BMatrix< T_ >](#).

T_ operator() (size_t i) const

Operator () with one argument (Constant version).

Returns i-th position in the array storing matrix entries. The first entry is at location 1. Entries are stored row by row.

Parameters

in	<i>i</i>	entry index
----	----------	-------------

T_& operator() (size_t i)

Operator () with one argument (Non Constant version).

Returns i-th position in the array storing matrix entries. The first entry is at location 1. Entries are stored row by row.

Parameters

in	<i>i</i>	entry index
----	----------	-------------

T_& operator[] (size_t k)

Operator [] (Non constant version).

Returns k-th stored element in matrix Index k starts at 0.

T_ operator[] (size_t k) const

Operator [] (Constant version).

Returns k-th stored element in matrix Index k starts at 0.

Matrix& operator= (Matrix< T_ > & m)

Operator =.

Copy matrix m to current matrix instance.

Matrix& operator+= (const Matrix< T_ > & m)

Operator +=.

Add matrix m to current matrix instance.

Matrix& operator-= (const Matrix< T_ > & m)

Operator -=.

Subtract matrix m from current matrix instance.

Matrix& operator= (const T_ & x)

Operator =.

Assign constant value x to all matrix entries.

Matrix& operator*= (const T_ & x)

Operator *.=.

Premultiply matrix entries by constant value x

Matrix& operator+= (const T_ & x)

Operator +=.

Add constant value x to all matrix entries.

Matrix& operator-= (const T_ & x)

Operator -=.

Subtract constant value x from all matrix entries.

7.70 Mesh Class Reference

To store and manipulate finite element meshes.

Public Member Functions

- [Mesh](#) ()
Default constructor (Empty mesh)
- [Mesh](#) (const string &file, bool bc=false, int opt=NODE_DOF, int nb_dof=1)
Constructor using a mesh file.
- [Mesh](#) (real_t L, size_t nb_el, size_t p=1, size_t nb_dof=1)
Constructor for a 1-D mesh. The domain is the interval [0,L].
- [Mesh](#) (const [Grid](#) &g, int opt=QUADRILATERAL)
Constructor for a uniform finite difference grid given by and instance of class [Grid](#).
- [Mesh](#) (const [Grid](#) &g, int shape, int opt)
Constructor of dual mesh for a uniform finite difference grid given by and instance of class [Grid](#).
- [Mesh](#) (real_t xmin, real_t xmax, size_t ne, int c1, int c2, int opt=0)
Constructor for a uniform 1-D finite element mesh.
- [Mesh](#) (real_t xmin, real_t xmax, real_t ymin, real_t ymax, size_t nx, size_t ny, int cx0, int cxN, int cy0, int cyN, int opt=0)
Constructor for a uniform 2-D structured finite element mesh.
- [Mesh](#) (real_t xmin, real_t xmax, real_t ymin, real_t ymax, real_t zmin, real_t zmax, size_t nx, size_t ny, size_t nz, int cx0, int cxN, int cy0, int cyN, int cz0, int czN, int opt)
Constructor for a uniform 3-D structured finite element mesh.
- [Mesh](#) (const [Mesh](#) &m, const [Point](#)< real_t > &x_bl, const [Point](#)< real_t > &x_tr)
Constructor that extracts the mesh of a rectangular region from an initial mesh.
- [Mesh](#) (const [Mesh](#) &mesh, int opt, size_t dof1, size_t dof2, bool bc=false)
Constructor that copies the input mesh and selects given degrees of freedom.
- [Mesh](#) (const [Mesh](#) &ms)
Copy Constructor.
- [~Mesh](#) ()
Destructor.
- void [setDim](#) (size_t dim)
Define space dimension. Normally, between 1 and 3.
- void [setVerbose](#) (int verb)

- Define Verbose Parameter. Controls output details.*

 - void `Add (Node *nd)`
Add a node to mesh.
 - void `Add (Element *el)`
Add an element to mesh.
 - void `Add (Side *sd)`
Add a side to mesh.
 - void `Add (Edge *ed)`
Add an edge to mesh.
 - `Mesh & operator*= (real_t a)`
*Operator *=*
 - void `get (const string &mesh_file)`
Read mesh data in file.
 - void `get (const string &mesh_file, int ff, int nb_dof=1)`
Read mesh data in file with giving its format.
 - void `setDOFSupport (int opt, int nb_nodes=1)`
Define supports of degrees of freedom.
 - void `setNbDOFPerNode (size_t nb_dof=1)`
Define number of degrees of freedom for each node.
 - void `setPointInDomain (Point< real_t > x)`
Define a point in the domain. This function makes sense only if boundary mesh is given without internal mesh (Case of Boundary Elements)
 - void `removeImposedDOF ()`
Eliminate equations corresponding to imposed DOF.
 - size_t `NumberEquations (size_t dof=0)`
Renumber Equations.
 - size_t `NumberEquations (size_t dof, int c)`
Renumber Equations.
 - int `getAllSides (int opt=0)`
Determine all mesh sides.
 - size_t `getNbSideNodes ()` const
Return the number of nodes on each side.
 - size_t `getNbElementNodes ()` const
Return the number of nodes in each element.
 - int `getBoundarySides ()`
Determine all boundary sides.
 - int `createBoundarySideList ()`
Create list of boundary sides.
 - int `getBoundaryNodes ()`
Determine all boundary nodes.
 - int `createInternalSideList ()`
Create list of internal sides (not on the boundary).
 - int `getAllEdges ()`
Determine all edges.
 - void `getNodeNeighborElements ()`
Create node neighboring elements.
 - void `getElementNeighborElements ()`

- Create element neighboring elements.*

 - void **setMaterial** (int code, const string &mname)

Associate material to code of element.
- void **Reorder** (size_t m=GRAPH_MEMORY)

Renumber mesh nodes according to reverse Cuthill Mc Kee algorithm.
- void **Add** (size_t num, real_t *x)

Add a node by giving its label and an array containing its coordinates.
- void **DeleteNode** (size_t label)

Remove a node given by its label.
- void **DeleteElement** (size_t label)

Remove an element given by its label.
- void **DeleteSide** (size_t label)

Remove a side given by its label.
- void **Delete** (Node *nd)

Remove a node given by its pointer.
- void **Delete** (Element *el)

Remove a node given by its pointer.
- void **Delete** (Side *sd)

Remove a side given by its pointer.
- void **Delete** (Edge *ed)

Remove an edge given by its pointer.
- void **RenumberNode** (size_t n1, size_t n2)

Renumber a node.
- void **RenumberElement** (size_t n1, size_t n2)

Renumber an element.
- void **RenumberSide** (size_t n1, size_t n2)

Renumber a side.
- void **RenumberEdge** (size_t n1, size_t n2)

Renumber an edge.
- void **setNodeView** (size_t n1, size_t n2)

Set viewing window for nodes.
- void **setElementView** (size_t n1, size_t n2)

Set viewing window for elements.
- void **setSideView** (size_t n1, size_t n2)

Set viewing window for sides.
- void **setEdgeView** (size_t n1, size_t n2)

Set viewing window for edges.
- void **setList** (const std::vector< Node * > &nl)

Initialize list of mesh nodes using the input vector.
- void **setList** (const std::vector< Element * > &el)

Initialize list of mesh elements using the input vector.
- void **setList** (const std::vector< Side * > &sl)

Initialize list of mesh sides using the input vector.
- void **Rescale** (real_t sx, real_t sy=0., real_t sz=0.)

Rescale mesh by multiplying node coordinates by constants.
- int **getVerbose** () const

- Return Verbose Parameter.*

 - size_t `getDim ()` const
Return space dimension.
 - size_t `getNbNodes ()` const
Return number of nodes.
 - size_t `getNbMarkedNodes ()` const
Return number of marked nodes.
 - size_t `getNbVertices ()` const
Return number of vertices.
 - size_t `getNbDOF ()` const
Return total number of degrees of freedom (DOF)
 - size_t `getNbEq ()` const
Return number of equations.
 - size_t `getNbEq (int i)` const
Return number of equations for the i-th set of degrees of freedom.
 - size_t `getNbElements ()` const
Return number of elements.
 - size_t `getNbSides ()` const
Return number of sides.
 - size_t `getNbEdges ()` const
Return number of sides.
 - size_t `getNbBoundarySides ()` const
Return number of boundary sides.
 - size_t `getNbInternalSides ()` const
Return number of internal sides.
 - size_t `getNbMat ()` const
Return number of materials.
 - void `AddMidNodes (int g=0)`
Add mid-side nodes.
 - Point< real_t > `getMaxCoord ()` const
Return maximum coordinates of nodes.
 - Point< real_t > `getMinCoord ()` const
Return minimum coordinates of nodes.
 - void `set (Node *nd)`
Replace node in the mesh.
 - void `set (Element *el)`
Replace element in the mesh.
 - void `set (Side *sd)`
Choose side in the mesh.
 - bool `NodesAreDOF ()` const
Return information about DOF type.
 - bool `SidesAreDOF ()` const
Return information about DOF type.
 - bool `EdgesAreDOF ()` const
Return information about DOF type.
 - bool `ElementsAreDOF ()` const

- Return information about DOF type.*

 - `int getDOFSupport () const`
Return information on dof support Return an integer according to enumerated values: NODE_DOF, ELEMENT_DOF SIDE_DOF.
- `void put (const string &mesh_file) const`
Write mesh data on file.
- `void save (const string &mesh_file) const`
Write mesh data on file in various formats.
- `bool withImposedDOF () const`
Return true if imposed DOF count in equations, false if not.
- `bool isStructured () const`
Return true is mesh is structured, false if not.
- `size_t getNodeNewLabel (size_t n) const`
Return new label of node of a renumbered node.
- `void getList (vector< Node * > &nl) const`
Fill vector nl with list of pointers to nodes.
- `void getList (vector< Element * > &el) const`
Fill vector el with list of pointers to elements.
- `void getList (vector< Side * > &sl) const`
Fill vector sl with list of pointers to sides.
- `Node * getPtrNode (size_t i) const`
Return pointer to node with label i.
- `Node & getNode (size_t i) const`
Return referenrece to node with label i
- `Element * getPtrElement (size_t i) const`
Return pointer to element with label i
- `Element & getElement (size_t i) const`
Return reference to element with label i
- `Side * getPtrSide (size_t i) const`
Return pointer to side with label i
- `Side & getSide (size_t i) const`
Return reference to side with label i
- `Edge * getPtrEdge (size_t i) const`
Return pointer to edge with label i
- `Edge & getEdge (size_t i) const`
Return reference to edge with label i
- `size_t getNodeLabel (size_t i) const`
Return label of i-th node.
- `size_t getElementLabel (size_t i) const`
Return label of i-th element.
- `size_t getSideLabel (size_t i) const`
Return label of i-th side.
- `size_t getEdgeLabel (size_t i) const`
Return label of i-th edge.
- `void topNode () const`
Reset list of nodes at its top position (Non constant version)
- `void topBoundaryNode () const`

- Reset list of boundary nodes at its top position (Non constant version)*
- void **topMarkedNode** () const
- Reset list of marked nodes at its top position (Non constant version)*
- void **topElement** () const
- Reset list of elements at its top position (Non constant version)*
- void **topSide** () const
- Reset list of sides at its top position (Non constant version)*
- void **topBoundarySide** () const
- Reset list of boundary sides at its top position (Non constant version)*
- void **topInternalSide** () const
- Reset list of intrrenal sides at its top position (Non constant version)*
- void **topEdge** () const
- Reset list of edges at its top position (Non constant version)*
- void **topBoundaryEdge** () const
- Reset list of boundary edges at its top position (Non constant version)*
- **Node** * **getNode** () const
- Return pointer to current node and move to next one (Non constant version)*
- **Node** * **getBoundaryNode** () const
- Return pointer to current boundary node and move to next one (Non constant version)*
- **Node** * **getMarkedNode** () const
- Return pointer to current marked node and move to next one (Non constant version)*
- **Element** * **getElement** () const
- Return pointer to current element and move to next one (Non constant version)*
- **Element** * **getActiveElement** () const
- Return pointer to current element and move to next one (Non constant version)*
- **Side** * **getSide** () const
- Return pointer to current side and move to next one (Non constant version)*
- **Side** * **getBoundarySide** () const
- Return pointer to current boundary side and move to next one (Non constant version)*
- **Side** * **getInternalSide** () const
- Return pointer to current internal side and move to next one (Non constant version)*
- **Edge** * **getEdge** () const
- Return pointer to current edge and move to next one (Non constant version)*
- **Edge** * **getBoundaryEdge** () const
- Return pointer to current boundary edge and move to next one (Non constant version)*
- int **getShape** () const
- Determine shape of elements Return Shape index (see enum ElementShape) if all elements have the same shape, 0 if not.*
- **Element** * **operator()** (size_t i) const
- Operator () : Return pointer to i-th element.*
- **Node** * **operator[]** (size_t i) const
- Operator [] : Return pointer to i-th node.*
- size_t **operator()** (size_t i, size_t n) const
- Operator () : Return pointer to i-th node of n-th element.*
- **Mesh** & **operator=** (**Mesh** &ms)
- Operator = : Assign a **Mesh** instance.*

Friends

- void [Refine](#) ([Mesh](#) &in_mesh, [Mesh](#) &out_mesh)

Refine mesh. Subdivide each triangle into 4 subtriangles. This member function is valid for 2-D triangular meshes only.

7.70.1 Detailed Description

To store and manipulate finite element meshes.

Class [Mesh](#) enables defining as an object a finite element mesh. A finite element mesh is characterized by its nodes, elements and sides. Each of these types of data constitutes a class in the [OFELI](#) library.

The standard procedure to introduce the finite element mesh is to provide an input file containing its data. For this, we have defined our own mesh data file (following the XML syntax). Of course, a developer can write his own function to read his finite element mesh file using the methods in [Mesh](#).

7.70.2 Constructor & Destructor Documentation

Mesh (const string &file, bool bc = false, int opt = NODE_DOF, int nb_dof = 1)

Constructor using a mesh file.

Parameters

in	<i>file</i>	File containing mesh data. The extension of the file yields the file format: The extension .m implies OFELI file format and .msh implies GMSH msh file.
in	<i>bc</i>	Flag to remove (true) or not (false) imposed Degrees of Freedom [default: false]
in	<i>opt</i>	Type of DOF support: To choose among enumerated values NODE_DOF, SIDE_DOF or ELEMENT_DOF. Say if degrees of freedom (unknowns) are supported by nodes, sides or elements.
in	<i>nb_dof</i>	Number of degrees of freedom per node [Default: 1]. This value is meaningful only if other format than OFELI 's one is used. Otherwise, the information is contained in the OFELI file format.

Mesh (real_t L, size_t nb_el, size_t p = 1, size_t nb_dof = 1)

Constructor for a 1-D mesh. The domain is the interval [0,L].

Parameters

in	<i>L</i>	Length of the interval
in	<i>nb_el</i>	Number of elements to generate
in	<i>p</i>	Degree of finite element polynomial (Default = 1)
in	<i>nb_dof</i>	Number of degrees of freedom for each node (Default = 1)

Mesh (const Grid &g, int opt = QUADRILATERAL)

Constructor for a uniform finite difference grid given by and instance of class [Grid](#).

Parameters

in	<i>g</i>	Grid instance
in	<i>opt</i>	Optional value to say which type of elements to generate <ul style="list-style-type: none"> • TRIANGLE: Mesh elements are triangles • QUADRILATERAL: Mesh elements are quadrilaterals [default]

Mesh (const [Grid](#) & *g*, int *shape*, int *opt*)

Constructor of dual mesh for a uniform finite difference grid given by and instance of class [Grid](#).

Parameters

in	<i>g</i>	Grid instance
in	<i>shape</i>	Value to say which type of elements to generate <ul style="list-style-type: none"> • TRIANGLE: Mesh elements are triangles • QUADRILATERAL: Mesh elements are quadrilaterals [default]
in	<i>opt</i>	This argument can take any value. It is here only to distinguish from the other constructor using Grid instance.

Remarks

This constructor is to be used to obtain a dual mesh from a structured grid. It is mainly useful if a cell centered finite volume method is used.

Mesh (real_t *xmin*, real_t *xmax*, size_t *ne*, int *c1*, int *c2*, int *opt* = 0)

Constructor for a uniform 1-D finite element mesh.

The domain is the line (xmin,xmax)

Parameters

in	<i>xmin</i>	Minimal coordinate
in	<i>xmax</i>	Maximal coordinate
in	<i>ne</i>	Number of elements
in	<i>c1</i>	Code for the first node (x=xmin)
in	<i>c2</i>	Code for the last node (x=xmax)
in	<i>opt</i>	Flag to generate elements as well (if not zero) [Default: 0].

Remarks

The option `opt` can be set to 0 if the user intends to use finite differences.

Mesh (real_t xmin, real_t xmax, real_t ymin, real_t ymax, size_t nx, size_t ny, int cx0, int cxN, int cy0, int cyN, int opt = 0)

Constructor for a uniform 2-D structured finite element mesh.

The domain is the rectangle $(x_{min}, x_{max}) \times (y_{min}, y_{max})$

Parameters

in	<i>xmin</i>	Minimal x-coordinate
in	<i>xmax</i>	Maximal x-coordinate
in	<i>ymin</i>	Minimal y-coordinate
in	<i>ymax</i>	Maximal y-coordinate
in	<i>nx</i>	Number of subintervals on the x-axis
in	<i>ny</i>	Number of subintervals on the y-axis
in	<i>cx0</i>	Code for nodes generated on the line $x=x_0$ if >0 , for sides on this line if <0
in	<i>cxN</i>	Code for nodes generated on the line $x=x_N$ if >0 , for sides on this line if <0
in	<i>cy0</i>	Code for nodes generated on the line $y=y_0$ if >0 , for sides on this line if <0
in	<i>cyN</i>	Code for nodes generated on the line $y=y_N$ if >0 , for sides on this line if <0
in	<i>opt</i>	Flag to generate elements as well (if not zero) [Default: 0]. If the flag is not 0, it can take one of the enumerated values: TRIANGLE or QUADRILATERAL, with obvious meaning.

Remarks

The option `opt` can be set to 0 if the user intends to use finite differences.

Mesh (real_t xmin, real_t xmax, real_t ymin, real_t ymax, real_t zmin, real_t zmax, size_t nx, size_t ny, size_t nz, int cx0, int cxN, int cy0, int cyN, int cz0, int czN, int opt)

Constructor for a uniform 3-D structured finite element mesh.

The domain is the parallepiped $(x_{min}, x_{max}) \times (y_{min}, y_{max}) \times (z_{min}, z_{max})$

Parameters

in	<i>xmin</i>	Minimal x-coordinate
in	<i>xmax</i>	Maximal x-coordinate
in	<i>ymin</i>	Minimal y-coordinate
in	<i>ymax</i>	Maximal y-coordinate
in	<i>zmin</i>	Minimal z-coordinate
in	<i>zmax</i>	Maximal z-coordinate
in	<i>nx</i>	Number of subintervals on the x-axis
in	<i>ny</i>	Number of subintervals on the y-axis
in	<i>nz</i>	Number of subintervals on the z-axis
in	<i>cx0</i>	Code for nodes generated on the line $x=x_{min}$ if >0 , for sides on this line if <0

Parameters

in	<i>cxN</i>	Code for nodes generated on the line $x=x_{\max}$ if >0 , for sides on this line if <0
in	<i>cy0</i>	Code for nodes generated on the line $y=y_{\min}$ if >0 , for sides on this line if <0
in	<i>cyN</i>	Code for nodes generated on the line $y=y_{\max}$ if >0 , for sides on this line if <0
in	<i>cz0</i>	Code for nodes generated on the line $z=z_{\min}$ if >0 , for sides on this line if <0
in	<i>czN</i>	Code for nodes generated on the line $z=z_{\max}$ if >0 , for sides on this line if <0
in	<i>opt</i>	Flag to generate elements as well (if not zero) [Default: 0]. If the flag is not 0, it can take one of the enumerated values: HEXAHEDRON or TETRAHEDRON, with obvious meaning.

Remarks

The option *opt* can be set to 0 if the user intends to use finite differences.

Mesh (const Mesh & *m*, const Point< real_t > & *x_bl*, const Point< real_t > & *x_tr*)

Constructor that extracts the mesh of a rectangular region from an initial mesh.

This constructor is useful for zooming purposes for instance.

Parameters

in	<i>m</i>	Initial mesh from which the submesh is extracted
in	$x \leftrightarrow$ <i>_bl</i>	Coordinate of bottom left vertex of the rectangle
in	$x \leftrightarrow$ <i>_tr</i>	Coordinate of top right vertex of the rectangle

Mesh (const Mesh & *mesh*, int *opt*, size_t *dof1*, size_t *dof2*, bool *bc* = *false*)

Constructor that copies the input mesh and selects given degrees of freedom.

This constructor is to be used for coupled problems where each subproblem uses a choice of degrees of freedom.

Parameters

in	<i>mesh</i>	Initial mesh from which the submesh is extracted
in	<i>opt</i>	Type of DOF support: To choose among enumerated values NODE_DOF, SIDE_DOF or ELEMENT_DOF.
in	<i>dof1</i>	Label of first degree of freedom to select to the output mesh
in	<i>dof2</i>	Label of last degree of freedom to select to the output mesh
in	<i>bc</i>	Flag to remove (true) or not (false) imposed Degrees of Freedom [Default: false]

Mesh (const Mesh & *ms*)

Copy Constructor.

Parameters

in	<i>ms</i>	Mesh instance to copy
----	-----------	---------------------------------------

7.70.3 Member Function Documentation

void setDim (size_t *dim*)

Define space dimension. Normally, between 1 and 3.

Parameters

in	<i>dim</i>	Space dimension to set (must be between 1 and 3)
----	------------	--

void setVerbose (int *verb*)

Define Verbose Parameter. Controls output details.

Parameters

in	<i>verb</i>	verbosity parameter (Must be between 0 and 10)
----	-------------	--

void Add (Node * *nd*)

Add a node to mesh.

Parameters

in	<i>nd</i>	Pointer to Node to add
----	-----------	--

void Add (Element * *el*)

Add an element to mesh.

Parameters

in	<i>el</i>	Pointer to Element to add
----	-----------	---

void Add (Side * *sd*)

Add a side to mesh.

Parameters

in	<i>sd</i>	Pointer to Side to add
----	-----------	--

void Add (Edge * *ed*)

Add an edge to mesh.

Parameters

in	<i>ed</i>	Pointer to Edge to add
----	-----------	--

Mesh& operator*= (real_t *a*)

Operator *=

Rescale mesh coordinates by multiplying by a factor

Parameters

in	<i>a</i>	Value to multiply by
----	----------	----------------------

void get (const string & *mesh_file*)

Read mesh data in file.

[Mesh](#) file must be in [OFELI](#) format. See "File Formats" page

Parameters

in	<i>mesh_file</i>	Mesh file name
----	------------------	--------------------------------

void get (const string & *mesh_file*, int *ff*, int *nb_dof* = 1)

Read mesh data in file with giving its format.

File format can be chosen among a variety of choices. See "File Formats" page

Parameters

in	<i>mesh_file</i>	Mesh file name
in	<i>ff</i>	File format: Integer to chose among enumerated values: <code>OFELI_FF</code> , <code>GMSH</code> , <code>MATLAB</code> , <code>EASYMESH</code> , <code>GAMBIT</code> , <code>BAMG</code> , <code>NETGEN</code> , <code>TRIANGLE_FF</code>
in	<i>nb_dof</i>	Number of degrees of freedom per node (Default value: 1)

void setDOFSupport (int *opt*, int *nb_nodes* = 1)

Define supports of degrees of freedom.

Parameters

in	<i>opt</i>	DOF type: <ul style="list-style-type: none"> • <code>NODE_DOF</code>: Degrees of freedom are supported by nodes • <code>SIDE_DOF</code>: Degrees of freedom are supported by sides • <code>EDGE_DOF</code>: Degrees of freedom are supported by edges • <code>ELEMENT_DOF</code>: Degrees of freedom are supported by elements
in	<i>nb_nodes</i>	Number of nodes on sides or elements (default=1). This parameter is useful only if dofs are supported by sides or elements

Note

This member function creates all mesh sides if the option `ELEMENT_DOF` or `SIDE_DOF` is selected. So it not necessary to call [getAllSides\(\)](#) after

void setNbDOFPerNode (size_t nb_dof = 1)

Define number of degrees of freedom for each node.

Parameters

in	<i>nb_dof</i>	Number of degrees of freedom (unknowns) for each mesh node (Default value is 1)
----	---------------	---

Note

This function first declares nodes as unknown supports, sets the number of degrees of freedom and rennumbers equations

void setPointInDomain (Point< real_t > x)

Define a point in the domain. This function makes sense only if boundary mesh is given without internal mesh (Case of Boundary Elements)

Parameters

in	<i>x</i>	Coordinates of point to define
----	----------	--------------------------------

size_t NumberEquations (size_t dof = 0)

Renummer Equations.

Parameters

in	<i>dof</i>	Label of degree of freedom for which numbering is performed. Default value (0) means that all degrees of freedom are taken into account
----	------------	---

size_t NumberEquations (size_t *dof*, int *c*)

Renumber Equations.

Parameters

in	<i>dof</i>	Label of degree of freedom for which numbering is performed.
in	<i>c</i>	code for which degrees of freedom are enforced.

int getAllSides (int *opt* = 0)

Determine all mesh sides.

Returns

Number of all sides.

int getBoundarySides ()

Determine all boundary sides.

Returns

Number of boundary sides.

int createBoundarySideList ()

Create list of boundary sides.

This function is useful to loop over boundary sides without testing Once this one is called, the function [getNbBoundarySides\(\)](#) is available. Moreover, looping over boundary sides is available via the member functions [topBoundarySide\(\)](#) and [getBoundarySide\(\)](#)

Returns

Number of boundary sides.

int getBoundaryNodes ()

Determine all boundary nodes.

Returns

n Number of boundary nodes.

int createInternalSideList ()

Create list of internal sides (not on the boundary).

This function is useful to loop over internal sides without testing Once this one is called, the function [getNbInternalSides\(\)](#) is available. Moreover, looping over internal sides is available via the member functions [topInternalSide\(\)](#) and [getInternalSide\(\)](#)

Returns

n Number of internal sides.

int getAllEdges ()

Determine all edges.

Returns

Number of all edges.

void getNodeNeighborElements ()

Create node neighboring elements.

This function is generally useful when, for a numerical method, one looks for a given node to the list of elements that share this node. Once this function is invoked, one can retrieve the list of neighboring elements of any node ([Node::getNeigEl](#))

void getElementNeighborElements ()

Create element neighboring elements.

This function creates for each element the list of elements that share a side with it. Once this function is invoked, one can retrieve the list of neighboring elements of any element ([Element::getNeighborElement](#))

void setMaterial (int code, const string & mname)

Associate material to code of element.

Parameters

in	<i>code</i>	Element code for which material is assigned
in	<i>mname</i>	Name of material

void Reorder (size_t m = GRAPH_MEMORY)

Renumber mesh nodes according to reverse Cuthill Mc Kee algorithm.

Parameters

in	<i>m</i>	Memory size needed for matrix graph (default value is GRAPH_MEMORY, see OFELI_Config.h)
----	----------	--

void Add (size_t num, real_t * x)

Add a node by giving its label and an array containing its coordinates.

Parameters

in	<i>num</i>	Label of node to add
in	<i>x</i>	C-array of node coordinates

void DeleteNode (size_t *label*)

Remove a node given by its label.

This function does not release the space previously occupied

Parameters

in	<i>label</i>	Label of node to delete
----	--------------	-------------------------

void DeleteElement (size_t *label*)

Remove an element given by its label.

This function does not release the space previously occupied

Parameters

in	<i>label</i>	Label of element to delete
----	--------------	----------------------------

void DeleteSide (size_t *label*)

Remove a side given by its label.

This function does not release the space previously occupied

Parameters

in	<i>label</i>	Label of side to delete
----	--------------	-------------------------

void Delete (Node * *nd*)

Remove a node given by its pointer.

This function does not release the space previously occupied

Parameters

in	<i>nd</i>	Pointer to node to delete
----	-----------	---------------------------

void Delete (Element * *el*)

Remove a node given by its pointer.

This function does not release the space previously occupied

Parameters

in	<i>el</i>	Pointer to element to delete
----	-----------	------------------------------

void Delete (Side * *sd*)

Remove a side given by its pointer.

This function does not release the space previously occupied

Parameters

in	<i>sd</i>	Pointer to side to delete
----	-----------	---------------------------

void Delete (Edge * *ed*)

Remove an edge given by its pointer.

This function does not release the space previously occupied

Parameters

in	<i>ed</i>	Pointer to edge to delete
----	-----------	---------------------------

void RenumberNode (size_t *n1*, size_t *n2*)

Re-number a node.

Parameters

in	<i>n1</i>	Old label
in	<i>n2</i>	New label

void RenumberElement (size_t *n1*, size_t *n2*)

Re-number an element.

Parameters

in	<i>n1</i>	Old label
in	<i>n2</i>	New label

void RenumberSide (size_t *n1*, size_t *n2*)

Re-number a side.

Parameters

in	<i>n1</i>	Old label
in	<i>n2</i>	New label

void RenumberEdge (size_t *n1*, size_t *n2*)

Re-number an edge.

Parameters

in	<i>n1</i>	Old label
in	<i>n2</i>	New label

void setNodeView (size_t *n1*, size_t *n2*)

Set viewing window for nodes.

Parameters

in	<i>n1</i>	First node to view
in	<i>n2</i>	last node to view

void setElementView (size_t *n1*, size_t *n2*)

Set viewing window for elements.

Parameters

in	<i>n1</i>	First element to view
in	<i>n2</i>	last element to view

void setSideView (size_t *n1*, size_t *n2*)

Set viewing window for sides.

Parameters

in	<i>n1</i>	First side to view
in	<i>n2</i>	last side to view

void setEdgeView (size_t *n1*, size_t *n2*)

Set viewing window for edges.

Parameters

in	<i>n1</i>	First edge to view
in	<i>n2</i>	last edge to view

void setList (const std::vector< Node * > &*nl*)

Initialize list of mesh nodes using the input vector.

Parameters

in	<i>nl</i>	vector instance that contains the list of pointers to nodes
----	-----------	---

void setList (const std::vector< Element * > & *el*)

Initialize list of mesh elements using the input vector.

Parameters

in	<i>el</i>	vector instance that contains the list of pointers to elements
----	-----------	--

void setList (const std::vector< Side * > & *sl*)

Initialize list of mesh sides using the input vector.

Parameters

in	<i>sl</i>	vector instance that contains the list of pointers to sides
----	-----------	---

void Rescale (real.t *sx*, real.t *sy* = 0., real.t *sz* = 0.)

Rescale mesh by multiplying node coordinates by constants.

This function can be used e.g. for changing coordinate units

Parameters

in	<i>sx</i>	Factor to multiply by x coordinates
in	<i>sy</i>	Factor to multiply by y coordinates [Default: <i>sx</i>]
in	<i>sz</i>	Factor to multiply by z coordinates [Default: <i>sx</i>]

size.t getNbBoundarySides () const

Return number of boundary sides.

This function is valid if member function **getAllSides** or **getBoundarySides** has been invoked before

size.t getNbInternalSides () const

Return number of internal sides.

This function is valid if member functions **getAllSides** and **createInternalSideList** have been invoked before

void AddMidNodes (int *g* = 0)

Add mid-side nodes.

This is function is valid for triangles only

Parameters

in	<i>g</i>	Option to say of barycentre node is to be added (>0) or not (=0)
----	----------	--

void set (Node * *nd*)

Replace node in the mesh.

If the node label exists already, the existing node pointer will be replaced by the current one. If not, an error message is displayed.

Parameters

in	<i>nd</i>	Pointer to node
----	-----------	-----------------

void set (Element * *el*)

Replace element in the mesh.

If the element label exists already, the existing element pointer will be replaced by the current one. If not, an error message is displayed.

Parameters

in	<i>el</i>	Pointer to element
----	-----------	--------------------

void set (Side * *sd*)

Choose side in the mesh.

If the side label exists already, the existing side pointer will be replaced by the current one. If not, an error message is displayed.

Parameters

in	<i>sd</i>	Pointer to side
----	-----------	-----------------

bool NodesAreDOF () const

Return information about DOF type.

Returns

true if DOF are supported by nodes, false otherwise

bool SidesAreDOF () const

Return information about DOF type.

Returns

true if DOF are supported by sides, false otherwise

bool EdgesAreDOF () const

Return information about DOF type.

Returns

true if DOF are supported by edges, false otherwise

bool ElementsAreDOF () const

Return information about DOF type.

Returns

true if DOF are supported by elements, false otherwise

void put (const string & *mesh_file*) const

Write mesh data on file.

Parameters

in	<i>mesh_file</i>	Mesh file name
----	------------------	----------------

void save (const string & *mesh_file*) const

Write mesh data on file in various formats.

File format depends on the extension in file name

Parameters

in	<i>mesh_file</i>	Mesh file name If the extension is '.m', the output file is an OFELI file If the extension is '.gpl', the output file is a Gnuplot file If the extension is '.msh' or '.geo', the output file is a Gmsh file If the extension is '.vtk', the output file is a VTK file
----	------------------	--

void getList (vector< Node * > & *nl*) const

Fill vector nl with list of pointers to nodes.

Parameters

out	<i>nl</i>	Instance of class vector that contain on output the list
-----	-----------	--

void getList (vector< Element * > & *el*) const

Fill vector el with list of pointers to elements.

Parameters

out	<i>el</i>	Instance of class vector that contain on output the list
-----	-----------	--

void getList (vector< Side * > & *sl*) const

Fill vector *sl* with list of pointers to sides.

Parameters

out	<i>sl</i>	Instance of class vector that contain on output the list
-----	-----------	--

size_t getNodeLabel (size_t *i*) const

Return label of *i*-th node.

Parameters

in	<i>i</i>	Node index
----	----------	----------------------------

size_t getElementLabel (size_t *i*) const

Return label of *i*-th element.

Parameters

in	<i>i</i>	Element index
----	----------	-------------------------------

size_t getSideLabel (size_t *i*) const

Return label of *i*-th side.

Parameters

in	<i>i</i>	Side index
----	----------	----------------------------

size_t getEdgeLabel (size_t *i*) const

Return label of *i*-th edge.

Parameters

in	<i>i</i>	Edge index
----	----------	----------------------------

Element* getActiveElement () const

Return pointer to current element and move to next one (Non constant version)

This function returns pointer to the current element only if this one is active. Otherwise it goes to the next active element (To be used when adaptive meshing is involved)

7.70.4 Friends And Related Function Documentation

void Refine (Mesh & *in_mesh*, Mesh & *out_mesh*) [friend]

Refine mesh. Subdivide each triangle into 4 subtriangles. This member function is valid for 2-D triangular meshes only.

Parameters

in	<i>in_mesh</i>	Input mesh
out	<i>out_mesh</i>	Output mesh

7.71 MeshAdapt Class Reference

To adapt mesh in function of given solution.

Public Member Functions

- [MeshAdapt](#) ()
Default constructor.
- [MeshAdapt](#) (Mesh &ms)
Constructor using initial mesh.
- [MeshAdapt](#) (Domain &dom)
Constructor using a reference to class [Domain](#).
- [~MeshAdapt](#) ()
Destructor.
- [Domain](#) & [getDomain](#) () const
Get reference to [Domain](#) instance.
- [Mesh](#) & [getMesh](#) () const
Get reference to current mesh.
- void [set](#) (Domain &dom)
Set reference to [Domain](#) instance.
- void [set](#) (Mesh &ms)
Set reference to [Mesh](#) instance.
- void [setSolution](#) (const Vect< real.t > &u)
Define label of node.
- void [setJacobi](#) (int n)
Set number of Jacobi iterations for smoothing.
- void [setSmooth](#) (int n)
Set number of smoothing iterations.
- void [setVerbosity](#) (int verb)
Set verbosity parameter.
- void [AbsoluteError](#) ()
Metric is constructed with absolute error.
- void [RelativeError](#) ()
Metric is constructed with relative error.
- void [setError](#) (real.t err)

- *Set error threshold for adaption.*
- void [setHMin](#) (real_t h)
- *Set minimal mesh size.*
- void [setHMax](#) (real_t h)
- *Set maximal mesh size.*
- void [setHMinAnisotropy](#) (real_t h)
- *Set minimal mesh size and set anisotropy.*
- void [setRelaxation](#) (real_t omega)
- *Set relaxation parameter for smoothing.*
- void [setAnisotropic](#) ()
- *Set that adapted mesh construction is anisotropic.*
- void [MaxAnisotropy](#) (real_t a)
- *Set maximum ratio of anisotropy.*
- void [setMaxSubdiv](#) (real_t s)
- *Change the metric such that the maximal subdivision of a background's edge is bounded by the given number (always limited by 10)*
- void [setMaxNbVertices](#) (size_t n)
- *Set maximum number of vertices.*
- void [setRatio](#) (real_t r)
- *Set ratio for a smoothing of the metric.*
- void [setNoScaling](#) ()
- *Do not scale solution before metric computation.*
- void [setNoKeep](#) ()
- *Do not keep old vertices.*
- void [setHessian](#) ()
- *set computation of the Hessian*
- void [setOutputMesh](#) (string file)
- *Create mesh output file.*
- void [setGeoFile](#) (string file)
- *Set Geometry file.*
- void [setGeoError](#) (real_t e)
- *Set error on geometry.*
- void [setBackgroundMesh](#) (string bgm)
- *Set background mesh.*
- void [SplitBoundaryEdges](#) ()
- *Split edges with two vertices on boundary.*
- void [CreateMetricFile](#) (string mf)
- *Create a metric file.*
- void [setMetricFile](#) (string mf)
- *Set Metric file.*
- void [getSolutionMbb](#) (string mbb)
- *Set solution defined on background mesh for metric construction.*
- void [getSolutionMBB](#) (string mBB)
- *Set solution defined on background mesh for metric construction.*
- void [getSolutionbb](#) (string rbb)
- *Read solution defined on the background mesh in bb file.*
- void [getSolutionBB](#) (string rBB)

- *Read solution defined on the background mesh in BB file.*
 • void `getSolution` (`Vect< real_t > &u`, int is=1)
Get the interpolated solution on the new mesh.
- void `getInterpolatedSolutionbb` ()
Write the file of interpolation of the solutions in bb file.
- void `getInterpolatedSolutionBB` ()
Write the file of interpolation of the solutions in BB file.
- void `setTheta` (`real_t` theta)
Set angular limit for a corner (in degrees)
- void `Split` ()
Split triangles into 4 triangles.
- void `saveMbb` (string file, const `Vect< real_t > &u`)
Save a solution in metric file.
- int `run` ()
Run adaptation process.
- int `run` (const `Vect< real_t > &u`)
Run adaptation process using a solution vector.
- int `run` (const `Vect< real_t > &u`, `Vect< real_t > &v`)
Run adaptation process using a solution vector and interpolates solution on the adapted mesh.

7.71.1 Detailed Description

To adapt mesh in function of given solution.

Class `MeshAdapt` enables modifying mesh according to a solution vector defining at nodes. It concerns 2-D triangular meshes only.

Remarks

Class `MeshAdapt` is mainly based on the software 'Bamg' developed by F. Hecht, Universite Pierre et Marie Curie, Paris. We warmly thank him for accepting incorporation of Bamg in the `OFELI` package

7.71.2 Constructor & Destructor Documentation

`MeshAdapt (Mesh & ms)`

Constructor using initial mesh.

Parameters

in	ms	Reference to initial mesh
----	----	---------------------------

`MeshAdapt (Domain & dom)`

Constructor using a reference to class `Domain`.

Parameters

in	dom	Reference to <code>Domain</code> class
----	-----	--

7.71.3 Member Function Documentation

void setRelaxation (real.t *omega*)

Set relaxation parameter for smoothing.

Default value for relaxation parameter is 1.8

void setMaxNbVertices (size.t *n*)

Set maximum number of vertices.

Default value is 500000

void setRatio (real.t *r*)

Set ratio for a smoothing of the metric.

Parameters

in	<i>r</i>	Ratio value.
----	----------	--------------

Note

If *r* is 0 then no smoothing is performed, if *r* lies in [1.1,10] then the smoothing changes the metric such that the largest geometrical progression (speed of mesh size variation in mesh is bounded by *r*) (by default no smoothing)

void setNoScaling ()

Do not scale solution before metric computation.

By default, solution is scaled (between 0 and 1)

void setNoKeep ()

Do not keep old vertices.

By default, old vertices are kept

void getSolutionbb (string *rbb*)

Read solution defined on the background mesh in bb file.

Solution is interpolated on created mesh

void getSolutionBB (string *rBB*)

Read solution defined on the background mesh in BB file.

Solution is interpolated on created mesh

void getSolution (Vect< real.t > & *u*, int *is* = 1)

Get the interpolated solution on the new mesh.

The solution must have been saved on an output bb file

Parameters

out	<i>u</i>	Vector that contains on output the obtained solutions. This vector is resized before being initialized
in	<i>is</i>	[Default: 1]

void setTheta (real_t *theta*)

Set angular limit for a corner (in degrees)

The angle is defined from 2 normals of 2 consecutive edges

void saveMbb (string *file*, const Vect< real_t > &*u*)

Save a solution in metric file.

Parameters

in	<i>file</i>	File name where the metric is stored
in	<i>u</i>	Solution vector to store

int run ()

Run adaptation process.

Returns

Return code:

- = 0: Adaptation has been normally completed
- = 1: An error occurred

int run (const Vect< real_t > &*u*)

Run adaptation process using a solution vector.

Parameters

in	<i>u</i>	Solution vector defined on the input mesh
----	----------	---

Returns

Return code:

- = 0: Adaptation has been normally completed
- = 1: An error occurred

int run (const Vect< real_t > &*u*, Vect< real_t > &*v*)

Run adaptation process using a solution vector and interpolates solution on the adapted mesh.

Parameters

in	<i>u</i>	Solution vector defined on the input mesh
in	<i>v</i>	Solution vector defined on the (adapted) output mesh

Returns


Return code:

- = 0: Adaptation has been normally completed
- = 1: An error occurred

7.72 Muscl Class Reference

Parent class for hyperbolic solvers with Muscl scheme.

Inheritance diagram for Muscl:

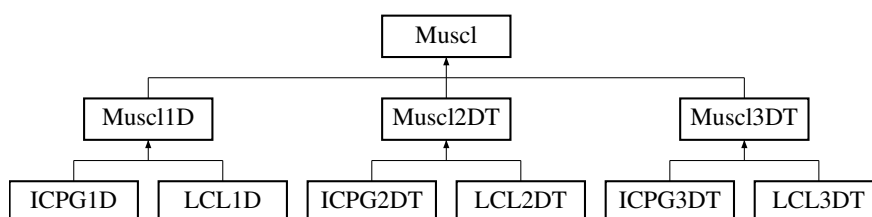

Public Types

Public Member Functions

- **Muscl** (**Mesh** &m)
Constructor using mesh instance.
- virtual **~Muscl** ()
Destructor.
- void **setTimeStep** (**real.t** dt)
Assign time step value.
- **real.t** **getTimeStep** () const
Return time step value.
- void **setCFL** (**real.t** CFL)
Assign CFL value.
- **real.t** **getCFL** () const
Return CFL value.
- void **setReferenceLength** (**real.t** dx)
Assign reference length value.
- **real.t** **getReferenceLength** () const
Return reference length.
- **Mesh** & **getMesh** () const
*Return reference to **Mesh** instance.*
- void **setVerbose** (int v)
Set verbosity parameter.
- bool **setReconstruction** (const **Vect**< **real.t** > &U, **Vect**< **real.t** > &LU, **Vect**< **real.t** > &RU, size_t dof)
*Function to reconstruct by the **Muscl** method.*
- void **setMethod** (const **Method** &s)
Choose a flux solver.

- void `setSolidZoneCode` (int c)
Choose a code for solid zone.
- bool `getSolidZone` () const
Return flag for presence of solid zones.
- int `getSolidZoneCode` () const
Return code of solid zone, 0 if this one is not present.
- void `setLimiter` (Limiter l)
Choose a flux limiter.

7.72.1 Detailed Description

Parent class for hyperbolic solvers with Muscl scheme.

Everything here is common for both 2D and 3D muscl methods ! Virtual functions are implemented in Muscl2D and Muscl3D classes

7.72.2 Member Enumeration Documentation

enum Method

Enumeration for flux choice.

Enumerator

`FIRST_ORDER_METHOD` First Order upwind method

`MULTI_SLOPE_Q_METHOD` Multislope Q method

`MULTI_SLOPE_M_METHOD` Multislope M method

enum Limiter

Enumeration of flux limiting methods.

Enumerator

`MINMOD_LIMITER` MinMod limiter

`VANLEER_LIMITER` Van Leer limiter

`SUPERBEE_LIMITER` Superbee limiter

`VANALBADA_LIMITER` Van Albada limiter

`MAX_LIMITER` Max limiter

enum SolverType

Enumeration of various solvers for the Riemann problem.

Enumerator

`ROE_SOLVER` Roe solver

`VFROE_SOLVER` Finite Volume Roe solver

`LF_SOLVER` LF solver

`RUSANOV_SOLVER` Rusanov solver

`HLL_SOLVER` HLL solver

`HLLC_SOLVER` HLLC solver

`MAX_SOLVER` Max solver

7.72.3 Member Function Documentation

void setTimeStep (real.t *dt*)

Assign time step value.

Parameters

in	<i>dt</i>	Time step value
----	-----------	-----------------

void setCFL (real.t *CFL*)

Assign CFL value.

Parameters

in	<i>CFL</i>	Value of CFL
----	------------	--------------

void setReferenceLength (real.t *dx*)

Assign reference length value.

Parameters

in	<i>dx</i>	Value of reference length
----	-----------	---------------------------

void setVerbose (int *v*)

Set verbosity parameter.

Parameters

in	<i>v</i>	Value of verbosity parameter
----	----------	------------------------------

bool setReconstruction (const Vect< real.t > & *U*, Vect< real.t > & *LU*, Vect< real.t > & *RU*, size.t *dof*)

Function to reconstruct by the [Muscl](#) method.

Parameters

in	<i>U</i>	Field to reconstruct
out	<i>LU</i>	Left gradient vector
out	<i>RU</i>	Right gradient vector
in	<i>dof</i>	Label of dof to reconstruct

void setMethod (const Method & s)

Choose a flux solver.

Parameters

in	s	Solver to choose
----	---	------------------

void setLimiter (Limiter l)

Choose a flux limiter.


Parameters

in	l	Limiter to choose
----	---	-------------------

7.73 Muscl1D Class Reference

Class for 1-D hyperbolic solvers with [Muscl](#) scheme.

Inheritance diagram for Muscl1D:

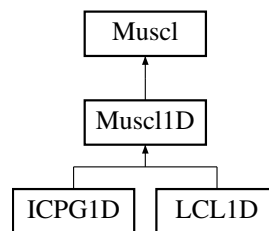

Public Types

Public Member Functions

- [Muscl1D](#) ([Mesh](#) &m)
Constructor using mesh instance.
- [~Muscl1D](#) ()
Destructor.
- [real.t getMeanLength](#) () const
Return mean length.
- [real.t getMaximumLength](#) () const
Return maximal length.
- [real.t getMinimumLength](#) () const
Return mimal length.
- [real.t getTauLim](#) () const
Return mean length.
- void [print_mesh_stat](#) ()
Output mesh information.
- void [setTimeStep](#) ([real.t](#) dt)

- Assign time step value.*

 - `real_t getTimeStep ()` const

Return time step value.
- `void setCFL (real_t CFL)`

Assign CFL value.
- `real_t getCFL ()` const

Return CFL value.
- `void setReferenceLength (real_t dx)`

Assign reference length value.
- `real_t getReferenceLength ()` const

Return reference length.
- `Mesh & getMesh ()` const

Return reference to `Mesh` instance.
- `void setVerbose (int v)`

Set verbosity parameter.
- `bool setReconstruction (const Vect< real_t > &U, Vect< real_t > &LU, Vect< real_t > &RU, size_t dof)`

Function to reconstruct by the `Muscl` method.
- `void setMethod (const Method &s)`

Choose a flux solver.
- `void setSolidZoneCode (int c)`

Choose a code for solid zone.
- `bool getSolidZone ()` const

Return flag for presence of solid zones.
- `int getSolidZoneCode ()` const

Return code of solid zone, 0 if this one is not present.
- `void setLimiter (Limiter l)`

Choose a flux limiter.

7.73.1 Detailed Description

Class for 1-D hyperbolic solvers with `Muscl` scheme.

7.73.2 Member Enumeration Documentation

enum Method [inherited]

Enumeration for flux choice.

Enumerator

`FIRST_ORDER_METHOD` First Order upwind method

`MULTI_SLOPE_Q_METHOD` Multislope Q method

`MULTI_SLOPE_M_METHOD` Multislope M method

enum Limiter [inherited]

Enumeration of flux limiting methods.

Enumerator

MINMOD_LIMITER MinMod limiter
VANLEER_LIMITER Van Leer limiter
SUPERBEE_LIMITER Superbee limiter
VANALBADA_LIMITER Van Albada limiter
MAX_LIMITER Max limiter

enum SolverType [inherited]

Enumeration of various solvers for the Riemann problem.

Enumerator

ROE_SOLVER Roe solver
VFROE_SOLVER Finite Volume Roe solver
LF_SOLVER LF solver
RUSANOV_SOLVER Rusanov solver
HLL_SOLVER HLL solver
HLLC_SOLVER HLLC solver
MAX_SOLVER Max solver

7.73.3 Member Function Documentation**void setTimeStep (real_t dt)** [inherited]

Assign time step value.

Parameters

in	<i>dt</i>	Time step value
----	-----------	-----------------

void setCFL (real_t CFL) [inherited]

Assign CFL value.

Parameters

in	<i>CFL</i>	Value of CFL
----	------------	--------------

void setReferenceLength (real_t dx) [inherited]

Assign reference length value.

Parameters

in	dx	Value of reference length
----	------	---------------------------

void setVerbose (int v) [inherited]

Set verbosity parameter.

Parameters

in	v	Value of verbosity parameter
----	-----	------------------------------

bool setReconstruction (const Vect< real.t > & U , Vect< real.t > & LU , Vect< real.t > & RU , size.t dof) [inherited]

Function to reconstruct by the [Muscl](#) method.

Parameters

in	U	Field to reconstruct
out	LU	Left gradient vector
out	RU	Right gradient vector
in	dof	Label of dof to reconstruct

void setMethod (const Method & s) [inherited]

Choose a flux solver.

Parameters

in	s	Solver to choose
----	-----	------------------

void setLimiter (Limiter l) [inherited]

Choose a flux limiter.


Parameters

in	l	Limiter to choose
----	-----	-------------------

7.74 Muscl2DT Class Reference

Class for 2-D hyperbolic solvers with [Muscl](#) scheme.

Inheritance diagram for Muscl2DT:

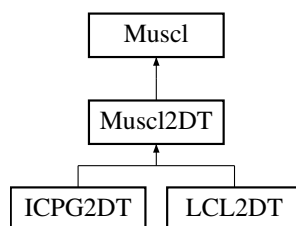

Public Types

Public Member Functions

- **Muscl2DT** (**Mesh** &m)
Constructor using mesh.
- **~Muscl2DT** ()
Destructor.
- **bool setReconstruction** (const **Vect**< **real.t** > &U, **Vect**< **real.t** > &LU, **Vect**< **real.t** > &RU, **size.t** dof)
*Function to reconstruct by the **Muscl** method.*
- **void setTimeStep** (**real.t** dt)
Assign time step value.
- **real.t getTimeStep** () const
Return time step value.
- **void setCFL** (**real.t** CFL)
Assign CFL value.
- **real.t getCFL** () const
Return CFL value.
- **void setReferenceLength** (**real.t** dx)
Assign reference length value.
- **real.t getReferenceLength** () const
Return reference length.
- **Mesh** & **getMesh** () const
*Return reference to **Mesh** instance.*
- **void setVerbose** (**int** v)
Set verbosity parameter.
- **void setMethod** (const **Method** &s)
Choose a flux solver.
- **void setSolidZoneCode** (**int** c)
Choose a code for solid zone.
- **bool getSolidZone** () const
Return flag for presence of solid zones.
- **int getSolidZoneCode** () const
Return code of solid zone, 0 if this one is not present.
- **void setLimiter** (**Limiter** l)
Choose a flux limiter.

Protected Member Functions

- void [Initialize](#) ()
Construction of normals to sides.

7.74.1 Detailed Description

Class for 2-D hyperbolic solvers with [Muscl](#) scheme.

7.74.2 Member Enumeration Documentation

enum Method [inherited]

Enumeration for flux choice.

Enumerator

FIRST_ORDER_METHOD First Order upwind method
MULTI_SLOPE_Q_METHOD Multislope Q method
MULTI_SLOPE_M_METHOD Multislope M method

enum Limiter [inherited]

Enumeration of flux limiting methods.

Enumerator

MINMOD_LIMITER MinMod limiter
VANLEER_LIMITER Van Leer limiter
SUPERBEE_LIMITER Superbee limiter
VANALBADA_LIMITER Van Albada limiter
MAX_LIMITER Max limiter

enum SolverType [inherited]

Enumeration of various solvers for the Riemann problem.

Enumerator

ROE_SOLVER Roe solver
VFROE_SOLVER Finite Volume Roe solver
LF_SOLVER LF solver
RUSANOV_SOLVER Rusanov solver
HLL_SOLVER HLL solver
HLLC_SOLVER HLLC solver
MAX_SOLVER Max solver

7.74.3 Member Function Documentation

bool setReconstruction (const Vect< real.t > & U, Vect< real.t > & LU, Vect< real.t > & RU, size.t dof)

Function to reconstruct by the [Muscl](#) method.

Parameters

in	U	Field to reconstruct
out	LU	Left gradient vector
out	RU	Right gradient vector
in	dof	Label of dof to reconstruct

void Initialize () [protected]

Construction of normals to sides.

Convention: for a given side, `getPtrElement(1)` is the left element and `getPtrElement(2)` is the right element. The normal goes from left to right. For boundary sides, the normal points outward.

void setTimeStep (real.t dt) [inherited]

Assign time step value.

Parameters

in	dt	Time step value
----	------	-----------------

void setCFL (real.t CFL) [inherited]

Assign CFL value.

Parameters

in	CFL	Value of CFL
----	-------	--------------

void setReferenceLength (real.t dx) [inherited]

Assign reference length value.

Parameters

in	dx	Value of reference length
----	------	---------------------------

void setVerbose (int v) [inherited]

Set verbosity parameter.

Parameters

in	v	Value of verbosity parameter
----	-----	------------------------------

void setMethod (const Method & s) [inherited]

Choose a flux solver.

Parameters

in	s	Solver to choose
----	---	------------------

void setLimiter (Limiter l) [inherited]

Choose a flux limiter.


Parameters

in	l	Limiter to choose
----	---	-------------------

7.75 Muscl3DT Class Reference

Class for 3-D hyperbolic solvers with [Muscl](#) scheme using tetrahedra.

Inheritance diagram for Muscl3DT:

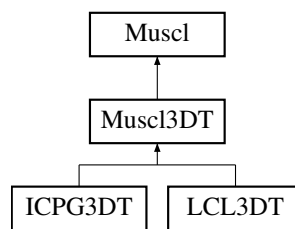

Public Types

Public Member Functions

- [Muscl3DT](#) ([Mesh](#) &m)
Constructor using mesh.
- [~Muscl3DT](#) ()
Destructor.
- bool [setReconstruction](#) (const [Vect](#)< [real_t](#) > &U, [Vect](#)< [real_t](#) > &LU, [Vect](#)< [real_t](#) > &RU, size_t dof)
Function to reconstruct by the [Muscl](#) method.
- [real_t](#) [getMinimumFaceArea](#) () const
Return minimum area of faces in the mesh.
- [real_t](#) [getMinimumElementVolume](#) () const
Return minimum volume of elements in the mesh.
- [real_t](#) [getMaximumFaceArea](#) () const
Return maximum area of faces in the mesh.
- [real_t](#) [getMaximumElementVolume](#) () const
Return maximum volume of elements in the mesh.

- [real_t getMeanFaceArea \(\)](#) const
Return mean area of faces in the mesh.
- [real_t getMeanElementVolume \(\)](#) const
Return mean volume of elements in the mesh.
- [real_t getMinimumEdgeLength \(\)](#) const
Return minimum length of edges in the mesh.
- [real_t getMinimumVolumebyArea \(\)](#) const
Return minimum volume by area in the mesh.
- [real_t getMaximumEdgeLength \(\)](#) const
Return maximum length of edges in the mesh.
- [real_t getTauLim \(\)](#) const
Return value of tau lim.
- [real_t getComega \(\)](#) const
Return value of Comega.
- [void setbetalim \(real_t bl\)](#)
Assign value of beta lim.
- [void setTimeStep \(real_t dt\)](#)
Assign time step value.
- [real_t getTimeStep \(\)](#) const
Return time step value.
- [void setCFL \(real_t CFL\)](#)
Assign CFL value.
- [real_t getCFL \(\)](#) const
Return CFL value.
- [void setReferenceLength \(real_t dx\)](#)
Assign reference length value.
- [real_t getReferenceLength \(\)](#) const
Return reference length.
- [Mesh & getMesh \(\)](#) const
Return reference to [Mesh](#) instance.
- [void setVerbose \(int v\)](#)
Set verbosity parameter.
- [void setMethod \(const \[Method\]\(#\) &s\)](#)
Choose a flux solver.
- [void setSolidZoneCode \(int c\)](#)
Choose a code for solid zone.
- [bool getSolidZone \(\)](#) const
Return flag for presence of solid zones.
- [int getSolidZoneCode \(\)](#) const
Return code of solid zone, 0 if this one is not present.
- [void setLimiter \(\[Limiter\]\(#\) l\)](#)
Choose a flux limiter.

7.75.1 Detailed Description

Class for 3-D hyperbolic solvers with [Muscl](#) scheme using tetrahedra.

7.75.2 Member Enumeration Documentation

enum Method [inherited]

Enumeration for flux choice.

Enumerator

FIRST_ORDER_METHOD First Order upwind method

MULTI_SLOPE_Q_METHOD Multislope Q method

MULTI_SLOPE_M_METHOD Multislope M method

enum Limiter [inherited]

Enumeration of flux limiting methods.

Enumerator

MINMOD_LIMITER MinMod limiter

VANLEER_LIMITER Van Leer limiter

SUPERBEE_LIMITER Superbee limiter

VANALBADA_LIMITER Van Albada limiter

MAX_LIMITER Max limiter

enum SolverType [inherited]

Enumeration of various solvers for the Riemann problem.

Enumerator

ROE_SOLVER Roe solver

VROE_SOLVER Finite Volume Roe solver

LF_SOLVER LF solver

RUSANOV_SOLVER Rusanov solver

HLL_SOLVER HLL solver

HLLC_SOLVER HLLC solver

MAX_SOLVER Max solver

7.75.3 Member Function Documentation

bool setReconstruction (const Vect< real_t > & U, Vect< real_t > & LU, Vect< real_t > & RU, size_t dof)

Function to reconstruct by the [Muscl](#) method.

Parameters

in	<i>U</i>	Field to reconstruct
out	<i>LU</i>	Left gradient vector
out	<i>RU</i>	Right gradient vector
in	<i>dof</i>	Label of dof to reconstruct

void setTimeStep (real_t *dt*) [inherited]

Assign time step value.

Parameters

in	<i>dt</i>	Time step value
----	-----------	-----------------

void setCFL (real_t *CFL*) [inherited]

Assign CFL value.

Parameters

in	<i>CFL</i>	Value of CFL
----	------------	--------------

void setReferenceLength (real_t *dx*) [inherited]

Assign reference length value.

Parameters

in	<i>dx</i>	Value of reference length
----	-----------	---------------------------

void setVerbose (int *v*) [inherited]

Set verbosity parameter.

Parameters

in	<i>v</i>	Value of verbosity parameter
----	----------	------------------------------

void setMethod (const Method & *s*) [inherited]

Choose a flux solver.

Parameters

in	<i>s</i>	Solver to choose
----	----------	------------------

void setLimiter (Limiter *l*) [inherited]

Choose a flux limiter.

Parameters

in	<i>l</i>	Limiter to choose
----	----------	-------------------

7.76 MyOpt Class Reference

Abstract class to define by user specified optimization function.

Public Member Functions

- [MyOpt](#) ()
Default Constructor.
- [MyOpt](#) (const [Mesh](#) &mesh)
Constructor using mesh instance.
- virtual [~MyOpt](#) ()
Destructor.
- virtual [real_t Objective](#) (const [Vect](#)< [real_t](#) > &x)=0
Virtual member function to define objective.
- virtual void [Gradient](#) (const [Vect](#)< [real_t](#) > &x, [Vect](#)< [real_t](#) > &g)
Virtual member function to define gradient vector of objective.

7.76.1 Detailed Description

Abstract class to define by user specified optimization function.

The user has to implement a class that inherits from the present one where the virtual functions are implemented.

7.76.2 Constructor & Destructor Documentation

MyOpt (const [Mesh](#) & *mesh*)

Constructor using mesh instance.

Parameters

<i>mesh</i>	Reference to Mesh instance
-------------	--

7.76.3 Member Function Documentation

virtual [real_t Objective](#) (const [Vect](#)< [real_t](#) > &*x*) [pure virtual]

Virtual member function to define objective.

Parameters

in	<i>x</i>	Vector of optimization variables
-----------	----------	----------------------------------

Returns

Value of objective

virtual void [Gradient](#) (const [Vect](#)< [real_t](#) > &*x*, [Vect](#)< [real_t](#) > &*g*) [virtual]

Virtual member function to define gradient vector of objective.

Parameters

in	x	Vector of optimization variables
out	g	Gradient vector

7.77 Node Class Reference

To describe a node.

Public Member Functions

- `Node ()`
Default constructor.
- `Node (size_t label, const Point< real_t > &x)`
Constructor with label and coordinates.
- `Node (const Node &node)`
Copy Constructor.
- `~Node ()`
Destructor.
- `void setLabel (size_t label)`
Define label of node.
- `void setNbDOF (size_t n)`
Define number of DOF.
- `void setFirstDOF (size_t n)`
Define First DOF.
- `void setCode (size_t dof, int code)`
Define code for a given DOF of node.
- `void setCode (const vector< int > &code)`
Define codes for all node DOFs.
- `void setCode (int *code)`
Define codes for all node DOFs.
- `void setCode (const string &exp, int code, size_t dof=1)`
Define code by a boolean algebraic expression invoking node coordinates.
- `void setCoord (size_t i, real_t x)`
Set i-th coordinate.
- `void DOF (size_t i, size_t dof)`
Define label of DOF.
- `void setDOF (size_t &first_dof, size_t nb_dof)`
Define number of DOF.
- `void setOnBoundary ()`
Set node as boundary node.
- `size_t n () const`
Return label of node.
- `size_t getNbDOF () const`
Return number of degrees of freedom (DOF)
- `int getCode (size_t dof=1) const`

- Return code for a given DOF of node.*
 - `real.t getCoord (size.t i) const`
Return i-th coordinate of node. i = 1..3.
 - `Point< real.t > getCoord () const`
Return coordinates of node.
 - `real.t getX () const`
Return x-coordinate of node.
 - `real.t getY () const`
Return y-coordinate of node.
 - `real.t getZ () const`
Return z-coordinate of node.
 - `Point< real.t > getXYZ () const`
Return coordinates of node.
 - `size.t getDOF (size.t i) const`
Return label of i-th dof.
 - `size.t getNbNeigEl () const`
Return number of neighbor elements.
 - `Element * getNeigEl (size.t i) const`
Return i-th neighbor element.
 - `size.t getFirstDOF () const`
Return label of first DOF of node.
 - `bool isOnBoundary () const`
Say if node is a boundary node.
 - `void Add (Element *el)`
Add element pointed by el as neighbor element to node.
 - `void setLevel (int level)`
Assign a level to current node.
 - `int getLevel () const`
Return node level.

7.77.1 Detailed Description

To describe a node.

A node is characterized by its label, its coordinates, its number of degrees of freedom (DOF) and codes that are associated to each DOF.

Remarks

Once the mesh is constructed, information on neighboring elements of node can be retrieved (see appropriate member functions). However, the member function `getNode←NeighborElements` of `Mesh` must have been called before. If this is not the case, the program crashes down since no preliminary checking is done for efficiency reasons.

7.77.2 Constructor & Destructor Documentation

Node ()

Default constructor.

Initialize data to zero

Node (size.t label, const Point< real.t > & x)

Constructor with label and coordinates.

Parameters

in	<i>label</i>	Label of node
in	<i>x</i>	Node coordinates

7.77.3 Member Function Documentation

void setCode (size.t *dof*, int *code*)

Define code for a given DOF of node.

Parameters

in	<i>dof</i>	DOF index
in	<i>code</i>	Code to assign to DOF

void setCode (const vector< int > &*code*)

Define codes for all node DOFs.

Parameters

in	<i>code</i>	vector instance that contains code for each DOF of current node
----	-------------	---

void setCode (int * *code*)

Define codes for all node DOFs.

Parameters

in	<i>code</i>	C-array that contains code for each DOF of current node
----	-------------	---

void setCode (const string & *exp*, int *code*, size.t *dof* = 1)

Define code by a boolean algebraic expression invoking node coordinates.

Parameters

in	<i>exp</i>	Boolean algebraic expression as required by <code>fparser</code>
in	<i>code</i>	Code to assign to node if the algebraic expression is true
in	<i>dof</i>	Degree of Freedom for which code is assigned [Default: 1]

void setCoord (size.t *i*, real.t *x*)

Set i-th coordinate.

Parameters

in	<i>i</i>	Coordinate index (1..3)
in	<i>x</i>	Coordinate value

void DOF (size_t *i*, size_t *dof*)

Define label of DOF.

Parameters

in	<i>i</i>	DOF index
in	<i>dof</i>	Label of DOF

void setDOF (size_t &*first_dof*, size_t *nb_dof*)

Define number of DOF.

Parameters

in,out	<i>first_dof</i>	Label of the first DOF in input that is actualized
in	<i>nb_dof</i>	Number of DOF

void setOnBoundary ()

Set node as boundary node.

This function is mostly internally used (Especially in class [Mesh](#))

int getCode (size_t *dof* = 1) const

Return code for a given DOF of node.

Parameters

in	<i>dof</i>	label of degree of freedom for which code is to be returned. Default value is 1.
----	------------	--

Point<real_t> getCoord () const

Return coordinates of node.

Return value is an instance of class [Point](#)

Point<real_t> getXYZ () const

Return coordinates of node.

Return value is an instance of class [Point](#)

size_t getNbNeigEl () const

Return number of neighbor elements.

Neighbor elements are those that share node. Note that the returned information is valid only if the [Mesh](#) member function `getNodeNeighborElements()` has been invoked before

Element* getNeigEl (size_t i) const

Return i-th neighbor element.

Note that the returned information is valid only if the [Mesh](#) member function `getNodeNeighborElements()` has been invoked before

bool isOnBoundary () const

Say if node is a boundary node.

Note this information is available only if boundary sides (and nodes) were determined (See class [Mesh](#)).

void setLevel (int level)

Assign a level to current node.

This member function is useful for mesh adaption.
Default node's level is zero

int getLevel () const

Return node level.

[Node](#) level decreases when element is refined (starting from 0). If the level is 0, then the element has no parents

7.78 NodeList Class Reference

Class to construct a list of nodes having some common properties.

Public Member Functions

- [NodeList](#) ([Mesh](#) &ms)
Constructor using a [Mesh](#) instance.
- [~NodeList](#) ()
Destructor.
- void [selectCode](#) (int code, int dof=1)
Select nodes having a given code for a given degree of freedom.
- void [unselectCode](#) (int code, int dof=1)
Unselect nodes having a given code for a given degree of freedom.
- void [selectCoordinate](#) ([real_t](#) x, [real_t](#) y=ANY, [real_t](#) z=ANY)
Select nodes having given coordinates.
- size_t [getNbNodes](#) () const
Return number of selected nodes.
- void [top](#) ()
Reset list of nodes at its top position (Non constant version)
- void [top](#) () const

Reset list of nodes at its top position (Constant version)

- `Node * get ()`

Return pointer to current node and move to next one (Non constant version)

- `Node * get () const`

Return pointer to current node and move to next one (Constant version)

7.78.1 Detailed Description

Class to construct a list of nodes having some common properties.

This class enables choosing multiple selection criteria by using function `select...`. However, the intersection of these properties must be empty.

7.78.2 Member Function Documentation

void selectCode (int code, int dof = 1)

Select nodes having a given code for a given degree of freedom.

Parameters

in	<i>code</i>	Code that nodes share
in	<i>dof</i>	Degree of Freedom label [Default: 1]

void unselectCode (int code, int dof = 1)

Unselect nodes having a given code for a given degree of freedom.

Parameters

in	<i>code</i>	Code of nodes to exclude
in	<i>dof</i>	Degree of Freedom label [Default: 1]

void selectCoordinate (real_t x, real_t y = ANY, real_t z = ANY)

Select nodes having given coordinates.

Parameters


in	<i>x</i>	x-coordinate that share the selected nodes
in	<i>y</i>	y-coordinate that share the selected nodes [Default: ANY]
in	<i>z</i>	z-coordinate that share the selected nodes [Default: ANY]

Coordinates can be assigned the value ANY. This means that any coordinate value is accepted. For instance, to select all nodes with $x=0$, use `selectCoordinate(0.,ANY,ANY)`;

7.79 NSP2DQ41 Class Reference

Builds finite element arrays for incompressible Navier-Stokes equations in 2-D domains using Q_1/P_0 element and a penalty formulation for the incompressibility condition.

Inheritance diagram for NSP2DQ41:

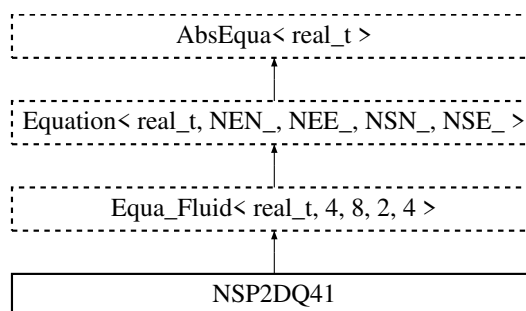

Public Member Functions

- [NSP2DQ41](#) ()
Default Constructor.
- [NSP2DQ41](#) (const [Element](#) *el)
Constructor using [Element](#) data.
- [NSP2DQ41](#) (const [Side](#) *sd)
Constructor using [Side](#) data.
- [NSP2DQ41](#) (const [Element](#) *el, const [Vect](#)< [real_t](#) > &u, const [real_t](#) &time=0.)
Constructor using element and previous time data.
- [NSP2DQ41](#) (const [Side](#) *sd, const [Vect](#)< [real_t](#) > &u, const [real_t](#) &time=0.)
Constructor using side and previous time data.
- [~NSP2DQ41](#) ()
Destructor.
- void [Viscosity](#) ([real_t](#) visc)
Define constant viscosity.
- void [Density](#) ([real_t](#) dens)
Define constant density.
- void [LMass](#) ([real_t](#) coef=1.)
Add element lumped mass contribution to matrix after multiplication by coef [Default: 1].
- void [Mass](#) ([real_t](#) coef=1.)
Add element consistent mass contribution to matrix after multiplication by coef [Default: 1].
- void [Viscous](#) ([real_t](#) coef=1.)
Add element viscous contribution to matrix after multiplication by coef [Default: 1].
- void [RHS_Viscous](#) ([real_t](#) coef=1.)
Add element viscous contribution to right-hand side after multiplication by coef [Default: 1].
- void [Penal](#) ([real_t](#) coef=1.)
Add element penalty contribution to matrix after multiplication by coef [Default: 1].
- void [LHS1_Convection](#) ([real_t](#) coef=1.)
Add convection contribution to left-hand side after multiplication by coef [Default: 1].
- void [LHS2_Convection](#) ([real_t](#) coef=1.)

- Add convection contribution to left-hand side after multiplication by coef [Default: 1].*

 - void [RHS_Convection](#) ([real_t](#) coef=1.)
- Add convection contribution to right-hand side after multiplication by coef [Default: 1].*

 - void [BodyRHS](#) ([UserData](#)< [real_t](#) > &ud)
- Add body right-hand side term to right-hand side.*

 - void [BoundaryRHS](#) ([UserData](#)< [real_t](#) > &ud)
- Add boundary right-hand side term to right-hand side.*

 - void [Periodic](#) ([real_t](#) coef=1.e20)
- Add contribution of periodic boundary condition (by a penalty technique).*

 - [real_t](#) [Pressure](#) ([real_t](#) coef=1.)
- Calculate element pressure by penalization after multiplication by coef [Default: 1].*

 - void [updateBC](#) (const [Element](#) &el, const [Vect](#)< [real_t](#) > &bc)
- Update Right-Hand side by taking into account essential boundary conditions.*

 - void [updateBC](#) (const [Vect](#)< [real_t](#) > &bc)
- Update Right-Hand side by taking into account essential boundary conditions.*

 - void [DiagBC](#) (int dof_type=NODE.DOF, int dof=0)
- Update element matrix to impose bc by diagonalization technique.*

 - void [LocalNodeVector](#) ([Vect](#)< [real_t](#) > &b)
- Localize Element Vector from a Vect instance.*

 - void [ElementNodeVector](#) (const [Vect](#)< [real_t](#) > &b, [LocalVect](#)< [real_t](#), [NEE_](#) > &be)
- Localize Element Vector from a Vect instance.*

 - void [ElementNodeVector](#) (const [Vect](#)< [real_t](#) > &b, [LocalVect](#)< [real_t](#), [NEN_](#) > &be, int dof)
- Localize Element Vector from a Vect instance.*

 - void [ElementNodeVectorSingleDOF](#) (const [Vect](#)< [real_t](#) > &b, [LocalVect](#)< [real_t](#), [NEN_](#) > &be)
- Localize Element Vector from a Vect instance.*

 - void [ElementSideVector](#) (const [Vect](#)< [real_t](#) > &b, [LocalVect](#)< [real_t](#), [NSE_](#) > &be)
- Localize Element Vector from a Vect instance.*

 - void [ElementVector](#) (const [Vect](#)< [real_t](#) > &b, int dof_type=NODE.FIELD, int flag=0)
- Localize Element Vector.*

 - void [SideVector](#) (const [Vect](#)< [real_t](#) > &b)
- Localize Side Vector.*

 - void [ElementNodeCoordinates](#) ()
- Localize coordinates of element nodes.*

 - void [SideNodeCoordinates](#) ()
- Localize coordinates of side nodes.*

 - void [ElementAssembly](#) ([Matrix](#)< [real_t](#) > *A)
- Assemble element matrix into global one.*

 - void [ElementAssembly](#) ([PETScMatrix](#)< [real_t](#) > &A)
- Assemble element matrix into global one.*

 - void [ElementAssembly](#) ([PETScVect](#)< [real_t](#) > &b)
- Assemble element right-hand side vector into global one.*

 - void [ElementAssembly](#) ([BMatrix](#)< [real_t](#) > &A)
- Assemble element matrix into global one.*

 - void [ElementAssembly](#) ([SkSMatrix](#)< [real_t](#) > &A)
- Assemble element matrix into global one.*

 - void [ElementAssembly](#) ([SkMatrix](#)< [real_t](#) > &A)

- Assemble element matrix into global one.*
 - void [ElementAssembly](#) ([SpMatrix](#)< [real_t](#) > &A)
- Assemble element matrix into global one.*
 - void [ElementAssembly](#) ([TrMatrix](#)< [real_t](#) > &A)
- Assemble element matrix into global one.*
 - void [ElementAssembly](#) ([Vect](#)< [real_t](#) > &v)
- Assemble element vector into global one.*
 - void [SideAssembly](#) ([PETScMatrix](#)< [real_t](#) > &A)
- Assemble side matrix into global one.*
 - void [SideAssembly](#) ([PETScVect](#)< [real_t](#) > &b)
- Assemble side right-hand side vector into global one.*
 - void [SideAssembly](#) ([Matrix](#)< [real_t](#) > *A)
- Assemble side (edge or face) matrix into global one.*
 - void [SideAssembly](#) ([SkSMatrix](#)< [real_t](#) > &A)
- Assemble side (edge or face) matrix into global one.*
 - void [SideAssembly](#) ([SkMatrix](#)< [real_t](#) > &A)
- Assemble side (edge or face) matrix into global one.*
 - void [SideAssembly](#) ([SpMatrix](#)< [real_t](#) > &A)
- Assemble side (edge or face) matrix into global one.*
 - void [SideAssembly](#) ([Vect](#)< [real_t](#) > &v)
- Assemble side (edge or face) vector into global one.*
 - void [DGElementAssembly](#) ([Matrix](#)< [real_t](#) > *A)
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
 - void [DGElementAssembly](#) ([SkSMatrix](#)< [real_t](#) > &A)
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
 - void [DGElementAssembly](#) ([SkMatrix](#)< [real_t](#) > &A)
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
 - void [DGElementAssembly](#) ([SpMatrix](#)< [real_t](#) > &A)
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
 - void [DGElementAssembly](#) ([TrMatrix](#)< [real_t](#) > &A)
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
 - void [AxbAssembly](#) (const [Element](#) &el, const [Vect](#)< [real_t](#) > &x, [Vect](#)< [real_t](#) > &b)
- Assemble product of element matrix by element vector into global vector.*
 - void [AxbAssembly](#) (const [Side](#) &sd, const [Vect](#)< [real_t](#) > &x, [Vect](#)< [real_t](#) > &b)
- Assemble product of side matrix by side vector into global vector.*
 - size_t [getNbNodes](#) () const
- Return number of element nodes.*
 - size_t [getNbEq](#) () const
- Return number of element equations.*
 - void [setInitialSolution](#) (const [Vect](#)< [real_t](#) > &u)
- Set initial solution (previous time step)*
 - [real_t](#) [setMaterialProperty](#) (const string &exp, const string &prop)
- Define a material property by an algebraic expression.*
 - void [setMesh](#) ([Mesh](#) &m)
- Define mesh and renumber DOFs after removing imposed ones.*
 - [Mesh](#) & [getMesh](#) () const

Return reference to Mesh instance.

- `LinearSolver< real.t > & getLinearSolver ()`

Return reference to linear solver instance.

- `void setSolver (Iteration ls, Preconditioner pc=IDENT_PREC)`

Choose solver for the linear system.

- `int SolveLinearSystem (Matrix< real.t > *A, Vect< real.t > &b, Vect< real.t > &x)`

Solve the linear system.

Public Attributes

- `LocalMatrix< real.t, NEE_, NEE_ > eMat`

LocalMatrix instance containing local matrix associated to current element.

- `LocalMatrix< real.t, NSE_, NSE_ > sMat`

LocalMatrix instance containing local matrix associated to current side.

- `LocalVect< real.t, NEE_ > ePrev`

LocalVect instance containing local vector associated to current element.

- `LocalVect< real.t, NEE_ > eRHS`

LocalVect instance containing local right-hand side vector associated to current element.

- `LocalVect< real.t, NEE_ > eRes`

LocalVect instance containing local residual vector associated to current element.

- `LocalVect< real.t, NSE_ > sRHS`

LocalVect instance containing local right-hand side vector associated to current side.

Protected Member Functions

- `void Viscosity (const real.t &visc)`

Set (constant) Viscosity.

- `void Viscosity (const string &exp)`

Set viscosity given by an algebraic expression.

- `void Density (const real.t &dens)`

Set (constant) Viscosity.

- `void Density (const string &exp)`

Set Density given by an algebraic expression.

- `void ThermalExpansion (const real.t *e)`

Set (constant) thermal expansion coefficient.

- `void ThermalExpansion (const string &exp)`

Set thermal expansion coefficient given by an algebraic expression.

- `void setMaterial ()`

Set material properties.

- `void Init (const Element *el)`

Set element arrays to zero.

- `void Init (const Side *sd)`

Set side arrays to zero.

7.79.1 Detailed Description

Builds finite element arrays for incompressible Navier-Stokes equations in 2-D domains using Q_1/P_0 element and a penalty formulation for the incompressibility condition.

7.79.2 Constructor & Destructor Documentation

NSP2DQ41 ()

Default Constructor.

Builds an empty equation

NSP2DQ41 (const Element * *el*)

Constructor using [Element](#) data.

Parameters

in	<i>el</i>	Pointer to Element instance
----	-----------	---

NSP2DQ41 (const Side * *sd*)

Constructor using [Side](#) data.

Parameters

in	<i>sd</i>	Pointer to Side instance
----	-----------	--

NSP2DQ41 (const Element * *el*, const Vect< real_t > & *u*, const real_t & *time* = 0.)

Constructor using element and previous time data.

Parameters

in	<i>el</i>	Pointer to Element instance
in	<i>u</i>	Vector that contains velocity at previous time step
in	<i>time</i>	Time value [Default: 0.]

NSP2DQ41 (const Side * *sd*, const Vect< real_t > & *u*, const real_t & *time* = 0.)

Constructor using side and previous time data.

Parameters

in	<i>sd</i>	Pointer to Side instance
in	<i>u</i>	Vector that contains velocity at previous time step
in	<i>time</i>	Time value [Default: 0.]

7.79.3 Member Function Documentation

void LHS1_Convection (real_t *coef* = 1.)

Add convection contribution to left-hand side after multiplication by *coef* [Default: 1].

First term, explicit velocity, implicit velocity derivatives

void LHS2_Convection (*real_t* *coef* = 1.)

Add convection contribution to left-hand side after multiplication by *coef* [Default: 1].
Second term, implicit velocity, explicit velocity derivatives

void BodyRHS (UserData< *real_t* > &*ud*)

Add body right-hand side term to right-hand side.

Parameters

in	<i>ud</i>	UserData instance that defines data
----	-----------	-------------------------------------

void BoundaryRHS (UserData< *real_t* > &*ud*)

Add boundary right-hand side term to right-hand side.

Parameters

in	<i>ud</i>	UserData instance that defines data
----	-----------	-------------------------------------

void Periodic (*real_t* *coef* = 1. *e20*)

Add contribution of periodic boundary condition (by a penalty technique).

Boundary nodes where periodic boundary conditions are to be imposed must have codes equal to PERIODIC.A on one side and PERIODIC.B on the opposite side.

Parameters

in	<i>coef</i>	Value of penalty parameter [Default: 1. <i>e20</i>].
----	-------------	---

void updateBC (const Element &*el*, const Vect< *real_t* > &*bc*) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>el</i>	Reference to current element instance
in	<i>bc</i>	Vector that contains imposed values at all DOFs

void updateBC (const Vect< *real_t* > &*bc*) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>bc</i>	Vector that contains imposed values at all DOFs
----	-----------	---

Remarks

The current element is pointed by `_theElement`

void DiagBC (int *dof_type* = *NODE_DOF*, int *dof* = 0) [inherited]

Update element matrix to impose bc by diagonalization technique.

Parameters

in	<i>dof_type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • <i>NODE_FIELD</i>, DOFs are supported by nodes [Default] • <i>ELEMENT_FIELD</i>, DOFs are supported by elements • <i>SIDE_FIELD</i>, DOFs are supported by sides
in	<i>dof</i>	DOF setting: <ul style="list-style-type: none"> • = 0, All DOFs are taken into account [Default] • != 0, Only DOF No. <i>dof</i> is handled in the system

void LocalNodeVector (Vect< real.t > & *b*) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Reference to global vector to be localized. The resulting local vector can be accessed by attribute <i>ePrev</i> . This member function is to be used if a constructor with <i>Element</i> was invoked.
----	----------	---

void ElementNodeVector (const Vect< real.t > & *b*, LocalVect< real.t, NEE_ > & *be*)
[inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

All degrees of freedom are transferred to the local vector

void ElementNodeVector (const Vect< real_t > & b, LocalVect< real_t, NEN_ > & be, int dof) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.
in	<i>dof</i>	Degree of freedom to transfer to the local vector

Remarks

Only yhe dega dof is transferred to the local vector

void ElementNodeVectorSingleDOF (const Vect< real_t > & b, LocalVect< real_t, NEN_ > & be) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

Vector b is assumed to contain only one degree of freedom by node.

void ElementSideVector (const Vect< real_t > & b, LocalVect< real_t, NSE_ > & be) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is

void ElementVector (const Vect< real_t > & b, int dof_type = NODE_FIELD, int flag = 0) [inherited]

Localize Element Vector.

Parameters

in	<i>b</i>	Global vector to be localized
in	<i>dof_type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • <code>NODE_FIELD</code>, DOFs are supported by nodes [Default] • <code>ELEMENT_FIELD</code>, DOFs are supported by elements • <code>SIDE_FIELD</code>, DOFs are supported by sides
in	<i>flag</i>	Option to set: <ul style="list-style-type: none"> • <code>= 0</code>, All DOFs are taken into account [Default] • <code>!= 0</code>, Only DOF number <code>dof</code> is handled in the system The resulting local vector can be accessed by attribute <code>ePrev</code> .

Remarks

This member function is to be used if a constructor with `Element` was invoked. It uses the `Element` pointer `_theElement`

void SideVector (const Vect< real.t > & b) [inherited]

Localize Side Vector.

Parameters

in	<i>b</i>	Global vector to be localized <ul style="list-style-type: none"> • <code>NODE_FIELD</code>, DOFs are supported by nodes [default] • <code>ELEMENT_FIELD</code>, DOFs are supported by elements • <code>SIDE_FIELD</code>, DOFs are supported by sides The resulting local vector can be accessed by attribute <code>ePrev</code> .
----	----------	---

Remarks

This member function is to be used if a constructor with `Side` was invoked. It uses the `Side` pointer `_theSide`

void ElementNodeCoordinates () [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array `_x[0]`, `_x[1]`, ... which are instances of class [Point<real.t>](#)

Remarks

This member function uses the `Side` pointer `_theSide`

void SideNodeCoordinates () [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array `_x[0]`, `_x[1]`, ... which are instances of class [Point<real_t>](#)

Remarks

This member function uses the Element pointer `_theElement`

void ElementAssembly (Matrix< real_t > * A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScMatrix< real_t > & A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Reference to global matrix
----------	----------------------------

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScVect< real_t > & b) [inherited]

Assemble element right-hand side vector into global one.

Parameters

<i>b</i>	Reference to global right-hand side vector
----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (BMatrix< real_t > & A) [inherited]

Assemble element matrix into global one.

Parameters

A	Global matrix stored as a BMatrix instance
-----	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkSMatrix< real.t > &A) [inherited]

Assemble element matrix into global one.

Parameters

A	Global matrix stored as an SkSMatrix instance
-----	---

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkMatrix< real.t > &A) [inherited]

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an SkMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SpMatrix< real.t > &A) [inherited]

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an SpMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (TrMatrix< real.t > &A) [inherited]

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an TrMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable theElement

void ElementAssembly (Vect< real.t > & v) [inherited]

Assemble element vector into global one.

Parameters

in	v	Global vector (Vect instance)
----	-----	-------------------------------

Warning

The element pointer is given by the global variable theElement

void SideAssembly (PETScMatrix< real.t > & A) [inherited]

Assemble side matrix into global one.

Parameters

A	Reference to global matrix
-----	----------------------------

Warning

The side pointer is given by the global variable theSide

void SideAssembly (PETScVect< real.t > & b) [inherited]

Assemble side right-hand side vector into global one.

Parameters

b	Reference to global right-hand side vector
-----	--

Warning

The side pointer is given by the global variable theSide

void SideAssembly (Matrix< real.t > * A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

<i>A</i>	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
----------	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SkSMatrix< real.t > & *A*) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an SkSMatrix instance
----	----------	---

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SkMatrix< real.t > & *A*) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an SkMatrix instance
----	----------	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SpMatrix< real.t > & *A*) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an SpMatrix instance
----	----------	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (Vect< real.t > & *v*) [inherited]

Assemble side (edge or face) vector into global one.

Parameters

in	v	Global vector (Vect instance)
----	-----	-------------------------------

Warning

The side pointer is given by the global variable `theSide`

void DGElementAssembly (Matrix< real.t > * A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
---	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SkSMatrix< real.t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

A	Global matrix stored as an SkSMatrix instance
---	---

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SkMatrix< real.t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SpMatrix< real.t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	A	Global matrix stored as an SpMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (TrMatrix< real.t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	A	Global matrix stored as an TrMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void AxbAssembly (const Element & el , const Vect< real.t > & x , Vect< real.t > & b)
[inherited]

Assemble product of element matrix by element vector into global vector.

Parameters

in	el	Reference to Element instance
in	x	Global vector to multiply by (Vect instance)
out	b	Global vector to add (Vect instance)

void AxbAssembly (const Side & sd , const Vect< real.t > & x , Vect< real.t > & b)
[inherited]

Assemble product of side matrix by side vector into global vector.

Parameters

in	sd	Reference to Side instance
in	x	Global vector to multiply by (Vect instance)
out	b	Global vector (Vect instance)

real.t setMaterialProperty (const string & exp , const string & $prop$) [inherited]

Define a material property by an algebraic expression.

Parameters

in	<i>exp</i>	Algebraic expression
in	<i>prop</i>	Property name

Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

Mesh& getMesh () const [inherited]

Return reference to Mesh instance.

Returns

Reference to Mesh instance

void setSolver (Iteration *ls*, Preconditioner *pc* = *IDENT_PREC*) [inherited]

Choose solver for the linear system.

Parameters

in	<i>ls</i>	<p>Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER</p> <ul style="list-style-type: none"> • DIRECT_SOLVER, Use a facorization solver [default] • CG_SOLVER, Conjugate Gradient iterative solver • CGS_SOLVER, Squared Conjugate Gradient iterative solver • BICG_SOLVER, BiConjugate Gradient iterative solver • BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver • GMRES_SOLVER, GMRES iterative solver • QMR_SOLVER, QMR iterative solver
in	<i>pc</i>	<p>Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:</p> <ul style="list-style-type: none"> • IDENT_PREC, Identity preconditioner (no preconditioning [default]) • DIAG_PREC, Diagonal preconditioner • ILU_PREC, Incomplete LU factorization preconditioner

int SolveLinearSystem (Matrix< real_t > * A, Vect< real_t > & b, Vect< real_t > & x)
[inherited]

Solve the linear system.

Parameters

in	A	Pointer to matrix of the system (Instance of class SpMatrix)
in	b	Vector containing right-hand side
in,out	x	Vector containing initial guess of solution on input, actual solution on output

7.79.4 Member Data Documentation

LocalVect<real_t,NEE_> ePrev [inherited]

LocalVect instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

7.80 ODESolver Class Reference

To solve a system of ordinary differential equations.

Public Member Functions

- **ODESolver ()**
Default constructor.
- **ODESolver (TimeScheme s, real_t time_step=theTimeStep, real_t final_time=theFinalTime, size_t nb_eq=1)**
Constructor using time discretization data.
- **~ODESolver ()**
Destructor.
- void **set (TimeScheme s, real_t time_step=theTimeStep, real_t final_time=theFinalTime)**
Define data of the differential equation or system.
- void **setNbEq (size_t nb_eq)**
Set the number of equations [Default: 1].
- void **setCoef (real_t a0, real_t a1, real_t a2, real_t f)**
Define coefficients in the case of a scalar differential equation.
- void **setCoef (string a0, string a1, string a2, string f)**
Define coefficients in the case of a scalar differential equation.
- void **setF (string F)**
Set time derivative, given as an algebraic expression, for a nonlinear ODE.
- void **setRK4RHS (real_t f)**
Set intermediate right-hand side vector for the Runge-Kutta method.
- void **setRK4RHS (Vect< real_t > &f)**
Set intermediate right-hand side vector for the Runge-Kutta method.
- void **setInitial (Vect< real_t > &u)**
Set initial condition for a first-order system of differential equations.
- void **setInitial (Vect< real_t > &u, Vect< real_t > &v)**

- Set initial condition for a second-order system of differential equations.*

 - void `setInitialRHS` (`Vect< real.t > &f`)
- Set initial RHS for a system of differential equations.*

 - void `setInitial` (`real.t u`, `real.t v`)
- Set initial condition for a second-order ordinary differential equation.*

 - void `setInitial` (`real.t u`)
- Set initial condition for a first-order ordinary differential equation.*

 - void `setInitialRHS` (`real.t f`)
- Set initial right-hand side for a single differential equation.*

 - void `setMatrices` (`DMatrix< real.t > &A0`, `DMatrix< real.t > &A1`)
- Define matrices for a system of first-order ODEs.*

 - void `setMatrices` (`DMatrix< real.t > &A0`, `DMatrix< real.t > &A1`, `DMatrix< real.t > &A2`)
- Define matrices for a system of second ODEs.*

 - void `setRHS` (`Vect< real.t > &b`)
- Set right-hand side vector for a system of ODE.*

 - void `setRHS` (`real.t f`)
- Set right-hand side for a linear ODE.*

 - void `setRHS` (`string f`)
- Set right-hand side value for a linear ODE.*

 - void `setNewmarkParameters` (`real.t beta`, `real.t gamma`)
- Define parameters for the Newmark scheme.*

 - void `setConstantMatrix` ()
- Say that matrix problem is constant.*

 - void `setNonConstantMatrix` ()
- Say that matrix problem is variable.*

 - void `setLinearSolver` (`Iteration s=DIRECT_SOLVER`, `Preconditioner p=DIAG_PREC`)
- Set linear solver data.*

 - void `setVerbose` (`int v=0`)
- Set verbosity parameter:*

 - `real.t runOneTimeStep` ()
- Run one time step.*

 - void `run` (`bool opt=false`)
- Run the time stepping procedure.*

 - `LinearSolver< real.t > & getLSolver` ()
- Return LinearSolver instance.*

 - `real.t get` () const
- Return solution in the case of a scalar equation.*

7.80.1 Detailed Description

To solve a system of ordinary differential equations.

The class `ODESolver` enables solving by a numerical scheme a system of ordinary differential equations taking one of the forms:

- A linear system of differential equations of the first-order:

$$A_1(t)u'(t) + A_0(t)u(t) = f(t)$$
- A linear system of differential equations of the second-order:

$$A_2(t)u''(t) + A_1(t)u'(t) + A_0(t)u(t) = f(t)$$

- A system of ordinary differential equations of the form:
 $\mathbf{u}'(\mathbf{t}) = \mathbf{f}(\mathbf{t}, \mathbf{u}(\mathbf{t}))$

The following time integration schemes can be used:

- Forward Euler scheme (value: *FORWARD_EULER*) for first-order systems
- Backward Euler scheme (value: *BACKWARD_EULER*) for first-order linear systems
- Crank-Nicolson (value: *CRANK_NICOLSON*) for first-order linear systems
- Heun (value: *HEUN*) for first-order systems
- 2nd Order Adams-Bashforth (value: *AB2*) for first-order systems
- 4-th order Runge-Kutta (value: *RK4*) for first-order systems
- 2nd order Backward Differentiation Formula (value: *BDF2*) for linear first-order systems
- Newmark (value: *NEWMARK*) for linear second-order systems with constant matrices

7.80.2 Constructor & Destructor Documentation

ODESolver (*TimeScheme* *s*, *real.t* *time_step* = *theTimeStep*, *real.t* *final_time* = *theFinalTime*, *size.t* *nb_eq* = 1)

Constructor using time discretization data.

Parameters

in	<i>s</i>	Choice of the scheme: To be chosen in the enumerated variable <i>TimeScheme</i> (see the presentation of the class)
in	<i>time_step</i>	Value of the time step. This value will be modified if an adaptive method is used. The default value for this parameter is the value given by the global variable <i>theTimeStep</i>
in	<i>final_time</i>	Value of the final time (time starts at 0). The default value for this parameter is the value given by the global variable <i>theFinalTime</i>
in	<i>nb_eq</i>	Number of differential equations (size of the system) [Default: 1]

7.80.3 Member Function Documentation

void set (*TimeScheme* *s*, *real.t* *time_step* = *theTimeStep*, *real.t* *final_time* = *theFinalTime*)

Define data of the differential equation or system.

Parameters

in	<i>s</i>	Choice of the scheme: To be chosen in the enumerated variable <i>TimeScheme</i> (see the presentation of the class)
in	<i>time_step</i>	Value of the time step. This value will be modified if an adaptive method is used. The default value for this parameter is the value given by the global variable <i>theTimeStep</i>
in	<i>final_time</i>	Value of the final time (time starts at 0). The default value for this parameter is the value given by the global variable <i>theFinalTime</i>

void setNbEq (size_t nb_eq)

Set the number of equations [Default: 1].

This function is to be used if the default constructor was used

void setCoef (real_t a0, real_t a1, real_t a2, real_t f)

Define coefficients in the case of a scalar differential equation.

This function enables giving coefficients of the differential equation as an algebraic expression of time t (see the function `fparse`)

Parameters

in	$a0$	Coefficient of the 0-th order term
in	$a1$	Coefficient of the 1-st order term
in	$a2$	Coefficient of the 2-nd order term
in	f	Value of the right-hand side

Note

Naturally, the equation is of the first order if $a2=0$

void setCoef (string a0, string a1, string a2, string f)

Define coefficients in the case of a scalar differential equation.

Parameters

in	$a0$	Coefficient of the 0-th order term
in	$a1$	Coefficient of the 1-st order term
in	$a2$	Coefficient of the 2-nd order term
in	f	Value of the right-hand side

Note

Naturally, the equation if of the first order if $a2=0$

void setF (string F)

Set time derivative, given as an algebraic expression, for a nonlinear ODE.

This function enables prescribing the value of the 1-st derivative for a 1st order ODE or the 2nd one for a 2nd-order ODE. It is to be used for nonlinear ODEs of the form $y'(t) = f(t, y(t))$ or $y''(t) = f(t, y(t), y'(t))$

In the case of a system of ODEs, this function can be called once for each equation, given in the order of the unknowns

void setRK4RHS (real_t f)

Set intermediate right-hand side vector for the Runge-Kutta method.

Parameters

in	f	
----	-----	--

void setRK4RHS (Vect< real.t > &f)

Set intermediate right-hand side vector for the Runge-Kutta method.

Parameters

in	f	right-hand side vector
----	-----	------------------------

void setInitial (Vect< real.t > &u)

Set initial condition for a first-order system of differential equations.

Parameters

in	u	Vector containing initial condition for the unknown
----	-----	---

void setInitial (Vect< real.t > &u, Vect< real.t > &v)

Set initial condition for a second-order system of differential equations.

Giving the right-hand side at initial time is sometimes required for high order methods like Runge-Kutta

Parameters

in	u	Vector containing initial condition for the unknown
in	v	Vector containing initial condition for the time derivative of the unknown

void setInitialRHS (Vect< real.t > &f)

Set initial RHS for a system of differential equations.

Giving the right-hand side at initial time is sometimes required for high order methods like Runge-Kutta

Parameters

in	f	Vector containing right-hand side at initial time. This vector is helpful for high order methods
----	-----	--

void setInitial (real.t u, real.t v)

Set initial condition for a second-order ordinary differential equation.

Parameters

in	u	Initial condition (unknown) value
in	v	Initial condition (time derivative of the unknown) value

void setInitial (real_t u)

Set initial condition for a first-order ordinary differential equation.

Parameters

in	u	Initial condition (unknown) value
----	-----	-----------------------------------

void setInitialRHS (real_t f)

Set initial right-hand side for a single differential equation.

Parameters

in	f	Value of right-hand side at initial time. This value is helpful for high order methods
----	-----	--

void setMatrices (DMatrix< real_t > & $A0$, DMatrix< real_t > & $A1$)

Define matrices for a system of first-order ODEs.

Matrices are given as references to class [DMatrix](#).

Parameters

in	$A0$	Reference to matrix in front of the 0-th order term (no time derivative)
in	$A1$	Reference to matrix in front of the 1-st order term (first time derivative)

Remarks

This function has to be called at each time step

void setMatrices (DMatrix< real_t > & $A0$, DMatrix< real_t > & $A1$, DMatrix< real_t > & $A2$)

Define matrices for a system of second ODEs.

Matrices are given as references to class [DMatrix](#).

Parameters

in	$A0$	Reference to matrix in front of the 0-th order term (no time derivative)
in	$A1$	Reference to matrix in front of the 1-st order term (first time derivative)
in	$A2$	Reference to matrix in front of the 2-nd order term (second time derivative)

Remarks

This function has to be called at each time step

void setRHS (Vect< real_t > & b)

Set right-hand side vector for a system of ODE.

Parameters

in	<i>b</i>	Vect instance containing right-hand side for a linear system of ordinary differential equations
----	----------	---

void setRHS (real_t f)

Set right-hand side for a linear ODE.

Parameters

in	<i>f</i>	Value of the right-hand side for a linear ordinary differential equation
----	----------	--

void setNewmarkParameters (real_t beta, real_t gamma)

Define parameters for the Newmark scheme.

Parameters

in	<i>beta</i>	Parameter beta [Default: 0.25]
in	<i>gamma</i>	Parameter gamma [Default: 0.5]

void setConstantMatrix ()

Say that matrix problem is constant.

This is useful if the linear system is solved by a factorization method but has no effect otherwise

void setNonConstantMatrix ()

Say that matrix problem is variable.

This is useful if the linear system is solved by a factorization method but has no effect otherwise

void setLinearSolver (Iteration s = DIRECT_SOLVER, Preconditioner p = DIAG_PREC)

Set linear solver data.

Parameters

in	<i>s</i>	Solver identification parameter. To be chosen in the enumeration variable Iteration: DIRECT.SOLVER, CG.SOLVER, CGS.SOLVER, BICG.SOLVER, BICG.STAB.SOLVER, GMRES.SOLVER, QMR.SOLVER [Default: DIRECT.SOLVER]
in	<i>p</i>	Preconditioner identification parameter. To be chosen in the enumeration variable Preconditioner: IDENT.PREC, DIAG.PREC, ILU.PREC [Default: DIAG.PREC]

Note

The argument *p* has no effect if the solver is DIRECT.SOLVER

void setVerbose (int *v* = 0)

Set verbosity parameter:

- = 0, No output
- = 1, Print step label and time value
- = 2, Print step label, time value, time step and integration scheme

real t runOneTimeStep ()

Run one time step.

Returns

Value of new time step if this one is updated

void run (bool *opt* = false)

Run the time stepping procedure.

Parameters

in	<i>opt</i>	Flag to say if problem matrix is constant while time stepping (true) or not (Default value is false)
----	------------	--

Note

This argument is not used if the time stepping scheme is explicit

7.81 OptSolver Class Reference

To solve an optimization problem with bound constraints.

Public Types

Public Member Functions

- [OptSolver](#) ()
Default constructor.
- [OptSolver](#) ([Vect](#)< [real_t](#) > &x)
Constructor using vector of optimization variables.
- [OptSolver](#) ([MyOpt](#) &opt, [Vect](#)< [real_t](#) > &x)
Constructor using vector of optimization variables.
- [~OptSolver](#) ()
Destructor.
- [int](#) [getNbFctEval](#) () const
Return the total number of function evaluations.
- [void](#) [setOptMethod](#) ([OptMethod](#) m)
Choose optimization method.
- [void](#) [setBC](#) (const [Vect](#)< [real_t](#) > &bc)
Prescribe boundary conditions as constraints.
- [void](#) [setObjective](#) (string exp)
Define the objective function to minimize by an algebraic expression.
- [void](#) [setGradient](#) (string exp, int i=1)
Define a component of the gradient of the objective function to minimize by an algebraic expression.
- [void](#) [setOptClass](#) ([MyOpt](#) &opt)
Choose user defined optimization class.
- [void](#) [setUpperBound](#) ([real_t](#) ub)
Define upper bound for optimization variable.
- [void](#) [setUpperBounds](#) ([Vect](#)< [real_t](#) > &ub)
Define upper bounds for optimization variables.
- [void](#) [setLowerBound](#) ([real_t](#) lb)
Define lower bound for optimization variable.
- [void](#) [setVerbosity](#) (int verb)
Set verbosity parameter.
- [void](#) [setLowerBounds](#) ([Vect](#)< [real_t](#) > &lb)
Define lower bounds for optimization variables.
- [void](#) [setSAOpt](#) ([real_t](#) rt, int ns, int nt, int &neps, int maxevl, [real_t](#) t, [Vect](#)< [real_t](#) > &vm, [Vect](#)< [real_t](#) > &xopt, [real_t](#) &fopt)
Set Simulated annealing options.
- [void](#) [setTolerance](#) ([real_t](#) toler)
Set error tolerance.
- [void](#) [setMaxIterations](#) (int n)

- *Set maximal number of iterations.*
- `int getNbObjEval () const`
Return number of objective function evaluations.
- `real.t getTemperature () const`
Return the final temperature.
- `int getNbAcc () const`
Return the number of accepted objective function evaluations.
- `int getNbOutOfBounds () const`
Return the total number of trial function evaluations that would have been out of bounds.
- `real.t getOptObj () const`
Return Optimal value of the objective.
- `int run ()`
Run the optimization algorithm.
- `int run (real.t toler, int max_it, int verb)`
Run the optimization algorithm.
- `real.t getSolution () const`
Return solution in the case of a one variable optimization.
- `void getSolution (Vect< real.t > &x) const`
Get solution vector.

Friends

- `ostream & operator<< (ostream &s, const OptSolver &os)`
Output class information.

7.81.1 Detailed Description

To solve an optimization problem with bound constraints.

7.81.2 Member Enumeration Documentation

enum OptMethod

Choose optimization algorithm.

Enumerator

GRADIENT Gradient method

TRUNCATED_NEWTON Truncated Newton method

SIMULATED_ANNEALING Simulated annealing global optimization method

NELDER_MEAD Nelder-Mead global optimization method

7.81.3 Constructor & Destructor Documentation

OptSolver (Vect< real.t > &x)

Constructor using vector of optimization variables.

Parameters

in	<i>x</i>	Vector having as size the number of optimization variables. It contains the initial guess for the optimization algorithm.
----	----------	---

Remarks

After using the member function `run`, the vector x contains the obtained solution if the optimization procedure was successful

OptSolver (MyOpt & *opt*, Vect< real_t > & *x*)

Constructor using vector of optimization variables.

Parameters

in	<i>opt</i>	Reference to instance of used defined optimization class. This class inherits from abstract class MyOpt . It must contain the member function <code>double Objective(const Vect<double> &x)</code> which returns the value of the objective for a given solution vector x . The user defined class must contain, if the optimization algorithm requires it the member function <code>Gradient(const Vect<double> &x, Vect<double> &g)</code> which stores the gradient of the objective in the vector g for a given optimization vector x . The user defined class must also contain, if the optimization algorithm requires it the member function
in	<i>x</i>	Vector having as size the number of optimization variables. It contains the initial guess for the optimization algorithm.

Remarks

After using the member function `run`, the vector x contains the obtained solution if the optimization procedure was successful

7.81.4 Member Function Documentation

void setOptMethod (OptMethod *m*)

Choose optimization method.

Parameters

in	<i>m</i>	<p>Enumerated value to choose the optimization algorithm to use. Must be chosen among the enumerated values:</p> <ul style="list-style-type: none"> • GRADIENT: Gradient steepest descent method with projection for bounded constrained problems • TRUNCATED_NEWTON: The Nash's Truncated Newton Algorithm, due to S.G. Nash (Newton-type Minimization via the Lanczos method, SIAM J. Numer. Anal. 21 (1984) 770-778). • SIMULATED_ANNEALING: Global optimization simulated annealing method. See Corana et al.'s article: "Minimizing Multimodal Functions of Continuous Variables with the Simulated Annealing Algorithm" in the September 1987 (vol. 13, no. 3, pp. 262-280) issue of the ACM Transactions on Mathematical Software. • NELDER_MEAD: Global optimization Nelder-Mead method due to John Nelder, Roger Mead (A simplex method for function minimization, Computer Journal, Volume 7, 1965, pages 308-313). As implemented by R. O'Neill (Algorithm AS 47: Function Minimization Using a Simplex Procedure, Applied Statistics, Volume 20, Number 3, 1971, pages 338-345).
----	----------	--

void setBC (const Vect< real_t > & bc)

Prescribe boundary conditions as constraints.

This member function is useful in the case of optimization problems where the optimization variable vector is the solution of a partial differential equation. For this case, Dirichlet boundary conditions can be prescribed as constraints for the optimization problem

Parameters

in	<i>bc</i>	Vector containing the values to impose on degrees of freedom. This vector must have been constructed using the Mesh instance.
----	-----------	---

Remarks

Only degrees of freedom with positive code are taken into account as prescribed

void setObjective (string exp)

Define the objective function to minimize by an algebraic expression.

Parameters

in	<i>exp</i>	Regular expression defining the objective function
----	------------	--

void setGradient (string *exp*, int *i* = 1)

Define a component of the gradient of the objective function to minimize by an algebraic expression.

Parameters

in	<i>exp</i>	Regular expression defining the objective function
in	<i>i</i>	Component of gradient [Default: 1]

void setOptClass (MyOpt & *opt*)

Choose user defined optimization class.

Parameters

in	<i>opt</i>	Reference to inherited user specified optimization class
----	------------	--

void setUpperBound (real_t *ub*)

Define upper bound for optimization variable.
Case of a one-variable problem

Parameters

in	<i>ub</i>	Upper bound
----	-----------	-------------

void setUpperBounds (Vect< real_t > & *ub*)

Define upper bounds for optimization variables.

Parameters

in	<i>ub</i>	Vector containing upper values for variables
----	-----------	--

void setLowerBound (real_t *lb*)

Define lower bound for optimization variable.
Case of a one-variable problem

Parameters

in	<i>lb</i>	Lower value
----	-----------	-------------

void setVerbosity (int *verb*)

Set verbosity parameter.

Parameters

in	<i>verb</i>	Verbosity parameter
----	-------------	---------------------

void setLowerBounds (Vect< real.t > & lb)

Define lower bounds for optimization variables.

Parameters

in	<i>lb</i>	Vector containing lower values for variables
----	-----------	--

void setSAOpt (real.t *rt*, int *ns*, int *nt*, int & *neps*, int *maxevl*, real.t *t*, Vect< real.t > & *vm*, Vect< real.t > & *xopt*, real.t & *fopt*)

Set Simulated annealing options.

Remarks

This member function is useful only if simulated annealing is used.

Parameters

in	<i>rt</i>	The temperature reduction factor. The value suggested by Corana et al. is .85. See Goffe et al. for more advice.
	<i>maxevl</i>	[in] The maximum number of function evaluations. If it is exceeded, the return <i>code</i> =1.
in	<i>ns</i>	Number of cycles. After <i>ns*nb_var</i> function evaluations, each element of <i>vm</i> is adjusted so that approximately half of all function evaluations are accepted. The suggested value is 20.
in	<i>nt</i>	Number of iterations before temperature reduction. After <i>nt*ns*n</i> function evaluations, temperature (t) is changed by the factor <i>rt</i> . Value suggested by Corana et al. is <i>max(100,5*nb_var)</i> . See Goffe et al. for further advice.
in	<i>neps</i>	Number of final function values used to decide upon termination. See <i>eps</i> . Suggested value is 4
in	<i>maxevl</i>	
in	<i>t</i>	The initial temperature. See Goffe et al. for advice.
in	<i>vm</i>	The step length vector. On input it should encompass the region of interest given the starting value <i>x</i> . For point <i>x[i]</i> , the next trial point is selected is from <i>x[i]-vm[i]</i> to <i>x[i]+vm[i]</i> . Since <i>vm</i> is adjusted so that about half of all points are accepted, the input value is not very important (i.e. is the value is off, <i>OptimSA</i> adjusts <i>vm</i> to the correct value).
in	<i>xopt</i>	
in	<i>fopt</i>	

void setTolerance (real_t toler)

Set error tolerance.

Parameters

in	<i>toler</i>	Error tolerance for termination. If the final function values from the last neps temperatures differ from the corresponding value at the current temperature by less than eps and the final function value at the current temperature differs from the current optimal function value by less than toler, execution terminates and the value 0 is returned.
----	--------------	---

real_t getTemperature () const

Return the final temperature.

This function is meaningful only if the Simulated Annealing algorithm is used

int getNbAcc () const

Return the number of accepted objective function evaluations.

This function is meaningful only if the Simulated Annealing algorithm is used

int getNbOutOfBounds () const

Return the total number of trial function evaluations that would have been out of bounds.

This function is meaningful only if the Simulated Annealing algorithm is used

int run ()

Run the optimization algorithm.

This function runs the optimization procedure using default values for parameters. To modify these values, use the function run with arguments

int run (real_t toler, int max_it, int verb)

Run the optimization algorithm.

Parameters

in	<i>toler</i>	Tolerance value for convergence testing
in	<i>max_it</i>	Maximal number of iterations to achieve convergence
in	<i>verb</i>	Verbosity parameter (to choose between 0 and 10)

real_t getSolution () const

Return solution in the case of a one variable optimization.

In the case of a one variable problem, the solution value is returned, if the optimization procedure was successful

void getSolution (Vect< real.t > & x) const

Get solution vector.

The vector x contains the solution of the optimization problem. Note that if the constructor using an initial vector was used, the vector will contain the solution once the member function run has been used (If the optimization procedure was successful)

Parameters

out	x	solution vector
-----	-----	-----------------

7.82 Partition Class Reference

To partition a finite element mesh into balanced submeshes.

Public Member Functions

- [Partition \(\)](#)
Default constructor.
- [Partition \(Mesh &mesh, size_t n, int verb=0\)](#)
Constructor to partition a mesh into submeshes.
- [Partition \(Mesh &mesh, int n, vector< int > &repart, int verb=0\)](#)
Constructor using already created submeshes.
- [~Partition \(\)](#)
Destructor.
- [size_t getNbSubMeshes \(\) const](#)
Return number of submeshes.
- [size_t getNbNodes \(size_t i\) const](#)
Return number of nodes in given submesh.
- [size_t getNbElements \(size_t i\) const](#)
Return number of elements in given submesh.
- [Mesh * getMesh \(\)](#)
Return the global Mesh instance.
- [Mesh * getMesh \(size_t i\)](#)
Return the submesh of label i
- [size_t getNodeLabelInSubMesh \(size_t sm, size_t label\) const](#)
Return node label in subdomain by giving its label in initial mesh.
- [size_t getElementLabelInSubMesh \(size_t sm, size_t label\) const](#)
Return element label in subdomain by giving its label in initial mesh.
- [size_t getNodeLabelInMesh \(size_t sm, size_t label\) const](#)
Return node label in initial mesh by giving its label in submesh.
- [size_t getElementLabelInMesh \(size_t sm, size_t label\) const](#)
Return element label in initial mesh by giving its label in submesh.
- [size_t getNbInterfaceSides \(size_t sm\) const](#)
Return Number of interface sides for a given sub-mesh.
- [size_t getSubMesh \(size_t sm, size_t i\) const](#)
Return index of submesh that contains the i -th side label in sub-mesh sm

- **Mesh** & **getSubMesh** (size_t i) const
Return reference to submesh.
- size_t **getFirstSideLabel** (size_t sm, size_t i) const
Return i-th side label in a given submesh.
- size_t **getSecondSideLabel** (size_t sm, size_t i) const
Return side label in the neighbouring submesh corresponding to i-th side label in sub-mesh sm
- int **getNbConnectInSubMesh** (int n, int s) const
Get number of connected nodes in a submesh.
- int **getNbConnectOutSubMesh** (int n, int s) const
Get number of connected nodes out of a submesh.
- void **put** (size_t n, string file) const
Save a submesh in file.
- void **setVerbose** (int verb)
Set Message Level.
- void **set** (**Mesh** &mesh, size_t n)
*Set **Mesh** instance.*

Friends

- ostream & **operator<<** (ostream &s, const **Partition** &p)
Output class information.

7.82.1 Detailed Description

To partition a finite element mesh into balanced submeshes.

Class **Partition** enables partitioning a given mesh into a given number of submeshes with a minimal connectivity. **Partition** uses the well known **metis** library that is included in the **OFELI** library. A more detailed description of **metis** can be found in the web site:

http://www.csit.fsu.edu/~burkardt/c_src/metis/metis.html

7.82.2 Constructor & Destructor Documentation

Partition (**Mesh** & mesh, size_t n, int verb = 0)

Constructor to partition a mesh into submeshes.

Parameters

in	mesh	Mesh instance
in	n	Number of submeshes
in	verb	Verbosity parameter [Default: 0]

Partition (**Mesh** & mesh, int n, vector< int > &epart, int verb = 0)

Constructor using already created submeshes.

Parameters

in	mesh	Mesh instance
----	------	----------------------

Parameters

in	<i>n</i>	Number of submeshes
in	<i>epart</i>	Vector containing for each element its submesh label (Running from 0 to n-1)
in	<i>verb</i>	Verbosity parameter [Default: 0]

7.82.3 Member Function Documentation

size_t getNodeLabelInSubMesh (size_t *sm*, size_t *label*) const

Return node label in subdomain by giving its label in initial mesh.

Parameters

in	<i>sm</i>	Label of submesh
in	<i>label</i>	Label of node in initial mesh

size_t getNodeLabelInMesh (size_t *sm*, size_t *label*) const

Return node label in initial mesh by giving its label in submesh.

Parameters

in	<i>sm</i>	Label of submesh
in	<i>label</i>	Node label

size_t getSubMesh (size_t *sm*, size_t *i*) const

Return index of submesh that contains the i-th side label in sub-mesh *sm*

Parameters

in	<i>sm</i>	Submesh index
in	<i>i</i>	Side label

Returns

Index of submesh

Mesh& getSubMesh (size_t *i*) const

Return reference to submesh.

Parameters

in	<i>i</i>	Submesh index
----	----------	---------------

Returns

Reference to corresponding [Mesh](#) instance

size_t getFirstSideLabel (size_t *sm*, size_t *i*) const

Return i-th side label in a given submesh.

Parameters

in	<i>sm</i>	Index of submesh
in	<i>i</i>	Label of side

size_t getSecondSideLabel (size_t *sm*, size_t *i*) const

Return side label in the neighbouring submesh corresponding to i-th side label in sub-mesh *sm*

Parameters

in	<i>sm</i>	Label of submesh
in	<i>i</i>	Side label

int getNbConnectInSubMesh (int *n*, int *s*) const

Get number of connected nodes in a submesh.

Parameters

in	<i>n</i>	Label of node for which connections are counted
in	<i>s</i>	Label of submesh (starting from 0)

int getNbConnectOutSubMesh (int *n*, int *s*) const

Get number of connected nodes out of a submesh.

Parameters

in	<i>n</i>	Label of node for which connections are counted
in	<i>s</i>	Label of submesh (starting from 0)

void put (size_t *n*, string *file*) const

Save a submesh in file.


Parameters

in	<i>n</i>	Label of submesh
in	<i>file</i>	Name of file in which submesh is saved

7.83 Penta6 Class Reference

Defines a 6-node pentahedral finite element using P_1 interpolation in local coordinates $(s.x, s.y)$ and Q_1 isoparametric interpolation in local coordinates $(s.x, s.z)$ and $(s.y, s.z)$.

Inheritance diagram for Penta6:

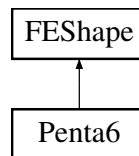

Public Member Functions

- [Penta6](#) ()
Default Constructor.
- [Penta6](#) (const [Element](#) *element)
Constructor when data of [Element](#) el are given.
- [~Penta6](#) ()
Destructor.
- void [set](#) (const [Element](#) *el)
Choose element by giving its pointer.
- void [setLocal](#) (const [Point](#)< [real_t](#) > &s)
Initialize local point coordinates in element.
- [Point](#)< [real_t](#) > [DSh](#) (size_t i) const
Return derivatives of shape function of node i at a given point.
- [real_t](#) [getMaxEdgeLength](#) () const
Return Maximum length of pentahedron edges.
- [real_t](#) [getMinEdgeLength](#) () const
Return Mimimum length of pentahedron edges.
- [real_t](#) [Sh](#) (size_t i) const
Return shape function of node i at given point.
- [real_t](#) [Sh](#) (size_t i, [Point](#)< [real_t](#) > s) const
Calculate shape function of node i at a given point s.
- [real_t](#) [getDet](#) () const
Return determinant of jacobian.
- [Point](#)< [real_t](#) > [getCenter](#) () const
Return coordinates of center of element.
- [Point](#)< [real_t](#) > [getLocalPoint](#) () const
Localize a point in the element.
- [Point](#)< [real_t](#) > [getLocalPoint](#) (const [Point](#)< [real_t](#) > &s) const
Localize a point in the element.

7.83.1 Detailed Description

Defines a 6-node pentahedral finite element using P_1 interpolation in local coordinates $(s.x, s.y)$ and Q_1 isoparametric interpolation in local coordinates $(s.x, s.z)$ and $(s.y, s.z)$.

The reference element is the cartesian product of the standard reference triangle with the line $[-1, 1]$. The nodes are ordered as follows: **Node 1** in reference element is at $s=(1,0,0)$ **Node 2** in reference element is at $s=(0,1,0)$ **Node 3** in reference element is at $s=(0,0,0)$ **Node 4** in reference element is at $s=(1,0,1)$ **Node 5** in reference element is at $s=(0,1,1)$ **Node 6** in reference element is at $s=(0,0,1)$

The user must take care to the fact that determinant of jacobian and other quantities depend on the point in the reference element where they are calculated. For this, before any utilization of shape functions or jacobian, function **setLocal()** must be invoked.

7.83.2 Constructor & Destructor Documentation

Penta6 (const Element * element)

Constructor when data of **Element** e1 are given.

Parameters

in	<i>element</i>	Pointer to Element
----	----------------	---------------------------

7.83.3 Member Function Documentation

void setLocal (const Point< real.t > & s)

Initialize local point coordinates in element.

Parameters

in	<i>s</i>	Point in the reference element This function computes jacobian, shape functions and their partial derivatives at s. Other member functions only return these values.
----	----------	---

Point<real.t> DSh (size.t i) const

Return derivatives of shape function of node i at a given point.

Member function **setLocal()** must have been called before in order to calculate relevant quantities.

real.t Sh (size.t i, Point< real.t > s) const [inherited]

Calculate shape function of node i at a given point s.

Parameters

in	<i>i</i>	Local node label
in	<i>s</i>	Point in the reference triangle where the shape function is evaluated

real_t getDet () const [inherited]

Return determinant of jacobian.

If the transformation (Reference element -> Actual element) is not affine, member function **setLocal()** must have been called before in order to calculate relevant quantities.

Point<real_t> getLocalPoint () const [inherited]

Localize a point in the element.

Return actual coordinates in the reference element. If the transformation (Reference element -> Actual element) is not affine, member function **setLocal()** must have been called before in order to calculate relevant quantities.

Point<real_t> getLocalPoint (const Point< real_t > & s) const [inherited]

Localize a point in the element.

Return actual coordinates where s are coordinates in the reference element.

7.84 PETScMatrix< T_ > Class Template Reference

To handle matrices in sparse storage format using the Petsc library.

Public Member Functions

- [PETScMatrix](#) ()
Default constructor.
- [PETScMatrix](#) (size_t nr, size_t nc)
Constructor that initializes current instance as a dense matrix.
- [PETScMatrix](#) (size_t size)
Constructor that initializes current instance as a dense matrix.
- [PETScMatrix](#) ([Mesh](#) &mesh, size_t dof=0)
Constructor using a [Mesh](#) instance.
- [PETScMatrix](#) (const vector< std::pair< size_t, size_t > > &I, int opt=1)
Constructor for a square matrix using non zero row and column indices.
- [PETScMatrix](#) (const [PETScMatrix](#) &m)
Copy constructor.
- [~PETScMatrix](#) (void)
Destructor.
- void [Identity](#) ()
Define matrix as identity matrix.
- void [Diagonal](#) ()
Define matrix as a diagonal one.
- void [Diagonal](#) (const T_ &a)
Define matrix as a diagonal one with diagonal entries equal to a
- void [setAIJ](#) (const vector< int > &nnz)
- void [setAIJ_MPI](#) (const vector< int > &diag_nnz, const vector< int > &off_nnz)
- void [setMesh](#) ([Mesh](#) &mesh, size_t dof=0)
Determine mesh graph and initialize matrix.
- void [setPartition](#) ([Partition](#) &p)
Set a [Partition](#) instance in the class.

- void **setRank** (int np, int r=0)
Set number of processors and processor rank.
- void **setOneDOF** ()
Activate 1-DOF per node option.
- void **setSides** ()
Activate Sides option.
- void **setSymmetric** ()
Set matrix as a symmetric one.
- void **DiagPrescribe** (PETScVect< T_ > &b, const PETScVect< T_ > &u)
Impose by a diagonal method an essential boundary condition using the [Mesh](#) instance provided by the constructor.
- void **setSize** (size_t size)
Set size of matrix (case where it's a square matrix).
- void **setSize** (size_t nr, size_t nc)
Set size (number of rows) of matrix.
- void **getRange** (int istart, int iend)
Return the range of matrix rows owned by this processor.
- void **setGraph** (const vector< std::pair< size_t, size_t > > &I, int opt=1)
Set graph of matrix by giving a vector of its nonzero entries.
- T_ **operator**() (size_t i, size_t j) const
Operator ()
- size_t **getNbRows** () const
Return number of matrix rows.
- size_t **getNbColumns** () const
Return number of matrix columns.
- size_t **getLength** () const
Return length of matrix.
- void **getMesh** (Mesh &mesh)
Get [Mesh](#) instance whose reference will be stored in current instance of [PETScMatrix](#).
- void **Mult** (const PETScVect< T_ > &x, PETScVect< T_ > &y) const
Multiply matrix by vector and save in another one.
- void **MultAdd** (const PETScVect< T_ > &x, PETScVect< T_ > &y) const
Multiply matrix by vector x and add to y .
- void **MultAdd** (T_ a, const PETScVect< T_ > &x, PETScVect< T_ > &y) const
*Multiply matrix by vector $a*x$ and add to y .*
- void **set** (size_t i, size_t j, const T_ &a)
Assign a value to an entry of the matrix.
- void **add** (size_t i, size_t j, const T_ &a)
Add a value to an entry of the matrix.
- void **set** (vector< int > &ir, vector< int > &ic, vector< T_ > &val)
Assign values to a portion of the matrix.
- void **operator=** (const T_ &a)
Operator =
- void **clear** ()
Set all matrix entries to zero.
- void **Laplace1D** (real_t h, bool mpi=false)
Sets the matrix as the one for the Laplace equation in 1-D.

- void [Laplace2D](#) (size_t nx, size_t ny, bool mpi=false)
Sets the matrix as the one for the Laplace equation in 2-D.
- int [solve](#) (PETScVect< T_ > &b)
Solve the linear system of equations.
- int [solve](#) (const PETScVect< T_ > &b, PETScVect< T_ > &x)
Solve the linear system of equations.
- void [setSolver](#) (string solver, string prec, real_t toler=1.e-12, int max_it=1000)
Choose solver and preconditioner for an iterative procedure.
- T_ * [get](#) () const
Return C-Array.
- T_ [get](#) (size_t i, size_t j) const
Return entry (i, j) of matrix if this one is stored, 0 otherwise.
- operator Mat () const
Casting operator.
- PetscReal [getNorm1](#) () const
Get 1-norm of matrix.
- PetscReal [getFrobeniusNorm](#) () const
Get Frobenius norm of matrix.
- PetscReal [getNormMax](#) () const
Get infinity norm of matrix.
- void [Assembly](#) (const Element &el, T_ *a)
Assembly of element matrix into global matrix.
- void [Assembly](#) (const Side &sd, T_ *a)
Assembly of side matrix into global matrix.
- void [setAssembly](#) ()
Matrix assembly.
- void [setMPI](#) ()
Activate MPI option.

7.84.1 Detailed Description

template<class T_>
class OFELI::PETScMatrix< T_ >

To handle matrices in sparse storage format using the Petsc library.

Warning

This class is available only when [OFELI](#) has been installed with Petsc.

Template Parameters

T_{\leftarrow}	Data type (double, float, complex<double>, ...)
$_{\leftarrow}$	

7.84.2 Constructor & Destructor Documentation

PETScMatrix ()

Default constructor.

Initialize a zero-dimension matrix

PETScMatrix (size_t nr, size_t nc)

Constructor that initializes current instance as a dense matrix.

Normally, for a dense matrix this is not the right class.

Parameters

in	<i>nr</i>	Number of matrix rows.
in	<i>nc</i>	Number of matrix columns.

PETScMatrix (size_t size)

Constructor that initializes current instance as a dense matrix.

Normally, for a dense matrix this is not the right class.

Parameters

in	<i>size</i>	Number of matrix rows (and columns).
----	-------------	--------------------------------------

PETScMatrix (Mesh & mesh, size_t dof = 0)

Constructor using a [Mesh](#) instance.

Parameters

in	<i>mesh</i>	Mesh instance from which matrix graph is extracted.
in	<i>dof</i>	Option parameter, with default value 0. dof=1 means that only one degree of freedom for each node (or element or side) is taken to determine matrix structure. The value dof=0 means that matrix structure is determined using all DOFs.

PETScMatrix (const vector< std::pair< size_t, size_t > > & I, int opt = 1)

Constructor for a square matrix using non zero row and column indices.

Parameters

in	<i>I</i>	Vector containing pairs of row and column indices
in	<i>opt</i>	Flag indicating if vectors I is cleaned and ordered (opt=1) or not (opt=0). In the latter case, this vector can have the same contents more than once and are not necessarily ordered

7.8.4.3 Member Function Documentation

void setAIJ (const vector< int > & *nnz*)

Parameters

in	<i>nnz</i>	
----	------------	--

void setAIJ_MPI (const vector< int > & *diag_nnz*, const vector< int > & *off_nnz*)

Parameters

in	<i>diag_nnz</i>	
in	<i>off_nnz</i>	

void setMesh (Mesh & *mesh*, size_t *dof* = 0)

Determine mesh graph and initialize matrix.

This member function is called by constructor with the same arguments

Parameters

in	<i>mesh</i>	Mesh instance for which matrix graph is determined.
in	<i>dof</i>	Option parameter, with default value 0. dof=1 means that only one degree of freedom for each node (or element or side) is taken to determine matrix structure. The value dof=0 means that matrix structure is determined using all DOFs.

void setPartition (Partition & *p*)

Set a [Partition](#) instance in the class.

This member function is to be used when parallel computing is considered.

Parameters

in	<i>p</i>	Reference to Partition instance
----	----------	---

void setRank (int *np*, int *r* = 0)

Set number of processors and processor rank.

Parameters

in	<i>np</i>	Total number of processors.
in	<i>r</i>	Rank of current processor [Default: 0]

Warning

If this member function is not called, only one processor is used and then sequential computing is involved.

void DiagPrescribe (PETScVect< T_ > & *b*, const PETScVect< T_ > & *u*)

Impose by a diagonal method an essential boundary condition using the [Mesh](#) instance provided by the constructor.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function `setPenal(..)`.

Parameters

in,out	<i>b</i>	PETScVect instance that contains right-hand side.
in	<i>u</i>	PETScVect instance that contains imposed values at DOFs where they are to be imposed.

void setSize (size_t *size*)

Set size of matrix (case where it's a square matrix).

Parameters

in	<i>size</i>	Number of rows and columns.
----	-------------	-----------------------------

void setSize (size_t *nr*, size_t *nc*)

Set size (number of rows) of matrix.

Parameters

in	<i>nr</i>	Number of rows
in	<i>nc</i>	Number of columns

void getRange (int *istart*, int *iend*)

Return the range of matrix rows owned by this processor.

Parameters

out	<i>istart</i>	Index of the first local row
out	<i>iend</i>	Index of the last local row

void setGraph (const vector< std::pair< size_t, size_t > > & I, int opt = 1)

Set graph of matrix by giving a vector of its nonzero entries.

Parameters

in	<i>I</i>	Vector containing pairs of row and column indices
in	<i>opt</i>	Flag indicating if vector I is cleaned and ordered (opt=1: default) or not (opt=0). In the latter case, this vector can have the same contents more than once and are not necessarily ordered

T_ operator() (size_t i, size_t j) const

Operator ()

Parameters

in	<i>i</i>	Row index
in	<i>j</i>	Column index

size_t getLength () const

Return length of matrix.

The length is the total number of stored elements in the matrix

void Mult (const PETScVect< T_ > & x, PETScVect< T_ > & y) const

Multiply matrix by vector and save in another one.

Parameters

in	<i>x</i>	Vector to multiply by matrix
out	<i>y</i>	Vector that contains on output the result.

void MultAdd (const PETScVect< T_ > & x, PETScVect< T_ > & y) const

Multiply matrix by vector x and add to y.

Parameters

in	<i>x</i>	Vector to multiply by matrix
out	<i>y</i>	Vector to add to the result. y contains on output the result.

void MultAdd (T_ a, const PETScVect< T_ > & x, PETScVect< T_ > & y) const

Multiply matrix by vector a*x and add to y.

Parameters

in	<i>a</i>	Constant to multiply by matrix
in	<i>x</i>	Vector to multiply by matrix
out	<i>y</i>	Vector to add to the result. <i>y</i> contains on output the result.

void set (size_t *i*, size_t *j*, const T_ & *a*)

Assign a value to an entry of the matrix.

Parameters

in	<i>i</i>	Row index
in	<i>j</i>	Column index
in	<i>a</i>	Value to assign to <i>a</i> (<i>i</i> , <i>j</i>)

void add (size_t *i*, size_t *j*, const T_ & *a*)

Add a value to an entry of the matrix.

Parameters

in	<i>i</i>	Row index
in	<i>j</i>	Column index
in	<i>a</i>	Constant value to add to <i>a</i> (<i>i</i> , <i>j</i>)

void set (vector< int > & *ir*, vector< int > & *ic*, vector< T_ > & *val*)

Assign values to a portion of the matrix.

Parameters

in	<i>ir</i>	Vector of row indexes to assign (instance of class <code>vector</code>)
in	<i>ic</i>	Vector of column indexes to assign (instance of class <code>vector</code>)
in	<i>val</i>	Vector of values to assign (instance of class <code>vector</code>)

void operator= (const T_ & *a*)

Operator =

Assign constant value *a* to matrix diagonal entries

void Laplace1D (real_t *h*, bool *mpi* = *false*)

Sets the matrix as the one for the Laplace equation in 1-D.

The matrix is initialized as the one resulting from P_1 finite element discretization of the classical elliptic operator $-u'' = f$ with homogeneous Dirichlet boundary conditions

Remarks

This function is available for real valued matrices only.

Parameters

in	<i>h</i>	Mesh size (assumed constant)
in	<i>mpi</i>	true if MPI is used for parallel computing, false if not (sequential), [Default: false]

void Laplace2D (size.t *nx*, size.t *ny*, bool *mpi* = *false*)

Sets the matrix as the one for the Laplace equation in 2-D.

The matrix is initialized as the one resulting from P_1 finite element discretization of the classical elliptic operator $-\Delta u = f$ with homogeneous Dirichlet boundary conditions

Remarks

This function is available for real valued matrices only.

Parameters

in	<i>nx</i>	Number of unknowns in the x-direction
in	<i>ny</i>	Number of unknowns in the y-direction
in	<i>mpi</i>	true if MPI is used for parallel computing, false if not (sequential), [Default: false]

int solve (PETScVect< T_ > & *b*)

Solve the linear system of equations.

The default parameters are: the Conjugate Gradient method and the Jacobi method for preconditioner. To change these values, call function `setSolver` before this function

Parameters

in,out	<i>b</i>	Vector that contains right-hand side on input and solution on output
--------	----------	--

Returns

Number of actual performed iterations

int solve (const PETScVect< T_ > & *b*, PETScVect< T_ > & *x*)

Solve the linear system of equations.

The default parameters are: the Conjugate Gradient method and the Jacobi method for preconditioner. To change these values, call function `setSolver` before this function

Parameters

in	b	Vector that contains right-hand side
out	x	Vector that contains the obtained solution

Returns

Number of actual performed iterations

void setSolver (string *solver*, string *prec*, real_t *toler* = 1.e-12, int *max_it* = 1000)

Choose solver and preconditioner for an iterative procedure.

Parameters

in	<i>solver</i>	<p>Option to choose iterative solver among the macros (see PETSc documentation for more details):</p> <ul style="list-style-type: none"> • KSPRICHARDSON: The Richardson iterative method (Default damping parameter is 1.0) • KSPCHEBYSHEV: The Chebyshev iterative method • KSPCG: The conjugate gradient method [Default] • KSPCGNE: The CG method for normal equations (without explicitly forming the product $A^T A$) • KSPGMRES: The GMRES iterative method (see A Generalized Minimal Residual Algorithm for Solving Nonsymmetric Linear Systems. Y. Saad and M. H. Schultz, SIAM J. Sci. Stat. Comput. Vol. 7, No. 3, July 1986, pp. 856-869) • KSPFGMRES: The Flexible GMRES method (with restart) • KSPLGMRES: The 'augmented' standard GMRES method where the subspace uses approximations to the error from previous restart cycles • KSPTCQMR: A variant of QMR (quasi minimal residual) developed by Tony Chan • KSPBCGS: The BiCGStab (Stabilized version of BiConjugate Gradient Squared) method • KSPIBCGS: The IBiCGStab (Improved Stabilized version of BiConjugate Gradient Squared) method in an alternative form to have only a single global reduction operation instead of the usual 3 (or 4) • KSPFBCGS: The flexible BiCGStab method. • KSPCGS: The CGS (Conjugate Gradient Squared) method • KSPTFQMR: A transpose free QMR (quasi minimal residual) • KSPCR: The conjugate residuals method • KSPLSQR: The LSQR method • KSPBICG: The Biconjugate gradient method (similar to running the conjugate gradient on the normal equations) • KSPMINRES: The MINRES (Minimum Residual) method • KSPSYMLQ: The SYMLQ method • KSPGCR: The Generalized Conjugate Residual method
----	---------------	---

Parameters

in	<i>prec</i>	Option to choose preconditioner in an enumerated variable <ul style="list-style-type: none"> • PCJACOBI: [Default] Jacobi (<i>i.e.</i> diagonal scaling) preconditioning • PCBJACOBI: Block Jacobi preconditioning, each block is (approximately) solved with its own KSP object • PCSOR: (S)SOR (successive over relaxation, Gauss-Seidel) preconditioning • PCEISENSTAT: An implementation of SSOR (symmetric successive over relaxation, symmetric Gauss-Seidel) preconditioning that incorporates Eisenstat's trick to reduce the amount of computation needed • PCICC: Incomplete Cholesky factorization preconditioners • PCILU: Incomplete factorization preconditioners • PCASM: Use the (restricted) additive Schwarz method, each block is (approximately) solved with its own KSP object • PCLU: Uses a direct solver, based on LU factorization, as a preconditioner • PCCHOLESKY: Uses a direct solver, based on Cholesky factorization, as a preconditioner
in	<i>toler</i>	Tolerance for convergence [Default: 1.e-12]
in	<i>max_it</i>	Maximum number of allowed iterations [Default: 1000]

T_* get () const

Return C-Array.

Non zero terms of matrix is stored row by row.

T_ get (size_t i, size_t j) const

Return entry (i, j) of matrix if this one is stored, 0 otherwise.

Parameters

in	<i>i</i>	Row index
in	<i>j</i>	Column index

operator Mat () const

Casting operator.

This member functions enables casting an instance of class [PETScMatrix](#) into the Petsc matrix type Mat. This is useful when one wants to use any Petsc function that is not available in the wrapper (class [PETScWrapper](#)) or [PETScMatrix](#).

void Assembly (const Element & *el*, T_ * *a*)

Assembly of element matrix into global matrix.

Parameters

in	<i>el</i>	Reference to element instance
in	<i>a</i>	Element matrix as a C-array

void Assembly (const Side & *sd*, T_ * *a*)

Assembly of side matrix into global matrix.

Parameters

in	<i>sd</i>	Reference to side instance
in	<i>a</i>	Side matrix as a C-array

void setAssembly ()

[Matrix](#) assembly.

This function assembles matrix (begins and ends)

7.85 PETScVect< T_ > Class Template Reference

To handle general purpose vectors using Petsc.

Public Member Functions

- [PETScVect](#) ()
Default Constructor. Initialize a zero-length vector.
- [PETScVect](#) (size_t *n*)
Constructor setting vector size.
- [PETScVect](#) (size_t *nx*, size_t *ny*)
Constructor of a 2-D index vector.
- [PETScVect](#) (size_t *nx*, size_t *ny*, size_t *nz*)
Constructor of a 3-D index vector.
- [PETScVect](#) (size_t *n*, T_ **x*)
Create an instance of class [PETScVect](#) as an image of a C/C++ array.
- [PETScVect](#) (MPI_Comm *comm*, size_t *n*)
Constructor of a MPI vector using its global size.
- [PETScVect](#) ([Mesh](#) &*m*, int *nb_dof*=0, int *dof_type*=NODE_FIELD)
Constructor with a mesh instance.
- [PETScVect](#) ([Mesh](#) &*m*, string *name*, real_t *t*=0.0, int *nb_dof*=0, int *dof_type*=NODE_FIELD)
Constructor with a mesh instance giving name and time for vector.
- [PETScVect](#) (const [PETScVect](#)< T_ > &*v*, const [PETScVect](#)< T_ > &*bc*)
Constructor using boundary conditions.

- **PETScVect** (const **PETScVect**< T_ > &v, size_t nb_dof, size_t first_dof)
Constructor to select some components of a given vector.
- **PETScVect** (const **PETScVect**< T_ > &v)
Copy constructor.
- **PETScVect** (const **PETScVect**< T_ > &v, size_t n)
Constructor to select one component from a given 2 or 3-component vector.
- **PETScVect** (size_t d, const **PETScVect**< T_ > &v, const string &name=" ")
*Constructor that extracts some degrees of freedom (components) from given instance of **PETScVect**.*
- **~PETScVect** ()
Destructor.
- void **set** (const T_ *v, size_t n)
Initialize vector with a c-array.
- void **setMPI** (MPI_Comm comm, size_t n, size_t N)
Initialize a local vector using MPI.
- void **select** (const **PETScVect**< T_ > &v, size_t nb_dof=0, size_t first_dof=1)
*Initialize vector with another **PETScVect** instance.*
- void **set** (const string &exp, size_t dof=1)
Initialize vector with an algebraic expression.
- void **set** (const **Mesh** &m, const string &exp, size_t dof=1)
Initialize vector with an algebraic expression with providing mesh data.
- void **set** (const **PETScVect**< real_t > &x, const string &exp)
Initialize vector with an algebraic expression.
- void **setMesh** (**Mesh** &m, int nb_dof=0, int dof_type=NODE_FIELD)
Define mesh class to size vector.
- size_t **size** () const
Return vector (global) size.
- PetscInt **getLocalSize** () const
Return vector local size.
- void **setSize** (size_t nx, size_t ny=1, size_t nz=1)
Set vector size (for 1-D, 2-D or 3-D cases)
- void **setDOFType** (int dof_type)
Set DOF type of vector.
- size_t **getNbDOF** () const
Return vector number of degrees of freedom.
- size_t **getNb** () const
Return vector number of entities (nodes, elements or sides)
- **Mesh** & **getMesh** () const
*Return **Mesh** instance.*
- bool **isWithMesh** () const
*Return *true* if vector contains a **Mesh** pointer, *false* if not.*
- int **getDOFType** () const
- void **setTime** (real_t t)
Set time value for vector.
- real_t **getTime** () const
Get time value for vector.
- void **setName** (string name)

- Set name of vector.*

 - string `getName ()` const

Get name of vector.
- PetscScalar `getNorm1 ()` const

Calculate 1-norm of vector.
- PetscScalar `getNorm2 ()` const

Calculate 2-norm (Euclidean norm) of vector.
- PetscScalar `getWNorm1 ()` const

Calculate weighted 1-norm of vector The wighted 1-norm is the 1-Norm of the vector divided by its size.
- PetscScalar `getWNorm2 ()` const

Calculate weighted 2-norm of vector.
- PetscScalar `getNormMax ()` const

Calculate Max-norm (Infinite norm) of vector.
- T_ `getMin ()` const

Calculate Min value of vector entries.
- T_ `getMax ()` const

Calculate Max value of vector entries.
- size_t `getNx ()` const

Return number of grid points in the x-direction if grid indexing is set.
- size_t `getNy ()` const

Return number of grid points in the y-direction if grid indexing is set.
- size_t `getNz ()` const

Return number of grid points in the z-direction if grid indexing is set.
- void `setNodeBC (Mesh &m, int code, T_ val, size_t dof=1)`

Assign a given value to components of vector with given code.
- void `setNodeBC (Mesh &m, int code, const string &exp, size_t dof=1)`

Assign a given function (given by an interpretable algebraic expression) to components of vector with given code.
- void `setNodeBC (int code, T_ val, size_t dof=1)`

Assign a given value to components of vector with given code.
- void `setNodeBC (int code, const string &exp, size_t dof=1)`

Assign a given function (given by an interpretable algebraic expression) to components of vector with given code.
- void `removeBC (const Mesh &ms, const PETScVect< T_ > &v, int dof=0)`

Remove boundary conditions.
- void `removeBC (const Mesh &ms, const Vect< T_ > &v, int dof=0)`

Remove boundary conditions.
- void `removeBC (const PETScVect< T_ > &v, int dof=0)`

Remove boundary conditions.
- void `removeBC (const Vect< T_ > &v, int dof=0)`

Remove boundary conditions.
- void `transferBC (const PETScVect< T_ > &bc, int dof=0)`

Transfer boundary conditions to the vector.
- void `insertBC (Mesh &m, const PETScVect< T_ > &v, const PETScVect< T_ > &bc, int dof=0)`

Insert boundary conditions.
- void `insertBC (Mesh &m, const PETScVect< T_ > &v, int dof=0)`

- Insert boundary conditions.*
- void **insertBC** (const **PETScVect**< T_ > &v, const **PETScVect**< T_ > &bc, int dof=0)
Insert boundary conditions.
- void **insertBC** (const **PETScVect**< T_ > &v, int dof=0)
Insert boundary conditions.
- void **Assembly** (const **Element** &el, const T_ *b)
Assembly of element vector (as C-array) into Vect instance.
- void **Assembly** (const **Side** &sd, T_ *b)
Assembly of side vector (as C-array) into PETScVect instance.
- void **getGradient** (**PETScVect**< T_ > &v)
Evaluate the discrete Gradient vector of the current vector.
- void **getGradient** (**PETScVect**< **Point**< T_ > > &v)
Evaluate the discrete Gradient vector of the current vector.
- void **getCurl** (**PETScVect**< T_ > &v)
Evaluate the discrete curl vector of the current vector.
- void **getCurl** (**PETScVect**< **Point**< T_ > > &v)
Evaluate the discrete curl vector of the current vector.
- void **getSCurl** (**PETScVect**< T_ > &v)
Evaluate the discrete scalar curl in 2-D of the current vector.
- void **getDivergence** (**PETScVect**< T_ > &v)
Evaluate the discrete Divergence of the current vector.
- **real_t** **getAverage** (const **Element** &el, int type) const
Return average value of vector in a given element.
- void **save** (string file, int opt)
Save vector in a file according to a given format.
- **PETScVect**< T_ > & **MultAdd** (const **PETScVect**< T_ > &x, const T_ &a)
Multiply by a constant then add to a vector.
- void **Axpy** (T_ a, const **PETScVect**< T_ > &x)
Add to vector the product of a vector by a scalar.
- void **set** (size_t i, T_ a)
Assign a value to an entry for a 1-D vector.
- void **set** (size_t i, size_t j, T_ a)
Assign a value to an entry for a 2-D vector.
- void **set** (size_t i, size_t j, size_t k, T_ a)
Assign a value to an entry for a 3-D vector.
- void **add** (size_t i, T_ a)
Add a value to an entry for a 1-index vector.
- void **add** (size_t i, size_t j, T_ a)
Add a value to an entry for a 2-index vector.
- void **add** (size_t i, size_t j, size_t k, T_ a)
Assign a value to an entry for a 3-index vector.
- void **clear** ()
Set all vector entries to zero.
- T_ **operator[]** (size_t i) const
Operator []
- T_ **operator()** (size_t i) const

- *Operator ()*
- `T_ operator() (size_t i, size_t j) const`
Operator () with 2-D indexing (Case of a grid vector)
- `T_ operator() (size_t i, size_t j, size_t k) const`
Operator () with 3-D indexing (Case of a grid vector)
- `PETScVect< T_ > & operator= (const PETScVect< T_ > &v)`
Operator = between vectors.
- `PETScVect< T_ > & operator= (const T_ &a)`
Operator =
- `PETScVect< T_ > & operator+= (const PETScVect< T_ > &v)`
Operator +=
- `PETScVect< T_ > & operator+= (const T_ &a)`
Operator +=
- `PETScVect< T_ > & operator-= (const PETScVect< T_ > &v)`
Operator -=
- `PETScVect< T_ > & operator-= (const T_ &a)`
Operator -=
- `PETScVect< T_ > & operator*= (const T_ &a)`
*Operator *=*
- `PETScVect< T_ > & operator/= (const T_ &a)`
Operator /=
- `const Mesh & getMeshPtr () const`
Return reference to Mesh instance.
- `T_ operator, (const PETScVect< T_ > &v) const`
Return Dot (scalar) product of two vectors.
- `operator Vec () const`
Casting operator.
- `void setAssembly ()`
Vector assembly.
- `void Insert (const vector< int > &ii, const vector< Point< T_ > > &v)`
Insert values into certain locations of the vector.
- `void Add (const vector< int > &ii, const vector< T_ > &v)`
Add values into certain locations of the vector.

7.85.1 Detailed Description

template<class T_>
class OFELI::PETScVect< T_ >

To handle general purpose vectors using Petsc.

This template class enables considering vectors of various data types. Operators =, [] and () are overloaded so that one can write for instance:

```
PETScVect<double> u(10), v(10);
v = -1.0;
u = v;
u.set(3,-2.0);
```

to set vector **v** entries to -1, copy vector **v** into vector **u** and assign third entry of **v** to -2. Note that entries of **v** are here **v(1)**, **v(2)**, ..., **v(10)**, i.e. vector entries start at index 1.

Remarks

A [PETScVect](#) instance can be 1-D, 2-D or 3-D, i.e. one can have 1, 2 or 3 indices. This is set while the vector is constructed. This can be helpful for instance in the case of a structured grid.

Warning

This class is available only when [OFELI](#) has been installed with Petsc In this case, only vectors used for building and solving linear systems need to be instances of [PETScVect](#).

Template Parameters

$T \leftrightarrow$	Data type (double, int, complex<double>, ...)
$_ \leftrightarrow$	

7.85.2 Constructor & Destructor Documentation

PETScVect (size_t *n*)

Constructor setting vector size.

Parameters

in	<i>n</i>	Size of vector
----	----------	----------------

PETScVect (size_t *nx*, size_t *ny*)

Constructor of a 2-D index vector.
This constructor can be used for instance for a 2-D grid vector

Parameters

in	<i>nx</i>	Size for the first index
in	<i>ny</i>	Size for the second index

Remarks

The size of resulting vector is nx*ny

PETScVect (size_t *nx*, size_t *ny*, size_t *nz*)

Constructor of a 3-D index vector.
This constructor can be used for instance for a 3-D grid vector

Parameters

in	<i>nx</i>	Size for the first index
----	-----------	--------------------------

Parameters

in	<i>ny</i>	Size for the second index
in	<i>nz</i>	Size for the third index

Remarks

The size of resulting vector is $nx*ny*nz$

PETScVect (size_t *n*, T_* *x*)

Create an instance of class [PETScVect](#) as an image of a C/C++ array.

Parameters

in	<i>n</i>	Dimension of vector to construct
in	<i>x</i>	C-array to copy

PETScVect (MPI_Comm *comm*, size_t *n*)

Constructor of a MPI vector using its global size.

Parameters

in	<i>comm</i>	Communicator which represents all the processs that PETSc knows about
in	<i>n</i>	Global size of vector

PETScVect (Mesh & *m*, int *nb_dof* = 0, int *dof_type* = *NODE_FIELD*)

Constructor with a mesh instance.

Parameters

in	<i>m</i>	Mesh instance
in	<i>nb_dof</i>	Number of degrees of freedom per node, element or side If <i>nb_dof</i> is set to 0 (default value) the constructor picks this number from the Mesh instance
in	<i>dof_type</i>	Type of degrees of freedom. To be given among the enumerated values: <i>NODE_FIELD</i> , <i>ELEMENT_FIELD</i> , <i>SIDE_FIELD</i> or <i>EDGE_FIELD</i> [Default: <i>NODE_FIELD</i>]

PETScVect (Mesh & *m*, string *name*, real_t *t* = 0.0, int *nb_dof* = 0, int *dof_type* = *NODE_FIELD*)

Constructor with a mesh instance giving name and time for vector.

Parameters

in	<i>m</i>	Mesh instance
----	----------	-------------------------------

Parameters

in	<i>name</i>	Name of the vector
in	<i>t</i>	Time value for the vector
in	<i>nb_dof</i>	Number of degrees of freedom per node, element or side If nb_dof is set to 0 the constructor picks this number from the Mesh instance
in	<i>dof_type</i>	Type of degrees of freedom. To be given among the enumerated values: NODE_FIELD, ELEMENT_FIELD, SIDE_FIELD or EDGE_FIELD [Default: NODE_FIELD]

PETScVect (const PETScVect< T_ > & v, const PETScVect< T_ > & bc)

Constructor using boundary conditions.

Boundary condition values contained in bc are reported to vector v

Parameters

in	<i>v</i>	PETScVect instance to update
in	<i>bc</i>	PETScVect instance containing imposed valued at desired DOF

PETScVect (const PETScVect< T_ > & v, size_t nb_dof, size_t first_dof)

Constructor to select some components of a given vector.

Parameters

in	<i>v</i>	PETScVect instance to extract from
in	<i>nb_dof</i>	Number of DOF to extract
in	<i>first_dof</i>	First DOF to extract For instance, a choice first_dof=2 and nb_dof=1 means that the second DOF of each node is copied in the vector

PETScVect (const PETScVect< T_ > & v, size_t n)

Constructor to select one component from a given 2 or 3-component vector.

Parameters

in	<i>v</i>	PETScVect instance to extract from
in	<i>n</i>	Component to extract (must be > 1 and < 4 or).

PETScVect (size_t d, const PETScVect< T_ > & v, const string & name = " ")

Constructor that extracts some degrees of freedom (components) from given instance of [PETScVect](#).

This constructor enables constructing a subvector of a given [PETScVect](#) instance. It selects a given list of degrees of freedom and put it according to a given order in the instance to construct.

Parameters

in	<i>d</i>	Integer number giving the list of degrees of freedom. This number is made of <i>n</i> digits where <i>n</i> is the number of degrees of freedom. Let us give an example: Assume that the instance <i>v</i> has 3 DOF by entity (node, element or side). The choice <i>d</i> =201 means that the constructed instance has 2 DOF where the first DOF is the third one of <i>v</i> , and the second DOF is the first one of <i>f v</i> . Consequently, no digit can be larger than the number of DOF the constructed instance. In this example, a choice <i>d</i> =103 would produce an error message.
in	<i>v</i>	PETScVect instance from which extraction is performed.
in	<i>name</i>	Name to assign to vector instance [Default: " "].

Warning

Don't give zeros as first digits for the argument *d*. The number is in this case interpreted as octal !!

7.85.3 Member Function Documentation

void set (const T_ * *v*, size_t *n*)

Initialize vector with a c-array.

Parameters

in	<i>v</i>	c-array (pointer) to initialize PETScVect
in	<i>n</i>	size of array

void setMPI (MPI.Comm *comm*, size_t *n*, size_t *N*)

Initialize a local vector using MPI.

Parameters

in	<i>comm</i>	
in	<i>n</i>	local size of vector
in	<i>N</i>	global size of vector

void select (const PETScVect< T_ > & *v*, size_t *nb_dof* = 0, size_t *first_dof* = 1)

Initialize vector with another [PETScVect](#) instance.

Parameters

in	<i>v</i>	PETScVect instance to extract from
in	<i>nb_dof</i>	Number of DOF per node, element or side (By default, 0: Number of degrees of freedom extracted from the Mesh instance)
in	<i>first_dof</i>	First DOF to extract (Default: 1) For instance, a choice <i>first_dof</i> =2 and <i>nb_dof</i> =1 means that the second DOF of each node is copied in the vector

void set (const string & exp, size_t dof = 1)

Initialize vector with an algebraic expression.

Parameters

in	<i>exp</i>	Regular algebraic expression that defines a function of x, y and z which are coordinates of nodes.
in	<i>dof</i>	Degree of freedom to which the value is assigned [Default: 1]

void set (const Mesh & ms, const string & exp, size_t dof = 1)

Initialize vector with an algebraic expression with providing mesh data.

Parameters

in	<i>ms</i>	Mesh instance
in	<i>exp</i>	Regular algebraic expression that defines a function of x, y and z which are coordinates of nodes.
in	<i>dof</i>	Degree of freedom to which the value is assigned [Default: 1]

void set (const PETScVect< real_t > & x, const string & exp)

Initialize vector with an algebraic expression.

Parameters

in	<i>x</i>	PETScVect instance that contains coordinates of points
in	<i>exp</i>	Regular algebraic expression that defines a function of x and i which are coordinates of nodes and indices starting from 1.

void setMesh (Mesh & m, int nb_dof = 0, int dof_type = NODE_FIELD)

Define mesh class to size vector.

Parameters

in	<i>m</i>	Mesh instance
in	<i>nb_dof</i>	Number of degrees of freedom per node, element or side If nb_dof is set to 0 the constructor picks this number from the Mesh instance
in	<i>dof_type</i>	Parameter to precise the type of degrees of freedom. To be chosen among the enumerated values: NODE_FIELD, ELEMENT_FIELD, SIDE_FIELD, EDGE_FIELD [Default: NODE_FIELD]

PetscInt getLocalSize () const

Return vector local size.

Local size is the size on the current processor

void setSize (size_t nx, size_t ny = 1, size_t nz = 1)

Set vector size (for 1-D, 2-D or 3-D cases)

This function allocates memory for the vector but does not initialize its components

Parameters

in	<i>nx</i>	Number of grid points in x-direction
in	<i>ny</i>	Number of grid points in y-direction [Default: 1]
in	<i>nz</i>	Number of grid points in z-direction [Default: 1]

void setDOFType (int dof_type)

Set DOF type of vector.

The DOF type combined with number of DOF per component enable determining the size of vector

Parameters

in	<i>dof_type</i>	Type of degrees of freedom. Value to be chosen among the enumerated values: <code>NODE_FIELD</code> , <code>ELEMENT_FIELD</code> , <code>SIDE_FIELD</code> or <code>EDGE_FIELD</code>
----	-----------------	---

bool isWithMesh () const

Return true if vector contains a [Mesh](#) pointer, false if not.

A [PETScVect](#) instance can be constructed using mesh information

int getDOFType () const

Return DOF type of vector

Returns

dof_type Type of degrees of freedom. Value among the enumerated values: `NODE_FIELD`, `ELEMENT_FIELD`, `SIDE_FIELD` or `EDGE_FIELD`

PetscScalar getWNorm2 () const

Calculate weighted 2-norm of vector.

The weighted 2-norm is the 2-Norm of the vector divided by the square root of its size

void setNodeBC (Mesh & m, int code, T_ val, size_t dof = 1)

Assign a given value to components of vector with given code.

Vector components are assumed nodewise

Parameters

in	<i>m</i>	Instance of mesh
----	----------	------------------

Parameters

in	<i>code</i>	Code for which nodes will be assigned prescribed value
in	<i>val</i>	Value to prescribe
in	<i>dof</i>	Degree of Freedom for which the value is assigned [default: 1]

void setNodeBC (Mesh & *m*, int *code*, const string & *exp*, size_t *dof* = 1)

Assign a given function (given by an interpretable algebraic expression) to components of vector with given code.

Vector components are assumed nodewise

Parameters

in	<i>m</i>	Instance of mesh
in	<i>code</i>	Code for which nodes will be assigned prescribed value
in	<i>exp</i>	Regular algebraic expression to prescribe
in	<i>dof</i>	Degree of Freedom for which the value is assigned [default: 1]

void setNodeBC (int *code*, T_ *val*, size_t *dof* = 1)

Assign a given value to components of vector with given code.

Vector components are assumed nodewise

Parameters

in	<i>code</i>	Code for which nodes will be assigned prescribed value
in	<i>val</i>	Value to prescribe
in	<i>dof</i>	Degree of Freedom for which the value is assigned [Default: 1]

void setNodeBC (int *code*, const string & *exp*, size_t *dof* = 1)

Assign a given function (given by an interpretable algebraic expression) to components of vector with given code.

Vector components are assumed nodewise

Parameters

in	<i>code</i>	Code for which nodes will be assigned prescribed value
in	<i>exp</i>	Regular algebraic expression to prescribe
in	<i>dof</i>	Degree of Freedom for which the value is assigned [Default: 1]

void removeBC (const Mesh & *ms*, const PETScVect< T_ > & *v*, int *dof* = 0)

Remove boundary conditions.

This member function copies to current vector a vector where only non imposed DOF are retained.

Parameters

in	<i>ms</i>	Mesh instance
in	<i>v</i>	Vector (PETScVect instance to copy from)
in	<i>dof</i>	Parameter to say if all degrees of freedom are concerned [Default: 0] or if only one degree of freedom (<i>dof</i>) is inserted into vector <i>v</i> which has only one degree of freedom

void removeBC (const Mesh & *ms*, const Vect< T_ > & *v*, int *dof* = 0)

Remove boundary conditions.

This member function copies to current vector a vector where only non imposed DOF are retained.

Parameters

in	<i>ms</i>	Mesh instance
in	<i>v</i>	Vector (Vect instance to copy from)
in	<i>dof</i>	Parameter to say if all degrees of freedom are concerned [Default: 0] or if only one degree of freedom (<i>dof</i>) is inserted into vector <i>v</i> which has only one degree of freedom

void removeBC (const PETScVect< T_ > & *v*, int *dof* = 0)

Remove boundary conditions.

This member function copies to current vector a vector where only non imposed DOF are retained.

Parameters

in	<i>v</i>	Vector (PETScVect instance to copy from)
in	<i>dof</i>	Parameter to say if all degrees of freedom are concerned [Default: 0] or if only one degree of freedom (<i>dof</i>) is inserted into vector <i>v</i> which has only one degree of freedom.

Remarks

This function is to be used only when the [PETScVect](#) instance was constructed by using the [Mesh](#) instance

void removeBC (const Vect< T_ > & *v*, int *dof* = 0)

Remove boundary conditions.

This member function copies to current vector a vector where only non imposed DOF are retained.

Parameters

in	<i>v</i>	Vector (Vect instance to copy from)
in	<i>dof</i>	Parameter to say if all degrees of freedom are concerned [Default: 0] or if only one degree of freedom (dof) is inserted into vector <i>v</i> which has only one degree of freedom.

Remarks

This function is to be used only when the [PETScVect](#) instance was constructed by using the [Mesh](#) instance

void transferBC (const PETScVect< T_ > & bc, int dof = 0)

Transfer boundary conditions to the vector.

Parameters

in	<i>bc</i>	PETScVect instance from which imposed degrees of freedom are copied to current instance
in	<i>dof</i>	Parameter to say if all degrees of freedom are concerned [Default: 0] or if only one degree of freedom (dof) is inserted into vector <i>v</i> which has only one degree of freedom.

void insertBC (Mesh & m, const PETScVect< T_ > & v, const PETScVect< T_ > & bc, int dof = 0)

Insert boundary conditions.

Parameters

in	<i>m</i>	Mesh instance.
in	<i>v</i>	PETScVect instance from which free degrees of freedom are copied to current instance.
in	<i>bc</i>	PETScVect instance from which imposed degrees of freedom are copied to current instance.
in	<i>dof</i>	Parameter to say if all degrees of freedom are concerned [Default: 0] or if only one degree of freedom (dof) is inserted into vector <i>v</i> which has only one degree of freedom by node or side

void insertBC (Mesh & m, const PETScVect< T_ > & v, int dof = 0)

Insert boundary conditions.

DOF with imposed boundary conditions are set to zero.

Parameters

in	<i>m</i>	Mesh instance.
----	----------	--------------------------------

Parameters

in	<i>v</i>	PETScVect instance from which free degrees of freedom are copied to current instance.
in	<i>dof</i>	Parameter to say if all degrees of freedom are concerned [Default: 0] or if only one degree of freedom (<i>dof</i>) is inserted into vector <i>v</i> which has only one degree of freedom by node or side

void insertBC (const PETScVect< T_ > & v, const PETScVect< T_ > & bc, int dof = 0)

Insert boundary conditions.

Parameters

in	<i>v</i>	PETScVect instance from which free degrees of freedom are copied to current instance.
in	<i>bc</i>	PETScVect instance from which imposed degrees of freedom are copied to current instance.
in	<i>dof</i>	Parameter to say if all degrees of freedom are concerned [Default: 0] or if only one degree of freedom (<i>dof</i>) is inserted into vector <i>v</i> which has only one degree of freedom by node or side

void insertBC (const PETScVect< T_ > & v, int dof = 0)

Insert boundary conditions.

DOF with imposed boundary conditions are set to zero.

Parameters

in	<i>v</i>	PETScVect instance from which free degrees of freedom are copied to current instance.
in	<i>dof</i>	Parameter to say if all degrees of freedom are concerned [Default: 0] or if only one degree of freedom (<i>dof</i>) is inserted into vector <i>v</i> which has only one degree of freedom by node or side

void Assembly (const Element & el, const T_ * b)

Assembly of element vector (as C-array) into [Vect](#) instance.

Parameters

in	<i>el</i>	Reference to element instance
in	<i>b</i>	Local vector to assemble (C-Array)

void Assembly (const Side & sd, T_ * b)

Assembly of side vector (as C-array) into [PETScVect](#) instance.

Parameters

in	<i>sd</i>	Reference to side instance
in	<i>b</i>	Local vector to assemble (C-Array)

void getGradient (PETScVect< T_ > & v)

Evaluate the discrete Gradient vector of the current vector.

The resulting gradient is stored in a [PETScVect](#) instance This function handles node vectors assuming P_1 approximation The gradient is then a constant vector for each element.

Parameters

in	<i>v</i>	Vect instance that contains the gradient, where $v(n,1)$, $v(n,2)$ and $v(n,3)$ are respectively the x and y and z derivatives at element n.
----	----------	---

void getGradient (PETScVect< Point< T_ > > & v)

Evaluate the discrete Gradient vector of the current vector.

The resulting gradient is stored in a [PETScVect](#) instance This function handles node vectors assuming P_1 approximation The gradient is then a constant vector for each element.

Parameters

in	<i>v</i>	Vect instance that contains the gradient, where $v(n,1) \cdot x$, $v(n,2) \cdot y$ and $v(n,3) \cdot z$ are respectively the x and y and z derivatives at element n.
----	----------	---

void getCurl (PETScVect< T_ > & v)

Evaluate the discrete curl vector of the current vector.

The resulting curl is stored in a [PETScVect](#) instance This function handles node vectors assuming P_1 approximation The curl is then a constant vector for each element.

Parameters

in	<i>v</i>	Vect instance that contains the curl, where $v(n,1)$, $v(n,2)$ and $v(n,3)$ are respectively the x and y and z curl components at element n.
----	----------	---

void getCurl (PETScVect< Point< T_ > > & v)

Evaluate the discrete curl vector of the current vector.

The resulting curl is stored in a [PETScVect](#) instance This function handles node vectors assuming P_1 approximation The curl is then a constant vector for each element.

Parameters

in	<i>v</i>	Vect instance that contains the curl, where $v(n,1) \cdot x$, $v(n,2) \cdot y$ and $v(n,3) \cdot z$ are respectively the x and y and z curl components at element n.
----	----------	---

void getSCurl (PETScVect< T_ > & v)

Evaluate the discrete scalar curl in 2-D of the current vector.

The resulting curl is stored in a [PETScVect](#) instance This function handles node vectors assuming P_1 approximation The curl is then a constant vector for each element.

Parameters

in	<i>v</i>	Vect instance that contains the scalar curl.
----	----------	--

void getDivergence (PETScVect< T_ > & v)

Evaluate the discrete Divergence of the current vector.

The resulting divergence is stored in a [PETScVect](#) instance This function handles node vectors assuming P_1 approximation The divergence is then a constant vector for each element.

Parameters

in	<i>v</i>	Vect instance that contains the divergence.
----	----------	---

real_t getAverage (const Element & el, int type) const

Return average value of vector in a given element.

Parameters

in	<i>el</i>	Element instance
in	<i>type</i>	Type of element. This is to be chosen among enumerated values: LINE2, TRIANG3, QUAD4 TETRA4, HEXA8

void save (string file, int opt)

Save vector in a file according to a given format.

Parameters

in	<i>file</i>	Output file where to save the vector
in	<i>opt</i>	Option to choose file format to save. This is to be chosen among enumerated values: GMSH, GNUPLOT, MATLAB, TECPLOT and VTK

PETScVect<T_>& MultAdd (const PETScVect< T_ > & x, const T_ & a)

Multiply by a constant then add to a vector.

Parameters

in	<i>x</i>	PETScVect instance to add
in	<i>a</i>	Constant to multiply before adding

void Axy (T_ *a*, const PETScVect< T_ > & *x*)

Add to vector the product of a vector by a scalar.

Parameters

in	<i>a</i>	Scalar to premultiply
in	<i>x</i>	Vect instance by which <i>a</i> is multiplied. The result is added to current instance

void set (size_t *i*, T_ *a*)

Assign a value to an entry for a 1-D vector.

Parameters

in	<i>i</i>	Rank index in vector (starts at 1)
in	<i>a</i>	Value to assign

void set (size_t *i*, size_t *j*, T_ *a*)

Assign a value to an entry for a 2-D vector.

Parameters

in	<i>i</i>	First index in vector (starts at 1)
in	<i>j</i>	Second index in vector (starts at 1)
in	<i>a</i>	Value to assign

void set (size_t *i*, size_t *j*, size_t *k*, T_ *a*)

Assign a value to an entry for a 3-D vector.

Parameters

in	<i>i</i>	First index in vector (starts at 1)
in	<i>j</i>	Second index in vector (starts at 1)
in	<i>k</i>	Third index in vector (starts at 1)
in	<i>a</i>	Value to assign

void add (size_t *i*, T_ *a*)

Add a value to an entry for a 1-index vector.

Parameters

in	<i>i</i>	Rank index in vector (starts at 1)
----	----------	------------------------------------

Parameters

in	<i>a</i>	Value to assign
----	----------	-----------------

void add (size_t *i*, size_t *j*, T_ *a*)

Add a value to an entry for a 2-index vector.

Parameters

in	<i>i</i>	First index in vector (starts at 1)
in	<i>j</i>	Second index in vector (starts at 1)
in	<i>a</i>	Value to assign

void add (size_t *i*, size_t *j*, size_t *k*, T_ *a*)

Assign a value to an entry for a 3-index vector.

Parameters

in	<i>i</i>	First index in vector (starts at 1)
in	<i>j</i>	Second index in vector (starts at 1)
in	<i>k</i>	Third index in vector (starts at 1)
in	<i>a</i>	Value to assign

T_ operator[] (size_t *i*) const

Operator []

Parameters

in	<i>i</i>	Rank index in vector (starts at 0)
----	----------	------------------------------------

T_ operator() (size_t *i*) const

Operator ()

Parameters

in	<i>i</i>	Rank index in vector (starts at 1) <ul style="list-style-type: none"> • <code>v(i)</code> starts at <code>v(1)</code> to <code>v(size())</code> • <code>v(i)</code> is the same element as <code>v[i-1]</code>
----	----------	--

T_ operator() (size_t i, size_t j) const

Operator () with 2-D indexing (Case of a grid vector)

Parameters

in	<i>i</i>	first index in vector (Number of vector components in the x-grid)
in	<i>j</i>	second index in vector (Number of vector components in the y-grid) $v(i, j)$ starts at $v(1, 1)$ to $v(\text{getNx}(), \text{getNy}())$

T_ operator() (size_t i, size_t j, size_t k) const

Operator () with 3-D indexing (Case of a grid vector)

Parameters

in	<i>i</i>	first index in vector (Number of vector components in the x-grid)
in	<i>j</i>	second index in vector (Number of vector components in the y-grid)
in	<i>k</i>	third index in vector (Number of vector components in the z-grid) $v(i, j, k)$ starts at $v(1, 1, 1)$ to $v(\text{getNx}(), \text{getNy}(), \text{getNz}())$

PETScVect<T_>& operator= (const T_ & a)

Operator =
Assign a constant to vector entries

Parameters

in	<i>a</i>	Value to set
----	----------	--------------

PETScVect<T_>& operator+= (const PETScVect< T_ > & v)

Operator +=
Add vector x to current vector instance.

Parameters

in	<i>v</i>	PETScVect instance to add to instance
----	----------	---

PETScVect<T_>& operator+= (const T_ & a)

Operator +=
Add a constant to current vector entries.

Parameters

in	<i>a</i>	Value to add to vector entries
----	----------	--------------------------------

PETScVect<T_>& operator-= (const PETScVect< T_ > & v)

Operator -=

Parameters

in	<i>v</i>	Vect instance to subtract from
----	----------	--

PETScVect<T_>& operator-= (const T_ & a)

Operator -=

Subtract constant from vector entries.

Parameters

in	<i>a</i>	Value to subtract from
----	----------	------------------------

PETScVect<T_>& operator*= (const T_ & a)

Operator *=

Parameters

in	<i>a</i>	Value to multiply by
----	----------	----------------------

PETScVect<T_>& operator/= (const T_ & a)

Operator /=

Parameters

in	<i>a</i>	Value to divide by
----	----------	--------------------

T_ operator, (const PETScVect< T_ > & v) const

Return Dot (scalar) product of two vectors.

A typical use of this operator is double *a* = (v,w) where v and w are 2 instances of PETScVect<double>

Parameters

in	<i>v</i>	PETScVect instance by which the current instance is multiplied
----	----------	--

operator Vec () const

Casting operator.

This member functions enables casting an instance of class [PETScVect](#) into the Petsc vector type Vec. This is useful when one wants to use any Petsc function that is not available in the

wrapper (class [PETScWrapper](#)) or [PETScVect](#).

void setAssembly ()

Vector assembly.

This function assembles vector (begins and ends)

void Insert (const vector< int > & ii, const vector< Point< T_ > > & v)

Insert values into certain locations of the vector.

Parameters

in	<i>ii</i>	Vector containing indices where to insert (Note the indices start from 0 like any C-array)
in	<i>v</i>	Vector of values to insert, corresponding to indices in ii. Here the vector has entries of type Point<T_>.

void Add (const vector< int > & ii, const vector< T_ > & v)

Add values into certain locations of the vector.

Parameters

in	<i>ii</i>	Vector containing indices where to add (Note the indices start from 0 like any C-array)
in	<i>v</i>	Vector of values to add, corresponding to indices in ii

7.86 PETScWrapper< T_ > Class Template Reference

This class is a wrapper to be used when the library Petsc is installed and used with [OFELI](#).

Public Member Functions

- [PETScWrapper](#) (int argc, char **args, string help="")
Constructor with program arguments.
- [~PETScWrapper](#) ()
Destructor.
- PetscErrorCode [getIntOption](#) (string s, PetscInt &n, PetscBool &set) const
Get an option as an integer number.
- PetscErrorCode [getBoolOption](#) (string s, PetscBool &b, PetscBool &set) const
Get an option as a bool variable.
- PetscMPIInt [size](#) () const
Return wrapper size, i.e. number of processors.
- void [setMesh](#) ([Mesh](#) &ms)
Set mesh.
- void [setPartition](#) ([Partition](#) &p)
Set mesh partition.

- void [setMatrix](#) (PETScMatrix< T_ > &A)
Define problem matrix.
- void [setLinearSystem](#) (PETScMatrix< T_ > &A, PETScVect< T_ > &b, string s=KSPCG, string p=PCJACOBI, [real_t](#) tol=1.e-12, [size_t](#) max_it=1000)
Set linear system features.
- void [setPreconditioner](#) (string p)
Choose preconditioner for the iterative procedure.
- void [setIterationParameters](#) ([real_t](#) tol, [size_t](#) max_it)
Choose iteration parameters.
- void [setIterationMethod](#) (string m)
Choose the iterative method.
- void [solve](#) (PETScVect< T_ > &x)
Solve the linear system.
- void [solve](#) (const PETScVect< T_ > &b, PETScVect< T_ > &x)
Solve the linear system.
- void [checkError](#) (PETScVect< T_ > &u) const
Check residual error.
- int [getIterationNumber](#) () const
Return the number of iterations.
- void [setLSTolerances](#) ([real_t](#) rel_tol, [real_t](#) abs_tol, [real_t](#) div_tol=PETSC_DEFAULT, int max_it=PETSC_DEFAULT) const
Set tolerance parameters for a linear system.
- PetscMPIInt [getRank](#) () const
Return the rank of the current processor.

Friends

- template<class S_ >
ostream & [operator<<](#) (ostream &s, const [PETScWrapper](#)< S_ > &w)
Output wrapper information.

7.86.1 Detailed Description

template<class T_>
class OFELI::PETScWrapper< T_ >

This class is a wrapper to be used when the library Petsc is installed and used with [OFELI](#).

When Petsc is used, an instance of class [PETScWrapper](#) is to be declared. It initializes the use of Petsc and enables calling solver functions in Petsc.

Template Parameters

T_	Data type (double, int, complex<double>, ...)
_	

When a linear system is invoked, the choice of iterative solvers can be made among the following methods (see Petsc documentation for more details):

- KSPRICHARDSON: The Richardson iterative method (Default damping parameter is 1.0)

- KSPCHEBYSHEV: The Chebyshev iterative method
- KSPCG: The conjugate gradient method [Default]
- KSPCGNE: The CG method for normal equations (without explicitly forming the product $A^T A$)
- KSPGMRES: [Default] The GMRES iterative method (see A Generalized Minimal Residual Algorithm for Solving Nonsymmetric Linear Systems. Y. Saad and M. H. Schultz, SIAM J. Sci. Stat. Comput., Vol. 7, No. 3, July 1986, pp. 856-869)
- KSPFGMRES: The Flexible GMRES method (with restart)
- KSPLGMRES: The 'augmented' standard GMRES method where the subspace uses approximations to the error from previous restart cycles
- KSPTCQMR: A variant of QMR (quasi minimal residual) developed by Tony Chan
- KSPBCGS: The BiCGStab (Stabilized version of BiConjugate Gradient Squared) method
- KSPIBCGS: The IBiCGStab (Improved Stabilized version of BiConjugate Gradient Squared) method in an alternative form to have only a single global reduction operation instead of the usual 3 (or 4)
- KSPFBCGS: The flexible BiCGStab method.
- KSPCGS: The CGS (Conjugate Gradient Squared) method
- KSPTFQMR: A transpose free QMR (quasi minimal residual)
- KSPCR: The conjugate residuals method
- KSPLSQR: The LSQR method
- KSPBICG: The Biconjugate gradient method (similar to running the conjugate gradient on the normal equations)
- KSPMINRES: The MINRES (Minimum Residual) method
- KSPSYMLQ: The SYMLQ method
- KSPGCR: The Generalized Conjugate Residual method

When a linear system is invoked, the choice of a preconditioner can be made among the following methods (see Petsc documentation for more details):

- PCJACOBI: [Default] Jacobi (*i.e.* diagonal scaling) preconditioning
- PCBJACOBI: Block Jacobi preconditioning, each block is (approximately) solved with its own KSP object
- PCSOR: (S)SOR (successive over relaxation, Gauss-Seidel) preconditioning
- PCEISENSTAT: An implementation of SSOR (symmetric successive over relaxation, symmetric Gauss-Seidel) preconditioning that incorporates Eisenstat's trick to reduce the amount of computation needed
- PCICC: Incomplete Cholesky factorization preconditioners
- PCILU: Incomplete factorization preconditioners
- PCASM: Use the (restricted) additive Schwarz method, each block is (approximately) solved with its own KSP object
- PCLU: Uses a direct solver, based on LU factorization, as a preconditioner
- PCCHOLESKY: Uses a direct solver, based on Cholesky factorization, as a preconditioner

7.86.2 Constructor & Destructor Documentation

PETScWrapper (int *argc*, char ** *args*, string *help* = "")

Constructor with program arguments.

Parameters

in	<i>argc</i>	Count of number of command line arguments
----	-------------	---

Parameters

in	args	<p>The command line arguments. Here is the list of arguments:</p> <ul style="list-style-type: none"> • <code>-start_in_debugger</code> [noxterm,dbx,xdb,gdb,...] <ul style="list-style-type: none"> – Starts program in debugger • <code>-on_error_attach_debugger</code> [noxterm,dbx,xdb,gdb,...] <ul style="list-style-type: none"> – Starts debugger when error detected • <code>-on_error_emacs</code> <machinename> causes emacsclient to jump to error file <ul style="list-style-type: none"> – . <code>-on_error_abort</code> calls <code>abort()</code> when error detected (no traceback) • <code>-on_error_mpiabort</code> calls <code>MPI_abort()</code> when error detected <ul style="list-style-type: none"> – . <code>-error_output_stderr</code> prints error messages to <code>stderr</code> instead of the default <code>stdout</code> • <code>-error_output_none</code> does not print the error messages (but handles errors in the same way as if this was not called) <ul style="list-style-type: none"> – . <code>-debugger_nodes</code> [node1,node2,...] - Indicates nodes to start in debugger • <code>-debugger_pause</code> [sleeptime] (in seconds) <ul style="list-style-type: none"> – Pauses debugger • <code>-stop_for_debugger</code> <ul style="list-style-type: none"> – Print message on how to attach debugger manually to process and wait (<code>-debugger_pause</code>) seconds for attachment • <code>-malloc</code> <ul style="list-style-type: none"> – Indicates use of PETSc error-checking <code>malloc</code> (on by default for debug version of libraries) • <code>-malloc no</code> <ul style="list-style-type: none"> – Indicates not to use error-checking <code>malloc</code> • <code>-malloc.debug</code> <ul style="list-style-type: none"> – check for memory corruption at EVERY <code>malloc</code> or <code>free</code> • <code>-malloc.dump</code> <ul style="list-style-type: none"> – prints a list of all unfreed memory at the end of the run • <code>-malloc.test</code> <ul style="list-style-type: none"> – like <code>-malloc.dump</code> <code>-malloc.debug</code>, but only active for debugging builds • <code>-fp_trap</code> <ul style="list-style-type: none"> – Stops on floating point exceptions (Note that on the IBM RS6000 this slows code by at least a factor of 10.) • <code>-no_signal_handler</code> <ul style="list-style-type: none"> – Indicates not to trap error signals
OFELI's Reference Guide		<ul style="list-style-type: none"> • <code>-shared.tmp</code> <ul style="list-style-type: none"> – indicates <code>/tmp</code> directory is shared by all processors • <code>-not_shared.tmp</code>

Parameters

in	<i>help</i>	String that contains message to display when argument -v is used
----	-------------	--

Warning

This class is available only when [OFELI](#) has been installed with Petsc

~PETScWrapper ()

Destructor.

Destroy the KSP context and release memory allocated by Petsc

7.86.3 Member Function Documentation

PetscErrorCode getIntOption (string *s*, PetscInt & *n*, PetscBool & *set*) const

Get an option as an integer number.

Parameters

in	<i>s</i>	String to prepend the name of the option
out	<i>n</i>	Obtained integer value
out	<i>set</i>	true if found, false if not.

PetscErrorCode getBoolOption (string *s*, PetscBool & *b*, PetscBool & *set*) const

Get an option as a bool variable.

Parameters

in	<i>s</i>	String to prepend the name of the option
out	<i>b</i>	Obtained boolean value
out	<i>set</i>	true if found, false if not.

void setMesh (Mesh & *ms*)

Set mesh.

Parameters

in	<i>ms</i>	Mesh instance
----	-----------	-------------------------------

void setPartition (Partition & *p*)

Set mesh partition.

This function is to be used for parallel computing

Parameters

in	p	Partition instance
----	-----	------------------------------------

void setMatrix (PETScMatrix< T_ > & A)

Define problem matrix.

Parameters

in	A	PETScMatrix instance that contains matrix
----	-----	---

void setLinearSystem (PETScMatrix< T_ > & A, PETScVect< T_ > & b, string $s = KSPCG$, string $p = PCJACOBI$, real_t $tol = 1.e-12$, size_t $max_it = 1000$)

Set linear system features.

Parameters

in	A	PETScMatrix instance that contains matrix
in	b	Vector containing the right-hand side
in	s	Option to choose iterative solver. See the definition of the class for iterative methods
in	p	Option to choose preconditioner. See the definition of the class for available preconditioners.
in	tol	Tolerance for convergence of iteration process [Default: $1.e-12$]
in	max_it	Maximum number of linear solver iterations [Default: 1000]

void setPreconditioner (string p)

Choose preconditioner for the iterative procedure.

Parameters

in	p	Option to choose preconditioner. See the definition of the class for available preconditioners.
----	-----	---

void setIterationParameters (real_t tol , size_t max_it)

Choose iteration parameters.

Parameters

in	tol	Tolerance for convergence of iteration process
in	max_it	Maximum number of linear solver iterations

void setIterationMethod (string *m*)

Choose the iterative method.

Parameters

in	<i>m</i>	Option to choose iterative solver. See the definition of the class for available iterative solvers.
----	----------	---

void solve (PETScVect< T_ > & *x*)

Solve the linear system.

If the member functions setIterationMethod and setPreconditioner have not been used, default methods are used

Parameters

in, out	<i>x</i>	Vector containing the initial guess on input and, if convergence is achieved, the solution on output
---------	----------	--

void solve (const PETScVect< T_ > & *b*, PETScVect< T_ > & *x*)

Solve the linear system.

If the member functions setIterationMethod and setPreconditioner have not been used, default methods are used

Parameters

in	<i>b</i>	Vector containing the right-hand side
in, out	<i>x</i>	Vector containing the initial guess on input and, if convergence is achieved, the solution on output

void checkError (PETScVect< T_ > & *u*) const

Check residual error.

This function computes the residual $A*x - b$ and outputs the number of iterations

Parameters

out	<i>u</i>	Residual vector
-----	----------	-----------------

void setLSTolerances (real_t *rel_tol*, real_t *abs_tol*, real_t *div_tol* = PETSC_DEFAULT, int *max_it* = PETSC_DEFAULT) const

Set tolerance parameters for a linear system.

Parameters

in	<i>rel_tol</i>	Relative convergence tolerance, relative decrease in the preconditioned residual norm
----	----------------	---

Parameters

in	<i>abs_tol</i>	Absolute convergence tolerance of the preconditioned residual norm
in	<i>div_tol</i>	Divergence tolerance: Amount preconditioned residual norm
in	<i>max↔ _it</i>	Maximum number of iterations

7.87 PhaseChange Class Reference

This class enables defining phase change laws for a given material.

Public Member Functions

- virtual [~PhaseChange](#) ()
Destructor.
- int [E2T](#) ([real.t](#) &H, [real.t](#) &T, [real.t](#) &gamma)
Calculate temperature from enthalpy.
- virtual int [EnthalpyToTemperature](#) ([real.t](#) &H, [real.t](#) &T, [real.t](#) &gamma)
Virtual function to calculate temperature from enthalpy.
- void [setMaterial](#) ([Material](#) &m, int code)
Choose [Material](#) instance and material code.
- [Material](#) & [getMaterial](#) () const
Return reference to [Material](#) instance.

7.87.1 Detailed Description

This class enables defining phase change laws for a given material.

These laws are predefined for a certain number of materials. The user can set himself a specific behavior for his own materials by defining a class that inherits from [PhaseChange](#). The derived class must has at least the member function

int [EnthalpyToTemperature](#)([real.t](#) &H, [real.t](#) &T, [real.t](#) &gamma)

7.87.2 Member Function Documentation

int [E2T](#) ([real.t](#) & *H*, [real.t](#) & *T*, [real.t](#) & *gamma*)

Calculate temperature from enthalpy.

This member function is to be called in any equation class that needs phase change laws.

Parameters

in	<i>H</i>	Enthalpy value
out	<i>T</i>	Calculated temperature value
out	<i>gamma</i>	Maximal slope of the curve H -> T

virtual int [EnthalpyToTemperature](#) ([real.t](#) & *H*, [real.t](#) & *T*, [real.t](#) & *gamma*) [virtual]

Virtual function to calculate temperature from enthalpy.

This member function must be implemented in any derived class in order to define user's own material laws.

Parameters

in	H	Enthalpy value
out	T	Calculated temperature value
out	γ	Maximal slope of the curve $H \rightarrow T$

7.88 Point< T_ > Class Template Reference

Defines a point with arbitrary type coordinates.

Public Member Functions

- [Point](#) ()
Default constructor.
- [Point](#) (T_ a, T_ b=T_(0), T_ c=T_(0))
Constructor that assigns a, b to x-, y- and z-coordinates respectively.
- [Point](#) (const [Point](#)< T_ > &p)
Copy constructor.
- T_ & [operator](#)() (size_t i)
Operator (): Non constant version.
- const T_ & [operator](#)() (size_t i) const
Operator (): Constant version.
- T_ & [operator](#)[] (size_t i)
Operator []: Non constant version.
- const T_ & [operator](#)[] (size_t i) const
Operator []: Constant version.
- [Point](#)< T_ > & [operator](#)+= (const [Point](#)< T_ > &p)
Operator +=
- [Point](#)< T_ > & [operator](#)-= (const [Point](#)< T_ > &p)
Operator -=
- [Point](#)< T_ > & [operator](#)= (const T_ &a)
Operator =
- [Point](#)< T_ > & [operator](#)+= (const T_ &a)
Operator +=
- [Point](#)< T_ > & [operator](#)-= (const T_ &a)
Operator -=
- [Point](#)< T_ > & [operator](#)*= (const T_ &a)
*Operator *=*
- [Point](#)< T_ > & [operator](#)/= (const T_ &a)
Operator /=
- bool [operator](#)== (const [Point](#)< T_ > &p)
Operator ==
- bool [operator](#)!= (const [Point](#)< T_ > &p)

- Operator !=*
- double **NNorm** () const
Return squared euclidean norm of vector.
 - double **Norm** () const
Return norm (length) of vector.
 - void **Normalize** ()
Normalize vector.
 - **Point**< double > **Director** (const **Point**< double > &p) const
Return Director (Normalized vector)
 - bool **isCloseTo** (const **Point**< double > &a, double toler=**OFELI_TOLERANCE**) const
Return true if current point is close to instance a (up to tolerance toler)
 - T_ **operator,** (const **Point**< T_ > &p) const
Return Dot (scalar) product of two vectors.

Public Attributes

- T_ **x**
First coordinate.
- T_ **y**
Second coordinate.
- T_ **z**
Third coordinate.

7.88.1 Detailed Description

template<class T_>
class OFELI::Point< T_ >

Defines a point with arbitrary type coordinates.
Operators = and () are overloaded.

Template Parameters

$T \leftrightarrow$	Data type (double, float, complex<double>, ...)
$_{-} \leftrightarrow$	

7.88.2 Constructor & Destructor Documentation

Point (T_ a, T_ b = T_ (0), T_ c = T_ (0))

Constructor that assigns a, b to x-, y- and z-coordinates respectively.
Default values for b and c are 0

7.88.3 Member Function Documentation

T_& operator() (size_t i)

Operator (): Non constant version.
Values i = 1, 2, 3 correspond to x, y and z respectively

const T_& operator() (size_t i) const

Operator (): Constant version.

Values i = 1, 2, 3 correspond to x, y and z respectively

T_& operator[] (size_t i)

Operator []: Non constant version.

Values i = 0, 1, 2 correspond to x, y and z respectively

const T_& operator[] (size_t i) const

Operator []: Constant version.

Values i = 0, 1, 2 correspond to x, y and z respectively

Point<T_>& operator+=(const Point< T_ > & p)

Operator +=

Add point p to current instance

Point<T_>& operator-= (const Point< T_ > & p)

Operator -=

Subtract point p from current instance

Point<T_>& operator= (const T_ & a)

Operator =

Assign constant a to current instance coordinates

Point<T_>& operator+=(const T_ & a)

Operator +=

Add constant a to current instance coordinates

Point<T_>& operator-= (const T_ & a)

Operator -=

Subtract constant a from current instance coordinates

Point<T_>& operator*= (const T_ & a)

Operator *=

Multiply constant a by current instance coordinates

Point<T_>& operator/= (const T_ & a)

Operator /=

Divide current instance coordinates by a

bool operator==(const Point< T_ > & p)

Operator ==

Return true if current instance is equal to p, false otherwise.

bool operator!= (const Point< T_ > & p)

Operator !=

Return false if current instance is equal to p, true otherwise.

void Normalize ()

Normalize vector.

Divide vector components by its 2-norm

bool isCloseTo (const Point< double > & a, double toler = OFELI_TOLERANCE) const

Return true if current point is close to instance a (up to tolerance toler)

Default value for toler is the OFELI_TOLERANCE constant.

T_ operator, (const Point< T_ > & p) const

Return Dot (scalar) product of two vectors.

A typical use of this operator is double a = (p,q) where p and q are 2 instances of Point<double>

Parameters

in	p	Point instance by which the current instance is multiplied
----	---	--

7.89 Point2D< T_ > Class Template Reference

Defines a 2-D point with arbitrary type coordinates.

Public Member Functions

- [Point2D](#) ()
Default constructor.
- [Point2D](#) (T_ a, T_ b=T_(0))
Constructor that assigns a, b to x-, y- and y-coordinates respectively.
- [Point2D](#) (T_ *a)
Initialize point coordinates with C-array a.
- [Point2D](#) (const [Point2D](#)< T_ > &pt)
Copy constructor.
- [Point2D](#) (const [Point](#)< T_ > &pt)
Copy constructor from class Point.
- T_ & [operator](#)() (size_t i)
Operator() : Non constant version.
- const T_ & [operator](#)() (size_t i) const
Operator() : Constant version.
- T_ & [operator](#)[] (size_t i)
Operator []: Non constant version.
- const T_ & [operator](#)[] (size_t i) const
Operator [] Constant version.
- [Point2D](#)< T_ > & [operator](#)= (const [Point2D](#)< T_ > &p)

- Operator =*
- `Point2D< T_ > & operator+=` (const `Point2D< T_ > &p`)
- Operator +=*
- `Point2D< T_ > & operator-=` (const `Point2D< T_ > &p`)
- Operator -=*
- `Point2D< T_ > & operator=` (const `T_ &a`)
- Operator =*
- `Point2D< T_ > & operator+=` (const `T_ &a`)
- Operator +=*
- `Point2D< T_ > & operator-=` (const `T_ &a`)
- Operator -=*
- `Point2D< T_ > & operator*=` (const `T_ &a`)
- Operator *=*
- `Point2D< T_ > & operator/=` (const `T_ &a`)
- Operator /=*
- `bool operator==` (const `Point2D< T_ > &p`)
- Operator ==*
- `bool operator!=` (const `Point2D< T_ > &p`)
- Operator !=*
- `real.t CrossProduct` (const `Point2D< real.t > &lp`, const `Point2D< real.t > &rp`)
- Return Cross product of two vectors lp and rp*
- `real.t NNorm ()` const
- Return squared norm (length) of vector.*
- `real.t Norm ()` const
- Return norm (length) of vector.*
- `Point2D< real.t > Director` (const `Point2D< real.t > &p`) const
- Return Director (Normalized vector)*
- `bool isCloseTo` (const `Point2D< real.t > &a`, `real.t toler=OFELI.TOLERANCE`) const
- Return true if current point is close to instance a (up to tolerance toler)*

Public Attributes

- `T_ x`
First coordinate of point.
- `T_ y`
Second coordinate of point.

7.89.1 Detailed Description

```
template<class T_>
class OFELI::Point2D< T_ >
```

Defines a 2-D point with arbitrary type coordinates.
Operators = and () are overloaded. The actual

Template Parameters

$T \leftrightarrow$	Data type (double, float, complex<double>, ...)
$_ \leftrightarrow$	

7.89.2 Constructor & Destructor Documentation

Point2D (T_ *a*, T_ *b* = T_ (0))

Constructor that assigns *a*, *b* to x-, y- and y-coordinates respectively.
Default value for *b* is 0

7.89.3 Member Function Documentation

T_& operator() (size_t *i*)

Operator() : Non constant version.
Values *i* = 1, 2 correspond to x and y respectively

const T_& operator() (size_t *i*) const

Operator() : Constant version.
Values *i*=1, 2 correspond to x and y respectively

T_& operator[] (size_t *i*)

Operator[] : Non constant version.
Values *i*=0, 1 correspond to x and y respectively

const T_& operator[] (size_t *i*) const

Operator[] Constant version.
Values *i*=0, 1 correspond to x and y respectively

Point2D<T_>& operator= (const Point2D< T_ > & *p*)

Operator =
Assign point *p* to current instance

Point2D<T_>& operator+= (const Point2D< T_ > & *p*)

Operator +=
Add point *p* to current instance

Point2D<T_>& operator-= (const Point2D< T_ > & *p*)

Operator -=
Subtract point *p* from current instance

Point2D<T_>& operator= (const T_ & *a*)

Operator =
Assign constant *a* to current instance coordinates

Point2D<T_>& operator+= (const T_ & a)

Operator +=

Add constant a to current instance coordinates

Point2D<T_>& operator-= (const T_ & a)

Operator -=

Subtract constant a from current instance coordinates

Point2D<T_>& operator*= (const T_ & a)

Operator *=

Multiply constant a by current instance coordinates

Point2D<T_>& operator/= (const T_ & a)

Operator /=

Divide current instance coordinates by a

bool operator== (const Point2D< T_ > & p)

Operator ==

Return true if current instance is equal to p, false otherwise.

bool operator!= (const Point2D< T_ > & p)


Operator !=

Return false if current instance is equal to p, true otherwise.

7.90 Polygon Class Reference

To store and treat a polygonal figure.

Inheritance diagram for Polygon:

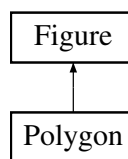

Public Member Functions

- **polygon ()**
Default constructor.
- **Polygon (const Vect< Point< real.t > > &v, int code=1)**
Constructor.
- **void setVertices (const Vect< Point< real.t > > &v)**
Assign vertices of polygon.
- **real.t getSignedDistance (const Point< real.t > &p) const**
Return signed distance of a given point from the current polygon.
- **Polygon & operator+= (Point< real.t > a)**

Operator +=.

- [Polygon](#) & [operator+=](#) ([real.t](#) a)

Operator *.=.

- void [setCode](#) (int code)

Choose a code for the domain defined by the figure.

- void [getSignedDistance](#) (const [Grid](#) &g, [Vect](#)< [real.t](#) > &d) const

Calculate signed distance to current figure with respect to grid points.

- [real.t](#) [dLine](#) (const [Point](#)< [real.t](#) > &p, const [Point](#)< [real.t](#) > &a, const [Point](#)< [real.t](#) > &b) const

Compute signed distance from a line.

7.90.1 Detailed Description

To store and treat a polygonal figure.

7.90.2 Constructor & Destructor Documentation

Polygon (const [Vect](#)< [Point](#)< [real.t](#) > > &*v*, int *code* = 1)

Constructor.

Parameters

in	<i>v</i>	Vect instance containing list of coordinates of polygon vertices
in	<i>code</i>	Code to assign to the generated domain (Default value = 1)

7.90.3 Member Function Documentation

void setVertices (const [Vect](#)< [Point](#)< [real.t](#) > > &*v*)

Assign vertices of polygon.

Parameters

in	<i>v</i>	Vector containing vertices coordinates in counter clockwise order
----	----------	---

[real.t](#) getSignedDistance (const [Point](#)< [real.t](#) > &*p*) const [virtual]

Return signed distance of a given point from the current polygon.

The computed distance is negative if p lies in the polygon, negative if it is outside, and 0 on its boundary

Parameters

in	<i>p</i>	Point <double> instance
----	----------	---

Reimplemented from [Figure](#).

Polygon& operator+= (Point< real.t > a)

Operator +=.

Translate polygon by a vector a

Polygon& operator*= (real.t a)

Operator *.

Scale polygon by a factor a

void getSignedDistance (const Grid &g, Vect< real.t > &d) const [inherited]

Calculate signed distance to current figure with respect to grid points.

Parameters

in	<i>g</i>	Grid instance
in	<i>d</i>	Vect instance containing calculated distance from each grid index to Figure

Remarks

Vector d doesn't need to be sized before invoking this function

real.t dLine (const Point< real.t > &p, const Point< real.t > &a, const Point< real.t > &b) const [inherited]

Compute signed distance from a line.

Parameters

in	<i>p</i>	Point for which distance is computed
in	<i>a</i>	First vertex of line
in	<i>b</i>	Second vertex of line

Returns

Signed distance

7.91 $\text{Prec}<T_>$ Class Template Reference

To set a preconditioner.

Public Member Functions

- [Prec](#) ()
Default constructor.
- [Prec](#) (int type)
Constructor that chooses preconditioner.
- [Prec](#) (const [SpMatrix](#)< $T_$ > &A, int type=[DIAG.PREC](#))
Constructor using matrix of the linear system to precondition.

- **Prec** (const **Matrix**< T_ > *A, int type=**DIAG_PREC**)
Constructor using matrix of the linear system to precondition.
- **~Prec** ()
Destructor.
- void **setType** (int type)
Define preconditioner type.
- void **setMatrix** (const **Matrix**< T_ > *A)
Define pointer to matrix for preconditioning (if this one is abstract)
- void **setMatrix** (const **SpMatrix**< T_ > &A)
Define the matrix for preconditioning.
- void **solve** (**Vect**< T_ > &x) const
Solve a linear system with preconditioning matrix.
- void **solve** (const **Vect**< T_ > &b, **Vect**< T_ > &x) const
Solve a linear system with preconditioning matrix.
- void **TransSolve** (**Vect**< T_ > &x) const
Solve a linear system with transposed preconditioning matrix.
- void **TransSolve** (const **Vect**< T_ > &b, **Vect**< T_ > &x) const
Solve a linear system with transposed preconditioning matrix.
- T_ &**getPivot** (size_t i) const
Return i-th pivot of preconditioning matrix.

7.91.1 Detailed Description

```
template<class T_>
class OFELI::Prec< T_ >
```

To set a preconditioner.

The preconditioner type is chosen in the constructor

Template Parameters

<T_↔ ->	Data type (real_t, float, complex<real_t>, ...)
------------	---

7.91.2 Constructor & Destructor Documentation

Prec (int type)

Constructor that chooses preconditioner.

Parameters

in	<i>type</i>	Preconditioner type: <ul style="list-style-type: none"> • <code>IDENT_PREC</code>: Identity preconditioner (No preconditioning) • <code>DIAG_PREC</code>: Diagonal preconditioner • <code>DILU_PREC</code>: Diagonal Incomplete factorization preconditioner • <code>ILU_PREC</code>: Incomplete factorization preconditioner • <code>SSOR_PREC</code>: SSOR preconditioner
----	-------------	--

`Prec (const SpMatrix< T_ > & A, int type = DIAG_PREC)`

Constructor using matrix of the linear system to precondition.

Parameters

in	<i>A</i>	Matrix to precondition
in	<i>type</i>	Preconditioner type: <ul style="list-style-type: none"> • <code>IDENT_PREC</code>: Identity preconditioner (No preconditioning) • <code>DIAG_PREC</code>: Diagonal preconditioner • <code>DILU_PREC</code>: Diagonal Incomplete factorization preconditioner • <code>ILU_PREC</code>: Incomplete factorization preconditioner • <code>SSOR_PREC</code>: SSOR preconditioner

`Prec (const Matrix< T_ > * A, int type = DIAG_PREC)`

Constructor using matrix of the linear system to precondition.

Parameters

in	<i>A</i>	Pointer to abstract Matrix class to precondition
in	<i>type</i>	Preconditioner type: <ul style="list-style-type: none"> • <code>IDENT_PREC</code>: Identity preconditioner (No preconditioning) • <code>DIAG_PREC</code>: Diagonal preconditioner • <code>DILU_PREC</code>: Diagonal Incomplete factorization preconditioner • <code>ILU_PREC</code>: Incomplete factorization preconditioner • <code>SSOR_PREC</code>: SSOR preconditioner

7.91.3 Member Function Documentation

void setType (int *type*)

Define preconditioner type.

Parameters

in	<i>type</i>	Preconditioner type: <ul style="list-style-type: none"> • IDENT_PREC: Identity preconditioner (No preconditioning) • DIAG_PREC: Diagonal preconditioner • DILU_PREC: Diagonal Incomplete factorization preconditioner • ILU_PREC: Incomplete factorization preconditioner • SSOR_PREC: SSOR preconditioner
----	-------------	---

void setMatrix (const Matrix< T_ > * *A*)

Define pointer to matrix for preconditioning (if this one is abstract)

Parameters

in	<i>A</i>	Matrix to precondition
----	----------	------------------------

void setMatrix (const SpMatrix< T_ > & *A*)

Define the matrix for preconditioning.

Parameters

in	<i>A</i>	Matrix to precondition (instance of class SpMatrix)
----	----------	--

void solve (Vect< T_ > & *x*) const

Solve a linear system with preconditioning matrix.

Parameters

in, out	<i>x</i>	Right-hand side on input and solution on output.
---------	----------	--

void solve (const Vect< T_ > & *b*, Vect< T_ > & *x*) const

Solve a linear system with preconditioning matrix.

Parameters

in	b	Right-hand side
out	x	Solution vector

void TransSolve (Vect< T_ > & x) const

Solve a linear system with transposed preconditioning matrix.

Parameters

in,out	x	Right-hand side in input and solution in output.
--------	-----	--

void TransSolve (const Vect< T_ > & b , Vect< T_ > & x) const

Solve a linear system with transposed preconditioning matrix.

Parameters

in	b	Right-hand side vector
out	x	Solution vector

7.92 Prescription Class Reference

To prescribe various types of data by an algebraic expression. Data may consist in boundary conditions, forces, tractions, fluxes, initial condition. All these data types can be defined through an enumerated variable.

Public Member Functions

- [Prescription](#) ()
Default constructor.
- [Prescription](#) ([Mesh](#) &mesh, const string &file)
Constructor that gives an instance of class [Mesh](#) and the data file name.
- [~Prescription](#) ()
Destructor.
- int [get](#) (int type, Vect< [real.t](#) > &v, [real.t](#) time=0, size_t dof=0)

7.92.1 Detailed Description

To prescribe various types of data by an algebraic expression. Data may consist in boundary conditions, forces, tractions, fluxes, initial condition. All these data types can be defined through an enumerated variable.

7.92.2 Constructor & Destructor Documentation

Prescription (Mesh & *mesh*, const string & *file*)

Constructor that gives an instance of class [Mesh](#) and the data file name.

It reads parameters in [Prescription](#) Format from this file.

Parameters

in	<i>mesh</i>	Mesh instance
in	<i>file</i>	Name of Prescription file

7.92.3 Member Function Documentation

int get (int *type*, Vect< real.t > & *v*, real.t *time* = 0, size.t *dof* = 0)

Read data in the given file and stores in a [Vect](#) instance for a chosen DOF. The input value type determines the type of data to read.


Parameters

in	<i>type</i>	Type of data to seek. To choose among the enumerated values: <ul style="list-style-type: none"> • BOUNDARY_CONDITION: Read values for (Dirichlet) boundary conditions • BOUNDARY_FORCE: Read values for boundary force (Neumann boundary condition). The values TRACTION and FLUX have the same effect. • BODY_FORCE: Read values for body (or volume) forces. The value SOURCE has the same effect. • POINT_FORCE: Read values for pointwise forces • INITIAL_FIELD: Read values for initial solution
in,out	<i>v</i>	Vect instance that is instantiated on input and filled on output
in	<i>time</i>	Value of time for which data is read [Default: 0].
in	<i>dof</i>	DOF to store (Default is 0: All DOFs are chosen).

7.93 Quad4 Class Reference

Defines a 4-node quadrilateral finite element using Q_1 isoparametric interpolation.

Inheritance diagram for Quad4:

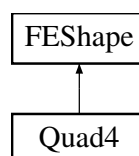

Public Member Functions

- `Quad4 ()`
Default Constructor.
- `Quad4 (const Element *element)`
Constructor when data of `Element` `el` are given.
- `Quad4 (const Side *side)`
Constructor when data of `Side` `sd` are given.
- `~Quad4 ()`
Destructor.
- `void set (const Element *el)`
Choose element by giving its pointer.
- `void set (const Side *sd)`
Choose side by giving its pointer.
- `void setLocal (const Point< real_t > &s)`
Initialize local point coordinates in element.
- `Point< real_t > DSh (size_t i) const`
Return derivatives of shape function of node `i` at a given point.
- `Point< real_t > Grad (const LocalVect< real_t, 4 > &u, const Point< real_t > &s)`
Return gradient of a function defined at element nodes.
- `real_t getMaxEdgeLength () const`
Return maximal edge length of quadrilateral.
- `real_t getMinEdgeLength () const`
Return minimal edge length of quadrilateral.
- `real_t Sh (size_t i) const`
Return shape function of node `i` at given point.
- `real_t Sh (size_t i, Point< real_t > s) const`
Calculate shape function of node `i` at a given point `s`.
- `real_t getDet () const`
Return determinant of jacobian.
- `Point< real_t > getCenter () const`
Return coordinates of center of element.
- `Point< real_t > getLocalPoint () const`
Localize a point in the element.
- `Point< real_t > getLocalPoint (const Point< real_t > &s) const`
Localize a point in the element.

7.93.1 Detailed Description

Defines a 4-node quadrilateral finite element using Q_1 isoparametric interpolation.

The reference element is the square $[-1, 1] \times [-1, 1]$. The user must take care to the fact that determinant of jacobian and other quantities depend on the point in the reference element where they are calculated. For this, before any utilization of shape functions or jacobian, function `setLocal()` must be invoked.

7.93.2 Constructor & Destructor Documentation

`Quad4 (const Element * element)`

Constructor when data of `Element` `el` are given.

Parameters

in	<i>element</i>	Pointer to Element
----	----------------	------------------------------------

Quad4 (const Side * *side*)

Constructor when data of [Side](#) sd are given.

Parameters

in	<i>side</i>	Pointer to Side
----	-------------	---------------------------------

7.93.3 Member Function Documentation

void setLocal (const Point< real_t > & s)

Initialize local point coordinates in element.

Parameters

in	<i>s</i>	Point in the reference element This function computes jacobian, shape functions and their partial derivatives at s. Other member functions only return these values.
----	----------	--

Point<real_t> DSh (size_t *i*) const

Return derivatives of shape function of node *i* at a given point.

Member function [setLocal\(\)](#) must have been called before in order to calculate relevant quantities.

Point<real_t> Grad (const LocalVect< real_t, 4 > & *u*, const Point< real_t > & s)

Return gradient of a function defined at element nodes.

Parameters

in	<i>u</i>	Vector of values at nodes
in	<i>s</i>	Local coordinates (in [-1,1]) of point where the gradient is evaluated

Returns

Value of gradient

Note

If the derivatives of shape functions were not computed before calling this function (by calling [setLocal](#)), this function will compute them

real_t Sh (size_t *i*, Point< real_t > s) const [inherited]

Calculate shape function of node *i* at a given point *s*.

Parameters

in	<i>i</i>	Local node label
in	<i>s</i>	Point in the reference triangle where the shape function is evaluated

real_t getDet () const [inherited]

Return determinant of jacobian.

If the transformation (Reference element -> Actual element) is not affine, member function **setLocal()** must have been called before in order to calculate relevant quantities.

Point<real_t> getLocalPoint () const [inherited]

Localize a point in the element.

Return actual coordinates in the reference element. If the transformation (Reference element -> Actual element) is not affine, member function **setLocal()** must have been called before in order to calculate relevant quantities.

Point<real_t> getLocalPoint (const Point< real_t > &s) const [inherited]

Localize a point in the element.

Return actual coordinates where s are coordinates in the reference element.

7.94 Reconstruction Class Reference

To perform various reconstruction operations.

Public Member Functions

- [Reconstruction](#) ()
Default constructor.
- [Reconstruction](#) (const [Mesh](#) &ms)
Constructor using a reference to a [Mesh](#) instance.
- [~Reconstruction](#) ()
Destructor.
- void [setMesh](#) ([Mesh](#) &ms)
Provide [Mesh](#) instance.
- void [P0toP1](#) (const [Vect](#)< [real_t](#) > &u, [Vect](#)< [real_t](#) > &v)
Smooth an elementwise field to obtain a nodewise field by L^2 projection.
- void [DP1toP1](#) (const [Vect](#)< [real_t](#) > &u, [Vect](#)< [real_t](#) > &v)
Smooth an Discontinuous P1 field to obtain a nodewise (Continuous P₁) field by L^2 projection.

7.94.1 Detailed Description

To perform various reconstruction operations.

This class enables various reconstruction operations like smoothing, projections, ...

7.94.2 Member Function Documentation

void P0toP1 (const Vect< real_t > & *u*, Vect< real_t > & *v*)

Smooth an elementwise field to obtain a nodewise field by L^2 projection.

Parameters

in	u	Vect instance that contains field to smooth
out	v	Vect instance that contains on output smoothed field

void DP1toP1 (const [Vect](#)< [real.t](#) > & u , [Vect](#)< [real.t](#) > & v)

Smooth an Discontinuous P1 field to obtain a nodewise (Continuous P₁) field by L² projection.

Parameters

in	u	Vect instance that contains field to smooth
out	v	Vect instance that contains on output smoothed field


Warning

This function is valid for P₁ triangles (2-D) only.

7.95 Rectangle Class Reference

To store and treat a rectangular figure.

Inheritance diagram for Rectangle:

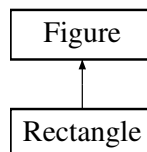

Public Member Functions

- [Rectangle](#) ()
Default constructor.
- [Rectangle](#) (const [Point](#)< [real.t](#) > &bbm, const [Point](#)< [real.t](#) > &bbM, int code=1)
Constructor.
- void [setBoundingBox](#) (const [Point](#)< [real.t](#) > &bbm, const [Point](#)< [real.t](#) > &bbM)
Assign bounding box of the rectangle.
- [Point](#)< [real.t](#) > [getBoundingBox1](#) () const
Return first point of bounding box.
- [Point](#)< [real.t](#) > [getBoundingBox2](#) () const
Return second point of bounding box.
- [real.t](#) [getSignedDistance](#) (const [Point](#)< [real.t](#) > &p) const
Return signed distance of a given point from the current rectangle.
- [Rectangle](#) & [operator+=](#) ([Point](#)< [real.t](#) > a)
Operator +=.
- [Rectangle](#) & [operator+=](#) ([real.t](#) a)
*Operator *+=.*

- void `setCode` (int code)
Choose a code for the domain defined by the figure.
- void `getSignedDistance` (const `Grid` &g, `Vect`< `real.t` > &d) const
Calculate signed distance to current figure with respect to grid points.
- `real.t dLine` (const `Point`< `real.t` > &p, const `Point`< `real.t` > &a, const `Point`< `real.t` > &b) const
Compute signed distance from a line.

7.95.1 Detailed Description

To store and treat a rectangular figure.

7.95.2 Constructor & Destructor Documentation

Rectangle (const `Point`< `real.t` > &*bbm*, const `Point`< `real.t` > &*bbM*, int *code* = 1)

Constructor.

Parameters

in	<i>bbm</i>	Left Bottom point of rectangle
in	<i>bbM</i>	Right Top point of rectangle
in	<i>code</i>	Code to assign to rectangle

7.95.3 Member Function Documentation

void setBoundingBox (const `Point`< `real.t` > &*bbm*, const `Point`< `real.t` > &*bbM*)

Assign bounding box of the rectangle.

Parameters

in	<i>bbm</i>	Left Bottom point
in	<i>bbM</i>	Right Top point

`real.t getSignedDistance` (const `Point`< `real.t` > &*p*) const [virtual]

Return signed distance of a given point from the current rectangle.

The computed distance is negative if *p* lies in the rectangle, negative if it is outside, and 0 on its boundary

Parameters

in	<i>p</i>	<code>Point</code> <double> instance
----	----------	--------------------------------------

Reimplemented from [Figure](#).

Rectangle& operator+= (Point< real_t > a)

Operator +=.

Translate rectangle by a vector a

Rectangle& operator+= (real_t a)

Operator *+=.

Scale rectangle by a factor a

void getSignedDistance (const Grid & g, Vect< real_t > & d) const [inherited]

Calculate signed distance to current figure with respect to grid points.

Parameters

in	<i>g</i>	Grid instance
in	<i>d</i>	Vect instance containing calculated distance from each grid index to Figure

Remarks

Vector d doesn't need to be sized before invoking this function

real_t dLine (const Point< real_t > & p, const Point< real_t > & a, const Point< real_t > & b) const [inherited]

Compute signed distance from a line.

Parameters

in	<i>p</i>	Point for which distance is computed
in	<i>a</i>	First vertex of line
in	<i>b</i>	Second vertex of line

Returns

Signed distance

7.96 Side Class Reference

To store and treat finite element sides (edges in 2-D or faces in 3-D)

Public Types

Public Member Functions

- [Side](#) ()
Default Constructor.
- [Side](#) (size_t label, const string &shape)
Constructor initializing side label and shape.
- [Side](#) (size_t label, int shape)

- Constructor initializing side label and shape.
- `Side (const Side &sd)`
 - Copy constructor.
- `~Side ()`
 - Destructor.
- `void Add (Node *node)`
 - Insert a node at end of list of nodes of side.
- `void Add (Edge *edge)`
 - Insert an edge at end of list of edges of side.
- `void setLabel (size_t i)`
 - Define label of side.
- `void setFirstDOF (size_t n)`
 - Define First DOF.
- `void setNbDOF (size_t nb_dof)`
 - Set number of degrees of freedom (DOF).
- `void DOF (size_t i, size_t dof)`
 - Define label of DOF.
- `void setDOF (size_t &first_dof, size_t nb_dof)`
 - Define number of DOF.
- `void setCode (size_t dof, int code)`
 - Assign code to a DOF.
- `void setCode (const string &exp, int code, size_t dof=1)`
 - Define code by a boolean algebraic expression invoking coordinates of side nodes.
- `void Replace (size_t label, Node *node)`
 - Replace a node at a given local label.
- `void Add (Element *el)`
 - Set pointer to neighbor element.
- `void set (Element *el, size_t i)`
 - Set pointer to neighbor element.
- `void setNode (size_t i, Node *node)`
 - Assign a node given by its pointer as the *i*-th node of side.
- `void setOnBoundary ()`
 - Say that the side is on the boundary.
- `int getShape () const`
 - Return side's shape.
- `size_t getLabel () const`
 - Return label of side.
- `size_t n () const`
 - Return label of side.
- `size_t getNbNodes () const`
 - Return number of side nodes.
- `size_t getNbVertices () const`
 - Return number of side vertices.
- `size_t getNbEq () const`
 - Return number of side equations.
- `size_t getNbDOF () const`

- Return number of DOF.*

 - `int getCode (size_t dof=1) const`
Return code for a given DOF of node.
 - `size_t getDOF (size_t i) const`
Return label of i -th dof.
 - `size_t getFirstDOF () const`
Return label of first dof of node.
 - `Node * getPtrNode (size_t i) const`
Return pointer to node of local label i .
 - `Node * operator() (size_t i) const`
Operator ().
 - `size_t getNodeLabel (size_t i) const`
Return global label of node with given local label.
 - `Element * getNeighborElement (size_t i) const`
Return pointer to i -th side neighboring element.
 - `Element * getOtherNeighborElement (Element *el) const`
Return pointer to other neighboring element than given one.
 - `Point< real_t > getNormal () const`
Return normal vector to side.
 - `Point< real_t > getUnitNormal () const`
Return unit normal vector to side.
 - `int isOnBoundary () const`
Boundary side or not.
 - `int isReferenced ()`
Say if side has a nonzero code or not.
 - `real_t getMeasure () const`
Return measure of side.
 - `size_t Contains (const Node *nd) const`
Say if a given node belongs to current side.
 - `void setActive (bool opt=true)`
Set side is active (default) or not if argument is `false`
 - `bool isActive () const`
Return `true` or `false` whether side is active or not.
 - `int getLevel () const`
Return side level Side level increases when side is refined (starting from 0). If the level is 0, then the element has no father.
 - `void setChild (Side *sd)`
Assign side as child of current one and assign current side as father.
 - `Side * getParent () const`
Return pointer to parent side Return null if no parent.
 - `Side * getChild (size_t i) const`
Return pointer to i -th child side Returns null pointer is no childs.
 - `size_t getNbChilds () const`
Return number of children of side.

7.96.1 Detailed Description

To store and treat finite element sides (edges in 2-D or faces in 3-D)

Defines a side of a finite element mesh. The sides are given in particular by their shapes and a list of nodes. Each node can be accessed by the member function [getPtrNode\(\)](#). The string defining the element shape must be chosen according to the following list:

7.96.2 Member Enumeration Documentation

enum SideType

To select side type (boundary side or not).

Enumerator

INTERNAL_SIDE Internal side

EXTERNAL_BOUNDARY [Side](#) on external boundary

INTERNAL_BOUNDARY [Side](#) on internal boundary

7.96.3 Constructor & Destructor Documentation

Side (*size_t label*, *const string & shape*)

Constructor initializing side label and shape.

Parameters

in	<i>label</i>	Label to assign to side.
in	<i>shape</i>	Shape of side (See class description).

Side (*size_t label*, *int shape*)

Constructor initializing side label and shape.

Parameters

in	<i>label</i>	to assign to side.
in	<i>shape</i>	of side (See enum ElementShape in Mesh).

7.96.4 Member Function Documentation

void DOF (*size_t i*, *size_t dof*)

Define label of DOF.

Parameters

in	<i>i</i>	DOF index
in	<i>dof</i>	Its label

void setDOF (size_t &first_dof, size_t nb_dof)

Define number of DOF.

Parameters

in,out	<i>first_dof</i>	Label of the first DOF in input that is actualized
in	<i>nb_dof</i>	Number of DOF

void setCode (size_t dof, int code)

Assign code to a DOF.

Parameters

in	<i>dof</i>	DOF to which code is assigned
in	<i>code</i>	Code to assign

void setCode (const string &exp, int code, size_t dof = 1)

Define code by a boolean algebraic expression invoking coordinates of side nodes.

Parameters

in	<i>exp</i>	Boolean algebraic expression as required by fparser
in	<i>code</i>	Code to assign to node if the algebraic expression is true
in	<i>dof</i>	Degree of Freedom for which code is assigned [Default: 1]

void Add (Element * el)

Set pointer to neighbor element.

Parameters

in	<i>el</i>	Pointer to element to add as a neighbor element
----	-----------	---

Remarks

This function adds the pointer *el* only if this one is not a null pointer

void set (Element * el, size_t i)

Set pointer to neighbor element.

Parameters

in	<i>el</i>	Pointer to element to set as a neighbor element
in	<i>i</i>	Local number of neighbor element

Remarks

This function differs from the Add by the fact that the local label of neighbor element is given

int getCode (size_t dof = 1) const

Return code for a given DOF of node.

Parameters

in	dof	Local label of degree of freedom. [Default: 1]
----	-----	--

Node* operator() (size_t i) const

Operator ().

Return pointer to node of local label i.

Element* getNeighborElement (size_t i) const

Return pointer to i-th side neighboring element.

Parameters

in	i	Local label of neighbor element (must be equal to 1 or 2).
----	---	--

Element* getOtherNeighborElement (Element * el) const

Return pointer to other neighboring element than given one.

Parameters

in	el	Pointer to a given neighbor element
----	----	-------------------------------------

Remarks

If the side is on the boundary this function returns null pointer

Point<real_t> getNormal () const

Return normal vector to side.

The normal vector is oriented from the first neighbor element to the second one.

Warning

The norm of this vector is equal to the measure of the side (length of the edge in 2-D and area of the face in 3-D), and To get the unit normal, use rather the member function get←UnitNormal.

Point<real_t> getUnitNormal () const

Return unit normal vector to side.

The unit normal vector is oriented from the first neighbor element to the second one.

Remarks

The norm of this vector is equal to one.

int isOnBoundary () const

Boundary side or not.

Returns 1 or -1 if side is on boundary Depending on whether the first or the second neighbor element is defined Returns 0 if side is an inner one

Remarks

This member function is valid only if member function [Mesh::getAllSides\(\)](#) or [Mesh::getBoundarySides\(\)](#) has been called before.

real_t getMeasure () const

Return measure of side.

This member function returns length or area of side. In case of quadrilaterals it returns determinant of Jacobian of mapping between reference and actual side

size_t Contains (const Node * nd) const

Say if a given node belongs to current side.

Parameters

in	<i>nd</i>	Pointer to searched node
----	-----------	--------------------------

Returns

index (local label) of node if found, 0 if not

void setChild (Side * sd)

Assign side as child of current one and assign current side as father.

This function is principally used when refining is invoked (*e.g.* for mesh adaption)

Parameters

in	<i>sd</i>	Pointer to side to assign
----	-----------	---------------------------

7.97 SideList Class Reference

Class to construct a list of sides having some common properties.

Public Member Functions

- [SideList](#) ([Mesh](#) &ms)
Constructor using a [Mesh](#) instance.
- [~SideList](#) ()
Destructor.
- void [selectCode](#) (int code, int dof=1)
Select sides having a given code for a given degree of freedom.
- void [unselectCode](#) (int code, int dof=1)
Unselect sides having a given code for a given degree of freedom.
- size_t [getNbSides](#) () const
Return number of selected sides.
- void [top](#) ()
Reset list of sides at its top position (Non constant version)
- void [top](#) () const
Reset list of sides at its top position (Constant version)
- [Side](#) * [get](#) ()
Return pointer to current side and move to next one (Non constant version)
- [Side](#) * [get](#) () const
Return pointer to current side and move to next one (Constant version)

7.97.1 Detailed Description

Class to construct a list of sides having some common properties.

This class enables choosing multiple selection criteria by using function `select...`. However, the intersection of these properties must be empty.

7.97.2 Member Function Documentation

void selectCode (int code, int dof = 1)

Select sides having a given code for a given degree of freedom.

Parameters

in	<i>code</i>	Code that sides share
in	<i>dof</i>	Degree of Freedom label [Default: 1]

void unselectCode (int code, int dof = 1)

Unselect sides having a given code for a given degree of freedom.


Parameters

in	<i>code</i>	Code of sides to exclude
in	<i>dof</i>	Degree of Freedom label [Default: 1]

7.98 SkMatrix< T_ > Class Template Reference

To handle square matrices in skyline storage format.

Inheritance diagram for SkMatrix< T_ >:

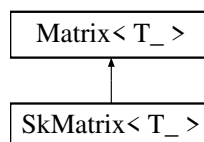

Public Member Functions

- [SkMatrix](#) ()
Default constructor.
- [SkMatrix](#) (size_t size, int is_diagonal=false)
Constructor that initializes a dense symmetric matrix.
- [SkMatrix](#) (Mesh &mesh, size_t dof=0, int is_diagonal=false)
Constructor using mesh to initialize skyline structure of matrix.
- [SkMatrix](#) (const Vect< size_t > &ColHt)
Constructor that initializes skyline structure of matrix using vector of column heights.
- [SkMatrix](#) (const SkMatrix< T_ > &m)
Copy Constructor.
- [~SkMatrix](#) ()
Destructor.
- void [setMesh](#) (Mesh &mesh, size_t dof=0)
Determine mesh graph and initialize matrix.
- void [setSkyline](#) (Mesh &mesh)
Determine matrix structure.
- void [setDiag](#) ()
Store diagonal entries in a separate internal vector.
- void [setDOF](#) (size_t i)
Choose DOF to activate.
- void [set](#) (size_t i, size_t j, const T_ &val)
Assign a value to an entry of the matrix.
- void [Axy](#) (T_ a, const SkMatrix< T_ > &m)
Add to matrix the product of a matrix by a scalar.
- void [Axy](#) (T_ a, const Matrix< T_ > *m)
Add to matrix the product of a matrix by a scalar.
- void [MultAdd](#) (const Vect< T_ > &x, Vect< T_ > &y) const
Multiply matrix by vector x and add to y.
- void [TMultAdd](#) (const Vect< T_ > &x, Vect< T_ > &y) const
Multiply transpose of matrix by vector x and add to y.
- void [MultAdd](#) (T_ a, const Vect< T_ > &x, Vect< T_ > &y) const
Multiply matrix by a vector and add to another one.
- void [Mult](#) (const Vect< T_ > &x, Vect< T_ > &y) const
Multiply matrix by vector x and save in y.
- void [TMult](#) (const Vect< T_ > &x, Vect< T_ > &y) const

- Multiply transpose of matrix by vector x and save in y .*
- void [add](#) (size_t i, size_t j, const T_ &val)
Add a constant value to an entry of the matrix.
- size_t [getColHeight](#) (size_t i) const
Return column height.
- T_ [operator\(\)](#) (size_t i, size_t j) const
Operator () (Constant version).
- T_ & [operator\(\)](#) (size_t i, size_t j)
Operator () (Non constant version).
- void [DiagPrescribe](#) (Mesh &mesh, Vect< T_ > &b, const Vect< T_ > &u, int flag=0)
Impose an essential boundary condition.
- void [DiagPrescribe](#) (Vect< T_ > &b, const Vect< T_ > &u, int flag=0)
Impose an essential boundary condition using the [Mesh](#) instance provided by the constructor.
- SkMatrix< T_ > & [operator=](#) (const SkMatrix< T_ > &m)
Operator =.
- SkMatrix< T_ > & [operator=](#) (const T_ &x)
Operator =.
- SkMatrix< T_ > & [operator+=](#) (const SkMatrix< T_ > &m)
Operator +=.
- SkMatrix< T_ > & [operator+=](#) (const T_ &x)
Operator +=.
- SkMatrix< T_ > & [operator*=](#) (const T_ &x)
*Operator *=.*
- int [setLU](#) ()
Factorize the matrix (LU factorization)
- int [solve](#) (Vect< T_ > &b)
Solve linear system.
- int [solve](#) (const Vect< T_ > &b, Vect< T_ > &x)
Solve linear system.
- T_ * [get](#) () const
Return C-Array.
- T_ [get](#) (size_t i, size_t j) const
Return entry (i, j) of matrix if this one is stored, 0 else.
- size_t [getNbRows](#) () const
Return number of rows.
- size_t [getNbColumns](#) () const
Return number of columns.
- void [setPenal](#) (real_t p)
Set Penalty Parameter (For boundary condition prescription).
- void [setDiagonal](#) ()
Set the matrix as diagonal.
- void [setDiagonal](#) (Mesh &mesh)
Initialize matrix storage in the case where only diagonal terms are stored.
- T_ [getDiag](#) (size_t k) const
Return k -th diagonal entry of matrix.
- size_t [size](#) () const

- Return matrix dimension (Number of rows and columns).*

 - void `Assembly` (const `Element` &el, `T_` *a)

Assembly of element matrix into global matrix.
- void `Assembly` (const `Element` &el, const `DMatrix`< `T_` > &a)

Assembly of element matrix into global matrix.
- void `Assembly` (const `Side` &sd, `T_` *a)

Assembly of side matrix into global matrix.
- void `Assembly` (const `Side` &sd, const `DMatrix`< `T_` > &a)

Assembly of side matrix into global matrix.
- void `Prescribe` (`Vect`< `T_` > &b, const `Vect`< `T_` > &u, int flag=0)

Impose by a penalty method an essential boundary condition, using the `Mesh` instance provided by the constructor.
- void `Prescribe` (int dof, int code, `Vect`< `T_` > &b, const `Vect`< `T_` > &u, int flag=0)

Impose by a penalty method an essential boundary condition to a given degree of freedom for a given code.
- void `Prescribe` (`Vect`< `T_` > &b, int flag=0)

Impose by a penalty method a homogeneous (=0) essential boundary condition.
- void `Prescribe` (size_t dof, `Vect`< `T_` > &b, const `Vect`< `T_` > &u, int flag=0)

Impose by a penalty method an essential boundary condition when only one DOF is treated.
- void `PrescribeSide` ()

Impose by a penalty method an essential boundary condition when DOFs are supported by sides.
- virtual int `Factor` ()=0

Factorize matrix. Available only if the storage class enables it.
- int `FactorAndSolve` (`Vect`< `T_` > &b)

Factorize matrix and solve the linear system.
- int `FactorAndSolve` (const `Vect`< `T_` > &b, `Vect`< `T_` > &x)

Factorize matrix and solve the linear system.
- size_t `getLength` () const

Return number of stored terms in matrix.
- int `isDiagonal` () const

Say if matrix is diagonal or not.
- int `isFactorized` () const

Say if matrix is factorized or not.
- virtual size_t `getColInd` (size_t i) const

Return Column index for column i (See the description for class `SpMatrix`).
- virtual size_t `getRowPtr` (size_t i) const

Return Row pointer for row i (See the description for class `SpMatrix`).
- `T_` `operator()` (size_t i) const

Operator () with one argument (Constant version).
- `T_` & `operator()` (size_t i)

Operator () with one argument (Non Constant version).
- `T_` & `operator[]` (size_t k)

Operator [] (Non constant version).
- `T_` `operator[]` (size_t k) const

Operator [] (Constant version).
- `Matrix` & `operator+=` (const `Matrix`< `T_` > &m)

Operator +=.
- `Matrix` & `operator-=` (const `Matrix`< `T_` > &m)

- Operator `--`.
- [Matrix](#) & operator `--` (const T_ &x)
- Operator `--`.

7.98.1 Detailed Description

```
template<class T_>
class OFELI::SkMatrix< T_ >
```

To handle square matrices in skyline storage format.
This template class allows storing and manipulating a matrix in skyline storage format.
The matrix entries are stored in 2 vectors column by column as in the following example:

/										\	/									\
	10				.							u0	u1	0	0		u7			
	11	12			.								u2	u3	0		u8			
	0	13	14			u4	u5		u9			
	0	0	15	16											u6	u10				
	17	18	19	110	111												u11			
\						/				\								/		\

Template Parameters

T_{\leftrightarrow}	Data type (double, float, complex<double>, ...)
$_{\leftrightarrow}$	

7.98.2 Constructor & Destructor Documentation

SkMatrix ()

Default constructor.
Initializes a zero-dimension matrix

SkMatrix (size.t size, int is_diagonal = false)

Constructor that initializes a dense symmetric matrix.
Normally, for a dense matrix this is not the right class.

Parameters

in	size	Number of matrix rows (and columns).
in	is_diagonal	Boolean to select if the matrix is diagonal or not [Default: false]

SkMatrix (Mesh & mesh, size.t dof = 0, int is_diagonal = false)

Constructor using mesh to initialize skyline structure of matrix.

Parameters

in	mesh	Mesh instance for which matrix graph is determined.
----	------	---

Parameters

in	<i>dof</i>	Option parameter, with default value 0. dof=1 means that only one degree of freedom for each node (or element or side) is taken to determine matrix structure. The value dof=0 means that matrix structure is determined using all DOFs.
in	<i>is_diagonal</i>	Boolean argument to say is the matrix is actually a diagonal matrix or not.

SkMatrix (const Vect< size_t > & ColHt)

Constructor that initializes skyline structure of matrix using vector of column heights.

Parameters

in	<i>ColHt</i>	Vect instance that contains rows lengths of matrix.
----	--------------	---

7.98.3 Member Function Documentation

void setMesh (Mesh & mesh, size_t dof = 0)

Determine mesh graph and initialize matrix.

This member function is called by constructor with the same arguments

Parameters

in	<i>mesh</i>	Mesh instance for which matrix graph is determined.
in	<i>dof</i>	Option parameter, with default value 0. dof=1 means that only one degree of freedom for each node (or element or side) is taken to determine matrix structure. The value dof=0 means that matrix structure is determined using all DOFs.

void setSkyline (Mesh & mesh)

Determine matrix structure.

This member function calculates matrix structure using a [Mesh](#) instance.

Parameters

in	<i>mesh</i>	Mesh instance
----	-------------	-------------------------------

void setDOF (size_t i)

Choose DOF to activate.

This function is available only if variable dof is equal to 1 in the constructor

Parameters

in	<i>i</i>	Index of the DOF
----	----------	------------------

void set (size_t *i*, size_t *j*, const T_ & *val*) [virtual]

Assign a value to an entry of the matrix.

Parameters

in	<i>i</i>	Row index (starting at i=1)
in	<i>j</i>	Column index (starting at i=1)
in	<i>val</i>	Value to assign to entry a(i,j)

Implements [Matrix< T_ >](#).

void Axy (T_ *a*, const SkMatrix< T_ > & *m*)

Add to matrix the product of a matrix by a scalar.

Parameters

in	<i>a</i>	Scalar to premultiply
in	<i>m</i>	Matrix by which a is multiplied. The result is added to current instance

void Axy (T_ *a*, const Matrix< T_ > * *m*) [virtual]

Add to matrix the product of a matrix by a scalar.

Parameters

in	<i>a</i>	Scalar to premultiply
in	<i>m</i>	Matrix by which a is multiplied. The result is added to current instance

Implements [Matrix< T_ >](#).

void MultAdd (const Vect< T_ > & *x*, Vect< T_ > & *y*) const [virtual]

Multiply matrix by vector x and add to y.

Parameters

in	<i>x</i>	Vector to multiply by matrix
in,out	<i>y</i>	Vector to add to the result. y contains on output the result.

Implements [Matrix< T_ >](#).

void TMultAdd (const Vect< T_ > & *x*, Vect< T_ > & *y*) const

Multiply transpose of matrix by vector x and add to y.

Parameters

in	<i>x</i>	Vector to multiply by matrix
----	----------	------------------------------

Parameters

in,out	<i>y</i>	Vector to add to the result. <i>y</i> contains on output the result.
--------	----------	--

void MultAdd (T_ *a*, const Vect< T_ > &*x*, Vect< T_ > &*y*) const [virtual]

Multiply matrix by a vector and add to another one.

Parameters

in	<i>a</i>	Constant to multiply by matrix
in	<i>x</i>	Vector to multiply by matrix
in,out	<i>y</i>	Vector to add to the result. <i>y</i> contains on output the result.

Implements [Matrix< T_ >](#).

void Mult (const Vect< T_ > &*x*, Vect< T_ > &*y*) const [virtual]

Multiply matrix by vector *x* and save in *y*.

Parameters

in	<i>x</i>	Vector to multiply by matrix
out	<i>y</i>	Vector that contains on output the result.

Implements [Matrix< T_ >](#).

void TMult (const Vect< T_ > &*x*, Vect< T_ > &*y*) const [virtual]

Multiply transpose of matrix by vector *x* and save in *y*.

Parameters

in	<i>x</i>	Vector to multiply by matrix
out	<i>y</i>	Vector that contains on output the result.

Implements [Matrix< T_ >](#).

void add (size_t *i*, size_t *j*, const T_ &*val*) [virtual]

Add a constant value to an entry of the matrix.

Parameters

in	<i>i</i>	Row index
in	<i>j</i>	Column index
in	<i>val</i>	Constant value to add to a(<i>i</i> , <i>j</i>)

Implements [Matrix< T_ >](#).

size_t getColHeight (size_t i) const

Return column height.

Column height at entry i is returned.

T_ operator() (size_t i, size_t j) const [virtual]

Operator () (Constant version).

Parameters

in	<i>i</i>	Row index
in	<i>j</i>	Column index

Implements [Matrix< T_ >](#).

T_& operator() (size_t i, size_t j) [virtual]

Operator () (Non constant version).

Parameters

in	<i>i</i>	Row index
in	<i>j</i>	Column index

Implements [Matrix< T_ >](#).

void DiagPrescribe (Mesh & mesh, Vect< T_ > & b, const Vect< T_ > & u, int flag = 0)

Impose an essential boundary condition.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. It can be modified by member function **setPenal**(..).

Parameters

in	<i>mesh</i>	Mesh instance from which information is extracted.
in	<i>b</i>	Vect instance that contains right-hand side.
in	<i>u</i>	Vect instance that contains imposed values at DOFs where they are to be imposed.
in	<i>flag</i>	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).

void DiagPrescribe (Vect< T_ > & b, const Vect< T_ > & u, int flag = 0)

Impose an essential boundary condition using the [Mesh](#) instance provided by the constructor.

This member function modifies diagonal terms in matrix and terms in vector that correspond

to degrees of freedom with nonzero code in order to impose a boundary condition. It can be modified by member function **setPenal**(..).

Parameters

in	<i>b</i>	Vect instance that contains right-hand side.
in	<i>u</i>	Vect instance that contains imposed values at DOFs where they are to be imposed.
in	<i>flag</i>	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).

SkMatrix<T_>& operator= (const SkMatrix< T_ > & m)

Operator =.

Copy matrix *m* to current matrix instance.

SkMatrix<T_>& operator= (const T_ & x)

Operator =.

define the matrix as a diagonal one with all diagonal entries equal to *x*.

SkMatrix<T_>& operator+= (const SkMatrix< T_ > & m)

Operator +=.

Add matrix *m* to current matrix instance.

SkMatrix<T_>& operator+= (const T_ & x)

Operator +=.

Add constant value *x* to matrix entries.

SkMatrix<T_>& operator*= (const T_ & x)

Operator *.

Premultiply matrix entries by constant value *x*.

int setLU ()

Factorize the matrix (LU factorization)

LU factorization of the matrix is realized. Note that since this is an in place factorization, the contents of the matrix are modified.

Returns

- 0 if factorization was normally performed,
- *n* if the *n*-th pivot is null.

Remarks

A flag in this class indicates after factorization that this one has been realized, so that, if the member function **solve** is called after this no further factorization is done.

int solve (Vect< T_ > & b) [virtual]

Solve linear system.

The linear system having the current instance as a matrix is solved by using the LU decomposition. Solution is thus realized after a factorization step and a forward/backward substitution step. The factorization step is realized only if this was not already done.

Note that this function modifies the matrix contents is a factorization is performed. Naturally, if the the matrix has been modified after using this function, the user has to refactorize it using the function setLU. This is because the class has no non-expensive way to detect if the matrix has been modified. The function setLU realizes the factorization step only.

Parameters

in,out	<i>b</i>	Vect instance that contains right-hand side on input and solution on output.
--------	----------	--

Returns

- 0 if solution was normally performed,
- *n* if the *n*-th pivot is null.

Implements [Matrix< T_ >](#).

int solve (const Vect< T_ > & b, Vect< T_ > & x)

Solve linear system.

The linear system having the current instance as a matrix is solved by using the LU decomposition. Solution is thus realized after a factorization step and a forward/backward substitution step. The factorization step is realized only if this was not already done.

Note that this function modifies the matrix contents is a factorization is performed. Naturally, if the the matrix has been modified after using this function, the user has to refactorize it using the function setLU. This is because the class has no non-expensive way to detect if the matrix has been modified. The function setLU realizes the factorization step only.

Parameters

in	<i>b</i>	Vect instance that contains right-hand side.
out	<i>x</i>	Vect instance that contains solution

Returns

- 0 if solution was normally performed,
- *n* if the *n*-th pivot is null.

T_* get () const

Return C-Array.

Skyline of matrix is stored row by row.

void setDiagonal (Mesh & mesh) [inherited]

Initialize matrix storage in the case where only diagonal terms are stored.

This member function is to be used for explicit time integration schemes

T_ getDiag (size_t k) const [inherited]

Return k-th diagonal entry of matrix.
First entry is given by **getDiag(1)**.

void Assembly (const Element & el, T_ * a) [inherited]

Assembly of element matrix into global matrix.
Case where element matrix is given by a C-array.

Parameters

in	<i>el</i>	Pointer to element instance
in	<i>a</i>	Element matrix as a C-array

void Assembly (const Element & el, const DMatrix< T_ > & a) [inherited]

Assembly of element matrix into global matrix.
Case where element matrix is given by a [DMatrix](#) instance.

Parameters

in	<i>el</i>	Pointer to element instance
in	<i>a</i>	Element matrix as a DMatrix instance

void Assembly (const Side & sd, T_ * a) [inherited]

Assembly of side matrix into global matrix.
Case where side matrix is given by a C-array.

Parameters

in	<i>sd</i>	Pointer to side instance
in	<i>a</i>	Side matrix as a C-array instance

void Assembly (const Side & sd, const DMatrix< T_ > & a) [inherited]

Assembly of side matrix into global matrix.
Case where side matrix is given by a [DMatrix](#) instance.

Parameters

in	<i>sd</i>	Pointer to side instance
in	<i>a</i>	Side matrix as a DMatrix instance

void Prescribe (Vect< T_ > & *b*, const Vect< T_ > & *u*, int *flag* = 0) [inherited]

Impose by a penalty method an essential boundary condition, using the [Mesh](#) instance provided by the constructor.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function `setPenal(..)`.

Parameters

in,out	<i>b</i>	Vect instance that contains right-hand side.
in	<i>u</i>	Vect instance that contains imposed valued at DOFs where they are to be imposed.
in	<i>flag</i>	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).

void Prescribe (int *dof*, int *code*, Vect< T_ > & *b*, const Vect< T_ > & *u*, int *flag* = 0) [inherited]

Impose by a penalty method an essential boundary condition to a given degree of freedom for a given code.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function `setPenal(..)`.

Parameters

in	<i>dof</i>	Degree of freedom for which a boundary condition is to be enforced
in	<i>code</i>	Code for which a boundary condition is to be enforced
in,out	<i>b</i>	Vect instance that contains right-hand side.
in	<i>u</i>	Vect instance that contains imposed valued at DOFs where they are to be imposed.
in	<i>flag</i>	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).

void Prescribe (Vect< T_ > & *b*, int *flag* = 0) [inherited]

Impose by a penalty method a homegeneous (=0) essential boundary condition.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function `setPenal(..)`.

Parameters

in,out	<i>b</i>	Vect instance that contains right-hand side.
--------	----------	--

Parameters

in	<i>flag</i>	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).
----	-------------	--

void Prescribe (size_t dof, Vect< T_ > & b, const Vect< T_ > & u, int flag = 0) [inherited]

Impose by a penalty method an essential boundary condition when only one DOF is treated.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. This function is to be used if only one DOF per node is treated in the linear system. The penalty parameter is by default equal to 1.e20. It can be modified by member function setPenal.

Parameters

in	<i>dof</i>	Label of the concerned degree of freedom (DOF).
in,out	<i>b</i>	Vect instance that contains right-hand side.
in	<i>u</i>	Vect instance that contains imposed values at DOFs where they are to be imposed.
in	<i>flag</i>	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).

void PrescribeSide () [inherited]

Impose by a penalty method an essential boundary condition when DOFs are supported by sides.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function `setPenal(..)`.

int FactorAndSolve (Vect< T_ > & b) [inherited]

Factorize matrix and solve the linear system.

This is available only if the storage class enables it.

Parameters

in,out	<i>b</i>	Vect instance that contains right-hand side on input and solution on output
--------	----------	---

int FactorAndSolve (const Vect< T_ > & b, Vect< T_ > & x) [inherited]

Factorize matrix and solve the linear system.

This is available only if the storage class enables it.

Parameters

in	<i>b</i>	Vect instance that contains right-hand side
----	----------	---

Parameters

out	<i>x</i>	Vect instance that contains solution
-----	----------	--

Returns

- 0 if solution was normally performed
- *n* if the *n*-th pivot is nul

int isFactorized () const [inherited]

Say if matrix is factorized or not.

If the matrix was not factorized, the class does not allow solving by a direct solver.

T_ operator() (size_t *i*) const [inherited]

Operator () with one argument (Constant version).

Returns *i*-th position in the array storing matrix entries. The first entry is at location 1. Entries are stored row by row.

Parameters

in	<i>i</i>	entry index
----	----------	-------------

T_& operator() (size_t *i*) [inherited]

Operator () with one argument (Non Constant version).

Returns *i*-th position in the array storing matrix entries. The first entry is at location 1. Entries are stored row by row.

Parameters

in	<i>i</i>	entry index
----	----------	-------------

T_& operator[] (size_t *k*) [inherited]

Operator [] (Non constant version).

Returns *k*-th stored element in matrix Index *k* starts at 0.

T_ operator[] (size_t *k*) const [inherited]

Operator [] (Constant version).

Returns *k*-th stored element in matrix Index *k* starts at 0.

Matrix& operator+=(const Matrix< T_ > & *m*) [inherited]

Operator +=.

Add matrix *m* to current matrix instance.

Matrix& operator-= (const Matrix< T_ > & m) [inherited]

Operator -=.

Subtract matrix m from current matrix instance.

Matrix& operator-= (const T_ & x) [inherited]


Operator -=.

Subtract constant value x from all matrix entries.

7.99 SkSMatrix< T_ > Class Template Reference

To handle symmetric matrices in skyline storage format.

Inheritance diagram for SkSMatrix< T_ >:

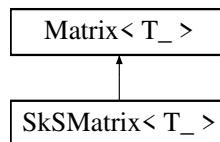

Public Member Functions

- [SkSMatrix](#) ()
Default constructor.
- [SkSMatrix](#) (size_t size, int is_diagonal=false)
Constructor that initializes a dense symmetric matrix.
- [SkSMatrix](#) (Mesh &mesh, size_t dof=0, int is_diagonal=false)
Constructor using mesh to initialize skyline structure of matrix.
- [SkSMatrix](#) (const Vect< size_t > &ColHt)
Constructor that initializes skyline structure of matrix using vector of column height.
- [SkSMatrix](#) (const Vect< size_t > &I, const Vect< size_t > &J, int opt=1)
Constructor for a square matrix using non zero row and column indices.
- [SkSMatrix](#) (const Vect< size_t > &I, const Vect< size_t > &J, const Vect< T_ > &a, int opt=1)
Constructor for a square matrix using non zero row and column indices.
- [SkSMatrix](#) (const SkSMatrix< T_ > &m)
Copy Constructor.
- [~SkSMatrix](#) ()
Destructor.
- void [setMesh](#) (Mesh &mesh, size_t dof=0)
Determine mesh graph and initialize matrix.
- void [setSkyline](#) (Mesh &mesh)
Determine matrix structure.
- void [setDiag](#) ()
Store diagonal entries in a separate internal vector.
- void [set](#) (size_t i, size_t j, const T_ &val)
Assign a value to an entry of the matrix.
- void [Axy](#) (T_ a, const SkSMatrix< T_ > &m)
Add to matrix the product of a matrix by a scalar.

- void **Axpy** (T_ a, const **Matrix**< T_ > *m)
Add to matrix the product of a matrix by a scalar.
- void **MultAdd** (const **Vect**< T_ > &x, **Vect**< T_ > &y) const
Multiply matrix by vector x and add to y.
- void **MultAdd** (T_ a, const **Vect**< T_ > &x, **Vect**< T_ > &y) const
*Multiply matrix by vector a*x and add to y.*
- void **Mult** (const **Vect**< T_ > &x, **Vect**< T_ > &y) const
Multiply matrix by vector x and save in y
- void **TMult** (const **Vect**< T_ > &x, **Vect**< T_ > &y) const
Multiply transpose of matrix by vector x and save in y.
- void **add** (size_t i, size_t j, const T_ &val)
Add a constant to an entry of the matrix.
- size_t **getColHeight** (size_t i) const
Return column height.
- **Vect**< T_ > **getColumn** (size_t j) const
Get j-th column vector.
- **Vect**< T_ > **getRow** (size_t i) const
Get i-th row vector.
- T_ & **operator()** (size_t i, size_t j)
Operator () (Non constant version).
- T_ **operator()** (size_t i, size_t j) const
Operator () (Constant version).
- **SkSMatrix**< T_ > & **operator=** (const **SkSMatrix**< T_ > &m)
Operator =.
- **SkSMatrix**< T_ > & **operator=** (const T_ &x)
Operator =.
- **SkSMatrix**< T_ > & **operator+=** (const **SkSMatrix**< T_ > &m)
Operator +=.
- **SkSMatrix**< T_ > & **operator*=** (const T_ &x)
*Operator *=.*
- int **setLDLt** ()
Factorize matrix (LDLt (Crout) factorization).
- int **solveLDLt** (const **Vect**< T_ > &b, **Vect**< T_ > &x)
Solve a linear system using the LDLt (Crout) factorization.
- int **solve** (**Vect**< T_ > &b)
Solve linear system.
- int **solve** (const **Vect**< T_ > &b, **Vect**< T_ > &x)
Solve linear system.
- T_ * **get** () const
Return C-Array.
- void **set** (size_t i, T_ x)
Assign a value to the i-th entry of C-array containing matrix.
- T_ **get** (size_t i, size_t j) const
Return entry (i, j) of matrix if this one is stored, 0 else.
- size_t **getNbRows** () const
Return number of rows.

- `size_t getNbColumns () const`
Return number of columns.
- `void setPenal (real_t p)`
Set Penalty Parameter (For boundary condition prescription).
- `void setDiagonal ()`
Set the matrix as diagonal.
- `void setDiagonal (Mesh &mesh)`
Initialize matrix storage in the case where only diagonal terms are stored.
- `T_ getDiag (size_t k) const`
Return k-th diagonal entry of matrix.
- `size_t size () const`
Return matrix dimension (Number of rows and columns).
- `void Assembly (const Element &el, T_ *a)`
Assembly of element matrix into global matrix.
- `void Assembly (const Element &el, const DMatrix< T_ > &a)`
Assembly of element matrix into global matrix.
- `void Assembly (const Side &sd, T_ *a)`
Assembly of side matrix into global matrix.
- `void Assembly (const Side &sd, const DMatrix< T_ > &a)`
Assembly of side matrix into global matrix.
- `void Prescribe (Vect< T_ > &b, const Vect< T_ > &u, int flag=0)`
Impose by a penalty method an essential boundary condition, using the Mesh instance provided by the constructor.
- `void Prescribe (int dof, int code, Vect< T_ > &b, const Vect< T_ > &u, int flag=0)`
Impose by a penalty method an essential boundary condition to a given degree of freedom for a given code.
- `void Prescribe (Vect< T_ > &b, int flag=0)`
Impose by a penalty method a homogeneous (=0) essential boundary condition.
- `void Prescribe (size_t dof, Vect< T_ > &b, const Vect< T_ > &u, int flag=0)`
Impose by a penalty method an essential boundary condition when only one DOF is treated.
- `void PrescribeSide ()`
Impose by a penalty method an essential boundary condition when DOFs are supported by sides.
- `virtual int Factor ()=0`
Factorize matrix. Available only if the storage class enables it.
- `int FactorAndSolve (Vect< T_ > &b)`
Factorize matrix and solve the linear system.
- `int FactorAndSolve (const Vect< T_ > &b, Vect< T_ > &x)`
Factorize matrix and solve the linear system.
- `size_t getLength () const`
Return number of stored terms in matrix.
- `int isDiagonal () const`
Say if matrix is diagonal or not.
- `int isFactorized () const`
Say if matrix is factorized or not.
- `virtual size_t getColInd (size_t i) const`
Return Column index for column i (See the description for class SpMatrix).
- `virtual size_t getRowPtr (size_t i) const`
Return Row pointer for row i (See the description for class SpMatrix).

- `T_ operator() (size_t i) const`
Operator () with one argument (Constant version).
- `T_ & operator() (size_t i)`
Operator () with one argument (Non Constant version).
- `T_ & operator[] (size_t k)`
Operator [] (Non constant version).
- `T_ operator[] (size_t k) const`
Operator [] (Constant version).
- `Matrix & operator+= (const Matrix< T_ > &m)`
Operator +=.
- `Matrix & operator+= (const T_ &x)`
Operator +=.
- `Matrix & operator-= (const Matrix< T_ > &m)`
Operator -=.
- `Matrix & operator-= (const T_ &x)`
Operator -=.

7.99.1 Detailed Description

template<class T_>
class OFELI::SkSMatrix< T_ >

To handle symmetric matrices in skyline storage format.

This template class allows storing and manipulating a symmetric matrix in skyline storage format.

The matrix entries are stored column by column as in the following example:

```

/
| a0  a1  0  0  a7 |
|   a2  a3  0  a8 |
| ...   a4  a5  a9 |
|           a6  a10 |
|               a11 |
\

```

Template Parameters

T_{\leftrightarrow}	Data type (double, float, complex<double>, ...)
$_{\leftrightarrow}$	

7.99.2 Member Function Documentation

`T_* get () const`

Return C-Array.

Skyline of matrix is stored row by row.

`void setDiagonal (Mesh & mesh)` [inherited]

Initialize matrix storage in the case where only diagonal terms are stored.

This member function is to be used for explicit time integration schemes

T_ getDiag (size_t k) const [inherited]

Return k-th diagonal entry of matrix.

First entry is given by **getDiag(1)**.

void Assembly (const Element & el, T_ * a) [inherited]

Assembly of element matrix into global matrix.

Case where element matrix is given by a C-array.

Parameters

in	<i>el</i>	Pointer to element instance
in	<i>a</i>	Element matrix as a C-array

void Assembly (const Element & el, const DMatrix< T_ > & a) [inherited]

Assembly of element matrix into global matrix.

Case where element matrix is given by a [DMatrix](#) instance.

Parameters

in	<i>el</i>	Pointer to element instance
in	<i>a</i>	Element matrix as a DMatrix instance

void Assembly (const Side & sd, T_ * a) [inherited]

Assembly of side matrix into global matrix.

Case where side matrix is given by a C-array.

Parameters

in	<i>sd</i>	Pointer to side instance
in	<i>a</i>	Side matrix as a C-array instance

void Assembly (const Side & sd, const DMatrix< T_ > & a) [inherited]

Assembly of side matrix into global matrix.

Case where side matrix is given by a [DMatrix](#) instance.

Parameters

in	<i>sd</i>	Pointer to side instance
in	<i>a</i>	Side matrix as a DMatrix instance

void Prescribe (Vect< T_ > & *b*, const Vect< T_ > & *u*, int *flag* = 0) [inherited]

Impose by a penalty method an essential boundary condition, using the [Mesh](#) instance provided by the constructor.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function `setPenal(..)`.

Parameters

in,out	<i>b</i>	Vect instance that contains right-hand side.
in	<i>u</i>	Vect instance that contains imposed valued at DOFs where they are to be imposed.
in	<i>flag</i>	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).

void Prescribe (int *dof*, int *code*, Vect< T_ > & *b*, const Vect< T_ > & *u*, int *flag* = 0) [inherited]

Impose by a penalty method an essential boundary condition to a given degree of freedom for a given code.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function `setPenal(..)`.

Parameters

in	<i>dof</i>	Degree of freedom for which a boundary condition is to be enforced
in	<i>code</i>	Code for which a boundary condition is to be enforced
in,out	<i>b</i>	Vect instance that contains right-hand side.
in	<i>u</i>	Vect instance that contains imposed valued at DOFs where they are to be imposed.
in	<i>flag</i>	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).

void Prescribe (Vect< T_ > & *b*, int *flag* = 0) [inherited]

Impose by a penalty method a homegeneous (=0) essential boundary condition.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function `setPenal(..)`.

Parameters

in,out	<i>b</i>	Vect instance that contains right-hand side.
--------	----------	--

Parameters

in	<i>flag</i>	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).
----	-------------	--

void Prescribe (size_t dof, Vect< T_ > & b, const Vect< T_ > & u, int flag = 0) [inherited]

Impose by a penalty method an essential boundary condition when only one DOF is treated.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. This function is to be used if only one DOF per node is treated in the linear system. The penalty parameter is by default equal to 1.e20. It can be modified by member function setPenal.

Parameters

in	<i>dof</i>	Label of the concerned degree of freedom (DOF).
in,out	<i>b</i>	Vect instance that contains right-hand side.
in	<i>u</i>	Vect instance that contains imposed values at DOFs where they are to be imposed.
in	<i>flag</i>	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).

void PrescribeSide () [inherited]

Impose by a penalty method an essential boundary condition when DOFs are supported by sides.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function `setPenal(..)`.

int FactorAndSolve (Vect< T_ > & b) [inherited]

Factorize matrix and solve the linear system.

This is available only if the storage class enables it.

Parameters

in,out	<i>b</i>	Vect instance that contains right-hand side on input and solution on output
--------	----------	---

int FactorAndSolve (const Vect< T_ > & b, Vect< T_ > & x) [inherited]

Factorize matrix and solve the linear system.

This is available only if the storage class enables it.

Parameters

in	<i>b</i>	Vect instance that contains right-hand side
----	----------	---

Parameters

out	x	Vect instance that contains solution
-----	-----	--

Returns

- 0 if solution was normally performed
- n if the n -th pivot is nul

int isFactorized () const [inherited]

Say if matrix is factorized or not.

If the matrix was not factorized, the class does not allow solving by a direct solver.

T_ operator() (size_t i) const [inherited]

Operator () with one argument (Constant version).

Returns i -th position in the array storing matrix entries. The first entry is at location 1. Entries are stored row by row.

Parameters

in	i	entry index
----	-----	-------------

T_& operator() (size_t i) [inherited]

Operator () with one argument (Non Constant version).

Returns i -th position in the array storing matrix entries. The first entry is at location 1. Entries are stored row by row.

Parameters

in	i	entry index
----	-----	-------------

T_& operator[] (size_t k) [inherited]

Operator [] (Non constant version).

Returns k -th stored element in matrix Index k starts at 0.

T_ operator[] (size_t k) const [inherited]

Operator [] (Constant version).

Returns k -th stored element in matrix Index k starts at 0.

Matrix& operator+=(const Matrix< T_ > & m) [inherited]

Operator +=.

Add matrix m to current matrix instance.

Matrix& operator+= (const T_ & x) [inherited]

Operator +=.

Add constant value x to all matrix entries.

Matrix& operator-= (const Matrix< T_ > & m) [inherited]

Operator -=.

Subtract matrix m from current matrix instance.

Matrix& operator-= (const T_ & x) [inherited]


Operator -=.

Subtract constant value x from all matrix entries.

7.100 Sphere Class Reference

To store and treat a sphere.

Inheritance diagram for Sphere:

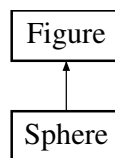

Public Member Functions

- [Sphere](#) ()
Default constructor.
- [Sphere](#) (const [Point](#)< [real_t](#) > &c, [real_t](#) r, int code=1)
Constructor.
- void [setRadius](#) ([real_t](#) r)
Assign radius of sphere.
- [real_t](#) [getRadius](#) () const
Return radius of sphere.
- void [setCenter](#) (const [Point](#)< [real_t](#) > &c)
Assign coordinates of center of sphere.
- [Point](#)< [real_t](#) > [getCenter](#) () const
Return coordinates of center of sphere.
- [real_t](#) [getSignedDistance](#) (const [Point](#)< [real_t](#) > &p) const
Return signed distance of a given point from the current sphere.
- [Sphere](#) & [operator+=](#) ([Point](#)< [real_t](#) > a)
Operator +=.
- [Sphere](#) & [operator+=](#) ([real_t](#) a)
*Operator *+=.*
- void [setCode](#) (int code)
Choose a code for the domain defined by the figure.
- void [getSignedDistance](#) (const [Grid](#) &g, [Vect](#)< [real_t](#) > &d) const

Calculate signed distance to current figure with respect to grid points.

- **real.t dLine** (const **Point**< **real.t** > &p, const **Point**< **real.t** > &a, const **Point**< **real.t** > &b) const

Compute signed distance from a line.

7.100.1 Detailed Description

To store and treat a sphere.

7.100.2 Constructor & Destructor Documentation

Sphere (const **Point**< **real.t** > &*c*, **real.t** *r*, int *code* = 1)

Constructor.

Parameters

in	<i>c</i>	Coordinates of center of sphere
in	<i>r</i>	Radius
in	<i>code</i>	Code to assign to the generated sphere [Default: 1]

7.100.3 Member Function Documentation

real.t getSignedDistance (const **Point**< **real.t** > &*p*) const [virtual]

Return signed distance of a given point from the current sphere.

The computed distance is negative if p lies in the ball, positive if it is outside, and 0 on the sphere

Parameters

in	<i>p</i>	Point <double> instance
----	----------	--------------------------------

Reimplemented from [Figure](#).

Sphere& operator+= (**Point**< **real.t** > *a*)

Operator +=.

Translate sphere by a vector a

Sphere& operator+= (**real.t** *a*)

Operator *+=.

Scale sphere by a factor a

void getSignedDistance (const **Grid** &*g*, **Vect**< **real.t** > &*d*) const [inherited]

Calculate signed distance to current figure with respect to grid points.

Parameters

in	<i>g</i>	Grid instance
----	----------	-------------------------------

Parameters

in	<i>d</i>	Vect instance containing calculated distance from each grid index to Figure
----	----------	---

Remarks

Vector *d* doesn't need to be sized before invoking this function

**real_t dLine (const Point< real_t > & *p*, const Point< real_t > & *a*, const Point< real_t > & *b*
) const** [inherited]

Compute signed distance from a line.

Parameters

in	<i>p</i>	Point for which distance is computed
in	<i>a</i>	First vertex of line
in	<i>b</i>	Second vertex of line


Returns

Signed distance

7.101 SpMatrix< T_ > Class Template Reference

To handle matrices in sparse storage format.

Inheritance diagram for SpMatrix< T_ >:

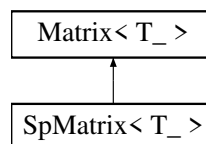

Public Member Functions

- [SpMatrix](#) ()
Default constructor.
- [SpMatrix](#) (size_t nr, size_t nc)
Constructor that initializes current instance as a dense matrix.
- [SpMatrix](#) (size_t size, int is_diagonal=false)
Constructor that initializes current instance as a dense matrix.
- [SpMatrix](#) ([Mesh](#) &mesh, size_t dof=0, int is_diagonal=false)
Constructor using a [Mesh](#) instance.
- [SpMatrix](#) (size_t nr, size_t nc, const vector< size_t > &row_ptr, const vector< size_t > &col_ind, const vector< T_ > &a)
Constructor for a rectangle matrix.
- [SpMatrix](#) (const [SpMatrix](#) &m)

- Copy constructor.*
- [~SpMatrix](#) (void)
- Destructor.*
- void [Dense](#) ()
- Define matrix as a dense one.*
- void [Identity](#) ()
- Define matrix as identity matrix.*
- void [Diagonal](#) ()
- Define matrix as a diagonal one.*
- void [Diagonal](#) (const T_ &a)
- Define matrix as a diagonal one with diagonal entries equal to a*
- void [Laplace1D](#) (size_t n, [real_t](#) h)
- Sets the matrix as the one for the Laplace equation in 1-D.*
- void [Laplace2D](#) (size_t nx, size_t ny)
- Sets the matrix as the one for the Laplace equation in 2-D.*
- void [setMesh](#) ([Mesh](#) &mesh, size_t dof=0)
- Determine mesh graph and initialize matrix.*
- void [setOneDOF](#) ()
- Activate 1-DOF per node option.*
- void [setSides](#) ()
- Activate Sides option.*
- void [setDiag](#) ()
- Store diagonal entries in a separate internal vector.*
- void [DiagPrescribe](#) ([Mesh](#) &mesh, [Vect](#)< T_ > &b, const [Vect](#)< T_ > &u)
- Impose by a diagonal method an essential boundary condition.*
- void [DiagPrescribe](#) ([Vect](#)< T_ > &b, const [Vect](#)< T_ > &u)
- Impose by a diagonal method an essential boundary condition using the [Mesh](#) instance provided by the constructor.*
- void [setSize](#) (size_t size)
- Set size of matrix (case where it's a square matrix).*
- void [setSize](#) (size_t nr, size_t nc)
- Set size (number of rows) of matrix.*
- void [setGraph](#) (const vector< RC > &I, int opt=1)
- Set graph of matrix by giving a vector of its nonzero entries.*
- [Vect](#)< T_ > [getRow](#) (size_t i) const
- Get i-th row vector.*
- [Vect](#)< T_ > [getColumn](#) (size_t j) const
- Get j-th column vector.*
- T_ & [operator\(\)](#) (size_t i, size_t j)
- Operator () (Non constant version)*
- T_ [operator\(\)](#) (size_t i, size_t j) const
- Operator () (Constant version)*
- const T_ [operator\(\)](#) (size_t i) const
- Operator () with one argument (Constant version)*
- const T_ [operator\[\]](#) (size_t i) const
- Operator [] (Constant version).*
- [Vect](#)< T_ > [operator*](#) (const [Vect](#)< T_ > &x) const

- Operator $*$ to multiply matrix by a vector.
- `SpMatrix< T_ > & operator*=(const T_ &a)`
Operator $*$ to premultiply matrix by a constant.
- `void getMesh (Mesh &mesh)`
Get mesh instance whose reference will be stored in current instance of `SpMatrix`.
- `void Mult (const Vect< T_ > &v, Vect< T_ > &w) const`
Multiply matrix by vector and save in another one.
- `void MultAdd (const Vect< T_ > &x, Vect< T_ > &y) const`
Multiply matrix by vector x and add to y .
- `void MultAdd (T_ a, const Vect< T_ > &x, Vect< T_ > &y) const`
Multiply matrix by vector $a*x$ and add to y .
- `void TMult (const Vect< T_ > &x, Vect< T_ > &y) const`
Multiply transpose of matrix by vector x and save in y .
- `void Axy (T_ a, const SpMatrix< T_ > &m)`
Add to matrix the product of a matrix by a scalar.
- `void Axy (T_ a, const Matrix< T_ > *m)`
Add to matrix the product of a matrix by a scalar.
- `void set (size_t i, size_t j, const T_ &val)`
Assign a value to an entry of the matrix.
- `void add (size_t i, size_t j, const T_ &val)`
Add a value to an entry of the matrix.
- `void operator= (const T_ &x)`
Operator $=$.
- `size_t getColInd (size_t i) const`
Return storage information.
- `size_t getRowPtr (size_t i) const`
Return Row pointer at position i .
- `int solve (Vect< T_ > &b)`
Solve the linear system of equations.
- `int solve (const Vect< T_ > &b, Vect< T_ > &x)`
Solve the linear system of equations.
- `void setSolver (Iteration solver=CG_SOLVER, Preconditioner prec=DIAG_PREC, int max_↵
_it=1000, real_t toler=1.e-8)`
Choose solver and preconditioner for an iterative procedure.
- `void clear ()`
brief Set all matrix entries to zero
- `T_ * get () const`
Return C-Array.
- `T_ get (size_t i, size_t j) const`
Return entry (i, j) of matrix if this one is stored, 0 otherwise.
- `SpMat & getEigenMatrix ()`
Return reference to the matrix instance in Eigen library.
- `size_t getNbRows () const`
Return number of rows.
- `size_t getNbColumns () const`
Return number of columns.
- `void setPenal (real_t p)`

- *Set Penalty Parameter (For boundary condition prescription).*
- void **setDiagonal** ()
Set the matrix as diagonal.
- void **setDiagonal** (Mesh &mesh)
Initialize matrix storage in the case where only diagonal terms are stored.
- T_ **getDiag** (size_t k) const
Return k-th diagonal entry of matrix.
- size_t **size** () const
Return matrix dimension (Number of rows and columns).
- void **Assembly** (const Element &el, T_ *a)
Assembly of element matrix into global matrix.
- void **Assembly** (const Element &el, const DMatrix< T_ > &a)
Assembly of element matrix into global matrix.
- void **Assembly** (const Side &sd, T_ *a)
Assembly of side matrix into global matrix.
- void **Assembly** (const Side &sd, const DMatrix< T_ > &a)
Assembly of side matrix into global matrix.
- void **Prescribe** (Vect< T_ > &b, const Vect< T_ > &u, int flag=0)
Impose by a penalty method an essential boundary condition, using the Mesh instance provided by the constructor.
- void **Prescribe** (int dof, int code, Vect< T_ > &b, const Vect< T_ > &u, int flag=0)
Impose by a penalty method an essential boundary condition to a given degree of freedom for a given code.
- void **Prescribe** (Vect< T_ > &b, int flag=0)
Impose by a penalty method a homogeneous (=0) essential boundary condition.
- void **Prescribe** (size_t dof, Vect< T_ > &b, const Vect< T_ > &u, int flag=0)
Impose by a penalty method an essential boundary condition when only one DOF is treated.
- void **PrescribeSide** ()
Impose by a penalty method an essential boundary condition when DOFs are supported by sides.
- virtual int **Factor** ()=0
Factorize matrix. Available only if the storage class enables it.
- int **FactorAndSolve** (Vect< T_ > &b)
Factorize matrix and solve the linear system.
- int **FactorAndSolve** (const Vect< T_ > &b, Vect< T_ > &x)
Factorize matrix and solve the linear system.
- size_t **getLength** () const
Return number of stored terms in matrix.
- int **isDiagonal** () const
Say if matrix is diagonal or not.
- int **isFactorized** () const
Say if matrix is factorized or not.
- T_ & **operator()** (size_t i)
Operator () with one argument (Non Constant version).
- T_ & **operator[]** (size_t k)
Operator [] (Non constant version).
- Matrix & **operator+=** (const Matrix< T_ > &m)
Operator +=.
- Matrix & **operator+=** (const T_ &x)

- Operator +=.*
- **Matrix** & **operator+=** (const **Matrix**< T_ > &m)
- Operator -=.*
- **Matrix** & **operator-=** (const T_ &x)
- Operator -=.*

Friends

- template<class TT_ >
ostream & **operator<<** (ostream &s, const **SpMatrix**< TT_ > &A)

7.101.1 Detailed Description

template<class T_>
class OFELI::SpMatrix< T_ >

To handle matrices in sparse storage format.

This template class enables storing and manipulating a sparse matrix, i.e. only nonzero terms are stored. Internally, the matrix is stored as a vector instance and uses for the definition of its graph a **Vect<size_t>** instance **row_ptr** and a **Vect<size_t>** instance **col_ind** that contains respectively addresses of first element of each row and column indices.

To illustrate this, consider the matrix

```

1  2  0
3  4  0
0  5  0

```

Such a matrix is stored in the **vector<real_t>** instance {1,2,3,4,5}. The vectors **row_ptr** and **col_ind** are respectively: {0,2,4,5}, {1,2,1,2,2}

When the library **eigen** is used in conjunction with **OFELI**, the class uses the sparse matrix class of **eigen** and enables then access to specific solvers (see class **LinearSolver**)

Template Parameters

T ↔	Data type (double, float, complex<double>, ...)
_ ↔	

7.101.2 Constructor & Destructor Documentation

SpMatrix ()

Default constructor.

Initialize a zero-dimension matrix

SpMatrix (size_t nr, size_t nc)

Constructor that initializes current instance as a dense matrix.

Normally, for a dense matrix this is not the right class.

Parameters

in	nr	Number of matrix rows.
in	nc	Number of matrix columns.

SpMatrix (*size.t size*, *int is_diagonal = false*)

Constructor that initializes current instance as a dense matrix.

Normally, for a dense matrix this is not the right class.

Parameters

in	<i>size</i>	Number of matrix rows (and columns).
in	<i>is_diagonal</i>	Boolean argument to say is the matrix is actually a diagonal matrix or not.

SpMatrix (*Mesh & mesh*, *size.t dof = 0*, *int is_diagonal = false*)

Constructor using a [Mesh](#) instance.

Parameters

in	<i>mesh</i>	Mesh instance from which matrix graph is extracted.
in	<i>dof</i>	Option parameter, with default value 0. dof=1 means that only one degree of freedom for each node (or element or side) is taken to determine matrix structure. The value dof=0 means that matrix structure is determined using all DOFs.
in	<i>is_diagonal</i>	Boolean argument to say is the matrix is actually a diagonal matrix or not.

SpMatrix (*size.t nr*, *size.t nc*, *const vector< size.t > & row_ptr*, *const vector< size.t > & col_ind*, *const vector< T_ > & a*)

Constructor for a rectangle matrix.

Parameters

in	<i>nr</i>	Number of rows
in	<i>nc</i>	Number of columns
in	<i>row_ptr</i>	Vector of row pointers (See the above description of this class).
in	<i>col_ind</i>	Vector of column indices (See the above description of this class).
in	<i>a</i>	vector instance containing matrix entries stored columnwise

7.101.3 Member Function Documentation

void Laplace1D (*size.t n*, *real.t h*)

Sets the matrix as the one for the Laplace equation in 1-D.

The matrix is initialized as the one resulting from P_1 finite element discretization of the classical elliptic operator $-u'' = f$ with homogeneous Dirichlet boundary conditions

Remarks

This function is available for real valued matrices only.

Parameters

in	n	Size of matrix (Number of rows)
in	h	Mesh size (assumed constant)

void Laplace2D (size_t nx , size_t ny)

Sets the matrix as the one for the Laplace equation in 2-D.

The matrix is initialized as the one resulting from P_1 finite element discretization of the classical elliptic operator $-\Delta u = f$ with homogeneous Dirichlet boundary conditions

Remarks

This function is available for real valued matrices only.

Parameters

in	nx	Number of unknowns in the x-direction
in	ny	Number of unknowns in the y-direction

Remarks

The number of rows is equal to $nx*ny$

void setMesh (Mesh & $mesh$, size_t $dof = 0$)

Determine mesh graph and initialize matrix.

This member function is called by constructor with the same arguments

Parameters

in	$mesh$	Mesh instance for which matrix graph is determined.
in	dof	Option parameter, with default value 0. dof=1 means that only one degree of freedom for each node (or element or side) is taken to determine matrix structure. The value dof=0 means that matrix structure is determined using all DOFs.

void DiagPrescribe (Mesh & $mesh$, Vect< T_ > & b , const Vect< T_ > & u)

Impose by a diagonal method an essential boundary condition.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function `setPenal(..)`.

Parameters

in	$mesh$	Mesh instance from which information is extracted.
in,out	b	Vect instance that contains right-hand side.

Parameters

in	<i>u</i>	Vect instance that contains imposed values at DOFs where they are to be imposed.
----	----------	--

void DiagPrescribe ([Vect](#)< T_ > & *b*, const [Vect](#)< T_ > & *u*)

Impose by a diagonal method an essential boundary condition using the [Mesh](#) instance provided by the constructor.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function `setPenal(..)`.

Parameters

in,out	<i>b</i>	Vect instance that contains right-hand side.
in	<i>u</i>	Vect instance that contains imposed values at DOFs where they are to be imposed.

void setSize ([size_t](#) *size*)

Set size of matrix (case where it's a square matrix).

Parameters

in	<i>size</i>	Number of rows and columns.
----	-------------	-----------------------------

void setSize ([size_t](#) *nr*, [size_t](#) *nc*)

Set size (number of rows) of matrix.

Parameters

in	<i>nr</i>	Number of rows
in	<i>nc</i>	Number of columns

void setGraph (const [vector](#)< [RC](#) > & *I*, int *opt* = 1)

Set graph of matrix by giving a vector of its nonzero entries.

Parameters

in	<i>I</i>	Vector containing pairs of row and column indices
in	<i>opt</i>	Flag indicating if vector <i>I</i> is cleaned and ordered (<i>opt</i> =1: default) or not (<i>opt</i> =0). In the latter case, this vector can have the same contents more than once and are not necessarily ordered

T_& operator() (size_t i, size_t j) [virtual]

Operator () (Non constant version)

Parameters

in	<i>i</i>	Row index
in	<i>j</i>	Column index

Implements [Matrix< T_ >](#).

T_ operator() (size_t i, size_t j) const [virtual]

Operator () (Constant version)

Parameters

in	<i>i</i>	Row index
in	<i>j</i>	Column index

Implements [Matrix< T_ >](#).

const T_ operator() (size_t i) const

Operator () with one argument (Constant version)

Returns i-th position in the array storing matrix entries. The first entry is at location 1. Entries are stored row by row.

const T_ operator[] (size_t i) const

Operator [] (Constant version).

Returns i-th position in the array storing matrix entries. The first entry is at location 0. Entries are stored row by row.

Vect<T_> operator* (const Vect< T_ > &x) const

Operator * to multiply matrix by a vector.

Parameters

in	<i>x</i>	Vect instance to multiply by
----	----------	--

Returns

Vector product of matrix by x

SpMatrix<T_>& operator*= (const T_ &a)

Operator *= to premultiply matrix by a constant.

Parameters

in	a	Constant to multiply matrix by
----	-----	--------------------------------

Returns

Resulting matrix

void Mult (const Vect< T_ > & v , Vect< T_ > & w) const [virtual]

Multiply matrix by vector and save in another one.

Parameters

in	v	Vector to multiply by matrix
out	w	Vector that contains on output the result.

Implements [Matrix< T_ >](#).

void MultAdd (const Vect< T_ > & x , Vect< T_ > & y) const [virtual]

Multiply matrix by vector x and add to y .

Parameters

in	x	Vector to multiply by matrix
out	y	Vector to add to the result. y contains on output the result.

Implements [Matrix< T_ >](#).

void MultAdd (T_ a , const Vect< T_ > & x , Vect< T_ > & y) const [virtual]

Multiply matrix by vector $a*x$ and add to y .

Parameters

in	a	Constant to multiply by matrix
in	x	Vector to multiply by matrix
out	y	Vector to add to the result. y contains on output the result.

Implements [Matrix< T_ >](#).

void TMult (const Vect< T_ > & x , Vect< T_ > & y) const [virtual]

Multiply transpose of matrix by vector x and save in y .

Parameters

in	x	Vector to multiply by matrix
out	y	Vector that contains on output the result.

Implements [Matrix< T_ >](#).

void Axy (T_ *a*, const SpMatrix< T_ > & *m*)

Add to matrix the product of a matrix by a scalar.

Parameters

in	<i>a</i>	Scalar to premultiply
in	<i>m</i>	Matrix by which <i>a</i> is multiplied. The result is added to current instance

void Axy (T_ *a*, const Matrix< T_ > * *m*) [virtual]

Add to matrix the product of a matrix by a scalar.

Parameters

in	<i>a</i>	Scalar to premultiply
in	<i>m</i>	Pointer to Matrix by which <i>a</i> is multiplied. The result is added to current instance

Implements [Matrix< T_ >](#).

void set (size_t *i*, size_t *j*, const T_ & *val*) [virtual]

Assign a value to an entry of the matrix.

Parameters

in	<i>i</i>	Row index
in	<i>j</i>	Column index
in	<i>val</i>	Value to assign to a(<i>i</i> , <i>j</i>)

Implements [Matrix< T_ >](#).

void add (size_t *i*, size_t *j*, const T_ & *val*) [virtual]

Add a value to an entry of the matrix.

Parameters

in	<i>i</i>	Row index
in	<i>j</i>	Column index
in	<i>val</i>	Constant value to add to a(<i>i</i> , <i>j</i>)

Implements [Matrix< T_ >](#).

void operator= (const T_ & *x*)

Operator =.

Assign constant value x to all matrix entries.

size_t getColInd (size_t i) const [virtual]

Return storage information.

Returns

Column index of the i -th stored element in matrix

Reimplemented from [Matrix< T_ >](#).

int solve (Vect< T_ > & b) [virtual]

Solve the linear system of equations.

The default parameters are:

- CG_SOLVER for solver
- DIAG_PREC for preconditioner
- Max. Number of iterations is 1000
- Tolerance is 1.e-8

To change these values, call function setSolver before this function

Parameters

in,out	b	Vector that contains right-hand side on input and solution on output
--------	-----	--

Returns

Number of actual performed iterations

Implements [Matrix< T_ >](#).

int solve (const Vect< T_ > & b , Vect< T_ > & x)

Solve the linear system of equations.

The default parameters are:

- CG_SOLVER for solver
- DIAG_PREC for preconditioner
- Max. Number of iterations is 1000
- Tolerance is 1.e-8

To change these values, call function setSolver before this function

Parameters

in	b	Vector that contains right-hand side
out	x	Vector that contains the obtained solution

Returns

Number of actual performed iterations

void setSolver (Iteration *solver* = CG_SOLVER, Preconditioner *prec* = DIAG_PREC, int *max_it* = 1000, real_t *toler* = 1.e-8)

Choose solver and preconditioner for an iterative procedure.

Parameters

in	<i>solver</i>	Option to choose iterative solver in an enumerated variable <ul style="list-style-type: none"> • CG_SOLVER: Conjugate Gradient [default] • CGS_SOLVER: Squared conjugate gradient • BICG_SOLVER: Biconjugate gradient • BICG_STAB_SOLVER: Biconjugate gradient stabilized • GMRES_SOLVER: Generalized Minimal Residual Default value is CG_SOLVER
in	<i>prec</i>	Option to choose preconditioner in an enumerated variable <ul style="list-style-type: none"> • IDENT_PREC: Identity preconditioner (no preconditioning) • DIAG_PREC: Diagonal preconditioner [default] • SSOR_PREC: SSOR (Symmetric Successive Over Relaxation) preconditioner • DILU_PREC: ILU (Diagonal Incomplete factorization) preconditioner • ILU_PREC: ILU (Incomplete factorization) preconditioner Default value is DIAG_PREC
in	<i>max_it</i>	Maximum number of allowed iterations. Default value is 1000.
in	<i>toler</i>	Tolerance for convergence. Default value is 1.e-8

T_* get () const

Return C-Array.

Non zero terms of matrix is stored row by row.

T_ get (size_t *i*, size_t *j*) const [virtual]

Return entry (*i*, *j*) of matrix if this one is stored, 0 otherwise.

Parameters

in	<i>i</i>	Row index (Starting from 1)
in	<i>j</i>	Column index (Starting from 1)

Implements [Matrix< T_ >](#).

void setDiagonal (Mesh & *mesh*) [inherited]

Initialize matrix storage in the case where only diagonal terms are stored.

This member function is to be used for explicit time integration schemes

T_ getDiag (size_t *k*) const [inherited]

Return *k*-th diagonal entry of matrix.

First entry is given by **getDiag(1)**.

void Assembly (const Element & *el*, T_ * *a*) [inherited]

Assembly of element matrix into global matrix.

Case where element matrix is given by a C-array.

Parameters

in	<i>el</i>	Pointer to element instance
in	<i>a</i>	Element matrix as a C-array

void Assembly (const Element & *el*, const DMatrix< T_ > & *a*) [inherited]

Assembly of element matrix into global matrix.

Case where element matrix is given by a [DMatrix](#) instance.

Parameters

in	<i>el</i>	Pointer to element instance
in	<i>a</i>	Element matrix as a DMatrix instance

void Assembly (const Side & *sd*, T_ * *a*) [inherited]

Assembly of side matrix into global matrix.

Case where side matrix is given by a C-array.

Parameters

in	<i>sd</i>	Pointer to side instance
in	<i>a</i>	Side matrix as a C-array instance

void Assembly (const Side & *sd*, const DMatrix< T_ > & *a*) [inherited]

Assembly of side matrix into global matrix.

Case where side matrix is given by a [DMatrix](#) instance.

Parameters

in	<i>sd</i>	Pointer to side instance
----	-----------	--------------------------

Parameters

in	<i>a</i>	Side matrix as a DMatrix instance
----	----------	---

void Prescribe (Vect< T_ > & *b*, const Vect< T_ > & *u*, int *flag* = 0) [inherited]

Impose by a penalty method an essential boundary condition, using the [Mesh](#) instance provided by the constructor.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function `setPenal(..)`.

Parameters

in,out	<i>b</i>	Vect instance that contains right-hand side.
in	<i>u</i>	Vect instance that contains imposed valued at DOFs where they are to be imposed.
in	<i>flag</i>	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).

void Prescribe (int *dof*, int *code*, Vect< T_ > & *b*, const Vect< T_ > & *u*, int *flag* = 0) [inherited]

Impose by a penalty method an essential boundary condition to a given degree of freedom for a given code.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function `setPenal(..)`.

Parameters

in	<i>dof</i>	Degree of freedom for which a boundary condition is to be enforced
in	<i>code</i>	Code for which a boundary condition is to be enforced
in,out	<i>b</i>	Vect instance that contains right-hand side.
in	<i>u</i>	Vect instance that contains imposed valued at DOFs where they are to be imposed.
in	<i>flag</i>	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).

void Prescribe (Vect< T_ > & *b*, int *flag* = 0) [inherited]

Impose by a penalty method a homegeneous (=0) essential boundary condition.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty

parameter is defined by default equal to 1.e20. It can be modified by member function **setPenal(..)**.

Parameters

in,out	<i>b</i>	Vect instance that contains right-hand side.
in	<i>flag</i>	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).

void Prescribe (size_t dof, Vect< T_ > & b, const Vect< T_ > & u, int flag = 0) [inherited]

Impose by a penalty method an essential boundary condition when only one DOF is treated.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. This function is to be used if only one DOF per node is treated in the linear system. The penalty parameter is by default equal to 1.e20. It can be modified by member function setPenal.

Parameters

in	<i>dof</i>	Label of the concerned degree of freedom (DOF).
in,out	<i>b</i>	Vect instance that contains right-hand side.
in	<i>u</i>	Vect instance that contains imposed values at DOFs where they are to be imposed.
in	<i>flag</i>	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).

void PrescribeSide () [inherited]

Impose by a penalty method an essential boundary condition when DOFs are supported by sides.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function **setPenal(..)**.

int FactorAndSolve (Vect< T_ > & b) [inherited]

Factorize matrix and solve the linear system.

This is available only if the storage class enables it.

Parameters

in,out	<i>b</i>	Vect instance that contains right-hand side on input and solution on output
--------	----------	---

int FactorAndSolve (const Vect< T_ > & b, Vect< T_ > & x) [inherited]

Factorize matrix and solve the linear system.

This is available only if the storage class enables it.

Parameters

in	b	Vect instance that contains right-hand side
out	x	Vect instance that contains solution

Returns

- 0 if solution was normally performed
- n if the n -th pivot is nul

int isFactorized () const [inherited]

Say if matrix is factorized or not.

If the matrix was not factorized, the class does not allow solving by a direct solver.

T_& operator() (size_t i) [inherited]

Operator () with one argument (Non Constant version).

Returns i -th position in the array storing matrix entries. The first entry is at location 1. Entries are stored row by row.

Parameters

in	i	entry index
----	-----	-------------

T_& operator[] (size_t k) [inherited]

Operator [] (Non constant version).

Returns k -th stored element in matrix Index k starts at 0.

Matrix& operator+= (const Matrix< T_ > & m) [inherited]

Operator +=.

Add matrix m to current matrix instance.

Matrix& operator+= (const T_ & x) [inherited]

Operator +=.

Add constant value x to all matrix entries.

Matrix& operator-= (const Matrix< T_ > & m) [inherited]

Operator -=.

Subtract matrix m from current matrix instance.

Matrix& operator-= (const T_ & x) [inherited]

Operator -=.

Subtract constant value x from all matrix entries.

7.102 SteklovPoincare2DBE Class Reference

Solver of the Steklov Poincare problem in 2-D geometries using piecewise constant boundary elemen.

Public Member Functions

- [SteklovPoincare2DBE](#) (bool ext=false)
Default Constructor.
- [SteklovPoincare2DBE](#) (const [Mesh](#) &mesh, bool ext=false)
Constructor using mesh data.
- [SteklovPoincare2DBE](#) (const [Mesh](#) &mesh, const [Vect](#)< real_t > &g, [Vect](#)< real_t > &b, bool ext=false)
Constructor that solves the Steklov Poincare problem.
- [~SteklovPoincare2DBE](#) ()
Destructor.
- void [setMesh](#) (const [Mesh](#) &mesh, bool ext=false)
set [Mesh](#) instance
- void [Solve](#) ()
Build equation left and right-hand sides for P_0 (piecewise constant) approximation.
- int [Solve](#) ([Vect](#)< real_t > &b, const [Vect](#)< real_t > &g)
Build equation left and right-hand sides for P_0 (piecewise constant) approximation.

7.102.1 Detailed Description

Solver of the Steklov Poincare problem in 2-D geometries using piecewise constant boundary elemen.

[SteklovPoincare2DBE](#) solves the Steklov Poincare problem in 2-D: Given the trace of a harmonic function on the boundary of a given (inner or outer) domain, this class computes the normal derivative of the function. The normal is considered as oriented out of the bounded (inner) domain in both inner and outer configurations. The numerical approximation uses piecewise constant (P_0) approximation on edges of the boundary. Solution is obtained from the GMRES iterative solver without preconditioning. The given data is the vector (instance of class [Vect](#)) of piecewise constant values of the harmonic function on the boundary and the returned solution is piecewise constant value of the normal derivative considered either as a [Vect](#) instance.

Note

Although the mesh of the inner domain is not necessary to solve the problem, this one must be provided in order to calculate the outward normal.

7.102.2 Constructor & Destructor Documentation

[SteklovPoincare2DBE](#) (bool ext = false)

Default Constructor.

Parameters

in	ext	Boolean variable to say if the domain is external (true) or internal (false: Default value).
----	-----	--

SteklovPoincare2DBE (const Mesh & *mesh*, bool *ext* = *false*)

Constructor using mesh data.

This constructor calls member function setMesh.

Parameters

in	<i>mesh</i>	Reference to mesh instance.
in	<i>ext</i>	Boolean variable to say if the domain is external (true) or internal (false: Default value).

SteklovPoincare2DBE (const Mesh & *mesh*, const Vect< real.t > & *g*, Vect< real.t > & *b*, bool *ext* = *false*)

Constructor that solves the Steklov Poincare problem.

This constructor calls member function setMesh and Solve.

Parameters

in	<i>mesh</i>	Reference to mesh instance.
in	<i>g</i>	Vect instance that contains imposed solution on the boundary
in	<i>b</i>	Vect instance that contains the left hand side in input and the solution in output
in	<i>ext</i>	Boolean variable to say if the domain is external (true) or internal (false: Default value).

7.102.3 Member Function Documentation

void setMesh (const Mesh & *mesh*, bool *ext* = *false*)

set [Mesh](#) instance

Parameters

in	<i>mesh</i>	Mesh instance
in	<i>ext</i>	Boolean variable to say if the domain is external (true) or internal (false: Default value).

void Solve ()

Build equation left and right-hand sides for P_0 (piecewise constant) approximation.

This member function is to be used if the constructor using *mesh*, *b* and *g* has been used.

int Solve (Vect< real.t > & *b*, const Vect< real.t > & *g*)

Build equation left and right-hand sides for P_0 (piecewise constant) approximation.

This member function is to be used if the constructor using *mesh* has been used. It concerns cases where the imposed boundary condition is given by sides

Parameters

in	g	Vector that contains imposed solution on the boundary
in	b	Vector that contains the left hand side in input and the solution in output

7.103 Tabulation Class Reference

To read and manipulate tabulated functions.

Public Member Functions

- [Tabulation](#) ()
Default constructor.
- [Tabulation](#) (string file)
Constructor using file name.
- [~Tabulation](#) ()
Destructor.
- void [setFile](#) (string file)
Set file name.
- [real_t](#) [getValue](#) (string funct, [real_t](#) v)
Return the calculated value of the function.
- [real_t](#) [getDerivative](#) (string funct, [real_t](#) v)
Return the derivative of the function at a given point.
- [real_t](#) [getValue](#) (string funct, [real_t](#) v1, [real_t](#) v2)
Return the calculated value of the function.
- [real_t](#) [getValue](#) (string funct, [real_t](#) v1, [real_t](#) v2, [real_t](#) v3)
Return the calculated value of the function.

7.103.1 Detailed Description

To read and manipulate tabulated functions.


This class enables reading a tabulated function of one to three variables and calculating the value of the function using piecewise multilinear interpolation.

The file defining the function is an XML file where any function is introduced via the tag "`<Function>`".

7.104 Tetra4 Class Reference

Defines a three-dimensional 4-node tetrahedral finite element using P_1 interpolation.

Inheritance diagram for Tetra4:

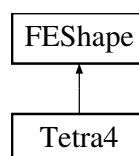

Public Member Functions

- **Tetra4** ()
Default Constructor.
- **Tetra4** (const **Element** *el)
*Constructor when data of **Element** el are given.*
- **~Tetra4** ()
Destructor.
- void **set** (const **Element** *el)
Choose element by giving its pointer.
- **real.t Sh** (size_t i, **Point**< **real.t** > s) const
Calculate shape function of node i at a given point s.
- **Point**< **real.t** > **DSH** (size_t i) const
Return x, y and z partial derivatives of shape function associated to node i.
- **real.t getVolume** () const
Return volume of element.
- **Point**< **real.t** > **getRefCoord** (const **Point**< **real.t** > &x) const
Return reference coordinates of a point x in element.
- bool **isIn** (const **Point**< **real.t** > &x)
Check whether point x is in current tetrahedron or not.
- **real.t getInterpolate** (const **Point**< **real.t** > &x, const **LocalVect**< **real.t**, 4 > &v)
Return interpolated value at point of coordinate x
- **Point**< **real.t** > **EdgeSh** (size_t k, **Point**< **real.t** > s)
Return edge shape function.
- **Point**< **real.t** > **CurlEdgeSh** (size_t k)
Return curl of edge shape function.
- **real.t getMaxEdgeLength** () const
Return maximal edge length of tetrahedron.
- **real.t getMinEdgeLength** () const
Return minimal edge length of tetrahedron.
- **real.t Sh** (size_t i) const
Return shape function of node i at given point.
- **real.t getDet** () const
Return determinant of jacobian.
- **Point**< **real.t** > **getCenter** () const
Return coordinates of center of element.
- **Point**< **real.t** > **getLocalPoint** () const
Localize a point in the element.
- **Point**< **real.t** > **getLocalPoint** (const **Point**< **real.t** > &s) const
Localize a point in the element.

7.104.1 Detailed Description

Defines a three-dimensional 4-node tetrahedral finite element using P_1 interpolation.

The reference element is the right tetrahedron with four unit edges interpolation.

7.104.2 Member Function Documentation

real_t Sh (size_t i, Point< real_t > s) const

Calculate shape function of node i at a given point s.
s is a point in the reference tetrahedron.

Point<real_t> DSh (size_t i) const

Return x, y and z partial derivatives of shape function associated to node i.
Note that these are constant in element.

Point<real_t> EdgeSh (size_t k, Point< real_t > s)

Return edge shape function.

Parameters

in	k	Local edge number for which the edge shape function is computed
in	s	Local coordinates in element

Remarks

[Element](#) edges are ordered as follows: [Edge](#) k has end vertices k and k+1

Point<real_t> CurlEdgeSh (size_t k)

Return curl of edge shape function.

Parameters

in	k	Local edge number for which the curl of the edge shape function is computed
----	---	---

Remarks

[Element](#) edges are ordered as follows: [Edge](#) k has end vertices k and k+1

real_t getDet () const [inherited]

Return determinant of jacobian.

If the transformation (Reference element -> Actual element) is not affine, member function **setLocal()** must have been called before in order to calculate relevant quantities.

Point<real_t> getLocalPoint () const [inherited]

Localize a point in the element.

Return actual coordinates in the reference element. If the transformation (Reference element -> Actual element) is not affine, member function **setLocal()** must have been called before in order to calculate relevant quantities.

Point<real_t> getLocalPoint (const Point< real_t > & s) const [inherited]

Localize a point in the element.

Return actual coordinates where s are coordinates in the reference element.

7.105 Timer Class Reference

To handle elapsed time counting.

Public Member Functions

- [Timer](#) ()
Default constructor.
- [~Timer](#) ()
Destructor.
- bool [Started](#) () const
Say if time counter has started.
- void [Start](#) ()
Start (or resume) time counting.
- void [Stop](#) ()
Stop time counting.
- void [Clear](#) ()
Clear time value (Set to zero)
- [real_t get](#) () const
Return elapsed time (in seconds)
- [real_t getTime](#) () const
Return elapsed time (in seconds)

7.105.1 Detailed Description

To handle elapsed time counting.

This class is to be used when testing program performances. A normal usage of the class is, once an instance is constructed, to use alternatively, Start, Stop and Resume. Elapsed time can be obtained once the member function Stop is called.

7.105.2 Member Function Documentation

bool Started () const

Say if time counter has started.

Return true if time has started, false if not

void Start ()

Start (or resume) time counting.

This member function is to be used to start or resume time counting

void Stop ()

Stop time counting.

This function interrupts time counting. This one can be resumed by the function Start

real.t getTime () const

Return elapsed time (in seconds)

Identical to get

7.106 TimeStepping Class Reference

To solve time stepping problems, i.e. systems of linear ordinary differential equations of the form $[A2]\{y''\} + [A1]\{y'\} + [A0]\{y\} = \{b\}$.

Public Member Functions

- [TimeStepping \(\)](#)
Default constructor.
- [TimeStepping \(TimeScheme s, real.t time_step=theTimeStep, real.t final_time=theFinalTime\)](#)
Constructor using time discretization data.
- [~TimeStepping \(\)](#)
Destructor.
- void [set \(TimeScheme s, real.t time_step=theTimeStep, real.t final_time=theFinalTime\)](#)
Define data of the differential equation or system.
- void [setPDE \(AbsEqua< real.t > &eq, bool nl=false\)](#)
Define partial differential equation to solve.
- void [setRK4RHS \(Vect< real.t > &f\)](#)
Set intermediate right-hand side vector for the Runge-Kutta method.
- void [setRK3_TVDRHS \(Vect< real.t > &f\)](#)
Set intermediate right-hand side vector for the TVD Runge-Kutta 3 method.
- void [setInitial \(Vect< real.t > &u\)](#)
Set initial condition for the system of differential equations.
- void [setInitial \(Vect< real.t > &u, Vect< real.t > &v\)](#)
Set initial condition for a system of differential equations.
- void [setInitialRHS \(Vect< real.t > &f\)](#)
Set initial RHS for a system of differential equations when the used scheme requires it.
- void [setRHS \(Vect< real.t > &b\)](#)
Set right-hand side vector.
- void [setBC \(Vect< real.t > &u\)](#)
Set vector containing boundary condition to enforce.
- void [setNewmarkParameters \(real.t beta, real.t gamma\)](#)
Define parameters for the Newmark scheme.
- void [setConstantMatrix \(\)](#)
Say that matrix problem is constant.
- void [setNonConstantMatrix \(\)](#)
Say that matrix problem is variable.
- void [setLinearSolver \(Iteration s=DIRECT_SOLVER, Preconditioner p=DIAG_PREC\)](#)
Set linear solver data.
- void [setVerbose \(int v=0\)](#)
Set verbosity parameter:
- [real.t runOneTimeStep \(\)](#)

Run one time step.

- void `run` (bool opt=false)

Run the time stepping procedure.

- void `Assembly` (const `Element` &el, `real_t` *b, `real_t` *A0, `real_t` *A1, `real_t` *A2=NULL)

Assemble element arrays into global matrix and right-hand side.

- void `SAssembly` (const `Side` &sd, `real_t` *b, `real_t` *A=NULL)

Assemble side arrays into global matrix and right-hand side.

- `LinearSolver`< `real_t` > & `getLSolver` ()

Return `LinearSolver` instance.

7.106.1 Detailed Description

To solve time stepping problems, i.e. systems of linear ordinary differential equations of the form $[A2]\{y''\} + [A1]\{y'\} + [A0]\{y\} = \{b\}$.

Features:

- The system may be first or second order (first and/or second order time derivatives)
- The following time integration schemes can be used:
 - For first order systems: The following schemes are implemented Forward Euler (value↵ : `FORWARD_EULER`)
Backward Euler (value: `BACKWARD_EULER`)
Crank-Nicolson (value: `CRANK_NICOLSON`)
Heun (value: `HEUN`)
2nd Order Adams-Bashforth (value: `AB2`)
4-th order Runge-Kutta (value: `RK4`)
2nd order Backward Differentiation Formula (value: `BDF2`)
 - For second order systems: The following schemes are implemented Newmark (value↵ : `NEWMARK`)

7.106.2 Constructor & Destructor Documentation

`TimeStepping` (`TimeScheme` s, `real_t` time_step = theTimeStep, `real_t` final_time = theFinalTime)

Constructor using time discretization data.

Parameters

in	s	Choice of the scheme: To be chosen in the enumerated variable <i>TimeScheme</i> (see the presentation of the class)
in	time_step	Value of the time step. This value will be modified if an adaptive method is used. The default value for this parameter if the value given by the global variable theTimeStep
in	final_time	Value of the final time (time starts at 0). The default value for this parameter is the value given by the global variable theFinalTime

7.106.3 Member Function Documentation

void set (TimeScheme *s*, real_t *time_step* = theTimeStep, real_t *final_time* = theFinalTime)

Define data of the differential equation or system.

Parameters

in	<i>s</i>	Choice of the scheme: To be chosen in the enumerated variable <i>TimeScheme</i> (see the presentation of the class)
in	<i>time_step</i>	Value of the time step. This value will be modified if an adaptive method is used. The default value for this parameter is the value given by the global variable <i>theTimeStep</i>
in	<i>final_time</i>	Value of the final time (time starts at 0). The default value for this parameter is the value given by the global variable <i>theFinalTime</i>

void setPDE (AbsEqua< real_t > &*eq*, bool *nl* = false)

Define partial differential equation to solve.

The used equation class must have been constructed using the [Mesh](#) instance

Parameters

in	<i>eq</i>	Reference to equation instance
in	<i>nl</i>	Toggle to say if the considered equation is linear (Default value = 0) or not

void setRK4RHS (Vect< real_t > &*f*)

Set intermediate right-hand side vector for the Runge-Kutta method.

Parameters

in	<i>f</i>	Vector containing the RHS
----	----------	---------------------------

void setRK3_TVDRHS (Vect< real_t > &*f*)

Set intermediate right-hand side vector for the TVD Runge-Kutta 3 method.

Parameters

in	<i>f</i>	Vector containing the RHS
----	----------	---------------------------

void setInitial (Vect< real_t > &*u*)

Set initial condition for the system of differential equations.

Parameters

in	u	Vector containing initial condition for the unknown
----	-----	---

Remarks

If a second-order differential equation is to be solved, use the the same function with two initial vectors (one for the unknown, the second for its time derivative)

void setInitial (Vect< real.t > & u , Vect< real.t > & v)

Set initial condition for a system of differential equations.

Parameters

in	u	Vector containing initial condition for the unknown
in	v	Vector containing initial condition for the time derivative of the unknown

Note

This function can be used to provide solution at previous time step if a restarting procedure is used.

This member function is to be used only in the case of a second order system

void setInitialRHS (Vect< real.t > & f)

Set initial RHS for a system of differential equations when the used scheme requires it.

Giving the right-hand side at initial time is sometimes required for high order methods like Runge-Kutta

Parameters

in	f	Vector containing right-hand side at initial time. This vector is helpful for high order methods
----	-----	--

Note

This function can be used to provide solution at previous time step if a restarting procedure is used.

void setNewmarkParameters (real.t β , real.t γ)

Define parameters for the Newmark scheme.

Parameters

in	β	Parameter beta [Default: 0.25]
in	γ	Parameter gamma [Default: 0.5]

void setConstantMatrix ()

Say that matrix problem is constant.

This is useful if the linear system is solved by a factorization method but has no effect otherwise

void setNonConstantMatrix ()

Say that matrix problem is variable.

This is useful if the linear system is solved by a factorization method but has no effect otherwise

void setLinearSolver (Iteration *s* = DIRECT_SOLVER, Preconditioner *p* = DIAG_PREC)

Set linear solver data.

Parameters

in	<i>s</i>	Solver identification parameter. To be chosen in the enumeration variable Iteration: DIRECT_SOLVER, CG_SOLVER, CGS_SOLVER, BICG_SOLVER, BICG_STAB_SOLVER, GMRES_SOLVER, QMR_SOLVER [Default: DIRECT_SOLVER]
in	<i>p</i>	Preconditioner identification parameter. To be chosen in the enumeration variable Preconditioner: IDENT_PREC, DIAG_PREC, ILU_PREC [Default: DIAG_PREC]

Note

The argument *p* has no effect if the solver is DIRECT_SOLVER

void setVerbose (int *v* = 0)

Set verbosity parameter:

- = 0, No output
- = 1, Print step label and time value
- = 2, Print step label, time value, time step and integration scheme

real_t runOneTimeStep ()

Run one time step.

Returns

Value of new time step if this one is updated

void run (bool *opt* = false)

Run the time stepping procedure.

Parameters

in	<i>opt</i>	Flag to say if problem matrix is constant while time stepping (true) or not (Default value is false)
----	------------	--

Note

This argument is not used if the time stepping scheme is explicit

void Assembly (const Element & *el*, real_t * *b*, real_t * *A0*, real_t * *A1*, real_t * *A2* = *NULL*)

Assemble element arrays into global matrix and right-hand side.

This member function is to be called from finite element equation classes

Parameters

in	<i>el</i>	Reference to Element class
in	<i>b</i>	Pointer to element right-hand side
in	<i>A0</i>	Pointer to matrix of 0-th order term (involving no time derivative)
in	<i>A1</i>	Pointer to matrix of first order term (involving time first derivative)
in	<i>A2</i>	Pointer to matrix of second order term (involving time second derivative) [Default: NULL]

void SAssembly (const Side & *sd*, real_t * *b*, real_t * *A* = *NULL*)

Assemble side arrays into global matrix and right-hand side.

This member function is to be called from finite element equation classes


Parameters

in	<i>sd</i>	Reference to Side class
in	<i>b</i>	Pointer to side right-hand side
in	<i>A</i>	Pointer to matrix [Default: NULL]

7.107 TINS2DT3B Class Reference

Builds finite element arrays for thermal diffusion and convection in 2-D domains using 3-Node triangles.

Inheritance diagram for TINS2DT3B:

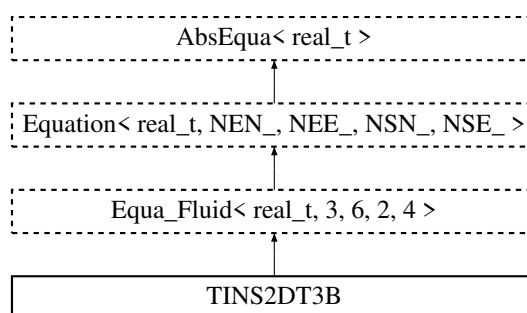

Public Member Functions

- **TINS2DT3B** ()
Default Constructor.
- **TINS2DT3B** (Mesh &mesh, Vect< real_t > &u, Vect< real_t > &p, real_t &ts, real_t Re=0.)
Constructor using mesh.
- **~TINS2DT3B** ()
Destructor.
- void **setInput** (EqDataType opt, Vect< real_t > &u)
Set equation input data.
- int **runOneTimeStep** ()
Run one time step.
- int **run** ()
Run (in the case of one step run)
- void **updateBC** (const Element &el, const Vect< real_t > &bc)
Update Right-Hand side by taking into account essential boundary conditions.
- void **updateBC** (const Vect< real_t > &bc)
Update Right-Hand side by taking into account essential boundary conditions.
- void **DiagBC** (int dof_type=NODE.DOF, int dof=0)
Update element matrix to impose bc by diagonalization technique.
- void **LocalNodeVector** (Vect< real_t > &b)
Localize Element Vector from a Vect instance.
- void **ElementNodeVector** (const Vect< real_t > &b, LocalVect< real_t, NEE_ > &be)
Localize Element Vector from a Vect instance.
- void **ElementNodeVector** (const Vect< real_t > &b, LocalVect< real_t, NEN_ > &be, int dof)
Localize Element Vector from a Vect instance.
- void **ElementNodeVectorSingleDOF** (const Vect< real_t > &b, LocalVect< real_t, NEN_ > &be)
Localize Element Vector from a Vect instance.
- void **ElementSideVector** (const Vect< real_t > &b, LocalVect< real_t, NSE_ > &be)
Localize Element Vector from a Vect instance.
- void **ElementVector** (const Vect< real_t > &b, int dof_type=NODE.FIELD, int flag=0)
Localize Element Vector.
- void **SideVector** (const Vect< real_t > &b)
Localize Side Vector.
- void **ElementNodeCoordinates** ()
Localize coordinates of element nodes.

- void [SideNodeCoordinates](#) ()
Localize coordinates of side nodes.
- void [ElementAssembly](#) (Matrix< real_t > *A)
Assemble element matrix into global one.
- void [ElementAssembly](#) (PETScMatrix< real_t > &A)
Assemble element matrix into global one.
- void [ElementAssembly](#) (PETScVect< real_t > &b)
Assemble element right-hand side vector into global one.
- void [ElementAssembly](#) (BMatrix< real_t > &A)
Assemble element matrix into global one.
- void [ElementAssembly](#) (SkSMatrix< real_t > &A)
Assemble element matrix into global one.
- void [ElementAssembly](#) (SkMatrix< real_t > &A)
Assemble element matrix into global one.
- void [ElementAssembly](#) (SpMatrix< real_t > &A)
Assemble element matrix into global one.
- void [ElementAssembly](#) (TrMatrix< real_t > &A)
Assemble element matrix into global one.
- void [ElementAssembly](#) (Vect< real_t > &v)
Assemble element vector into global one.
- void [SideAssembly](#) (PETScMatrix< real_t > &A)
Assemble side matrix into global one.
- void [SideAssembly](#) (PETScVect< real_t > &b)
Assemble side right-hand side vector into global one.
- void [SideAssembly](#) (Matrix< real_t > *A)
Assemble side (edge or face) matrix into global one.
- void [SideAssembly](#) (SkSMatrix< real_t > &A)
Assemble side (edge or face) matrix into global one.
- void [SideAssembly](#) (SkMatrix< real_t > &A)
Assemble side (edge or face) matrix into global one.
- void [SideAssembly](#) (SpMatrix< real_t > &A)
Assemble side (edge or face) matrix into global one.
- void [SideAssembly](#) (Vect< real_t > &v)
Assemble side (edge or face) vector into global one.
- void [DGElementAssembly](#) (Matrix< real_t > *A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void [DGElementAssembly](#) (SkSMatrix< real_t > &A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void [DGElementAssembly](#) (SkMatrix< real_t > &A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void [DGElementAssembly](#) (SpMatrix< real_t > &A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void [DGElementAssembly](#) (TrMatrix< real_t > &A)
Assemble element matrix into global one for the Discontinuous Galerkin approximation.
- void [AxbAssembly](#) (const [Element](#) &el, const Vect< real_t > &x, Vect< real_t > &b)
Assemble product of element matrix by element vector into global vector.

- void **AxbAssembly** (const **Side** &sd, const **Vect**< **real.t** > &x, **Vect**< **real.t** > &b)
Assemble product of side matrix by side vector into global vector.
- size.t **getNbNodes** () const
Return number of element nodes.
- size.t **getNbEq** () const
Return number of element equations.
- void **setInitialSolution** (const **Vect**< **real.t** > &u)
Set initial solution (previous time step)
- **real.t** **setMaterialProperty** (const string &exp, const string &prop)
Define a material property by an algebraic expression.
- void **setMesh** (**Mesh** &m)
Define mesh and renumber DOFs after removing imposed ones.
- **Mesh** & **getMesh** () const
Return reference to Mesh instance.
- **LinearSolver**< **real.t** > & **getLinearSolver** ()
Return reference to linear solver instance.
- void **setSolver** (**Iteration** ls, **Preconditioner** pc=**IDENT_PREC**)
Choose solver for the linear system.
- int **SolveLinearSystem** (**Matrix**< **real.t** > *A, **Vect**< **real.t** > &b, **Vect**< **real.t** > &x)
Solve the linear system.

Public Attributes

- **LocalMatrix**< **real.t**, **NEE_**, **NEE_** > **eMat**
LocalMatrix instance containing local matrix associated to current element.
- **LocalMatrix**< **real.t**, **NSE_**, **NSE_** > **sMat**
LocalMatrix instance containing local matrix associated to current side.
- **LocalVect**< **real.t**, **NEE_** > **ePrev**
LocalVect instance containing local vector associated to current element.
- **LocalVect**< **real.t**, **NEE_** > **eRHS**
LocalVect instance containing local right-hand side vector associated to current element.
- **LocalVect**< **real.t**, **NEE_** > **eRes**
LocalVect instance containing local residual vector associated to current element.
- **LocalVect**< **real.t**, **NSE_** > **sRHS**
LocalVect instance containing local right-hand side vector associated to current side.

Protected Member Functions

- void **Viscosity** (const **real.t** &visc)
Set (constant) Viscosity.
- void **Viscosity** (const string &exp)
Set viscosity given by an algebraic expression.
- void **Density** (const **real.t** &dens)
Set (constant) Viscosity.
- void **Density** (const string &exp)
Set Density given by an algebraic expression.
- void **ThermalExpansion** (const **real.t** *e)

- *Set (constant) thermal expansion coefficient.*
void [ThermalExpansion](#) (const string &exp)
- *Set thermal expansion coefficient given by an algebraic expression.*
void [setMaterial](#) ()
- *Set material properties.*
void [Init](#) (const [Element](#) *el)
- *Set element arrays to zero.*
void [Init](#) (const [Side](#) *sd)
- *Set side arrays to zero.*

7.107.1 Detailed Description

Builds finite element arrays for thermal diffusion and convection in 2-D domains using 3-Node triangles.

Note that members calculating element arrays have as an argument a double coef that will be multiplied by the contribution of the current element. This makes possible testing different algorithms.

7.107.2 Constructor & Destructor Documentation

TINS2DT3B ([Mesh](#) & mesh, [Vect](#)< real.t > & u, [Vect](#)< real.t > & p, real.t & ts, real.t Re = 0.)

Constructor using mesh.

Parameters

in	mesh	Mesh instance
in,out	u	Vect instance containing initial velocity. This vector is updated during computations and will therefore contain velocity at each time step
out	p	Vect instance that will contain pressure at nodes. This vector is updated during computations and will therefore contain pressure at each time step
in	ts	Time step
in	Re	Reynolds number. The default value (0) means that no Reynolds number is given and problem data are supplied by material properties. If Re has any other value, then nondimensional form of the equations is assumed and material properties are ignored.

7.107.3 Member Function Documentation

void setInput ([EqDataType](#) opt, [Vect](#)< real.t > & u)

Set equation input data.

Parameters

in	<i>opt</i>	Parameter to select type of input (enumerated values) <ul style="list-style-type: none"> • INITIAL_FIELD: Initial temperature • BOUNDARY_CONDITION_DATA: Boundary condition (Dirichlet) • SOURCE_DATA: Heat source • FLUX_DATA: Heat flux (Neumann boundary condition) • VELOCITY_FIELD: Velocity vector (for the convection term)
in	<i>u</i>	Vector containing input data (Vect instance)

void updateBC (const Element & *el*, const Vect< real_t > & *bc*) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>el</i>	Reference to current element instance
in	<i>bc</i>	Vector that contains imposed values at all DOFs

void updateBC (const Vect< real_t > & *bc*) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>bc</i>	Vector that contains imposed values at all DOFs
----	-----------	---

Remarks

The current element is pointed by `_theElement`

void DiagBC (int *dof_type* = *NODE_DOF*, int *dof* = 0) [inherited]

Update element matrix to impose bc by diagonalization technique.

Parameters

in	<i>dof_type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • NODE_FIELD, DOFs are supported by nodes [Default] • ELEMENT_FIELD, DOFs are supported by elements • SIDE_FIELD, DOFs are supported by sides
----	-----------------	---

Parameters

in	<i>dof</i>	DOF setting: <ul style="list-style-type: none"> • = 0, All DOFs are taken into account [Default] • != 0, Only DOF No. <i>dof</i> is handled in the system
----	------------	---

void LocalNodeVector (Vect< real.t > & b) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Reference to global vector to be localized. The resulting local vector can be accessed by attribute <i>ePrev</i> . This member function is to be used if a constructor with Element was invoked.
----	----------	--

void ElementNodeVector (const Vect< real.t > & b, LocalVect< real.t, NEE_ > & be)
[inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

All degrees of freedom are transferred to the local vector

void ElementNodeVector (const Vect< real.t > & b, LocalVect< real.t, NEN_ > & be, int dof) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.
in	<i>dof</i>	Degree of freedom to transfer to the local vector

Remarks

Only yhe dega dof is transferred to the local vector

void ElementNodeVectorSingleDOF (const Vect< real_t > & b, LocalVect< real_t, NEN_ > & be) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

Vector b is assumed to contain only one degree of freedom by node.

void ElementSideVector (const Vect< real_t > & b, LocalVect< real_t, NSE_ > & be) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is

void ElementVector (const Vect< real_t > & b, int dof_type = NODE_FIELD, int flag = 0) [inherited]

Localize Element Vector.

Parameters

in	<i>b</i>	Global vector to be localized
in	<i>dof_type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • NODE_FIELD, DOFs are supported by nodes [Default] • ELEMENT_FIELD, DOFs are supported by elements • SIDE_FIELD, DOFs are supported by sides
in	<i>flag</i>	Option to set: <ul style="list-style-type: none"> • = 0, All DOFs are taken into account [Default] • != 0, Only DOF number dof is handled in the system The resulting local vector can be accessed by attribute ePrev.

Remarks

This member function is to be used if a constructor with Element was invoked. It uses the Element pointer `_theElement`

void SideVector (const Vect< real_t > & b) [inherited]

Localize Side Vector.

Parameters

in	<i>b</i>	Global vector to be localized <ul style="list-style-type: none"> • <code>NODE_FIELD</code>, DOFs are supported by nodes [default] • <code>ELEMENT_FIELD</code>, DOFs are supported by elements • <code>SIDE_FIELD</code>, DOFs are supported by sides The resulting local vector can be accessed by attribute <code>ePrev</code> .
----	----------	---

Remarks

This member function is to be used if a constructor with Side was invoked. It uses the Side pointer `_theSide`

void ElementNodeCoordinates () [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array `_x[0]`, `_x[1]`, ... which are instances of class [Point<real_t>](#)

Remarks

This member function uses the Side pointer `_theSide`

void SideNodeCoordinates () [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array `_x[0]`, `_x[1]`, ... which are instances of class [Point<real_t>](#)

Remarks

This member function uses the Element pointer `_theElement`

void ElementAssembly (Matrix< real_t > * A) [inherited]

Assemble element matrix into global one.

Parameters

A	Pointer to global matrix (abstract class: can be any of classes <code>SkSMatrix</code> , <code>SkMatrix</code> , <code>SpMatrix</code>)
---	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScMatrix< real_t > &A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Reference to global matrix
----------	----------------------------

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScVect< real_t > &b) [inherited]

Assemble element right-hand side vector into global one.

Parameters

<i>b</i>	Reference to global right-hand side vector
----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (BMatrix< real_t > &A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Global matrix stored as a BMatrix instance
----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkSMatrix< real_t > &A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Global matrix stored as an SkSMatrix instance
----------	---

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkMatrix< real.t > & A) [inherited]

Assemble element matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an SkMatrix instance
----	----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SpMatrix< real.t > & A) [inherited]

Assemble element matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an SpMatrix instance
----	----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (TrMatrix< real.t > & A) [inherited]

Assemble element matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an TrMatrix instance
----	----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (Vect< real.t > & v) [inherited]

Assemble element vector into global one.

Parameters

in	<i>v</i>	Global vector (Vect instance)
----	----------	-------------------------------

Warning

The element pointer is given by the global variable `theElement`

void SideAssembly (PETScMatrix< real_t > &A) [inherited]

Assemble side matrix into global one.

Parameters

<i>A</i>	Reference to global matrix
----------	----------------------------

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (PETScVect< real_t > &b) [inherited]

Assemble side right-hand side vector into global one.

Parameters

<i>b</i>	Reference to global right-hand side vector
----------	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (Matrix< real_t > *A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

<i>A</i>	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
----------	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SkSMatrix< real_t > &A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an SkSMatrix instance
----	----------	---

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SkMatrix< real.t > & A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SpMatrix< real.t > & A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	A	Global matrix stored as an SpMatrix instance
----	---	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (Vect< real.t > & v) [inherited]

Assemble side (edge or face) vector into global one.

Parameters

in	v	Global vector (Vect instance)
----	---	-------------------------------

Warning

The side pointer is given by the global variable `theSide`

void DGElementAssembly (Matrix< real.t > * A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
---	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SkSMatrix< real_t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

<code>A</code>	Global matrix stored as an SkSMatrix instance
----------------	---

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SkMatrix< real_t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

<code>in</code>	<code>A</code>	Global matrix stored as an SkMatrix instance
-----------------	----------------	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SpMatrix< real_t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

<code>in</code>	<code>A</code>	Global matrix stored as an SpMatrix instance
-----------------	----------------	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (TrMatrix< real_t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

<code>in</code>	<code>A</code>	Global matrix stored as an TrMatrix instance
-----------------	----------------	--

Warning

The element pointer is given by the global variable `theElement`

void AxbAssembly (const Element & *el*, const Vect< real.t > & *x*, Vect< real.t > & *b*)
[inherited]

Assemble product of element matrix by element vector into global vector.

Parameters

in	<i>el</i>	Reference to Element instance
in	<i>x</i>	Global vector to multiply by (Vect instance)
out	<i>b</i>	Global vector to add (Vect instance)

void AxbAssembly (const Side & *sd*, const Vect< real.t > & *x*, Vect< real.t > & *b*)
[inherited]

Assemble product of side matrix by side vector into global vector.

Parameters

in	<i>sd</i>	Reference to Side instance
in	<i>x</i>	Global vector to multiply by (Vect instance)
out	<i>b</i>	Global vector (Vect instance)

real.t setMaterialProperty (const string & *exp*, const string & *prop*) [inherited]

Define a material property by an algebraic expression.

Parameters

in	<i>exp</i>	Algebraic expression
in	<i>prop</i>	Property name

Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

Mesh& getMesh () const [inherited]

Return reference to Mesh instance.

Returns

Reference to Mesh instance

void setSolver (Iteration *ls*, Preconditioner *pc* = *IDENT_PREC*) [inherited]

Choose solver for the linear system.

Parameters

in	<i>ls</i>	<p>Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER</p> <ul style="list-style-type: none"> • DIRECT_SOLVER, Use a facorization solver [default] • CG_SOLVER, Conjugate Gradient iterative solver • CGS_SOLVER, Squared Conjugate Gradient iterative solver • BICG_SOLVER, BiConjugate Gradient iterative solver • BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver • GMRES_SOLVER, GMRES iterative solver • QMR_SOLVER, QMR iterative solver
in	<i>pc</i>	<p>Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:</p> <ul style="list-style-type: none"> • IDENT_PREC, Identity preconditioner (no preconditioning [default]) • DIAG_PREC, Diagonal preconditioner • ILU_PREC, Incomplete LU factorization preconditioner

int SolveLinearSystem (Matrix< real_t > * *A*, Vect< real_t > & *b*, Vect< real_t > & *x*)
[inherited]

Solve the linear system.

Parameters

in	<i>A</i>	Pointer to matrix of the system (Instance of class SpMatrix)
in	<i>b</i>	Vector containing right-hand side
in,out	<i>x</i>	Vector containing initial guess of solution on input, actual solution on output

7.107.4 Member Data Documentation

LocalVect<real_t,NEE_> ePrev [inherited]


LocalVect instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

7.108 Triang3 Class Reference

Defines a 3-Node (P_1) triangle.

Inheritance diagram for Triang3:

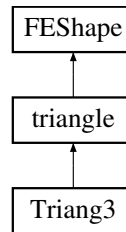

Public Member Functions

- [Triang3](#) ()
Default Constructor.
- [Triang3](#) (const [Element](#) *el)
Constructor for an element.
- [Triang3](#) (const [Side](#) *sd)
Constructor for a side.
- [~Triang3](#) ()
Destructor.
- void [set](#) (const [Element](#) *el)
Choose element by giving its pointer.
- void [set](#) (const [Side](#) *sd)
Choose side by giving its pointer.
- [real_t](#) [Sh](#) (size_t i, [Point](#)< [real_t](#) > s) const
Calculate shape function of node at a given point.
- [Point](#)< [real_t](#) > [DSh](#) (size_t i) const
Calculate derivatives of shape function of node i
- [real_t](#) [getInterpolate](#) (const [Point](#)< [real_t](#) > &x, const [LocalVect](#)< [real_t](#), 3 > &v)
Return interpolated value at point of coordinate x
- [real_t](#) [check](#) () const
Check element area and number of nodes.
- [Point](#)< [real_t](#) > [Grad](#) (const [LocalVect](#)< [real_t](#), 3 > &u) const
Return constant gradient vector in triangle.
- [real_t](#) [getMaxEdgeLength](#) () const
Return maximal edge length of triangle.
- [real_t](#) [getMinEdgeLength](#) () const
Return minimal edge length of triangle.
- [real_t](#) [getArea](#) ()
Return element area.
- [Point](#)< [real_t](#) > [getCenter](#) () const
Return coordinates of center of element.
- [Point](#)< [real_t](#) > [getCircumcenter](#) () const
Return coordinates of circumcenter of element.

- `real.t getCircumRadius () const`
Return radius of circumscribed circle of triangle.
- `real.t getInRadius () const`
Return radius of inscribed circle of triangle.
- `Point< real.t > getRefCoord (const Point< real.t > &x) const`
Return reference coordinates of a point x in element.
- `bool isIn (const Point< real.t > &x) const`
Check whether point x is in current triangle or not.
- `bool isStrictlyIn (const Point< real.t > &x) const`
Check whether point x is strictly in current triangle (not on the boundary) or not.
- `real.t Sh (size_t i) const`
Return shape function of node i at given point.
- `real.t getDet () const`
Return determinant of jacobian.
- `Point< real.t > getLocalPoint () const`
Localize a point in the element.
- `Point< real.t > getLocalPoint (const Point< real.t > &s) const`
Localize a point in the element.

7.108.1 Detailed Description

Defines a 3-Node (P_1) triangle.

The reference element is the rectangle triangle with two unit edges.

7.108.2 Constructor & Destructor Documentation

Triang3 (const Element * *el*)

Constructor for an element.

The constructed triangle is an element in a 2-D mesh.

Triang3 (const Side * *sd*)

Constructor for a side.

The constructed triangle is a side in a 3-D mesh.

7.108.3 Member Function Documentation

real.t Sh (size_t *i*, Point< real.t > *s*) const

Calculate shape function of node at a given point.

Parameters

in	<i>i</i>	Label (local) of node
in	<i>s</i>	Natural coordinates of node where to evaluate

real.t check () const

Check element area and number of nodes.

Returns

- > 0 : m is the length
- $= 0$: zero length (\Rightarrow Error)

Point<real_t> Grad (const LocalVect< real_t, 3 > & u) const

Return constant gradient vector in triangle.

Parameters

in	u	Local vector for which the gradient is evaluated
----	-----	--

real_t getDet () const [inherited]

Return determinant of jacobian.

If the transformation (Reference element \rightarrow Actual element) is not affine, member function **setLocal()** must have been called before in order to calculate relevant quantities.

Point<real_t> getLocalPoint () const [inherited]

Localize a point in the element.

Return actual coordinates in the reference element. If the transformation (Reference element \rightarrow Actual element) is not affine, member function **setLocal()** must have been called before in order to calculate relevant quantities.

Point<real_t> getLocalPoint (const Point< real_t > & s) const [inherited]


Localize a point in the element.

Return actual coordinates where s are coordinates in the reference element.

7.109 Triang6S Class Reference

Defines a 6-Node straight triangular finite element using P_2 interpolation.

Inheritance diagram for Triang6S:

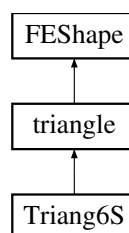

Public Member Functions

- [Triang6S \(\)](#)
Default Constructor.
- [Triang6S \(const Element *el\)](#)
Constructor for an element.

- `~Triang6S ()`
Destructor.
- `real_t Sh (size_t i, const Point< real_t > &s) const`
Calculate shape function of a node.
- `Point< real_t > DSh (size_t i, const Point< real_t > &s) const`
Calculate derivatives of shape function of a node.
- `Point< real_t > getCenter () const`
Return coordinates of center of element.
- `Point< real_t > Grad (const LocalVect< real_t, 6 > &u, const Point< real_t > &s) const`
Return gradient vector in triangle at a given point.
- `real_t getMaxEdgeLength () const`
Return maximal edge length of triangle.
- `real_t getMinEdgeLength () const`
Return minimal edge length of triangle.
- `real_t getArea ()`
Return element area.
- `Point< real_t > getCircumcenter () const`
Return coordinates of circumcenter of element.
- `real_t getCircumRadius () const`
Return radius of circumscribed circle of triangle.
- `real_t getInRadius () const`
Return radius of inscribed circle of triangle.
- `Point< real_t > getRefCoord (const Point< real_t > &x) const`
Return reference coordinates of a point x in element.
- `bool isIn (const Point< real_t > &x) const`
Check whether point x is in current triangle or not.
- `bool isStrictlyIn (const Point< real_t > &x) const`
Check whether point x is strictly in current triangle (not on the boundary) or not.
- `real_t Sh (size_t i) const`
Return shape function of node i at given point.
- `real_t Sh (size_t i, Point< real_t > s) const`
Calculate shape function of node i at a given point s .
- `Point< real_t > DSh (size_t i) const`
Return derivatives of shape function of node i at a given point.
- `real_t getDet () const`
Return determinant of jacobian.
- `Point< real_t > getLocalPoint () const`
Localize a point in the element.
- `Point< real_t > getLocalPoint (const Point< real_t > &s) const`
Localize a point in the element.

7.109.1 Detailed Description

Defines a 6-Node straight triangular finite element using P_2 interpolation.

The reference element is the rectangle triangle with two unit edges.

7.109.2 Constructor & Destructor Documentation

Triang6S (const Element * *el*)

Constructor for an element.

The constructed triangle is an element in a 2-D mesh.

Parameters

in	<i>el</i>	Pointer to Element instance
----	-----------	---

7.109.3 Member Function Documentation

real.t Sh (size.t *i*, const Point< real.t > & *s*) const

Calculate shape function of a node.

Parameters

in	<i>i</i>	Local label of the node $1 \leq i \leq 6$
in	<i>s</i>	Local coordinates of the point where the shape function is evaluated

Point<real.t> DSh (size.t *i*, const Point< real.t > & *s*) const

Calculate derivatives of shape function of a node.

Parameters

in	<i>i</i>	Local label of node
in	<i>s</i>	Local coordinates of the point where the gradient of the shape function is evaluated

Point<real.t> Grad (const LocalVect< real.t, 6 > & *u*, const Point< real.t > & *s*) const

Return gradient vector in triangle at a given point.

Parameters

in	<i>s</i>	Local coordinates of the point where the gradient of the shape function is evaluated
in	<i>u</i>	Local vector for which the gradient is evaluated

real.t Sh (size.t *i*, Point< real.t > *s*) const [inherited]

Calculate shape function of node *i* at a given point *s*.

Parameters

in	<i>i</i>	Local node label
in	<i>s</i>	Point in the reference triangle where the shape function is evaluated

Point<real_t> DSh (size_t i) const [inherited]

Return derivatives of shape function of node *i* at a given point.

If the transformation (Reference element -> Actual element) is not affine, member function **setLocal()** must have been called before in order to calculate relevant quantities.

Parameters

in	<i>i</i>	Partial derivative index (1, 2 or 3)
----	----------	--------------------------------------

real_t getDet () const [inherited]

Return determinant of jacobian.

If the transformation (Reference element -> Actual element) is not affine, member function **setLocal()** must have been called before in order to calculate relevant quantities.

Point<real_t> getLocalPoint () const [inherited]

Localize a point in the element.

Return actual coordinates in the reference element. If the transformation (Reference element -> Actual element) is not affine, member function **setLocal()** must have been called before in order to calculate relevant quantities.

Point<real_t> getLocalPoint (const Point< real_t > & s) const [inherited]


Localize a point in the element.

Return actual coordinates where *s* are coordinates in the reference element.

7.110 Triangle Class Reference

To store and treat a triangle.

Inheritance diagram for Triangle:

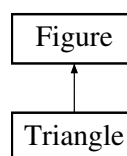

Public Member Functions

- **Triangle ()**
Default constructor.
- **Triangle (const Point< real_t > &v1, const Point< real_t > &v2, const Point< real_t > &v3, int code=1)**
Constructor with vertices and code.
- void **setVertex1 (const Point< real_t > &v)**
Assign first vertex of triangle.
- void **setVertex2 (const Point< real_t > &v)**
Assign second vertex of triangle.

- void **setVertex3** (const **Point**< **real.t** > &v)
Assign third vertex of triangle.
- **real.t** **getSignedDistance** (const **Point**< **real.t** > &p) const
Return signed distance of a given point from the current triangle.
- **Triangle** & **operator+=** (**Point**< **real.t** > a)
Operator +=.
- **Triangle** & **operator+=** (**real.t** a)
*Operator *+=.*
- void **setCode** (int code)
Choose a code for the domain defined by the figure.
- void **getSignedDistance** (const **Grid** &g, **Vect**< **real.t** > &d) const
Calculate signed distance to current figure with respect to grid points.
- **real.t** **dLine** (const **Point**< **real.t** > &p, const **Point**< **real.t** > &a, const **Point**< **real.t** > &b) const
Compute signed distance from a line.

7.110.1 Detailed Description

To store and treat a triangle.

7.110.2 Constructor & Destructor Documentation

Triangle ()

Default constructor.

Constructs a unit triangle with vertices (0,0), (1,0) and (0,1)

Triangle (const **Point**< **real.t** > &*v1*, const **Point**< **real.t** > &*v2*, const **Point**< **real.t** > &*v3*,
int *code* = 1)

Constructor with vertices and code.

Parameters

in	<i>v1</i>	Coordinates of first vertex of triangle
in	<i>v2</i>	Coordinates of second vertex of triangle
in	<i>v3</i>	Coordinates of third vertex of triangle
in	<i>code</i>	Code to assign to the generated figure [Default: 1]

Remarks

Vertices must be given in counterclockwise order

7.110.3 Member Function Documentation

real.t **getSignedDistance** (const **Point**< **real.t** > &*p*) const [virtual]

Return signed distance of a given point from the current triangle.

The computed distance is negative if *p* lies in the triangle, positive if it is outside, and 0 on its boundary

Parameters

in	p	Point<double> instance
----	-----	------------------------

Reimplemented from [Figure](#).

Triangle& operator+= (Point< real_t > a)

Operator +=.

Translate triangle by a vector a

Triangle& operator+= (real_t a)

Operator *+=.

Scale triangle by a factor a

void getSIGNEDDistance (const Grid & g , Vect< real_t > & d) const [inherited]

Calculate signed distance to current figure with respect to grid points.

Parameters

in	g	Grid instance
in	d	Vect instance containing calculated distance from each grid index to Figure

Remarks

Vector d doesn't need to be sized before invoking this function

real_t dLine (const Point< real_t > & p , const Point< real_t > & a , const Point< real_t > & b) const [inherited]

Compute signed distance from a line.

Parameters

in	p	Point for which distance is computed
in	a	First vertex of line
in	b	Second vertex of line


Returns

Signed distance

7.111 Triangle Class Reference

To store and treat a triangle.

Inheritance diagram for Triangle:

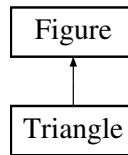

Public Member Functions

- **Triangle** ()
Default constructor.
- **Triangle** (const **Point**< **real_t** > &v1, const **Point**< **real_t** > &v2, const **Point**< **real_t** > &v3, int code=1)
Constructor with vertices and code.
- void **setVertex1** (const **Point**< **real_t** > &v)
Assign first vertex of triangle.
- void **setVertex2** (const **Point**< **real_t** > &v)
Assign second vertex of triangle.
- void **setVertex3** (const **Point**< **real_t** > &v)
Assign third vertex of triangle.
- **real_t** **getSignedDistance** (const **Point**< **real_t** > &p) const
Return signed distance of a given point from the current triangle.
- **Triangle** & **operator+=** (**Point**< **real_t** > a)
Operator +=.
- **Triangle** & **operator+=** (**real_t** a)
*Operator *+=.*
- void **setCode** (int code)
Choose a code for the domain defined by the figure.
- void **getSignedDistance** (const **Grid** &g, **Vect**< **real_t** > &d) const
Calculate signed distance to current figure with respect to grid points.
- **real_t** **dLine** (const **Point**< **real_t** > &p, const **Point**< **real_t** > &a, const **Point**< **real_t** > &b) const
Compute signed distance from a line.

7.111.1 Detailed Description

To store and treat a triangle.

7.111.2 Constructor & Destructor Documentation

Triangle ()

Default constructor.

Constructs a unit triangle with vertices (0,0), (1,0) and (0,1)

Triangle (const **Point**< **real_t** > &v1, const **Point**< **real_t** > &v2, const **Point**< **real_t** > &v3, int code = 1)

Constructor with vertices and code.

Parameters

in	<i>v1</i>	Coordinates of first vertex of triangle
in	<i>v2</i>	Coordinates of second vertex of triangle
in	<i>v3</i>	Coordinates of third vertex of triangle
in	<i>code</i>	Code to assign to the generated figure [Default: 1]

Remarks

Vertices must be given in counterclockwise order

7.111.3 Member Function Documentation

real.t `getSignedDistance (const Point< real.t > & p) const` [virtual]

Return signed distance of a given point from the current triangle.

The computed distance is negative if p lies in the triangle, positive if it is outside, and 0 on its boundary

Parameters

in	<i>p</i>	Point<double> instance
----	----------	------------------------

Reimplemented from [Figure](#).

Triangle& `operator+= (Point< real.t > a)`

Operator +=.

Translate triangle by a vector a

Triangle& `operator*= (real.t a)`

Operator *.

Scale triangle by a factor a

void `getSignedDistance (const Grid & g, Vect< real.t > & d) const` [inherited]

Calculate signed distance to current figure with respect to grid points.

Parameters

in	<i>g</i>	Grid instance
in	<i>d</i>	Vect instance containing calculated distance from each grid index to Figure

Remarks

Vector d doesn't need to be sized before invoking this function

real.t `dLine (const Point< real.t > & p, const Point< real.t > & a, const Point< real.t > & b) const` [inherited]

Compute signed distance from a line.

Parameters


in	<i>p</i>	Point for which distance is computed
in	<i>a</i>	First vertex of line
in	<i>b</i>	Second vertex of line

Returns

Signed distance

7.112 TrMatrix< T_ > Class Template Reference

To handle tridiagonal matrices.
Inheritance diagram for TrMatrix< T_ >:

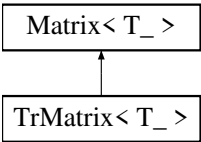

Public Member Functions

- [TrMatrix](#) ()
Default constructor.
- [TrMatrix](#) (size_t [size](#))
*Constructor for a tridiagonal matrix with *size* rows.*
- [TrMatrix](#) (const [TrMatrix](#) &m)
Copy Constructor.
- [~TrMatrix](#) ()
Destructor.
- void [Identity](#) ()
Define matrix as identity matrix.
- void [Diagonal](#) ()
Define matrix as a diagonal one.
- void [Diagonal](#) (const T_ &a)
*Define matrix as a diagonal one with diagonal entries equal to *a**
- void [Laplace1D](#) (real_t h)
Sets the matrix as the one for the Laplace equation in 1-D.
- void [setSize](#) (size_t [size](#))
Set size (number of rows) of matrix.
- void [MultAdd](#) (const [Vect](#)< T_ > &x, [Vect](#)< T_ > &y) const
*Multiply matrix by vector *x* and add result to *y*.*
- void [MultAdd](#) (T_ a, const [Vect](#)< T_ > &x, [Vect](#)< T_ > &y) const
*Multiply matrix by vector *a***x* and add result to *y*.*
- void [Mult](#) (const [Vect](#)< T_ > &x, [Vect](#)< T_ > &y) const
*Multiply matrix by vector *x* and save result in *y*.*

- void **TMult** (const **Vect**< T_ > &x, **Vect**< T_ > &y) const
Multiply transpose of matrix by vector x and save result in y .
- void **Axpy** (T_ a, const **TrMatrix**< T_ > &m)
Add to matrix the product of a matrix by a scalar.
- void **Axpy** (T_ a, const **Matrix**< T_ > *m)
Add to matrix the product of a matrix by a scalar.
- void **set** (size_t i, size_t j, const T_ &val)
Assign constant val to an entry (i, j) of the matrix.
- void **add** (size_t i, size_t j, const T_ &val)
Add constant val value to an entry (i, j) of the matrix.
- T_ **operator**() (size_t i, size_t j) const
Operator $()$ (Constant version).
- T_ &**operator**() (size_t i, size_t j)
Operator $()$ (Non constant version).
- **TrMatrix**< T_ > &**operator=** (const **TrMatrix**< T_ > &m)
Operator $=$.
- **TrMatrix**< T_ > &**operator=** (const T_ &x)
Operator $=$ Assign matrix to identity times x .
- **TrMatrix**< T_ > &**operator*=** (const T_ &x)
Operator $=$.*
- int **solve** (**Vect**< T_ > &b)
Solve a linear system with current matrix (forward and back substitution).
- int **solve** (const **Vect**< T_ > &b, **Vect**< T_ > &x)
Solve a linear system with current matrix (forward and back substitution).
- T_ * **get** () const
Return C-Array.
- T_ **get** (size_t i, size_t j) const
Return entry (i, j) of matrix.
- size_t **getNbRows** () const
Return number of rows.
- size_t **getNbColumns** () const
Return number of columns.
- void **setPenal** (real_t p)
Set Penalty Parameter (For boundary condition prescription).
- void **setDiagonal** ()
Set the matrix as diagonal.
- void **setDiagonal** (**Mesh** &mesh)
Initialize matrix storage in the case where only diagonal terms are stored.
- T_ **getDiag** (size_t k) const
Return k -th diagonal entry of matrix.
- size_t **size** () const
Return matrix dimension (Number of rows and columns).
- void **Assembly** (const **Element** &el, T_ *a)
Assembly of element matrix into global matrix.
- void **Assembly** (const **Element** &el, const **DMatrix**< T_ > &a)
Assembly of element matrix into global matrix.

- void [Assembly](#) (const [Side](#) &sd, T_ *a)
Assembly of side matrix into global matrix.
- void [Assembly](#) (const [Side](#) &sd, const [DMatrix](#)< T_ > &a)
Assembly of side matrix into global matrix.
- void [Prescribe](#) ([Vect](#)< T_ > &b, const [Vect](#)< T_ > &u, int flag=0)
Impose by a penalty method an essential boundary condition, using the [Mesh](#) instance provided by the constructor.
- void [Prescribe](#) (int dof, int code, [Vect](#)< T_ > &b, const [Vect](#)< T_ > &u, int flag=0)
Impose by a penalty method an essential boundary condition to a given degree of freedom for a given code.
- void [Prescribe](#) ([Vect](#)< T_ > &b, int flag=0)
Impose by a penalty method a homegeneous (=0) essential boundary condition.
- void [Prescribe](#) (size_t dof, [Vect](#)< T_ > &b, const [Vect](#)< T_ > &u, int flag=0)
Impose by a penalty method an essential boundary condition when only one DOF is treated.
- void [PrescribeSide](#) ()
Impose by a penalty method an essential boundary condition when DOFs are supported by sides.
- virtual int [Factor](#) ()=0
Factorize matrix. Available only if the storage class enables it.
- int [FactorAndSolve](#) ([Vect](#)< T_ > &b)
Factorize matrix and solve the linear system.
- int [FactorAndSolve](#) (const [Vect](#)< T_ > &b, [Vect](#)< T_ > &x)
Factorize matrix and solve the linear system.
- size_t [getLength](#) () const
Return number of stored terms in matrix.
- int [isDiagonal](#) () const
Say if matrix is diagonal or not.
- int [isFactorized](#) () const
Say if matrix is factorized or not.
- virtual size_t [getColInd](#) (size_t i) const
Return Column index for column i (See the description for class [SpMatrix](#)).
- virtual size_t [getRowPtr](#) (size_t i) const
Return Row pointer for row i (See the description for class [SpMatrix](#)).
- T_ [operator](#)() (size_t i) const
Operator () with one argument (Constant version).
- T_ & [operator](#)() (size_t i)
Operator () with one argument (Non Constant version).
- T_ & [operator](#)[] (size_t k)
Operator [] (Non constant version).
- T_ [operator](#)[] (size_t k) const
Operator [] (Constant version).
- [Matrix](#) & [operator](#)+= (const [Matrix](#)< T_ > &m)
Operator +=.
- [Matrix](#) & [operator](#)+= (const T_ &x)
Operator +=.
- [Matrix](#) & [operator](#)-= (const [Matrix](#)< T_ > &m)
Operator -=.
- [Matrix](#) & [operator](#)-= (const T_ &x)
Operator -=.

7.112.1 Detailed Description

template<class T_>
class OFELI::TrMatrix< T_ >

To handle tridiagonal matrices.

This class enables storing and manipulating tridiagonal matrices. The template parameter is the type of matrix entries

Template Parameters

$T \leftrightarrow$	Data type (double, float, complex<double>, ...)
$_ \leftrightarrow$	

7.112.2 Member Function Documentation

void Laplace1D (real.t h)

Sets the matrix as the one for the Laplace equation in 1-D.

The matrix is initialized as the one resulting from P_1 finite element discretization of the classical elliptic operator $-u'' = f$ with homogeneous Dirichlet boundary conditions

Remarks

This function is available for real valued matrices only.

Parameters

in	h	Mesh size (assumed constant)
----	-----	------------------------------

void setDiagonal (Mesh & mesh) [inherited]

Initialize matrix storage in the case where only diagonal terms are stored.

This member function is to be used for explicit time integration schemes

T_ getDiag (size.t k) const [inherited]

Return k-th diagonal entry of matrix.

First entry is given by **getDiag(1)**.

void Assembly (const Element & el, T_* a) [inherited]

Assembly of element matrix into global matrix.

Case where element matrix is given by a C-array.

Parameters

in	el	Pointer to element instance
in	a	Element matrix as a C-array

void Assembly (const Element & *el*, const DMatrix< T_ > & *a*) [inherited]

Assembly of element matrix into global matrix.

Case where element matrix is given by a [DMatrix](#) instance.

Parameters

in	<i>el</i>	Pointer to element instance
in	<i>a</i>	Element matrix as a DMatrix instance

void Assembly (const Side & *sd*, T_ * *a*) [inherited]

Assembly of side matrix into global matrix.

Case where side matrix is given by a C-array.

Parameters

in	<i>sd</i>	Pointer to side instance
in	<i>a</i>	Side matrix as a C-array instance

void Assembly (const Side & *sd*, const DMatrix< T_ > & *a*) [inherited]

Assembly of side matrix into global matrix.

Case where side matrix is given by a [DMatrix](#) instance.

Parameters

in	<i>sd</i>	Pointer to side instance
in	<i>a</i>	Side matrix as a DMatrix instance

void Prescribe (Vect< T_ > & *b*, const Vect< T_ > & *u*, int *flag* = 0) [inherited]

Impose by a penalty method an essential boundary condition, using the [Mesh](#) instance provided by the constructor.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function `setPenal(..)`.

Parameters

in,out	<i>b</i>	Vect instance that contains right-hand side.
in	<i>u</i>	Vect instance that contains imposed valued at DOFs where they are to be imposed.
in	<i>flag</i>	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).

void Prescribe (int dof, int code, Vect< T_ > & b, const Vect< T_ > & u, int flag = 0)
[inherited]

Impose by a penalty method an essential boundary condition to a given degree of freedom for a given code.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function **setPenal(..)**.

Parameters

in	<i>dof</i>	Degree of freedom for which a boundary condition is to be enforced
in	<i>code</i>	Code for which a boundary condition is to be enforced
in,out	<i>b</i>	Vect instance that contains right-hand side.
in	<i>u</i>	Vect instance that contains imposed valued at DOFs where they are to be imposed.
in	<i>flag</i>	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).

void Prescribe (Vect< T_ > & b, int flag = 0) [inherited]

Impose by a penalty method a homegeneous (=0) essential boundary condition.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function **setPenal(..)**.

Parameters

in,out	<i>b</i>	Vect instance that contains right-hand side.
in	<i>flag</i>	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).

void Prescribe (size_t dof, Vect< T_ > & b, const Vect< T_ > & u, int flag = 0) [inherited]

Impose by a penalty method an essential boundary condition when only one DOF is treated.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. This gunction is to be used if only one DOF per node is treated in the linear system. The penalty parameter is by default equal to 1.e20. It can be modified by member function **setPenal**.

Parameters

in	<i>dof</i>	Label of the concerned degree of freedom (DOF).
in,out	<i>b</i>	Vect instance that contains right-hand side.
in	<i>u</i>	Vect instance that conatins imposed valued at DOFs where they are to be imposed.

Parameters

in	<i>flag</i>	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).
----	-------------	--

void PrescribeSide () [inherited]

Impose by a penalty method an essential boundary condition when DOFs are supported by sides.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function `setPenal(..)`.

int FactorAndSolve (Vect< T_ > & b) [inherited]

Factorize matrix and solve the linear system.

This is available only if the storage class enables it.

Parameters

in, out	<i>b</i>	Vect instance that contains right-hand side on input and solution on output
---------	----------	---

int FactorAndSolve (const Vect< T_ > & b, Vect< T_ > & x) [inherited]

Factorize matrix and solve the linear system.

This is available only if the storage class enables it.

Parameters

in	<i>b</i>	Vect instance that contains right-hand side
out	<i>x</i>	Vect instance that contains solution

Returns

- 0 if solution was normally performed
- n if the n-th pivot is nul

int isFactorized () const [inherited]

Say if matrix is factorized or not.

If the matrix was not factorized, the class does not allow solving by a direct solver.

T_ operator() (size_t i) const [inherited]

Operator () with one argument (Constant version).

Returns i-th position in the array storing matrix entries. The first entry is at location 1. Entries are stored row by row.

Parameters

in	<i>i</i>	entry index
----	----------	-------------

T_& operator() (size_t *i*) [inherited]

Operator () with one argument (Non Constant version).

Returns *i*-th position in the array storing matrix entries. The first entry is at location 1. Entries are stored row by row.

Parameters

in	<i>i</i>	entry index
----	----------	-------------

T_& operator[] (size_t *k*) [inherited]

Operator [] (Non constant version).

Returns *k*-th stored element in matrix Index *k* starts at 0.

T_ operator[] (size_t *k*) const [inherited]

Operator [] (Constant version).

Returns *k*-th stored element in matrix Index *k* starts at 0.

Matrix& operator+= (const Matrix< T_ > & *m*) [inherited]

Operator +=.

Add matrix *m* to current matrix instance.

Matrix& operator+= (const T_ & *x*) [inherited]

Operator +=.

Add constant value *x* to all matrix entries.

Matrix& operator-= (const Matrix< T_ > & *m*) [inherited]

Operator -=.

Subtract matrix *m* from current matrix instance.

Matrix& operator-= (const T_ & *x*) [inherited]

Operator -=.

Subtract constant value *x* from all matrix entries.

7.113 UserData< T_ > Class Template Reference

Abstract class to define by user various problem data.

Public Member Functions

- [UserData](#) ()
Default Constructor.
- [UserData](#) (const class [Mesh](#) &mesh)
Constructor using mesh instance.
- virtual [~UserData](#) ()
Destructor.
- void [setTime](#) (real.t time)
Set time value.
- void [setDBC](#) (Vect< T_ > &b)
Set Dirichlet Boundary Conditions.
- void [setInitialData](#) (Vect< T_ > &b)
Set initial data.
- void [setBodyForce](#) (Vect< T_ > &b)
Set Nodewise Body Force using a Vect instance.
- void [setSurfaceForce](#) (Vect< T_ > &b)
Set Surface Force.
- virtual T_ [BoundaryCondition](#) (Point< real.t > x, int code, real.t time=0., size.t dof=1)
Define boundary condition to impose at point of coordinates x , with code `code` at time `time`, for DOF `dof`
- virtual T_ [BodyForce](#) (Point< real.t > x, real.t time=0., size.t dof=1)
Define body force to impose at point of coordinates x , with code `code` at time `time`, for DOF `dof`
- virtual T_ [SurfaceForce](#) (Point< real.t > x, int code, real.t time=0., size.t dof=1)
Define surface force to impose at point of coordinates x , with code `code` at time `time`, for DOF `dof`
- virtual T_ [InitialData](#) (Point< real.t > x, size.t dof=1)
Define initial data to impose at point of coordinates x , for DOF `dof`

7.113.1 Detailed Description

template<class T_>
class OFELI::UserData< T_ >

Abstract class to define by user various problem data.

The user has to implement a class that inherits from the present one where the virtual functions are implemented.

Template Parameters

$\langle T_ \leftarrow$	Data type (real.t, float, complex<real.t>, ...)
\rightarrow	

7.113.2 Constructor & Destructor Documentation

UserData (const class Mesh & mesh)

Constructor using mesh instance.

Parameters

<i>mesh</i>	Reference to Mesh instance
-------------	--

7.113.3 Member Function Documentation

void setDBC (Vect< T_ > & b)

Set Dirichlet Boundary Conditions.

This function loops over all nodes and calls for each node the member function BoundaryCondition to assign the value defined by it

Parameters

out	<i>b</i>	Vector that contains boundary conditions at nodes This vector must be sized before invoking this function
-----	----------	---

void setInitialData (Vect< T_ > & b)

Set initial data.

This function loops over all nodes and calls for each node the member function InitialData to assign the value defined by it

Parameters

out	<i>b</i>	Vector that contains initial data at nodes This vector must be sized before invoking this function
-----	----------	--

void setBodyForce (Vect< T_ > & b)

Set Nodewise Body Force using a Vect instance.

Parameters

in	<i>b</i>	Vector containing body forces at nodes to impose
----	----------	--

This function loops over all nodes and calls for each node the member function BodyForce to assign the value defined by it

Parameters

out	<i>b</i>	Vector that contains body forces at nodes This vector must be sized before invoking this function
-----	----------	---

void setSurfaceForce (Vect< T_ > & b)

Set Surface Force.

Parameters

in	<i>b</i>	Vector containing surface forces at nodes to impose
----	----------	---

This function loops over all nodes and calls for each node the member function SurfaceForce to assign the value defined by it

Parameters

out	<i>b</i>	Vector that contains body forces at nodes This vector must be sized before invoking this function
-----	----------	---

virtual T_ BoundaryCondition (Point< real_t > *x*, int *code*, real_t *time* = 0., size_t *dof* = 1)
[virtual]

Define boundary condition to impose at point of coordinates *x*, with code *code* at time *time*, for DOF *dof*

Function to implement by user

Parameters

in	<i>x</i>	Coordinates of point at which the value is to be prescribed
in	<i>code</i>	Code of node for which the value is to be prescribed
in	<i>time</i>	Value of time [Default: 0.]
in	<i>dof</i>	Corresponding degree of freedom [Default: 1]

Returns

Value of boundary condition to prescribe corresponding to these parameters

virtual T_ BodyForce (Point< real_t > *x*, real_t *time* = 0., size_t *dof* = 1) [virtual]

Define body force to impose at point of coordinates *x*, with code *code* at time *time*, for DOF *dof*

Function to implement by user

Parameters

in	<i>x</i>	Coordinates of point at which the body force is given
in	<i>time</i>	Value of time [Default: 0.]
in	<i>dof</i>	Corresponding degree of freedom [Default: 1]

Returns

Value of body force corresponding to these parameters

virtual T_ SurfaceForce (Point< real_t > *x*, int *code*, real_t *time* = 0., size_t *dof* = 1)
[virtual]

Define surface force to impose at point of coordinates *x*, with code *code* at time *time*, for DOF *dof*

Function to implement by user

Parameters

in	<i>x</i>	Coordinates of point at which the surface force is given
----	----------	--

Parameters

in	<i>code</i>	Code of node for which the surface force is given
in	<i>time</i>	Value of time [Default: 0.]
in	<i>dof</i>	Corresponding degree of freedom [Default: 1]

Returns

Value of surface force corresponding to these parameters

virtual T. InitialData (Point< real.t > x, size.t dof = 1) [virtual]

Define initial data to impose at point of coordinates x, for DOF dof
Function to implement by user

Parameters

in	<i>x</i>	Coordinates of point at which the surface force is given
in	<i>dof</i>	Corresponding degree of freedom [Default: 1]

Returns

Value of initial data corresponding to these parameters

7.114 Vect< T_ > Class Template Reference

To handle general purpose vectors.

Public Types

- `typedef Eigen::Matrix< T_, Eigen::Dynamic, 1 > VectorX`
This type is the vector type in the Eigen library.

Public Member Functions

- `Vect ()`
Default Constructor. Initialize a zero-length vector.
- `Vect (size_t n)`
Constructor setting vector size.
- `Vect (size_t nx, size_t ny)`
Constructor of a 2-D index vector.
- `Vect (size_t nx, size_t ny, size_t nz)`
Constructor of a 3-D index vector.
- `Vect (size_t n, T_ *x)`
Create an instance of class Vect as an image of a C/C++ array.
- `Vect (Mesh &m, int nb_dof=0, int dof_type=NODE_FIELD)`
Constructor with a mesh instance.
- `Vect (Mesh &m, string name, real.t t=0.0, int nb_dof=0, int dof_type=NODE_FIELD)`

- Constructor with a mesh instance giving name and time for vector.*

 - **Vect** (const **Element** *el, const **Vect**< T_ > &v)

Constructor of an element vector.
- **Vect** (const **Side** *sd, const **Vect**< T_ > &v)

Constructor of a side vector.
- **Vect** (const **Vect**< T_ > &v, const **Vect**< T_ > &bc)

Constructor using boundary conditions.
- **Vect** (const **Vect**< T_ > &v, size_t nb_dof, size_t first_dof)

Constructor to select some components of a given vector.
- **Vect** (const **Vect**< T_ > &v)

Copy constructor.
- **Vect** (const **Vect**< T_ > &v, size_t n)

Constructor to select one component from a given 2 or 3-component vector.
- **Vect** (size_t d, const **Vect**< T_ > &v, const string &name=" ")

Constructor that extracts some degrees of freedom (components) from given instance of Vect.
- **Vect** (const **VectorX** &v)

Constructor that copies the vector from a Eigen Vector instance.
- **~Vect** ()

Destructor.
- void **set** (const T_ *v, size_t n)

Initialize vector with a c-array.
- void **select** (const **Vect**< T_ > &v, size_t nb_dof=0, size_t first_dof=1)

Initialize vector with another Vect instance.
- void **set** (const string &exp, size_t dof=1)

Initialize vector with an algebraic expression.
- void **set** (const string &exp, const **Vect**< real_t > &x)

Initialize vector with an algebraic expression.
- void **set** (**Mesh** &ms, const string &exp, size_t dof=1)

Initialize vector with an algebraic expression with providing mesh data.
- void **set** (const **Vect**< real_t > &x, const string &exp)

Initialize vector with an algebraic expression.
- void **setMesh** (**Mesh** &m, size_t nb_dof=0, size_t dof_type=NODE_FIELD)

Define mesh class to size vector.
- size_t **size** () const

Return vector (global) size.
- void **setSize** (size_t nx, size_t ny=1, size_t nz=1)

Set vector size (for 1-D, 2-D or 3-D cases)
- void **resize** (size_t n)

Set vector size.
- void **resize** (size_t n, T_ v)

Set vector size and initialize to a constant value.
- void **setDOFType** (int dof_type)

Set DOF type of vector.
- void **setDG** (int degree=1)

Set Discontinuous Galerkin type vector.
- size_t **getNbDOF** () const

- Return vector number of degrees of freedom.*
- `size_t getNb () const`
Return vector number of entities (nodes, elements or sides)
- `Mesh & getMesh () const`
Return Mesh instance.
- `bool WithMesh () const`
Return true if vector contains a Mesh pointer, false if not.
- `int getDOFType () const`
- `void setTime (real_t t)`
Set time value for vector.
- `real_t getTime () const`
Get time value for vector.
- `void setName (string name)`
Set name of vector.
- `string getName () const`
Get name of vector.
- `real_t getNorm1 () const`
Calculate 1-norm of vector.
- `real_t getNorm2 () const`
Calculate 2-norm (Euclidean norm) of vector.
- `real_t getNormMax () const`
Calculate Max-norm (Infinite norm) of vector.
- `real_t getWNorm1 () const`
Calculate weighted 1-norm of vector The wighted 1-norm is the 1-Norm of the vector divided by its size.
- `real_t getWNorm2 () const`
Calculate weighted 2-norm of vector.
- `T_ getMin () const`
Calculate Min value of vector entries.
- `T_ getMax () const`
Calculate Max value of vector entries.
- `size_t getNx () const`
Return number of grid points in the x-direction if grid indexing is set.
- `size_t getNy () const`
Return number of grid points in the y-direction if grid indexing is set.
- `size_t getNz () const`
Return number of grid points in the z-direction if grid indexing is set.
- `void setNodeBC (Mesh &m, int code, T_ val, size_t dof=1)`
Assign a given value to components of vector with given code.
- `void setSideBC (Mesh &m, int code, T_ val, size_t dof=1)`
Assign a given value to components of vector corresponding to sides with given code.
- `void setNodeBC (Mesh &m, int code, const string &exp, size_t dof=1)`
Assign a given function (given by an interpretable algebraic expression) to components of vector with given code.
- `void setSideBC (Mesh &m, int code, const string &exp, size_t dof=1)`
Assign a given function (given by an interpretable algebraic expression) to components of vector corresponding to sides with given code.
- `void setNodeBC (int code, T_ val, size_t dof=1)`

- Assign a given value to components of vector with given code.*

 - void **setNodeBC** (int code, const string &exp, size_t dof=1)
Assign a given function (given by an interpretable algebraic expression) to components of vector with given code.
 - void **setSideBC** (int code, const string &exp, size_t dof=1)
Assign a given function (given by an interpretable algebraic expression) to components of vector with given code.
 - void **setSideBC** (int code, T_ val, size_t dof=1)
Assign a given value to components of vector with given code.
 - void **removeBC** (const Mesh &ms, const Vect< T_ > &v, int dof=0)
Remove boundary conditions.
 - void **removeBC** (const Vect< T_ > &v, int dof=0)
Remove boundary conditions.
 - void **transferBC** (const Vect< T_ > &bc, int dof=0)
Transfer boundary conditions to the vector.
 - void **insertBC** (Mesh &m, const Vect< T_ > &v, const Vect< T_ > &bc, int dof=0)
Insert boundary conditions.
 - void **insertBC** (Mesh &m, const Vect< T_ > &v, int dof=0)
Insert boundary conditions.
 - void **insertBC** (const Vect< T_ > &v, const Vect< T_ > &bc, int dof=0)
Insert boundary conditions.
 - void **insertBC** (const Vect< T_ > &v, int dof=0)
Insert boundary conditions.
 - void **Assembly** (const Element &el, const Vect< T_ > &b)
Assembly of element vector into current instance.
 - void **Assembly** (const Element &el, const T_ *b)
Assembly of element vector (as C-array) into Vect instance.
 - void **Assembly** (const Side &sd, const Vect< T_ > &b)
Assembly of side vector into Vect instance.
 - void **Assembly** (const Side &sd, T_ *b)
Assembly of side vector (as C-array) into Vect instance.
 - void **getGradient** (class Vect< T_ > &v)
Evaluate the discrete Gradient vector of the current vector.
 - void **getGradient** (Vect< Point< T_ > > &v)
Evaluate the discrete Gradient vector of the current vector.
 - void **getCurl** (Vect< T_ > &v)
Evaluate the discrete curl vector of the current vector.
 - void **getCurl** (Vect< Point< T_ > > &v)
Evaluate the discrete curl vector of the current vector.
 - void **getSCurl** (Vect< T_ > &v)
Evaluate the discrete scalar curl in 2-D of the current vector.
 - void **getDivergence** (Vect< T_ > &v)
Evaluate the discrete Divergence of the current vector.
 - **real_t** **getAverage** (const Element &el, int type) const
Return average value of vector in a given element.
 - Vect< T_ > & **MultAdd** (const Vect< T_ > &x, const T_ &a)
Multiply by a constant then add to a vector.

- void **Axpy** (T_ a, const **Vect**< T_ > &x)
Add to vector the product of a vector by a scalar.
- void **set** (size_t i, T_ val)
Assign a value to an entry for a 1-D vector.
- void **set** (size_t i, size_t j, T_ val)
Assign a value to an entry for a 2-D vector.
- void **set** (size_t i, size_t j, size_t k, T_ val)
Assign a value to an entry for a 3-D vector.
- void **add** (size_t i, T_ val)
Add a value to an entry for a 1-index vector.
- void **add** (size_t i, size_t j, T_ val)
Add a value to an entry for a 2-index vector.
- void **add** (size_t i, size_t j, size_t k, T_ val)
Assign a value to an entry for a 3-index vector.
- void **clear** ()
Clear vector: Set all its elements to zero.
- T_ & **operator[]** (size_t i)
Operator [] (Non constant version)
- T_ **operator[]** (size_t i) const
Operator [] (Constant version)
- T_ & **operator()** (size_t i)
Operator () (Non constant version)
- T_ **operator()** (size_t i) const
Operator () (Constant version)
- T_ & **operator()** (size_t i, size_t j)
Operator () with 2-D indexing (Non constant version, case of a grid vector).
- T_ **operator()** (size_t i, size_t j) const
Operator () with 2-D indexing (Constant version).
- T_ & **operator()** (size_t i, size_t j, size_t k)
Operator () with 3-D indexing (Non constant version).
- T_ **operator()** (size_t i, size_t j, size_t k) const
Operator () with 3-D indexing (Constant version).
- **Vect**< T_ > & **operator=** (const **Vect**< T_ > &v)
Operator = between vectors.
- **Vect**< T_ > & **operator=** (const **VectorX** &v)
Operator = for an instance of VectorX
- void **operator=** (string s)
Operator =
- void **setUniform** (T_ vmin, T_ delta, T_ vmax)
Initialize vector entries by setting extremal values and interval.
- **Vect**< T_ > & **operator=** (const T_ &a)
Operator =
- **Vect**< T_ > & **operator+=** (const **Vect**< T_ > &v)
Operator +=
- **Vect**< T_ > & **operator+=** (const T_ &a)
Operator +=

- `Vect< T_ > & operator-=` (const `Vect< T_ > &v`)
Operator -=
- `Vect< T_ > & operator-=` (const `T_ &a`)
Operator -=
- `Vect< T_ > & operator*=` (const `T_ &a`)
*Operator *=*
- `Vect< T_ > & operator/=` (const `T_ &a`)
Operator /=
- `void push.back` (const `T_ &v`)
Add an entry to the vector.
- `const Mesh & getMeshPtr` () const
Return reference to Mesh instance.
- `T_ operator,` (const `Vect< T_ > &v`) const
Return Dot (scalar) product of two vectors.
- `operator VectorX` () const
Casting operator.

7.114.1 Detailed Description

template<class T_>
class OFELI::Vect< T_ >

To handle general purpose vectors.

This template class enables defining and manipulating vectors of various data types. It inherits from the class `std::vector`. An instance of class `Vect` can be:

- A simple vector of given size
- A vector with up to three indices, *i.e.*, an entry of the vector can be `a(i)`, `a(i, j)` or `a(i, j, k)`. This feature is useful, for instance, in the case of a structured grid
- A vector associate to a finite element mesh. In this case, a constructor uses a reference to the `Mesh` instance. The size of the vector is by default equal to the number of nodes x the number of degrees of freedom by node. If the degrees of freedom are supported by elements or sides, then the vector is sized accordingly

Operators `=`, `[]` and `()` are overloaded so that one can write for instance:

```
Vect<real_t> u(10), v(10);
v = -1.0;
u = v;
u(3) = -2.0;
```

to set vector `v` entries to `-1`, copy vector `v` into vector `u` and assign third entry of `v` to `-2`. Note that entries of `v` are here `v(1)`, `v(2)`, ..., `v(10)`, *i.e.* vector entries start at index `1`.

Template Parameters

T_{\leftarrow}	Data type (real_t, float, complex<real_t>, ...)
$_{\leftarrow}$	

7.114.2 Constructor & Destructor Documentation

Vect (size_t *n*)

Constructor setting vector size.

Parameters

in	<i>n</i>	Size of vector
----	----------	----------------

Vect (size_t *nx*, size_t *ny*)

Constructor of a 2-D index vector.

This constructor can be used for instance for a 2-D grid vector

Parameters

in	<i>nx</i>	Size for the first index
in	<i>ny</i>	Size for the second index

Remarks

The size of resulting vector is $nx*ny$

Vect (size_t *nx*, size_t *ny*, size_t *nz*)

Constructor of a 3-D index vector.

This constructor can be used for instance for a 3-D grid vector

Parameters

in	<i>nx</i>	Size for the first index
in	<i>ny</i>	Size for the second index
in	<i>nz</i>	Size for the third index

Remarks

The size of resulting vector is $nx*ny*nz$

Vect (size_t *n*, T_ * *x*)

Create an instance of class [Vect](#) as an image of a C/C++ array.

Parameters

in	<i>n</i>	Dimension of vector to construct
in	<i>x</i>	C-array to copy

Vect (Mesh & *m*, int *nb_dof* = 0, int *dof_type* = *NODE_FIELD*)

Constructor with a mesh instance.

Parameters

in	<i>m</i>	Mesh instance
in	<i>nb_dof</i>	Number of degrees of freedom per node, element or side If nb_dof is set to 0 (default value) the constructor picks this number from the Mesh instance
in	<i>dof_type</i>	Type of degrees of freedom. To be given among the enumerated values: NODE_FIELD, ELEMENT_FIELD, SIDE_FIELD or EDGE_FIELD (Default: NODE_FIELD)

Vect (Mesh & *m*, string *name*, real *t* = 0.0, int *nb_dof* = 0, int *dof_type* = *NODE_FIELD*)

Constructor with a mesh instance giving name and time for vector.

Parameters

in	<i>m</i>	Mesh instance
in	<i>name</i>	Name of the vector
in	<i>t</i>	Time value for the vector
in	<i>nb_dof</i>	Number of degrees of freedom per node, element or side If nb_dof is set to 0 the constructor picks this number from the Mesh instance
in	<i>dof_type</i>	Type of degrees of freedom. To be given among the enumerated values: NODE_FIELD, ELEMENT_FIELD, SIDE_FIELD or EDGE_FIELD (Default: NODE_FIELD)

Vect (const Element * *el*, const Vect< T_ > & *v*)

Constructor of an element vector.

The constructed vector has local numbering of nodes

Parameters

in	<i>el</i>	Pointer to Element to localize
in	<i>v</i>	Global vector to localize

Vect (const Side * *sd*, const Vect< T_ > & *v*)

Constructor of a side vector.

The constructed vector has local numbering of nodes

Parameters

in	<i>sd</i>	Pointer to Side to localize
in	<i>v</i>	Global vector to localize

`Vect (const Vect< T_ > & v, const Vect< T_ > & bc)`

Constructor using boundary conditions.

Boundary condition values contained in `bc` are reported to vector `v`

Parameters

in	<i>v</i>	Vect instance to update
in	<i>bc</i>	Vect instance containing imposed values at desired DOF

`Vect (const Vect< T_ > & v, size_t nb_dof, size_t first_dof)`

Constructor to select some components of a given vector.

Parameters

in	<i>v</i>	Vect instance to extract from
in	<i>nb_dof</i>	Number of DOF to extract
in	<i>first_dof</i>	First DOF to extract For instance, a choice <code>first_dof=2</code> and <code>nb_dof=1</code> means that the second DOF of each node is copied in the vector

`Vect (const Vect< T_ > & v, size_t n)`

Constructor to select one component from a given 2 or 3-component vector.

Parameters

in	<i>v</i>	Vect instance to extract from
in	<i>n</i>	Component to extract (must be > 1 and < 4 or).

`Vect (size_t d, const Vect< T_ > & v, const string & name = " ")`

Constructor that extracts some degrees of freedom (components) from given instance of [Vect](#).

This constructor enables constructing a subvector of a given [Vect](#) instance. It selects a given list of degrees of freedom and put it according to a given order in the instance to construct.

Parameters

in	<i>d</i>	Integer number giving the list of degrees of freedom. This number is made of <code>n</code> digits where <code>n</code> is the number of degrees of freedom. Let us give an example: Assume that the instance <code>v</code> has 3 DOF by entity (node, element or side). The choice <code>d=201</code> means that the constructed instance has 2 DOF where the first DOF is the third one of <code>v</code> , and the second DOF is the first one of <code>v</code> . Consequently, no digit can be larger than the number of DOF the constructed instance. In this example, a choice <code>d=103</code> would produce an error message.
in	<i>v</i>	Vect instance from which extraction is performed.
in	<i>name</i>	Name to assign to vector instance (Default value is " ").

Warning

Don't give zeros as first digits for the argument *d*. The number is in this case interpreted as octal !!

Vect (const VectorX & *v*)

Constructor that copies the vector from a Eigen Vector instance.

Parameters

in	<i>v</i>	VectorX instance from which extraction is performed
----	----------	---

Warning

This constructor is available only if the library `eigen` is used in conjunction with [OFELI](#)

Remarks

: This constructor is available only if the Eigen library was installed in conjunction with [OFELI](#)

7.114.3 Member Function Documentation**void set (const T_ * *v*, size_t *n*)**

Initialize vector with a c-array.

Parameters

in	<i>v</i>	c-array (pointer) to initialize Vect
in	<i>n</i>	size of array

void select (const Vect< T_ > & *v*, size_t *nb_dof* = 0, size_t *first_dof* = 1)

Initialize vector with another [Vect](#) instance.

Parameters

in	<i>v</i>	Vect instance to extract from
in	<i>nb_dof</i>	Number of DOF per node, element or side (By default, 0: Number of degrees of freedom extracted from the Mesh instance)
in	<i>first_dof</i>	First DOF to extract (Default: 1) For instance, a choice <code>first_dof=2</code> and <code>nb_dof=1</code> means that the second DOF of each node is copied in the vector

void set (const string & *exp*, size_t *dof* = 1)

Initialize vector with an algebraic expression.

This function is to be used is a [Mesh](#) instance is associated to the vector

Parameters

in	<i>exp</i>	Regular algebraic expression that defines a function of x, y, z which are coordinates of nodes and t which is the time value.
in	<i>dof</i>	Degree of freedom to which the value is assigned [Default: 1]

Warning

If the time variable *t* is involved in the expression, the time value associated to the vector instance must be defined (Default value is 0) either by using the appropriate constructor or by the member function `setTime`.

void set (const string & *exp*, const Vect< real.t > & *x*)

Initialize vector with an algebraic expression.

This function can be used for instance in 1-D

Parameters

in	<i>exp</i>	Regular algebraic expression that defines a function of x which are coordinates of nodes
in	<i>x</i>	Vector

void set (Mesh & *ms*, const string & *exp*, size_t *dof* = 1)

Initialize vector with an algebraic expression with providing mesh data.

Parameters

in	<i>ms</i>	Mesh instance
in	<i>exp</i>	Regular algebraic expression that defines a function of x, y and z which are coordinates of nodes.
in	<i>dof</i>	Degree of freedom to which the value is assigned [Default: 1]

void set (const Vect< real.t > & *x*, const string & *exp*)

Initialize vector with an algebraic expression.

Parameters

in	<i>x</i>	Vect instance that contains coordinates of points
in	<i>exp</i>	Regular algebraic expression that defines a function of x and i which are coordinates of nodes and indices starting from 1.

void setMesh (Mesh & *m*, size_t *nb_dof* = 0, size_t *dof_type* = *NODE_FIELD*)

Define mesh class to size vector.

Parameters

in	<i>m</i>	Mesh instance
in	<i>nb_dof</i>	Number of degrees of freedom per node, element or side If nb_dof is set to 0 the constructor picks this number from the Mesh instance
in	<i>dof_type</i>	Parameter to precise the type of degrees of freedom. To be chosen among the enumerated values: NODE_FIELD, ELEMENT_FIELD, SIDE_FIELD, EDGE_FIELD [Default: NODE_FIELD]

size_t size () const

Return vector (global) size.

Warning

This constructor is available only if the library `eigen` is used in conjunction with [OFELI](#)

void setSize (size_t nx, size_t ny = 1, size_t nz = 1)

Set vector size (for 1-D, 2-D or 3-D cases)

This function allocates memory for the vector but does not initialize its components

Parameters

in	<i>nx</i>	Number of grid points in x-direction
in	<i>ny</i>	Number of grid points in y-direction [Default: 1]
in	<i>nz</i>	Number of grid points in z-direction [Default: 1]

void resize (size_t n)

Set vector size.

This function allocates memory for the vector but does not initialize its components

Parameters

in	<i>n</i>	Size of vector
----	----------	----------------

void resize (size_t n, T_ v)

Set vector size and initialize to a constant value.

This function allocates memory for the vector

Parameters

in	<i>n</i>	Size of vector
in	<i>v</i>	Value to assign to vector entries

void setDOFType (int *dof_type*)

Set DOF type of vector.

The DOF type combined with number of DOF per component enable determining the size of vector

Parameters

in	<i>dof_type</i>	Type of degrees of freedom. Value to be chosen among the enumerated values: <code>NODE_FIELD</code> , <code>ELEMENT_FIELD</code> , <code>SIDE_FIELD</code> or <code>EDGE_FIELD</code>
----	-----------------	---

void setDG (int *degree* = 1)

Set Discontinuous Galerkin type vector.

When the vector is associated to a mesh, this one is sized differently if the [DG](#) method is used.

Parameters

in	<i>degree</i>	Polynomial degree of the DG method [Default: 1]
----	---------------	---

bool WithMesh () const

Return true if vector contains a [Mesh](#) pointer, false if not.

A [Vect](#) instance can be constructed using mesh information

int getDOFType () const

Return DOF type of vector

Returns

`dof_type` Type of degrees of freedom. Value among the enumerated values: `NODE_FIELD`, `ELEMENT_FIELD`, `SIDE_FIELD` or `EDGE_FIELD`

real.t getNorm1 () const

Calculate 1-norm of vector.

Remarks

This function is available only if the template parameter is `double` or `complex<double>`

real.t getNorm2 () const

Calculate 2-norm (Euclidean norm) of vector.

Remarks

This function is available only if the template parameter is `double` or `complex<double>`

real_t getNormMax () const

Calculate Max-norm (Infinite norm) of vector.

Remarks

This function is available only if the template parameter is double or complex<double>

real_t getWNorm2 () const

Calculate weighted 2-norm of vector.

The weighted 2-norm is the 2-Norm of the vector divided by the square root of its size

void setNodeBC (Mesh & *m*, int *code*, T_ *val*, size_t *dof* = 1)

Assign a given value to components of vector with given code.

Vector components are assumed nodewise

Parameters

in	<i>m</i>	Instance of mesh
in	<i>code</i>	Code for which nodes will be assigned prescribed value
in	<i>val</i>	Value to prescribe
in	<i>dof</i>	Degree of Freedom for which the value is assigned [default: 1]

void setSideBC (Mesh & *m*, int *code*, T_ *val*, size_t *dof* = 1)

Assign a given value to components of vector corresponding to sides with given code.

Vector components are assumed nodewise

Parameters

in	<i>m</i>	Instance of mesh
in	<i>code</i>	Code for which nodes will be assigned prescribed value
in	<i>val</i>	Value to prescribe
in	<i>dof</i>	Degree of Freedom for which the value is assigned [default: 1]

void setNodeBC (Mesh & *m*, int *code*, const string & *exp*, size_t *dof* = 1)

Assign a given function (given by an interpretable algebraic expression) to components of vector with given code.

Vector components are assumed nodewise

Parameters

in	<i>m</i>	Instance of mesh
in	<i>code</i>	Code for which nodes will be assigned prescribed value
in	<i>exp</i>	Regular algebraic expression to prescribe
in	<i>dof</i>	Degree of Freedom for which the value is assigned [default: 1]

void setSideBC (Mesh & *m*, int *code*, const string & *exp*, size_t *dof* = 1)

Assign a given function (given by an interpretable algebraic expression) to components of vector corresponding to sides with given code.

Vector components are assumed nodewise

Parameters

in	<i>m</i>	Instance of mesh
in	<i>code</i>	Code for which nodes will be assigned prescribed value
in	<i>exp</i>	Regular algebraic expression to prescribe
in	<i>dof</i>	Degree of Freedom for which the value is assigned [default: 1]

void setNodeBC (int *code*, T_ *val*, size_t *dof* = 1)

Assign a given value to components of vector with given code.

Vector components are assumed nodewise

Parameters

in	<i>code</i>	Code for which nodes will be assigned prescribed value
in	<i>val</i>	Value to prescribe
in	<i>dof</i>	Degree of Freedom for which the value is assigned [default: 1]

void setNodeBC (int *code*, const string & *exp*, size_t *dof* = 1)

Assign a given function (given by an interpretable algebraic expression) to components of vector with given code.

Vector components are assumed nodewise

Parameters

in	<i>code</i>	Code for which nodes will be assigned prescribed value
in	<i>exp</i>	Regular algebraic expression to prescribe
in	<i>dof</i>	Degree of Freedom for which the value is assigned [default: 1]

Warning

This member function is to be used in the case where a constructor with a [Mesh](#) has been used

void setSideBC (int *code*, const string & *exp*, size_t *dof* = 1)

Assign a given function (given by an interpretable algebraic expression) to components of vector with given code.

Vector components are assumed nodewise

Parameters

in	<i>code</i>	Code for which nodes will be assigned prescribed value
in	<i>exp</i>	Regular algebraic expression to prescribe
in	<i>dof</i>	Degree of Freedom for which the value is assigned [default: 1]

Warning

This member function is to be used in the case where a constructor with a [Mesh](#) has been used

void setSideBC (int *code*, T_ *val*, size_t *dof* = 1)

Assign a given value to components of vector with given code.

Vector components are assumed nodewise

Parameters

in	<i>code</i>	Code for which nodes will be assigned prescribed value
in	<i>val</i>	Value to prescribe
in	<i>dof</i>	Degree of Freedom for which the value is assigned [default: 1]

Warning

This member function is to be used in the case where a constructor with a [Mesh](#) has been used

void removeBC (const Mesh & *ms*, const Vect< T_ > & *v*, int *dof* = 0)

Remove boundary conditions.

This member function copies to current vector a vector where only non imposed DOF are retained.

Parameters

in	<i>ms</i>	Mesh instance
in	<i>v</i>	Vector (Vect instance to copy from)
in	<i>dof</i>	Parameter to say if all degrees of freedom are concerned (=0, Default) or if only one degree of freedom (<i>dof</i>) is inserted into vector <i>v</i> which has only one degree of freedom

void removeBC (const Vect< T_ > & *v*, int *dof* = 0)

Remove boundary conditions.

This member function copies to current vector a vector where only non imposed DOF are retained.

Parameters

in	<i>v</i>	Vector (Vect instance to copy from)
in	<i>dof</i>	Parameter to say if all degrees of freedom are concerned [Default: 0] or if only one degree of freedom (dof) is inserted into vector <i>v</i> which has only one degree of freedom.

Warning

This member function is to be used in the case where a constructor with a [Mesh](#) has been used

void transferBC (const Vect< T_ > & bc, int dof = 0)

Transfer boundary conditions to the vector.

Parameters

in	<i>bc</i>	Vect instance from which imposed degrees of freedom are copied to current instance
in	<i>dof</i>	Parameter to say if all degrees of freedom are concerned (=0, Default) or if only one degree of freedom (dof) is inserted into vector <i>v</i> which has only one degree of freedom.

void insertBC (Mesh & m, const Vect< T_ > & v, const Vect< T_ > & bc, int dof = 0)

Insert boundary conditions.

Parameters

in	<i>m</i>	Mesh instance.
in	<i>v</i>	Vect instance from which free degrees of freedom are copied to current instance.
in	<i>bc</i>	Vect instance from which imposed degrees of freedom are copied to current instance.
in	<i>dof</i>	Parameter to say if all degrees of freedom are concerned (=0, Default) or if only one degree of freedom (dof) is inserted into vector <i>v</i> which has only one degree of freedom by node or side

void insertBC (Mesh & m, const Vect< T_ > & v, int dof = 0)

Insert boundary conditions.

DOF with imposed boundary conditions are set to zero.

Parameters

in	<i>m</i>	Mesh instance.
in	<i>v</i>	Vect instance from which free degrees of freedom are copied to current instance.

Parameters

in	<i>dof</i>	Parameter to say if all degrees of freedom are concerned (=0, Default) or if only one degree of freedom (dof) is inserted into vector v which has only one degree of freedom by node or side
----	------------	--

void insertBC (const Vect< T_ > & v, const Vect< T_ > & bc, int dof = 0)

Insert boundary conditions.

Parameters

in	<i>v</i>	Vect instance from which free degrees of freedom are copied to current instance.
in	<i>bc</i>	Vect instance from which imposed degrees of freedom are copied to current instance.
in	<i>dof</i>	Parameter to say if all degrees of freedom are concerned (=0, Default) or if only one degree of freedom (dof) is inserted into vector v which has only one degree of freedom by node or side

void insertBC (const Vect< T_ > & v, int dof = 0)

Insert boundary conditions.

DOF with imposed boundary conditions are set to zero.

Parameters

in	<i>v</i>	Vect instance from which free degrees of freedom are copied to current instance.
in	<i>dof</i>	Parameter to say if all degrees of freedom are concerned (=0, Default) or if only one degree of freedom (dof) is inserted into vector v which has only one degree of freedom by node or side

Warning

This member function is to be used in the case where a constructor with a [Mesh](#) has been used

void Assembly (const Element & el, const Vect< T_ > & b)

Assembly of element vector into current instance.

Parameters

in	<i>el</i>	Reference to Element instance
in	<i>b</i>	Local vector to assemble (Instance of class Vect)

void Assembly (const Element & *el*, const T_ * *b*)

Assembly of element vector (as C-array) into Vect instance.

Parameters

in	<i>el</i>	Reference to Element instance
in	<i>b</i>	Local vector to assemble (C-Array)

void Assembly (const Side & *sd*, const Vect< T_ > & *b*)

Assembly of side vector into Vect instance.

Parameters

in	<i>sd</i>	Reference to Side instance
in	<i>b</i>	Local vector to assemble (Instance of class Vect)

void Assembly (const Side & *sd*, T_ * *b*)

Assembly of side vector (as C-array) into Vect instance.

Parameters

in	<i>sd</i>	Reference to Side instance
in	<i>b</i>	Local vector to assemble (C-Array)

void getGradient (class Vect< T_ > & *v*)

Evaluate the discrete Gradient vector of the current vector.

The resulting gradient is stored in a Vect instance. This function handles node vectors assuming P₁ approximation. The gradient is then a constant vector for each element.

Parameters

in	<i>v</i>	Vect instance that contains the gradient, where $v(n,1)$, $v(n,2)$ and $v(n,3)$ are respectively the x and y and z derivatives at element n.
----	----------	---

void getGradient (Vect< Point< T_ > > & *v*)

Evaluate the discrete Gradient vector of the current vector.

The resulting gradient is stored in an Vect instance. This function handles node vectors assuming P₁ approximation. The gradient is then a constant vector for each element.

Parameters

in	<i>v</i>	Vect instance that contains the gradient, where $v(n,1) \cdot x$, $v(n,2) \cdot y$ and $v(n,3) \cdot z$ are respectively the x and y and z derivatives at element n.
----	----------	---

void getCurl (Vect< T_ > & v)

Evaluate the discrete curl vector of the current vector.

The resulting curl is stored in a [Vect](#) instance. This function handles node vectors assuming P_1 approximation. The curl is then a constant vector for each element.

Parameters

in	<i>v</i>	Vect instance that contains the curl, where $v(n,1)$, $v(n,2)$ and $v(n,3)$ are respectively the x and y and z curl components at element n.
----	----------	---

void getCurl (Vect< Point< T_ > > & v)

Evaluate the discrete curl vector of the current vector.

The resulting curl is stored in a [Vect](#) instance. This function handles node vectors assuming P_1 approximation. The curl is then a constant vector for each element.

Parameters

in	<i>v</i>	Vect instance that contains the curl, where $v(n,1)$. x, $v(n,2)$. y and $v(n,3)$. z are respectively the x and y and z curl components at element n.
----	----------	--

void getSCurl (Vect< T_ > & v)

Evaluate the discrete scalar curl in 2-D of the current vector.

The resulting curl is stored in a [Vect](#) instance. This function handles node vectors assuming P_1 approximation. The curl is then a constant vector for each element.

Parameters

in	<i>v</i>	Vect instance that contains the scalar curl.
----	----------	--

void getDivergence (Vect< T_ > & v)

Evaluate the discrete Divergence of the current vector.

The resulting divergence is stored in a [Vect](#) instance. This function handles node vectors assuming P_1 approximation. The divergence is then a constant vector for each element.

Parameters

in	<i>v</i>	Vect instance that contains the divergence.
----	----------	---

real.t getAverage (const Element & el, int type) const

Return average value of vector in a given element.

Parameters

in	<i>el</i>	Element instance
----	-----------	----------------------------------

Parameters

in	<i>type</i>	Type of element. This is to be chosen among enumerated values: LINE2, TRIANG3, QUAD4 TETRA4, HEXA8, PENTA6
----	-------------	--

Vect<T_>& MultAdd (const Vect< T_ > & *x*, const T_ & *a*)

Multiply by a constant then add to a vector.

Parameters

in	<i>x</i>	Vect instance to add
in	<i>a</i>	Constant to multiply before adding

void Apxy (T_ *a*, const Vect< T_ > & *x*)

Add to vector the product of a vector by a scalar.

Parameters

in	<i>a</i>	Scalar to premultiply
in	<i>x</i>	Vect instance by which <i>a</i> is multiplied. The result is added to current instance

void set (size_t *i*, T_ *val*)

Assign a value to an entry for a 1-D vector.

Parameters

in	<i>i</i>	Rank index in vector (starts at 1)
in	<i>val</i>	Value to assign

void set (size_t *i*, size_t *j*, T_ *val*)

Assign a value to an entry for a 2-D vector.

Parameters

in	<i>i</i>	First index in vector (starts at 1)
in	<i>j</i>	Second index in vector (starts at 1)
in	<i>val</i>	Value to assign

void set (size_t *i*, size_t *j*, size_t *k*, T_ *val*)

Assign a value to an entry for a 3-D vector.

Parameters

in	<i>i</i>	First index in vector (starts at 1)
in	<i>j</i>	Second index in vector (starts at 1)
in	<i>k</i>	Third index in vector (starts at 1)
in	<i>val</i>	Value to assign

void add (size_t *i*, T_ *val*)

Add a value to an entry for a 1-index vector.

Parameters

in	<i>i</i>	Rank index in vector (starts at 1)
in	<i>val</i>	Value to assign

void add (size_t *i*, size_t *j*, T_ *val*)

Add a value to an entry for a 2-index vector.

Parameters

in	<i>i</i>	First index in vector (starts at 1)
in	<i>j</i>	Second index in vector (starts at 1)
in	<i>val</i>	Value to assign

void add (size_t *i*, size_t *j*, size_t *k*, T_ *val*)

Assign a value to an entry for a 3-index vector.

Parameters

in	<i>i</i>	First index in vector (starts at 1)
in	<i>j</i>	Second index in vector (starts at 1)
in	<i>k</i>	Third index in vector (starts at 1)
in	<i>val</i>	Value to assign

T_& operator[] (size_t *i*)

Operator [] (Non constant version)

Parameters

in	<i>i</i>	Rank index in vector (starts at 0)
----	----------	------------------------------------

T_ operator[] (size_t i) const

Operator [] (Constant version)

Parameters

in	<i>i</i>	Rank index in vector (starts at 0)
----	----------	------------------------------------

T_& operator() (size_t i)

Operator () (Non constant version)

Parameters

in	<i>i</i>	Rank index in vector (starts at 1) <ul style="list-style-type: none"> • <code>v(i)</code> starts at <code>v(1)</code> to <code>v(size())</code> • <code>v(i)</code> is the same element as <code>v[i-1]</code>
----	----------	--

T_ operator() (size_t i) const

Operator () (Constant version)

Parameters

in	<i>i</i>	Rank index in vector (starts at 1) <ul style="list-style-type: none"> • <code>v(i)</code> starts at <code>v(1)</code> to <code>v(size())</code> • <code>v(i)</code> is the same element as <code>v[i-1]</code>
----	----------	--

T_& operator() (size_t i, size_t j)

Operator () with 2-D indexing (Non constant version, case of a grid vector).

Parameters

in	<i>i</i>	first index in vector (Number of vector components in the x-grid)
in	<i>j</i>	second index in vector (Number of vector components in the y-grid) <code>v(i, j)</code> starts at <code>v(1, 1)</code> to <code>v(getNx(), getNy())</code>

T_ operator() (size_t i, size_t j) const

Operator () with 2-D indexing (Constant version).

Parameters

in	<i>i</i>	first index in vector (Number of vector components in the x-grid)
----	----------	---

Parameters

in	j	second index in vector (Number of vector components in the y-grid) $v(i, j)$ starts at $v(1, 1)$ to $v(\text{getNx}(), \text{getNy}())$
----	-----	---

T_& operator() (size_t i, size_t j, size_t k)

Operator () with 3-D indexing (Non constant version).

Parameters

in	i	first index in vector (Number of vector components in the x-grid)
in	j	second index in vector (Number of vector components in the y-grid)
in	k	third index in vector (Number of vector components in the z-grid) $v(i, j, k)$ starts at $v(1, 1, 1)$ to $v(\text{getNx}(), \text{getNy}(), \text{getNz}())$

T_ operator() (size_t i, size_t j, size_t k) const

Operator () with 3-D indexing (Constant version).

Parameters

in	i	first index in vector (Number of vector components in the x-grid)
in	j	second index in vector (Number of vector components in the y-grid)
in	k	third index in vector (Number of vector components in the z-grid) $v(i, j, k)$ starts at $v(1, 1, 1)$ to $v(\text{getNx}(), \text{getNy}(), \text{getNz}())$

Vect<T_>& operator= (const VectorX & v)

Operator = for an instance of VectorX

Parameters

in	v	Instance of vector class in library Eigen
----	-----	---

Remarks

The [Vect](#) instance must have been sized beforeThis operator is available only if the Eigen library was installed in conjunction with [OFELI](#)**void operator= (string s)**

Operator =

Assign an algebraic expression to vector entries. This operator has the same effect as the member function set(s)

Parameters

in	<i>s</i>	String defining the algebraic expression as a function of coordinates and time
----	----------	--

Warning

A [Mesh](#) instance must has been introduced before (*e.g.* by a constructor)

void setUniform (T_ *vmin*, T_ *delta*, T_ *vmax*)

Initialize vector entries by setting extremal values and interval.

Parameters

in	<i>vmin</i>	Minimal value to assign to the first entry
in	<i>delta</i>	Interval
in	<i>vmax</i>	Maximal value to assign to the lase entry

Remarks

Vector's size is deduced from the arguments. The vector does not need to be sized before using this function

Vect<T_>& operator= (const T_ & *a*)

Operator =

Assign a constant to vector entries

Parameters

in	<i>a</i>	Value to set
----	----------	--------------

Vect<T_>& operator+= (const Vect< T_ > & *v*)

Operator +=

Add vector *x* to current vector instance.

Parameters

in	<i>v</i>	Vect instance to add to instance
----	----------	--

Vect<T_>& operator+= (const T_ & *a*)

Operator +=

Add a constant to current vector entries.

Parameters

in	<i>a</i>	Value to add to vector entries
----	----------	--------------------------------

Vect<T_>& operator-= (const Vect< T_ > & v)

Operator -=

Parameters

in	<i>v</i>	Vect instance to subtract from
----	----------	--------------------------------

Vect<T_>& operator-= (const T_ & a)

Operator -=

Subtract constant from vector entries.

Parameters

in	<i>a</i>	Value to subtract from
----	----------	------------------------

Vect<T_>& operator*= (const T_ & a)

Operator *=

Parameters

in	<i>a</i>	Value to multiply by
----	----------	----------------------

Vect<T_>& operator/= (const T_ & a)

Operator /=

Parameters

in	<i>a</i>	Value to divide by
----	----------	--------------------

void push.back (const T_ & v)

Add an entry to the vector.

This function is an overload of the member function push.back of the parent class vector. It adjusts in addition some vector parameters

Parameters

in	<i>v</i>	Entry value to add
----	----------	--------------------

T_ operator, (const Vect< T_ > & v) const

Return Dot (scalar) product of two vectors.

A typical use of this operator is double *a* = (v,w) where v and w are 2 instances of Vect<double>

Parameters

in	v	Vect instance by which the current instance is multiplied
----	-----	---

operator VectorX () const

Casting operator.


Warning

This constructor is available only if the library `eigen` is used in conjunction with [OFELI](#)

7.115 WaterPorous2D Class Reference

To solve water flow equations in porous media (1-D)

Inheritance diagram for WaterPorous2D:

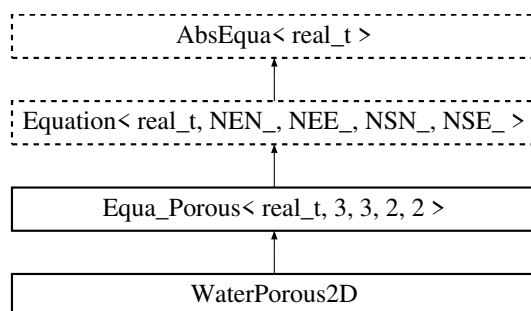

Public Member Functions

- [WaterPorous2D](#) ()
Default Constructor.
- [WaterPorous2D](#) ([Mesh](#) &ms, size_t verb=1)
Constructor.
- [~WaterPorous2D](#) ()
Destructor.
- void [setCoef](#) (real_t cw, real_t phi, real_t rho, real_t Kx, real_t Ky, real_t mu)
Set constant coefficients.
- void [Mass](#) ()
Add mass term contribution the element matrix.
- void [Mobility](#) ()
Add mobility term contribution the element matrix.
- void [BodyRHS](#) (const [Vect](#)< real_t > &bf, int opt=[GLOBAL_ARRAY](#))
Add source right-hand side term to right-hand side.
- void [BoundaryRHS](#) (const [Vect](#)< real_t > &sf, int opt=[GLOBAL_ARRAY](#))
Add boundary right-hand side term to right-hand side.
- void [build](#) ()
Build the linear system of equations.
- void [build](#) ([TimeStepping](#) &s)

- Build the linear system of equations.*

 - void **build** (**EigenProblemSolver** &e)

Build the linear system for an eigenvalue problem.
- int **run** ()

Run the equation.
- void **Mu** (const string &exp)

Set viscosity given by an algebraic expression.
- void **updateBC** (const **Element** &el, const **Vect**< **real.t** > &bc)

Update Right-Hand side by taking into account essential boundary conditions.
- void **updateBC** (const **Vect**< **real.t** > &bc)

Update Right-Hand side by taking into account essential boundary conditions.
- void **DiagBC** (int dof.type=NODE.DOF, int dof=0)

Update element matrix to impose bc by diagonalization technique.
- void **LocalNodeVector** (**Vect**< **real.t** > &b)

Localize Element Vector from a Vect instance.
- void **ElementNodeVector** (const **Vect**< **real.t** > &b, **LocalVect**< **real.t**, NEE_ > &be)

Localize Element Vector from a Vect instance.
- void **ElementNodeVector** (const **Vect**< **real.t** > &b, **LocalVect**< **real.t**, NEN_ > &be, int dof)

Localize Element Vector from a Vect instance.
- void **ElementNodeVectorSingleDOF** (const **Vect**< **real.t** > &b, **LocalVect**< **real.t**, NEN_ > &be)

Localize Element Vector from a Vect instance.
- void **ElementSideVector** (const **Vect**< **real.t** > &b, **LocalVect**< **real.t**, NSE_ > &be)

Localize Element Vector from a Vect instance.
- void **ElementVector** (const **Vect**< **real.t** > &b, int dof.type=NODE.FIELD, int flag=0)

Localize Element Vector.
- void **SideVector** (const **Vect**< **real.t** > &b)

Localize Side Vector.
- void **ElementNodeCoordinates** ()

Localize coordinates of element nodes.
- void **SideNodeCoordinates** ()

Localize coordinates of side nodes.
- void **ElementAssembly** (**Matrix**< **real.t** > *A)

Assemble element matrix into global one.
- void **ElementAssembly** (**PETScMatrix**< **real.t** > &A)

Assemble element matrix into global one.
- void **ElementAssembly** (**PETScVect**< **real.t** > &b)

Assemble element right-hand side vector into global one.
- void **ElementAssembly** (**BMatrix**< **real.t** > &A)

Assemble element matrix into global one.
- void **ElementAssembly** (**SkSMatrix**< **real.t** > &A)

Assemble element matrix into global one.
- void **ElementAssembly** (**SkMatrix**< **real.t** > &A)

Assemble element matrix into global one.
- void **ElementAssembly** (**SpMatrix**< **real.t** > &A)

Assemble element matrix into global one.
- void **ElementAssembly** (**TrMatrix**< **real.t** > &A)

- Assemble element matrix into global one.*
 - void [ElementAssembly](#) ([Vect](#)< [real.t](#) > &[v](#))
- Assemble element vector into global one.*
 - void [SideAssembly](#) ([PETScMatrix](#)< [real.t](#) > &[A](#))
- Assemble side matrix into global one.*
 - void [SideAssembly](#) ([PETScVect](#)< [real.t](#) > &[b](#))
- Assemble side right-hand side vector into global one.*
 - void [SideAssembly](#) ([Matrix](#)< [real.t](#) > *[A](#))
- Assemble side (edge or face) matrix into global one.*
 - void [SideAssembly](#) ([SkSMatrix](#)< [real.t](#) > &[A](#))
- Assemble side (edge or face) matrix into global one.*
 - void [SideAssembly](#) ([SkMatrix](#)< [real.t](#) > &[A](#))
- Assemble side (edge or face) matrix into global one.*
 - void [SideAssembly](#) ([SpMatrix](#)< [real.t](#) > &[A](#))
- Assemble side (edge or face) matrix into global one.*
 - void [SideAssembly](#) ([Vect](#)< [real.t](#) > &[v](#))
- Assemble side (edge or face) vector into global one.*
 - void [DGElementAssembly](#) ([Matrix](#)< [real.t](#) > *[A](#))
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
 - void [DGElementAssembly](#) ([SkSMatrix](#)< [real.t](#) > &[A](#))
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
 - void [DGElementAssembly](#) ([SkMatrix](#)< [real.t](#) > &[A](#))
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
 - void [DGElementAssembly](#) ([SpMatrix](#)< [real.t](#) > &[A](#))
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
 - void [DGElementAssembly](#) ([TrMatrix](#)< [real.t](#) > &[A](#))
- Assemble element matrix into global one for the Discontinuous Galerkin approximation.*
 - void [AxbAssembly](#) (const [Element](#) &[el](#), const [Vect](#)< [real.t](#) > &[x](#), [Vect](#)< [real.t](#) > &[b](#))
- Assemble product of element matrix by element vector into global vector.*
 - void [AxbAssembly](#) (const [Side](#) &[sd](#), const [Vect](#)< [real.t](#) > &[x](#), [Vect](#)< [real.t](#) > &[b](#))
- Assemble product of side matrix by side vector into global vector.*
 - [size.t](#) [getNbNodes](#) () const
- Return number of element nodes.*
 - [size.t](#) [getNbEq](#) () const
- Return number of element equations.*
 - void [setInitialSolution](#) (const [Vect](#)< [real.t](#) > &[u](#))
- Set initial solution (previous time step)*
 - [real.t](#) [setMaterialProperty](#) (const string &[exp](#), const string &[prop](#))
- Define a material property by an algebraic expression.*
 - void [setMesh](#) ([Mesh](#) &[m](#))
- Define mesh and renumber DOFs after removing imposed ones.*
 - [Mesh](#) & [getMesh](#) () const
- Return reference to Mesh instance.*
 - [LinearSolver](#)< [real.t](#) > & [getLinearSolver](#) ()
- Return reference to linear solver instance.*
 - void [setSolver](#) ([Iteration](#) [ls](#), [Preconditioner](#) [pc](#)=[IDENT_PREC](#))
- Choose solver for the linear system.*
 - int [SolveLinearSystem](#) ([Matrix](#)< [real.t](#) > *[A](#), [Vect](#)< [real.t](#) > &[b](#), [Vect](#)< [real.t](#) > &[x](#))
- Solve the linear system.*

Public Attributes

- [LocalMatrix](#)< [real_t](#), NEE_, NEE_ > [eMat](#)
LocalMatrix instance containing local matrix associated to current element.
- [LocalMatrix](#)< [real_t](#), NSE_, NSE_ > [sMat](#)
LocalMatrix instance containing local matrix associated to current side.
- [LocalVect](#)< [real_t](#), NEE_ > [ePrev](#)
LocalVect instance containing local vector associated to current element.
- [LocalVect](#)< [real_t](#), NEE_ > [eRHS](#)
LocalVect instance containing local right-hand side vector associated to current element.
- [LocalVect](#)< [real_t](#), NEE_ > [eRes](#)
LocalVect instance containing local residual vector associated to current element.
- [LocalVect](#)< [real_t](#), NSE_ > [sRHS](#)
LocalVect instance containing local right-hand side vector associated to current side.

Protected Member Functions

- void [setMaterial](#) ()
Set material properties.
- void [Init](#) (const [Element](#) *el)
Set element arrays to zero.
- void [Init](#) (const [Side](#) *sd)
Set side arrays to zero.

7.115.1 Detailed Description

To solve water flow equations in porous media (1-D)

To solve water flow equations in porous media (2-D)

Class [WaterPorous2D](#) solves the fluid flow equations of water or any incompressible or slightly compressible fluid in a porous medium in two-dimensional configurations.

Porous media flows are modelled here by the Darcy law. The water, or any other fluid is considered as slightly compressible, i.e., its compressibility coefficient is constant.

Space discretization uses the P_1 (2-Node line) finite element method. Time integration uses class [TimeStepping](#) that provides various well known time integration schemes.

Class [WaterPorous2D](#) solves the fluid flow equations of water or any incompressible or slightly compressible fluid in a porous medium in two-dimensional configurations.

Porous media flows are modelled here by the Darcy law. The water, or any other fluid is considered as slightly compressible, i.e., its compressibility coefficient is constant.

Space discretization uses the P_1 (3-Node triangle) finite element method. Time integration uses class [TimeStepping](#) that provides various well known time integration schemes.

7.115.2 Constructor & Destructor Documentation

[WaterPorous2D](#) ()

Default Constructor.

Constructs an empty equation.

[WaterPorous2D](#) ([Mesh](#) & *ms*, [size_t](#) *verb* = 1)

Constructor.

This constructor uses mesh and reservoir information

Parameters

in	<i>ms</i>	Mesh instance
in	<i>verb</i>	Verbosity parameter

7.115.3 Member Function Documentation

void setCoef (real.t *cw*, real.t *phi*, real.t *rho*, real.t *Kx*, real.t *Ky*, real.t *mu*)

Set constant coefficients.

Parameters

in	<i>cw</i>	Compressibility coefficient
in	<i>phi</i>	Porosity
in	<i>rho</i>	Density
in	<i>Kx</i>	x-Absolute permeability
in	<i>Ky</i>	y-Absolute permeability
in	<i>mu</i>	Viscosity

void BodyRHS (const Vect< real.t > &*bf*, int *opt* = GLOBAL_ARRAY) [virtual]

Add source right-hand side term to right-hand side.

Parameters

in	<i>bf</i>	Vector containing source at element nodes.
in	<i>opt</i>	Vector is local (LOCAL_ARRAY) with size 3 or global (GLOBAL_ARRAY) with size = Number of nodes [Default: GLOBAL_ARRAY].

Reimplemented from [Equa_Porous< real.t, 3, 3, 2, 2 >](#).

void BoundaryRHS (const Vect< real.t > &*sf*, int *opt* = GLOBAL_ARRAY) [virtual]

Add boundary right-hand side term to right-hand side.

Parameters

in	<i>sf</i>	Vector containing source at side nodes.
in	<i>opt</i>	Vector is local (LOCAL_ARRAY) with size 3 or global (GLOBAL_ARRAY) with size = Number of nodes [Default: GLOBAL_ARRAY].

Reimplemented from [Equa_Porous< real.t, 3, 3, 2, 2 >](#).

void build () [inherited]

Build the linear system of equations.

Before using this function, one must have properly selected appropriate options for:

- The choice of a steady state or transient analysis. By default, the analysis is stationary
- In the case of transient analysis, the choice of a time integration scheme and a lumped or consistent capacity matrix. If transient analysis is chosen, the lumped capacity matrix option is chosen by default, and the implicit Euler scheme is used by default for time integration.

void build (TimeStepping & s) [inherited]

Build the linear system of equations.

Before using this function, one must have properly selected appropriate options for:

- The choice of a steady state or transient analysis. By default, the analysis is stationary
- In the case of transient analysis, the choice of a time integration scheme. If transient analysis is chosen, the implicit Euler scheme is used by default for time integration.

Parameters

in	s	Reference to used TimeStepping instance
----	---	---

void build (EigenProblemSolver & e) [inherited]

Build the linear system for an eigenvalue problem.

Parameters

in	e	Reference to used EigenProblemSolver instance
----	---	---

int run () [inherited]

Run the equation.

If the analysis (see function setAnalysis) is STEADY_STATE, then the function solves the stationary equation.

If the analysis is TRANSIENT, then the function performs time stepping until the final time is reached.

void updateBC (const Element & el, const Vect< real.t > & bc) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	el	Reference to current element instance
in	bc	Vector that contains imposed values at all DOFs

void updateBC (const Vect< real.t > & bc) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

Parameters

in	<i>bc</i>	Vector that contains imposed values at all DOFs
----	-----------	---

Remarks

The current element is pointed by `_theElement`

void DiagBC (int *dof_type* = *NODE_DOF*, int *dof* = 0) [inherited]

Update element matrix to impose bc by diagonalization technique.

Parameters

in	<i>dof_type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • <i>NODE_FIELD</i>, DOFs are supported by nodes [Default] • <i>ELEMENT_FIELD</i>, DOFs are supported by elements • <i>SIDE_FIELD</i>, DOFs are supported by sides
in	<i>dof</i>	DOF setting: <ul style="list-style-type: none"> • = 0, All DOFs are taken into account [Default] • != 0, Only DOF No. <i>dof</i> is handled in the system

void LocalNodeVector (Vect< real.t > &*b*) [inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Reference to global vector to be localized. The resulting local vector can be accessed by attribute <code>ePrev</code> . This member function is to be used if a constructor with <code>Element</code> was invoked.
----	----------	---

void ElementNodeVector (const Vect< real.t > &*b*, LocalVect< real.t, NEE_ > &*be*)
[inherited]

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

All degrees of freedom are transferred to the local vector

```
void ElementNodeVector ( const Vect< real_t > & b, LocalVect< real_t , NEN_ > & be, int dof ) [inherited]
```

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.
in	<i>dof</i>	Degree of freedom to transfer to the local vector

Remarks

Only yhe dega dof is transferred to the local vector

```
void ElementNodeVectorSingleDOF ( const Vect< real_t > & b, LocalVect< real_t , NEN_ > & be ) [inherited]
```

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is the total number of element equations.

Remarks

Vector b is assumed to contain only one degree of freedom by node.

```
void ElementSideVector ( const Vect< real_t > & b, LocalVect< real_t , NSE_ > & be ) [inherited]
```

Localize Element Vector from a Vect instance.

Parameters

in	<i>b</i>	Global vector to be localized.
out	<i>be</i>	Local vector, the length of which is

```
void ElementVector ( const Vect< real_t > & b, int dof_type = NODE_FIELD, int flag = 0 ) [inherited]
```

Localize Element Vector.

Parameters

in	<i>b</i>	Global vector to be localized
in	<i>dof_type</i>	DOF type option. To choose among the enumerated values: <ul style="list-style-type: none"> • <code>NODE_FIELD</code>, DOFs are supported by nodes [Default] • <code>ELEMENT_FIELD</code>, DOFs are supported by elements • <code>SIDE_FIELD</code>, DOFs are supported by sides
in	<i>flag</i>	Option to set: <ul style="list-style-type: none"> • <code>= 0</code>, All DOFs are taken into account [Default] • <code>!= 0</code>, Only DOF number <code>dof</code> is handled in the system The resulting local vector can be accessed by attribute <code>ePrev</code> .

Remarks

This member function is to be used if a constructor with `Element` was invoked. It uses the `Element` pointer `_theElement`

void SideVector (const Vect< real.t > & b) [inherited]

Localize Side Vector.

Parameters

in	<i>b</i>	Global vector to be localized <ul style="list-style-type: none"> • <code>NODE_FIELD</code>, DOFs are supported by nodes [default] • <code>ELEMENT_FIELD</code>, DOFs are supported by elements • <code>SIDE_FIELD</code>, DOFs are supported by sides The resulting local vector can be accessed by attribute <code>ePrev</code> .
----	----------	---

Remarks

This member function is to be used if a constructor with `Side` was invoked. It uses the `Side` pointer `_theSide`

void ElementNodeCoordinates () [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array `_x[0]`, `_x[1]`, ... which are instances of class [Point<real.t>](#)

Remarks

This member function uses the `Side` pointer `_theSide`

void SideNodeCoordinates () [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array `_x[0]`, `_x[1]`, ... which are instances of class [Point<real_t>](#)

Remarks

This member function uses the Element pointer `_theElement`

void ElementAssembly (Matrix< real_t > * A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScMatrix< real_t > & A) [inherited]

Assemble element matrix into global one.

Parameters

<i>A</i>	Reference to global matrix
----------	----------------------------

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (PETScVect< real_t > & b) [inherited]

Assemble element right-hand side vector into global one.

Parameters

<i>b</i>	Reference to global right-hand side vector
----------	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (BMatrix< real_t > & A) [inherited]

Assemble element matrix into global one.

Parameters

A	Global matrix stored as a BMatrix instance
-----	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkSMatrix< real.t > &A) [inherited]

Assemble element matrix into global one.

Parameters

A	Global matrix stored as an SkSMatrix instance
-----	---

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SkMatrix< real.t > &A) [inherited]

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an SkMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (SpMatrix< real.t > &A) [inherited]

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an SpMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void ElementAssembly (TrMatrix< real.t > &A) [inherited]

Assemble element matrix into global one.

Parameters

in	A	Global matrix stored as an TrMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable theElement

void ElementAssembly (Vect< real.t > &v) [inherited]

Assemble element vector into global one.

Parameters

in	v	Global vector (Vect instance)
----	-----	-------------------------------

Warning

The element pointer is given by the global variable theElement

void SideAssembly (PETScMatrix< real.t > &A) [inherited]

Assemble side matrix into global one.

Parameters

A	Reference to global matrix
-----	----------------------------

Warning

The side pointer is given by the global variable theSide

void SideAssembly (PETScVect< real.t > &b) [inherited]

Assemble side right-hand side vector into global one.

Parameters

b	Reference to global right-hand side vector
-----	--

Warning

The side pointer is given by the global variable theSide

void SideAssembly (Matrix< real.t > *A) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

<i>A</i>	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
----------	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SkSMatrix< real.t > & *A*) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an SkSMatrix instance
----	----------	---

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SkMatrix< real.t > & *A*) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an SkMatrix instance
----	----------	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (SpMatrix< real.t > & *A*) [inherited]

Assemble side (edge or face) matrix into global one.

Parameters

in	<i>A</i>	Global matrix stored as an SpMatrix instance
----	----------	--

Warning

The side pointer is given by the global variable `theSide`

void SideAssembly (Vect< real.t > & *v*) [inherited]

Assemble side (edge or face) vector into global one.

Parameters

in	v	Global vector (Vect instance)
----	-----	-------------------------------

Warning

The side pointer is given by the global variable `theSide`

void DGElementAssembly (Matrix< real.t > * A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)
---	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SkSMatrix< real.t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

A	Global matrix stored as an SkSMatrix instance
---	---

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SkMatrix< real.t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (SpMatrix< real.t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	A	Global matrix stored as an SpMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void DGElementAssembly (TrMatrix< real.t > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Parameters

in	A	Global matrix stored as an TrMatrix instance
----	-----	--

Warning

The element pointer is given by the global variable `theElement`

void AxbAssembly (const Element & el , const Vect< real.t > & x , Vect< real.t > & b)
[inherited]

Assemble product of element matrix by element vector into global vector.

Parameters

in	el	Reference to Element instance
in	x	Global vector to multiply by (Vect instance)
out	b	Global vector to add (Vect instance)

void AxbAssembly (const Side & sd , const Vect< real.t > & x , Vect< real.t > & b)
[inherited]

Assemble product of side matrix by side vector into global vector.

Parameters

in	sd	Reference to Side instance
in	x	Global vector to multiply by (Vect instance)
out	b	Global vector (Vect instance)

real.t setMaterialProperty (const string & exp , const string & $prop$) [inherited]

Define a material property by an algebraic expression.

Parameters

in	<i>exp</i>	Algebraic expression
in	<i>prop</i>	Property name

Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

Mesh& getMesh () const [inherited]

Return reference to Mesh instance.

Returns

Reference to Mesh instance

void setSolver (Iteration *ls*, Preconditioner *pc* = *IDENT_PREC*) [inherited]

Choose solver for the linear system.

Parameters

in	<i>ls</i>	<p>Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER</p> <ul style="list-style-type: none"> • DIRECT_SOLVER, Use a facorization solver [default] • CG_SOLVER, Conjugate Gradient iterative solver • CGS_SOLVER, Squared Conjugate Gradient iterative solver • BICG_SOLVER, BiConjugate Gradient iterative solver • BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver • GMRES_SOLVER, GMRES iterative solver • QMR_SOLVER, QMR iterative solver
in	<i>pc</i>	<p>Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:</p> <ul style="list-style-type: none"> • IDENT_PREC, Identity preconditioner (no preconditioning [default]) • DIAG_PREC, Diagonal preconditioner • ILU_PREC, Incomplete LU factorization preconditioner

int SolveLinearSystem (Matrix< real_t > * A , Vect< real_t > & b , Vect< real_t > & x)
[inherited]

Solve the linear system.

Parameters

in	A	Pointer to matrix of the system (Instance of class SpMatrix)
in	b	Vector containing right-hand side
in,out	x	Vector containing initial guess of solution on input, actual solution on output

7.115.4 Member Data Documentation

LocalVect<real_t,NEE_> ePrev [inherited]

LocalVect instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

Index

- ~PETScWrapper
 - OFELI::PETScWrapper, [896](#)
- A
 - OFELI, [73](#)
- AB2
 - OFELI, [71](#)
- ADAMS_BASHFORTH
 - OFELI, [71](#)
- AUX_INPUT_FIELD_1
 - OFELI, [70](#)
- AUX_INPUT_FIELD_2
 - OFELI, [70](#)
- AUX_INPUT_FIELD_3
 - OFELI, [70](#)
- AUX_INPUT_FIELD_4
 - OFELI, [70](#)
- AbsEqua < T_ >, [175](#)
- Add
 - OFELI::Element, [470](#), [471](#)
 - OFELI::Mesh, [783](#), [787](#)
 - OFELI::PETScVect, [891](#)
 - OFELI::Side, [924](#)
- add
 - OFELI::DMatrix, [347](#)
 - OFELI::PETScMatrix, [865](#)
 - OFELI::PETScVect, [887](#), [888](#)
 - OFELI::SkMatrix, [934](#)
 - OFELI::SpMatrix, [962](#)
 - OFELI::Vect, [1038](#)
 - OFELI, [87](#), [101](#)
- AddMidNodes
 - OFELI::Mesh, [791](#)
- AnalysisType
 - OFELI, [71](#)
- ArrayType
 - OFELI, [70](#)
- Assembly
 - OFELI::BMatrix, [220](#)
 - OFELI::DMatrix, [352](#), [353](#)
 - OFELI::DSMatrix, [364](#), [365](#)
 - OFELI::EigenProblemSolver, [392](#)
 - OFELI::Matrix, [767](#), [768](#)
 - OFELI::PETScMatrix, [869](#), [870](#)
 - OFELI::PETScVect, [884](#)
 - OFELI::SkMatrix, [938](#)
 - OFELI::SkSMatrix, [946](#)
 - OFELI::SpMatrix, [965](#)
 - OFELI::TimeStepping, [980](#)
 - OFELI::TrMatrix, [1009](#), [1010](#)
 - OFELI::Vect, [1034](#), [1035](#)
- atGauss1
 - OFELI::Hexa8, [616](#)
- atGauss2
 - OFELI::Hexa8, [617](#)
- Axb
 - OFELI::Laplace2DT3, [715](#)
- AxbAssembly
 - OFELI::Bar2DL2, [193](#)
 - OFELI::Beam3DL2, [210](#)
 - OFELI::DC1DL2, [248](#)
 - OFELI::DC2DT3, [273](#)
 - OFELI::DC2DT6, [293](#)
 - OFELI::DC3DAT3, [314](#)
 - OFELI::DC3DT4, [336](#)
 - OFELI::EC2D1T3, [382](#)
 - OFELI::Elas2DQ4, [410](#)
 - OFELI::Elas2DT3, [432](#)
 - OFELI::Elas3DH8, [448](#)
 - OFELI::Elas3DT4, [464](#)
 - OFELI::Equa_Electromagnetics, [490](#), [491](#)
 - OFELI::Equa_Fluid, [505](#)
 - OFELI::Equa_Laplace, [519](#)
 - OFELI::Equa_Porous, [535](#)
 - OFELI::Equa_Solid, [550](#), [551](#)
 - OFELI::Equa_Therm, [568](#)
 - OFELI::Equation, [583](#)
 - OFELI::HelmholtzBT3, [613](#)
 - OFELI::Laplace1DL2, [662](#)
 - OFELI::Laplace1DL3, [677](#)
 - OFELI::Laplace2DFVT, [692](#)
 - OFELI::Laplace2DMHRT0, [707](#)
 - OFELI::Laplace2DT3, [724](#)
 - OFELI::NSP2DQ41, [835](#)
 - OFELI::TINS2DT3B, [994](#)
 - OFELI::WaterPorous2D, [1057](#)
- Axpy
 - OFELI::DMatrix, [347](#)
 - OFELI::Matrix, [767](#)

- OFELI::PETScVect, [887](#)
- OFELI::SkMatrix, [933](#)
- OFELI::SpMatrix, [962](#)
- OFELI::Vect, [1037](#)
- OFELI, [84](#), [91](#), [104](#)
- Utilities, [145](#)
- b
 - OFELI, [73](#)
- BACKWARD_EULER
 - OFELI, [71](#)
- BCType
 - OFELI, [72](#)
- BDF2
 - OFELI, [71](#)
- BICG_SOLVER
 - OFELI, [72](#)
- BICG_STAB_SOLVER
 - OFELI, [72](#)
- BMatrix
 - OFELI, [83](#)
- BMatrix< T_ >, [217](#)
- BODY_FORCE
 - OFELI, [70](#)
- BOUNDARY_CONDITION
 - OFELI, [70](#)
- BOUNDARY_FORCE
 - OFELI, [70](#)
- BOUNDARY_TRACTION
 - OFELI, [70](#)
- BSpline
 - Utilities, [143](#)
- BUOYANCY
 - OFELI, [70](#)
- banner
 - Utilities, [144](#)
- Bar2DL2, [177](#)
 - OFELI::Bar2DL2, [181](#)
- Beam3DL2, [195](#)
 - OFELI::Beam3DL2, [200](#)
- BiCGStab
 - Solver, [115](#), [116](#)
- BiCG
 - Solver, [115](#)
- BiotSavart, [212](#)
 - OFELI::BiotSavart, [213](#)
- BodyForce
 - OFELI::UserData, [1016](#)
- BodyRHS
 - OFELI::Bar2DL2, [183](#)
 - OFELI::DC1DL2, [237](#)
 - OFELI::DC2DT3, [260](#), [261](#)
 - OFELI::DC2DT6, [282](#)
 - OFELI::DC3DAT3, [303](#)
 - OFELI::DC3DT4, [325](#)
 - OFELI::Elas2DQ4, [400](#)
 - OFELI::Elas2DT3, [421](#)
 - OFELI::Elas3DH8, [438](#)
 - OFELI::Elas3DT4, [454](#)
 - OFELI::Equa_Porous, [525](#)
 - OFELI::Equa_Therm, [558](#)
 - OFELI::Laplace1DL2, [652](#)
 - OFELI::Laplace1DL3, [667](#)
 - OFELI::Laplace2DT3, [714](#)
 - OFELI::NSP2DQ41, [826](#)
 - OFELI::WaterPorous2D, [1047](#)
- BoundaryCondition
 - OFELI::UserData, [1016](#)
- BoundaryRHS
 - OFELI::DC1DL2, [237](#)
 - OFELI::DC2DT3, [261](#)
 - OFELI::DC2DT6, [282](#)
 - OFELI::DC3DAT3, [303](#), [304](#)
 - OFELI::DC3DT4, [325](#), [326](#)
 - OFELI::Elas2DQ4, [400](#)
 - OFELI::Elas2DT3, [421](#)
 - OFELI::Elas3DH8, [438](#)
 - OFELI::Elas3DT4, [454](#)
 - OFELI::Equa_Porous, [525](#)
 - OFELI::Equa_Therm, [558](#)
 - OFELI::Laplace1DL2, [652](#)
 - OFELI::Laplace1DL3, [668](#)
 - OFELI::Laplace2DT3, [714](#)
 - OFELI::NSP2DQ41, [826](#)
 - OFELI::WaterPorous2D, [1047](#)
- Brick, [224](#)
 - OFELI::Brick, [225](#)
- build
 - OFELI::Bar2DL2, [183](#)
 - OFELI::DC1DL2, [238](#), [239](#)
 - OFELI::DC2DT3, [263](#)
 - OFELI::DC2DT6, [283](#)
 - OFELI::DC3DAT3, [304](#)
 - OFELI::DC3DT4, [326](#)
 - OFELI::Equa_Laplace, [510](#)
 - OFELI::Equa_Porous, [525](#), [526](#)
 - OFELI::Equa_Therm, [558](#), [559](#)
 - OFELI::Laplace1DL2, [653](#)
 - OFELI::Laplace1DL3, [668](#)
 - OFELI::Laplace2DFVT, [683](#)
 - OFELI::Laplace2DMHRT0, [698](#)
 - OFELI::Laplace2DT3, [714](#), [715](#)
 - OFELI::LaplaceDG2DP1, [728](#)
 - OFELI::WaterPorous2D, [1047](#), [1048](#)
- buildEigen
 - OFELI::Bar2DL2, [184](#)
 - OFELI::Beam3DL2, [201](#)
 - OFELI::Elas3DT4, [455](#)

- OFELI::Laplace2DT3, 714
- CAPACITY
 - OFELI, 69
- CG_SOLVER
 - OFELI, 72
- CGS_SOLVER
 - OFELI, 72
- CGS
 - Solver, 118
- CONSISTENT_CAPACITY
 - OFELI, 69
- CONSISTENT_MASS
 - OFELI, 69
- CONTACT_BC
 - OFELI, 72
- CONTACT
 - OFELI, 70
- CONVECTION
 - OFELI, 70
- CRANK_NICOLSON
 - OFELI, 71
- Capacity
 - OFELI::DC1DL2, 235
 - OFELI::DC2DT3, 258
 - OFELI::DC3DAT3, 302
 - OFELI::DC3DT4, 323
- CapacityToLHS
 - OFELI::DC1DL2, 234
 - OFELI::DC2DT3, 258
 - OFELI::DC2DT6, 283
 - OFELI::DC3DAT3, 302
 - OFELI::DC3DT4, 323
 - OFELI::Equa_Therm, 557
- CapacityToRHS
 - OFELI::DC1DL2, 235
 - OFELI::DC2DT3, 258
 - OFELI::DC2DT6, 283
 - OFELI::DC3DAT3, 302
 - OFELI::DC3DT4, 323
 - OFELI::Equa_Therm, 558
- CG
 - Solver, 117
- check
 - OFELI::Line2H, 749
 - OFELI::Material, 764
 - OFELI::Triang3, 997
 - OFELI, 106
- check_error
 - OFELI::FMM2D, 593
 - OFELI::FMM3D, 595
 - OFELI::FMMSolver, 596
- checkDelaunay
 - OFELI::Laplace2DFVT, 683
- checkError
 - OFELI::PETScWrapper, 898
- checkSturm
 - OFELI::EigenProblemSolver, 393
- Circle, 226
 - OFELI::Circle, 227
- Clear
 - Utilities, 146
- Code
 - Finite Element Mesh, 27, 28
- Conservation Law Equations, 17
- ContactPressure
 - OFELI::Elas2DT3, 422
- Contains
 - OFELI::Element, 472, 473
 - OFELI::Side, 926
- contains
 - OFELI::IPF, 645
- Convection
 - OFELI::DC1DL2, 235, 236
 - OFELI::DC2DT3, 259
 - OFELI::DC2DT6, 281
 - OFELI::DC3DT4, 324
- ConvectionToRHS
 - OFELI::DC1DL2, 236
 - OFELI::DC2DT3, 260
- Converged
 - Global Variables, 44
- Coord
 - Finite Element Mesh, 27
- createBoundarySideList
 - OFELI::Mesh, 786
- createInternalSideList
 - OFELI::Mesh, 786
- CurlEdgeSh
 - OFELI::Tetra4, 973
- DC1DL2, 229
 - OFELI::DC1DL2, 233
- DC2DT3, 250
 - OFELI::DC2DT3, 255–257
- DC2DT6, 275
 - OFELI::DC2DT6, 279, 280
- DC3DAT3, 295
 - OFELI::DC3DAT3, 300, 301
- DC3DT4, 316
 - OFELI::DC3DT4, 320–322
- DEVIATORIC
 - OFELI, 70
- DGElementAssembly
 - OFELI::Bar2DL2, 192, 193
 - OFELI::Beam3DL2, 208, 209
 - OFELI::DC1DL2, 247, 248
 - OFELI::DC2DT3, 271, 272

- OFELI::DC2DT6, [292](#), [293](#)
- OFELI::DC3DAT3, [312](#), [313](#)
- OFELI::DC3DT4, [335](#), [336](#)
- OFELI::EC2D1T3, [381](#), [382](#)
- OFELI::Elas2DQ4, [409](#), [410](#)
- OFELI::Elas2DT3, [430](#), [431](#)
- OFELI::Elas3DH8, [446](#), [447](#)
- OFELI::Elas3DT4, [463](#), [464](#)
- OFELI::Equa_Electromagnetics, [489](#), [490](#)
- OFELI::Equa_Fluid, [503](#), [504](#)
- OFELI::Equa_Laplace, [518](#), [519](#)
- OFELI::Equa_Porous, [533](#), [534](#)
- OFELI::Equa_Solid, [549](#), [550](#)
- OFELI::Equa_Therm, [567](#), [568](#)
- OFELI::Equation, [580](#), [581](#)
- OFELI::HelmholtzBT3, [612](#), [613](#)
- OFELI::Laplace1DL2, [661](#), [662](#)
- OFELI::Laplace1DL3, [676](#), [677](#)
- OFELI::Laplace2DFVT, [691](#), [692](#)
- OFELI::Laplace2DMHRT0, [706](#), [707](#)
- OFELI::Laplace2DT3, [723](#), [724](#)
- OFELI::NSP2DQ41, [834](#), [835](#)
- OFELI::TINS2DT3B, [992](#), [993](#)
- OFELI::WaterPorous2D, [1056](#), [1057](#)
- DIAG_PREC
 - OFELI, [72](#)
- DIAGONAL
 - OFELI, [72](#)
- DIFFUSION
 - OFELI, [69](#)
- DILATATION
 - OFELI, [70](#)
- DILU_PREC
 - OFELI, [72](#)
- DIRECT_SOLVER
 - OFELI, [72](#)
- DISPLACEMENT_FIELD
 - OFELI, [70](#)
- dLine
 - OFELI::Brick, [226](#)
 - OFELI::Circle, [228](#)
 - OFELI::Ellipse, [478](#)
 - OFELI::Figure, [591](#)
 - OFELI::Polygon, [908](#)
 - OFELI::Rectangle, [920](#)
 - OFELI::Sphere, [952](#)
 - OFELI::Triangle, [1003](#), [1005](#)
- DMatrix
 - OFELI::DMatrix, [343](#)
- DMatrix< T_ >, [339](#)
- DOF
 - OFELI::Edge, [386](#)
 - OFELI::Node, [818](#)
 - OFELI::Side, [923](#)
- DP1toP1
 - OFELI::Reconstruction, [918](#)
- DSMatrix
 - OFELI, [86](#)
- DSMatrix< T_ >, [360](#)
- DSh
 - OFELI::FEShape, [590](#)
 - OFELI::Hexa8, [616](#), [617](#)
 - OFELI::Line2, [747](#)
 - OFELI::Line2H, [750](#)
 - OFELI::Penta6, [857](#)
 - OFELI::Quad4, [915](#)
 - OFELI::Tetra4, [973](#)
 - OFELI::Triang6S, [1000](#), [1001](#)
- Deactivate
 - OFELI, [82](#)
- DeformMesh
 - Finite Element Mesh, [29](#)
- Delete
 - OFELI::Mesh, [788](#), [789](#)
- DeleteElement
 - OFELI::Mesh, [788](#)
- DeleteNode
 - OFELI::Mesh, [787](#)
- DeleteSide
 - OFELI::Mesh, [788](#)
- Deviator
 - OFELI::Elas2DT3, [420](#)
- DeviatorToRHS
 - OFELI::Elas2DT3, [420](#)
- DG, [338](#)
 - OFELI::DG, [338](#)
- DiagBC
 - OFELI::Bar2DL2, [185](#)
 - OFELI::Beam3DL2, [201](#)
 - OFELI::DC1DL2, [240](#)
 - OFELI::DC2DT3, [264](#)
 - OFELI::DC2DT6, [285](#)
 - OFELI::DC3DAT3, [305](#)
 - OFELI::DC3DT4, [328](#)
 - OFELI::EC2D1T3, [374](#)
 - OFELI::Elas2DQ4, [402](#)
 - OFELI::Elas2DT3, [423](#)
 - OFELI::Elas3DH8, [439](#)
 - OFELI::Elas3DT4, [456](#)
 - OFELI::Equa_Electromagnetics, [482](#)
 - OFELI::Equa_Fluid, [496](#)
 - OFELI::Equa_Laplace, [511](#)
 - OFELI::Equa_Porous, [526](#)
 - OFELI::Equa_Solid, [542](#)
 - OFELI::Equa_Therm, [560](#)
 - OFELI::Equation, [575](#)
 - OFELI::HelmholtzBT3, [605](#)
 - OFELI::Laplace1DL2, [654](#)

- OFELI::Laplace1DL3, [669](#)
- OFELI::Laplace2DFVT, [684](#)
- OFELI::Laplace2DMHRT0, [699](#)
- OFELI::Laplace2DT3, [716](#)
- OFELI::NSP2DQ41, [827](#)
- OFELI::TINS2DT3B, [985](#)
- OFELI::WaterPorous2D, [1049](#)
- DiagPrescribe
 - OFELI::PETScMatrix, [863](#)
 - OFELI::SkMatrix, [935](#)
 - OFELI::SpMatrix, [958](#), [959](#)
- Diffusion
 - OFELI::DC1DL2, [235](#)
 - OFELI::DC2DT3, [258](#)
 - OFELI::DC2DT6, [281](#)
 - OFELI::DC3DAT3, [302](#)
 - OFELI::DC3DT4, [323](#)
- DiffusionToRHS
 - OFELI::DC1DL2, [235](#)
 - OFELI::DC2DT3, [259](#)
 - OFELI::DC3DAT3, [303](#)
 - OFELI::DC3DT4, [324](#)
- Dilatation
 - OFELI::Elas2DT3, [420](#)
- DilatationToRHS
 - OFELI::Elas2DQ4, [399](#)
 - OFELI::Elas2DT3, [421](#)
- Domain, [356](#)
 - OFELI::Domain, [358](#)
- Dot
 - Utilities, [145](#), [146](#)
 - Vector and Matrix, [152](#)
- E2T
 - OFELI::PhaseChange, [899](#)
- EC2D1T3, [368](#)
 - OFELI::EC2D1T3, [372](#), [373](#)
- ELECTRIC
 - OFELI, [70](#)
- ePrev
 - OFELI::Bar2DL2, [195](#)
 - OFELI::Beam3DL2, [211](#)
 - OFELI::DC1DL2, [250](#)
 - OFELI::DC2DT3, [274](#)
 - OFELI::DC2DT6, [295](#)
 - OFELI::DC3DAT3, [315](#)
 - OFELI::DC3DT4, [338](#)
 - OFELI::EC2D1T3, [384](#)
 - OFELI::Elas2DQ4, [412](#)
 - OFELI::Elas2DT3, [433](#)
 - OFELI::Elas3DH8, [449](#)
 - OFELI::Elas3DT4, [466](#)
 - OFELI::Equa_Electromagnetics, [492](#)
 - OFELI::Equa_Fluid, [506](#)
 - OFELI::Equa_Laplace, [521](#)
 - OFELI::Equa_Porous, [536](#)
 - OFELI::Equa_Solid, [552](#)
 - OFELI::Equa_Therm, [570](#)
 - OFELI::Equation, [585](#)
 - OFELI::HelmholtzBT3, [615](#)
 - OFELI::Laplace1DL2, [664](#)
 - OFELI::Laplace1DL3, [679](#)
 - OFELI::Laplace2DFVT, [694](#)
 - OFELI::Laplace2DMHRT0, [709](#)
 - OFELI::Laplace2DT3, [726](#)
 - OFELI::NSP2DQ41, [837](#)
 - OFELI::TINS2DT3B, [995](#)
 - OFELI::WaterPorous2D, [1059](#)
- ESTIM_ND_JUMP
 - OFELI::Estimator, [586](#)
- ESTIM_ZZ
 - OFELI::Estimator, [586](#)
- EVAL
 - Utilities, [133](#)
- EXTERNAL_BOUNDARY
 - OFELI::Side, [923](#)
- Edge, [384](#)
 - OFELI::Edge, [386](#)
- EdgeList, [387](#)
- EdgeSh
 - OFELI::Tetra4, [973](#)
- EdgesAreDOF
 - OFELI::Mesh, [792](#)
- EigenProblemSolver, [388](#)
 - OFELI::EigenProblemSolver, [389](#), [390](#)
- Elas2DQ4, [394](#)
 - OFELI::Elas2DQ4, [398](#), [399](#)
- Elas2DT3, [412](#)
 - OFELI::Elas2DT3, [417](#), [418](#)
- Elas3DH8, [434](#)
 - OFELI::Elas3DH8, [438](#)
- Elas3DT4, [450](#)
- Electric
 - OFELI::EC2D1T3, [373](#)
- Electromagnetics, [18](#)
- Element, [466](#)
 - OFELI::Element, [469](#)
- element_assembly
 - General Purpose Equations, [39](#), [40](#)
- ElementAssembly
 - OFELI::Bar2DL2, [188–190](#)
 - OFELI::Beam3DL2, [204–206](#)
 - OFELI::DC1DL2, [243–245](#)
 - OFELI::DC2DT3, [267–269](#)
 - OFELI::DC2DT6, [288–290](#)
 - OFELI::DC3DAT3, [308–310](#)
 - OFELI::DC3DT4, [331–333](#)
 - OFELI::EC2D1T3, [377–379](#)

- OFELI::Elas2DQ4, [405–407](#)
- OFELI::Elas2DT3, [426–428](#)
- OFELI::Elas3DH8, [442–444](#)
- OFELI::Elas3DT4, [459–461](#)
- OFELI::Equa_Electromagnetics, [485–487](#)
- OFELI::Equa_Fluid, [499–501](#)
- OFELI::Equa_Laplace, [514–516](#)
- OFELI::Equa_Porous, [529–531](#)
- OFELI::Equa_Solid, [545–547](#)
- OFELI::Equa_Therm, [563–565](#)
- OFELI::Equation, [578–580](#), [582](#)
- OFELI::HelmholtzBT3, [608–610](#)
- OFELI::Laplace1DL2, [657–659](#)
- OFELI::Laplace1DL3, [672–674](#)
- OFELI::Laplace2DFVT, [687–689](#)
- OFELI::Laplace2DMHRT0, [702–704](#)
- OFELI::Laplace2DT3, [719–721](#)
- OFELI::NSP2DQ41, [830–832](#)
- OFELI::TINS2DT3B, [988–990](#)
- OFELI::WaterPorous2D, [1052–1054](#)
- ElementList, [475](#)
- ElementNodeCoordinates
 - OFELI::Bar2DL2, [187](#)
 - OFELI::Beam3DL2, [204](#)
 - OFELI::DC1DL2, [242](#)
 - OFELI::DC2DT3, [267](#)
 - OFELI::DC2DT6, [287](#)
 - OFELI::DC3DAT3, [308](#)
 - OFELI::DC3DT4, [330](#)
 - OFELI::EC2D1T3, [377](#)
 - OFELI::Elas2DQ4, [404](#)
 - OFELI::Elas2DT3, [426](#)
 - OFELI::Elas3DH8, [442](#)
 - OFELI::Elas3DT4, [458](#)
 - OFELI::Equa_Electromagnetics, [485](#)
 - OFELI::Equa_Fluid, [499](#)
 - OFELI::Equa_Laplace, [513](#)
 - OFELI::Equa_Porous, [529](#)
 - OFELI::Equa_Solid, [545](#)
 - OFELI::Equa_Therm, [562](#)
 - OFELI::Equation, [577](#)
 - OFELI::HelmholtzBT3, [607](#)
 - OFELI::Laplace1DL2, [656](#)
 - OFELI::Laplace1DL3, [671](#)
 - OFELI::Laplace2DFVT, [686](#)
 - OFELI::Laplace2DMHRT0, [701](#)
 - OFELI::Laplace2DT3, [719](#)
 - OFELI::NSP2DQ41, [829](#)
 - OFELI::TINS2DT3B, [988](#)
 - OFELI::WaterPorous2D, [1051](#)
- ElementNodeVector
 - OFELI::Bar2DL2, [185](#), [186](#)
 - OFELI::Beam3DL2, [202](#)
 - OFELI::DC1DL2, [240](#), [241](#)
- OFELI::DC2DT3, [265](#)
- OFELI::DC2DT6, [285](#), [286](#)
- OFELI::DC3DAT3, [306](#)
- OFELI::DC3DT4, [328](#), [329](#)
- OFELI::EC2D1T3, [375](#)
- OFELI::Elas2DQ4, [402](#), [403](#)
- OFELI::Elas2DT3, [424](#)
- OFELI::Elas3DH8, [440](#)
- OFELI::Elas3DT4, [456](#), [457](#)
- OFELI::Equa_Electromagnetics, [483](#)
- OFELI::Equa_Fluid, [497](#)
- OFELI::Equa_Laplace, [511](#), [512](#)
- OFELI::Equa_Porous, [527](#)
- OFELI::Equa_Solid, [543](#)
- OFELI::Equa_Therm, [560](#), [561](#)
- OFELI::Equation, [575](#), [576](#)
- OFELI::HelmholtzBT3, [605](#), [606](#)
- OFELI::Laplace1DL2, [654](#), [655](#)
- OFELI::Laplace1DL3, [669](#), [670](#)
- OFELI::Laplace2DFVT, [684](#), [685](#)
- OFELI::Laplace2DMHRT0, [700](#)
- OFELI::Laplace2DT3, [717](#)
- OFELI::NSP2DQ41, [827](#), [828](#)
- OFELI::TINS2DT3B, [986](#)
- OFELI::WaterPorous2D, [1049](#), [1050](#)
- ElementNodeVectorSingleDOF
 - OFELI::Bar2DL2, [186](#)
 - OFELI::Beam3DL2, [203](#)
 - OFELI::DC1DL2, [241](#)
 - OFELI::DC2DT3, [266](#)
 - OFELI::DC2DT6, [286](#)
 - OFELI::DC3DAT3, [307](#)
 - OFELI::DC3DT4, [329](#)
 - OFELI::EC2D1T3, [375](#)
 - OFELI::Elas2DQ4, [403](#)
 - OFELI::Elas2DT3, [425](#)
 - OFELI::Elas3DH8, [441](#)
 - OFELI::Elas3DT4, [457](#)
 - OFELI::Equa_Electromagnetics, [483](#)
 - OFELI::Equa_Fluid, [498](#)
 - OFELI::Equa_Laplace, [512](#)
 - OFELI::Equa_Porous, [528](#)
 - OFELI::Equa_Solid, [543](#)
 - OFELI::Equa_Therm, [561](#)
 - OFELI::Equation, [576](#)
 - OFELI::HelmholtzBT3, [606](#)
 - OFELI::Laplace1DL2, [655](#)
 - OFELI::Laplace1DL3, [670](#)
 - OFELI::Laplace2DFVT, [685](#)
 - OFELI::Laplace2DMHRT0, [700](#)
 - OFELI::Laplace2DT3, [717](#)
 - OFELI::NSP2DQ41, [828](#)
 - OFELI::TINS2DT3B, [987](#)
 - OFELI::WaterPorous2D, [1050](#)

ElementSideVector

OFELI::Bar2DL2, [186](#)
 OFELI::Beam3DL2, [203](#)
 OFELI::DC1DL2, [241](#)
 OFELI::DC2DT3, [266](#)
 OFELI::DC2DT6, [286](#)
 OFELI::DC3DAT3, [307](#)
 OFELI::DC3DT4, [329](#)
 OFELI::EC2D1T3, [375](#)
 OFELI::Elas2DQ4, [403](#)
 OFELI::Elas2DT3, [425](#)
 OFELI::Elas3DH8, [441](#)
 OFELI::Elas3DT4, [457](#)
 OFELI::Equa_Electromagnetics, [484](#)
 OFELI::Equa_Fluid, [498](#)
 OFELI::Equa_Laplace, [512](#)
 OFELI::Equa_Porous, [528](#)
 OFELI::Equa_Solid, [544](#)
 OFELI::Equa_Therm, [561](#)
 OFELI::Equation, [576](#)
 OFELI::HelmholtzBT3, [606](#)
 OFELI::Laplace1DL2, [655](#)
 OFELI::Laplace1DL3, [670](#)
 OFELI::Laplace2DFVT, [685](#)
 OFELI::Laplace2DMHRT0, [700](#)
 OFELI::Laplace2DT3, [717](#)
 OFELI::NSP2DQ41, [828](#)
 OFELI::TINS2DT3B, [987](#)
 OFELI::WaterPorous2D, [1050](#)

ElementVector

OFELI::Bar2DL2, [186](#)
 OFELI::Beam3DL2, [203](#)
 OFELI::DC1DL2, [241](#)
 OFELI::DC2DT3, [266](#)
 OFELI::DC2DT6, [286](#)
 OFELI::DC3DAT3, [307](#)
 OFELI::DC3DT4, [329](#)
 OFELI::EC2D1T3, [376](#)
 OFELI::Elas2DQ4, [404](#)
 OFELI::Elas2DT3, [425](#)
 OFELI::Elas3DH8, [441](#)
 OFELI::Elas3DT4, [457](#)
 OFELI::Equa_Electromagnetics, [484](#)
 OFELI::Equa_Fluid, [498](#)
 OFELI::Equa_Laplace, [512](#)
 OFELI::Equa_Porous, [528](#)
 OFELI::Equa_Solid, [544](#)
 OFELI::Equa_Therm, [562](#)
 OFELI::Equation, [576](#)
 OFELI::HelmholtzBT3, [606](#)
 OFELI::Laplace1DL2, [655](#)
 OFELI::Laplace1DL3, [671](#)
 OFELI::Laplace2DFVT, [685](#)
 OFELI::Laplace2DMHRT0, [701](#)

OFELI::Laplace2DT3, [718](#)

OFELI::NSP2DQ41, [828](#)

OFELI::TINS2DT3B, [987](#)

OFELI::WaterPorous2D, [1050](#)

ElementsAreDOF

OFELI::Mesh, [793](#)

Ellipse, [476](#)

OFELI::Ellipse, [477](#)

EnthalpyToTemperature

OFELI::PhaseChange, [899](#)

EqDataType

OFELI, [70](#)

Equa_Electromagnetics< T_, NEN_, NEE_, NSE_, SN_, NSE_ >, [478](#)

Equa_Fluid

OFELI::Equa_Fluid, [496](#)

Equa_Fluid< T_, NEN_, NEE_, NSN_, NSE_ >, [492](#)

Equa_Laplace

OFELI::Equa_Laplace, [510](#)

Equa_Laplace< T_, NEN_, NEE_, NSN_, NSE_ >, [507](#)

Equa_Porous

OFELI::Equa_Porous, [525](#)

Equa_Porous< T_, NEN_, NEE_, NSN_, NSE_ >, [521](#)

Equa_Solid

OFELI::Equa_Solid, [541](#)

Equa_Solid< T_, NEN_, NEE_, NSN_, NSE_ >, [537](#)

Equa_Therm

OFELI::Equa_Therm, [557](#)

Equa_Therm< T_, NEN_, NEE_, NSN_, NSE_ >, [552](#)

Equal

Utilities, [146](#)

Equation

OFELI::Equation, [573](#), [574](#)

Equation< T_, NEN_, NEE_, NSN_, NSE_ >, [570](#)

Estimator, [585](#)

OFELI::Estimator, [586](#)

EstimatorType

OFELI::Estimator, [586](#)

Evaluate

OFELI::FMM2D, [593](#)

OFELI::FMM3D, [594](#)

execute

OFELI::FastMarching2D, [588](#)

ExtendSpeed

OFELI::FMM2D, [593](#)

OFELI::FMM3D, [595](#)

OFELI::FMMSolver, [596](#)

FE_2D_3N

OFELI, 71
 FE_2D_4N
 OFELI, 71
 FE_2D_6N
 OFELI, 71
 FE_3D_4N
 OFELI, 71
 FE_3D_8N
 OFELI, 71
 FE_3D_AXI_3N
 OFELI, 71
 FEShape, 588
 OFELI::FEShape, 589
 FEType
 OFELI, 71
 FIRST_ORDER_METHOD
 OFELI::ICPG1D, 620
 OFELI::ICPG2DT, 628
 OFELI::ICPG3DT, 635
 OFELI::LCL1D, 731
 OFELI::LCL2DT, 736
 OFELI::LCL3DT, 742
 OFELI::Muscl, 801
 OFELI::Muscl1D, 804
 OFELI::Muscl2DT, 808
 OFELI::Muscl3DT, 812
 FLUX
 OFELI, 70
 FMM2D, 592
 OFELI::FMM2D, 592
 FMM3D, 593
 OFELI::FMM3D, 594
 FMMSolver, 595
 OFELI::FMMSolver, 595
 FORWARD_EULER
 OFELI, 71
 Factor
 OFELI, 94
 FactorAndSolve
 OFELI::BMatrix, 222
 OFELI::DMatrix, 355
 OFELI::DSMatrix, 367
 OFELI::Matrix, 770
 OFELI::SkMatrix, 940
 OFELI::SkSMatrix, 948
 OFELI::SpMatrix, 967
 OFELI::TrMatrix, 1012
 OFELI, 95
 FastMarching2D, 587
 OFELI::FastMarching2D, 587
 Figure, 590
 Finite Element Mesh, 19
 Code, 27, 28
 Coord, 27

DeformMesh, 29
 GRAPH_MEMORY, 23
 getMaxSideMeasure, 33
 getMaxSize, 32
 getMeanElementMeasure, 33
 getMeanSideMeasure, 33
 getMinElementMeasure, 32
 getMinSideMeasure, 33
 getMinSize, 32
 Label, 26
 MeshActiveElements, 23
 MeshBoundaryNodes, 24
 MeshBoundarySides, 24
 MeshEdges, 24
 MeshElements, 23
 MeshNodeLoop, 24
 MeshNodes, 24
 MeshSideSet, 24
 MeshSides, 24
 MeshToMesh, 29, 30
 NodeInElement, 35
 NodeInSide, 35
 NodeLabel, 27
 operator-, 25
 operator==, 28
 operator&&, 25
 operator| |, 25
 setBoundaryNodeCodes, 34
 setBoundarySideCodes, 34
 setElementCodes, 34
 setNodeCodes, 33
 setSideCodes, 34
 SideInElement, 35
 TheEdge, 23
 TheElement, 23
 TheNode, 23
 theNodeLabel, 25
 TheSide, 23
 Fluid Dynamics, 37
 Forward
 OFELI::ICPG1D, 621
 OFELI::ICPG2DT, 629
 OFELI::LCL1D, 732
 OFELI::LCL2DT, 738
 OFELI::LCL3DT, 744
 Funct, 596
 OFELI::Funct, 597, 598
 GLOBAL_ARRAY
 OFELI, 71
 GMRES_SOLVER
 OFELI, 72
 GMRes
 Solver, 119, 120

- GRADIENT
 - OFELI::OptSolver, 846
- GRAPH_MEMORY
 - Finite Element Mesh, 23
- Gauss, 598
- genMesh
 - OFELI::Domain, 358
- General Purpose Equations, 38
 - element_assembly, 39, 40
 - side_assembly, 40, 41
- get
 - OFELI::Domain, 358
 - OFELI::IPF, 645, 646
 - OFELI::Mesh, 784
 - OFELI::PETScMatrix, 869
 - OFELI::Prescription, 913
 - OFELI::SkMatrix, 937
 - OFELI::SkSMatrix, 945
 - OFELI::SpMatrix, 964
 - OFELI, 75, 76
- getActiveElement
 - OFELI::Mesh, 794
- getAllEdges
 - OFELI::Mesh, 786
- getAllSides
 - OFELI::Mesh, 786
- getArray
 - OFELI::DMatrix, 352
- getArraySize
 - OFELI::IPF, 645
- getAuxFile
 - OFELI::IPF, 648
- getAverage
 - OFELI::PETScVect, 886
 - OFELI::Vect, 1036
- getB1
 - OFELI::BiotSavart, 215
- getB2
 - OFELI::BiotSavart, 215
- getB3
 - OFELI::BiotSavart, 215
- getBC1
 - OFELI::BiotSavart, 216
- getBC2
 - OFELI::BiotSavart, 216
- getBC3
 - OFELI::BiotSavart, 215
- getBCFile
 - OFELI::IPF, 647
- getBFFile
 - OFELI::IPF, 647
- getBamg
 - Utilities, 138
- getBC
 - OFELI::IPF, 642
- getBF
 - OFELI::IPF, 642
- getBoolOption
 - OFELI::PETScWrapper, 896
- getBoundaryNodes
 - OFELI::Mesh, 786
- getBoundarySides
 - OFELI::Mesh, 786
- getCode
 - OFELI::Edge, 386
 - OFELI::Node, 818
 - OFELI::Side, 925
 - OFELI, 81, 82
- getColHeight
 - OFELI::SkMatrix, 935
 - OFELI, 101
- getColInd
 - OFELI::SpMatrix, 963
- getColumn
 - OFELI::DMatrix, 344
 - OFELI, 88, 89
- getComplex
 - OFELI::IPF, 645
- getComplexPar
 - OFELI::IPF, 643
- getCoord
 - OFELI::Node, 818
- getCurl
 - OFELI::PETScVect, 885
 - OFELI::Vect, 1036
- getDOFType
 - OFELI::PETScVect, 880
 - OFELI::Vect, 1029
- getData
 - OFELI::IPF, 642
- getDerivative
 - OFELI, 77
- getDet
 - OFELI::FEShape, 590
 - OFELI::Hexa8, 617
 - OFELI::Line2, 748
 - OFELI::Line3, 751
 - OFELI::Penta6, 857
 - OFELI::Quad4, 916
 - OFELI::Tetra4, 973
 - OFELI::Triang3, 998
 - OFELI::Triang6S, 1001
- getDiag
 - OFELI::BMatrix, 220
 - OFELI::DMatrix, 352
 - OFELI::DSMatrix, 364
 - OFELI::Matrix, 767
 - OFELI::SkMatrix, 937

- OFELI::SkSMatrix, [945](#)
- OFELI::SpMatrix, [965](#)
- OFELI::TrMatrix, [1009](#)
- getDivergence
 - OFELI::PETScVect, [886](#)
 - OFELI::Vect, [1036](#)
- getDouble
 - OFELI::IPF, [644](#)
- getDoublePar
 - OFELI::IPF, [643](#)
- getEasymesh
 - Utilities, [139](#)
- getEdgeLabel
 - OFELI::Mesh, [794](#)
- getEigenVector
 - OFELI::EigenProblemSolver, [393](#)
- getElementLabel
 - OFELI::Mesh, [794](#)
- getElementNeighborElements
 - OFELI::Mesh, [787](#)
- getElementWiseIndex
 - OFELI::Estimator, [586](#)
- getFirstSideLabel
 - OFELI::Partition, [855](#)
- getGambit
 - Utilities, [139](#)
- getGmsh
 - Utilities, [139](#)
- getGradient
 - OFELI::PETScVect, [885](#)
 - OFELI::Vect, [1035](#)
- getInit
 - OFELI::IPF, [642](#)
- getInitFile
 - OFELI::IPF, [647](#)
- getInnerProduct
 - OFELI, [95](#)
- getIntOption
 - OFELI::PETScWrapper, [896](#)
- getIntPar
 - OFELI::IPF, [643](#)
- getInteger
 - OFELI::IPF, [644](#)
- getInternalEnergy
 - OFELI::ICPG1D, [622](#)
- getInterpolate
 - OFELI::Line2, [747](#)
- getLength
 - OFELI::PETScMatrix, [864](#)
- getLevel
 - OFELI::Node, [819](#)
- getList
 - OFELI::Mesh, [793](#), [794](#)
- getLocal
 - OFELI, [96](#)
- getLocalPoint
 - OFELI::FEShape, [590](#)
 - OFELI::Hexa8, [617](#)
 - OFELI::Line2, [748](#)
 - OFELI::Line2H, [749](#), [750](#)
 - OFELI::Line3, [751](#)
 - OFELI::Penta6, [858](#)
 - OFELI::Quad4, [916](#)
 - OFELI::Tetra4, [973](#)
 - OFELI::Triang3, [998](#)
 - OFELI::Triang6S, [1001](#)
- getLocalSize
 - OFELI::PETScVect, [879](#)
- getMach
 - OFELI::ICPG1D, [622](#)
- getMatlab
 - Utilities, [140](#)
- getMaxSideMeasure
 - Finite Element Mesh, [33](#)
- getMaxSize
 - Finite Element Mesh, [32](#)
- getMaxTime
 - OFELI::IPF, [643](#)
- getMeanElementMeasure
 - Finite Element Mesh, [33](#)
- getMeanSideMeasure
 - Finite Element Mesh, [33](#)
- getMeasure
 - OFELI::Element, [474](#)
 - OFELI::Side, [926](#)
- getMesh
 - OFELI::AbsEqua, [176](#)
 - OFELI::Bar2DL2, [194](#)
 - OFELI::Beam3DL2, [210](#)
 - OFELI::DC1DL2, [249](#)
 - OFELI::DC2DT3, [273](#)
 - OFELI::DC2DT6, [294](#)
 - OFELI::DC3DAT3, [314](#)
 - OFELI::DC3DT4, [337](#)
 - OFELI::EC2D1T3, [383](#)
 - OFELI::Elas2DQ4, [411](#)
 - OFELI::Elas2DT3, [432](#)
 - OFELI::Elas3DH8, [448](#)
 - OFELI::Elas3DT4, [465](#)
 - OFELI::Equa_Electromagnetics, [491](#)
 - OFELI::Equa_Fluid, [505](#)
 - OFELI::Equa_Laplace, [520](#)
 - OFELI::Equa_Porous, [535](#)
 - OFELI::Equa_Solid, [551](#)
 - OFELI::Equa_Therm, [569](#)
 - OFELI::Equation, [584](#)
 - OFELI::HelmholtzBT3, [614](#)
 - OFELI::Laplace1DL2, [663](#)

- OFELI::Laplace1DL3, 678
- OFELI::Laplace2DFVT, 693
- OFELI::Laplace2DMHRT0, 708
- OFELI::Laplace2DT3, 725
- OFELI::NSP2DQ41, 836
- OFELI::TINS2DT3B, 994
- OFELI::WaterPorous2D, 1058
- Utilities, 137
- getMeshFile
 - OFELI::IPF, 647
- getMinElementMeasure
 - Finite Element Mesh, 32
- getMinSideMeasure
 - Finite Element Mesh, 33
- getMinSize
 - Finite Element Mesh, 32
- getMomentum
 - OFELI::ICPG1D, 622
- getName
 - OFELI::Material, 764
- getNbAcc
 - OFELI::OptSolver, 851
- getNbBoundarySides
 - OFELI::Mesh, 791
- getNbConnectInSubMesh
 - OFELI::Partition, 855
- getNbConnectOutSubMesh
 - OFELI::Partition, 855
- getNbInternalSides
 - OFELI::Mesh, 791
- getNbIter
 - OFELI::IPF, 642
- getNbNeigEl
 - OFELI::Node, 818
- getNbNeigElements
 - OFELI::Element, 474
- getNbOutOfBounds
 - OFELI::OptSolver, 851
- getNbSteps
 - OFELI::IPF, 642
- getNeigEl
 - OFELI::Node, 819
- getNeighborElement
 - OFELI::Element, 473
 - OFELI::Side, 925
- getNetgen
 - Utilities, 140
- getNodeLabel
 - OFELI::Edge, 386
 - OFELI::Mesh, 794
- getNodeLabelInMesh
 - OFELI::Partition, 854
- getNodeLabelInSubMesh
 - OFELI::Partition, 854
- getNodeNeighborElements
 - OFELI::Mesh, 787
- getNorm1
 - OFELI::Vect, 1029
- getNorm2
 - OFELI::Vect, 1029
- getNormMax
 - OFELI::Vect, 1029
- getNormal
 - OFELI::Side, 925
- getNy
 - OFELI, 81
- getNz
 - OFELI, 81
- getOtherNeighborElement
 - OFELI::Side, 925
- getOutput
 - OFELI::IPF, 642
- getPlot
 - OFELI::IPF, 642
- getPlotFile
 - OFELI::IPF, 647
- getPointDoublePar
 - OFELI::IPF, 643
- getPrescriptionFile
 - OFELI::IPF, 647
- getProject
 - OFELI::IPF, 647
- getRange
 - OFELI::PETScMatrix, 863
- getRefCoord
 - OFELI::Line2, 747
- getRestartFile
 - OFELI::IPF, 647
- getRow
 - OFELI::DMatrix, 344, 345
 - OFELI, 89, 90
- getSCurl
 - OFELI::PETScVect, 886
 - OFELI::Vect, 1036
- getSFFFile
 - OFELI::IPF, 647
- getSave
 - OFELI::IPF, 642
- getSaveFile
 - OFELI::IPF, 647
- getSecondSideLabel
 - OFELI::Partition, 855
- getSF
 - OFELI::IPF, 642
- getSideLabel
 - OFELI::Mesh, 794
- getSignedDistance
 - OFELI::Brick, 225

- OFELI::Circle, [227](#), [228](#)
- OFELI::Ellipse, [477](#), [478](#)
- OFELI::Figure, [591](#)
- OFELI::Polygon, [907](#), [908](#)
- OFELI::Rectangle, [919](#), [920](#)
- OFELI::Sphere, [951](#)
- OFELI::Triangle, [1002](#), [1003](#), [1005](#)
- getSolution
 - OFELI::MeshAdapt, [798](#)
 - OFELI::OptSolver, [851](#)
- getSolutionBB
 - OFELI::MeshAdapt, [798](#)
- getSolutionbb
 - OFELI::MeshAdapt, [798](#)
- getSoundSpeed
 - OFELI::ICPG1D, [622](#)
- getStresses
 - OFELI::Bar2DL2, [183](#)
- getString
 - OFELI::IPF, [643](#)
- getStringPar
 - OFELI::IPF, [643](#)
- getSubMesh
 - OFELI::Partition, [854](#)
- getTemperature
 - OFELI::OptSolver, [851](#)
- getTetgen
 - Utilities, [140](#)
- getTime
 - OFELI::Timer, [974](#)
- getTimeStep
 - OFELI::IPF, [642](#)
- getTolerance
 - OFELI::IPF, [643](#)
- getTotalEnergy
 - OFELI::ICPG1D, [622](#)
- getTriangle
 - Utilities, [141](#)
- getUnitNormal
 - OFELI::Element, [474](#)
 - OFELI::Side, [925](#)
- getValue
 - OFELI, [76](#), [77](#)
- getWNorm2
 - OFELI::PETScVect, [880](#)
 - OFELI::Vect, [1030](#)
- getXYZ
 - OFELI::Node, [818](#)
- getP
 - OFELI::ICPG2DT, [631](#)
- getR
 - OFELI::ICPG2DT, [631](#)
- getV
 - OFELI::ICPG2DT, [631](#)

- Global Variables, [42](#)
 - Converged, [44](#)
 - InitPetsc, [44](#)
 - MaxNbIterations, [43](#)
 - NbTimeSteps, [43](#)
 - theEdge, [43](#)
 - theElement, [42](#)
 - theFinalTime, [44](#)
 - theIteration, [43](#)
 - theNode, [42](#)
 - theSide, [43](#)
 - theStep, [43](#)
 - theTime, [44](#)
 - theTimeStep, [43](#)
 - theTolerance, [44](#)
 - Verbosity, [43](#)
- Grad
 - OFELI::DC2DT3, [262](#)
 - OFELI::DC3DAT3, [304](#)
 - OFELI::Quad4, [915](#)
 - OFELI::Triang3, [998](#)
 - OFELI::Triang6S, [1000](#)
- Gradient
 - OFELI::MyOpt, [814](#)
- Grid, [599](#)
 - OFELI, [78](#), [79](#)
- GS
 - Solver, [120](#)
- HEAT_FLUX
 - OFELI, [70](#)
- HEAT_SOURCE
 - OFELI, [70](#)
- HEUN
 - OFELI, [71](#)
- HLL_SOLVER
 - OFELI::ICPG1D, [621](#)
 - OFELI::ICPG2DT, [629](#)
 - OFELI::ICPG3DT, [636](#)
 - OFELI::LCL1D, [731](#)
 - OFELI::LCL2DT, [736](#)
 - OFELI::LCL3DT, [742](#)
 - OFELI::Muscl, [801](#)
 - OFELI::Muscl1D, [805](#)
 - OFELI::Muscl2DT, [808](#)
 - OFELI::Muscl3DT, [812](#)
- HLLC_SOLVER
 - OFELI::ICPG1D, [621](#)
 - OFELI::ICPG2DT, [629](#)
 - OFELI::ICPG3DT, [636](#)
 - OFELI::LCL1D, [731](#)
 - OFELI::LCL2DT, [736](#)
 - OFELI::LCL3DT, [742](#)
 - OFELI::Muscl, [801](#)

- OFELI::Muscl1D, 805
 - OFELI::Muscl2DT, 808
 - OFELI::Muscl3DT, 812
- Heat Transfer, 45
- HelmholtzBT3, 601
- Hexa8, 615
- ICPG1D, 618
 - OFELI::ICPG1D, 621
- ICPG2DT, 626
 - OFELI::ICPG2DT, 629
- ICPG3DT, 633
 - OFELI::ICPG3DT, 636
- IDENT_PREC
 - OFELI, 72
- IDENTITY
 - OFELI, 72
- ILU_PREC
 - OFELI, 72
- INITIAL_AUX.1
 - OFELI, 70
- INITIAL_AUX.2
 - OFELI, 70
- INITIAL_AUX.3
 - OFELI, 70
- INITIAL_AUX.4
 - OFELI, 70
- INITIAL_FIELD
 - OFELI, 70
- INTERNAL_BOUNDARY
 - OFELI::Side, 923
- INTERNAL_SIDE
 - OFELI::Side, 923
- IOField, 637
 - OFELI, 73, 74
- IPF, 639
 - OFELI::IPF, 641
- InitHeap
 - OFELI::FMM2D, 593
 - OFELI::FMM3D, 594
- InitPetsc
 - Global Variables, 44
- InitialData
 - OFELI::UserData, 1017
- Initialize
 - OFELI::ICPG2DT, 631
 - OFELI::LCL2DT, 738
 - OFELI::Muscl2DT, 809
- Input/Output, 46
 - MAX_ARRAY_SIZE, 46
 - MAX_INPUT_STRING_LENGTH, 46
 - MAX_NB_PAR, 46
- Insert
 - OFELI::PETScVect, 891
- insertBC
 - OFELI::PETScVect, 883, 884
 - OFELI::Vect, 1033, 1034
- insertCircle
 - OFELI::Domain, 359
- insertLine
 - OFELI::Domain, 359
- insertRequiredEdge
 - OFELI::Domain, 360
- insertRequiredVertex
 - OFELI::Domain, 359
- insertSubDomain
 - OFELI::Domain, 360
- insertVertex
 - OFELI::Domain, 359
- IntegND
 - OFELI::EC2D1T3, 373
- Interface Problems, 47
- Invert
 - OFELI, 95
- isActive
 - OFELI, 82, 83
- isCloseTo
 - OFELI::Point, 903
- isFactorized
 - OFELI::BMatrix, 223
 - OFELI::DMatrix, 355
 - OFELI::DSMatrix, 367
 - OFELI::Matrix, 771
 - OFELI::SkMatrix, 941
 - OFELI::SkSMatrix, 949
 - OFELI::SpMatrix, 968
 - OFELI::TrMatrix, 1012
- IsIn
 - OFELI::Element, 475
- isOnBoundary
 - OFELI::Edge, 387
 - OFELI::Element, 474
 - OFELI::Node, 819
 - OFELI::Side, 926
- isWithMesh
 - OFELI::PETScVect, 880
- Iter
 - OFELI, 106
- Iter < T_ >, 648
- Iteration
 - OFELI, 72
- IterationLoop
 - Solver, 114
- Jacobi
 - Solver, 121
- JouleHeating
 - OFELI::DC2DT3, 262

LCL1D, [729](#)
 LCL2DT, [734](#)
 OFELI::LCL2DT, [736](#)
 LCL3DT, [739](#)
 OFELI::LCL3DT, [742](#)
 LCapacity
 OFELI::DC1DL2, [234](#)
 OFELI::DC2DT3, [257](#)
 OFELI::DC3DAT3, [301](#)
 OFELI::DC3DT4, [322](#)
 LCapacityToLHS
 OFELI::DC1DL2, [234](#)
 OFELI::DC2DT3, [257](#)
 OFELI::DC2DT6, [282](#)
 OFELI::DC3DAT3, [301](#)
 OFELI::DC3DT4, [322](#)
 OFELI::Equa_Therm, [557](#)
 LCapacityToRHS
 OFELI::DC1DL2, [234](#)
 OFELI::DC2DT3, [257](#)
 OFELI::DC2DT6, [282](#)
 OFELI::DC3DAT3, [301](#)
 OFELI::DC3DT4, [322](#)
 OFELI::Equa_Therm, [557](#)
 LEAP_FROG
 OFELI, [71](#)
 LF_SOLVER
 OFELI::ICPG1D, [621](#)
 OFELI::ICPG2DT, [629](#)
 OFELI::ICPG3DT, [636](#)
 OFELI::LCL1D, [731](#)
 OFELI::LCL2DT, [736](#)
 OFELI::LCL3DT, [742](#)
 OFELI::Muscl, [801](#)
 OFELI::Muscl1D, [805](#)
 OFELI::Muscl2DT, [808](#)
 OFELI::Muscl3DT, [812](#)
 LHS1_Convection
 OFELI::NSP2DQ41, [825](#)
 LHS2_Convection
 OFELI::NSP2DQ41, [825](#)
 LHS
 OFELI::Laplace2DT3, [714](#)
 LMass
 OFELI::Bar2DL2, [182](#)
 OFELI::Elas2DT3, [419](#)
 LMassToLHS
 OFELI::Bar2DL2, [182](#)
 OFELI::Elas2DT3, [419](#)
 OFELI::Equa_Solid, [541](#)
 LMassToRHS
 OFELI::Bar2DL2, [182](#)
 OFELI::Elas2DT3, [419](#)
 OFELI::Equa_Solid, [541](#)

LOAD
 OFELI, [70](#)
 LOCAL_ARRAY
 OFELI, [71](#)
 LORENTZ_FORCE
 OFELI, [70](#)
 LUMPED_CAPACITY
 OFELI, [69](#)
 LUMPED_MASS
 OFELI, [69](#)
 Label
 Finite Element Mesh, [26](#)
 Laplace equation, [48](#)
 Laplace1DL2, [648](#)
 OFELI::Laplace1DL2, [652](#)
 Laplace1DL3, [664](#)
 OFELI::Laplace1DL3, [667](#)
 Laplace1D
 OFELI::PETScMatrix, [865](#)
 OFELI::SpMatrix, [957](#)
 OFELI::TrMatrix, [1009](#)
 Laplace2DFVT, [679](#)
 OFELI::Laplace2DFVT, [682](#)
 Laplace2DMHRT0, [694](#)
 OFELI::Laplace2DMHRT0, [697](#)
 Laplace2DT3, [709](#)
 OFELI::Laplace2DT3, [713](#)
 Laplace2D
 OFELI::PETScMatrix, [866](#)
 OFELI::SpMatrix, [958](#)
 LaplaceDG2DP1, [726](#)
 OFELI::LaplaceDG2DP1, [727](#)
 Limiter
 OFELI::ICPG1D, [620](#)
 OFELI::ICPG2DT, [628](#)
 OFELI::ICPG3DT, [635](#)
 OFELI::LCL1D, [731](#)
 OFELI::LCL2DT, [736](#)
 OFELI::LCL3DT, [742](#)
 OFELI::Muscl, [801](#)
 OFELI::Muscl1D, [804](#)
 OFELI::Muscl2DT, [808](#)
 OFELI::Muscl3DT, [812](#)
 Line2, [745](#)
 OFELI::Line2, [746](#), [747](#)
 Line2H, [748](#)
 Line3, [750](#)
 LinearExchange
 OFELI::DC2DT3, [260](#)
 LinearSolver
 OFELI::LinearSolver, [753–755](#)
 LinearSolver< T_ >, [752](#)
 LocalMatrix
 OFELI, [92](#)

LocalMatrix< T_, NR_, NC_ >, 757

LocalNodeVector

- OFELI::Bar2DL2, 185
- OFELI::Beam3DL2, 202
- OFELI::DC1DL2, 240
- OFELI::DC2DT3, 265
- OFELI::DC2DT6, 285
- OFELI::DC3DAT3, 306
- OFELI::DC3DT4, 328
- OFELI::EC2D1T3, 374
- OFELI::Elas2DQ4, 402
- OFELI::Elas2DT3, 424
- OFELI::Elas3DH8, 440
- OFELI::Elas3DT4, 456
- OFELI::Equa_Electromagnetics, 482
- OFELI::Equa_Fluid, 497
- OFELI::Equa_Laplace, 511
- OFELI::Equa_Porous, 527
- OFELI::Equa_Solid, 543
- OFELI::Equa_Therm, 560
- OFELI::Equation, 575
- OFELI::HelmholtzBT3, 605
- OFELI::Laplace1DL2, 654
- OFELI::Laplace1DL3, 669
- OFELI::Laplace2DFVT, 684
- OFELI::Laplace2DMHRT0, 699
- OFELI::Laplace2DT3, 716
- OFELI::NSP2DQ41, 827
- OFELI::TINS2DT3B, 986
- OFELI::WaterPorous2D, 1049

LocalVect

- OFELI, 96

LocalVect< T_, N_ >, 759

Localize

- OFELI, 92, 93, 97

MAGNETIC

- OFELI, 70

MASS

- OFELI, 69

MAX_ARRAY_SIZE

- Input/Output, 46

MAX_INPUT_STRING_LENGTH

- Input/Output, 46

MAX_LIMITER

- OFELI::ICPG1D, 621
- OFELI::ICPG2DT, 628
- OFELI::ICPG3DT, 636
- OFELI::LCL1D, 731
- OFELI::LCL2DT, 736
- OFELI::LCL3DT, 742
- OFELI::Muscl, 801
- OFELI::Muscl1D, 805
- OFELI::Muscl2DT, 808

- OFELI::Muscl3DT, 812

MAX_NB_EQUATIONS

- Solver, 114

MAX_NB_INPUT_FIELDS

- Solver, 114

MAX_NB_MESHES

- Solver, 114

MAX_NB_PAR

- Input/Output, 46

MAX_SOLVER

- OFELI::ICPG1D, 621
- OFELI::ICPG2DT, 629
- OFELI::ICPG3DT, 636
- OFELI::LCL1D, 731
- OFELI::LCL2DT, 736
- OFELI::LCL3DT, 742
- OFELI::Muscl, 801
- OFELI::Muscl1D, 805
- OFELI::Muscl2DT, 808
- OFELI::Muscl3DT, 812

MINMOD_LIMITER

- OFELI::ICPG1D, 621
- OFELI::ICPG2DT, 628
- OFELI::ICPG3DT, 636
- OFELI::LCL1D, 731
- OFELI::LCL2DT, 736
- OFELI::LCL3DT, 742
- OFELI::Muscl, 801
- OFELI::Muscl1D, 805
- OFELI::Muscl2DT, 808
- OFELI::Muscl3DT, 812

MOBILITY

- OFELI, 70

MULTI_SLOPE_M_METHOD

- OFELI::ICPG1D, 620
- OFELI::ICPG2DT, 628
- OFELI::ICPG3DT, 635
- OFELI::LCL1D, 731
- OFELI::LCL2DT, 736
- OFELI::LCL3DT, 742
- OFELI::Muscl, 801
- OFELI::Muscl1D, 804
- OFELI::Muscl2DT, 808
- OFELI::Muscl3DT, 812

MULTI_SLOPE_Q_METHOD

- OFELI::ICPG1D, 620
- OFELI::ICPG2DT, 628
- OFELI::ICPG3DT, 635
- OFELI::LCL1D, 731
- OFELI::LCL2DT, 736
- OFELI::LCL3DT, 742
- OFELI::Muscl, 801
- OFELI::Muscl1D, 804
- OFELI::Muscl2DT, 808

OFELI::Muscl3DT, [812](#)
 Magnetic
 OFELI::EC2D1T3, [373](#)
 Mass
 OFELI::Bar2DL2, [181](#)
 OFELI::Elas2DT3, [420](#)
 MassToLHS
 OFELI::Bar2DL2, [182](#)
 OFELI::Elas2DQ4, [401](#)
 OFELI::Elas2DT3, [419](#)
 OFELI::Elas3DH8, [438](#)
 OFELI::Elas3DT4, [455](#)
 OFELI::Equa_Solid, [541](#)
 MassToRHS
 OFELI::Bar2DL2, [182](#)
 OFELI::Elas2DQ4, [401](#)
 OFELI::Elas2DT3, [420](#)
 OFELI::Elas3DH8, [439](#)
 OFELI::Elas3DT4, [455](#)
 OFELI::Equa_Solid, [541](#)
 Material, [761](#)
 OFELI::Material, [763](#)
 Matrix
 OFELI::Laplace1DL2, [652](#)
 OFELI::Laplace1DL3, [667](#)
 OFELI::Matrix, [767](#)
 Matrix< T_ >, [764](#)
 MatrixType
 OFELI, [71](#)
 MaxNbIterations
 Global Variables, [43](#)
 Media
 OFELI::Elas2DT3, [419](#)
 OFELI::Elas3DT4, [454](#)
 Mesh, [773](#)
 OFELI::Mesh, [779–782](#)
 MeshActiveElements
 Finite Element Mesh, [23](#)
 MeshAdapt, [795](#)
 OFELI::MeshAdapt, [797](#)
 MeshBoundaryNodes
 Finite Element Mesh, [24](#)
 MeshBoundarySides
 Finite Element Mesh, [24](#)
 MeshEdges
 Finite Element Mesh, [24](#)
 MeshElements
 Finite Element Mesh, [23](#)
 MeshNodeLoop
 Finite Element Mesh, [24](#)
 MeshNodes
 Finite Element Mesh, [24](#)
 MeshSideSet
 Finite Element Mesh, [24](#)

MeshSides
 Finite Element Mesh, [24](#)
 MeshToMesh
 Finite Element Mesh, [29, 30](#)
 Method
 OFELI::ICPG1D, [620](#)
 OFELI::ICPG2DT, [628](#)
 OFELI::ICPG3DT, [635](#)
 OFELI::LCL1D, [731](#)
 OFELI::LCL2DT, [736](#)
 OFELI::LCL3DT, [742](#)
 OFELI::Muscl, [801](#)
 OFELI::Muscl1D, [804](#)
 OFELI::Muscl2DT, [808](#)
 OFELI::Muscl3DT, [812](#)
 Mult
 OFELI::DMatrix, [346](#)
 OFELI::PETScMatrix, [864](#)
 OFELI::SkMatrix, [934](#)
 OFELI::SpMatrix, [961](#)
 OFELI, [94, 101](#)
 MultAdd
 OFELI::DMatrix, [346](#)
 OFELI::PETScMatrix, [864](#)
 OFELI::PETScVect, [886](#)
 OFELI::SkMatrix, [933, 934](#)
 OFELI::SpMatrix, [961](#)
 OFELI::Vect, [1037](#)
 OFELI, [90, 94, 100](#)
 MultAddScal
 OFELI, [94](#)
 Muscl, [800](#)
 Muscl1D, [803](#)
 Muscl2DT, [806](#)
 Muscl3DT, [810](#)
 MyOpt, [814](#)
 OFELI::MyOpt, [814](#)
 NELDER MEAD
 OFELI::OptSolver, [846](#)
 NEWMARK
 OFELI, [71](#)
 NSP2DQ41, [821](#)
 OFELI::NSP2DQ41, [825](#)
 NbTimeSteps
 Global Variables, [43](#)
 Node, [815](#)
 OFELI::Node, [816](#)
 NodeInElement
 Finite Element Mesh, [35](#)
 NodeInSide
 Finite Element Mesh, [35](#)
 NodeLabel
 Finite Element Mesh, [27](#)

- NodeList, 819
- NodesAreDOF
 - OFELI::Mesh, 792
- Normalize
 - OFELI::Point, 903
- Nrm2
 - Utilities, 146
- NumberEquations
 - OFELI::Mesh, 785, 786
- ODESolver, 837
 - OFELI::ODESolver, 839
- OFELI::AbsEqua
 - getMesh, 176
 - setSolver, 176
 - SolveLinearSystem, 176
- OFELI::BMatrix
 - Assembly, 220
 - FactorAndSolve, 222
 - getDiag, 220
 - isFactorized, 223
 - operator(), 223
 - operator+=, 223
 - operator-=, 224
 - operator[], 223
 - Prescribe, 221, 222
 - PrescribeSide, 222
 - setDiagonal, 220
- OFELI::Bar2DL2
 - AxbAssembly, 193
 - Bar2DL2, 181
 - BodyRHS, 183
 - build, 183
 - buildEigen, 184
 - DGElementAssembly, 192, 193
 - DiagBC, 185
 - ePrev, 195
 - ElementAssembly, 188–190
 - ElementNodeCoordinates, 187
 - ElementNodeVector, 185, 186
 - ElementNodeVectorSingleDOF, 186
 - ElementSideVector, 186
 - ElementVector, 186
 - getMesh, 194
 - getStresses, 183
 - LMass, 182
 - LMassToLHS, 182
 - LMassToRHS, 182
 - LocalNodeVector, 185
 - Mass, 181
 - MassToLHS, 182
 - MassToRHS, 182
 - run, 183
 - runOneTimeStep, 183
 - setMaterialProperty, 193
 - setSolver, 194
 - SideAssembly, 190, 191
 - SideNodeCoordinates, 187
 - SideVector, 187
 - SolveLinearSystem, 194
 - Stiffness, 183
 - updateBC, 184
- OFELI::Beam3DL2
 - AxbAssembly, 210
 - Beam3DL2, 200
 - buildEigen, 201
 - DGElementAssembly, 208, 209
 - DiagBC, 201
 - ePrev, 211
 - ElementAssembly, 204–206
 - ElementNodeCoordinates, 204
 - ElementNodeVector, 202
 - ElementNodeVectorSingleDOF, 203
 - ElementSideVector, 203
 - ElementVector, 203
 - getMesh, 210
 - LocalNodeVector, 202
 - setMaterialProperty, 210
 - setSolver, 210
 - SideAssembly, 207, 208
 - SideNodeCoordinates, 204
 - SideVector, 204
 - SolveLinearSystem, 211
 - updateBC, 201
- OFELI::BiotSavart
 - BiotSavart, 213
 - getB1, 215
 - getB2, 215
 - getB3, 215
 - getBC1, 216
 - getBC2, 216
 - getBC3, 215
 - run, 216
 - setBoundary, 214
 - setCurrentDensity, 214
 - setMagneticInduction, 214
 - setPermeability, 214
- OFELI::Brick
 - Brick, 225
 - dLine, 226
 - getSignedDistance, 225
 - operator+=, 225
 - setBoundingBox, 225
- OFELI::Circle
 - Circle, 227
 - dLine, 228
 - getSignedDistance, 227, 228
 - operator+=, 227, 228

OFELI::DC1DL2

AxbAssembly, 248
 BodyRHS, 237
 BoundaryRHS, 237
 build, 238, 239
 Capacity, 235
 CapacityToLHS, 234
 CapacityToRHS, 235
 Convection, 235, 236
 ConvectionToRHS, 236
 DC1DL2, 233
 DGELEMENTAssembly, 247, 248
 DiagBC, 240
 Diffusion, 235
 DiffusionToRHS, 235
 ePrev, 250
 ElementAssembly, 243–245
 ElementNodeCoordinates, 242
 ElementNodeVector, 240, 241
 ElementNodeVectorSingleDOF, 241
 ElementSideVector, 241
 ElementVector, 241
 getMesh, 249
 LCapacity, 234
 LCapacityToLHS, 234
 LCapacityToRHS, 234
 LocalNodeVector, 240
 run, 239
 runOneTimeStep, 239
 runTransient, 239
 setInput, 238
 setMaterialProperty, 248
 setSolver, 249
 setStab, 238
 SideAssembly, 245, 246
 SideNodeCoordinates, 242
 SideVector, 242
 SolveLinearSystem, 249
 updateBC, 239

OFELI::DC2DT3

AxbAssembly, 273
 BodyRHS, 260, 261
 BoundaryRHS, 261
 build, 263
 Capacity, 258
 CapacityToLHS, 258
 CapacityToRHS, 258
 Convection, 259
 ConvectionToRHS, 260
 DC2DT3, 255–257
 DGELEMENTAssembly, 271, 272
 DiagBC, 264
 Diffusion, 258
 DiffusionToRHS, 259

ePrev, 274

ElementAssembly, 267–269
 ElementNodeCoordinates, 267
 ElementNodeVector, 265
 ElementNodeVectorSingleDOF, 266
 ElementSideVector, 266
 ElementVector, 266
 getMesh, 273
 Grad, 262
 JouleHeating, 262
 LCapacity, 257
 LCapacityToLHS, 257
 LCapacityToRHS, 257
 LinearExchange, 260
 LocalNodeVector, 265
 Periodic, 262
 run, 264
 runOneTimeStep, 264
 runTransient, 263
 set, 263
 setInput, 262
 setMaterialProperty, 273
 setSolver, 273
 setStab, 263
 SideAssembly, 270, 271
 SideNodeCoordinates, 267
 SideVector, 267
 SolveLinearSystem, 274
 updateBC, 264

OFELI::DC2DT6

AxbAssembly, 293
 BodyRHS, 282
 BoundaryRHS, 282
 build, 283
 CapacityToLHS, 283
 CapacityToRHS, 283
 Convection, 281
 DC2DT6, 279, 280
 DGELEMENTAssembly, 292, 293
 DiagBC, 285
 Diffusion, 281
 ePrev, 295
 ElementAssembly, 288–290
 ElementNodeCoordinates, 287
 ElementNodeVector, 285, 286
 ElementNodeVectorSingleDOF, 286
 ElementSideVector, 286
 ElementVector, 286
 getMesh, 294
 LCapacityToLHS, 282
 LCapacityToRHS, 282
 LocalNodeVector, 285
 run, 284
 runOneTimeStep, 284

- runTransient, 284
- setMaterialProperty, 293
- setSolver, 294
- setStab, 282
- SideAssembly, 290, 291
- SideNodeCoordinates, 287
- SideVector, 287
- SolveLinearSystem, 294
- updateBC, 284
- OFELI::DC3DAT3
 - AxbAssembly, 314
 - BodyRHS, 303
 - BoundaryRHS, 303, 304
 - build, 304
 - Capacity, 302
 - CapacityToLHS, 302
 - CapacityToRHS, 302
 - DC3DAT3, 300, 301
 - DGElementAssembly, 312, 313
 - DiagBC, 305
 - Diffusion, 302
 - DiffusionToRHS, 303
 - ePrev, 315
 - ElementAssembly, 308–310
 - ElementNodeCoordinates, 308
 - ElementNodeVector, 306
 - ElementNodeVectorSingleDOF, 307
 - ElementSideVector, 307
 - ElementVector, 307
 - getMesh, 314
 - Grad, 304
 - LCapacity, 301
 - LCapacityToLHS, 301
 - LCapacityToRHS, 301
 - LocalNodeVector, 306
 - run, 305
 - runOneTimeStep, 305
 - runTransient, 304
 - setMaterialProperty, 314
 - setSolver, 314
 - setStab, 304
 - SideAssembly, 311, 312
 - SideNodeCoordinates, 308
 - SideVector, 308
 - SolveLinearSystem, 315
 - updateBC, 305
- OFELI::DC3DT4
 - AxbAssembly, 336
 - BodyRHS, 325
 - BoundaryRHS, 325, 326
 - build, 326
 - Capacity, 323
 - CapacityToLHS, 323
 - CapacityToRHS, 323
 - Convection, 324
 - DC3DT4, 320–322
 - DGElementAssembly, 335, 336
 - DiagBC, 328
 - Diffusion, 323
 - DiffusionToRHS, 324
 - ePrev, 338
 - ElementAssembly, 331–333
 - ElementNodeCoordinates, 330
 - ElementNodeVector, 328, 329
 - ElementNodeVectorSingleDOF, 329
 - ElementSideVector, 329
 - ElementVector, 329
 - getMesh, 337
 - LCapacity, 322
 - LCapacityToLHS, 322
 - LCapacityToRHS, 322
 - LocalNodeVector, 328
 - Periodic, 326
 - RHS_Convection, 325
 - run, 327
 - runOneTimeStep, 327
 - runTransient, 327
 - setMaterialProperty, 336
 - setSolver, 337
 - setStab, 326
 - SideAssembly, 333, 334
 - SideNodeCoordinates, 330
 - SideVector, 330
 - SolveLinearSystem, 337
 - updateBC, 327
- OFELI::DMatrix
 - add, 347
 - Assembly, 352, 353
 - Axpy, 347
 - DMatrix, 343
 - FactorAndSolve, 355
 - getArray, 352
 - getColumn, 344
 - getDiag, 352
 - getRow, 344, 345
 - isFactorized, 355
 - Mult, 346
 - MultAdd, 346
 - operator*=, 351
 - operator(), 348, 349, 355
 - operator+=, 351, 352, 356
 - operator-=, 351, 352, 356
 - operator=, 351
 - operator[], 356
 - Prescribe, 353, 354
 - PrescribeSide, 354
 - set, 345
 - setColumn, 345

- setDiag, 343
- setDiagonal, 352
- setLU, 349
- setQR, 347
- setRow, 345
- setSize, 344
- setTransLU, 349
- setTransQR, 347
- solve, 349, 350
- solveQR, 348
- solveTrans, 350, 351
- solveTransQR, 348
- TMult, 346
- OFELI::DSMatrix
 - Assembly, 364, 365
 - FactorAndSolve, 367
 - getDiag, 364
 - isFactorized, 367
 - operator*=, 368
 - operator(), 367, 368
 - operator+=, 368
 - operator-=, 368
 - operator[], 368
 - Prescribe, 365, 366
 - PrescribeSide, 367
 - setDiagonal, 364
 - setLDLt, 364
- OFELI::DG
 - DG, 338
- OFELI::Domain
 - Domain, 358
 - genMesh, 358
 - get, 358
 - insertCircle, 359
 - insertLine, 359
 - insertRequiredEdge, 360
 - insertRequiredVertex, 359
 - insertSubDomain, 360
 - insertVertex, 359
 - operator*=, 358
 - setOutputFile, 360
- OFELI::EC2D1T3
 - AxbAssembly, 382
 - DGElementAssembly, 381, 382
 - DiagBC, 374
 - EC2D1T3, 372, 373
 - ePrev, 384
 - Electric, 373
 - ElementAssembly, 377–379
 - ElementNodeCoordinates, 377
 - ElementNodeVector, 375
 - ElementNodeVectorSingleDOF, 375
 - ElementSideVector, 375
 - ElementVector, 376
 - getMesh, 383
 - IntegND, 373
 - LocalNodeVector, 374
 - Magnetic, 373
 - setMaterialProperty, 383
 - setSolver, 383
 - SideAssembly, 379–381
 - SideNodeCoordinates, 377
 - SideVector, 376
 - SolveLinearSystem, 384
 - updateBC, 374
- OFELI::Edge
 - DOF, 386
 - Edge, 386
 - getCode, 386
 - getNodeLabel, 386
 - isOnBoundary, 387
 - operator(), 386, 387
 - setCode, 386
 - setDOF, 386
- OFELI::EdgeList
 - selectCode, 388
 - unselectCode, 388
- OFELI::EigenProblemSolver
 - Assembly, 392
 - checkSturm, 393
 - EigenProblemSolver, 389, 390
 - getEigenVector, 393
 - run, 392
 - runSubSpace, 392
 - SAssembly, 392
 - setMatrix, 391
 - setPDE, 391
 - setSubspaceDimension, 393
 - setTolerance, 393
- OFELI::Elas2DQ4
 - AxbAssembly, 410
 - BodyRHS, 400
 - BoundaryRHS, 400
 - DGElementAssembly, 409, 410
 - DiagBC, 402
 - DilatationToRHS, 399
 - ePrev, 412
 - Elas2DQ4, 398, 399
 - ElementAssembly, 405–407
 - ElementNodeCoordinates, 404
 - ElementNodeVector, 402, 403
 - ElementNodeVectorSingleDOF, 403
 - ElementSideVector, 403
 - ElementVector, 404
 - getMesh, 411
 - LocalNodeVector, 402
 - MassToLHS, 401
 - MassToRHS, 401

- PlaneStrain, 399
- PlaneStress, 399
- setMaterialProperty, 411
- setSolver, 411
- SideAssembly, 407–409
- SideNodeCoordinates, 405
- SideVector, 404
- SignoriniContact, 400
- SolveLinearSystem, 412
- Strain, 400
- Stress, 401
- updateBC, 401, 402
- OFELI::Elas2DT3
 - AxbAssembly, 432
 - BodyRHS, 421
 - BoundaryRHS, 421
 - ContactPressure, 422
 - DGELEMENTAssembly, 430, 431
 - Deviator, 420
 - DeviatorToRHS, 420
 - DiagBC, 423
 - Dilatation, 420
 - DilatationToRHS, 421
 - ePrev, 433
 - Elas2DT3, 417, 418
 - ElementAssembly, 426–428
 - ElementNodeCoordinates, 426
 - ElementNodeVector, 424
 - ElementNodeVectorSingleDOF, 425
 - ElementSideVector, 425
 - ElementVector, 425
 - getMesh, 432
 - LMass, 419
 - LMassToLHS, 419
 - LMassToRHS, 419
 - LocalNodeVector, 424
 - Mass, 420
 - MassToLHS, 419
 - MassToRHS, 420
 - Media, 419
 - Periodic, 423
 - Reaction, 422
 - setMaterialProperty, 432
 - setSolver, 432
 - SideAssembly, 429, 430
 - SideNodeCoordinates, 426
 - SideVector, 426
 - SignoriniContact, 421, 422
 - SolveLinearSystem, 433
 - Strain, 422
 - Stress, 423
 - updateBC, 423
- OFELI::Elas3DH8
 - AxbAssembly, 448
 - BodyRHS, 438
 - BoundaryRHS, 438
 - DGELEMENTAssembly, 446, 447
 - DiagBC, 439
 - ePrev, 449
 - Elas3DH8, 438
 - ElementAssembly, 442–444
 - ElementNodeCoordinates, 442
 - ElementNodeVector, 440
 - ElementNodeVectorSingleDOF, 441
 - ElementSideVector, 441
 - ElementVector, 441
 - getMesh, 448
 - LocalNodeVector, 440
 - MassToLHS, 438
 - MassToRHS, 439
 - setMaterialProperty, 448
 - setSolver, 448
 - SideAssembly, 445, 446
 - SideNodeCoordinates, 442
 - SideVector, 442
 - SolveLinearSystem, 449
 - updateBC, 439
- OFELI::Elas3DT4
 - AxbAssembly, 464
 - BodyRHS, 454
 - BoundaryRHS, 454
 - buildEigen, 455
 - DGELEMENTAssembly, 463, 464
 - DiagBC, 456
 - ePrev, 466
 - ElementAssembly, 459–461
 - ElementNodeCoordinates, 458
 - ElementNodeVector, 456, 457
 - ElementNodeVectorSingleDOF, 457
 - ElementSideVector, 457
 - ElementVector, 457
 - getMesh, 465
 - LocalNodeVector, 456
 - MassToLHS, 455
 - MassToRHS, 455
 - Media, 454
 - setMaterialProperty, 464
 - setSolver, 465
 - SideAssembly, 461, 462
 - SideNodeCoordinates, 458
 - SideVector, 458
 - SolveLinearSystem, 465
 - updateBC, 455
- OFELI::Element
 - Add, 470, 471
 - Contains, 472, 473
 - Element, 469
 - getMeasure, 474

- getNbNeigElements, [474](#)
- getNeighborElement, [473](#)
- getUnitNormal, [474](#)
- IsIn, [475](#)
- isOnBoundary, [474](#)
- operator(), [472](#), [474](#)
- Replace, [471](#)
- set, [472](#)
- setChild, [474](#)
- setCode, [470](#), [472](#)
- setDOF, [472](#)
- setLabel, [470](#)
- setSide, [474](#)
- OFELI::ElementList
 - selectLevel, [476](#)
 - unselectCode, [476](#)
- OFELI::Ellipse
 - dLine, [478](#)
 - Ellipse, [477](#)
 - getSignedDistance, [477](#), [478](#)
 - operator+=, [477](#)
- OFELI::Equa_Electromagnetics
 - AxbAssembly, [490](#), [491](#)
 - DGElementAssembly, [489](#), [490](#)
 - DiagBC, [482](#)
 - ePrev, [492](#)
 - ElementAssembly, [485–487](#)
 - ElementNodeCoordinates, [485](#)
 - ElementNodeVector, [483](#)
 - ElementNodeVectorSingleDOF, [483](#)
 - ElementSideVector, [484](#)
 - ElementVector, [484](#)
 - getMesh, [491](#)
 - LocalNodeVector, [482](#)
 - setMaterialProperty, [491](#)
 - setSolver, [491](#)
 - SideAssembly, [487–489](#)
 - SideNodeCoordinates, [485](#)
 - SideVector, [484](#)
 - SolveLinearSystem, [492](#)
 - updateBC, [482](#)
- OFELI::Equa_Fluid
 - AxbAssembly, [505](#)
 - DGElementAssembly, [503](#), [504](#)
 - DiagBC, [496](#)
 - ePrev, [506](#)
 - ElementAssembly, [499–501](#)
 - ElementNodeCoordinates, [499](#)
 - ElementNodeVector, [497](#)
 - ElementNodeVectorSingleDOF, [498](#)
 - ElementSideVector, [498](#)
 - ElementVector, [498](#)
 - Equa_Fluid, [496](#)
 - getMesh, [505](#)
 - LocalNodeVector, [497](#)
 - setMaterialProperty, [505](#)
 - setSolver, [505](#)
 - SideAssembly, [502](#), [503](#)
 - SideNodeCoordinates, [499](#)
 - SideVector, [499](#)
 - SolveLinearSystem, [506](#)
 - updateBC, [496](#)
- OFELI::Equa_Laplace
 - AxbAssembly, [519](#)
 - build, [510](#)
 - DGElementAssembly, [518](#), [519](#)
 - DiagBC, [511](#)
 - ePrev, [521](#)
 - ElementAssembly, [514–516](#)
 - ElementNodeCoordinates, [513](#)
 - ElementNodeVector, [511](#), [512](#)
 - ElementNodeVectorSingleDOF, [512](#)
 - ElementSideVector, [512](#)
 - ElementVector, [512](#)
 - Equa_Laplace, [510](#)
 - getMesh, [520](#)
 - LocalNodeVector, [511](#)
 - setMaterialProperty, [519](#)
 - setSolver, [520](#)
 - SideAssembly, [516](#), [517](#)
 - SideNodeCoordinates, [513](#)
 - SideVector, [513](#)
 - SolveLinearSystem, [520](#)
 - updateBC, [510](#)
- OFELI::Equa_Porous
 - AxbAssembly, [535](#)
 - BodyRHS, [525](#)
 - BoundaryRHS, [525](#)
 - build, [525](#), [526](#)
 - DGElementAssembly, [533](#), [534](#)
 - DiagBC, [526](#)
 - ePrev, [536](#)
 - ElementAssembly, [529–531](#)
 - ElementNodeCoordinates, [529](#)
 - ElementNodeVector, [527](#)
 - ElementNodeVectorSingleDOF, [528](#)
 - ElementSideVector, [528](#)
 - ElementVector, [528](#)
 - Equa_Porous, [525](#)
 - getMesh, [535](#)
 - LocalNodeVector, [527](#)
 - run, [526](#)
 - setMaterialProperty, [535](#)
 - setSolver, [535](#)
 - SideAssembly, [532](#), [533](#)
 - SideNodeCoordinates, [529](#)
 - SideVector, [529](#)
 - SolveLinearSystem, [536](#)

- updateBC, 526
- OFELI::Equa_Solid
 - AxbAssembly, 550, 551
 - DGElementAssembly, 549, 550
 - DiagBC, 542
 - ePrev, 552
 - ElementAssembly, 545–547
 - ElementNodeCoordinates, 545
 - ElementNodeVector, 543
 - ElementNodeVectorSingleDOF, 543
 - ElementSideVector, 544
 - ElementVector, 544
 - Equa_Solid, 541
 - getMesh, 551
 - LMassToLHS, 541
 - LMassToRHS, 541
 - LocalNodeVector, 543
 - MassToLHS, 541
 - MassToRHS, 541
 - setMaterialProperty, 551
 - setSolver, 551
 - SideAssembly, 547–549
 - SideNodeCoordinates, 545
 - SideVector, 544
 - SolveLinearSystem, 552
 - updateBC, 542
- OFELI::Equa_Therm
 - AxbAssembly, 568
 - BodyRHS, 558
 - BoundaryRHS, 558
 - build, 558, 559
 - CapacityToLHS, 557
 - CapacityToRHS, 558
 - DGElementAssembly, 567, 568
 - DiagBC, 560
 - ePrev, 570
 - ElementAssembly, 563–565
 - ElementNodeCoordinates, 562
 - ElementNodeVector, 560, 561
 - ElementNodeVectorSingleDOF, 561
 - ElementSideVector, 561
 - ElementVector, 562
 - Equa_Therm, 557
 - getMesh, 569
 - LCapacityToLHS, 557
 - LCapacityToRHS, 557
 - LocalNodeVector, 560
 - run, 559
 - runOneTimeStep, 559
 - runTransient, 559
 - setMaterialProperty, 568
 - setSolver, 569
 - setStab, 557
 - SideAssembly, 565, 566
 - SideNodeCoordinates, 563
 - SideVector, 562
 - SolveLinearSystem, 570
 - updateBC, 559, 560
- OFELI::Equation
 - AxbAssembly, 583
 - DGElementAssembly, 580, 581
 - DiagBC, 575
 - ePrev, 585
 - ElementAssembly, 578–580, 582
 - ElementNodeCoordinates, 577
 - ElementNodeVector, 575, 576
 - ElementNodeVectorSingleDOF, 576
 - ElementSideVector, 576
 - ElementVector, 576
 - Equation, 573, 574
 - getMesh, 584
 - LocalNodeVector, 575
 - setMaterialProperty, 583
 - setSolver, 584
 - SideAssembly, 578, 579, 581–583
 - SideNodeCoordinates, 577
 - SideVector, 577
 - SolveLinearSystem, 584
 - updateBC, 574
- OFELI::Estimator
 - ESTIM_ND_JUMP, 586
 - ESTIM_ZZ, 586
 - Estimator, 586
 - EstimatorType, 586
 - getElementWiseIndex, 586
 - setSolution, 586
 - setType, 586
- OFELI::FEShape
 - DSh, 590
 - FEShape, 589
 - getDet, 590
 - getLocalPoint, 590
 - Sh, 589
- OFELI::FMM2D
 - check_error, 593
 - Evaluate, 593
 - ExtendSpeed, 593
 - FMM2D, 592
 - InitHeap, 593
- OFELI::FMM3D
 - check_error, 595
 - Evaluate, 594
 - ExtendSpeed, 595
 - FMM3D, 594
 - InitHeap, 594
- OFELI::FMMSolver
 - check_error, 596
 - ExtendSpeed, 596

- FMMSolver, 595
- OFELI::FastMarching2D
 - execute, 588
 - FastMarching2D, 587
- OFELI::Figure
 - dLine, 591
 - getSignedDistance, 591
- OFELI::Funct
 - Funct, 597, 598
 - operator=, 598
- OFELI::Gauss
 - setTriangle, 599
- OFELI::HelmholtzBT3
 - AxbAssembly, 613
 - DGELEMENTAssembly, 612, 613
 - DiagBC, 605
 - ePrev, 615
 - ElementAssembly, 608–610
 - ElementNodeCoordinates, 607
 - ElementNodeVector, 605, 606
 - ElementNodeVectorSingleDOF, 606
 - ElementSideVector, 606
 - ElementVector, 606
 - getMesh, 614
 - LocalNodeVector, 605
 - setMaterialProperty, 613
 - setSolver, 614
 - SideAssembly, 610, 611
 - SideNodeCoordinates, 607
 - SideVector, 607
 - SolveLinearSystem, 614
 - updateBC, 604, 605
- OFELI::Hexa8
 - atGauss1, 616
 - atGauss2, 617
 - DSh, 616, 617
 - getDet, 617
 - getLocalPoint, 617
 - setLocal, 616
 - Sh, 617
- OFELI::ICPG1D
 - FIRST_ORDER_METHOD, 620
 - Forward, 621
 - getInternalEnergy, 622
 - getMach, 622
 - getMomentum, 622
 - getSoundSpeed, 622
 - getTotalEnergy, 622
 - HLL_SOLVER, 621
 - HLLC_SOLVER, 621
 - ICPG1D, 621
 - LF_SOLVER, 621
 - Limiter, 620
 - MAX_LIMITER, 621
 - MAX_SOLVER, 621
 - MINMOD_LIMITER, 621
 - MULTI_SLOPE_M_METHOD, 620
 - MULTI_SLOPE_Q_METHOD, 620
 - Method, 620
 - ROE_SOLVER, 621
 - RUSANOV_SOLVER, 621
 - SUPERBEE_LIMITER, 621
 - setBC, 623
 - setCFL, 624
 - setInOutflowBC, 624
 - setInitialCondition, 622
 - setLimiter, 625
 - setMethod, 625
 - setReconstruction, 625
 - setReferenceLength, 625
 - setTimeStep, 624
 - setVerbose, 625
 - SolverType, 621
 - VANALBADA_LIMITER, 621
 - VANLEER_LIMITER, 621
 - VFROE_SOLVER, 621
- OFELI::ICPG2DT
 - FIRST_ORDER_METHOD, 628
 - Forward, 629
 - getP, 631
 - getR, 631
 - getV, 631
 - HLL_SOLVER, 629
 - HLLC_SOLVER, 629
 - ICPG2DT, 629
 - Initialize, 631
 - LF_SOLVER, 629
 - Limiter, 628
 - MAX_LIMITER, 628
 - MAX_SOLVER, 629
 - MINMOD_LIMITER, 628
 - MULTI_SLOPE_M_METHOD, 628
 - MULTI_SLOPE_Q_METHOD, 628
 - Method, 628
 - ROE_SOLVER, 629
 - RUSANOV_SOLVER, 629
 - SUPERBEE_LIMITER, 628
 - setBC, 629, 630
 - setCFL, 632
 - setLimiter, 632
 - setMethod, 632
 - setReconstruction, 629, 631
 - setReferenceLength, 632
 - setSolver, 629
 - setTimeStep, 632
 - setVerbose, 632
 - SolverType, 628
 - VANALBADA_LIMITER, 628

- VANLEER_LIMITER, 628
- VFROE_SOLVER, 629
- OFELI::ICPG3DT
 - FIRST_ORDER_METHOD, 635
 - HLL_SOLVER, 636
 - HLLC_SOLVER, 636
 - ICPG3DT, 636
 - LF_SOLVER, 636
 - Limiter, 635
 - MAX_LIMITER, 636
 - MAX_SOLVER, 636
 - MINMOD_LIMITER, 636
 - MULTI_SLOPE_M_METHOD, 635
 - MULTI_SLOPE_Q_METHOD, 635
 - Method, 635
 - ROE_SOLVER, 636
 - RUSANOV_SOLVER, 636
 - SUPERBEE_LIMITER, 636
 - setLimiter, 637
 - setMethod, 637
 - setReconstruction, 637
 - setVerbose, 637
 - SolverType, 636
 - VANALBADA_LIMITER, 636
 - VANLEER_LIMITER, 636
 - VFROE_SOLVER, 636
- OFELI::IPF
 - contains, 645
 - get, 645, 646
 - getArraySize, 645
 - getAuxFile, 648
 - getBCFile, 647
 - getBFFFile, 647
 - getBC, 642
 - getBF, 642
 - getComplex, 645
 - getComplexPar, 643
 - getData, 642
 - getDouble, 644
 - getDoublePar, 643
 - getInit, 642
 - getInitFile, 647
 - getIntPar, 643
 - getInteger, 644
 - getMaxTime, 643
 - getMeshFile, 647
 - getNbIter, 642
 - getNbSteps, 642
 - getOutput, 642
 - getPlot, 642
 - getPlotFile, 647
 - getPointDoublePar, 643
 - getPrescriptionFile, 647
 - getProject, 647
 - getRestartFile, 647
 - getSFFFile, 647
 - getSave, 642
 - getSaveFile, 647
 - getSF, 642
 - getString, 643
 - getStringPar, 643
 - getTimeStep, 642
 - getTolerance, 643
 - IPF, 641
- OFELI::LCL1D
 - FIRST_ORDER_METHOD, 731
 - Forward, 732
 - HLL_SOLVER, 731
 - HLLC_SOLVER, 731
 - LF_SOLVER, 731
 - Limiter, 731
 - MAX_LIMITER, 731
 - MAX_SOLVER, 731
 - MINMOD_LIMITER, 731
 - MULTI_SLOPE_M_METHOD, 731
 - MULTI_SLOPE_Q_METHOD, 731
 - Method, 731
 - ROE_SOLVER, 731
 - RUSANOV_SOLVER, 731
 - runOneTimeStep, 732
 - SUPERBEE_LIMITER, 731
 - setBC, 732
 - setCFL, 733
 - setInitialCondition, 731
 - setLimiter, 734
 - setMethod, 733
 - setReconstruction, 733
 - setTimeStep, 733
 - setVelocity, 732
 - setVerbose, 733
 - SolverType, 731
 - VANALBADA_LIMITER, 731
 - VANLEER_LIMITER, 731
 - VFROE_SOLVER, 731
- OFELI::LCL2DT
 - FIRST_ORDER_METHOD, 736
 - Forward, 738
 - HLL_SOLVER, 736
 - HLLC_SOLVER, 736
 - Initialize, 738
 - LCL2DT, 736
 - LF_SOLVER, 736
 - Limiter, 736
 - MAX_LIMITER, 736
 - MAX_SOLVER, 736
 - MINMOD_LIMITER, 736
 - MULTI_SLOPE_M_METHOD, 736
 - MULTI_SLOPE_Q_METHOD, 736

- Method, 736
- ROE_SOLVER, 736
- RUSANOV_SOLVER, 736
- runOneTimeStep, 737
- SUPERBEE_LIMITER, 736
- setBC, 737
- setCFL, 739
- setInitialCondition, 737
- setLimiter, 739
- setMethod, 739
- setReconstruction, 738
- setReferenceLength, 739
- setTimeStep, 738
- setVelocity, 738
- setVerbose, 739
- SolverType, 736
- VANALBADA_LIMITER, 736
- VANLEER_LIMITER, 736
- VFROE_SOLVER, 736
- OFELI::LCL3DT
 - FIRST_ORDER_METHOD, 742
 - Forward, 744
 - HLL_SOLVER, 742
 - HLLC_SOLVER, 742
 - LCL3DT, 742
 - LF_SOLVER, 742
 - Limiter, 742
 - MAX_LIMITER, 742
 - MAX_SOLVER, 742
 - MINMOD_LIMITER, 742
 - MULTI_SLOPE_M_METHOD, 742
 - MULTI_SLOPE_Q_METHOD, 742
 - Method, 742
 - ROE_SOLVER, 742
 - RUSANOV_SOLVER, 742
 - SUPERBEE_LIMITER, 742
 - setBC, 743
 - setCFL, 744
 - setInitialCondition, 743
 - setLimiter, 745
 - setMethod, 745
 - setReconstruction, 744
 - setTimeStep, 744
 - setVelocity, 743
 - setVerbose, 744
 - SolverType, 742
 - VANALBADA_LIMITER, 742
 - VANLEER_LIMITER, 742
 - VFROE_SOLVER, 742
- OFELI::Laplace1DL2
 - AxbAssembly, 662
 - BodyRHS, 652
 - BoundaryRHS, 652
 - build, 653
 - DGElementAssembly, 661, 662
 - DiagBC, 654
 - ePrev, 664
 - ElementAssembly, 657–659
 - ElementNodeCoordinates, 656
 - ElementNodeVector, 654, 655
 - ElementNodeVectorSingleDOF, 655
 - ElementSideVector, 655
 - ElementVector, 655
 - getMesh, 663
 - Laplace1DL2, 652
 - LocalNodeVector, 654
 - Matrix, 652
 - run, 653
 - setBoundaryCondition, 653
 - setMaterialProperty, 662
 - setSolver, 663
 - setTraction, 653
 - SideAssembly, 659, 660
 - SideNodeCoordinates, 656
 - SideVector, 656
 - SolveLinearSystem, 663
 - updateBC, 653
- OFELI::Laplace1DL3
 - AxbAssembly, 677
 - BodyRHS, 667
 - BoundaryRHS, 668
 - build, 668
 - DGElementAssembly, 676, 677
 - DiagBC, 669
 - ePrev, 679
 - ElementAssembly, 672–674
 - ElementNodeCoordinates, 671
 - ElementNodeVector, 669, 670
 - ElementNodeVectorSingleDOF, 670
 - ElementSideVector, 670
 - ElementVector, 671
 - getMesh, 678
 - Laplace1DL3, 667
 - LocalNodeVector, 669
 - Matrix, 667
 - run, 668
 - setMaterialProperty, 678
 - setSolver, 678
 - setTraction, 668
 - SideAssembly, 674–676
 - SideNodeCoordinates, 672
 - SideVector, 671
 - SolveLinearSystem, 679
 - updateBC, 668, 669
- OFELI::Laplace2DFVT
 - AxbAssembly, 692
 - build, 683
 - checkDelaunay, 683

- DGElementAssembly, 691, 692
- DiagBC, 684
- ePrev, 694
- ElementAssembly, 687–689
- ElementNodeCoordinates, 686
- ElementNodeVector, 684, 685
- ElementNodeVectorSingleDOF, 685
- ElementSideVector, 685
- ElementVector, 685
- getMesh, 693
- Laplace2DFVT, 682
- LocalNodeVector, 684
- setMaterialProperty, 692
- setSolver, 693
- SideAssembly, 689, 690
- SideNodeCoordinates, 686
- SideVector, 686
- SolveLinearSystem, 693
- updateBC, 683
- OFELI::Laplace2DMHRT0
 - AxbAssembly, 707
 - build, 698
 - DGElementAssembly, 706, 707
 - DiagBC, 699
 - ePrev, 709
 - ElementAssembly, 702–704
 - ElementNodeCoordinates, 701
 - ElementNodeVector, 700
 - ElementNodeVectorSingleDOF, 700
 - ElementSideVector, 700
 - ElementVector, 701
 - getMesh, 708
 - Laplace2DMHRT0, 697
 - LocalNodeVector, 699
 - Post, 698
 - setDiffusivity, 697
 - setMaterialProperty, 708
 - setSolver, 708
 - SideAssembly, 704–706
 - SideNodeCoordinates, 702
 - SideVector, 701
 - solve, 698
 - SolveLinearSystem, 709
 - updateBC, 698, 699
- OFELI::Laplace2DT3
 - Axb, 715
 - AxbAssembly, 724
 - BodyRHS, 714
 - BoundaryRHS, 714
 - build, 714, 715
 - buildEigen, 714
 - DGElementAssembly, 723, 724
 - DiagBC, 716
 - ePrev, 726
 - ElementAssembly, 719–721
 - ElementNodeCoordinates, 719
 - ElementNodeVector, 717
 - ElementNodeVectorSingleDOF, 717
 - ElementSideVector, 717
 - ElementVector, 718
 - getMesh, 725
 - LHS, 714
 - Laplace2DT3, 713
 - LocalNodeVector, 716
 - Post, 715
 - run, 715
 - setMaterialProperty, 725
 - setSolver, 725
 - setSource, 714
 - SideAssembly, 721–723
 - SideNodeCoordinates, 719
 - SideVector, 718
 - solve, 715
 - SolveLinearSystem, 726
 - updateBC, 716
- OFELI::LaplaceDG2DP1
 - build, 728
 - LaplaceDG2DP1, 727
 - run, 728
 - set, 727, 728
 - Smooth, 728
- OFELI::Line2
 - DSh, 747
 - getDet, 748
 - getInterpolate, 747
 - getLocalPoint, 748
 - getRefCoord, 747
 - Line2, 746, 747
 - Sh, 747
- OFELI::Line2H
 - check, 749
 - DSh, 750
 - getLocalPoint, 749, 750
 - Sh, 749
- OFELI::Line3
 - getDet, 751
 - getLocalPoint, 751
 - Sh, 751
- OFELI::LinearSolver
 - LinearSolver, 753–755
 - set, 756
 - setMatrix, 755, 756
 - setMaxIter, 755
 - setSolver, 756
 - setVerbose, 755
 - solve, 756, 757
- OFELI::LocalMatrix
 - operator(), 759

OFELI::LocalVect
 operator(), 761
 operator[], 761
 OFELI::Material
 check, 764
 getName, 764
 Material, 763
 set, 764
 OFELI::Matrix
 Assembly, 767, 768
 Axy, 767
 FactorAndSolve, 770
 getDiag, 767
 isFactorized, 771
 Matrix, 767
 operator*=, 772
 operator(), 771, 772
 operator+=, 772, 773
 operator-=, 772, 773
 operator=, 772
 operator[], 772
 Prescribe, 768, 769
 PrescribeSide, 769
 set, 771
 setDiagonal, 767
 solve, 770
 OFELI::Mesh
 Add, 783, 787
 AddMidNodes, 791
 createBoundarySideList, 786
 createInternalSideList, 786
 Delete, 788, 789
 DeleteElement, 788
 DeleteNode, 787
 DeleteSide, 788
 EdgesAreDOF, 792
 ElementsAreDOF, 793
 get, 784
 getActiveElement, 794
 getAllEdges, 786
 getAllSides, 786
 getBoundaryNodes, 786
 getBoundarySides, 786
 getEdgeLabel, 794
 getElementLabel, 794
 getElementNeighborElements, 787
 getList, 793, 794
 getNbBoundarySides, 791
 getNbInternalSides, 791
 getNodeLabel, 794
 getNodeNeighborElements, 787
 getSideLabel, 794
 Mesh, 779–782
 NodesAreDOF, 792

NumberEquations, 785, 786
 operator*=, 784
 put, 793
 Refine, 795
 RenumberEdge, 789
 RenumberElement, 789
 RenumberNode, 789
 RenumberSide, 789
 Reorder, 787
 Rescale, 791
 save, 793
 set, 792
 setDOFSupport, 784
 setDim, 783
 setEdgeView, 790
 setElementView, 790
 setList, 790, 791
 setMaterial, 787
 setNbDOFPerNode, 785
 setNodeView, 790
 setPointInDomain, 785
 setSideView, 790
 setVerbose, 783
 SidesAreDOF, 792
 OFELI::MeshAdapt
 getSolution, 798
 getSolutionBB, 798
 getSolutionbb, 798
 MeshAdapt, 797
 run, 799
 saveMbb, 799
 setMaxNbVertices, 798
 setNoKeep, 798
 setNoScaling, 798
 setRatio, 798
 setRelaxation, 798
 setTheta, 799
 OFELI::Muscl
 FIRST_ORDER.METHOD, 801
 HLL_SOLVER, 801
 HLLC_SOLVER, 801
 LF_SOLVER, 801
 Limiter, 801
 MAX_LIMITER, 801
 MAX_SOLVER, 801
 MINMOD_LIMITER, 801
 MULTISLOPE_M.METHOD, 801
 MULTISLOPE_Q.METHOD, 801
 Method, 801
 ROE_SOLVER, 801
 RUSANOV_SOLVER, 801
 SUPERBEE_LIMITER, 801
 setCFL, 802
 setLimiter, 803

- setMethod, 802
- setReconstruction, 802
- setReferenceLength, 802
- setTimeStep, 802
- setVerbose, 802
- SolverType, 801
- VANALBADA.LIMITER, 801
- VANLEER.LIMITER, 801
- VFROE.SOLVER, 801
- OFELI::Muscl1D
 - FIRST_ORDER.METHOD, 804
 - HLL.SOLVER, 805
 - HLLC.SOLVER, 805
 - LF.SOLVER, 805
 - Limiter, 804
 - MAX.LIMITER, 805
 - MAX.SOLVER, 805
 - MINMOD.LIMITER, 805
 - MULTI.SLOPE.M.METHOD, 804
 - MULTI.SLOPE.Q.METHOD, 804
 - Method, 804
 - ROE.SOLVER, 805
 - RUSANOV.SOLVER, 805
 - SUPERBEE.LIMITER, 805
 - setCFL, 805
 - setLimiter, 806
 - setMethod, 806
 - setReconstruction, 806
 - setReferenceLength, 805
 - setTimeStep, 805
 - setVerbose, 806
 - SolverType, 805
 - VANALBADA.LIMITER, 805
 - VANLEER.LIMITER, 805
 - VFROE.SOLVER, 805
- OFELI::Muscl2DT
 - FIRST_ORDER.METHOD, 808
 - HLL.SOLVER, 808
 - HLLC.SOLVER, 808
 - Initialize, 809
 - LF.SOLVER, 808
 - Limiter, 808
 - MAX.LIMITER, 808
 - MAX.SOLVER, 808
 - MINMOD.LIMITER, 808
 - MULTI.SLOPE.M.METHOD, 808
 - MULTI.SLOPE.Q.METHOD, 808
 - Method, 808
 - ROE.SOLVER, 808
 - RUSANOV.SOLVER, 808
 - SUPERBEE.LIMITER, 808
 - setCFL, 809
 - setLimiter, 810
 - setMethod, 809
 - setReconstruction, 808
 - setReferenceLength, 809
 - setTimeStep, 809
 - setVerbose, 809
 - SolverType, 808
 - VANALBADA.LIMITER, 808
 - VANLEER.LIMITER, 808
 - VFROE.SOLVER, 808
- OFELI::Muscl3DT
 - FIRST_ORDER.METHOD, 812
 - HLL.SOLVER, 812
 - HLLC.SOLVER, 812
 - LF.SOLVER, 812
 - Limiter, 812
 - MAX.LIMITER, 812
 - MAX.SOLVER, 812
 - MINMOD.LIMITER, 812
 - MULTI.SLOPE.M.METHOD, 812
 - MULTI.SLOPE.Q.METHOD, 812
 - Method, 812
 - ROE.SOLVER, 812
 - RUSANOV.SOLVER, 812
 - SUPERBEE.LIMITER, 812
 - setCFL, 813
 - setLimiter, 813
 - setMethod, 813
 - setReconstruction, 812
 - setReferenceLength, 813
 - setTimeStep, 813
 - setVerbose, 813
 - SolverType, 812
 - VANALBADA.LIMITER, 812
 - VANLEER.LIMITER, 812
 - VFROE.SOLVER, 812
- OFELI::MyOpt
 - Gradient, 814
 - MyOpt, 814
 - Objective, 814
- OFELI::NSP2DQ41
 - AxbAssembly, 835
 - BodyRHS, 826
 - BoundaryRHS, 826
 - DGElementAssembly, 834, 835
 - DiagBC, 827
 - ePrev, 837
 - ElementAssembly, 830–832
 - ElementNodeCoordinates, 829
 - ElementNodeVector, 827, 828
 - ElementNodeVectorSingleDOF, 828
 - ElementSideVector, 828
 - ElementVector, 828
 - getMesh, 836
 - LHS1.Convection, 825
 - LHS2.Convection, 825

- LocalNodeVector, 827
- NSP2DQ41, 825
- Periodic, 826
- setMaterialProperty, 835
- setSolver, 836
- SideAssembly, 832, 833
- SideNodeCoordinates, 829
- SideVector, 829
- SolveLinearSystem, 836
- updateBC, 826
- OFELI::Node
 - DOF, 818
 - getCode, 818
 - getCoord, 818
 - getLevel, 819
 - getNbNeigEl, 818
 - getNeigEl, 819
 - getXYZ, 818
 - isOnBoundary, 819
 - Node, 816
 - setCode, 817
 - setCoord, 817
 - setDOF, 818
 - setLevel, 819
 - setOnBoundary, 818
- OFELI::NodeList
 - selectCode, 820
 - selectCoordinate, 820
 - unselectCode, 820
- OFELI::ODESolver
 - ODESolver, 839
 - run, 844
 - runOneTimeStep, 844
 - set, 839
 - setCoef, 840
 - setConstantMatrix, 843
 - setInitial, 841, 842
 - setInitialRHS, 841, 842
 - setLinearSolver, 843
 - setMatrices, 842
 - setNbEq, 840
 - setNewmarkParameters, 843
 - setNonConstantMatrix, 843
 - setRHS, 843
 - setRK4RHS, 840, 841
 - setVerbose, 844
 - setF, 840
- OFELI::OptSolver
 - GRADIENT, 846
 - getNbAcc, 851
 - getNbOutOfBounds, 851
 - getSolution, 851
 - getTemperature, 851
 - NELDER_MEAD, 846
 - OptMethod, 846
 - OptSolver, 846, 847
 - run, 851
 - SIMULATED_ANNEALING, 846
 - setBC, 848
 - setGradient, 848
 - setLowerBound, 849
 - setLowerBounds, 850
 - setObjective, 848
 - setOptClass, 849
 - setOptMethod, 847
 - setSAOpt, 850
 - setTolerance, 850
 - setUpperBound, 849
 - setUpperBounds, 849
 - setVerbosity, 849
 - TRUNCATED_NEWTON, 846
- OFELI::PETScMatrix
 - add, 865
 - Assembly, 869, 870
 - DiagPrescribe, 863
 - get, 869
 - getLength, 864
 - getRange, 863
 - Laplace1D, 865
 - Laplace2D, 866
 - Mult, 864
 - MultAdd, 864
 - operator Mat, 869
 - operator(), 864
 - operator=, 865
 - PETScMatrix, 861
 - set, 865
 - setAIJ_MPI, 862
 - setAIJ, 862
 - setAssembly, 870
 - setGraph, 863
 - setMesh, 862
 - setPartition, 862
 - setRank, 862
 - setSize, 863
 - setSolver, 867
 - solve, 866
- OFELI::PETScVect
 - Add, 891
 - add, 887, 888
 - Assembly, 884
 - Axpy, 887
 - getAverage, 886
 - getCurl, 885
 - getDOFType, 880
 - getDivergence, 886
 - getGradient, 885
 - getLocalSize, 879

- getSCurl, 886
- getWNorm2, 880
- Insert, 891
- insertBC, 883, 884
- isWithMesh, 880
- MultAdd, 886
- operator Vec, 890
- operator*=, 890
- operator(), 888, 889
- operator+=, 889
- operator,, 890
- operator-=, 889, 890
- operator/=: 890
- operator=, 889
- operator[], 888
- PETScVect, 875–877
- removeBC, 881, 882
- save, 886
- select, 878
- set, 878, 879, 887
- setAssembly, 891
- setDOFType, 880
- setMPI, 878
- setMesh, 879
- setNodeBC, 880, 881
- setSize, 880
- transferBC, 883
- OFELI::PETScWrapper
 - ~PETScWrapper, 896
 - checkError, 898
 - getBoolOption, 896
 - getIntOption, 896
 - PETScWrapper, 894
 - setIterationMethod, 898
 - setIterationParameters, 897
 - setLSTolerances, 898
 - setLinearSystem, 897
 - setMatrix, 897
 - setMesh, 896
 - setPartition, 896
 - setPreconditioner, 897
 - solve, 898
- OFELI::Partition
 - getFirstSideLabel, 855
 - getNbConnectInSubMesh, 855
 - getNbConnectOutSubMesh, 855
 - getNodeLabelInMesh, 854
 - getNodeLabelInSubMesh, 854
 - getSecondSideLabel, 855
 - getSubMesh, 854
 - Partition, 853
 - put, 855
- OFELI::Penta6
 - DSh, 857
 - getDet, 857
 - getLocalPoint, 858
 - Penta6, 857
 - setLocal, 857
 - Sh, 857
- OFELI::PhaseChange
 - E2T, 899
 - EnthalpyToTemperature, 899
- OFELI::Point
 - isCloseTo, 903
 - Normalize, 903
 - operator!=, 902
 - operator*=, 902
 - operator(), 901
 - operator+=, 902
 - operator,, 903
 - operator-=, 902
 - operator/=: 902
 - operator=, 902
 - operator==, 902
 - operator[], 902
 - Point, 901
- OFELI::Point2D
 - operator!=, 906
 - operator*=, 906
 - operator(), 905
 - operator+=, 905
 - operator-=, 905, 906
 - operator/=: 906
 - operator=, 905
 - operator==, 906
 - operator[], 905
 - Point2D, 905
- OFELI::Polygon
 - dLine, 908
 - getSignedDistance, 907, 908
 - operator+=, 907, 908
 - Polygon, 907
 - setVertices, 907
- OFELI::Prec
 - Prec, 909, 910
 - setMatrix, 911
 - setType, 911
 - solve, 911
 - TransSolve, 912
- OFELI::Prescription
 - get, 913
 - Prescription, 913
- OFELI::Quad4
 - DSh, 915
 - getDet, 916
 - getLocalPoint, 916
 - Grad, 915
 - Quad4, 914, 915

- setLocal, 915
 - Sh, 915
- OFELI::Reconstruction
 - DP1toP1, 918
 - P0toP1, 917
- OFELI::Rectangle
 - dLine, 920
 - getSignedDistance, 919, 920
 - operator+=, 919, 920
 - Rectangle, 919
 - setBoundingBox, 919
- OFELI::Side
 - Add, 924
 - Contains, 926
 - DOF, 923
 - EXTERNAL_BOUNDARY, 923
 - getCode, 925
 - getMeasure, 926
 - getNeighborElement, 925
 - getNormal, 925
 - getOtherNeighborElement, 925
 - getUnitNormal, 925
 - INTERNAL_BOUNDARY, 923
 - INTERNAL_SIDE, 923
 - isOnBoundary, 926
 - operator(), 925
 - set, 924
 - setChild, 926
 - setCode, 924
 - setDOF, 923
 - Side, 923
 - SideType, 923
- OFELI::SideList
 - selectCode, 927
 - unselectCode, 927
- OFELI::SkMatrix
 - add, 934
 - Assembly, 938
 - Axpy, 933
 - DiagPrescribe, 935
 - FactorAndSolve, 940
 - get, 937
 - getColHeight, 935
 - getDiag, 937
 - isFactorized, 941
 - Mult, 934
 - MultAdd, 933, 934
 - operator*=, 936
 - operator(), 935, 941
 - operator+=, 936, 941
 - operator-=, 941, 942
 - operator=, 936
 - operator[], 941
 - Prescribe, 938–940
 - PrescribeSide, 940
 - set, 933
 - setDOF, 932
 - setDiagonal, 937
 - setLU, 936
 - setMesh, 932
 - setSkyline, 932
 - SkMatrix, 931, 932
 - solve, 936, 937
 - TMult, 934
 - TMultAdd, 933
- OFELI::SkSMMatrix
 - Assembly, 946
 - FactorAndSolve, 948
 - get, 945
 - getDiag, 945
 - isFactorized, 949
 - operator(), 949
 - operator+=, 949
 - operator-=, 950
 - operator[], 949
 - Prescribe, 946–948
 - PrescribeSide, 948
 - setDiagonal, 945
- OFELI::SpMatrix
 - add, 962
 - Assembly, 965
 - Axpy, 962
 - DiagPrescribe, 958, 959
 - FactorAndSolve, 967
 - get, 964
 - getColInd, 963
 - getDiag, 965
 - isFactorized, 968
 - Laplace1D, 957
 - Laplace2D, 958
 - Mult, 961
 - MultAdd, 961
 - operator*, 960
 - operator*=, 960
 - operator(), 960, 968
 - operator+=, 968
 - operator-=, 968
 - operator=, 962
 - operator[], 960, 968
 - Prescribe, 966, 967
 - PrescribeSide, 967
 - set, 962
 - setDiagonal, 965
 - setGraph, 959
 - setMesh, 958
 - setSize, 959
 - setSolver, 964
 - solve, 963

- SpMatrix, 956, 957
- TMult, 961
- OFELI::Sphere
 - dLine, 952
 - getSignedDistance, 951
 - operator+=, 951
 - Sphere, 951
- OFELI::SteklovPoincare2DBE
 - setMesh, 970
 - Solve, 970
 - SteklovPoincare2DBE, 969, 970
- OFELI::TINS2DT3B
 - AxbAssembly, 994
 - DGELEMENTAssembly, 992, 993
 - DiagBC, 985
 - ePrev, 995
 - ElementAssembly, 988–990
 - ElementNodeCoordinates, 988
 - ElementNodeVector, 986
 - ElementNodeVectorSingleDOF, 987
 - ElementSideVector, 987
 - ElementVector, 987
 - getMesh, 994
 - LocalNodeVector, 986
 - setInput, 984
 - setMaterialProperty, 994
 - setSolver, 994
 - SideAssembly, 991, 992
 - SideNodeCoordinates, 988
 - SideVector, 988
 - SolveLinearSystem, 995
 - TINS2DT3B, 984
 - updateBC, 985
- OFELI::Tetra4
 - CurlEdgeSh, 973
 - DSh, 973
 - EdgeSh, 973
 - getDet, 973
 - getLocalPoint, 973
 - Sh, 973
- OFELI::TimeStepping
 - Assembly, 980
 - run, 979
 - runOneTimeStep, 979
 - SAssembly, 980
 - set, 977
 - setConstantMatrix, 978
 - setInitial, 977, 978
 - setInitialRHS, 978
 - setLinearSolver, 979
 - setNewmarkParameters, 978
 - setNonConstantMatrix, 979
 - setPDE, 977
 - setRK3.TVDRHS, 977
 - setRK4RHS, 977
 - setVerbose, 979
 - TimeStepping, 976
- OFELI::Timer
 - getTime, 974
 - Start, 974
 - Started, 974
 - Stop, 974
- OFELI::TrMatrix
 - Assembly, 1009, 1010
 - FactorAndSolve, 1012
 - getDiag, 1009
 - isFactorized, 1012
 - Laplace1D, 1009
 - operator(), 1012, 1013
 - operator+=, 1013
 - operator=, 1013
 - operator[], 1013
 - Prescribe, 1010, 1011
 - PrescribeSide, 1012
 - setDiagonal, 1009
- OFELI::Triang3
 - check, 997
 - getDet, 998
 - getLocalPoint, 998
 - Grad, 998
 - Sh, 997
 - Triang3, 997
- OFELI::Triang6S
 - DSh, 1000, 1001
 - getDet, 1001
 - getLocalPoint, 1001
 - Grad, 1000
 - Sh, 1000
 - Triang6S, 1000
- OFELI::Triangle
 - dLine, 1003, 1005
 - getSignedDistance, 1002, 1003, 1005
 - operator+=, 1003, 1005
 - Triangle, 1002, 1004
- OFELI::UserData
 - BodyForce, 1016
 - BoundaryCondition, 1016
 - InitialData, 1017
 - setBodyForce, 1015
 - setDBC, 1015
 - setInitialData, 1015
 - setSurfaceForce, 1015
 - SurfaceForce, 1016
 - UserData, 1014
- OFELI::Vect
 - add, 1038
 - Assembly, 1034, 1035
 - Axpy, 1037

- getAverage, 1036
- getCurl, 1036
- getDOFType, 1029
- getDivergence, 1036
- getGradient, 1035
- getNorm1, 1029
- getNorm2, 1029
- getNormMax, 1029
- getSCurl, 1036
- getWNorm2, 1030
- insertBC, 1033, 1034
- MultAdd, 1037
- operator VectorX, 1043
- operator*=: 1042
- operator(), 1039, 1040
- operator+=: 1041
- operator,, 1042
- operator-=, 1042
- operator/=: 1042
- operator=, 1040, 1041
- operator[], 1038
- push_back, 1042
- removeBC, 1032
- resize, 1028
- select, 1026
- set, 1026, 1027, 1037
- setDOFType, 1028
- setDG, 1029
- setMesh, 1027
- setNodeBC, 1030, 1031
- setSideBC, 1030–1032
- setSize, 1028
- setUniform, 1041
- size, 1028
- transferBC, 1033
- Vect, 1023–1026
- WithMesh, 1029
- OFELI::WaterPorous2D
 - AxbAssembly, 1057
 - BodyRHS, 1047
 - BoundaryRHS, 1047
 - build, 1047, 1048
 - DGElementAssembly, 1056, 1057
 - DiagBC, 1049
 - ePrev, 1059
 - ElementAssembly, 1052–1054
 - ElementNodeCoordinates, 1051
 - ElementNodeVector, 1049, 1050
 - ElementNodeVectorSingleDOF, 1050
 - ElementSideVector, 1050
 - ElementVector, 1050
 - getMesh, 1058
 - LocalNodeVector, 1049
 - run, 1048
 - setCoef, 1047
 - setMaterialProperty, 1057
 - setSolver, 1058
 - SideAssembly, 1054, 1055
 - SideNodeCoordinates, 1051
 - SideVector, 1051
 - SolveLinearSystem, 1058
 - updateBC, 1048
 - WaterPorous2D, 1046
- OFELI_EPSMCH
 - Utilities, 133
- OFELI_GAUSS2
 - Utilities, 132
- OFELI_IMAG
 - Utilities, 133
- OFELI_ONEOVERPI
 - Utilities, 132
- OFELI_PI
 - Utilities, 132
- OFELI_SIXTH
 - Utilities, 132
- OFELI_SQRT2
 - Utilities, 132
- OFELI_SQRT3
 - Utilities, 132
- OFELI_THIRD
 - Utilities, 132
- OFELI_TOLERANCE
 - Utilities, 133
- OFELI_TWELVETH
 - Utilities, 132
- OFELI_E
 - Utilities, 132
- OFELI, 49, 155
 - A, 73
 - AB2, 71
 - ADAMS_BASHFORTH, 71
 - AUX_INPUT_FIELD.1, 70
 - AUX_INPUT_FIELD.2, 70
 - AUX_INPUT_FIELD.3, 70
 - AUX_INPUT_FIELD.4, 70
 - add, 87, 101
 - AnalysisType, 71
 - ArrayType, 70
 - Axpy, 84, 91, 104
 - b, 73
 - BACKWARD_EULER, 71
 - BCType, 72
 - BDF2, 71
 - BICG_SOLVER, 72
 - BICG_STAB_SOLVER, 72
 - BMatrix, 83
 - BODY_FORCE, 70
 - BOUNDARY_CONDITION, 70

BOUNDARY_FORCE, 70
 BOUNDARY_TRACTION, 70
 BUOYANCY, 70
 CAPACITY, 69
 CG_SOLVER, 72
 CGS_SOLVER, 72
 CONSISTENT_CAPACITY, 69
 CONSISTENT_MASS, 69
 CONTACT_BC, 72
 CONTACT, 70
 CONVECTION, 70
 CRANK_NICOLSON, 71
 check, 106
 DEVIATORIC, 70
 DIAG_PREC, 72
 DIAGONAL, 72
 DIFFUSION, 69
 DILATATION, 70
 DILU_PREC, 72
 DIRECT_SOLVER, 72
 DISPLACEMENT_FIELD, 70
 DSMatrix, 86
 Deactivate, 82
 ELECTRIC, 70
 EqDataType, 70
 FE_2D_3N, 71
 FE_2D_4N, 71
 FE_2D_6N, 71
 FE_3D_4N, 71
 FE_3D_8N, 71
 FE_3D_AXI_3N, 71
 FEType, 71
 FLUX, 70
 FORWARD_EULER, 71
 Factor, 94
 FactorAndSolve, 95
 GLOBAL_ARRAY, 71
 GMRES_SOLVER, 72
 get, 75, 76
 getCode, 81, 82
 getColHeight, 101
 getColumn, 88, 89
 getDerivative, 77
 getInnerProduct, 95
 getLocal, 96
 getNy, 81
 getNz, 81
 getRow, 89, 90
 getValue, 76, 77
 Grid, 78, 79
 HEAT_FLUX, 70
 HEAT_SOURCE, 70
 HEUN, 71
 IDENT_PREC, 72

IDENTITY, 72
 ILU_PREC, 72
 INITIAL_AUX_1, 70
 INITIAL_AUX_2, 70
 INITIAL_AUX_3, 70
 INITIAL_AUX_4, 70
 INITIAL_FIELD, 70
 IOField, 73, 74
 Invert, 95
 isActive, 82, 83
 Iter, 106
 Iteration, 72
 LEAP_FROG, 71
 LOAD, 70
 LOCAL_ARRAY, 71
 LORENTZ_FORCE, 70
 LUMPED_CAPACITY, 69
 LUMPED_MASS, 69
 LocalMatrix, 92
 LocalVect, 96
 Localize, 92, 93, 97
 MAGNETIC, 70
 MASS, 69
 MOBILITY, 70
 MatrixType, 71
 Mult, 94, 101
 MultAdd, 90, 94, 100
 MultAddScal, 94
 NEWMARK, 71
 OPTIMIZATION, 71
 open, 74
 operator*, 93
 operator*=, 85, 94, 98, 102, 105
 operator(), 84, 87, 88, 101, 102, 105
 operator+=, 85, 88, 93, 97, 102
 operator,, 98
 operator=, 88, 93, 98
 operator/ =, 94, 98
 operator=, 85, 93, 97, 102, 105
 PDE_Terms, 69
 PERIODIC_A, 72
 PERIODIC_B, 72
 POINT_FORCE, 70
 Preconditioner, 72
 Prev, 73
 put, 75
 RK3_TVD, 71
 RK4, 71
 RUNGE_KUTTA, 71
 SKYLINE, 72
 SLIP, 72
 SOLUTION, 70
 SOURCE, 70
 SPARSE, 72

- SSOR_PREC, 72
- STATIONARY, 71
- STEADY_STATE, 71
- STIFFNESS, 69
- SYMMETRIC, 72
- saveGMSH, 76
- set, 87, 100
- setCode, 81
- setColumn, 89
- setDiag, 87
- setDomain, 79, 80
- setFile, 76
- setLDLt, 88, 102
- setLU, 85
- setMesh, 99
- setMeshFile, 74
- setRow, 90
- setSize, 84, 86, 104
- setSkyline, 100
- setXMax, 79
- setXMin, 79
- setN, 80
- SkSMatrix, 98, 99
- Solve, 95
- solve, 85, 86, 91, 102, 103, 105–107
- solveLDLt, 103
- Symmetrize, 94
- TEMPERATURE_FIELD, 70
- TMult, 90, 101
- TRACTION, 70
- TRANSIENT, 71
- TRIDIAGONAL, 72
- TimeScheme, 71
- TrMatrix, 104
- UNSYMMETRIC, 72
- VELOCITY_FIELD, 70
- VISCOSITY, 69
- OPTIMIZATION
 - OFELI, 71
- Objective
 - OFELI::MyOpt, 814
- open
 - OFELI, 74
- operator Mat
 - OFELI::PETScMatrix, 869
- operator Vec
 - OFELI::PETScVect, 890
- operator VectorX
 - OFELI::Vect, 1043
- operator!=
 - OFELI::Point, 902
 - OFELI::Point2D, 906
- operator<<
 - Vector and Matrix, 153, 154
- operator*
 - OFELI::SpMatrix, 960
 - OFELI, 93
 - Utilities, 136, 137
 - Vector and Matrix, 150–154
- operator*=
 - OFELI::DMatrix, 351
 - OFELI::DSMatrix, 368
 - OFELI::Domain, 358
 - OFELI::Matrix, 772
 - OFELI::Mesh, 784
 - OFELI::PETScVect, 890
 - OFELI::Point, 902
 - OFELI::Point2D, 906
 - OFELI::SkMatrix, 936
 - OFELI::SpMatrix, 960
 - OFELI::Vect, 1042
 - OFELI, 85, 94, 98, 102, 105
- operator()
 - OFELI::BMatrix, 223
 - OFELI::DMatrix, 348, 349, 355
 - OFELI::DSMatrix, 367, 368
 - OFELI::Edge, 386, 387
 - OFELI::Element, 472, 474
 - OFELI::LocalMatrix, 759
 - OFELI::LocalVect, 761
 - OFELI::Matrix, 771, 772
 - OFELI::PETScMatrix, 864
 - OFELI::PETScVect, 888, 889
 - OFELI::Point, 901
 - OFELI::Point2D, 905
 - OFELI::Side, 925
 - OFELI::SkMatrix, 935, 941
 - OFELI::SkSMatrix, 949
 - OFELI::SpMatrix, 960, 968
 - OFELI::TrMatrix, 1012, 1013
 - OFELI::Vect, 1039, 1040
 - OFELI, 84, 87, 88, 101, 102, 105
- operator+
 - Utilities, 135, 136
 - Vector and Matrix, 151
- operator+=
 - OFELI::BMatrix, 223
 - OFELI::Brick, 225
 - OFELI::Circle, 227, 228
 - OFELI::DMatrix, 351, 352, 356
 - OFELI::DSMatrix, 368
 - OFELI::Ellipse, 477
 - OFELI::Matrix, 772, 773
 - OFELI::PETScVect, 889
 - OFELI::Point, 902
 - OFELI::Point2D, 905
 - OFELI::Polygon, 907, 908
 - OFELI::Rectangle, 919, 920

- OFELI::SkMatrix, [936](#), [941](#)
- OFELI::SkSMatrix, [949](#)
- OFELI::SpMatrix, [968](#)
- OFELI::Sphere, [951](#)
- OFELI::TrMatrix, [1013](#)
- OFELI::Triangle, [1003](#), [1005](#)
- OFELI::Vect, [1041](#)
- OFELI, [85](#), [88](#), [93](#), [97](#), [102](#)
- operator,
 - OFELI::PETScVect, [890](#)
 - OFELI::Point, [903](#)
 - OFELI::Vect, [1042](#)
 - OFELI, [98](#)
- operator-
 - Finite Element Mesh, [25](#)
 - Utilities, [135–137](#)
 - Vector and Matrix, [151](#), [152](#)
- operator==
 - OFELI::BMatrix, [224](#)
 - OFELI::DMatrix, [351](#), [352](#), [356](#)
 - OFELI::DSMatrix, [368](#)
 - OFELI::Matrix, [772](#), [773](#)
 - OFELI::PETScVect, [889](#), [890](#)
 - OFELI::Point, [902](#)
 - OFELI::Point2D, [905](#), [906](#)
 - OFELI::SkMatrix, [941](#), [942](#)
 - OFELI::SkSMatrix, [950](#)
 - OFELI::SpMatrix, [968](#)
 - OFELI::TrMatrix, [1013](#)
 - OFELI::Vect, [1042](#)
 - OFELI, [88](#), [93](#), [98](#)
- operator/
 - Utilities, [136](#), [137](#)
 - Vector and Matrix, [151](#), [152](#)
- operator/=
 - OFELI::PETScVect, [890](#)
 - OFELI::Point, [902](#)
 - OFELI::Point2D, [906](#)
 - OFELI::Vect, [1042](#)
 - OFELI, [94](#), [98](#)
- operator=
 - OFELI::DMatrix, [351](#)
 - OFELI::Funct, [598](#)
 - OFELI::Matrix, [772](#)
 - OFELI::PETScMatrix, [865](#)
 - OFELI::PETScVect, [889](#)
 - OFELI::Point, [902](#)
 - OFELI::Point2D, [905](#)
 - OFELI::SkMatrix, [936](#)
 - OFELI::SpMatrix, [962](#)
 - OFELI::Vect, [1040](#), [1041](#)
 - OFELI, [85](#), [93](#), [97](#), [102](#), [105](#)
- operator==
 - Finite Element Mesh, [28](#)
- OFELI::Point, [902](#)
- OFELI::Point2D, [906](#)
- Utilities, [135](#), [136](#)
- operator&&
 - Finite Element Mesh, [25](#)
- operator[]
 - OFELI::BMatrix, [223](#)
 - OFELI::DMatrix, [356](#)
 - OFELI::DSMatrix, [368](#)
 - OFELI::LocalVect, [761](#)
 - OFELI::Matrix, [772](#)
 - OFELI::PETScVect, [888](#)
 - OFELI::Point, [902](#)
 - OFELI::Point2D, [905](#)
 - OFELI::SkMatrix, [941](#)
 - OFELI::SkSMatrix, [949](#)
 - OFELI::SpMatrix, [960](#), [968](#)
 - OFELI::TrMatrix, [1013](#)
 - OFELI::Vect, [1038](#)
- operator||
 - Finite Element Mesh, [25](#)
- OptMethod
 - OFELI::OptSolver, [846](#)
- OptSolver, [845](#)
 - OFELI::OptSolver, [846](#), [847](#)
- P0toP1
 - OFELI::Reconstruction, [917](#)
- PARSE
 - Utilities, [133](#)
- PDE.Terms
 - OFELI, [69](#)
- PERIODIC.A
 - OFELI, [72](#)
- PERIODIC.B
 - OFELI, [72](#)
- PETScMatrix
 - OFELI::PETScMatrix, [861](#)
- PETScMatrix< T_ >, [858](#)
- PETScVect
 - OFELI::PETScVect, [875–877](#)
- PETScVect< T_ >, [870](#)
- PETScWrapper
 - OFELI::PETScWrapper, [894](#)
- PETScWrapper< T_ >, [891](#)
- POINT.FORCE
 - OFELI, [70](#)
- Partition, [852](#)
 - OFELI::Partition, [853](#)
- Penta6, [856](#)
 - OFELI::Penta6, [857](#)
- Periodic
 - OFELI::DC2DT3, [262](#)
 - OFELI::DC3DT4, [326](#)

OFELI::Elas2DT3, [423](#)
 OFELI::NSP2DQ41, [826](#)
 PhaseChange, [899](#)
 Physical properties of media, [108](#)
 PlaneStrain
 OFELI::Elas2DQ4, [399](#)
 PlaneStress
 OFELI::Elas2DQ4, [399](#)
 Point
 OFELI::Point, [901](#)
 Point< T_ >, [900](#)
 Point2D< T_ >, [903](#)
 Point2D
 OFELI::Point2D, [905](#)
 Polygon, [906](#)
 OFELI::Polygon, [907](#)
 Porous Media problems, [109](#)
 Post
 OFELI::Laplace2DMHRT0, [698](#)
 OFELI::Laplace2DT3, [715](#)
 Prec
 OFELI::Prec, [909](#), [910](#)
 Prec< T_ >, [908](#)
 Preconditioner
 OFELI, [72](#)
 Prescribe
 OFELI::BMatrix, [221](#), [222](#)
 OFELI::DMatrix, [353](#), [354](#)
 OFELI::DSMatrix, [365](#), [366](#)
 OFELI::Matrix, [768](#), [769](#)
 OFELI::SkMatrix, [938–940](#)
 OFELI::SkSMatrix, [946–948](#)
 OFELI::SpMatrix, [966](#), [967](#)
 OFELI::TrMatrix, [1010](#), [1011](#)
 PrescribeSide
 OFELI::BMatrix, [222](#)
 OFELI::DMatrix, [354](#)
 OFELI::DSMatrix, [367](#)
 OFELI::Matrix, [769](#)
 OFELI::SkMatrix, [940](#)
 OFELI::SkSMatrix, [948](#)
 OFELI::SpMatrix, [967](#)
 OFELI::TrMatrix, [1012](#)
 Prescription, [912](#)
 OFELI::Prescription, [913](#)
 Prev
 OFELI, [73](#)
 push.back
 OFELI::Vect, [1042](#)
 put
 OFELI::Mesh, [793](#)
 OFELI::Partition, [855](#)
 OFELI, [75](#)

qksort
 Utilities, [144](#), [145](#)
 Quad4, [913](#)
 OFELI::Quad4, [914](#), [915](#)
 QuickSort
 Utilities, [144](#)
 RHS_Convection
 OFELI::DC3DT4, [325](#)
 RK3_TVD
 OFELI, [71](#)
 RK4
 OFELI, [71](#)
 ROE_SOLVER
 OFELI::ICPG1D, [621](#)
 OFELI::ICPG2DT, [629](#)
 OFELI::ICPG3DT, [636](#)
 OFELI::LCL1D, [731](#)
 OFELI::LCL2DT, [736](#)
 OFELI::LCL3DT, [742](#)
 OFELI::Muscl, [801](#)
 OFELI::Muscl1D, [805](#)
 OFELI::Muscl2DT, [808](#)
 OFELI::Muscl3DT, [812](#)
 RUNGE_KUTTA
 OFELI, [71](#)
 RUSANOV_SOLVER
 OFELI::ICPG1D, [621](#)
 OFELI::ICPG2DT, [629](#)
 OFELI::ICPG3DT, [636](#)
 OFELI::LCL1D, [731](#)
 OFELI::LCL2DT, [736](#)
 OFELI::LCL3DT, [742](#)
 OFELI::Muscl, [801](#)
 OFELI::Muscl1D, [805](#)
 OFELI::Muscl2DT, [808](#)
 OFELI::Muscl3DT, [812](#)
 Reaction
 OFELI::Elas2DT3, [422](#)
 Reconstruction, [916](#)
 Rectangle, [918](#)
 OFELI::Rectangle, [919](#)
 Refine
 OFELI::Mesh, [795](#)
 removeBC
 OFELI::PETScVect, [881](#), [882](#)
 OFELI::Vect, [1032](#)
 RenumberEdge
 OFELI::Mesh, [789](#)
 RenumberElement
 OFELI::Mesh, [789](#)
 RenumberNode
 OFELI::Mesh, [789](#)
 RenumberSide

OFELI::Mesh, 789
 Reorder
 OFELI::Mesh, 787
 Replace
 OFELI::Element, 471
 Rescale
 OFELI::Mesh, 791
 resize
 OFELI::Vect, 1028
 Richardson
 Solver, 122
 run
 OFELI::Bar2DL2, 183
 OFELI::BiotSavart, 216
 OFELI::DC1DL2, 239
 OFELI::DC2DT3, 264
 OFELI::DC2DT6, 284
 OFELI::DC3DAT3, 305
 OFELI::DC3DT4, 327
 OFELI::EigenProblemSolver, 392
 OFELI::Equa_Porous, 526
 OFELI::Equa_Therm, 559
 OFELI::Laplace1DL2, 653
 OFELI::Laplace1DL3, 668
 OFELI::Laplace2DT3, 715
 OFELI::LaplaceDG2DP1, 728
 OFELI::MeshAdapt, 799
 OFELI::ODESolver, 844
 OFELI::OptSolver, 851
 OFELI::TimeStepping, 979
 OFELI::WaterPorous2D, 1048
 runOneTimeStep
 OFELI::Bar2DL2, 183
 OFELI::DC1DL2, 239
 OFELI::DC2DT3, 264
 OFELI::DC2DT6, 284
 OFELI::DC3DAT3, 305
 OFELI::DC3DT4, 327
 OFELI::Equa_Therm, 559
 OFELI::LCL1D, 732
 OFELI::LCL2DT, 737
 OFELI::ODESolver, 844
 OFELI::TimeStepping, 979
 runSubSpace
 OFELI::EigenProblemSolver, 392
 runTransient
 OFELI::DC1DL2, 239
 OFELI::DC2DT3, 263
 OFELI::DC2DT6, 284
 OFELI::DC3DAT3, 304
 OFELI::DC3DT4, 327
 OFELI::Equa_Therm, 559
 SAssembly

OFELI::EigenProblemSolver, 392
 OFELI::TimeStepping, 980
 SIMULATED_ANNEALING
 OFELI::OptSolver, 846
 SKYLINE
 OFELI, 72
 SLIP
 OFELI, 72
 SOLUTION
 OFELI, 70
 SOURCE
 OFELI, 70
 SPARSE
 OFELI, 72
 SSOR_PREC
 OFELI, 72
 SSOR
 Solver, 124
 STATIONARY
 OFELI, 71
 STEADY_STATE
 OFELI, 71
 STIFFNESS
 OFELI, 69
 SUPERBEE_LIMITER
 OFELI::ICPG1D, 621
 OFELI::ICPG2DT, 628
 OFELI::ICPG3DT, 636
 OFELI::LCL1D, 731
 OFELI::LCL2DT, 736
 OFELI::LCL3DT, 742
 OFELI::Muscl, 801
 OFELI::Muscl1D, 805
 OFELI::Muscl2DT, 808
 OFELI::Muscl3DT, 812
 SYMMETRIC
 OFELI, 72
 save
 OFELI::Mesh, 793
 OFELI::PETScVect, 886
 saveBamg
 Utilities, 143
 saveField
 Utilities, 133, 134
 saveGMSH
 OFELI, 76
 saveGmsh
 Utilities, 135, 141
 saveGnuplot
 Utilities, 134, 142
 saveMatlab
 Utilities, 142
 saveMbb
 OFELI::MeshAdapt, 799

- saveMesh
 - Utilities, [141](#)
- saveTecplot
 - Utilities, [134](#), [142](#)
- saveVTK
 - Utilities, [135](#), [143](#)
- Scale
 - Utilities, [145](#)
- Schur
 - Solver, [122](#), [123](#)
- select
 - OFELI::PETScVect, [878](#)
 - OFELI::Vect, [1026](#)
- selectCode
 - OFELI::EdgeList, [388](#)
 - OFELI::NodeList, [820](#)
 - OFELI::SideList, [927](#)
- selectCoordinate
 - OFELI::NodeList, [820](#)
- selectLevel
 - OFELI::ElementList, [476](#)
- set
 - OFELI::DC2DT3, [263](#)
 - OFELI::DMatrix, [345](#)
 - OFELI::Element, [472](#)
 - OFELI::LaplaceDG2DP1, [727](#), [728](#)
 - OFELI::LinearSolver, [756](#)
 - OFELI::Material, [764](#)
 - OFELI::Matrix, [771](#)
 - OFELI::Mesh, [792](#)
 - OFELI::ODESolver, [839](#)
 - OFELI::PETScMatrix, [865](#)
 - OFELI::PETScVect, [878](#), [879](#), [887](#)
 - OFELI::Side, [924](#)
 - OFELI::SkMatrix, [933](#)
 - OFELI::SpMatrix, [962](#)
 - OFELI::TimeStepping, [977](#)
 - OFELI::Vect, [1026](#), [1027](#), [1037](#)
 - OFELI, [87](#), [100](#)
- setAIJ_MPI
 - OFELI::PETScMatrix, [862](#)
- setAIJ
 - OFELI::PETScMatrix, [862](#)
- setAssembly
 - OFELI::PETScMatrix, [870](#)
 - OFELI::PETScVect, [891](#)
- setBC
 - OFELI::ICPG1D, [623](#)
 - OFELI::ICPG2DT, [629](#), [630](#)
 - OFELI::LCL1D, [732](#)
 - OFELI::LCL2DT, [737](#)
 - OFELI::LCL3DT, [743](#)
 - OFELI::OptSolver, [848](#)
- setBodyForce
 - OFELI::UserData, [1015](#)
- setBoundary
 - OFELI::BiotSavart, [214](#)
- setBoundaryCondition
 - OFELI::Laplace1DL2, [653](#)
- setBoundaryNodeCodes
 - Finite Element Mesh, [34](#)
- setBoundarySideCodes
 - Finite Element Mesh, [34](#)
- setBoundingBox
 - OFELI::Brick, [225](#)
 - OFELI::Rectangle, [919](#)
- setCFL
 - OFELI::ICPG1D, [624](#)
 - OFELI::ICPG2DT, [632](#)
 - OFELI::LCL1D, [733](#)
 - OFELI::LCL2DT, [739](#)
 - OFELI::LCL3DT, [744](#)
 - OFELI::Muscl, [802](#)
 - OFELI::Muscl1D, [805](#)
 - OFELI::Muscl2DT, [809](#)
 - OFELI::Muscl3DT, [813](#)
- setChild
 - OFELI::Element, [474](#)
 - OFELI::Side, [926](#)
- setCode
 - OFELI::Edge, [386](#)
 - OFELI::Element, [470](#), [472](#)
 - OFELI::Node, [817](#)
 - OFELI::Side, [924](#)
 - OFELI, [81](#)
- setCoef
 - OFELI::ODESolver, [840](#)
 - OFELI::WaterPorous2D, [1047](#)
- setColumn
 - OFELI::DMatrix, [345](#)
 - OFELI, [89](#)
- setConstantMatrix
 - OFELI::ODESolver, [843](#)
 - OFELI::TimeStepping, [978](#)
- setCoord
 - OFELI::Node, [817](#)
- setCurrentDensity
 - OFELI::BiotSavart, [214](#)
- setDBC
 - OFELI::UserData, [1015](#)
- setDOFSupport
 - OFELI::Mesh, [784](#)
- setDOFType
 - OFELI::PETScVect, [880](#)
 - OFELI::Vect, [1028](#)
- setDOF
 - OFELI::Edge, [386](#)
 - OFELI::Element, [472](#)

- OFELI::Node, 818
- OFELI::Side, 923
- OFELI::SkMatrix, 932
- setDG
 - OFELI::Vect, 1029
- setDiag
 - OFELI::DMatrix, 343
 - OFELI, 87
- setDiagonal
 - OFELI::BMatrix, 220
 - OFELI::DMatrix, 352
 - OFELI::DSMatrix, 364
 - OFELI::Matrix, 767
 - OFELI::SkMatrix, 937
 - OFELI::SkSMatrix, 945
 - OFELI::SpMatrix, 965
 - OFELI::TrMatrix, 1009
- setDiffusivity
 - OFELI::Laplace2DMHRT0, 697
- setDim
 - OFELI::Mesh, 783
- setDomain
 - OFELI, 79, 80
- setEdgeView
 - OFELI::Mesh, 790
- setElementCodes
 - Finite Element Mesh, 34
- setElementView
 - OFELI::Mesh, 790
- setFile
 - OFELI, 76
- setGradient
 - OFELI::OptSolver, 848
- setGraph
 - OFELI::PETScMatrix, 863
 - OFELI::SpMatrix, 959
- setInOutflowBC
 - OFELI::ICPG1D, 624
- setInitial
 - OFELI::ODESolver, 841, 842
 - OFELI::TimeStepping, 977, 978
- setInitialCondition
 - OFELI::ICPG1D, 622
 - OFELI::LCL1D, 731
 - OFELI::LCL2DT, 737
 - OFELI::LCL3DT, 743
- setInitialData
 - OFELI::UserData, 1015
- setInitialRHS
 - OFELI::ODESolver, 841, 842
 - OFELI::TimeStepping, 978
- setInput
 - OFELI::DC1DL2, 238
 - OFELI::DC2DT3, 262
 - OFELI::TINS2DT3B, 984
- setIterationMethod
 - OFELI::PETScWrapper, 898
- setIterationParameters
 - OFELI::PETScWrapper, 897
- setLDLt
 - OFELI::DSMatrix, 364
 - OFELI, 88, 102
- setLSTolerances
 - OFELI::PETScWrapper, 898
- setLabel
 - OFELI::Element, 470
- setLevel
 - OFELI::Node, 819
- setLimiter
 - OFELI::ICPG1D, 625
 - OFELI::ICPG2DT, 632
 - OFELI::ICPG3DT, 637
 - OFELI::LCL1D, 734
 - OFELI::LCL2DT, 739
 - OFELI::LCL3DT, 745
 - OFELI::Muscl, 803
 - OFELI::Muscl1D, 806
 - OFELI::Muscl2DT, 810
 - OFELI::Muscl3DT, 813
- setLinearSolver
 - OFELI::ODESolver, 843
 - OFELI::TimeStepping, 979
- setLinearSystem
 - OFELI::PETScWrapper, 897
- setList
 - OFELI::Mesh, 790, 791
- setLocal
 - OFELI::Hexa8, 616
 - OFELI::Penta6, 857
 - OFELI::Quad4, 915
- setLowerBound
 - OFELI::OptSolver, 849
- setLowerBounds
 - OFELI::OptSolver, 850
- setLU
 - OFELI::DMatrix, 349
 - OFELI::SkMatrix, 936
 - OFELI, 85
- setMPI
 - OFELI::PETScVect, 878
- setMagneticInduction
 - OFELI::BiotSavart, 214
- setMaterial
 - OFELI::Mesh, 787
- setMaterialProperty
 - OFELI::Bar2DL2, 193
 - OFELI::Beam3DL2, 210
 - OFELI::DC1DL2, 248

- OFELI::DC2DT3, 273
- OFELI::DC2DT6, 293
- OFELI::DC3DAT3, 314
- OFELI::DC3DT4, 336
- OFELI::EC2D1T3, 383
- OFELI::Elas2DQ4, 411
- OFELI::Elas2DT3, 432
- OFELI::Elas3DH8, 448
- OFELI::Elas3DT4, 464
- OFELI::Equa_Electromagnetics, 491
- OFELI::Equa_Fluid, 505
- OFELI::Equa_Laplace, 519
- OFELI::Equa_Porous, 535
- OFELI::Equa_Solid, 551
- OFELI::Equa_Therm, 568
- OFELI::Equation, 583
- OFELI::HelmholtzBT3, 613
- OFELI::Laplace1DL2, 662
- OFELI::Laplace1DL3, 678
- OFELI::Laplace2DFVT, 692
- OFELI::Laplace2DMHRT0, 708
- OFELI::Laplace2DT3, 725
- OFELI::NSP2DQ41, 835
- OFELI::TINS2DT3B, 994
- OFELI::WaterPorous2D, 1057
- setMatrices
 - OFELI::ODESolver, 842
- setMatrix
 - OFELI::EigenProblemSolver, 391
 - OFELI::LinearSolver, 755, 756
 - OFELI::PETScWrapper, 897
 - OFELI::Prec, 911
- setMaxIter
 - OFELI::LinearSolver, 755
- setMaxNbVertices
 - OFELI::MeshAdapt, 798
- setMesh
 - OFELI::PETScMatrix, 862
 - OFELI::PETScVect, 879
 - OFELI::PETScWrapper, 896
 - OFELI::SkMatrix, 932
 - OFELI::SpMatrix, 958
 - OFELI::SteklovPoincare2DBE, 970
 - OFELI::Vect, 1027
 - OFELI, 99
- setMeshFile
 - OFELI, 74
- setMethod
 - OFELI::ICPG1D, 625
 - OFELI::ICPG2DT, 632
 - OFELI::ICPG3DT, 637
 - OFELI::LCL1D, 733
 - OFELI::LCL2DT, 739
 - OFELI::LCL3DT, 745
 - OFELI::Muscl, 802
 - OFELI::Muscl1D, 806
 - OFELI::Muscl2DT, 809
 - OFELI::Muscl3DT, 813
- setNbDOFPerNode
 - OFELI::Mesh, 785
- setNbEq
 - OFELI::ODESolver, 840
- setNewmarkParameters
 - OFELI::ODESolver, 843
 - OFELI::TimeStepping, 978
- setNoKeep
 - OFELI::MeshAdapt, 798
- setNoScaling
 - OFELI::MeshAdapt, 798
- setNodeBC
 - OFELI::PETScVect, 880, 881
 - OFELI::Vect, 1030, 1031
- setNodeCodes
 - Finite Element Mesh, 33
- setNodeView
 - OFELI::Mesh, 790
- setNonConstantMatrix
 - OFELI::ODESolver, 843
 - OFELI::TimeStepping, 979
- setObjective
 - OFELI::OptSolver, 848
- setOnBoundary
 - OFELI::Node, 818
- setOptClass
 - OFELI::OptSolver, 849
- setOptMethod
 - OFELI::OptSolver, 847
- setOutputFile
 - OFELI::Domain, 360
- setPDE
 - OFELI::EigenProblemSolver, 391
 - OFELI::TimeStepping, 977
- setPartition
 - OFELI::PETScMatrix, 862
 - OFELI::PETScWrapper, 896
- setPermeability
 - OFELI::BiotSavart, 214
- setPointInDomain
 - OFELI::Mesh, 785
- setPreconditioner
 - OFELI::PETScWrapper, 897
- setQR
 - OFELI::DMatrix, 347
- setRHS
 - OFELI::ODESolver, 843
- setRK3_TVDRHS
 - OFELI::TimeStepping, 977
- setRK4RHS

- OFELI::ODESolver, [840](#), [841](#)
- OFELI::TimeStepping, [977](#)
- setRank
 - OFELI::PETScMatrix, [862](#)
- setRatio
 - OFELI::MeshAdapt, [798](#)
- setReconstruction
 - OFELI::ICPG1D, [625](#)
 - OFELI::ICPG2DT, [629](#), [631](#)
 - OFELI::ICPG3DT, [637](#)
 - OFELI::LCL1D, [733](#)
 - OFELI::LCL2DT, [738](#)
 - OFELI::LCL3DT, [744](#)
 - OFELI::Muscl, [802](#)
 - OFELI::Muscl1D, [806](#)
 - OFELI::Muscl2DT, [808](#)
 - OFELI::Muscl3DT, [812](#)
- setReferenceLength
 - OFELI::ICPG1D, [625](#)
 - OFELI::ICPG2DT, [632](#)
 - OFELI::LCL2DT, [739](#)
 - OFELI::Muscl, [802](#)
 - OFELI::Muscl1D, [805](#)
 - OFELI::Muscl2DT, [809](#)
 - OFELI::Muscl3DT, [813](#)
- setRelaxation
 - OFELI::MeshAdapt, [798](#)
- setRow
 - OFELI::DMatrix, [345](#)
 - OFELI, [90](#)
- setSAOpt
 - OFELI::OptSolver, [850](#)
- setSide
 - OFELI::Element, [474](#)
- setSideBC
 - OFELI::Vect, [1030–1032](#)
- setSideCodes
 - Finite Element Mesh, [34](#)
- setSideView
 - OFELI::Mesh, [790](#)
- setSize
 - OFELI::DMatrix, [344](#)
 - OFELI::PETScMatrix, [863](#)
 - OFELI::PETScVect, [880](#)
 - OFELI::SpMatrix, [959](#)
 - OFELI::Vect, [1028](#)
 - OFELI, [84](#), [86](#), [104](#)
- setSkyline
 - OFELI::SkMatrix, [932](#)
 - OFELI, [100](#)
- setSolution
 - OFELI::Estimator, [586](#)
- setSolver
 - OFELI::AbsEqua, [176](#)
 - OFELI::Bar2DL2, [194](#)
 - OFELI::Beam3DL2, [210](#)
 - OFELI::DC1DL2, [249](#)
 - OFELI::DC2DT3, [273](#)
 - OFELI::DC2DT6, [294](#)
 - OFELI::DC3DAT3, [314](#)
 - OFELI::DC3DT4, [337](#)
 - OFELI::EC2D1T3, [383](#)
 - OFELI::Elas2DQ4, [411](#)
 - OFELI::Elas2DT3, [432](#)
 - OFELI::Elas3DH8, [448](#)
 - OFELI::Elas3DT4, [465](#)
 - OFELI::Equa_Electromagnetics, [491](#)
 - OFELI::Equa_Fluid, [505](#)
 - OFELI::Equa_Laplace, [520](#)
 - OFELI::Equa_Porous, [535](#)
 - OFELI::Equa_Solid, [551](#)
 - OFELI::Equa_Therm, [569](#)
 - OFELI::Equation, [584](#)
 - OFELI::HelmholtzBT3, [614](#)
 - OFELI::ICPG2DT, [629](#)
 - OFELI::Laplace1DL2, [663](#)
 - OFELI::Laplace1DL3, [678](#)
 - OFELI::Laplace2DFVT, [693](#)
 - OFELI::Laplace2DMHRT0, [708](#)
 - OFELI::Laplace2DT3, [725](#)
 - OFELI::LinearSolver, [756](#)
 - OFELI::NSP2DQ41, [836](#)
 - OFELI::PETScMatrix, [867](#)
 - OFELI::SpMatrix, [964](#)
 - OFELI::TINS2DT3B, [994](#)
 - OFELI::WaterPorous2D, [1058](#)
- setSource
 - OFELI::Laplace2DT3, [714](#)
- setStab
 - OFELI::DC1DL2, [238](#)
 - OFELI::DC2DT3, [263](#)
 - OFELI::DC2DT6, [282](#)
 - OFELI::DC3DAT3, [304](#)
 - OFELI::DC3DT4, [326](#)
 - OFELI::Equa_Therm, [557](#)
- setSubspaceDimension
 - OFELI::EigenProblemSolver, [393](#)
- setSurfaceForce
 - OFELI::UserData, [1015](#)
- setTheta
 - OFELI::MeshAdapt, [799](#)
- setTimeStep
 - OFELI::ICPG1D, [624](#)
 - OFELI::ICPG2DT, [632](#)
 - OFELI::LCL1D, [733](#)
 - OFELI::LCL2DT, [738](#)
 - OFELI::LCL3DT, [744](#)
 - OFELI::Muscl, [802](#)

- OFELI::Muscl1D, 805
- OFELI::Muscl2DT, 809
- OFELI::Muscl3DT, 813
- setTolerance
 - OFELI::EigenProblemSolver, 393
 - OFELI::OptSolver, 850
- setTraction
 - OFELI::Laplace1DL2, 653
 - OFELI::Laplace1DL3, 668
- setTransLU
 - OFELI::DMatrix, 349
- setTransQR
 - OFELI::DMatrix, 347
- setTriangle
 - OFELI::Gauss, 599
- setType
 - OFELI::Estimator, 586
 - OFELI::Prec, 911
- setUniform
 - OFELI::Vect, 1041
- setUpperBound
 - OFELI::OptSolver, 849
- setUpperBounds
 - OFELI::OptSolver, 849
- setVelocity
 - OFELI::LCL1D, 732
 - OFELI::LCL2DT, 738
 - OFELI::LCL3DT, 743
- setVerbose
 - OFELI::ICPG1D, 625
 - OFELI::ICPG2DT, 632
 - OFELI::ICPG3DT, 637
 - OFELI::LCL1D, 733
 - OFELI::LCL2DT, 739
 - OFELI::LCL3DT, 744
 - OFELI::LinearSolver, 755
 - OFELI::Mesh, 783
 - OFELI::Muscl, 802
 - OFELI::Muscl1D, 806
 - OFELI::Muscl2DT, 809
 - OFELI::Muscl3DT, 813
 - OFELI::ODESolver, 844
 - OFELI::TimeStepping, 979
- setVerbosity
 - OFELI::OptSolver, 849
- setVertices
 - OFELI::Polygon, 907
- setXMax
 - OFELI, 79
- setXMin
 - OFELI, 79
- setF
 - OFELI::ODESolver, 840
- setN
 - OFELI, 80
- Sh
 - OFELI::FEShape, 589
 - OFELI::Hexa8, 617
 - OFELI::Line2, 747
 - OFELI::Line2H, 749
 - OFELI::Line3, 751
 - OFELI::Penta6, 857
 - OFELI::Quad4, 915
 - OFELI::Tetra4, 973
 - OFELI::Triang3, 997
 - OFELI::Triang6S, 1000
- Shape Function, 110
- Side, 920
 - OFELI::Side, 923
- side_assembly
 - General Purpose Equations, 40, 41
- SideAssembly
 - OFELI::Bar2DL2, 190, 191
 - OFELI::Beam3DL2, 207, 208
 - OFELI::DC1DL2, 245, 246
 - OFELI::DC2DT3, 270, 271
 - OFELI::DC2DT6, 290, 291
 - OFELI::DC3DAT3, 311, 312
 - OFELI::DC3DT4, 333, 334
 - OFELI::EC2D1T3, 379–381
 - OFELI::Elas2DQ4, 407–409
 - OFELI::Elas2DT3, 429, 430
 - OFELI::Elas3DH8, 445, 446
 - OFELI::Elas3DT4, 461, 462
 - OFELI::Equa_Electromagnetics, 487–489
 - OFELI::Equa_Fluid, 502, 503
 - OFELI::Equa_Laplace, 516, 517
 - OFELI::Equa_Porous, 532, 533
 - OFELI::Equa_Solid, 547–549
 - OFELI::Equa_Therm, 565, 566
 - OFELI::Equation, 578, 579, 581–583
 - OFELI::HelmholtzBT3, 610, 611
 - OFELI::Laplace1DL2, 659, 660
 - OFELI::Laplace1DL3, 674–676
 - OFELI::Laplace2DFVT, 689, 690
 - OFELI::Laplace2DMHRT0, 704–706
 - OFELI::Laplace2DT3, 721–723
 - OFELI::NSP2DQ41, 832, 833
 - OFELI::TINS2DT3B, 991, 992
 - OFELI::WaterPorous2D, 1054, 1055
- SideInElement
 - Finite Element Mesh, 35
- SideList, 926
- SideNodeCoordinates
 - OFELI::Bar2DL2, 187
 - OFELI::Beam3DL2, 204
 - OFELI::DC1DL2, 242
 - OFELI::DC2DT3, 267

- OFELI::DC2DT6, 287
- OFELI::DC3DAT3, 308
- OFELI::DC3DT4, 330
- OFELI::EC2D1T3, 377
- OFELI::Elas2DQ4, 405
- OFELI::Elas2DT3, 426
- OFELI::Elas3DH8, 442
- OFELI::Elas3DT4, 458
- OFELI::Equa_Electromagnetics, 485
- OFELI::Equa_Fluid, 499
- OFELI::Equa_Laplace, 513
- OFELI::Equa_Porous, 529
- OFELI::Equa_Solid, 545
- OFELI::Equa_Therm, 563
- OFELI::Equation, 577
- OFELI::HelmholtzBT3, 607
- OFELI::Laplace1DL2, 656
- OFELI::Laplace1DL3, 672
- OFELI::Laplace2DFVT, 686
- OFELI::Laplace2DMHRT0, 702
- OFELI::Laplace2DT3, 719
- OFELI::NSP2DQ41, 829
- OFELI::TINS2DT3B, 988
- OFELI::WaterPorous2D, 1051
- SideType
 - OFELI::Side, 923
- SideVector
 - OFELI::Bar2DL2, 187
 - OFELI::Beam3DL2, 204
 - OFELI::DC1DL2, 242
 - OFELI::DC2DT3, 267
 - OFELI::DC2DT6, 287
 - OFELI::DC3DAT3, 308
 - OFELI::DC3DT4, 330
 - OFELI::EC2D1T3, 376
 - OFELI::Elas2DQ4, 404
 - OFELI::Elas2DT3, 426
 - OFELI::Elas3DH8, 442
 - OFELI::Elas3DT4, 458
 - OFELI::Equa_Electromagnetics, 484
 - OFELI::Equa_Fluid, 499
 - OFELI::Equa_Laplace, 513
 - OFELI::Equa_Porous, 529
 - OFELI::Equa_Solid, 544
 - OFELI::Equa_Therm, 562
 - OFELI::Equation, 577
 - OFELI::HelmholtzBT3, 607
 - OFELI::Laplace1DL2, 656
 - OFELI::Laplace1DL3, 671
 - OFELI::Laplace2DFVT, 686
 - OFELI::Laplace2DMHRT0, 701
 - OFELI::Laplace2DT3, 718
 - OFELI::NSP2DQ41, 829
 - OFELI::TINS2DT3B, 988
 - OFELI::WaterPorous2D, 1051
- SidesAreDOF
 - OFELI::Mesh, 792
- SignoriniContact
 - OFELI::Elas2DQ4, 400
 - OFELI::Elas2DT3, 421, 422
- size
 - OFELI::Vect, 1028
- SkMatrix
 - OFELI::SkMatrix, 931, 932
- SkMatrix< T_ >, 928
- SkSMMatrix
 - OFELI, 98, 99
- SkSMMatrix< T_ >, 942
- Smooth
 - OFELI::LaplaceDG2DP1, 728
- Solid Mechanics, 111
- Solve
 - OFELI::SteklovPoincare2DBE, 970
 - OFELI, 95
- solve
 - OFELI::DMatrix, 349, 350
 - OFELI::Laplace2DMHRT0, 698
 - OFELI::Laplace2DT3, 715
 - OFELI::LinearSolver, 756, 757
 - OFELI::Matrix, 770
 - OFELI::PETScMatrix, 866
 - OFELI::PETScWrapper, 898
 - OFELI::Prec, 911
 - OFELI::SkMatrix, 936, 937
 - OFELI::SpMatrix, 963
 - OFELI, 85, 86, 91, 102, 103, 105–107
- solveLDLt
 - OFELI, 103
- SolveLinearSystem
 - OFELI::AbsEqua, 176
 - OFELI::Bar2DL2, 194
 - OFELI::Beam3DL2, 211
 - OFELI::DC1DL2, 249
 - OFELI::DC2DT3, 274
 - OFELI::DC2DT6, 294
 - OFELI::DC3DAT3, 315
 - OFELI::DC3DT4, 337
 - OFELI::EC2D1T3, 384
 - OFELI::Elas2DQ4, 412
 - OFELI::Elas2DT3, 433
 - OFELI::Elas3DH8, 449
 - OFELI::Elas3DT4, 465
 - OFELI::Equa_Electromagnetics, 492
 - OFELI::Equa_Fluid, 506
 - OFELI::Equa_Laplace, 520
 - OFELI::Equa_Porous, 536
 - OFELI::Equa_Solid, 552
 - OFELI::Equa_Therm, 570

- OFELI::Equation, 584
- OFELI::HelmholtzBT3, 614
- OFELI::Laplace1DL2, 663
- OFELI::Laplace1DL3, 679
- OFELI::Laplace2DFVT, 693
- OFELI::Laplace2DMHRT0, 709
- OFELI::Laplace2DT3, 726
- OFELI::NSP2DQ41, 836
- OFELI::TINS2DT3B, 995
- OFELI::WaterPorous2D, 1058
- solveQR
 - OFELI::DMatrix, 348
- solveTrans
 - OFELI::DMatrix, 350, 351
- solveTransQR
 - OFELI::DMatrix, 348
- Solver, 112
 - BiCGStab, 115, 116
 - BiCG, 115
 - CGS, 118
 - CG, 117
 - GMRes, 119, 120
 - GS, 120
 - IterationLoop, 114
 - Jacobi, 121
 - MAX_NB_EQUATIONS, 114
 - MAX_NB_INPUT_FIELDS, 114
 - MAX_NB_MESHES, 114
 - Richardson, 122
 - SSOR, 124
 - Schur, 122, 123
 - TimeLoop, 114
- SolverType
 - OFELI::ICPG1D, 621
 - OFELI::ICPG2DT, 628
 - OFELI::ICPG3DT, 636
 - OFELI::LCL1D, 731
 - OFELI::LCL2DT, 736
 - OFELI::LCL3DT, 742
 - OFELI::Muscl, 801
 - OFELI::Muscl1D, 805
 - OFELI::Muscl2DT, 808
 - OFELI::Muscl3DT, 812
- SpMatrix
 - OFELI::SpMatrix, 956, 957
- SpMatrix< T_ >, 952
- Sphere, 950
 - OFELI::Sphere, 951
- Start
 - OFELI::Timer, 974
- Started
 - OFELI::Timer, 974
- SteklovPoincare2DBE, 969
 - OFELI::SteklovPoincare2DBE, 969, 970
- Stiffness
 - OFELI::Bar2DL2, 183
- Stop
 - OFELI::Timer, 974
- Strain
 - OFELI::Elas2DQ4, 400
 - OFELI::Elas2DT3, 422
- Stress
 - OFELI::Elas2DQ4, 401
 - OFELI::Elas2DT3, 423
- SurfaceForce
 - OFELI::UserData, 1016
- Symmetrize
 - OFELI, 94
- TEMPERATURE_FIELD
 - OFELI, 70
- TINS2DT3B, 980
 - OFELI::TINS2DT3B, 984
- TMult
 - OFELI::DMatrix, 346
 - OFELI::SkMatrix, 934
 - OFELI::SpMatrix, 961
 - OFELI, 90, 101
- TMultAdd
 - OFELI::SkMatrix, 933
- TRACTION
 - OFELI, 70
- TRANSIENT
 - OFELI, 71
- TRIDIAGONAL
 - OFELI, 72
- TRUNCATED_NEWTON
 - OFELI::OptSolver, 846
- Tabulation, 971
- Tetra4, 971
- TheEdge
 - Finite Element Mesh, 23
- theEdge
 - Global Variables, 43
- TheElement
 - Finite Element Mesh, 23
- theElement
 - Global Variables, 42
- theFinalTime
 - Global Variables, 44
- theIteration
 - Global Variables, 43
- TheNode
 - Finite Element Mesh, 23
- theNode
 - Global Variables, 42
- theNodeLabel
 - Finite Element Mesh, 25

- TheSide
 - Finite Element Mesh, [23](#)
- theSide
 - Global Variables, [43](#)
- theStep
 - Global Variables, [43](#)
- theTime
 - Global Variables, [44](#)
- theTimeStep
 - Global Variables, [43](#)
- theTolerance
 - Global Variables, [44](#)
- TimeLoop
 - Solver, [114](#)
- TimeScheme
 - OFELI, [71](#)
- TimeStepping, [975](#)
 - OFELI::TimeStepping, [976](#)
- Timer, [974](#)
- TrMatrix
 - OFELI, [104](#)
- TrMatrix< T_ >, [1006](#)
- TransSolve
 - OFELI::Prec, [912](#)
- transferBC
 - OFELI::PETScVect, [883](#)
 - OFELI::Vect, [1033](#)
- Triang3, [996](#)
 - OFELI::Triang3, [997](#)
- Triang6S, [998](#)
 - OFELI::Triang6S, [1000](#)
- Triangle, [1001](#), [1003](#)
 - OFELI::Triangle, [1002](#), [1004](#)
- UNSYMMETRIC
 - OFELI, [72](#)
- unselectCode
 - OFELI::EdgeList, [388](#)
 - OFELI::ElementList, [476](#)
 - OFELI::NodeList, [820](#)
 - OFELI::SideList, [927](#)
- updateBC
 - OFELI::Bar2DL2, [184](#)
 - OFELI::Beam3DL2, [201](#)
 - OFELI::DC1DL2, [239](#)
 - OFELI::DC2DT3, [264](#)
 - OFELI::DC2DT6, [284](#)
 - OFELI::DC3DAT3, [305](#)
 - OFELI::DC3DT4, [327](#)
 - OFELI::EC2D1T3, [374](#)
 - OFELI::Elas2DQ4, [401](#), [402](#)
 - OFELI::Elas2DT3, [423](#)
 - OFELI::Elas3DH8, [439](#)
 - OFELI::Elas3DT4, [455](#)
 - OFELI::Equa_Electromagnetics, [482](#)
 - OFELI::Equa_Fluid, [496](#)
 - OFELI::Equa_Laplace, [510](#)
 - OFELI::Equa_Porous, [526](#)
 - OFELI::Equa_Solid, [542](#)
 - OFELI::Equa_Therm, [559](#), [560](#)
 - OFELI::Equation, [574](#)
 - OFELI::HelmholtzBT3, [604](#), [605](#)
 - OFELI::Laplace1DL2, [653](#)
 - OFELI::Laplace1DL3, [668](#), [669](#)
 - OFELI::Laplace2DFVT, [683](#)
 - OFELI::Laplace2DMHRT0, [698](#), [699](#)
 - OFELI::Laplace2DT3, [716](#)
 - OFELI::NSP2DQ41, [826](#)
 - OFELI::TINS2DT3B, [985](#)
 - OFELI::WaterPorous2D, [1048](#)
- UserData
 - OFELI::UserData, [1014](#)
- UserData< T_ >, [1013](#)
- Utilities, [125](#)
 - Axpy, [145](#)
 - BSpline, [143](#)
 - banner, [144](#)
 - Clear, [146](#)
 - Dot, [145](#), [146](#)
 - EVAL, [133](#)
 - Equal, [146](#)
 - getBamg, [138](#)
 - getEasymesh, [139](#)
 - getGambit, [139](#)
 - getGmsh, [139](#)
 - getMatlab, [140](#)
 - getMesh, [137](#)
 - getNetgen, [140](#)
 - getTetgen, [140](#)
 - getTriangle, [141](#)
 - Nrm2, [146](#)
 - OFELI.EPSMCH, [133](#)
 - OFELI.GAUSS2, [132](#)
 - OFELI.IMAG, [133](#)
 - OFELI.ONEOVERPI, [132](#)
 - OFELI.PI, [132](#)
 - OFELI.SIXTH, [132](#)
 - OFELI.SQRT2, [132](#)
 - OFELI.SQRT3, [132](#)
 - OFELI.THIRD, [132](#)
 - OFELI.TOLERANCE, [133](#)
 - OFELI.TWELVETH, [132](#)
 - OFELI.E, [132](#)
 - operator*, [136](#), [137](#)
 - operator+, [135](#), [136](#)
 - operator-, [135](#)–[137](#)
 - operator/, [136](#), [137](#)
 - operator==, [135](#), [136](#)

- PARSE, [133](#)
 - qksort, [144](#), [145](#)
 - QuickSort, [144](#)
 - saveBang, [143](#)
 - saveField, [133](#), [134](#)
 - saveGmsh, [135](#), [141](#)
 - saveGnuplot, [134](#), [142](#)
 - saveMatlab, [142](#)
 - saveMesh, [141](#)
 - saveTecplot, [134](#), [142](#)
 - saveVTK, [135](#), [143](#)
 - Scale, [145](#)
 - Xpy, [145](#)
- VANALBADA_LIMITER
 - OFELI::ICPG1D, [621](#)
 - OFELI::ICPG2DT, [628](#)
 - OFELI::ICPG3DT, [636](#)
 - OFELI::LCL1D, [731](#)
 - OFELI::LCL2DT, [736](#)
 - OFELI::LCL3DT, [742](#)
 - OFELI::Muscl, [801](#)
 - OFELI::Muscl1D, [805](#)
 - OFELI::Muscl2DT, [808](#)
 - OFELI::Muscl3DT, [812](#)
- VANLEER_LIMITER
 - OFELI::ICPG1D, [621](#)
 - OFELI::ICPG2DT, [628](#)
 - OFELI::ICPG3DT, [636](#)
 - OFELI::LCL1D, [731](#)
 - OFELI::LCL2DT, [736](#)
 - OFELI::LCL3DT, [742](#)
 - OFELI::Muscl, [801](#)
 - OFELI::Muscl1D, [805](#)
 - OFELI::Muscl2DT, [808](#)
 - OFELI::Muscl3DT, [812](#)
- VELOCITY_FIELD
 - OFELI, [70](#)
- VFROE_SOLVER
 - OFELI::ICPG1D, [621](#)
 - OFELI::ICPG2DT, [629](#)
 - OFELI::ICPG3DT, [636](#)
 - OFELI::LCL1D, [731](#)
 - OFELI::LCL2DT, [736](#)
 - OFELI::LCL3DT, [742](#)
 - OFELI::Muscl, [801](#)
 - OFELI::Muscl1D, [805](#)
 - OFELI::Muscl2DT, [808](#)
 - OFELI::Muscl3DT, [812](#)
- VISCOSITY
 - OFELI, [69](#)
- Vect
 - OFELI::Vect, [1023–1026](#)
- Vect< T-, >, [1017](#)
- Vector and Matrix, [147](#)
 - Dot, [152](#)
 - operator<<, [153](#), [154](#)
 - operator*, [150–154](#)
 - operator+, [151](#)
 - operator-, [151](#), [152](#)
 - operator/, [151](#), [152](#)
 - VectorX, [150](#)
- VectorX
 - Vector and Matrix, [150](#)
- Verbosity
 - Global Variables, [43](#)
- WaterPorous2D, [1043](#)
 - OFELI::WaterPorous2D, [1046](#)
- WithMesh
 - OFELI::Vect, [1029](#)
- Xpy
 - Utilities, [145](#)