
IS2083 isUpdate Tool User's Guide

Introduction

isUpdate tool is a windows based (Windows 7/8/10) tool used to update the device firmware, memory access function; and system configuration of Microchip Bluetooth® embedded systems. It supports IS2083 through USB HID or RS232 interfaces. The operations include Flash update, Flash dump and creation of image files. This document mainly focuses on IS2083 operations and does not describe other operations such as EEPROM.

Memory access functions supported are as follows:

- Update function – used to write data into the whole target memory for saving configurations by `write memory` command.
- Rehex function – used to integrate all existing files and export to single *.`HEX` file, which the data is aligned by 16 bytes and the address offset is arranged in ascending order.
- Dump function – used to read data from target devices by `read memory` command. Result data is stored as *.`txt` files.
- Verify function – supported in Flash memory type and is used to compare the difference between readout data from device and data from an existing image file. This is used to confirm that update procedure is done successfully.

Note: To perform the above operation on BM83 EVB, user must refer to [BM83 Bluetooth Audio Development Board User Guide](#) for EVB configurations.

Features

- Access Port
- Memory Type
- Code Information/Version
- Flash Update/Dump

Table of Contents

Introduction.....	1
1. Quick References.....	3
1.1. Reference Documentation.....	3
1.2. Software Prerequisites.....	3
Features.....	1
2. isUpdate Tool Window.....	4
3. Device Firmware Update.....	5
3.1. Flash Firmware Update by UART (Test Mode).....	6
3.2. Flash Firmware Update by USB (Application Mode).....	6
4. Combining the Images.....	7
5. Image Dump.....	9
6. Flash and Dumped Files.....	11
7. Revision History.....	13
The Microchip Website.....	14
Product Change Notification Service.....	14
Customer Support.....	14
Microchip Devices Code Protection Feature.....	14
Legal Notice.....	14
Trademarks.....	15
Quality Management System.....	15
Worldwide Sales and Service.....	16

1. Quick References

1.1 Reference Documentation

For further study, refer the following documents:

- *IS2083 Bluetooth® Stereo Audio SoC Data Sheet*
- *BM83 Bluetooth® Audio Development Board User's Guide*
- *IS2083 SDK User's Guide (DS50002894)*

Note: These documents are available in <https://www.microchip.com/IS2083> or <https://www.microchip.com/BM83>.

1.2 Software Prerequisites

- isUpdate Tool (Part of IS2083 Software Package)

Note: This package is available in <https://www.microchip.com/IS2083> or <https://www.microchip.com/BM83>.

2. isUpdate Tool Window

The following interface appears after the isUpdate tool is launched.

Figure 2-1. isUpdate Tool Window

The screenshot shows the isUpdate Tool Window interface. It is divided into several sections:

- Access Port:** Contains dropdowns for 'port' (set to COM4) and 'baudrate' (set to 115200), an 'image num' dropdown (set to 1), and a 'Disconnect' button. A red box and the number '1' highlight this section.
- Memory Type:** Contains dropdowns for 'memory' (set to flash) and 'subtype' (set to Serial Fla:). A red box and the number '2' highlight this section.
- Code Information/Version:** Contains 'Device' (BT5511_002) and 'Image' (highlighted with a red box and the number '3') fields.
- Flash Update/Dump:** Contains an 'Images' dropdown (set to Prepare: Load all images, highlighted with a red box and the number '4'), a 'Browse' button (red), and an 'Update' button.
- Flash/EEPROM/MCU/AHB Access:** Contains 'Address', 'Length(Hex)', and 'Data(Hex)' fields, 'Read' and 'Write' buttons, and a 'Browse' button (blue).
- Flash/EEPROM/MCU/AHB Access (continued):** Contains an 'Images' dropdown, a 'Dump Size' dropdown (set to 4K), and a 'Dump Table' button.
- Port connect -> COM4:** A large text area at the bottom showing the connection status.

1. Access Port – both COM port and *USB HID* interfaces can be chosen, baudrate is supported up to 921600.
2. Memory Type – IS2083 have an internal SQI (Serial Quad I/O) Flash. User need to choose *flash* as memory field and *Serial Flash* as subtype.
3. Code Information/Version – target device firmware code information is displayed in "Device" field once the tool is successfully connected to IS2083. "Image" field is not used in IS2083.
4. Flash Update/Dump – once the tool is connected, user can update or dump the Flash memory (firmware) by clicking on respective **Browse** button.
 - The **Browse** button (red) is used for programming the target device with select *.hex* files.
 - The **Browse** button (blue) used for selecting a folder in a PC to save firmware *.hex* files of the target device.
 - During Flash Update and Dump, the progress bar would show the progress of related operation. The **Rehex** button is to import firmware images and generate *.hex* file, that the data of each line is aligned to 32 bytes and a *.bin* file. *Rehex.ini* option is used to regenerate a *.hex* file for IS2083 and BM83.

3. Device Firmware Update

This section describes the firmware update of the BM83 module over UART and USB. The IS2083 contains 8051 image file, DSP image file and configuration settings file. These three files (8051 image, DSP image, and .hex configuration file) are loaded into the IS2083.

The user can choose to upload a single file or all the image files using the isUpdate tool. In order to upload one file, the image num settings in isUpdate tool must be set to 1 (refer following figure), whereas to upload 3 files, image num settings must be set to 3. The following examples describes the various image and configuration files available.

Example 1– Loading a single file.

One of the following files can be loaded into the target device:

- 8051 image – user can modify the feature set related to 8051 image
- DSP image – user can modify the feature set to DSP image
- Configuration file – user can modify the feature set related to configuration file
- Rehex file – user can combine all the files together and send it to testing

Figure 3-1. Loading a Single File

Example 2 – Loading multiple files

Combination of any of the following files or combination of all:

- 8051 image – user can modify the feature set related to 8051 image
- DSP image – user can modify the feature set to DSP image
- Configuration file – user can modify the feature set related to configuration file

Figure 3-2. Loading Multiple Files

Note: Depending upon the number of files to be uploaded into the target device, image num varies as shown in the preceding examples.


3.1 Flash Firmware Update by UART (Test Mode)

The IS2083 firmware can be updated in Test mode using an UART. For more details on Test mode programming, refer to *IS2083 Bluetooth Stereo Audio SoC Data Sheet (DS70005403)*. User can follow the procedures described in *BM83 Bluetooth® Audio Development Board User's Guide (DS50002902)* to perform the device firmware update with BM83 EVB.

3.2 Flash Firmware Update by USB (Application Mode)

The IS2083 firmware can be updated in Application mode using USB and user must choose *USD HID* in the port field and choose USB port in BM83 EVB. Once an USB is connected, 8051 application code receives an event to trigger the USB firmware update. User can follow the procedures described in *BM83 Bluetooth® Audio Development Board User's Guide (DS50002902)* to perform the device firmware update with BM83 EVB.

Figure 3-3. USB HID Status

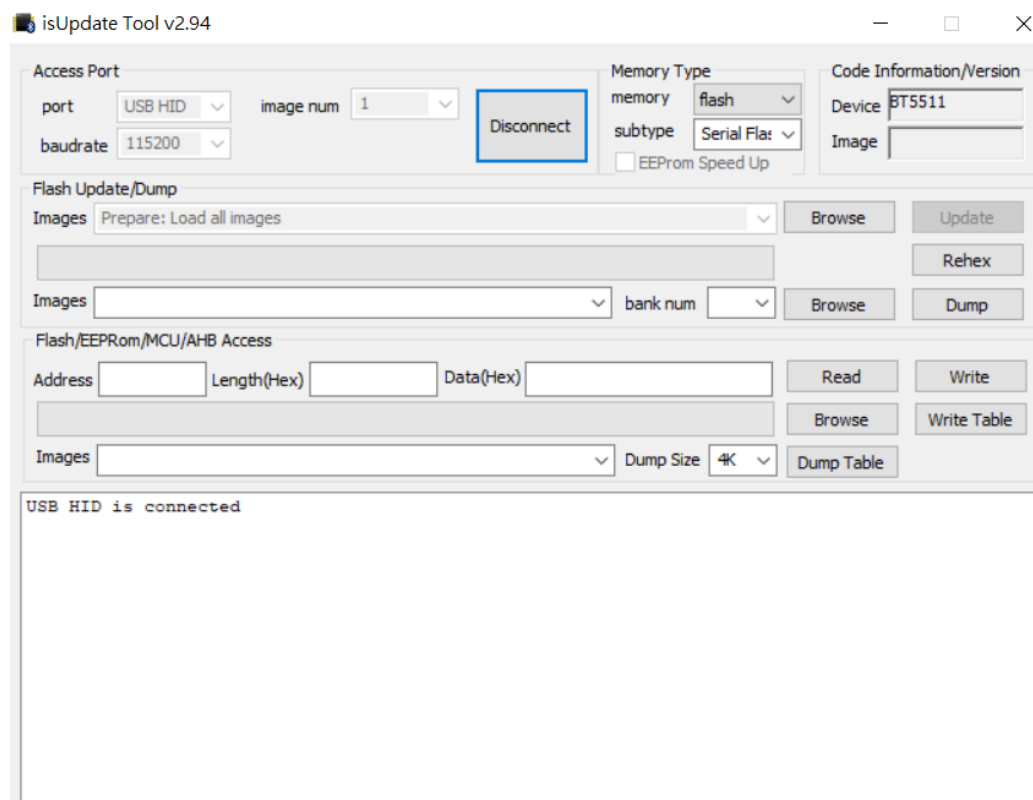

4. Combining the Images

The user can opt to load multiple files or opt to combine multiple files into a single file using isUpdate tool. This file is called as .Rehex file. This section describes how to combine multiple files into a single file.

Perform the following steps to combine three (8051 image, DSP image, and configuration file) files:

1. Launch the isUpdate tool
2. Set image num to 3 as three files are going to be combined
3. Click on **Browse** button without connecting to BM83

Figure 4-1. Image Selection


1. Select the 8051, DSP and configuration hex files.

Figure 4-2. hex Files

<input type="checkbox"/> IS208x_UI_1.2.16_Demo_Package_MCU_Mode_SPP.hex	HEX	1 KB
<input type="checkbox"/> MSPKv2_1.02.000_SPP.hex	HEX	1,423 KB
<input type="checkbox"/> MSPK2.0_DSP_FW_V1.03.0005.HEX	HEX	403 KB


2. Once selected the number of files, click on **Rehex** button and select the appropriate option from the following:
 - For USB firmware update, choose *BM83 General Use*
 - For OTA DFU update (through Bluetooth Low Energy), choose *BM83 OTA DFU Use*
 - Enter the file name in Output File Name or else the name of rehex file must be same as of the source image file with checksum

Figure 4-3. Rehex Window

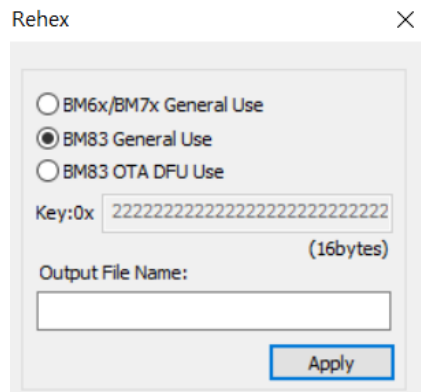

- Click on **Apply** button to generate a rehex file.

Figure 4-4. Image Conversion Process

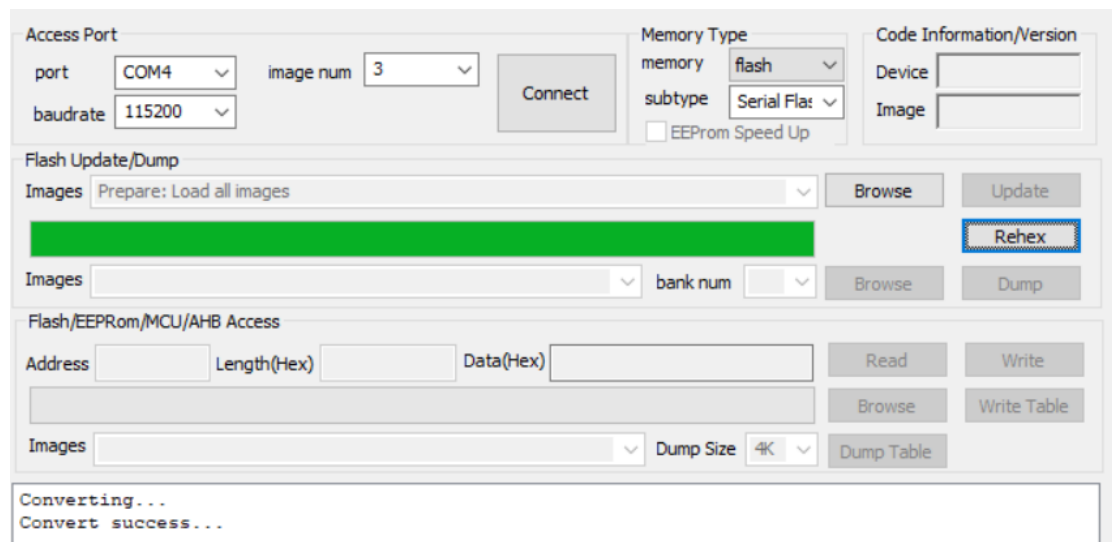

- The newly generated rehex file is stored in the same directory with .hex file extension.

Figure 4-5. Generated Rehex Files

<input type="checkbox"/> IS208x_UL_1.2.16_Demo_Package_MCU_Mode_SPP_Rehex.BIN	FTE Binary Export File	2,048 KB
<input type="checkbox"/> IS208x_UL_1.2.16_Demo_Package_MCU_Mode_SPP_Rehex_10CC.HEX	HEX	5,740 KB
<input type="checkbox"/> IS208x_UL_1.2.16_Demo_Package_MCU_Mode_SPP.hex	HEX	1 KB
<input type="checkbox"/> MSPKv2_1.02.000_SPP.hex	HEX	1,423 KB
<input type="checkbox"/> MSPK2.0_DSP_FW_V1.03.0005.HEX	HEX	403 KB

5. Image Dump

isUpdate tool can also dump the images from IS2083 through UART. To start image dump, user needs to put IS2083 in Test mode and dump the images. Refer to [3.1 Flash Firmware Update by UART \(Test Mode\)](#) to enter IS2083 Test mode.

1. Once the connection is established with the IS2083 device, perform the following steps to dump the file:
 - 1.1. Set the bank num to 1
 - 1.2. Click on the browse button to choose the location
 - 1.3. Choose the location and enter the file name to save the file
2. Click on **Dump** button, the Dump window appears and select the information type that needs to be dumped

Figure 5-1. Dump Window

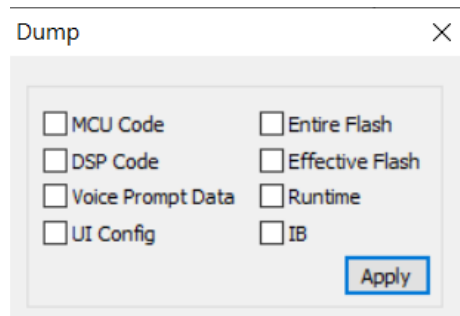


Table 5-1. IS2083 Image Dump Options

Dump Options	Description
MCU code	Dumps the changes that are applicable to 8051 images ¹
DSP code	Dumps the changes that are applicable to DSP images ¹
Voice Prompt Data	Dumps the changes that are applicable to Voice Prompt Data ¹
UI Config	Dumps the changes that are applicable to Configuration file ¹
Entire Flash	Dumps the changes that are applicable to both Banks content ¹
Effective Flash	Dumps the changes that are applicable to specific Bank content ¹
Runtime	Dumps the changes that are applicable to Runtime content ¹
IB	Dumps the changes that are applicable to information blocks and calibration ¹

3. For SQI Flash layout and content addressing, refer to *IS2083 SDK User's Guide (DS50002894)*. For more details on Flash and Dumped files, refer to [6. Flash and Dumped Files](#)
4. Choose *Entire Flash* and click on **Apply** button to start the dumping process until it reaches to whole memory address.

Figure 5-2. Image Dump Process

The screenshot displays the IS2083 Image Dump tool interface. The 'Access Port' section shows 'port' set to COM4, 'baudrate' to 115200, and 'image num' to 1. The 'Memory Type' section shows 'memory' set to 'flash' and 'subtype' to 'Serial Fla'. The 'Code Information/Version' section shows 'Device' as BT5511_002. The 'Flash Update/Dump' section shows 'Images' set to 'Prepare: Load all images'. The 'Flash/EEPROM/MCU/AHB Access' section shows 'Address', 'Length(Hex)', and 'Data(Hex)' fields. The 'Images' section shows 'Bank 0: C:\BT\5511\Release\v1.2\BTAS-1356\new\tmp\firmware\'. The 'Dump Size' is set to 4K. The output window shows the following text:

```
Start dump entire Memory Address 0x160000...
Start dump entire Memory Address 0x170000...
Start dump entire Memory Address 0x180000...
Start dump entire Memory Address 0x190000...
Start dump entire Memory Address 0x1A0000...
Start dump entire Memory Address 0x1B0000...
Start dump entire Memory Address 0x1C0000...
Start dump entire Memory Address 0x1D0000...
Start dump entire Memory Address 0x1E0000...
Start dump entire Memory Address 0x1F0000...
Finish dump flash
End of dump Memory! Elapse time : 272.754 second
```

- Once the process is finished, the tool displays Finish dump flash and End of dump Memory!. User can find the dumped file in the location selected in Step 1.

6. Flash and Dumped Files

BM83 Flash contains swapped banks for Flash header, runtime configuration, 8051 MCU image, DSP image, and voice prompt. Flash header contains information to select the blocks (B0 or B1) to be used during system boot-up. For more details on the Flash layout, refer to *IS2083 SDK User's Guide (DS50002894)*.

Refer [Figure 5-1](#) figure for details of the following scenarios:

- If *Effective Flash* scenario is selected, the tool dumps either B0 or B1 with other components, see [Figure 6-1](#) figure for details.
- If *Entire Flash* scenario is selected, the tool dumps both B0 and B1 with other components, see [Figure 6-2](#) figure for details.

In other conditions, if a module is loaded with rehex file, isUpdate tool clears the bank-1 and writes the data in bank-0. In this scenario, if entire Flash is dumped, the tool dumps only B0.

Figure 6-1. BM83 Effective Flash Layout


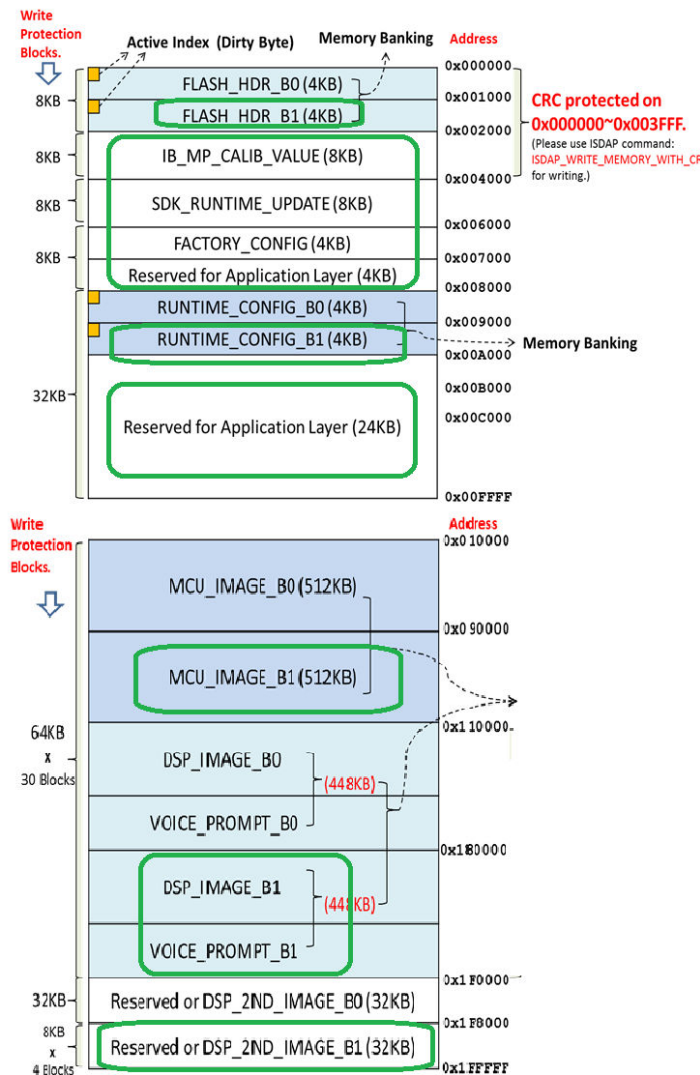


Figure 6-2. BM83 Entire Flash Layout

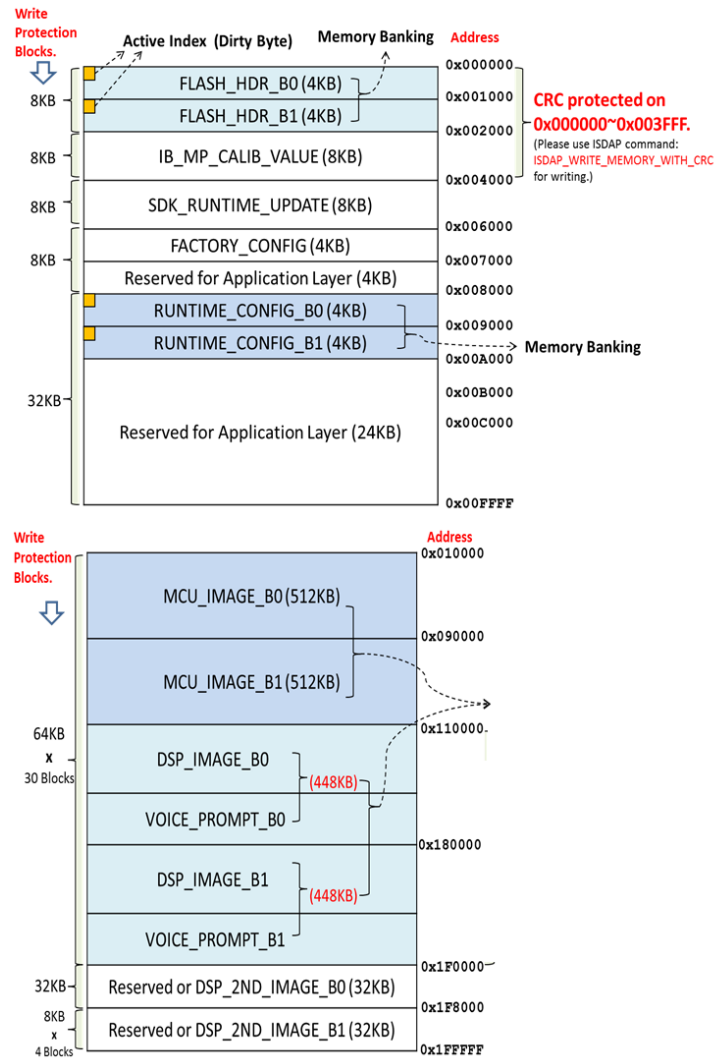

7. Revision History

Revision	Date	Section	Description
A	04/2020	Document	Initial Revision

The Microchip Website

Microchip provides online support via our website at <http://www.microchip.com/>. This website is used to make files and information easily available to customers. Some of the content available includes:

- **Product Support** – Data sheets and errata, application notes and sample programs, design resources, user's guides and hardware support documents, latest software releases and archived software
- **General Technical Support** – Frequently Asked Questions (FAQs), technical support requests, online discussion groups, Microchip design partner program member listing
- **Business of Microchip** – Product selector and ordering guides, latest Microchip press releases, listing of seminars and events, listings of Microchip sales offices, distributors and factory representatives

Product Change Notification Service

Microchip's product change notification service helps keep customers current on Microchip products. Subscribers will receive email notification whenever there are changes, updates, revisions or errata related to a specified product family or development tool of interest.

To register, go to <http://www.microchip.com/pcn> and follow the registration instructions.

Customer Support

Users of Microchip products can receive assistance through several channels:

- Distributor or Representative
- Local Sales Office
- Embedded Solutions Engineer (ESE)
- Technical Support

Customers should contact their distributor, representative or ESE for support. Local sales offices are also available to help customers. A listing of sales offices and locations is included in this document.

Technical support is available through the website at: <http://www.microchip.com/support>

Microchip Devices Code Protection Feature

Note the following details of the code protection feature on Microchip devices:

- Microchip products meet the specification contained in their particular Microchip Data Sheet.
- Microchip believes that its family of products is one of the most secure families of its kind on the market today, when used in the intended manner and under normal conditions.
- There are dishonest and possibly illegal methods used to breach the code protection feature. All of these methods, to our knowledge, require using the Microchip products in a manner outside the operating specifications contained in Microchip's Data Sheets. Most likely, the person doing so is engaged in theft of intellectual property.
- Microchip is willing to work with the customer who is concerned about the integrity of their code.
- Neither Microchip nor any other semiconductor manufacturer can guarantee the security of their code. Code protection does not mean that we are guaranteeing the product as "unbreakable."

Code protection is constantly evolving. We at Microchip are committed to continuously improving the code protection features of our products. Attempts to break Microchip's code protection feature may be a violation of the Digital Millennium Copyright Act. If such acts allow unauthorized access to your software or other copyrighted work, you may have a right to sue for relief under that Act.

Legal Notice

Information contained in this publication regarding device applications and the like is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets with

your specifications. MICROCHIP MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION, INCLUDING BUT NOT LIMITED TO ITS CONDITION, QUALITY, PERFORMANCE, MERCHANTABILITY OR FITNESS FOR PURPOSE. Microchip disclaims all liability arising from this information and its use. Use of Microchip devices in life support and/or safety applications is entirely at the buyer's risk, and the buyer agrees to defend, indemnify and hold harmless Microchip from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights unless otherwise stated.

Trademarks

The Microchip name and logo, the Microchip logo, Adaptec, AnyRate, AVR, AVR logo, AVR Freaks, BesTime, BitCloud, chipKIT, chipKIT logo, CryptoMemory, CryptoRF, dsPIC, FlashFlex, flexPWR, HELDO, IGLOO, JukeBlox, KeeLoq, Klear, LANCheck, LinkMD, maXStylus, maXTouch, MediaLB, megaAVR, Microsemi, Microsemi logo, MOST, MOST logo, MPLAB, OptoLyzer, PackeTime, PIC, picoPower, PICSTART, PIC32 logo, PolarFire, Prochip Designer, QTouch, SAM-BA, SenGenuity, SpyNIC, SST, SST Logo, SuperFlash, Symmetricom, SyncServer, Tachyon, TempTrackr, TimeSource, tinyAVR, UNI/O, Vectron, and XMEGA are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

APT, ClockWorks, The Embedded Control Solutions Company, EtherSynch, FlashTec, Hyper Speed Control, HyperLight Load, IntelliMOS, Libero, motorBench, mTouch, Powermite 3, Precision Edge, ProASIC, ProASIC Plus, ProASIC Plus logo, Quiet-Wire, SmartFusion, SyncWorld, Temux, TimeCesium, TimeHub, TimePictra, TimeProvider, Vite, WinPath, and ZL are registered trademarks of Microchip Technology Incorporated in the U.S.A.

Adjacent Key Suppression, AKS, Analog-for-the-Digital Age, Any Capacitor, AnyIn, AnyOut, BlueSky, BodyCom, CodeGuard, CryptoAuthentication, CryptoAutomotive, CryptoCompanion, CryptoController, dsPICDEM, dsPICDEM.net, Dynamic Average Matching, DAM, ECAN, EtherGREEN, In-Circuit Serial Programming, ICSP, INICnet, Inter-Chip Connectivity, JitterBlocker, KlearNet, KlearNet logo, memBrain, Mindi, MiWi, MPASM, MPF, MPLAB Certified logo, MPLIB, MPLINK, MultiTRAK, NetDetach, Omniscient Code Generation, PICDEM, PICDEM.net, PICkit, PICtail, PowerSmart, PureSilicon, QMatrix, REAL ICE, Ripple Blocker, SAM-ICE, Serial Quad I/O, SMART-I.S., SQI, SuperSwitcher, SuperSwitcher II, Total Endurance, TSHARC, USBCheck, VariSense, ViewSpan, WiperLock, Wireless DNA, and ZENA are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

SQTP is a service mark of Microchip Technology Incorporated in the U.S.A.

The Adaptec logo, Frequency on Demand, Silicon Storage Technology, and Symmcom are registered trademarks of Microchip Technology Inc. in other countries.

GestIC is a registered trademark of Microchip Technology Germany II GmbH & Co. KG, a subsidiary of Microchip Technology Inc., in other countries.

All other trademarks mentioned herein are property of their respective companies.

© 2020, Microchip Technology Incorporated, Printed in the U.S.A., All Rights Reserved.

ISBN:

Quality Management System

For information regarding Microchip's Quality Management Systems, please visit <http://www.microchip.com/quality>.

Worldwide Sales and Service

AMERICAS	ASIA/PACIFIC	ASIA/PACIFIC	EUROPE
Corporate Office 2355 West Chandler Blvd. Chandler, AZ 85224-6199 Tel: 480-792-7200 Fax: 480-792-7277 Technical Support: http://www.microchip.com/support Web Address: http://www.microchip.com	Australia - Sydney Tel: 61-2-9868-6733 China - Beijing Tel: 86-10-8569-7000 China - Chengdu Tel: 86-28-8665-5511 China - Chongqing Tel: 86-23-8980-9588 China - Dongguan Tel: 86-769-8702-9880 China - Guangzhou Tel: 86-20-8755-8029 China - Hangzhou Tel: 86-571-8792-8115 China - Hong Kong SAR Tel: 852-2943-5100 China - Nanjing Tel: 86-25-8473-2460 China - Qingdao Tel: 86-532-8502-7355 China - Shanghai Tel: 86-21-3326-8000 China - Shenyang Tel: 86-24-2334-2829 China - Shenzhen Tel: 86-755-8864-2200 China - Suzhou Tel: 86-186-6233-1526 China - Wuhan Tel: 86-27-5980-5300 China - Xian Tel: 86-29-8833-7252 China - Xiamen Tel: 86-592-2388138 China - Zhuhai Tel: 86-756-3210040	India - Bangalore Tel: 91-80-3090-4444 India - New Delhi Tel: 91-11-4160-8631 India - Pune Tel: 91-20-4121-0141 Japan - Osaka Tel: 81-6-6152-7160 Japan - Tokyo Tel: 81-3-6880-3770 Korea - Daegu Tel: 82-53-744-4301 Korea - Seoul Tel: 82-2-554-7200 Malaysia - Kuala Lumpur Tel: 60-3-7651-7906 Malaysia - Penang Tel: 60-4-227-8870 Philippines - Manila Tel: 63-2-634-9065 Singapore Tel: 65-6334-8870 Taiwan - Hsin Chu Tel: 886-3-577-8366 Taiwan - Kaohsiung Tel: 886-7-213-7830 Taiwan - Taipei Tel: 886-2-2508-8600 Thailand - Bangkok Tel: 66-2-694-1351 Vietnam - Ho Chi Minh Tel: 84-28-5448-2100	Austria - Wels Tel: 43-7242-2244-39 Fax: 43-7242-2244-393 Denmark - Copenhagen Tel: 45-4450-2828 Fax: 45-4485-2829 Finland - Espoo Tel: 358-9-4520-820 France - Paris Tel: 33-1-69-53-63-20 Fax: 33-1-69-30-90-79 Germany - Garching Tel: 49-8931-9700 Germany - Haan Tel: 49-2129-3766400 Germany - Heilbronn Tel: 49-7131-72400 Germany - Karlsruhe Tel: 49-721-625370 Germany - Munich Tel: 49-89-627-144-0 Fax: 49-89-627-144-44 Germany - Rosenheim Tel: 49-8031-354-560 Israel - Ra'anana Tel: 972-9-744-7705 Italy - Milan Tel: 39-0331-742611 Fax: 39-0331-466781 Italy - Padova Tel: 39-049-7625286 Netherlands - Drunen Tel: 31-416-690399 Fax: 31-416-690340 Norway - Trondheim Tel: 47-72884388 Poland - Warsaw Tel: 48-22-3325737 Romania - Bucharest Tel: 40-21-407-87-50 Spain - Madrid Tel: 34-91-708-08-90 Fax: 34-91-708-08-91 Sweden - Gothenberg Tel: 46-31-704-60-40 Sweden - Stockholm Tel: 46-8-5090-4654 UK - Wokingham Tel: 44-118-921-5800 Fax: 44-118-921-5820