

## VA-2000 Series

### Intelligent Actuators for VB-2000/VB-2010 Globe Valve Bodies

#### Features

- Bi-directional synchronous motor with magnetic clutch
- Valve position indicator
- 3-wire floating or 0-10 VDC or 4-20 mA input models available (3-wire on-off models available as option)
- Jumper selectable DA or RA setting (0-10 VDC or 4-20 mA models only)
- Jumper selectable valve stroke: 13, 15, 17 or 19 mm
- Time-out protection for 3-wire floating models
- Returns actuator to its fully up or fully down position when lack of input signal
- Optional 0-10 VDC feedback signal (for 0-10 VDC or 4-20 mA models only)
- Optional auxiliary switches (for 3-wire floating models only)
- Optional manual open/close positioner

#### General

The VA-2000 Series electric valve actuators are designed for 3-wire floating (incremental), 0-10 VDC or 4-20 mA control of VB-2000/VB-2010 Series 2-way or 3-way globe valve bodies.

The VA-2000 Series actuators feature a bi-directional synchronous motor with an integral magnetic clutch to eliminate the need for position switches. Position feedback from a 0-10 VDC potentiometer is a standard feature for all 0-10 VDC or 4-20 mA actuators.

For ease of operation, if the VA-2000 Series actuators are factory mounted onto the VB-2000/VB-2010 Series valve bodies, field calibration of travel adjustments of the actuators is not required.

For best control results, the thermostat or controller should be selected or adjusted to complement the stroke time of the VA-3000 actuator.

#### Direct Action (DA) and Reverse Action (RA) Jumper Setting (Proportional Models Only)

DA is set to extend actuator stem when input signal increases and RA to retract actuator stem when input signal increases. The factory setting is DA. Can be changed in the field to RA by moving the jumper from J1 to J2.

#### Optional Feedback Signal (Proportional Models Only)

0-10 VDC feedback signal is available on VA-3101x and VA-3201x actuators.

#### Optional Auxiliary Switches

The actuators are available with auxiliary switches as an option on 3-wire floating models only, which allow contact activation between fully-closed and fully-open positions.

#### Input Signal Interruption Protection (Proportional Models Only)

When there is no input signal or input signal is open-circuited, the actuator will return to its fully up



or fully down position, depending on the J4 jumper setting. The factory setting is fully up position. Can be changed in the field to fully down position by moving the jumper at J4

#### Ordering

To order, specify complete model numbers. If 4-20 mA input signal actuators are required, it is highly recommended to specify this requirement for factory-mount valve/actuator set on ordering, as fine factory adjustments on the control board may be needed to accomplish best control results. Field change of 4-20 mA input signal to 0-10 VDC is not recommended.

#### Replacement and Repair


Field repairs must not be made and no field replacement parts are available.

## Specifications

Product model numbers	VA-2100x	3-wire floating model
	VA-2101x	0-10 VDC model with 0-10 VDC feedback
	VA-2102x	0-10 VDC model without 0-10 VDC feedback
	Where x = omitted = standard model without options	
	x = M = with manual open/close positioner	
	x = S = with 2 auxiliary switches	
	x = K = with manual open/close positioner and 2 auxiliary switches	
	<b>Notes:</b> Above model numbers are for 24 VAC supply voltage. Add suffix "(230)" to the model numbers when ordering 230 VAC supply voltage version. Example: VA-2100M(230).	
Actuator type	Non-spring return	
Control action	3-wire floating: reversible 0-10 VDC or 4-20 mA: selectable DA or RA	
Supply voltage	3-wire floating: 24 or 230 V $\pm 10\%$ 50/60 Hz (specify voltage when ordering) 0-10 VDC or 4-20 mA: 24 V $\pm 10\%$ 50/60 Hz only	
Power rating	2.5 VA for 24 VAC supply voltage 5 VA for 230 VAC supply voltage	
Input signal	3-wire floating: 24 or 230 V $\pm 10\%$ 50/60 Hz Proportional: 0-10 VDC or 4-20 mA	
Input impedance	Proportional: 100,000 $\Omega$ of voltage input; 500 $\Omega$ of current input	
Feedback signal	0-10 VDC (VA-3101x and VA-3201x models only)	
Auxiliary switch contact rating	Two SPDT rated at 24 VAC 3 A resistive, 1.5 A inductive per switch	
Motor type	Bi-directional synchronous motor with magnetic clutch	
Close-off force	500 N	
Stroke	Choice of 13, 15, 17 or 19 mm by jumper	
Electrical connection	Non-removable terminal block (wire leads for auxiliary switches), wire size 1mm <sup>2</sup> or 18 AWG solid copper recommended	
Protection class	IP42	
Materials:	Gear POM plastic	
	Reducer chassis Zinc-plated steel	
	Bracket Die-cast aluminum alloy	
	Casing Fire-retardant molded ABS (UL94V-0)	
Operating time	At 50 Hz: 12.4 s/mm At 60 Hz: 10.3 s/mm	
Ambient Conditions	Operating: 2 to 55°C (36 to 131°F); 0-90% RH, non-condensing Storage: -20 to 65°C (-4 to 149°F); 0-90% RH, non-condensing	
Accessories	U-type connector, locknut, indicator guide and valve connector	
Factory settings	<u>3-wire floating</u> At fully-closed position (upwards) <u>0-10 VDC (if 4-20 mA not specified)</u> Stroke: 19 mm Input signal: 0-10 VDC Control action: DA Failure protection: Up At fully-closed position (upwards)	
Dimensions	See Figure 1: Dimensions in mm and Mounting Details	
Shipping Weights	0.82 kg (1.8 lb) for 3-wire floating model 0.87 kg (1.9 lb) for proportional models	

*The performance specifications above are nominal and subject to tolerances and application variables of generally acceptable industry standards. The Manufacturer shall not be liable for damages resulting from misapplication or misuse of its products.*

**Figure 1: Dimensions in mm and Mounting Details**

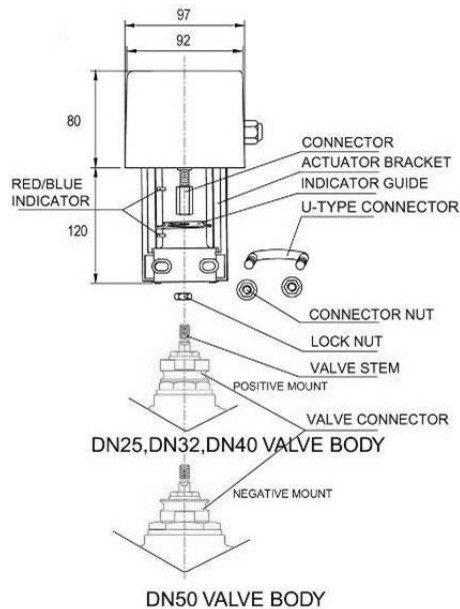


### Mounting and Installation


1. Tightly screw the valve connector on the valve stem.
2. Mount the actuator bracket to the valve connector, insert the U-type connector into the bracket and tighten the two connector nuts.
3. Lift the valve stem, place the locknut and indicator guide in it and couple the valve stem to the valve connector. Rotate the connector as far as it can go and tighten the locknut with a wrench. This is the fully-closed position of the valve set.
4. Allow enough headroom for removing the actuator from the valve body.

**Figure 2: Wiring Diagrams**

### 3-Wire Floating Actuators

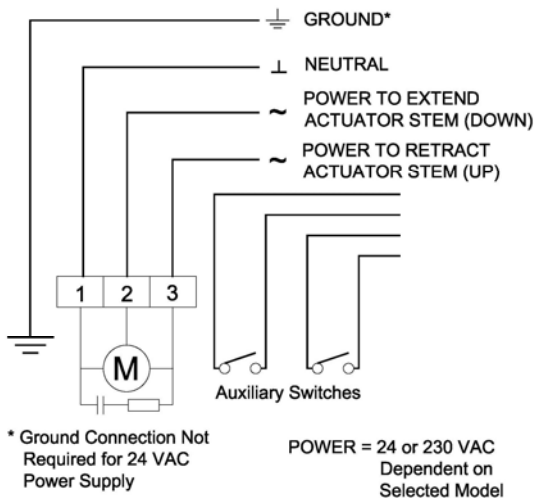

### Proportional Actuators with Feedback

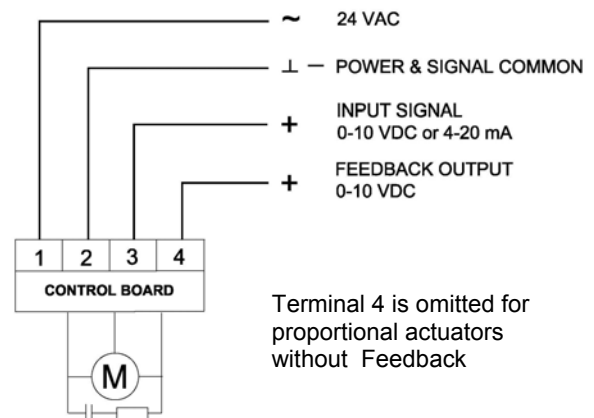

### Mega Controls Limited

Room 2505, Trend Centre


29 Cheung Lee Street, Chai Wan, Hong Kong

Phone: +852 2896 7277 Fax: +852 2896 7234

E-mail: [sales@megacontrols.com](mailto:sales@megacontrols.com)

Website: [www.megacontrols.com](http://www.megacontrols.com)

**Figure 3: Jumper Settings**

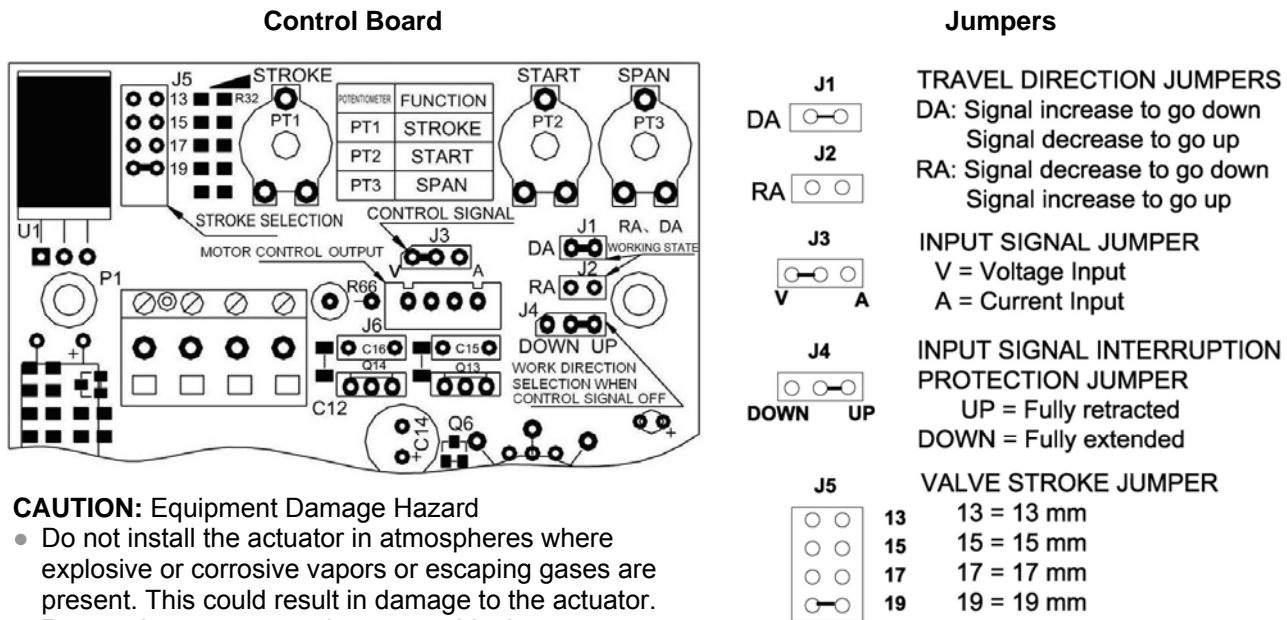


**CAUTION: Equipment Damage Hazard**

- Do not install the actuator in atmospheres where explosive or corrosive vapors or escaping gases are present. This could result in damage to the actuator.
- Protect the actuator against water dripping.

**WARNING:**

- All VA-2000 Series actuators are designed for use only in conjunction with operating controls. Where an operating control failure would result in personal injury and/or loss of property, it is the responsibility of the installer to add safety devices or alarm systems that protect against, and/or warn of, control failure.
- Electrical shock hazard! Disconnect power before installation to prevent electrical shock or equipment damage.
- Do not adjust potentiometers PT2 and PT3 which are for factory use only.

**Manual Open/Close Positioner**

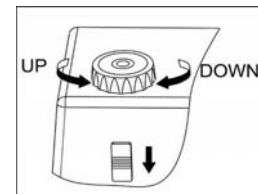

**NOTE:** Disconnect power supply before operating manual open/close positioner. Push down and hold slider and rotate knob.

**Valve Stroke Calibration**

**For 3-wire Floating Actuators**

1. Apply power to Terminals 1 and 3 and the valve stem starts moving upwards until it stops at its fully-closed position.
2. Apply power to Terminals 1 and 2 and the valve stem starts moving downwards until it stops at its fully-open position.
3. If the valve stem has not moved to the top or bottom end but the motor has been locked (motor shaft keeps vibrating), disconnect power and adjust the distance between the actuator connector and valve stem.
4. Repeat Steps 1 to 3 until both top and bottom ends are reached.

**For Proportional Actuators**

1. Set stroke jumper J5 according to the VB-2000 or VB-2010 valve body stroke.
2. Connect 24 VAC power to Terminals 1(~) and 2(⊥).

3. Apply fully-open signal, 10 V or 20 mA, to Terminals 2(-) and 3(+) and actuator will start moving downwards until the red indicating LED turns off.
4. If the actuator stops but the LED remains on, it means that the valve stem has been over-driven. Adjust the stroke potentiometer PT1 until the LED goes off.
5. Apply fully-closed signal, 0 VDC or 4 mA, and actuator will start moving upwards until the LED goes off.
6. If the actuator stops but the LED remains on, loosen the locknut and slightly unscrew the valve stem from the actuator connector until the LED goes off. Tighten the locknut to confirm this fully-closed position.
7. Repeat Steps 3 to 6 to ensure correct working cycle between the fully-closed and fully-open positions.