


500PS / 800PS / 1100PS / 1440PS



# User's Guide



## PROFESSIONAL SERIES

Models 500PS, 800PS, 1100PS, 1440PS

Copyright© OPTI-UPS Corporation, 1997. All rights reserved.

OPTI-UPS and OPTI-SAFE are trademarks of OPTI-UPS Corporation

### **For your records**

**The serial number of your UPS is on the rear panel. You should note the serial number in the space provided below. Retain this booklet as a permanent record of your purchase to aid in identification in the event of theft or loss.**

**Model No:**

**Serial No.:**

**Purchase Date:**

## LIMITED WARRANTY

### ***What the warranty covers:***

We warrant this product to be free from defects in material and workmanship during the warranty period. If a product proves to be defective in material or workmanship during the warranty period, we will at our sole option repair or replace the product with a like product.

### ***How long the warranty is effective:***

Our UPS products which are purchased and installed in the contiguous United States or Canada are warranted for three (3) years for parts, two (2) years for labor and two (2) years for the batteries from the date of the first consumer purchase. For UPS products which are located outside of the contiguous United States or Canada, contact your dealer for warranty information.

### ***Who the warranty protects:***

This warranty is valid only for the first consumer purchaser.

### ***What the warranty does not cover:***

1. Any product on which the serial number has been defaced, modified or removed.
2. Damage, deterioration or malfunction resulting from:
  - a) Accident, misuse, neglect, fire, water, or other acts of nature, unauthorized product modification, or failure to follow instructions supplied with the product.
  - b) Repair or attempted repair by anyone not authorized.
  - c) Any damage of the product due to shipment.
  - d) Removal or installation of the product.
  - e) Causes external to the product.
  - f) Use of supplies or parts not meeting our specifications.
  - g) Normal wear and tear.
  - h) Any other cause which does not relate to a product defect.
3. Removal, installation and set-up service charges.

***Limitation of implied warranties:***

THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, WHICH EXTEND BEYOND THE DESCRIPTION CONTAINED HEREIN INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

***Exclusion of damages:***

OUR LIABILITY IS LIMITED TO THE COST OF REPAIR OR REPLACEMENT OF THE PRODUCT. WE SHALL NOT BE LIABLE FOR:

1. DAMAGE TO OTHER PROPERTY CAUSED BY ANY DEFECTS IN THE PRODUCT\*, DAMAGES BASED UPON INCONVENIENCE, LOSS OF USE OF THE PRODUCT, LOSS OF TIME, LOSS OF PROFITS, LOSS OF BUSINESS OPPORTUNITY, LOSS OF GOODWILL, LOSS OF DATA, LOSS OF SOFTWARE, COSTS OF SUBSTITUTE EQUIPMENT, INTERFERENCE WITH BUSINESS RELATIONSHIPS, CLAIMS BY THIRD PARTIES, OR OTHER COMMERCIAL LOSS, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.
2. ANY OTHER DAMAGES, WHETHER INCIDENTAL, CONSEQUENTIAL OR OTHERWISE.
3. ANY CLAIM AGAINST THE CUSTOMER BY ANY OTHER PARTY.

***Effect of state law:***

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow limitations on implied warranties and/or do not allow the exclusion of incidental or consequential damages, so the above limitations and exclusions may not apply to you.

***Life Support:***

We do not recommend the use of our UPS products for life support equipment or direct care where failure of a UPS product could cause failure of, or diminished effectiveness of the life support equipment or patient care.

\*Except as expressly provided for by the UPS "Equipment Protection Policy"

**EFFECTIVE October 1, 1997**

## TABLE OF CONTENTS

### 1. INTRODUCTION

1.1	Overview	1
1.2	Smart Buck and Boost Line Conditioning	1
1.3	User Replaceable Battery Design	2
1.4	Advanced Interface to Communicate with Computer	2
1.5	User Configurable Settings	2
1.6	Schedule Shutdown & Startup	2
1.7	Data-Line Surge Protection	2

### 2. UPS CONTROLS

2.1	External Views	3
2.2	On/Off Button	5
2.3	Test/Silence Button	5
2.4	Load Percentage Bar Graph	5
2.5	Battery Capacity Bar Graph	5
2.6	Status Indication	6
2.7	Site Wiring Fault Indicator	7
2.8	Communication Port and Pin Assignments	7
2.9	User Configurable Setting	9
2.10	Start-Up on Battery	9
2.11	Data-Line Surge Suppression	9

### 3. INSTALLATION AND OPERATION

3.1	Unpacking and Inspection	10
3.2	Placement	10
3.3	Determining How Much Equipment You Can Connect to Your UPS	11
3.4	Powering Up Your UPS	11
3.5	Connecting Your Equipment to the UPS	12
3.6	Operation and Functional Test	13
3.7	Storage Instructions	13

### 4. SPECIFICATIONS

4.1	Electrical Specifications	14
4.2	Mechanical Specifications	16
4.3	Environmental Specifications	16

### 5. TROUBLESHOOTING

5.1	Troubleshooting Chart	17
-----	-----------------------	----

### 6. USER REPLACEABLE BATTERY

6.1	Warning	19
6.2	Battery Replacement Procedure	20



# IMPORTANT SAFETY INSTRUCTIONS

## SAVE THESE INSTRUCTIONS



- WHEN REPLACING BATTERIES, USE THE SAME NUMBER AND THE FOLLOWING TYPE BATTERIES: SEALED LEAD-ACID MAINTENANCE FREE (500PS: 4.5AH/12V x2) (800PS: 7AH/12V x2) (1100PS: 11AH/12V x2) (1440PS: 7AH/12V x4)
- PROPER DISPOSAL OF BATTERIES IS REQUIRED. REFER TO YOUR LOCAL CODES FOR DISPOSAL REQUIREMENTS.

### INSTRUCTIONS IMPORTANTES CONCERNANT LA SÉCURITÉ

- CONSERVER CES INSTRUCTIONS. CETTE NOTICE CONTIENT DES INSTRUCTIONS IMPORTANTES CONCERNANT LA SÉCURITÉ.
- POUR LE REMPLACEMENT UTILISER LE MÊME NOMBRE DE BATTERIES DU MODÈLE SUIVANT: (500PS: 4.5AH/12V x2) (800PS: 7AH/12V x2) (1100PS: 11AH/12V x2) (1440PS: 7AH/12V x4)
- L'ÉLIMINATION DES BATTERIES EST RÈGLEMENTÉE. CONSULTER LES CODES LOCAUX À CET EFFET.

**DIESE ANLEITUNG ENTHÄLT WICHTIGE  
SICHERHEITSANWEISUNGEN. DIESE ANLEITUNG ZUR  
WEITERLEITUNG GRIFFBEREIT BEHALTEN.**

- BEIM AUSTAUSCHEN DER BATTERIEN DIESELBE NUMMER UND FOLGENDES BATTERIENTYP BENUTZEN: BLEI-SÄURE WARTUNGSFREI (500PS: 4.5AH/12V x2) (800PS: 7AH/12V x2) (1100PS: 11AH/12V x2) (1440PS: 7AH/12V x4)
- RICHTIGE VERÄÜßERUNG DER BATTERIEN IST ERFORDERLICH. IN DEN LOKALKODIZES UM DIE VERÄÜßERUNGSERFORDERNISSE NACHSCHAUEN.

## CAUTION:

**THE UPS CONTAINS VOLTAGES WHICH ARE POTENTIALLY HAZARDOUS. ALL REPAIRS SHOULD BE PERFORMED BY QUALIFIED SERVICE PERSONNEL.**

**THE UPS HAS ITS OWN INTERNAL ENERGY SOURCE (BATTERY). THE OUTPUT RECEPTACLES MAY BE ALIVE EVEN WHEN THE UPS IS NOT CONNECTED TO AN AC SUPPLY.**

Safe and continuous operation of the UPS depends partially on the care taken by users. Please observe the following precautions.

- Do not disassemble the UPS.
- Do not attempt to power the UPS from any receptacle except a 2-pole 3-wire grounded receptacle.
- Do not place the UPS near water or in environments of excessive humidity.
- Do not allow liquid or any foreign objects to get inside the UPS.
- Do not block air vents on the side of the UPS.
- Do not plug appliances, such as hair dryers, into the UPS receptacles.
- Do not place the UPS under direct sunshine or close to heat-emitting sources.
- This UPS is intended for installation in a temperature controlled, indoor area free of conductive contaminants.
- Do not dispose of batteries in a fire, the battery may explode.
- Do not open or mutilate the battery or batteries, released electrolyte is harmful to the skin and eyes.

***A certified detachable power supply cord is to be used with this equipment. For the 500PS/800PS/1100PS a type not lighter than SJT 18 AWG should be used and for the 1440PS a type not lighter than SJT 16 AWG should be used.***



## VORSICHT:

**DIE UPS\* ENTHÄLT SPANNUNGEN, DIE MÖGLICHERWEISE GEFÄHRLICH SIND. ALLE REPARATUREN SOLLTEN VON QUALIFIZIERTEN MONTEUREN DURCHGEFÜHRT WERDEN.**

**DIE UPS HAT EINE EIGENE INNERE STROMVERSORGUNG (BATTERIE). DIE AUSGANGSANSCHLÜSSE KÖNNEN ALSO UNTER STROM STEHEN, SELBST DANN, WENN DIE UPS NICHT AN EINEN WECHSELSTROMKREIS ANGESCHLOSSEN IST.**

Um die UPS auf Dauer sicher bedienen zu können, sollte der Benutzer auf folgende Vorsichtsmaßnahmen genau achten:

- Die UPS nicht auseinandernehmen.
- Die Stromversorgung sollte nur durch einen 2-poligen, dreiadrigen, geerdeten Anschluß erfolgen.
- Die UPS nicht in der Nähe von Wasser oder in Umgebungen übermäßiger Feuchtigkeit aufstellen.
- Flüssigkeiten oder Fremdobjekte dürfen nicht in das Innere der UPS dringen.
- Lufteinfuhr an der Vorderseite und Luftaustritt an der Rückseite sollten nicht behindert sein.
- Elektrogeräte, wie z. B. Haartrockner u.a. sollten nicht an die UPS angeschlossen werden.
- Die UPS nicht direkter Sonnenbestrahlung oder Heizgeräten aussetzen.
- Die Steckdose sollte nahe dem Gerät installiert und gut zugänglich sein, um sie vom Wechselstromeingang zu isolieren. Zur Trennung vom Wechselstromkreis den Stecker aus der Steckdose ziehen.
- Die Steckdose muß nahe dem Gerät angebracht und leicht zugänglich sein.
- Bei der Installation dieses Gerätes ist darauf zu achten, daß die Summe der Ableitströme der UPS und der angeschlossenen Verbraucher den Maximalwert von 3.5mA nicht überschreiten.
- Bei Instandhaltungsarbeiten ist daher die Versorgung durch die Batterie an den Steckverbindern in beiden Polen zu unterbrechen.
- Werfen Sie niemals die Batterien in das Feuer, die Batterien könnten explodieren.

## VORSICHT:

- Öffnen oder beschädigen Sie nicht die Batterien, ausfließendes Elektrolyt ist schädlich für Haut und Augen.
- Eine Batterie Kann eine Gefahr eines elektrischen Schlages und sehr großer kurzschlußströme beinhalten. Folgende Vorkehrungen sollten getroffen werden, wenn Sie mit der Battery arbeiten
  - \* Entfernen Sie Uhren, Ring und andere metallische Objekte
  - \* Verwenden Sie Werkzeug mit isolierten Griffen.

Zur Stromzufuhr sollte ein gesichertes, trennbares Kabel benutzt werden. Für eine Stromstärke bis 10A sollte dieses mit H05VV-F 3C; 0.75 mm<sup>2</sup> benutzt werden.

\*UPS (Uninterrupted Power Supply) = Unterbrechungsfreie Stromversorgung

## ATTENTION:

**L'UPS contient de la haute tension qui peut poser risques. Toute réparation doit être exécutée par du personnel de service qualifié.**

**L'UPS a sa propre alimentation secteur interne (batterie). Les prises femelles peuvent être chargées même si l'UPS n'est pas relié à une alimentation secteur.**

La sécurité de l'opération de l'UPS dépend des soins de l'utilisateur. Veuillez lire les précautions ci-dessous:

- Ne jamais démonter l'UPS.
- Ne jamais essayer de brancher l'UPS à une prise femelle sauf à une qui possède une terre et 2 poles.
- Ne jamais mettre l'UPS près de l'eau ou dans un milieu trop humide.
- Ne jamais faire entrer du liquide ou d'objet étranger dans l'UPS.
- Ne jamais boucher les ventilations d'air de l'UPS ou l'aération arrière.
- Ne jamais brancher d'appareils, comme les sèche-cheveux, à la prise femelle de l'UPS.
- Ne jamais placer l'UPS aux rayons directs du soleil ou près d'autre source de chaleur.
- La fiche d'alimentation secteur doit être installée tout près de cet appareil. Elle doit être facilement accessible pour l'isoler de la prise secteur de sortie. Pour couper la connexion, enlever la fiche de la prise femelle.

Un câble d'alimentation secteur amovible et certifié est utilisé avec cet appareil. Pour un courant jusqu'à 10A, un câble qui n'est pas plus léger que 0,75mm<sup>2</sup> doit être utilisé.

## **FEDERAL COMMUNICATIONS COMMISSION (FCC)**

### **WARNING:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## **CANADIAN DEPARTMENT OF COMMUNICATIONS (DOC)**

This equipment does not exceed Class B limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulation of the Canadian Department of Communications. Operation in a residential area may cause Unacceptable interference to radio and TV reception requiring the owner or operator to take whatever steps are necessary to correct the interference.

Cet équipement ne dépasse pas limites de Classe B d'émission de bruits radioélectriques pour les appareils numériques, telles que prescrites par le Règlement sur le brouillage radioélectrique établi par le Ministère des Communications du Canada. L'exploitation faite en milieu résidentiel peut entraîner le brouillage des réceptions radio et télé, ce qui obligerait le propriétaire ou l'opérateur à prendre les dispositions nécessaires pour en éliminer les causes.

500PS / 800PS / 1100PS / 1440PS






## 1. INTRODUCTION

### 1.1 Overview

The Professional Series models are advanced line-interactive true sinewave uninterruptible power systems (UPS) designed to prevent spikes, surges, sags, transients and blackouts from reaching your sensitive equipment. Your equipment may include such items as computers and computerized instruments to telecommunication systems. When AC power is present, the UPS filters and conditions the power continuously. When AC power fails, the unit employs its internal maintenance-free battery to supply back-up power without interruption.

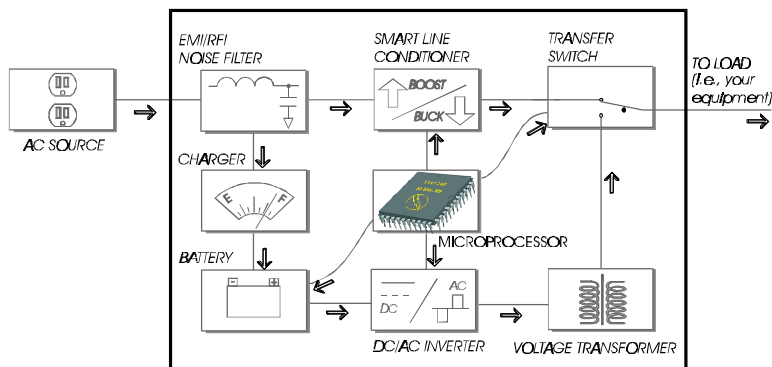

Professional Series Features

### 1.2 Sinewave Output

The output voltage is a true sinewave, the same waveform that your equipment gets from the wall outlet. This provides guaranteed compatibility with all types of loads and even the most sensitive equipment.

### 1.2 Smart Buck and Boost Line Conditioning

The voltage from your AC power source can fluctuate above and below the standard rating. This microprocessor controlled UPS provides line conditioning via both buck (*step-down voltage*) and boost (*step-up voltage*) functions. For example, if your normal voltage is 120V and the voltage fluctuates up to 132V, the buck function in your UPS will step it down so that your equipment receives approximately 120V. If the voltage fluctuates down to 108V, the boost function will step it up so that your equipment receives approximately 120V. This provides your equipment with excellent voltage regulation with less possibility for the UPS to drain its internal battery.

### **1.3 User Replaceable Battery Design**

The battery is the most critical part in a UPS. The average lifetime of a battery is between 3 and 5 years. The special user-replaceable battery design of this UPS provides significant savings and gives the UPS an almost unlimited life. You can replace the battery very easily, and without turning off your UPS or the equipment it is protecting (see *Chapter 6*).

### **1.4 Advanced Interface to Communicate with Computer**

Many UPS's provide only a basic power failure warning. The Professional Series, together with OPTI-SAFE+ also provides you with important operating information. From your computer screen, you can determine input/output voltage and current, frequency, battery voltage, etc., and analyze power problems (see *Section 2.7*). If OPTI-SAFE™+ is not part of your UPS package, you can purchase it from your local dealer.

### **1.5 User Configurable Settings**

You can configure the operating parameters of your UPS to meet your individual needs (see *Section 2.9*).

### **1.6 Schedule Shutdown & Startup**

Using OPTI-SAFE™+ you can locally or remotely control the shutdown and startup of equipment connected to a UPS. A customized schedule can be developed to meet your specific requirements (see *the OPTI-SAFE™+ User's Guide*).

### **1.7 Outlet Control**

The Professional Series provides the ability to turn off certain outlet groups independently of the others. You can use this function to schedule for certain equipment to turn off while leaving the UPS and your other equipment on. (see *the OPTI-SAFE™+ User's Guide*).

### **1.8 Data-Line Surge Protection**

The built-in data-line surge suppression on the rear panel completes your system protection. It provides an easy way to protect a network (*RJ45*) or modem (*single line phone*) connection from hazardous spikes (see *Section 2.11*).




2. UPS CONTROLS


2.1 **External Views** (see Sections 2.2 through 2.11 for more information, and Section 4.2 for the dimensions of all models)

1X0V Version

Front View

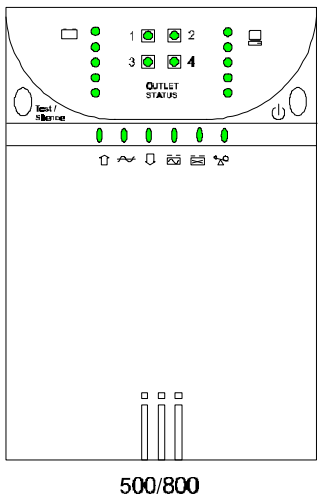


500/800

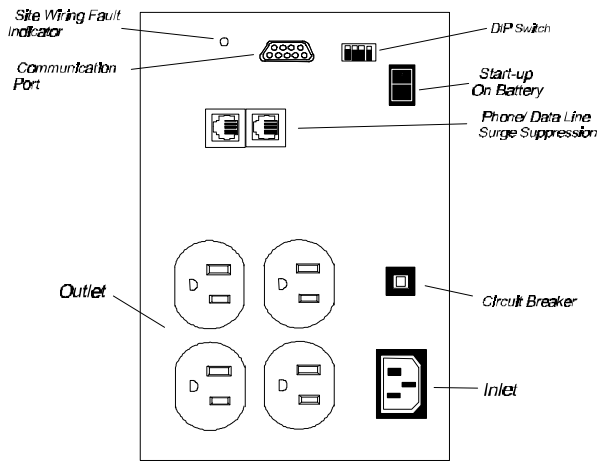


Rear View

**2X0V Version**

Front View

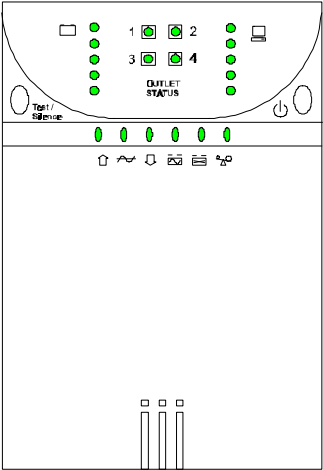


500/800

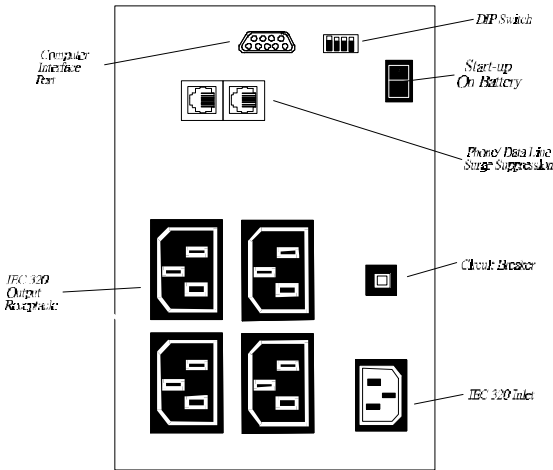


Rear View

1X0V Version

Front View

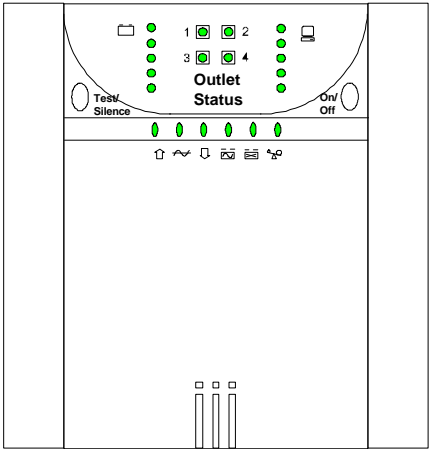



1100/1440

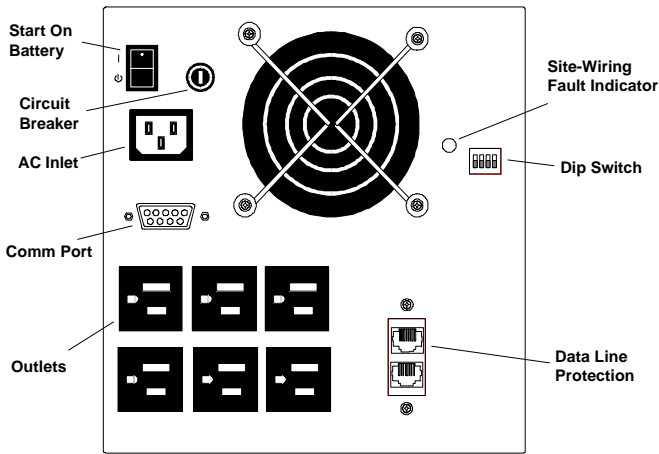

Rear View

2X0V Version

Front View

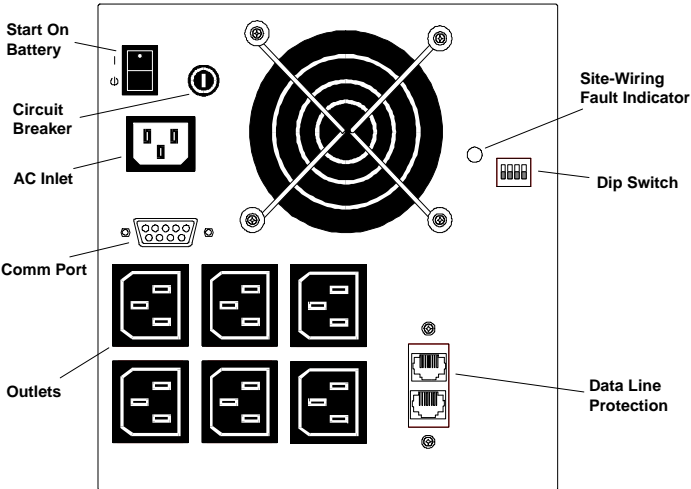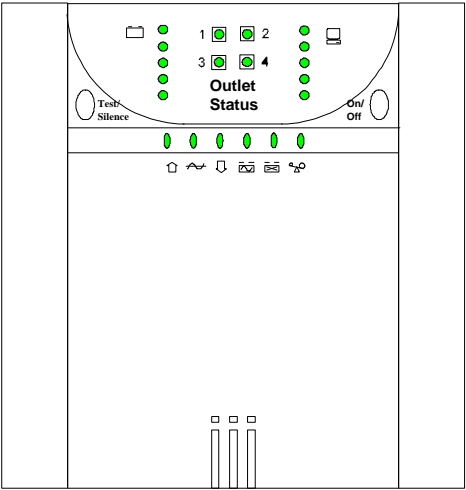

Rear View

## ***Front Panel Controls***

### **2.2 On/Off Button**

The On/Off Button has two functions:

1. When the UPS is off and AC power is present, press the On/Off button for more than 3 seconds to turn on the UPS.

If the Rear Panel "Start-Up On Battery" switch is enabled, the UPS can be turned on even when AC power is not present.

2. When the UPS is on, press the On/Off button for more than 3 seconds to turn off the UPS and output power.

### **2.3 Test/Silence Button**

The Test/Silence Button has two functions:

1. Pressing the Test/Silence Button when AC power is available causes the UPS to test itself by switching to its internal battery for a few seconds. We recommend you close all your open files before initiating this test.
2. If AC power fails, the UPS warns you with an audible alarm. To silence the alarm, press the Test/Silence Button. When the battery starts to get low, the audible alarm will return and beep faster.

### **2.4 Load Percentage Bar Graph**







The 5-LED display on the right side of the front panel shows the current load percentage. From 0 to 110 percent, the percentage of the UPS's maximum power capacity being drawn by your connected equipment is shown.

### **2.5 Battery Capacity LED Array Display**

The 5-LED display on the left side of the front panel shows the percentage of the battery capacity. From zero to 100%, the present charge of the UPS's batteries is shown.

## 2.6 Status Indication

### UPS Status Indication: Front Panel LED's

	<b>Boost Mode:</b> When this LED is lit, the UPS is correcting a brownout. The UPS raises the output voltage approximately 12% higher than the input voltage without using any battery power.
	<b>Normal Mode:</b> When this LED is lit, the UPS is in normal mode, and providing power to your equipment. The output voltage will be equal to the input voltage. The UPS will continue to filter and provide surge protection.
	<b>Buck Mode:</b> When this LED is lit, the UPS is correcting an overvoltage. The UPS lowers the output voltage approximately 12% lower than the input voltage without using any battery power.
	<b>Battery Mode:</b> When this LED is lit, the UPS is providing power from its battery. Also, this LED is lit when you press the Test/Silence Button to test the battery (see <i>Section 2.2</i> ). After the UPS beeps twice, it will resume Normal Mode.
	<b>Battery Weak:</b> When this LED is lit, the battery voltage is low. This indicates that the battery either needs to be recharged or replaced.
	<b>Overload:</b> When this LED is lit, the UPS is overloaded. You must remove the least critical components connected to your UPS.

**Outlet On/Off Front Panel Status Indication****500PS / 800PS**

Outlet Status	Outlets #1 & #2 (Group 1)	Outlets #3 & #4 (Group 2)
ON	LED 1 & 2 on	LED 1 & 2 on
OFF	LED 1 & 2 off	LED 3 & 4off

**1100PS / 1440PS**

Outlet Status	Outlets #1 & #2 (Group 1)	Outlet #3	Outlet #4
ON	LED 1 & 2 on	LED 3 on	LED 4 on
OFF	LED 1 & 2 off	LED 3 off	LED 4 off

## ***Rear Panel Controls***

### **2.7 Site Wiring Fault Indicator (1X0 Models Only)**

The red Site Wiring Fault LED Indicator on the rear panel lights up if your UPS is plugged into an improperly wired AC power outlet. Check this indicator during installation of your UPS, or whenever the wiring in your building has been serviced. If the red LED is lit, call a qualified electrician.

The Indicator warns you if the ground wire is missing, if the input line and neutral wires are reversed, or if the neutral wire is overloaded. Faulty wiring prevents the safety features and surge protection circuits built into the UPS from operating properly.

If your building's wiring has been checked and is OK and the Indicator is still lit, call Customer Service for assistance.

**Note:**

1. Do not leave the UPS ungrounded by using a 3-pin to 2-pin plug adapter.
2. The site wiring fault indicator is not a feature of the 2X0V models.

### **2.8 Communication Port and Pin Assignments**

The communication port on the rear panel of the UPS allows for connection to a host computer. When used with *OPTI-SAFE™+* communication software you will have access to important operating information. From your computer screen, you can monitor input/output voltage, AC frequency, battery voltage, etc., and analyze power problems. *OPTI-SAFE™+* will also initiate automatic graceful shutdowns during extended power failures.

If *OPTI-SAFE™+* and a communication cable are not included in your UPS package, you can purchase it from your local dealer.

The following are some of the parameters you can monitor:

Input Voltage	Indicates the actual input voltage to the UPS when AC power is present
Output Voltage	Indicates the actual output voltage of the UPS
AC Frequency	Indicates the actual output frequency of the UPS
Battery Voltage	Indicates the actual DC voltage of the UPS battery
Change Battery	Indicates that the battery is dead and needs to be replaced
Percent Load	Indicates the percentage of UPS Voltage-Ampere (VA) capacity being utilized by your equipment
Temperature	Indicates the actual temperature inside the UPS




The Professional Series also supports software which relies on basic “contact closure signals” such as the built in UPS Service in Windows NT (you will need to purchase a special cable for this type of application. The major functions of this type of software normally include some or all of the following:

- To broadcast a warning when power fails.
- To close any open files before the battery reserves are exhausted.
- To turn off the UPS.

Note: You can connect your computer to your UPS without connecting to the communication port. In this case, your UPS warns you of a power failure by beeping, but you have to manually shut down your computer and UPS.

#### Pin Assignment:

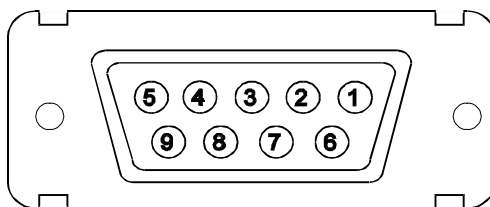

- PIN1** UPS simulates a relay opening between pin 1 and pin 4 when input power fails.
- PIN2** UPS simulates a relay closing between pin 2 and pin 4 when input power fails.
- PIN3** UPS sends an RS-232 high (12V) within 1 second after input power fails. Pin 3 is normally at RS-232 low level (-8V).
- PIN4** Common.
- PIN5** UPS simulates a relay closing when the battery inside the UPS has less than 2 minutes backup time left.
- PIN6** User sends a RS232 high level (5-15V) for 3 secs. This signal will turn off the UPS until proper input voltage returns. It can operate only if UPS is in battery mode. This pin is also used as the RS232 receiver pin (RXD).
- PIN7** Common.
- PIN8** (reserved)
- PIN9** RS232 transmitter pin (TXD).

#### Note:

1. Pin 1,2 and pin 5 are open collector outputs which must be pulled up to a common referenced supply, switch rating: +40V, 0.15A non-inductive.
2. Pin 4 and pin 7 should only be connected to ground.

## 2.9 User Configurable Setting

You can configure the operating parameters of the UPS to meet your application or geographical requirements. The dip switches on the rear panel can be used to set the voltage configuration of a 1X0V product between 110V, 115V, or 120V or of a 2X0V product between 220V, 230V, 240V.

Switch No.	1	2	3	4
120V/240V	OFF	OFF	OFF	X
115V/230V	ON	OFF	OFF	X
110V/220V	OFF	ON	OFF	X
100V/200V	OFF	OFF	ON	X

X-Don't care

Using with *OPTI-SAFE™+*, other adjustable parameters include:

- Low Voltage Transfer Point:  
for example 89/176Vac, 91/181Vac, 93/186Vac, 96/192Vac
- High Voltage Transfer Point:  
for example 141/282Vac, 145/290Vac, 148/296Vac, 151/302Vac
- Low Battery Warning Time: Configure the low battery warning to occur either two or five minutes before the UPS shutdown. Selecting two minutes allows for the longest run time, since the OPTI-SAFE+ shutdown is initiated at the low battery warning.
- Outlet On/Off Control: control the turn on/off of individual outlets or outlet groups

## 2.10 Start-Up On Battery

When ac input power is not available and the UPS is turned off, the Start-Up on Battery function can be used to power up your equipment. Do not connect too much equipment to the UPS during the Start-Up on Battery operation.

1. Disconnect the input ac power cord from the rear panel of the UPS and set the rear panel Start-Up on Battery switch to "Enable".
2. Press the on/off button on the front panel until the UPS beeps.
3. After you have finished using the UPS, set the Start-Up on Battery switch back to the "Disabled" position.

## 2.11 Data-Line Surge Suppression


The data-line surge suppression on the rear panel provides an easy way to protect a network (*RJ45*) or modem (*RJ11*) connection from hazardous spikes. Connect a 10/Base-T network cable or a single line telephone into the "Line" socket. To complete the connection, connect another network cable or telephone line into the "System" socket. The network cable and telephone line are optional accessories, which may be purchased from your local dealer.

### 3. INSTALLATION AND OPERATION

*Before installation, please read and understand the following instructions:*

#### 3.1 Unpacking and Inspection


Examine the packing carton for damage. Notify the carrier immediately if damage is observed.

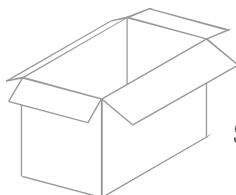

save the box

#### 3.2 Placement

1. This unit is intended for indoor use only. Although your UPS is very rugged, its internal components are not sealed from the environment.
2. The UPS must be installed in a protected environment away from heat-emitting appliances such as a radiator or heater. Do not install this product where excessive moisture is present.



3. The location should provide adequate air flow around the UPS with one inch minimum clearance on all sides for proper ventilation.

### 3.3 Determining How Much Equipment You Can Connect to Your UPS

1. Make a list of all equipment that requires protection.
2. Each piece of equipment has voltage and current (VA) ratings printed on the back label (*see examples below*). Your equipment may have a voltage rating such as 88-264V. Since the standard voltage in the United States is 120V, you should use 120V in your calculations.

ViewSonic G810  
120V 2.7A  
50 / 60 Hz  
SN: Q771515388

Computer Co  
Pentium Pro 200MHz  
120V 2.0A  
50/60 Hz  
SN: 123456


3. Multiply the voltage and current of each piece of equipment (VA requirements); for example,  $120V \times 2.7A = 324VA$ ,  $120V \times 2.0A = 240VA$ .

Add up the VA requirements for each device; for example,  $324VA + 240VA = 564VA$ .

4. Make sure that your UPS has at least as much VA capacity as your equipment requires.

### 3.4 Powering Up Your UPS

1. For 110/120V versions, connect the power cord to a verified grounded 3-wire receptacle. For 2X0V versions, please refer to Sec 3.5 .

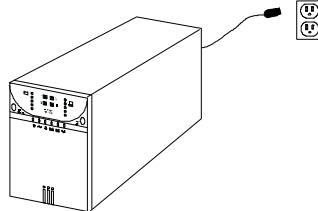


2. Power up the UPS by press the On/Off button for 3 seconds on the front panel.
3. **We recommend that you charge the battery for six (6) hours before first use of your UPS.** You may use the UPS immediately without charging the battery, but the backup time may be less than the rating. The UPS recharges the battery automatically whenever AC power is available.




### 3.5 Connecting Your Equipment to the UPS

1. For all UPS models except the 2X0V versions: connect the power cord(s) of your computer equipment to the output receptacle(s) of the UPS. Switch on the computer equipment.
2. For 2X0V versions, as shown in the illustration below: connect the input power cord of your computer equipment to the inlet of the UPS and the wall socket. Use the power cord supplied with the UPS to connect from the outlet of the UPS to your equipment. Switch on the computer equipment.

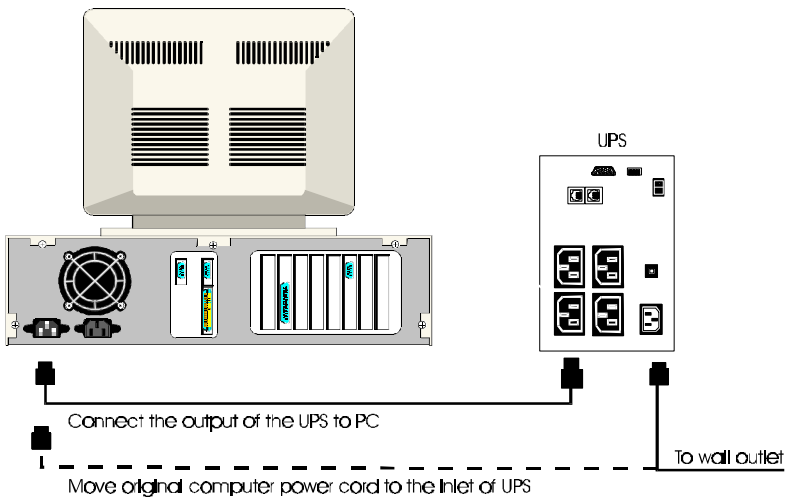

3. **DO NOT PLUG LASER PRINTERS INTO THE UPS BECAUSE THEY TYPICALLY DRAW TOO MUCH POWER**

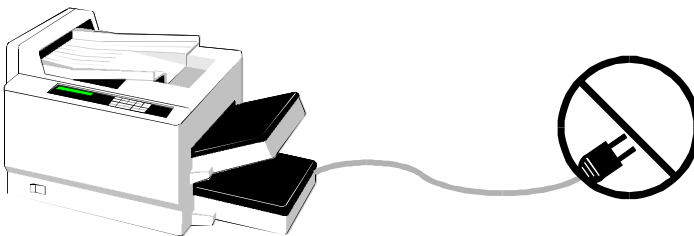



### 3.6 Operation and Functional Test

1. Plug in the AC input cord to the rear panel and turn on the UPS by pressing the "On/Off" switch for 3 seconds. The UPS will beep and the front panel Normal Mode LED will light.
2. The UPS may be overloaded if the buzzer sounds continuously and the Overload LED lights. Unplug the least critical devices, such as a printer, etc... If the buzzer is still sounding, the battery or UPS may be faulty. Contact your local dealer for assistance.

**Note:** *Backup all unsaved files before you perform the following functional test.*

3. To test the backup function, you may unplug the power cord of the UPS or simply press the Test/Silence Button on the front panel. During this test, observe that your equipment operates properly and without interruption. If you leave your UPS on continuously, it is a good idea to perform a "Test" at least once a month. You can configure *OPTI-SAFE™+* to automatically perform this periodic test.

If you unplug the power cord, all models will beep once every 4 seconds. You can press the Test/Silence Button to silence the alarm. The Battery Mode LED will light. Plug the power cord back in after a few seconds.

If you press the Test/Silence Button, the Battery Mode LED will light momentarily.

### 3.7 Storage Instructions

For extended storage in moderate climates, the battery should be charged for 12 hours every 3 months. Repeat it every 2 months in high temperature locations. Plug in the power cord. The UPS does not need to be turned on to charge.



## 4. SPECIFICATIONS

### 4.1 Electrical Specifications

Product Name	Frequency (Hz)	Rated Voltage (V)	Input / Output Current (A)
500PS	50/60	100 / 110 / 120V	5.0 / 4.5 / 4.2
		220 / 230 / 240V	2.3 / 2.2 / 2.1
800PS	50/60Hz	100 / 110 / 120V	8.0 / 7.3 / 6.7
		220 / 230 / 240V	3.6 / 3.5 / 3.3
1100PS	50/60	100 / 110 / 120V	11.0 / 10.0 / 9.2
		220 / 230 / 240V	5.0 / 4.8 / 4.6
1440PS	50/60	100 / 110 / 120V	14.4 / 13.1 / 12.0
		220 / 230 / 240V	6.5 / 6.3 / 6.0

#### Input/Output Voltage

AC Line Voltage		
Version	Lower Limit	Upper Limit
100/110/120V	89	151
220/230/240V	176	302

Output voltage regulation:  $\pm 5\%$  (*Backup Mode*),  $+10\% \sim -15\%$  (*AC Mode*)

#### Input/Output Frequency

Input	47Hz - 53 Hz / 57 Hz - 63 Hz
Output ( <i>Inverter mode</i> )	50 Hz / 60 Hz $\pm 0.1$ Hz

#### Wave Form

AC Mode	sine wave
Back Up Mode	sine wave

#### Transfer time

Power Failure AC $\Rightarrow$ Inverter	4 ms (typical)
---	----------------

**Spike/Surge protection**

Version	Continuous Voltage Vrms	Single pulse 8/20us	
		I <sub>max</sub>	Joules
100/110/120V	175V	13,000A	475
220/230/240V	385V	13,000A	190

**Data-Line Surge Suppression**

<b>Telephone Line Surge Protection</b>	+/- 6KV Peak (1.2 $\mu$ S/50 Waveform)
<b>10 Base-T Protection Let Through Rating</b>	<1% (From 6KV/125A Normal Mode Surge)

**Audible Alarm**

<b>Battery discharge at power failure</b>	Beep every 4 seconds
<b>Battery approaches final discharge</b>	Beep every second
<b>Overload</b>	Continuous buzzer
<b>UPS faulty</b>	Continuous buzzer

**Battery and Charger**

Battery type: Maintenance-free sealed-lead acid. Recharge time 6 to 8 hours typical from total discharge. (The *UPS* may be used immediately after discharge but will provide shorter backup time)

**Battery Specifications**

	500PS	800PS	1100PS	1440PS
DC voltage	24V	24V	24V	24V
Type	12V 4.5AH	12V 7AH	12V 11AH	12V 7AH
Quantity	2	2	2	4
Recharge time	4 Hours	4 Hours	4 Hours	4 Hours

**4.2 Mechanical Specifications:**

Product Name	Dimensions	Weight (Kg)1X0V / 2X0V	
		Net	Gross
<b>500PS</b>	139x427x195	11 / 12	12 / 13
<b>800PS</b>	139x427x195	14.2 / 14.5	14.2 / 14.5
<b>1100PS</b>	185x499x202	25 / 25	25 / 25
<b>1440PS</b>	185x499x202	27 / 28	28 / 29

**4.3 Environmental Specifications:**

	Operating	Storage and Shipment
<b>Temperature</b>	0 ~ 40°C (32° ~ 104°F)	-20° ~ +60°C (-4° ~ +140°F)
<b>Humidity</b>	5 ~ 90% ( <i>non-condensing</i> )	5 ~ 90% ( <i>non-condensing</i> )
<b>Altitude</b>	3,000 m (10,000 ft) ( <i>Max.</i> )	12,000 m (40,000 ft) ( <i>Max.</i> )

## 5. TROUBLESHOOTING

The TROUBLESHOOTING CHART on the next page covers most of the difficulties that you may encounter under normal working conditions. If the UPS fails to operate properly, please review the following steps before calling the repair center:

1. Is the UPS plugged into a proper working outlet?
2. Is the line voltage within the rating specified?
3. Does the circuit breaker on the rear panel need to be reset?

### 5.1 Troubleshooting Chart

Problem	Possible Cause	Corrective Action
UPS does not power up and has no audible alarm	On/Off button is not pressed long enough.	Press the On/Off button until UPS turns on
	No incoming line or very low or very high line voltage.	Check the wall socket and test the input line voltage.
	UPS input power cord is not plugged in.	Plug in input power cord.
	Rear panel circuit breaker is tripped.	Reduce the load and reset the circuit breaker.
UPS over load LED light & continuous audible alarm.	UPS is overloaded.	Remove the least critical devices from the load.
Low Replace Battery LED is light	Battery voltage is too low, or the battery is dead.	Recharge the battery for more than 4 hours and reset the UPS. If the LED is still lit, replace battery.
Site Wiring Fault LED is on.	Site wiring problem	Call an electrician to check your wiring.
Back-up time is less than the rating.	Battery is not fully charged or the battery is dead.	Recharge the battery for 6 hours and retest the backup time.
UPS is normal but the computer won't turn on.	Computer input power cord is loose or not connected.	Reconnect computer input power cord.
Software communication not working	Wrong interface cable.	Purchase the correct one from your distributor.
	The serial port of the computer has not been configured properly.	Check to see that the serial port is enabled in the CMOS settings. Also check for IRQ conflicts and make sure the settings match those of <i>OPTI-SAFE™+</i> .
	The I/O card is defective	Replace I/O card.

## 6. USER REPLACEABLE BATTERY

The Batteries inside this UPS should last from between 3 to 5 years. If you suspect that the batteries are weak, allow the UPS to charge the batteries for at least six hours and then test the backup time. If the UPS still does not provide adequate backup time, follow the procedures below to replace the batteries. Please read section 6.1 before performing the procedure in sections 6.2 or 6.3.

### 6.1 WARNING

**Servicing of batteries should always be performed or supervised by personnel knowledgeable of batteries and required precautions. Please read the following cautions before replacing the batteries. Keep unknowledgeable (i.e., unauthorized) personnel away from the batteries.**

**CAUTION:** Except for the battery, the unit contains no user serviceable parts. Repairs should be performed only by factory trained service personnel.

**CAUTION:** A battery can present a risk of electrical shock and high short-circuit current. The following precautions should be observed when working on batteries:

- (1) Remove watches, rings, or other metal objects.
- (2) Use tools with insulated handles.


**CAUTION:** Do not dispose of batteries in a fire. The batteries may explode.

**CAUTION:** Do not open or mutilate batteries. They contain an electrolyte which is toxic and harmful to the skin and eyes.


**CAUTION:** When replacing batteries, use the same number and the following type batteries: sealed Lead-Acid Maintenance Free (500PS: 4.5AH/12V x2) (800PS: 7AH/12V x2) (1100PS: 11AH/12V x2) (1440PS: 7AH/12V x4)

## 6.2 Battery Replacement Procedure


### 500PS

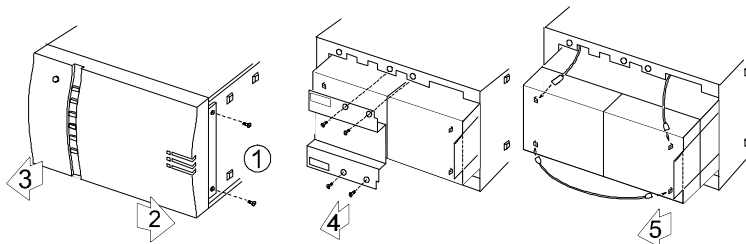

### 800PS

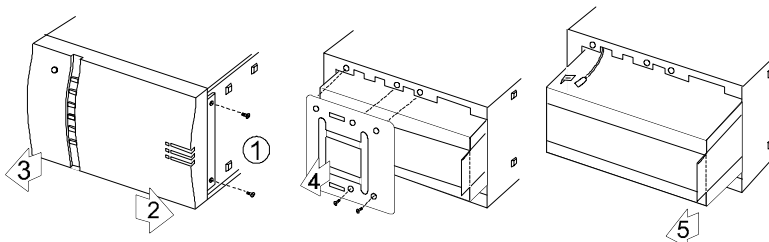

### 1100PS / 1440PS

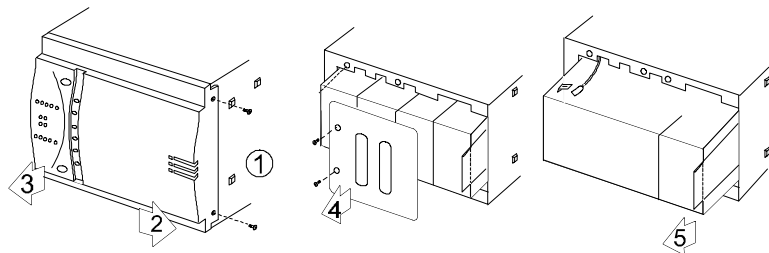

Changing the batteries in your UPS is a safe and easy procedure. Since the battery is isolated from the AC input you may leave your UPS and computer or other equipment on during the following procedure. Please note that if you choose to leave the UPS on when the battery is removed, it will not be able to power your equipment if a power failure occurs. **Please read the cautions in section 6.1 before performing the following steps.**

1. Remove the two small screws from the bottom of the front panel.
2. Gently slide the front panel off.
3. Remove the screws from the battery retaining plate.
4. Gently pull out the battery pack by the tape attached to it.
5. Disconnect the two wires connecting the battery pack to the UPS.
6. Connect the wires to the new battery pack making sure that the red wire is connected to the red battery terminal and the black wire is connected to the black battery terminal.
7. Push the new battery pack into place.
8. Reposition the battery retaining plate and tighten the screws.
9. Slide the front panel back into place.
10. Tighten the two small screws on the bottom of the front panel.