



SPACE SHUTTLE ULTRA

VERSION 3.0

SSU Operations Manual

August 19, 2015

PREFACE

Space Shuttle Ultra (SSU) is an addon for Orbiter Space Flight Simulator. The purpose of this addon is to fully simulate the NASA's Space Transportation System Program. Currently only a few elements have been completed and work on others is ongoing.

The basis for this addon was the Space Shuttle Deluxe but through adding additional subsystems and taking full advantage of the 2010 version of Orbiter, the current SSU has few similarities to the original Deluxe. Currently, SSU simulates a number of systems, displays, and procedures of the real shuttle and can be used along with real NASA Flight Data File (FDF) checklists to complete tasks. These checklists can be found at the NASA Flight Data Files web page (<http://www.nasa.gov/centers/johnson/news/flightdatafiles/index.html>), and provide a good reference for other procedures. The NASA Flight Data Files site includes checklists for all missions after STS-107, as well as generic checklists.

Additional documentation containing background information about the shuttle and its systems can be found here (<http://sourceforge.net/projects/shuttleultra/files/References/>).

Other good NASA references are the Shuttle Crew Operations Manual (SCOM), the DPS Dictionary, and the various Workbooks and Handbooks that are available on the Internet (these can also be found at the above link).

This document contains the condensed material taken from various NASA documents as well and Orbiter and SSU specific information. The goal of this document is to provide a typical Orbiter User the information need to perform basic SSU flights as well as to aid in basic custom mission creation. Separate documents will be provided for developers who would like to create a SSU compatible payloads and scenarios.

This document is formatted to look the same as the SCOM to facilitate changing from one document to the other. Additional information or clarification is presented in three formats: notes, cautions, and warnings. Notes provide amplifying information of a general nature. Cautions provide information and instructions necessary to prevent hardware damage or malfunction (not yet simulated). Warnings provide information and instructions necessary to ensure crew safety (also not simulated). The formats in which this material appears

are illustrated below.

NOTE

A barberpole APU/HYD READY TO START talkback will not inhibit a start.

CAUTION

After an APU auto shutdown, the APU FUEL TK VLV switch must be taken to CLOSE prior to inhibiting auto shutdown logic. Failure to do so can allow the fuel tank isolation valves to reopen and flow fuel to an APU gas generator bed that is above the temperature limits for safe restart.

WARNING

The FUEL CELL REAC switches on panel R1 are in a vertical column with FUEL CELL 1 REAC on top, FUEL CELL 3 REAC in the middle, and FUEL CELL 2 REAC on the bottom. This was done to allow the schematic to be placed on the panel. Because the switches are not in numerical order, it is possible to inadvertently close the wrong fuel cell reactant valve when shutting down a fuel cell.

Contents

| | | |
|----------|--|-----------|
| 1 | INSTALLATION INSTRUCTIONS | 1 |
| 2 | GENERAL DESCRIPTION | 2 |
| 2.1 | Overview | 3 |
| 2.1.1 | Nominal Mission Profile | 3 |
| 2.1.2 | Shuttle Coordinate Frame | 4 |
| 2.1.3 | Shuttle Location Codes | 4 |
| 2.2 | Orbiter and SSU | 6 |
| 2.2.1 | SSU Keyboard Commands | 6 |
| 2.2.2 | RHC/THC | 6 |
| 2.2.3 | Speedbrake/Thrust Controller | 6 |
| 2.2.4 | Camera Views | 7 |
| 2.3 | Payload Operations Overview | 9 |
| 2.4 | Extra Vehicular Activities and Docking Operations Overview | 10 |
| 3 | SSU SYSTEMS | 11 |
| 3.1 | External Tank (ET) | 12 |
| 3.1.1 | Description | 12 |
| 3.2 | Solid Rocket Boosters (SRB) | 13 |
| 3.2.1 | Description | 13 |
| 3.3 | Auxiliary Power Unit/Hydraulics (APU/HYD) | 14 |
| 3.3.1 | Description | 14 |
| 3.4 | Main Propulsion System (MPS) | 15 |
| 3.4.1 | Description | 15 |
| 3.4.2 | Space Shuttle Main Engines (SSME) | 15 |
| 3.4.3 | MPS Dump | 15 |
| 3.5 | Data Processing System (DPS) | 16 |
| 3.5.1 | GPCs | 16 |
| 3.5.2 | Multifunction Display Units (MDUs) | 16 |
| 3.6 | DPS Displays | 17 |
| 3.6.1 | ASCENT TRAJ | 17 |
| 3.6.2 | UNIV PTG | 17 |
| 3.6.3 | OMS MNVR EXEC | 17 |
| 3.6.4 | DAP CONFIG | 17 |
| 3.6.5 | ORBIT TGT | 17 |
| 3.6.6 | ENTRY TRAJ | 18 |
| 3.6.7 | VERT SIT | 18 |
| 3.6.8 | HORIZ SIT | 19 |
| 3.7 | MEDS Displays | 20 |
| 3.7.1 | A/E PFD | 20 |
| 3.7.2 | ORBIT PFD | 20 |
| 3.7.3 | OMS/MPS | 21 |
| 3.7.4 | APU/HYD | 21 |
| 3.7.5 | SPI | 21 |
| 3.8 | Launch Pads | 22 |
| 4 | FLIGHT DATA FILES | 23 |
| 5 | MISSION FILES | 24 |
| 5.1 | General | 25 |
| 5.2 | Parameter List | 26 |
| 6 | SCENARIO FILES | 27 |

| | | |
|----------|--|-----------|
| 6.1 | Space Shuttle Ultra orbiter Parameter List | 28 |
| 6.2 | External Tank Parameter List | 28 |
| 6.3 | Solid Rocket Booster Parameter List | 28 |
| 6.4 | Launch Control Center Parameter List | 28 |
| 6.5 | Launch Complex 39 Parameter List | 28 |
| 6.6 | Mobile Launcher Platform Parameter List | 28 |
| 6.7 | Space Launch Complex 6 Parameter List | 28 |
| 7 | CREDITS | 30 |

1 INSTALLATION INSTRUCTIONS

SSU requires the following addons to be installed:

1. OrbiterSound 4.0 (<http://orbiter.dansteph.com/index.php?disp=d>)
2. KSC hires tiles (<http://www.orbithangar.com/searchid.php?ID=5583>)
3. Vandenberg AFB (<http://www.orbithangar.com/searchid.php?ID=2380>)

CRT MFD needs to be enabled (Orbiter Launchpad → Modules → check *CRT* box).

Using the D3D9 graphics client is strongly recommended (although not required). The *Enable geometry instancing* option in the D3D9 Advanced Setup dialog (Orbiter Launchpad → Video → Advanced) should be unchecked.

If you encounter the error "msvcp120.dll is missing" you need to download the Microsoft Visual C++ Redistributable for Visual Studio 2013.

| |
|----------------|
| WARNING |
|----------------|

| |
|---|
| The SSU installation overwrites the default Earth.cfg file. |
|---|

2 GENERAL DESCRIPTION

Contents

| | | |
|-------|---|----|
| 2.1 | Overview | 3 |
| 2.1.1 | Nominal Mission Profile | 3 |
| 2.1.2 | Shuttle Coordinate Frame | 4 |
| 2.1.3 | Shuttle Location Codes | 4 |
| 2.2 | Orbiter and SSU | 6 |
| 2.2.1 | SSU Keyboard Commands | 6 |
| 2.2.2 | RHC/THC | 6 |
| 2.2.3 | Speedbrake/Thrust Controller | 6 |
| 2.2.4 | Camera Views | 7 |
| 2.3 | Payload Operations Overview | 9 |
| 2.4 | Extra Vehicular Activities and Docking Operations Overview | 10 |

The section provides general background information about the orbiter, its configuration and coordinate system, the nominal mission profile, and general procedures followed during a shuttle mission.

Also included in this section is keyboard commands for SSU but will not include standard Orbiter keyboard commands. See Orbiter.pdf for standard Orbiter keyboard commands.

2.1 Overview

Contents

| | | |
|-------|------------------------------------|---|
| 2.1.1 | Nominal Mission Profile | 3 |
| 2.1.2 | Shuttle Coordinate Frame | 4 |
| 2.1.3 | Shuttle Location Codes | 4 |

2.1.1 Nominal Mission Profile

SSU has reached a point of development that almost a full mission profile can be simulated.

Launch

The launch is controlled by autopilot. The autopilot targets a set of desired parameters defined in the mission file (altitude, velocity and inclination) at main engine cutoff (MECO). After MECO, the ET is jettisoned and the +Z RCS thrusters are automatically fired to translate the orbiter away from the ET.

Procedures for this phase of the mission can be found in the NASA Ascent Checklist.

Orbit Insertion and Circularization

The nominal ascent profile, referred to as "direct insertion," places the vehicle in a temporary elliptical orbit at MECO, with the perigee in the Earth's atmosphere. Orbital altitudes can vary depending on mission requirements. The crew performs an OMS burn, designated as "OMS 2", to stabilize the orbit. This burn can add anywhere between 200 to 550 fps to the vehicle's orbital velocity, as necessary.

When simulating early missions with SSU, the orbiter will perform what was known as a "standard insertion". This will place the orbiter in a heads down suborbital orbit at MECO and will require an OMS 1 burn to raise the apogee, followed by an OMS 2 burn. This ascent profile was used for the first ten missions, STS-1 through STS-41B.

After ET separation (and before the OMS 2 burn), the ET umbilical doors are closed.

Procedures for this phase of the mission can be found in the NASA Ascent Checklist.

Orbit

On orbit, the forward and aft RCS jets provide attitude control of the orbiter, as well as any minor translation

maneuvers along a given axis. The OMS engines are used to perform orbital transfers, such as those done to rendezvous with the International Space Station (ISS). Mission objectives while in orbit has ranged from ISS assembly and logistics, payload deployment and retrieval, to scientific experiments.

The procedures needed on orbit differ significantly based on the mission objectives. Checklists for STS-114 and subsequent missions can be found at the Flight Data Files page. The Orbit Operations Checklist, Orbit Pocket Checklist and PDRS Operations Checklist (all available at the Flight Data Files page) contain generic information for operations that are frequently performed (i.e. OMS burns).

During the last full day on-orbit (the day before the planned deorbit burn), the FCS checkout and RCS hot-fire tests are performed. Procedures for these tests can be found in the Orbit Operations Checklist.

Deorbit

At the completion of orbital operations, the RCS is used to orient the orbiter in a tail-first attitude. The two OMS engines are burned to lower the orbit such that the vehicle enters the atmosphere at a specific altitude and range from the landing site. The deorbit burn usually decreases the vehicle's orbital velocity anywhere from 200 to 550 fps, depending on orbital altitude. When the deorbit burn is complete, the RCS is used to rotate the orbiter's nose forward for entry. The RCS jets are used for attitude control until atmospheric density is sufficient for the pitch, roll, and yaw aerodynamic control surfaces to become effective.

Procedures for deorbit prep and the deorbit burn are in the Deorbit Prep Checklist and the Entry Checklist. Mission-specific details are in the Entry Flight Supplement.

Entry

In real life, reentry is normally controlled automatically by the Aerojet Digital Autopilot (DAP) from entry interface (EI) through Terminal Area Energy Management (TAEM), to ~ Mach 1, where the CDR takes control of the orbiter. SSU has a fully functioning entry autopilot which provides guidance and control from EI to 2000 ft (the start of the preflare). It is also possible to fly the shuttle manually. The speedbrake is usually controlled

automatically throughout entry, but can be controlled manually. See Section 2.2.3 for more details. The Heads-Up Display (HUD) becomes active at Mach 2.5. Guidance commands are displayed on the HUD from Mach 2.5 until the start of the final flare phase.

The landing gear are automatically armed at 2000 ft and deployed at 300 ft. In real life, this is done manually by the PLT.

Procedures for entry and found in the Entry Checklist. Mission-specific details are in the Entry Flight Supplement.

2.1.2 Shuttle Coordinate Frame

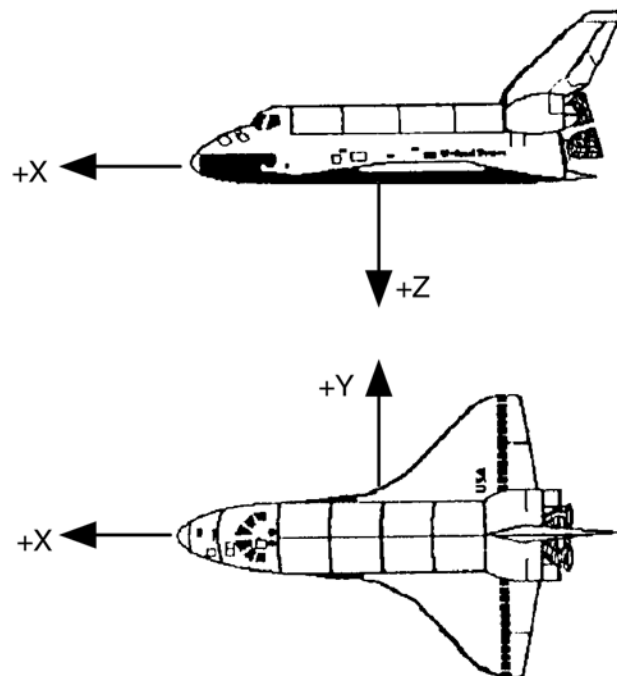


Figure 1: Body Axis Coordinate System (image from SCOM)

Figure 1 shows the shuttle Body Axis Coordinate system. This coordinate system is used in the NASA documents and checklists, as well as this manual. It should be noted that the Body Axis Coordinate frame is different from the normal Orbitersim frame.

2.1.3 Shuttle Location Codes


Orbiter location codes enable crewmembers to locate displays and controls, stowage compartments and lockers, access panels, and wall-mounted equipment in the orbiter crew compartments. The crew compartments are the flight deck, middeck, and airlock. Because of compartment functions and geometry, each has a unique location coding format.

Currently SSU only simulates the flight deck panels. Eventually panels in the middeck will be simulated and at that time the middeck location coding will be included in this manual.

A flight deck location code consists of two or three alphanumeric characters. The first character is the first letter of a flight deck surface as addressed while sitting in the commander/pilot seats. The second and third characters are numbers identifying the relative location of components on each flight deck surface. Table 1 lists the surfaces and the numbering philosophy for each surface. Figures 2 and 3 show the flight deck panels and their location codes.


| SURFACES | NUMBERING PHILOSOPHY |
|---|---|
| L - Left R - Right C - Center Console | Numbered from top to bottom, forward to aft |
| O - Overhead | Numbered from left to right, forward to aft |
| F - Forward A - Aft | Numbered left to right, top to bottom (facing the surface) |
| W - Windows | Forward (W1 through W6): numbered left to right facing forward Overhead (W7 & W8): numbered left to right facing aft Aft (W9 & W10): numbered left to right facing aft |
| S - Seats | CDR seat is S1 and PLT seat is S2 |

Table 1: Flight Deck Numbering scheme

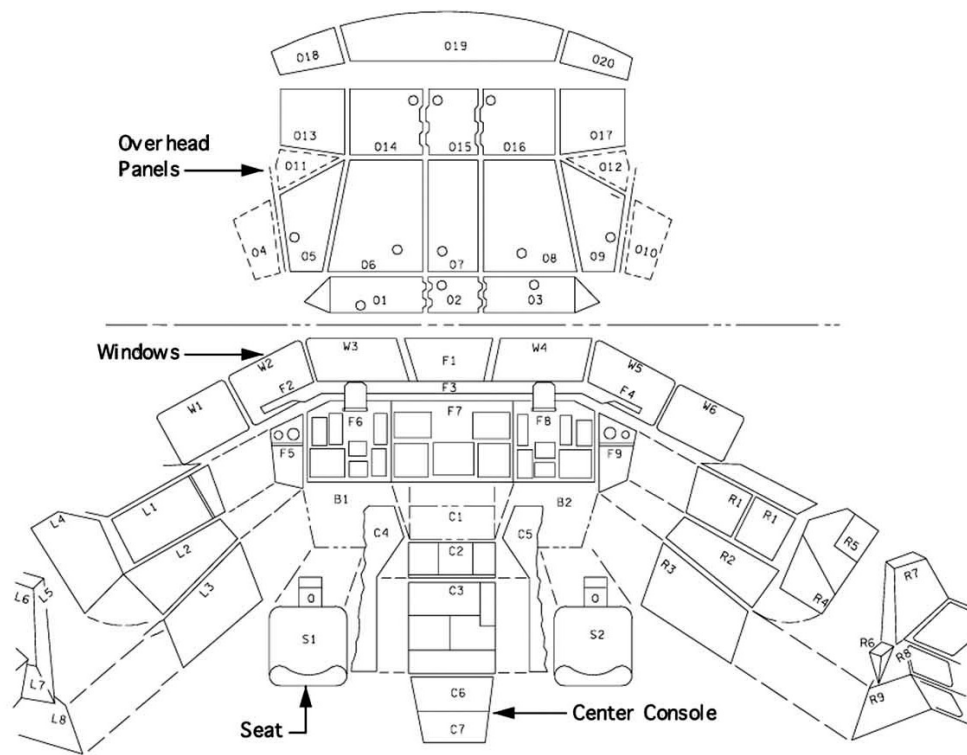

Flight Deck Location Codes (1 of 2)

Figure 2:

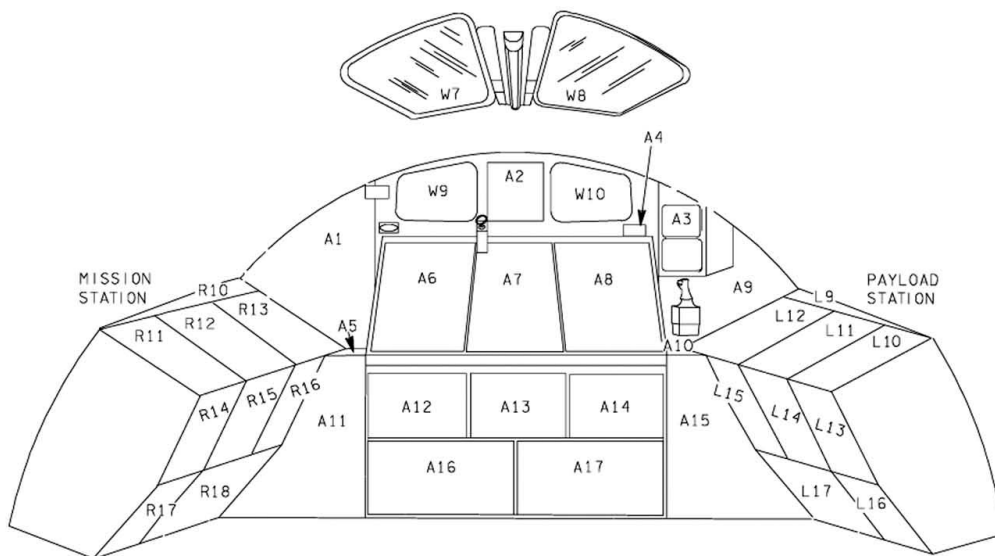

Flight Deck Location Codes (2 of 2)

Figure 3:

2.2 Orbiter and SSU

Contents

| | | |
|-------|--|---|
| 2.2.1 | SSU Keyboard Commands | 6 |
| 2.2.2 | RHC/THC | 6 |
| 2.2.3 | Speedbrake/Thrust Controller | 6 |
| 2.2.4 | Camera Views | 7 |

2.2.1 SSU Keyboard Commands

The ultimate goal of SSU is to provide a complete simulation of the Space Shuttle. This means that most of the input is done with in-simulation controls (i.e. cockpit switches, GNC keyboards, and dialog windows). This results in very few keyboard commands to operate the shuttle.

General

Ctrl+A - toggle between controlling RCS thrusters and RMS motion
Ctrl+G - arm landing gear
G - deploy landing gear
comma - open speedbrake by 5 percent
period - close speedbrake by 5 percent

Alternate Translation Commands (valid only if RCS is in Rot mode)

Left/Right Arrow - left/right translation (equivalent to 1/3 on Numpad)
Up/Down Arrow - up/down translation (equivalent to 8/2 on Numpad)
Insert/Delete - forward/aft translation (equivalent to 9/6 on Numpad)

RMS

Ctrl+Enter - grapple
Ctrl+Backspace - release
Ctrl+O - toggle between Coarse and Vern rates

2.2.2 RHC/THC

The regular Orbitersim thruster control commands (either keyboard or joystick) are used to simulate the RHC & THC. When controlling the RCS thrusters, the appropriate *FLT CNTLR PWR* switch must be on for RHC/THC inputs to be used. There are no such restrictions when controlling the RMS (although the RMS needs to be powered on before it can move).

The RHCs on the real shuttle have a "soft stop" and a "hard stop" (the mechanical limit of movement). Moving the RHC out of detent (up to the soft stop) will command either a constant rotation rate or a pulse of RCS firings to change the rotation rate by a specified amount (depending on whether *DISC RATE* or *PULSE* has been selected). Moving the RHC past the soft stop will result in continuous thruster firings in the appropriate axis. In SSU, a thruster command of <75% is considered to be within the soft stop; a thruster command of >75% is treated as RHC deflection beyond the soft stop. When using keyboard controls, the normal

keyboard controls are equivalent to full RHC deflection, while holding down the Ctrl key is equivalent to deflection within the soft stop. The THC (and the RMS controls) does not have this idea of a soft stop. When *NORM* is selected in a translational axis, the thrusters will fire continuously if the THC is moved out of detent. When *PULSE* is selected, the thrusters will fire to provide a specified ΔV (the TRAN PLS rate specified on the SPEC 20 DAP CONFIG display). When controlling the RMS, the commanded rotation/translation rates are always directly proportional to the RHC/THC deflection.

2.2.3 Speedbrake/Thrust Controller

On the real shuttle, the Speedbrake/Thrust Controller (SBTC) controls both SSME throttling during ascent and the speedbrake during entry. In Orbiter, the SBTC is simulated using the main engine key controls. The Orbitersim throttle setting is mapped to the SBTC range. During ascent, 0% Orbitersim main thrust corresponds to 67% SSME throttle; 100% Orbitersim main thrust corresponds to 104.5% (109% during some abort

cases) SSME thrust. During entry, 0% Orbitersim main thrust corresponds to the speedbrake being **fully open**; 100% Orbitersim main thrust corresponds to the speedbrake being commanded **fully closed**.

Ascent

During ascent, SSME throttling is usually controlled by autopilot; in this case, the *AUTO* portion of the *SPD BK/THROT* PBIs on Panel F2 & Panel F4 is lit. To takeover manual control, move the SBTC (by changing the Orbitersim main engine throttle) to match the current autopilot command. At this point, both *AUTO* PBIs will go out and the PLT *SBD BK/THROT MAN* PBI will be lit (the CDR PBI will not be lit; in real life, only the PLT SBTC can be used during ascent, although SSU allows the SBTC to be used from both CDR and PLT seats). A manual MECO can be commanded by pressing the NUMPAD * key (in real life, this is done by simultaneously pressing all 3 *MAIN ENGINE SHUT DOWN* pushbuttons on Panel C3; this is not possible in Orbiter).

Entry

The speedbrake is usually controlled automatically throughout entry. To take over manual control move the SBTC; the speedbrake will immediately move to the position commanded by the SBTC and the *AUTO* portion of the *SPD BK/THROT* PBIs will go out and the *MAN* PBI will be lit on either the CDR or PLT position (depending on the current VC position). Pressing the *SPD BK/THROT* PBI will put the speedbrake into *AUTO* mode again.

2.2.4 Camera Views

SSU includes the four payload bay cameras and the docking port centerline camera. The PLB cameras are controlled via their switches on panel A7U on the flight deck and are no longer controlled with a dialog window. In the PLB camera VC views, the cameras can be rotated using ALT+Arrow Key.

Navigating the Virtual Cockpit

Changing between Virtual Cockpit (VC) views is identical to the system used in the default Atlantis but with several more positions around the cockpit that we call stations. You can switch between different stations using the Ctrl+Arrow key combination (See Chart below for all combinations.) The Commander (CDR) Station is the front left seat on the flight deck, while the Pilot

(PLT) station is the right seat (while looking forward).

Table 2 is set up to show the different ways to move about the crew module. The first column is the camera position you are in and the other columns show the views you can change to using the Ctrl+Arrow key combination at the top of the table. For additional assistance in navigating the views, the name of the view is shown for a few seconds at the top of the screen during the simulation. The names in the table are identical to those that appear on-screen.

WARNING

Scenario saving during the launch phase (MM102, 103 and 104) is currently not supported by SSU.

| Cockpit View | Left | Right | Up | Down |
|-------------------------------|-------------------|-------------------|---|--|
| Commander Seat | CDR - L4 | Pilot Seat | PLB Camera A <i>or</i> ODS Camera ^c | MS Seat |
| Pilot Seat | Commander Seat | Pilot - R4 | PLB Camera D <i>or</i> ODS Camera ^c | MS2/FE Seat |
| CDR - L4 | Port Workstation | Commander Seat | PLB Camera D <i>or</i> ODS Camera ^c | MS Seat |
| Pilot - R4 | Pilot Seat | Stbd Work Station | PLB Camera D <i>or</i> ODS Camera ^c | MS2/FE Seat |
| MS Seat | Port Workstation | MS2/FE Seat | Commander Seat | PLB Camera A <i>or</i> ODS Camera ^c |
| MS2/FE Seat | MS Seat | Stbd Work Station | Pilot Seat | PLB Camera A <i>or</i> ODS Camera ^c |
| Port Work Station | RMS Work Station | Commander Seat | PLB Camera A <i>or</i> ODS Camera ^c | Mid Deck |
| Stbd Work Station | Pilot Seat | Aft Pilot Station | PLB Camera D <i>or</i> ODS Camera ^c | Aft Work Station |
| Aft Work Station | Stbd Work Station | Port Workstation | RMS Work Station | MS Seat |
| Aft Pilot Station | Stbd Work Station | RMS Work Station | PLB Camera D <i>or</i> ODS Camera ^c | Aft Work Station |
| RMS Work Station | Aft Pilot Station | Port Work Station | PLB Camera A <i>or</i> ODS Camera ^c | Aft Work Station |
| RMS EE ^a | RMS Elbow | - | - | RMS Work Station |
| RMS Elbow ^a | - | RMS EE | - | RMS Work Station |
| PLB Camera A | PLB Camera D | PLB Camera B | RMS EE ^{a,c} | RMS Work Station <i>or</i> ODS Camera ^c |
| PLB Camera B | PLB Camera A | PLB Camera C | RMS EE ^{a,c} | RMS Work Station <i>or</i> ODS Camera ^c |
| PLB Camera C | PLB Camera B | PLB Camera D | RMS EE ^{a,c} | Aft Pilot Station <i>or</i> ODS Camera ^c |
| PLB Camera D | PLB Camera C | PLB Camera A | RMS EE ^{a,c} | Aft Pilot Station <i>or</i> ODS Camera ^c |
| ODS Camera ^c | - | - | PLB Camera A | Aft Pilot Station |
| Mid Deck | - | - | Port Work Station | External Airlock ^b |
| External Airlock ^b | - | - | Mid Deck | ODS Camera ^c |

^a only when RMS is installed^b only when External Airlock is installed^c only when ODS is installed

Table 2: VC navigation

2.3 Payload Operations Overview

Payloads are attached through standard Orbiter attachment points. Figure 4 below will assist in visualizing the available attachment locations. The image on the left show the attachment locations without the ODS and the image on the rights shows the attachment locations with the ODS.

If the payload is one that is deployed and later put back into the bay (example: MPLM), be sure to take note of the SRMS joint angles and orbiter XYZ coordinates displayed on panel A8U. The mission file entries to define the payload attachment positions are defined in Section 5 of this manual. The scenario file entries needed to add payloads to SSU are covered in Section 6 of this

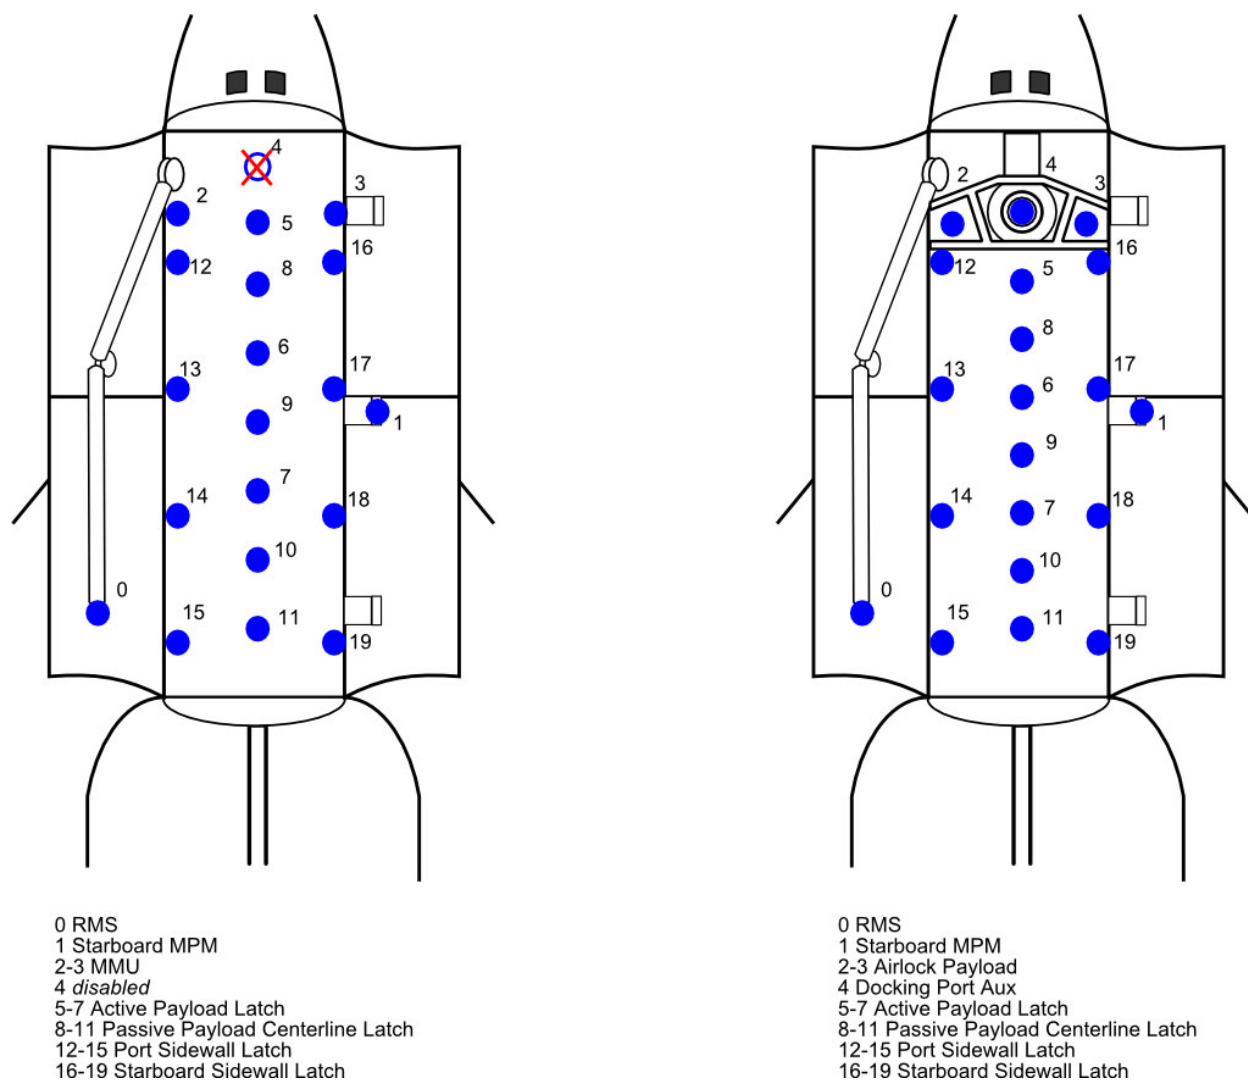


Figure 4: SSU attachment locations

2.4 Extra Vehicular Activities and Docking Operations Overview

Extra Vehicular Activity (EVA), or spacewalk, is used on some missions for work outside the shuttle, either for retrieving a satellite or most recently, for the assembly of the ISS. Independently of mission tasks, all missions have contingency EVA capability for manual payload bay door closure. EVA requires the use of an airlock, which on the shuttle can be located inside the middeck (Internal Airlock), or outside on the payload bay (External Airlock). EVA is currently not supported by SSU.

For missions requiring docking with the ISS or Mir, the orbiter need to be fitted with the Orbiter Docking System (ODS). The ODS is mounted on top of the External Airlock, and is controlled by buttons on panel A7L, allowing ODS powerup and docking ring extension and retraction.

WARNING

The next version of SSU will introduce changes to the docking port format. In addition to the docking port, there must exist an child attachment, in the same location, with the id "APAS" to achieve soft-docking. Without the attachment, docking will not be possible.

For missions requiring the ODS to be located aft of its normal position (e.g. STS-88), the Tunnel Adapter Assembly (TAA) is positioned between the External Airlock and the forward bulkhead, effectively acting as a spacer. The TAA must also be used on missions carrying the Spacelab or the SpaceHAB modules. It must be placed at the forward end of the tunnel to provide a way in/out of the airlock during an EVA.

The mission file entries to define the ODS, External Airlock and TAA are defined in Section 5 of this manual.

3 SSU SYSTEMS

Contents

| | | |
|-------|---|----|
| 3.1 | External Tank (ET) | 12 |
| 3.1.1 | Description | 12 |
| 3.2 | Solid Rocket Boosters (SRB) | 13 |
| 3.2.1 | Description | 13 |
| 3.3 | Auxiliary Power Unit/Hydraulics (APU/HYD) | 14 |
| 3.3.1 | Description | 14 |
| 3.4 | Main Propulsion System (MPS) | 15 |
| 3.4.1 | Description | 15 |
| 3.4.2 | Space Shuttle Main Engines (SSME) | 15 |
| 3.4.3 | MPS Dump | 15 |
| 3.5 | Data Processing System (DPS) | 16 |
| 3.5.1 | GPCs | 16 |
| 3.5.2 | Multifunction Display Units (MDUs) | 16 |
| 3.6 | DPS Displays | 17 |
| 3.6.1 | ASCENT TRAJ | 17 |
| 3.6.2 | UNIV PTG | 17 |
| 3.6.3 | OMS MNVR EXEC | 17 |
| 3.6.4 | DAP CONFIG | 17 |
| 3.6.5 | ORBIT TGT | 17 |
| 3.6.6 | ENTRY TRAJ | 18 |
| 3.6.7 | VERT SIT | 18 |
| 3.6.8 | HORIZ SIT | 19 |
| 3.7 | MEDS Displays | 20 |
| 3.7.1 | A/E PFD | 20 |
| 3.7.2 | ORBIT PFD | 20 |
| 3.7.3 | OMS/MPS | 21 |
| 3.7.4 | APU/HYD | 21 |
| 3.7.5 | SPI | 21 |
| 3.8 | Launch Pads | 22 |

This section discusses in greater detail each of the space shuttle systems that are currently simulated.

These are not meant to provide all information about the real orbiter system but to provide a working knowledge required to understand what is happening in the simulation. For full, detailed reading, each subsection provides references to relevant sections in the Shuttle Crew Operations Manual (SCOM) and should be read for a better understanding for that system.

3.1 External Tank (ET)

Contents

3.1.1 Description 12

3.1.1 Description

The External Tank (ET) holds the liquid hydrogen and liquid oxygen propellants for the Main Propulsion System, and serves as a backbone for the whole space shuttle vehicle.

There are 3 versions of ETs:

⇒ Standard Weight Tank (SWT), the original ET to which can be added a cover of Fire Retardant Latex (FRL) paint;

⇒ Light Weight Tank (LWT), lighter weight ET resulting

from structural changes;

⇒ Super Light Weight Tank (SLWT), further weight reductions to improve payload capability.

The scenario file entries needed to define the ET vessel are covered in Section 6 of this manual.

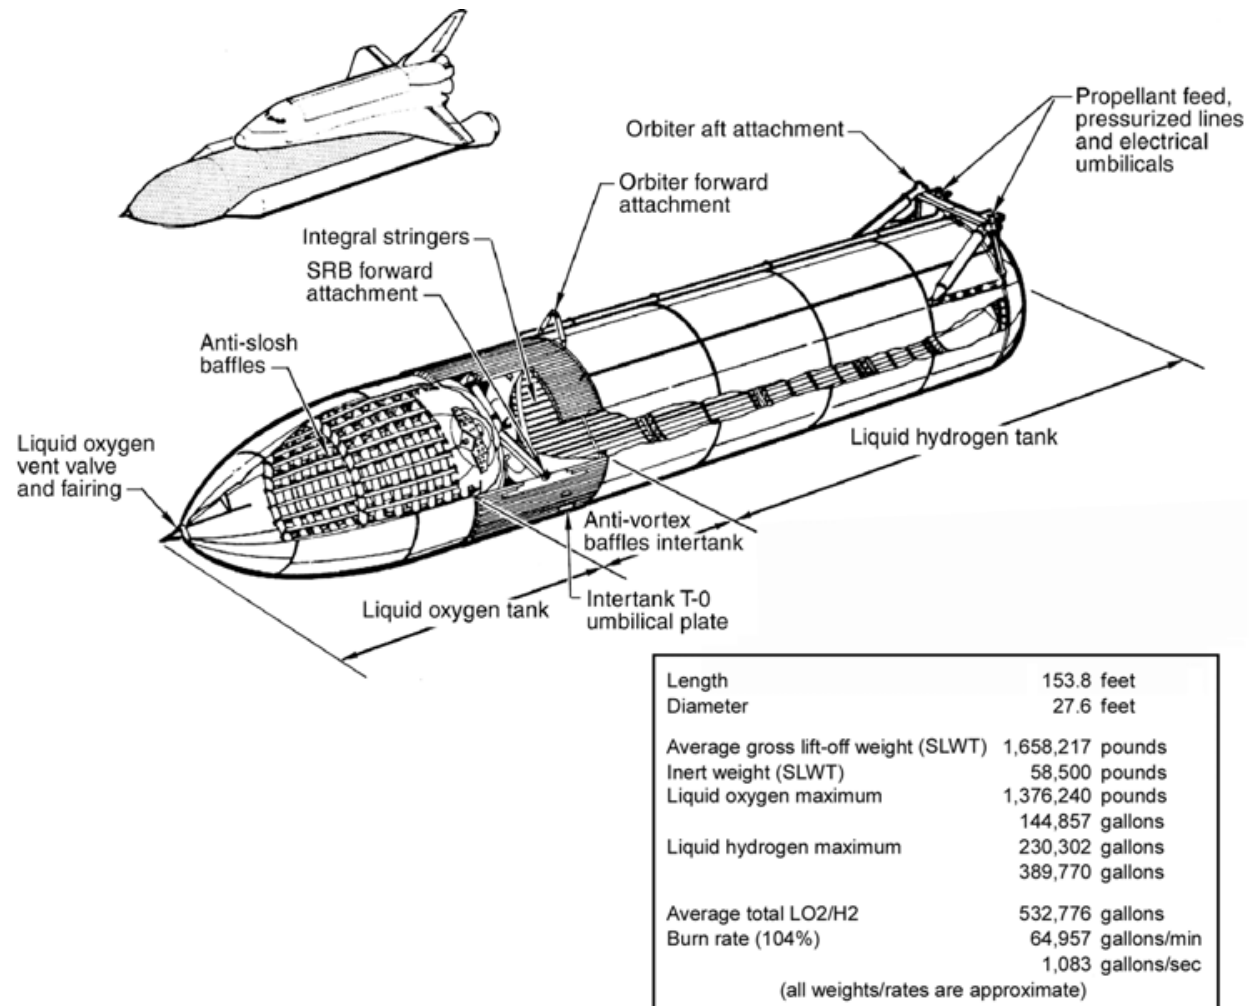


Figure 5: External Tank

3.2 Solid Rocket Boosters (SRB)

Contents

| | |
|-----------------------------|----|
| 3.2.1 Description | 13 |
|-----------------------------|----|

3.2.1 Description

The Solid Rocket Boosters (SRB) are solid propellant rockets that provide thrust during the early phases of the launch. The main component of the SRB is the Solid Rocket Motor (SRM).

There are 4 types of SRMs:

- ⇒ Standard Performance Motor (SPM), the original SRM (not yet available in SSU);
- ⇒ High Performance Motor (HPM), upgrade to the SPM;
- ⇒ Filament Wound Case (FWC), lighter case SRM planned to be used from SLC-6;
- ⇒ Redesigned Solid Rocket Motor (RSRM), developed in response to the Challenger accident.

The scenario file entries needed to define the SRB vessels are covered in Section 6 of this manual.

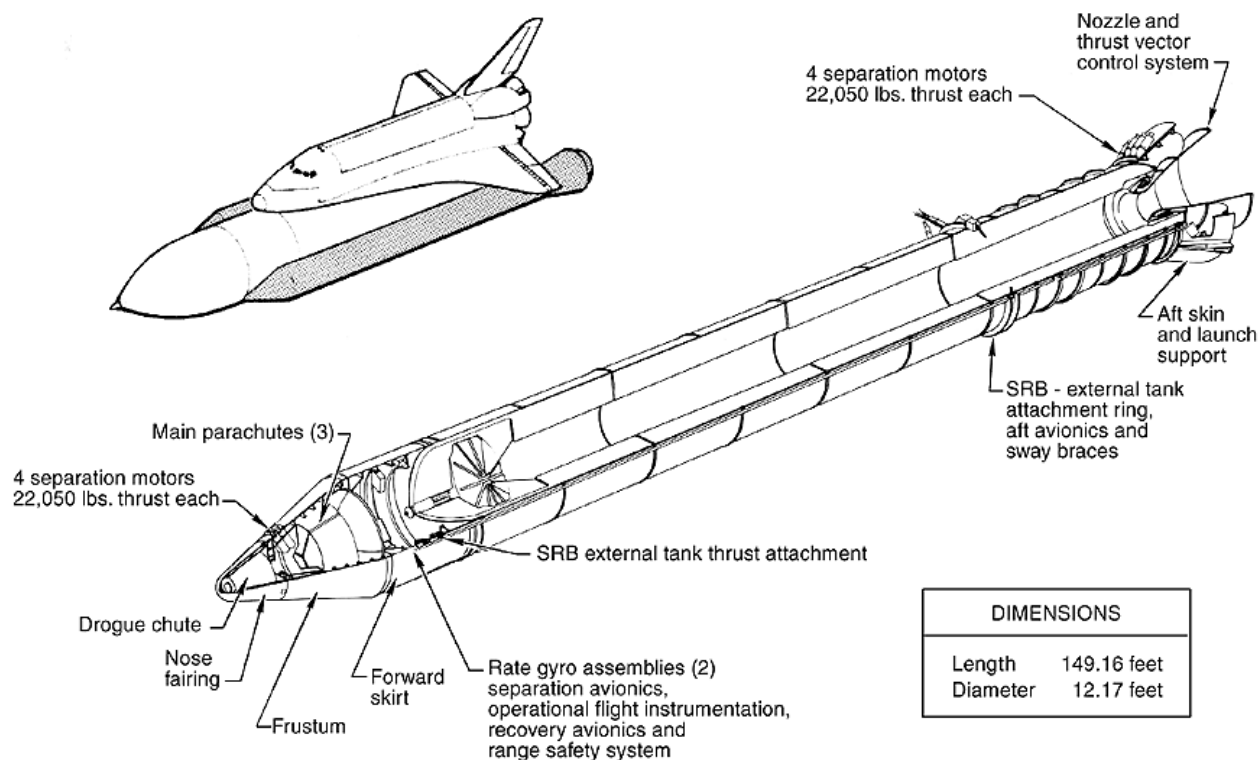


Figure 6: Solid Rocket Booster

3.3 Auxiliary Power Unit/Hydraulics (APU/HYD)

Contents

| | |
|-----------------------------|----|
| 3.3.1 Description | 14 |
|-----------------------------|----|

3.3.1 Description

The orbiter has three independent hydraulic systems. Each system provides hydraulic pressure during launch and entry to control the SSMEs, the Orbiter's aerosurfaces, and other systems. The APUs are started 5 minutes before launch and shut down shortly after MECO. The day before entry, a single APU is started for the FCS checkout. A single APU is started 5 minutes before the deorbit burn (this is done to ensure at least 1 APU is functioning before committing to entry). The remaining APUs are started 13 minutes before Entry Interface. All 3 APUs are shut down after landing.

3.4 Main Propulsion System (MPS)

Contents

| | | |
|-------|--|----|
| 3.4.1 | Description | 15 |
| 3.4.2 | Space Shuttle Main Engines (SSME) | 15 |
| 3.4.3 | MPS Dump | 15 |

3.4.1 Description

The Main Propulsion System (MPS) is composed of the External Tank that holds the propellants, 3 Space Shuttle Main Engines (SSME) that provide thrust during the whole launch, and propellant manifolds to carry the propellants from the tanks to the engines.

3.4.2 Space Shuttle Main Engines (SSME)

The SSMEs are high performance liquid propellant rocket engines located in the aft compartment of the orbiter. They can operate between 67% and 109% of their rated thrust (370000lbs), and are throttled down temporarily early in the ascent to reduce aerodynamic loads on the vehicle, and then again late in the ascent to keep the acceleration under 3g.

3.4.3 MPS Dump

Following MECO and ET separation, the MPS Dump is automatically started to vent remaining MPS propellants from the engines and the manifolds. Liquid oxygen is vented thru the SSMEs and the liquid hydrogen is vented thru the backup LH2 dump valves and thru the fill and drain valves located on the port sidewall of the orbiter.

3.5 Data Processing System (DPS)

Contents

| | |
|---|----|
| 3.5.1 GPCs | 16 |
| 3.5.2 Multifunction Display Units (MDUs) 16 | |

The DPS consists of the shuttle's General Purpose Computers (GPCs), associated systems, and the software run by the GPCs. The 11 MDUs (Multifunction Display Units) are also part of the DPS.

3.5.1 GPCs

The real shuttle has 5 identical computers. Up to 4 of the 5 GPCs run the Primary Avionics Software System (PASS). The remaining computer runs the Backup Flight System (BFS). The PASS software is further divided into 3 Major Functions: *GNC* (Guidance, Navigation & Control), *SM* (Systems Management) and *PL* (Payload) software. The *GNC* software is responsible for controlling the orbiter during flight. During critical phases of flight, such as launch and entry, multiple GPCs will run the PASS *GNC* software simultaneously; this provides redundancy if one of the GPCs fails. The *SM* software monitors various orbiter systems. The *PL* software is not used during flight. The BFS was written separately from the PASS, and implements a subset of the PASS *GNC* functions. The BFS is meant to be used in the event of a PASS failure.

The *GNC* major function is divided into multiple OPS. Each OPS represents a different phase of flight. OPS 1 is used for launch, OPS 2 is used on-orbit, and OPS 3 is used for deorbit and entry. The GPC only has enough memory to store one OPS at a time, so the PASS software is divided into multiple memory configurations. Each memory configuration contains one OPS (except for MC 1, which is used during launch, and contains both OPS 1 (launch) and OPS 6 (RTLS)). To change from one OPS to another, the appropriate memory configuration has to be loaded onto the GPCs. Each OPS is further divided into Major Modes, which relate to specific phases of the mission. For example, OPS 2 (on-orbit) has 2 Major Modes: MM 201 (orbit coast) and MM 202 (Mnvr Exec). MM 202 is used for performing OMS burn, while MM 201 is used otherwise.

At the moment, SSU only simulates the PASS *GNC* software. Also, loading different memory configurations into the GPCs is not simulated. SSU assumes only one GPC is running, and does not simulate multiple GPCs performing the same operations as part of a redundant set.

3.5.2 Multifunction Display Units (MDUs)

The shuttle originally had 4 CRT displays, and multiple analog instruments. The CRTs allowed the crew to interact with the shuttle computers, while the analog instruments displayed subsystem status and flight instruments. Starting with STS-101, the analog instruments were replaced with the MDUs. The shuttle has 11 MDUs: CDR 1 and 2 on panel F6; CRT 1, 2, and 3, and MFD 1 and 2 on panel F7; PLT 1 and 2 on panel F8; CRT 4 on panel R11; and AFD 1 in the aft station. In real life, the MDUs display either DPS displays, flight instrument displays, or subsystem status displays. The flight instruments and subsystem status displays replace the analog instruments, while the DPS displays are almost identical to the CRT displays.

In SSU, each MDU is an Orbitersim MFD. CRT MFD, which is part of SSU, simulates the shuttle MEDS displays. In the future, SSU will only display accurate displays in the MDU; some displays have not been implemented yet, and so Orbitersim MFD equivalents have to be used. Section 11 describes the DPS displays that have been implemented so far. The 3 subsystem status displays (*OMS/MPS*, *APU/HYD* and *SPI*) have been implemented in CRT MFD. The flight instrument displays are only partially implemented. All displays in the Ascent/Entry Primary Flight Display are working except for the ADI and HSI.

3.6 DPS Displays

Contents

| | | |
|-------|---------------|----|
| 3.6.1 | ASCENT TRAJ | 17 |
| 3.6.2 | UNIV PTG | 17 |
| 3.6.3 | OMS MNVR EXEC | 17 |
| 3.6.4 | DAP CONFIG | 17 |
| 3.6.5 | ORBIT TGT | 17 |
| 3.6.6 | ENTRY TRAJ | 18 |
| 3.6.7 | VERT SIT | 18 |
| 3.6.8 | HORIZ SIT | 19 |

The NASA DPS Dictionary describes each display in detail. This section lists the displays that have been implemented so far and describes the differences between the real shuttle and the SSU implementation.

3.6.1 ASCENT TRAJ



Figure 7: ASCENT TRAJ display

This display is used in MM 102 and MM 103 to monitor the vehicle's trajectory during ascent. The DROOP ALT digital output is not being driven. The ITEMS on this display are related to abort options and are not supported by SSU.

3.6.2 UNIV PTG

This display is used in MM 201, and is used to control the attitude of the orbiter. Most of the functions in this display have been implemented. ITEM 8 (TGT ID) only

supports an entry of 2 at the moment, and ITEMS 9-13 are not supported. ITEM 20 (TRK) is not supported. Finally, ITEMS 22-24 (which affect how the attitude error is displayed) are not implemented.

3.6.3 OMS MNVR EXEC

This display is used in MM 104 (OMS 1 MNVR EXEC), MM 105 (OMS 2 MNVR EXEC), MM 106 (OMS 2 MNVR COAST), MM 202 (ORBIT MNVR EXEC), MM 301 (DEORB MNVR COAST), MM 302 (DEORB MNVR EXEC) and MM303 (DEORB MNVR COAST). It is used mainly to perform OMS engine burns to change the shuttle's orbit. This display is almost completely implemented in SSU. ITEMS 28-40 (OMS gimbal check, FWD RCS dump and SURF DRIVE) have not been implemented yet.

3.6.4 DAP CONFIG

This display is used in MM 201 and MM 202, and control the Digital Autopilot (DAP) settings. In real life, there are 15 DAP A configurations and 15 DAP B configurations; at any time, 1 DAP A and 1 DAP B configuration is active, and the crew selects between DAP A and B using the PBIs on Panels C3 and A6. In SSU, there is only 1 DAP A configuration and 1 DAP B configuration. As a result, ITEMS 1 and 2 (which select the active DAP A & B configuration) are not implemented. Also ITEMS 3 and 4 (which, in real life, select a DAP configuration and load it into the EDIT column) simply select between loading DAP A and DAP B into the EDIT column.

3.6.5 ORBIT TGT

This display is used in MM 201 and MM 202 to compute rendezvous burns. In real life, the state vectors for the rendezvous target are uploaded from Mission Control. In SSU, the name of the target vessel is specified in the scenario file. The real-life ORBIT TGT display can load rendezvous targets by specifying a TGT NO (ITEM 1); in SSU, each parameter has to be set individually. SSU doesn't support the EL parameter (ITEM 6), which allows the burn TIG to be computed to match a desired elevation angle; instead, the TIG must be specified. SSU can only be used to compute the T1 burn (ITEM 28), and not the T2 burn. In real life, the T2 burn computations are not used.

| SITE | Location | PRI RWY | SEC RWY |
|------|--------------------------|---------|---------|
| 1 | KSC | KSC 15 | KSC 33 |
| 3 | Moron | MRN 20 | MRN 02 |
| 13 | Moron | MRN 20 | MRN 02 |
| 20 | St. John's International | YYT 29 | YYT 11 |
| 21 | Gander | YQX 21 | YQX 31 |
| 22 | Banjul | BYD 32 | BYD 14 |
| 23 | Lajes | LAJ 15 | LAJ 33 |
| 24 | Vandenberg AFB | VBG 30 | VBG 12 |
| 26 | Shannon | INN 06 | INN 24 |
| 29 | Istres | FMI 33 | FMI 15 |
| 32 | Diego Garcia | JDG 31 | JDG 13 |
| 33 | RAAF Amberley/Tindall | AMB 15 | PTN 14 |
| 36 | Bermuda | BDA 30 | BDA 12 |
| 38 | Easter Island | EIP 28 | EIP 10 |
| 39 | Hao Atoll | HAO 12 | HAO 30 |
| 45 | Edwards AFB | EDW 22 | EDW 04 |

Table 3: Landing Site Table

3.6.6 ENTRY TRAJ



Figure 8: ENTRY TRAJ display

3.6.7 VERT SIT



Figure 9: VERT SIT display

These displays are used during entry to monitor the vehicle's trajectory. Currently the only digital outputs being driven are the q-bar, delta-AZ and NY outputs. The guidance box and trailers are not displayed, the phugoid scale is not driven and no item entries are supported.

These displays are used during TAEM to monitor the vehicle's trajectory. Currently the only digital outputs being driven are the SPD BK, SPD BK CMD and NY outputs. The Theta scale and the E/W scale are not driven.

3.6.8 HORIZ SIT



Figure 10: HORIZ SIT display

This display is used during deorbit and entry to specify the landing site and monitor the position of the shuttle relative to the HAC and the runway. The HORIZ SIT display in SSU is simplified compared to the real life version. Currently the vertical error scale is not driven prior to A/L interface, and only ITEMS 3, 4, 6, 8, 39 and 41 are supported. ITEM 41 selects the landing site, ITEMS 3 and 4 switch between the primary and secondary runway. ITEM 6 switches between a straight-in and overhead approach, ITEM 8 switches the aim point between nominal and close, and ITEM 39 switches between nominal, short and ELS (Emergency Landing Site) speedbrake configurations for final approach. These parameters all affect the entry autopilot, so they should be set before Entry Interface (EI). Table 3 shows the list of landing sites currently supported by SSU.

3.7 MEDS Displays

Contents

| | | |
|-------|-----------|----|
| 3.7.1 | A/E PFD | 20 |
| 3.7.2 | ORBIT PFD | 20 |
| 3.7.3 | OMS/MPS | 21 |
| 3.7.4 | APU/HYD | 21 |
| 3.7.5 | SPI | 21 |

3.7.1 A/E PFD



Figure 11: A/E PFD

The A/E PFD display shows several parameters relevant to Ascent and Entry. Currently the attitude error needles are not properly driven, so they are not to be trusted. The ADI is operating in LVLH mode only with yaw zeroed, so the ADI ATT switches have no effect. During TAEM, and up until A/L interface, the vertical position error is not being driven, and the heading error is not being driven. The HSI is missing all the bearing pointers, and during launch it is not referenced from the target plane. The X-Trk value is not being driven. OMS/MPS The OMS/MPS display provides information about various pressures in the OMS and MPS systems. The OMS He TK P and N2 TK P meters are not driven.

3.7.2 ORBIT PFD

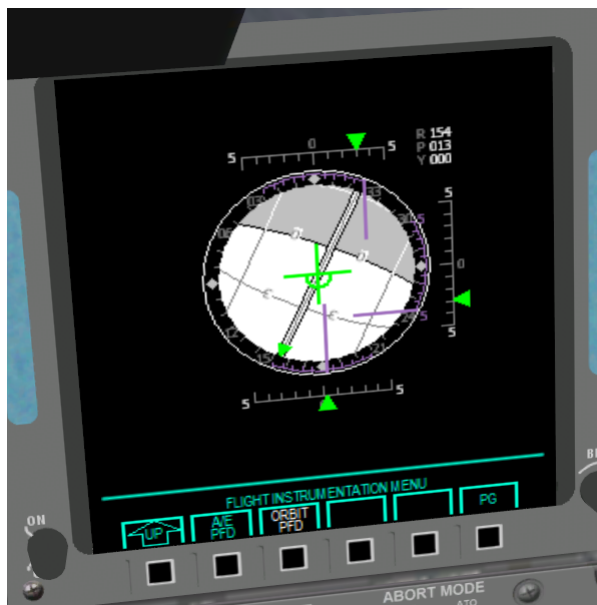


Figure 12: Orbit PFD

The Orbit PFD is used for on-orbit display of vehicle attitude. Currently the attitude error needles currently are not being driven properly, so they are not to be trusted. The ADI currently operates only in the LVLH mode with yaw zeroed, so the ADI ATT switches have no effect.

3.7.3 OMS/MPS



Figure 13: OMS/MPS display

The OMS/MPS display provides information about various pressures in the OMS and MPS systems. The OMS He TK P and N2 TK P meters are not driven.

3.7.4 APU/HYD

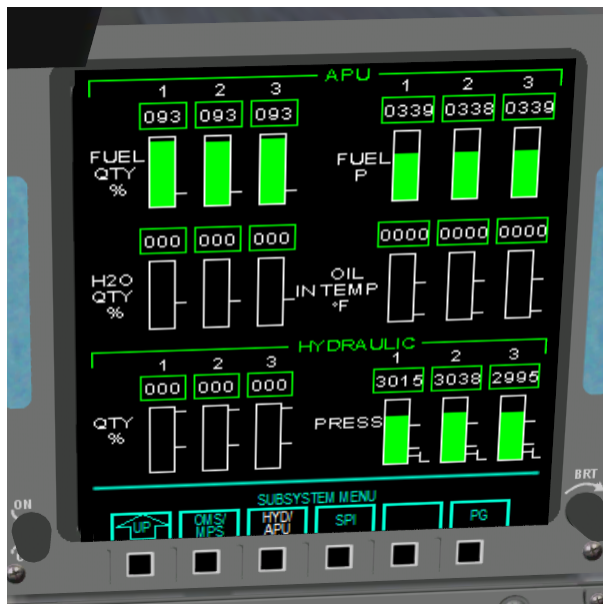


Figure 14: APU/HYD display

The APU/HYD display shows pressures, quantities and temperatures related to the hydraulic system. The APU H2O QTY %, OIL IN TEMP °F and HYDRAULIC QTY % meters are not driven.

3.7.5 SPI

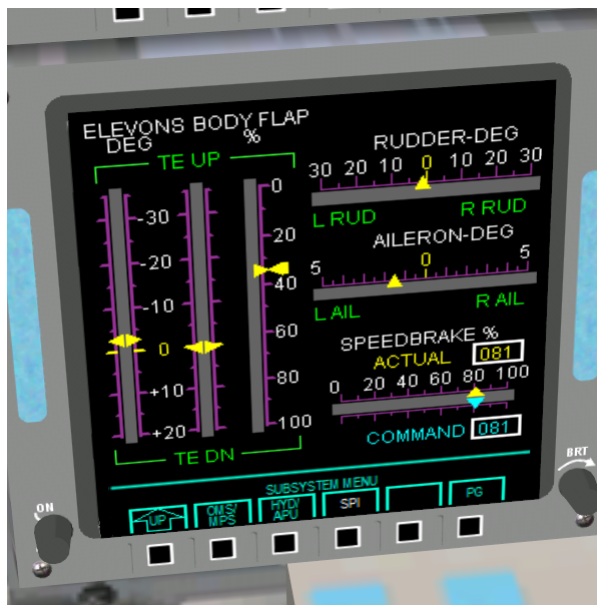


Figure 15: SPI display

The SPI display shows the position of the orbiter's aerosurfaces. The BODY FLAP % indicator is non-functional.

3.8 Launch Pads

SSU can be launched from 2 launch pads: Launch Complex 39 (LC39) at the Kennedy Space Center in Florida, or Space Launch Complex 6 (SLC-6) at the Vandenberg Air Force Base in California.

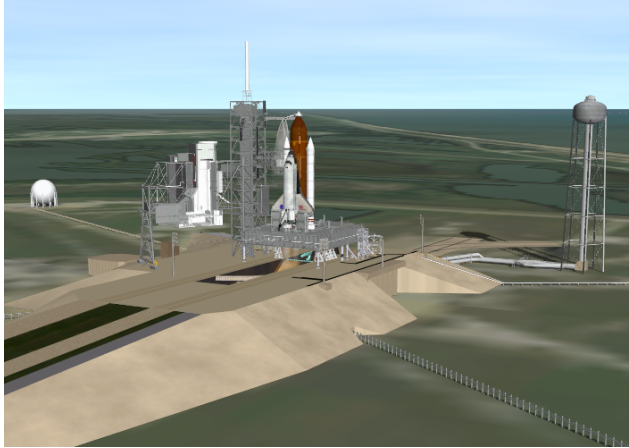


Figure 16: Launch Complex 39

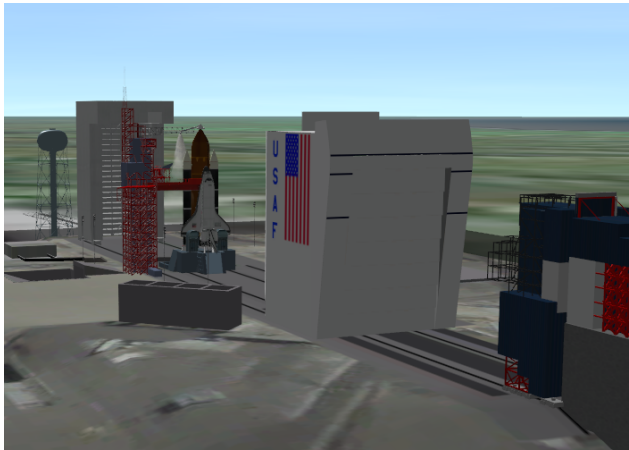


Figure 17: Space Launch Complex 6

Most pad structures are controlled automatically during the countdown, but manual control is available for all of them via a dialog window which is opened by the keys Ctrl+Space.

The scenario file entries needed to define the launch pad vessels are covered in Section 6 of this manual.

4 FLIGHT DATA FILES

5 MISSION FILES

Contents

| | | |
|-----|--------------------------|----|
| 5.1 | General | 25 |
| 5.2 | Parameter List | 26 |

5.1 General

Space Shuttle Ultra uses the mission file to specify several parameters about the vehicle and the mission. Mission files are declared in the scenario file with the entry "MISSION" followed by the name of the mission file, and must be placed in the directory <orbiter_installation\Missions\SSU>.

Parameter values are specified by having the parameter name, followed by the equal sign and then the value. Parameters not specified in the mission file will use a hardcoded default value. Here is an example mission file for simulation of mission STS-107:

```
Name=STS-107
Orbiter=Columbia
OrbiterTexture=Columbia_8thmod
TargetInc=39.000000
TargetLAN=0.000000
MECOAlt=105564.000000
MECOVel=7882.719007
MECOFPA=0.827612
UseExtAL=FALSE
UseRMS=FALSE
UseODS=FALSE
PerformRollToHeadsUp=TRUE
OMSAssistEnable=true
OMSAssistDuration=102.000000
ThrottleDown=843.333
ThrottleUp=1154.266
SILTS=TRUE
Bridgerails=2,3,7,9,11
```

The SSU installation already has some mission files for the included scenarios.

5.2 Parameter List

| Option Name | Type | Description | Default |
|------------------------|-------------------------|--|-------------|
| Name | String | Mission name | - |
| Orbiter | String | Orbiter name (also determines orbiter vehicle empty mass), valid values: Columbia, Challenger, Discovery, Atlantis, Endeavour | Atlantis |
| TargetInc | Number | Target inclination for MECO (deg) | 28.5 |
| MECOAlt | Number | Target altitude for MECO (m) | 105564 |
| MECOVel | Number | Target velocity for MECO (m/s) | 7869.635088 |
| MECOFPA | Number | Target flight path angle for MECO (deg) | 0.747083 |
| PerformRollToHeadsUp | Boolean | Roll to heads up is performed | FALSE |
| OMSAssistEnable | Boolean | OMS assist burn is performed | FALSE |
| OMSAssistDuration | Number | OMS assist burn duration (seconds) | 102 |
| MaxSSMETHrust | Number | Maximum SSME throttles commanded by GPC (%) | 104.5 |
| ThrottleDown | Number | 1 st stage SSME throttle down velocity (fps) | 792 |
| ThrottleUp | Number | 1 st stage SSME throttle up velocity (fps) | 1304 |
| UseRMS | Boolean | RMS is installed | FALSE |
| UseKUBand | Boolean | KU-Band antenna is installed | TRUE |
| UseSTBDMPM | Boolean | Starboard MPMs are installed | FALSE |
| UseODS | Boolean | ODS is installed | FALSE |
| UseExtAL | Boolean | OV has external airlock | FALSE |
| UseTAA | Boolean | Tunnel Adapter Assembly is installed | FALSE |
| AftTAA | Boolean | Tunnel Adapter Assembly is installed aft of the External Airlock | FALSE |
| HasBulkheadFloodlights | Boolean | TRUE if the FWD bulkhead floodlight and docking lights are installed | FALSE |
| HasDragChute | Boolean | OV has drag chute | TRUE |
| Bridgerails | Comma-separated numbers | Comma-separated list of numbers indicating which bridgerails are present. Each number in list should be between 0 and 12 inclusive | - |
| PayloadZPos<N> | Number | The Z coordinate (in the Orbitersim frame) of payload attachment point N. N = 5-7 → Centerline active attachment N = 8-11 → Centerline passive attachment N = 12-15 → Port attachment N = 16-19 → Starboard attachment | - |
| SILTS | Boolean | SILTS pod (OV-102 only) | FALSE |
| LogSSMEData | Boolean | Enables SSME data logging | FALSE |

Table 4: Mission File

6 SCENARIO FILES

Contents

| | | |
|-----|--|----|
| 6.1 | Space Shuttle Ultra orbiter Parameter List | 28 |
| 6.2 | External Tank Parameter List | 28 |
| 6.3 | Solid Rocket Booster Parameter List . . . | 28 |
| 6.4 | Launch Control Center Parameter List . . | 28 |
| 6.5 | Launch Complex 39 Parameter List . . . | 28 |
| 6.6 | Mobile Launcher Platform Parameter List | 28 |
| 6.7 | Space Launch Complex 6 Parameter List | 28 |

Space Shuttle Ultra uses the scenario file to define the state of the associated vessels. The next sections will provide an list of available parameters (in addition to the default Orbiter ones) for each SSU vessel.

6.1 Space Shuttle Ultra orbiter Parameter List

Space Shuttle Ultra orbiter vessel. Versions available:
SpaceShuttleUltra

TODO

6.2 External Tank Parameter List

External Tank vessel. Versions available:
ET_SWT → the original External Tank
ET_LWT → the Light Weight External Tank
ET_SLWT → the Super-Light Weight External Tank

PRPLEVEL 0:0.996000 → propellant level
ATTACHED 0:20,Atlantis → attachment to *SpaceShuttleUltra* vessel
FRL → add Fire Retardant Latex paint (only for *ET_SWT*)

6.3 Solid Rocket Booster Parameter List

Solid Rocket Booster vessel. Versions available:
SSU_LSRB and *SSU_RSRB* → SRB with the High Performance Motor SRM
SSU_LSRB_FWC and *SSU_RSRB_FWC* → SRB with the Filament Wound Case SRM
SSU_LSRB_RSRM and *SSU_RSRB_RSRM* → SRB with the Redesigned SRM

ATTACHED 0:21,Atlantis → attachment to *SpaceShuttleUltra* vessel (only for *SSU_LSRB* or *SSU_LSRB_FWC* or *SSU_LSRB_RSRM*)
ATTACHED 0:22,Atlantis → attachment to *SpaceShuttleUltra* vessel (only for *SSU_RSRB* or *SSU_RSRB_FWC* or *SSU_RSRB_RSRM*)
PRPLEVEL 1:1.000000 → propellant level
SECTION_COUNT → not used

6.4 Launch Control Center Parameter List

Launch Control Center vessel. Versions available:
SSU_LCC

LAUNCH_MJD → MJD of launch
PAD_NAME → name of the *SSU_Pad* or *SSU_Pad1985* or *SSU_SLC6* vessel
SHUTTLE_NAME → name of *SpaceShuttleUltra* vessel

6.5 Launch Complex 39 Parameter List

Launch Complex 39 vessel. Versions available:
SSU_Pad → the Launch Complex 39 for more recent launches
SSU_Pad1985 → the Launch Complex 39 for the early launches

ACCESS_ARM → animation state for the OAA
GVA → animation state for the GO2 Vent Arm
VENTHOOD → animation state for the GO2 Vent Hood
FSS_OWP → animation state for the FSS mounted OWP (only for *SSU_Pad*)
RSS_OWP → animation state for the RSS mounted OWP (only for *SSU_Pad*)
RBUS → animation state for the RBUS (only for *SSU_Pad1985*)
RSS → animation state for the RSS
FSS_GH2 → animation state for the GH2 Vent Arm
FSS_IAA → animation state for the Intertank Access Arm
EAST_SRB_SFD → animation state for the East SRB Side Flame Deflector
WEST_SRB_SFD → animation state for the West SRB Side Flame Deflector
SHUTTLE → name of *SpaceShuttleUltra* vessel

6.6 Mobile Launcher Platform Parameter List

Mobile Launcher Platform vessel. Versions available:
SSU_MLP

ATTACHED 0:0,LC39A → attachment to the *SSU_Pad* or *SSU_Pad1985* vessels
T0_UMB → animation state for the T0 umbilical

6.7 Space Launch Complex 6 Parameter List

Space Launch Complex 6 vessel. Versions available:
SSU_SLC6

ACCESS_ARM → animation state for the OAA
VENT_ARM → animation state for the GO2 Vent Arm
VENT_HOOD → animation state for the GO2 Vent Hood
GH2_VENTLINE → animation state for the GH2 Vent Arm
IAA → animation state for the Intertank Access Arm
T0_UMB → animation state for the T0 umbilical
PCR → animation state for the Payload Changeout

Room

SAB → animation state for the Shuttle Assembly Building

SABDoor → animation state for the Shuttle Assembly Building Door

MST → animation state for the Mobile Service Structure

7 CREDITS

Space Shuttle Ultra was originally based on Space Shuttle Deluxe. Large parts of the launch autopilot were copied (with minor modifications) from PEG MFD. Some of the attitude control code was derived from Attitude MFD V3. SSU also uses the KOST library. SLC-6 uses part of VandenbergAFB-2006 by Usonian.

This addon is open-source and is released under the GNU GPL.

DISCLAIMER: The SSU team is not responsible for any crashes or other problems caused by this addon. Use at your own risk.