

# ZLAC8030D Servo Driver (Special For HUB Servo Motor) RS485 Communication Instruction

Version	Description	Date
V1.00	First edition	

## CATALOGUE

1. RS485 Serial Port Settings.....	3
2. Protocol Format.....	3
2.1 Read Register Function Code 0x03.....	4
2.2 Write Single Register Function Code 0x06.....	4
2.3 Write Multiple Register Function Code 0x10.....	5
3. Control Routine.....	6
3.1 Profile Velocity Mode.....	6
3.2 Profile Position Mode.....	7
3.3 Profile Torque Mode.....	10
3.4 Emergency stop.....	11
3.5 Error and clear.....	12
3.6 External Brake.....	13
4. Address Dictionary.....	13

## 1. RS485 Serial Port Settings

RS485 communication of ZLAC8030D supports Modbus RTU protocol.


The driver address can be set to 0-127, the default address is 1.

For RS485 communication, ZLAC8030D has 6 optional baud rates: 9600, 19200, 38400, 57600, 115200, 128000. Baud rate could be set through software, its default value is 115200. (For PC software, baud rate 9600 is unserviceable)

There are 8 data bits, No Parity, Stop bit is 1.

## 2. Protoco Format

The MODBUS protocol defines a protocol data unit (PDU), which is not related to the basic communication layer. The MODBUS protocol mapping of specific bus or network, can introduce some add-on domain on the application data unit (ADU).

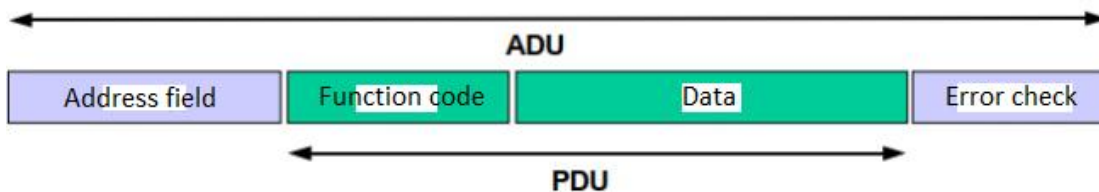

The MODBUS protocol defines three PDU:

MODBUS requests PDU = {function code + request data field}

MODBUS responds PDU = {function code + response data field}

MODBUS abnormal responses PDU = {abnormal function code + error code}

The function codes supported by ZLAC8030D are as below:

Function description	Function code	Error function code
Read multiple registers	0x03	0x83
Write single register	0x06	0x86
Writer multiple registers	0x10	0x90

Error function code shows as below:

Error code	Name	Meaning
0x01	Illegal function code	Function error
0x02	Illegal data address	Data address error
0x03	Illegal data value	Data error

## 2.1 Read Register Function Code 0x03

Eg: Send command “Read the actual speed of motor”, return “The actual speed of motor is 10RPM”

Send:

Command	Content Description
01	Driver Address
03	Function Code
20	High 8 bits of register start address
AB	Low 8 bits of register start address
00	High 8 bits of register number
02	Low 8 bits of register number
BE	High 8 bits of CRC check
2B	Low 8 bits of CRC check

Return data:

Command	Content Description
01	Driver Address
03	Function Code
04	Number of bytes read
00	High 8 bits of data 0
64	Low 8 bits of data 0
00	High 8 bits of data 1
64	Low 8 bits of data 1
BA	High 8 bits of CRC check
07	Low 8 bits of CRC check

## 2.2 Write Single Register Function Code 0x06

Eg: Write Left motor target speed 100RPM

Send:

Command	Content Description
01	Driver Address
06	Function Code
20	High 8 bits of register start address
88	Low 8 bits of register start address
00	High 8 bits of register number
64	Low 8 bits of register number
03	High 8 bits of CRC check
CB	Low 8 bits of CRC check

Return data:

Command	Content Description
01	Driver Address
06	Function Code
20	High 8 bits of register start address
88	Low 8 bits of register start address
00	High 8 bits of register number
64	Low 8 bits of register number
03	High 8 bits of CRC check
CB	Low 8 bits of CRC check

## 2.3 Write Multiple Register Function Code 0x10

Eg: Write Left motor encoder wire 1024, hall offset angle 0

Send:

Command	Content Description
01	Driver Address
10	Function Code
20	High 8 bits of register start address
30	Low 8 bits of register start address
00	High 8 bits of register number
02	Low 8 bits of register number
04	Number of bytes
04	High 8 bits of data 0
00	Low 8 bits of data 0
00	High 8 bits of data 1
00	Low 8 bits of data 1
68	High 8 bits of CRC check
4A	Low 8 bits of CRC check

Return data:

Command	Content Description
01	Driver Address
10	Function Code
20	High 8 bits of register start address
30	Low 8 bits of register start address
00	High 8 bits of register number
02	Low 8 bits of register number
4A	High 8 bits of CRC check
07	Low 8 bits of CRC check

### 3. Control Routine

#### 3.1 Profile Velocity Mode

The relevant parameter addresses are shown in the table below:

Index	Name	Description	Type	Access	Default
200Eh	Control word	Control word 0x05: emergency stop 0x06: clear fault 0x07: stop 0x08: enable	U16	RW	0
200Dh	Control mode	3: profile velocity mode	U16	RW	0
2080h	S-shape acceleration time(Left)	Acceleration time; Range: 0~32767ms;	U16	RW	500ms
2081h	S-shape acceleration time(Right)	Acceleration time; Range: 0~32767ms;	U16	RW	500ms
2082h	S-shape deceleration time(Left)	Deceleration time; Range: 0~32767ms;	U16	RW	500ms
2083h	S-shape deceleration time(Right)	Deceleration time; Range: 0~32767ms;	U16	RW	500ms
2088h	Target velocity(Left)	Target velocity in velocity mode Range: -3000~3000r/min;	I16	RW	0
2089h	Target velocity(Right)	Target velocity in velocity mode Range: -3000~3000r/min;	I16	RW	0
20ABh	Actual velocity(Left)	Actual velocity, unit: 0.1r/min	I16	RO	0
20ACh	Actual velocity(Right)	Actual velocity, unit: 0.1r/min	I16	RO	0

#### Velocity mode initialization

Description	Transmit	Receive
Velocity mode	01 06 20 0D 00 03 53 C8	01 06 20 0D 00 03 53 C8
Acceleration time(Left) to 500ms	01 06 20 80 01 F4 83 F5	01 06 20 80 01 F4 83 F5
Acceleration time(Right) to 500ms	01 06 20 81 01 F4 D2 35	01 06 20 81 01 F4 D2 35
Deceleration time(Left) to 500ms	01 06 20 82 01 F4 22 35	01 06 20 82 01 F4 22 35
Deceleration time(Right) to 500ms	01 06 20 83 01 F4 73 F5	01 06 20 83 01 F4 73 F5
Enable	01 06 20 0E 00 08 E2 0F	01 06 20 0E 00 08 E2 0F

### Left motor velocity control

Description	Transmit	Receive
Target velocity(Left) to 100RPM	01 06 20 88 00 64 03 CB	01 06 20 88 00 64 03 CB
Target velocity(Left) to -100RPM	01 06 20 88 FF 9C 43 B9	01 06 20 88 FF 9C 43 B9
Stop	01 06 20 0E 00 07 A2 0B	01 06 20 0E 00 07 A2 0B

### Right motor velocity control

Description	Transmit	Receive
Target velocity(Right) to 100RPM	01 06 20 89 00 64 52 0B	01 06 20 89 00 64 52 0B
Target velocity(Right) to -100RPM	01 06 20 89 FF 9C 12 79	01 06 20 89 FF 9C 12 79
Stop	01 06 20 0E 00 07 A2 0B	01 06 20 0E 00 07 A2 0B

### Synchronous velocity control

Description	Transmit	Receive
Target velocity to 100RPM	01 10 20 88 00 02 04 00 64 00 64 23 9C	01 10 20 88 00 02 CA 22
Target velocity to -100RPM	01 10 20 88 00 02 04 FF 9C FF 9C D2 0B	01 10 20 88 00 02 CA 22
Stop	01 06 20 0E 00 07 A2 0B	01 06 20 0E 00 07 A2 0B

## 3.2 Profile Position Mode

The relevant parameter addresses are shown in the table below:

Index	Name	Description	Type	Access	Default
200Eh	Control word	Control word 0x05: emergency stop 0x06: clear error 0x07: stop 0x08: enable 0x10: start (Synchronous) (needed in position control) 0x11: start(Left) 0x12: start(Right)	U16	RW	0
200Fh	Synchronous/asynchronous control status	0: Synchronous 1: asynchronous	U16	RW	1
200Dh	Control mode	1: Position mode( Relative position mode)	U16	RW	0

		2: Position mode( Absolute position mode)			
2080h	S-shape acceleration time(Left)	Acceleration time Range: 0-32767ms;	U16	RW	10ms
2081h	S-shape acceleration time(Right)	Acceleration time Range: 0-32767ms;	U16	RW	10ms
2082h	S-shape deceleration time(Left)	Deceleration time; Range: 0-32767ms;	U16	RW	10ms
2083h	S-shape deceleration time(Right)	Deceleration time; Range: 0-32767ms;	U16	RW	10ms
208Ah	Target position high 16 bits(Left)	Range of total pulse number in position mode operation: Relative: -0x7FFFFFFF~0x7FFFFFFF Absolute: -0x3FFFFFFF~0x3FFFFFFF	I16	RW	0
208Bh	Target position low 16 bits(Left)		I16	RW	0
208Ch	Target position high 16 bits(Right)	Range of total pulse number in position mode operation: Relative: -0x7FFFFFFF~0x7FFFFFFF Absolute: -0x3FFFFFFF~0x3FFFFFFF	I16	RW	0
208Dh	Target position low 16 bits(Right)		I16	RW	0
208Eh	Target speed(Left)	Target speed in position mode Range: 1-1000r/min;	U16	RW	120r/min
208Fh	Target speed(Right)	Target speed in position mode Range: 1-1000r/min;	U16	RW	120r/min
20A7h	Actual motor position high 16 bits(Left)	Actual motor position, unit: counts Range:-0x7FFFFFFF~0x7FFFFFFF	I16	RO	0
20A8h	Actual motor position low 16 bits(Left)		I16	RO	0
20A9h	Actual motor position high 16 bits(Right)	Actual motor position, unit: counts Range:-0x7FFFFFFF~0x7FFFFFFF	I16	RO	0
20AAh	Actual motor position low 16 bits(Right)		I16	RO	0

#### Position mode asynchronous control initialization

Description	Transmit	Receive
Asynchronous control	01 06 20 0F 00 00 B2 09	01 06 20 0F 00 00 B2 09
Position mode( Relative)	01 06 20 0D 00 01 D2 09	01 06 20 0D 00 01 D2 09
Acceleration time(Left) to 500ms	01 06 20 80 01 F4 83 F5	01 06 20 80 01 F4 83 F5
Acceleration time(Right) to 500ms	01 06 20 81 01 F4 D2 35	01 06 20 81 01 F4 D2 35



Deceleration time(Left) to 500ms	01 06 20 82 01 F4 22 35	01 06 20 82 01 F4 22 35
Deceleration time(Right) to 500ms	01 06 20 83 01 F4 73 F5	01 06 20 83 01 F4 73 F5
Target speed(Left) to 50RPM	01 06 20 8E 00 32 63 F4	01 06 20 8E 00 32 63 F4
Target speed(Right) to 50RPM	01 06 20 8F 00 32 32 34	01 06 20 8F 00 32 32 34
Enable	01 06 20 0E 00 08 E2 0F	01 06 20 0E 00 08 E2 0F

#### Left motor relative position control

Description	Transmit	Receive
Target position(Left) to 20480 pulses	01 10 20 8A 00 02 04 00 00 50 00 DE 71	01 10 20 8A 00 02 6B E2
Start(Left)	01 06 20 0E 00 11 23 C5	01 06 20 0E 00 11 23 C5
Target position(Left) to -20480 pulses	01 10 20 8A 00 02 04 FF FF B0 00 97 95	01 10 20 8A 00 02 6B E2
Start(Left)	01 06 20 0E 00 11 23 C5	01 06 20 0E 00 11 23 C5
Stop	01 06 20 0E 00 07 A2 0B	01 06 20 0E 00 07 A2 0B

#### Right motor relative position control

Description	Transmit	Receive
Target position(Right) to 20480 pulses	01 10 20 8C 00 02 04 00 00 50 00 5E 5B	01 10 20 8C 00 02 8B E3
Start(Right)	01 06 20 0E 00 12 63 C4	01 06 20 0E 00 12 63 C4
Target position(Right) to -20480 pulses	01 10 20 8C 00 02 04 FF FF B0 00 17 BF	01 10 20 8C 00 02 8B E3
Start(Right)	01 06 20 0E 00 12 63 C4	01 06 20 0E 00 12 63 C4
Stop	01 06 20 0E 00 07 A2 0B	01 06 20 0E 00 07 A2 0B

#### Position mode synchronization control initialization

Description	Transmit	Receive
Synchronous control	01 06 20 0F 00 01 73 C9	01 06 20 0F 00 01 73 C9
Position mode( Relative)	01 06 20 0D 00 01 D2 09	01 06 20 0D 00 01 D2 09
S-shape acceleration time(Left) to 500ms	01 06 20 80 01 F4 83 F5	01 06 20 80 01 F4 83 F5
S-shape acceleration	01 06 20 81 01 F4 D2 35	01 06 20 81 01 F4 D2 35

time(Right) to 500ms		
S-shape deceleration time(Left) to 500ms	01 06 20 82 01 F4 22 35	01 06 20 82 01 F4 22 35
S-shape deceleration time(Right) to 500ms	01 06 20 83 01 F4 73 F5	01 06 20 83 01 F4 73 F5
Target speed(Left) to 50RPM	01 06 20 8E 00 32 63 F4	01 06 20 8E 00 32 63 F4
Target speed(Right) to 50RPM	01 06 20 8F 00 32 32 34	01 06 20 8F 00 32 32 34
Enable	01 06 20 0E 00 08 E2 0F	01 06 20 0E 00 08 E2 0F

### Synchronous relative position control

Description	Transmit	Receive
Target positon to 20480pulses	01 10 20 8A 00 04 08 00 00 50 00 00 00 50 00 E3 2C	01 10 20 8A 00 04 EB E0
Start(Synchronous)	01 06 20 0E 00 10 E2 05	01 06 20 0E 00 10 E2 05
Target positon to -20480pulses	01 10 20 8A 00 04 08 FF FF B0 00 FF FF B0 00 FC A3	01 10 20 8A 00 04 EB E0
Start(Synchronous)	01 06 20 0E 00 10 E2 05	01 06 20 0E 00 10 E2 05
Stop	01 06 20 0E 00 07 A2 0B	01 06 20 0E 00 07 A2 0B

## 3.3 Profile Torque Mode

The relevant parameter addresses are shown in the table below;

Index	Name	Description	Type	Access	Default
200Eh	Control word	Control word 0x05: emergency stop 0x06: clear fault 0x07: stop 0x08: enable	U16	RW	0
200Dh	Control mode	4: torque mode	U16	RW	0
2086h	Torque slope (Left)	Current/1000/second; Unit: mA/S;	U16	RW	300ms
2087h	Torque slope (Right)	Current/1000/second; Unit: mA/S;	U16	RW	300ms
2090h	Target torque(Left)	Unit: mA Range: -30000~30000;	I16	RW	0
2091h	Target torque(Right)	Unit: mA Range: -30000~30000;	I16	RW	0
20ADh	Actual torque(Left)	Unit: 0.1A Range: -300~300;	I16	RO	0
20AEh	Actual torque(Right)	Unit: 0.1A Range: -300~300;	I16	RO	0

### Torque mode initialization

Description	Transmit	Receive
Torque mode	01 06 20 0D 00 04 12 0A	01 06 20 0D 00 04 12 0A
Torque rate(Left) to 500mA/s	01 06 20 86 01 F4 63 F4	01 06 20 86 01 F4 63 F4
Torque rate(Right) to 500mA/s	01 06 20 87 01 F4 32 34	01 06 20 87 01 F4 32 34
Enable	01 06 20 0E 00 08 E2 0F	01 06 20 0E 00 08 E2 0F

### Left motor torque control

Description	Transmit	Receive
Target torque(Left) to 2000mA	01 06 20 90 07 D0 81 8B	01 06 20 90 07 D0 81 8B
Target torque(Left) to -2000mA	01 06 20 90 F8 30 C1 F3	01 06 20 90 F8 30 C1 F3
Stop	01 06 20 0E 00 07 A2 0B	01 06 20 0E 00 07 A2 0B

### Right motor torque control

Description	Transmit	Receive
Target torque(Right) to 2000mA	01 06 20 91 07 D0 D0 4B	01 06 20 91 07 D0 D0 4B
Target torque(Right) to -2000mA	01 06 20 91 F8 30 90 33	01 06 20 91 F8 30 90 33
Stop	01 06 20 0E 00 07 A2 0B	01 06 20 0E 00 07 A2 0B

### Synchronous torque control

Description	Transmit	Receive
Target torque to 2000mA	01 10 20 90 00 02 04 07 D0 07 D0 60 23	01 10 20 90 00 02 4A 25
Target torque to -2000mA	01 10 20 90 00 02 04 F8 30 F8 30 11 B9	01 10 20 90 00 02 4A 25
Stop	01 06 20 0E 00 07 A2 0B	01 06 20 0E 00 07 A2 0B

## 3.4 Emergency stop

The relevant parameter addresses are shown in the table below;

Index	Name	Description	Type	Access	Default
200Eh	Control word	Control word 0x05: emergency stop 0x06: clear error 0x07: stop 0x08: enable 0x10: start (needed in position mode)	U16	RW	0

2016h	Input effective level	Bit0: Input terminal X0 control bit; Bit1: Input terminal X1 control bit. 0: Default 1: Reverse (Low level) The driver defaults to the input terminal level rising edge or high level active.	U16	RW/S	0
2017h	Input terminal X0 terminal function selection	0: undefined; 9: emergency stop (PWM function reservation)	U16	RW/S	9
2018h	Input terminal X1 terminal function selection	0: undefined; 9: emergency stop (PWM function reservation)	U16	RW/S	0

※Note: For wire connection, please refer to 《ZLAC8030D MANUAL》.

Command to emergency stop:

Description	Transmit	Receive
Emergency stop	01 06 20 0E 00 05 23 CA	01 06 20 0E 00 05 23 CA

### 3.5 Error and clear

ZLAC8030D supports overvoltage, overcurrent and other protection. All fault information can be obtained by reading address 0x20A5/0x20A6 (Left/Right drive).

Error code is as follows:

0x20A5/0x20A6	Description
0x0000	No error
0x0001	Over voltage
0x0002	Under voltage
0x0004	Over current
0x0008	Over load
0x0010	Current out of tolerance (reserved)
0x0020	Encoder out of tolerance
0x0040	Velocity out of tolerance (reserved)
0x0080	Reference voltage error
0x0100	EEPROM error
0x0200	Hall error
0x0400	Motor over temperature
0x0800	Encoder error
0x1000	Driver over temperature
0x2000	Give speed error

Fault clear:

Description	Transmit	Receive
Clear fault	01 06 20 0E 00 06 63 CB	01 06 20 0E 00 06 63 CB

### 3.6 External Brake

The related parameter addresses are as follows:

Index	Name	Description	Type	Access	Default
2019h	Output terminal effective level	Bit0: Input terminal Y0 control bit; Bit1: Input terminal B0 control bit; Bit2: Input terminal B1 control bit; 0: Default; 1: Level inversion; The driver defaults to the input terminal level rising edge or high level active;	U16	RW/S	0
201Ah	Output terminal B0 terminal function selection	Brake state 0: Open 1: Close	U16	RW/S	0
201Bh	Output terminal B1 terminal function selection	Brake state 0: Open 1: Close	U16	RW/S	0

※Note: For wire connection of external brake, please refer to 《ZLAC8030D MANUAL》. The default state of external brake is opened.

Close the brake (Left motor B0):

Description	Transmit	Receive
Close the brake of the left motor	01 06 20 1A 00 01 62 0D	01 06 20 1A 00 01 62 0D

## 4. Address Directory

Index	Name	Description	Type	Access	Default
Common constant for Left and Right motors					
2000h	Communication offline time	Driver and host communication offline time setting. Unit: ms Range: 0-32767;	U16	RW/S	0
2001h	RS485 Node ID	Range: 1~127	U16	RW/S	1

2002h	RS485 Baud Rate	1: 128000bps 2: 115200bps 3: 57600bps 4: 38400bps 5: 19200bps 6: 9600bps	U16	RW/S	2
2003h	Input signal status	2 input signal level status Bit0-Bit1: X0-X1 input level status	U16	RO	0
2004h	Out signal status	2 output signal level status Bit0: Y1 output status; Bit1-Bit2: B0-B1 output status;	U16	RO	0
2005h	Clear feedback position	Used to clear feedback position in Profile Position Mode. 0: Invalid; 1: Clear the feedback position(Left); 2: Clear the feedback position(Right); 3: Clear the feedback position(Left and right); Not saved.	U16	RW	0
2006h	In absolute position control, reset the zero point	reset the zero point. 0: Invalid; 1: Reset the zero point(Left); 2: Reset the zero point(Right); 3: Reset the zero point(Right); Not saved.	U16	RW	0
2007h	Shaft state after power on	0: Not enabled, not lock shaft; 1: Not enabled, lock shaft;	U16	RW/S	0
2008h	Maximum motor speed	Motor maximum speed Unit: r/min. Range: 1-1000 r/min.	U16	RW/S	300
2009h	Register parameter settings	0: Invalid; 1: Restore factory settings.	U16	RW	0
200Ah	CAN Node ID	Range: 1-127	U16	RW/S	1
200Bh	CAN Baud rate	0: 1000 Kbit/s 1: 500 Kbit/s 2: 250 Kbit/s 3: 125 Kbit/s 4: 100 Kbit/s	U16	RW	1
200Ch	Parking mode	0: Close 1: Open	U16	RW/S	0
200Dh	Control mode	0: Undefined	U16	RW	0

		1: Position mode(Relative) 2: Position mode(Absolute) 3: Velocity mode 4: Torque mode			
200Eh	Control word	Control word 0: Undefined 0x05: Emergency stop 0x06: Clear error 0x07: Stop 0x08: Enable 0x10:Start(Synchronous) (needed in position mode) 0x11: Start(Left) (needed in position mode) 0x12: Start(Right) (needed in position mode)	U16	RW	0
200Fh	Synchronous/asynchronous control status	0: Synchronous 1: Asynchronous	U16	RW	0
2010h	Whether store register to EEPROM	Whether the value of the communication write function code is updated to the EEPROM. 0: Invalid 1: Store parameters have RW attribution to EEPROM	U16	RW	0
2011h	Quick stop control	How driver process when receive quick stop command 5: Stop 6: Quick stop(with deceleration time ) 7: Quick stop(without deceleration time)	U16	RW	5
2012h	Close operation control	How driver process when receive stop command 0: Invalid; 1: Stop normally, switch to “ready to switch on” state	U16	RW	1
2013h	Disable control	How driver process when receive disable command 0: Invalid 1: Stop(Switch to switch on status)	U16	RW	1
2014h	Halt control	How driver process when receive Halt command 1: Stop(operation enabled)	U16	RW	1

		2: Quick stop with deceleration time (operation enable) 3: Quick stop without deceleration time (operation enable)			
2016h	Input effective level	Bit0: Input terminal X0 control bit; Bit1: Input terminal X1 control bit; Bit2: AD Input control bit; Bit3-Bit5: reserved; 0: Default 1: Reverse The driver defaults to the input terminal level rising edge or high level active.	U16	RW/S	0
2017h	Input terminal X0 terminal function selection	0: None 1-8: NC 9: Emergency stop	U16	RW/S	9
2018h	Input terminal X1 terminal function selection	0: None 9: Emergency stop (PWM function is reserved)	U16	RW/S	0
2019h	Output effective level	Bit0: Output terminal Y1 control bit; Bit1: Output terminal B0 control bit; Bit2: Output terminal B1 control bit; 0: Default 1: Reverse The driver defaults to the input terminal level rising edge or high level active;	U16	RW/S	0
201Ah	Output terminal B0 terminal function selection	Brake state 0: Open brake 1: Close brake	U16	RW/S	0
201Bh	Output terminal B1 terminal function selection	Brake state 0: Open brake 1: Close brake	U16	RW/S	0
201Ch	Output terminal Y1 terminal function selection	0: undefined; 1: Alarm signal; 2: Drive status signal; 3: Target position reached signal (reserved);	U16	RW/S	0



201Dh	NC	NC	U16	RW/S	0
201Eh	Driver temperature protection threshold	Unit 0.1° C; Range: 0-1200	U16	RW/S	800
201Fh	Alarm PWM processing method	0: close; 1: open	U16	RW/S	0
2020h	Overload processing method	0: close; 1: open	U16	RW/S	0
2021h	I/O emergency stop processing mode	0: Lock shaft 1: Release shaft	U16	RW/S	0
2022h	Given speed resolution	Set value range: 1-A 1: Speed resolution 1RPM 2: Speed resolution 0.5RPM 3: Speed resolution 1/3 RPM 4: Speed resolution 0.25RPM 5: Speed resolution 0.2RPM 6: Speed resolution 1/6RPM 7: Speed resolution 1/7RPM 8: Speed resolution 0.125RPM 9: Speed resolution 1/9RPM A:Speed resolution 0.1RPM	U16	RW/S	1
2023h	Regen resistance value	Unit 0.1Ω; Range 0-1000 (*0.1)	U16	RW/S	50
2024h	Regen resistance power	Unit W; Range 0-1000	U16	RW/S	100
2025h	Regen opening voltage	Unit 0.1V; Range 240-750 (*0.1)	U16	RW/S	700
2026h	Regen close voltage	Unit 0.1V; Range 210-720 (*0.1)	U16	RW/S	620
2027h	Regen function control	Brake open/close 0: close 1: open	U16	RW/S	1
2028h	Speed exceeds the tolerance	0: close 1: open	U16	RW/S	1
2029h	Default direction	0: CW 1: CCW	U16	RW/S	0
<b>Left motor parameter</b>					
2030h	Encoder line	Range: 0-4096	U16	RW/S	4096
2031h	Hall offset angle	Unit: 1° Range: -360-+360	I16	RW/S	0
2032h	Overload factor	Unit: % Range: 0-300	U16	RW/S	200
2033h	Rated current	Rated current output by the driver Unit: 0.1A	U16	RW/S	200

		Range: 0-300			
2034h	Max current	Rated current output by the driver Unit: 0.1A Range: 0-600	U16	RW/S	600
2035h	Overload protection time	Driver overload protection time Unit: 10ms Range: 0-6553	U16	RW/S	300
2036h	Position following error threshold	Encoder tolerance threshold Unit: 10counts Range: 1-6553	U16	RW/S	1638
2037h	Velocity smoothing factor	Range: 0-30000	U16	RW/S	50
2038h	Cl Kp	Range: 0-30000	U16	RW/S	30000
2039h	Cl Ki	Range: 0-30000	U16	RW/S	600
203Ah	Feedforward output smoothing factor	Range: 0-30000	U16	RW/S	100
203Bh	Torque output smoothing factor	Range: 0-30000	U16	RW/S	100
203Ch	Velocity Loop Kp	Range: 0-30000	U16	RW/S	80
203Dh	Velocity Loop Ki	Range: 0-30000	U16	RW/S	3000
203Eh	Velocity Loop Kf	Range: 0-30000	U16	RW/S	1000
203Fh	Position Loop Kp	Range: 0-30000	U16	RW/S	200
2040h	Position Loop Kf	Range: 0-30000	U16	RW/S	200
2043h	Initial velocity(Velocity mode)	Initial velocity in velocity mode Unit: r/min; Range: 1-250/min;	U16	RW/S	1r/min
2044h	Initial velocity(Position mode)	Initial velocity in position mode Range: 1-250/min;	U16	RW	1r/min
2045h	Motor poles	Range: 4-64	U16	RW	20
2046h	Over temperature threshold	Unit: 0.1° C; Range: 0-1200	U16	RW	800
2047h	Velocity observer coefficient 1	0-30000	U16	RW	1000
2048h	Velocity observer coefficient 2	0-30000	U16	RW	750
2049h	Velocity observer coefficient 3	0-30000	U16	RW	350
204Ah	Velocity observer coefficient 4	0-30000	U16	RW	1000
Right motor parameter					

2060h	Encoder line	Range: 0-4096	U16	RW/S	4096
2061h	Hall offset angle	Unit: 1° Range: -360~+360	I16	RW/S	0
2062h	Overload factor	Unit: % Range: 0-300	U16	RW/S	200
2063h	Rated current	Rated current output by the driver Unit: 0.1A Range: 0-300	U16	RW/S	200
2064h	Maximum current	Rated current output by the driver Unit: 0.1A Range: 0-600	U16	RW/S	600
2065h	Overload protection time	Driver overload protection time Unit: 10ms Range: 0-6553	U16	RW/S	300
2066h	Position following error threshold	Encoder tolerance threshold Unit: 10counts Range: 1-6553	U16	RW/S	1638
2067h	Velocity smoothing factor	Range: 0-30000	U16	RW/S	50
2068h	Current Loop Kp	Range: 0-30000	U16	RW/S	3000
2069h	Current Loop Ki	Range: 0-30000	U16	RW/S	600
206Ah	Feedforward output smoothing factor	Range: 0-30000	U16	RW/S	100
206Bh	Torque output smoothing factor	Range: 0-30000	U16	RW/S	100
206Ch	Velocity Loop Kp	Range: 0-30000	U16	RW/S	80
206Dh	Velocity Loop Ki	Range: 0-30000	U16	RW/S	3000
206Eh	Velocity Loop Kf	Range: 0-30000	U16	RW/S	1000
206Fh	Position Loop Kp	Range: 0-30000	U16	RW/S	200
2070h	Position Loop Kf	Range: 0-30000	U16	RW/S	200
2073h	Initial velocity(Velocity mode)	Initial velocity in velocity mode Unit: r/min; Range: 1-250/min;	U16	RW/S	1r/min
2074h	Initial velocity(Position mode)	Initial velocity in position mode Range: 1-250/min;	U16	RW	1r/min
2075h	Poles of motor	Range: 4-64	U16	RW/S	20
2076h	Over temperature threshold	Unit: 0.1° C; Range: 0-1200	U16	RW/S	800
2077h	Velocity observer coefficient 1	0-30000	U16	RW	1000

2078h	Velocity observer coefficient 2	0-30000	U16	RW	750
2079h	Velocity observer coefficient 3	0-30000	U16	RW	350
207Ah	Velocity observer coefficient 4	0-30000	U16	RW	1000
<b>Control parameter</b>					
2080h	S-shape acceleration time(Left)	Acceleration time Range: 0-32767ms	U16	RW	10ms
2081h	S-shape acceleration time(Right)	Acceleration time Range: 0-32767ms	U16	RW	10ms
2082h	S-shape deceleration time(Left)	Deceleration time Range: 0-32767ms	U16	RW	10ms
2083h	S-shape deceleration time(Right)	Deceleration time Range: 0-32767ms	U16	RW	10ms
2084h	Deceleration time of quick stop(Left)	Deceleration time Range: 0-32767ms	U16	RW	10ms
2085h	Deceleration time of quick stop(Right)	Deceleration time Range: 0-32767ms	U16	RW	10ms
2086h	Torque slope(Left)	Current/1000/second Unit: mA/S	U16	RW	300ms
2087h	Torque slope(Right)	Current/1000/second Unit: mA/S	U16	RW	300ms
2088h	Target velocity(Left)	Target velocity in velocity mode Range: -3000~3000r/min	I16	RW	0
2089h	Target velocity(Right)	Target velocity in velocity mode Range: -3000~3000r/min	I16	RW	0
208Ah	Target position high 16 bits(Left)	Range of total pulse number in position mode operation; Relative: -0x7FFFFFFF~0x7FFFFFFF Absolute: -0x3FFFFFFF~0x3FFFFFFF	I16	RW	0
208Bh	Target position low 16 bits(Left)		I16	RW	0
208Ch	Target position high 16 bits(Right)	Range of total pulse number in position mode operation; Relative: -0x7FFFFFFF~0x7FFFFFFF Absolute: -0x3FFFFFFF~0x3FFFFFFF	I16	RW	0
208Dh	Target position low 16 bits(Right)		I16	RW	0
208Eh	Max speed(Left)	Max speed in position mode Range: 1-1000r/min;	U16	RW	120r/min
208Fh	Max speed(Right)	Max speed in position mode	U16	RW	120r/min

		Range: 1-1000r/min;			
2090h	Target torque(Left)	Unit: mA Range: -30000~30000;	I16	RW	0
2091h	Target torque(Right)	Unit: mA Range: -30000~30000;	I16	RW	0
<b>Read only parameter</b>					
20A0h	Software version	Default	U16	RO	-
20A1h	Bus voltage	Unit: 0.01V	U16	RO	0
20A2h	Status word	Driver controls motor movement: L-bit7, bit6 R-bit15, bit14 00 00: Shaft release 00 40: Shaft lock 00 80: Emergency stop 00 C0: Alarm  Motor running status: bit0 L-bit0, R-bit8 0: Stop 1: Run	U16	RO	0
20A3h	Hall input state	Range: 0-7 If 0 or 7 occurs, hall error High 8 bits(Left) Low 8 bits(Right)	U16	RO	0
20A4h	Motor temperature	Unit: 1° C; Range: -55~120 High 8 bits(Left) Low 8 bits(Right)	U16	RO	-
20A5h	Error code(Left)	Driver error conditions defined by manufacturer. 0000h: No error 0001h : Over voltage 0002h : Under voltage 0004h: Over current 0008h: Over load 0010h: Current out of tolerance(reserved) 0020h: Encoder out of tolerance 0040h: Velocity out of tolerance(reserved) 0080h : Reference voltage error 0100h: EEPROM error 0200h: Hall error 0400h: Motor temperature over temperature 0800h: Encoder error	U16	RO	0

		1000h: high driver temperature. 2000h: Speed setting error (the given speed cannot exceed the rated speed)			
20A6h	Error code(Right)	Driver error conditions defined by manufacturer. 0000h: No error 0001h : Over voltage 0002h : Under voltage 0004h: Over current 0008h: Over load 0010h: Current out of tolerance(reserved) 0020h: Encoder out of tolerance 0040h: Velocity out of tolerance(reserved) 0080h : Reference voltage error 0100h: EEPROM error 0200h: Hall error 0400h: Motor temperature over temperature 0800h: Encoder error 1000h: high driver temperature. 2000h: Speed setting error (the given speed cannot exceed the rated speed)	U16	RO	0
20A7h	Actual motor position high 16 bits(Left)	Actual motor position, unit: counts Range: -0x7FFFFFFF~0x7FFFFFFF	I16	RO	0
20A8h	Actual motor position low 16 bits(Left)		I16	RO	0
20A9h	Actual motor position high 16 bits(Right)	Actual motor position, unit: counts Range: -0x7FFFFFFF~0x7FFFFFFF	I16	RO	0
20AAh	Actual motor position low 16 bits(Right)		I16	RO	0
20ABh	Actual velocity(Left)	Actual velocity, unit: 0.1r/min	I16	RO	0
20ACh	Actual velocity(Right)	Actual velocity, unit: 0.1r/min	I16	RO	0
20ADh	Actual torque(Left)	Unit: 0.1A Range: -300~300;	I16	RO	0

20AEh	Actual torque(Right)	Unit: 0.1A Range: -300~300;	I16	R0	0
20AFh	Software connected status	01			
20B0h	Driver temperature	Unit: 0.1° C; Range: -550~1200.	I16	R0	-
<p>Note:</p> <p>U16 means unsigned 16 bits; I16 means signed 16 bits; U32 means unsigned 32 bits; I32 means signed 32 bits.</p>					