



Monitor & Control (M&C) Interface Control Document (ICD) for the GSFC DTN Bundle Protocol Node (BPNode)

NASA GSFC DTN Project 450.2-DTN-MCICD

Version 7.0, August 2025

Table of Contents

| | |
|--|----|
| Preface | 1 |
| Change History Log | 2 |
| Approvals | 3 |
| 1. Scope | 4 |
| 1.1. Introduction | 4 |
| 1.2. Build 7.0 Release Notes | 4 |
| 1.3. Software Context | 5 |
| 1.4. Configuration Management | 6 |
| 1.5. Requirements Verification | 6 |
| 1.6. Interface Characteristics and Functions | 6 |
| 1.7. Space Packets | 7 |
| 1.8. DTN-Specific Field Types | 7 |
| 2. Documentation | 9 |
| 2.1. Reference Documents | 9 |
| 3. Directives | 10 |
| 3.1. Startup Directives | 10 |
| 3.1.1. Add All Applications* | 10 |
| 3.1.2. Start All Applications* | 11 |
| 3.1.3. Verify Bundle Storage* | 11 |
| 3.1.4. Initialize Bundle Storage* | 11 |
| 3.1.5. Verify Bundle Metadata* | 11 |
| 3.1.6. Rebuild Bundle Metadata* | 12 |
| 3.1.7. Clear Volatile* | 12 |
| 3.1.8. Reload Saved Data* | 12 |
| 3.2. Counter Directives | 12 |
| 3.2.1. Reset All Counters | 12 |
| 3.2.2. Reset Counter | 13 |
| 3.2.3. Reset Source Counters* | 13 |
| 3.2.4. Reset Bundle Counters | 13 |
| 3.2.5. Reset Error Counters | 14 |
| 3.3. Application Directives | 14 |
| 3.3.1. Add Application | 14 |
| 3.3.2. Remove Application | 14 |
| 3.3.3. Set Registration State* | 15 |
| 3.3.4. Start Application | 15 |
| 3.3.5. Stop Application | 15 |
| 3.4. Policy Directives | 16 |
| 3.4.1. Add Authorized Sources* | 16 |

| | |
|---|----|
| 3.4.2. Remove Authorized Sources* | 16 |
| 3.4.3. Add Authorized Custody Sources* | 16 |
| 3.4.4. Remove Authorized Custody Sources* | 17 |
| 3.4.5. Add Authorized Custodians* | 17 |
| 3.4.6. Remove Authorized Custodians* | 17 |
| 3.4.7. Add Authorized Report-to EID* | 17 |
| 3.4.8. Remove Authorized Report-to EID* | 17 |
| 3.4.9. Add Latency* | 18 |
| 3.4.10. Remove Latency* | 18 |
| 3.5. Contact Directives | 18 |
| 3.5.1. Set Up | 18 |
| 3.5.2. Start | 19 |
| 3.5.3. Stop | 19 |
| 3.5.4. Tear Down | 19 |
| 3.6. MIB Directives | 20 |
| 3.6.1. Add MIB Array Key* | 20 |
| 3.6.2. Remove MIB Array Key* | 20 |
| 3.6.3. Set MIB Item | 20 |
| 3.7. Storage Directives | 21 |
| 3.7.1. Add Storage Allocation* | 21 |
| 3.7.2. Remove Storage Allocation* | 21 |
| 3.7.3. Perform Self-Test* | 21 |
| 3.8. Routine Directives | 22 |
| 3.8.1. Wakeup | 22 |
| 3.8.2. Send Node MIB Configuration HK | 22 |
| 3.8.3. Send Per Source MIB Configuration HK | 22 |
| 3.8.4. Send Node MIB Counters HK | 22 |
| 3.8.5. Send Per Source MIB Counters HK | 23 |
| 3.8.6. Send Storage HK | 23 |
| 3.8.7. Send Channel/Contact Status HK | 23 |
| 3.8.8. Send Node MIB Reports HK | 23 |
| 3.8.9. Noop | 24 |
| 4. Telemetry | 25 |
| 4.1. Node MIB Configuration | 26 |
| 4.2. Per-Source MIB Configuration* | 26 |
| 4.3. Node MIB Counters | 28 |
| 4.4. Per-Source MIB Counters | 34 |
| 4.5. Node MIB Reports | 38 |
| 4.6. Storage Telemetry | 39 |
| 4.7. Channel/Contact Status Telemetry | 40 |
| 4.7.1. Channel Status Data | 40 |

| | |
|--|----|
| 4.7.2. Contact Status Data | 40 |
| 5. Tables | 41 |
| 5.1. Compressed Reporting | 41 |
| 5.2. Channel Configuration | 42 |
| 5.3. ADU Proxy Configuration | 43 |
| 5.4. Contact Configuration | 44 |
| 5.5. MIB Node Configuration | 45 |
| 5.6. MIB Source Configuration* | 46 |
| 5.7. Policy by EID Pattern Authorization Tables* | 47 |
| 5.8. Source Authorization Policy* | 48 |
| 5.9. Custodian Authorization Policy* | 48 |
| 5.10. Report-To-EID Authorization Policy* | 48 |
| 5.11. Source Latency Policy* | 48 |
| 5.12. Storage* | 48 |
| 6. Events | 50 |
| 6.1. BPNode Main Task Events | 50 |
| 6.2. BPNode ADU In Task Events | 52 |
| 6.3. BPNode ADU Out Task Events | 53 |
| 6.4. BPNode CLA In Task Events | 54 |
| 6.5. BPNode CLA Out Task Events | 55 |
| 6.6. BPNode Generic Worker Task Events | 56 |
| 6.7. BPLib Node Configuration Events | 57 |
| 6.8. BPLib Admin Statistics (AS) Events | 62 |
| 6.9. BPLib Storage Events | 63 |
| 6.10. BPLib Bundle Interface Events | 63 |
| 6.11. BPLib Payload Interface (PI) Events | 64 |
| 6.12. BPLib Queue Management (QM) Events | 65 |
| Appendix A: Acronyms and Abbreviations | 66 |

Preface

This document is under configuration management of the Goddard Space Flight Center (GSFC) DTN Project Configuration Control Board (CCB). A complete revision or Document Change Notice (DCN) will be issued to update the document for any future approved changes.

The GSFC DTN Project assumes responsibility for this document and updates it as required to meet its needs. Reviews of this document are performed at least annually, and updates to this document are made when appropriate.

Changes to this document require prior approval of the Change Authority listed on the signature page. Proposed changes shall be submitted to the DTN Configuration Management Engineer (CME) along with supporting material justifying the proposed change. Questions or comments concerning this document should be addressed to: GSFC DTN Systems Engineer or Product Development Lead (PDL).

Change History Log

| Revision | Effective Date | Description of Changes (Reference the CCR & CCB/ERB Approval Date) |
|----------|----------------|--|
| - | 07/12/2024 | Initial Release per ESC-CCR-0644 07/12/2024 |
| 1 | 08/25/2025 | Build 7.0 |

Approvals

The signatories below indicate with their signature their commitment to the implementation of this Plan.

Prepared by:

Sara Garcia-Beech

Date

DTN FSW Development Team Lead
Flight Software Systems Branch
Code 582, NASA GSFC

Concurred by:

Rebecca Besser

Date

DTN Systems Engineering Lead
Software Systems Engineering Branch
Code 581, NASA GSFC

Approved by:

Peyush Jain

Date

Flight Segment Mission Manager
DTN Study and Pathfinder Lead
TEMPO, Code 450.2, NASA GSFC

Chapter 1. Scope

1.1. Introduction

The Interface Control Document (ICD) is a controlled document that defines data interfaces and exchange formats between the Delay/Disruption-Tolerant Networking (DTN) Bundle Protocol (BP) nodes and Monitor and Control (M&C) ground systems. BP is a networking protocol that transmits data between nodes even when in the absence of continuous connectivity. It is designed to provide reliable end-to-end communication where other networking protocols may not be effective.

The current Bundle Protocol Node (BPNode) is a DTN Node application that implements the Bundle Protocol version 7 (BPv7). GSFC developed BPNode for a mixed-safety-criticality deployment environment, which means that the node may be hosted on:

- Class B architecture with symmetric multiprocessing, such as Linux, or
- Class A architecture with asymmetric multiprocessing, such as a real-time operating system.

This document is developed to ensure that each side of the interface is correctly designed and compatible.

1.2. Build 7.0 Release Notes

Although all the commands, tables, and telemetry packets in this ICD have hooks in the Build 7.0 code, some of them do not have the underlying functionality implemented.

The following directives have not been implemented:

- Startup directives
- Policy directives
- Storage directives
- reset-source-counters
- set-registration-state
- add-mib-array-key
- remove-mib-array-key

The following telemetry packets have not been implemented:

- Per-Source MIB Configuration
- Per-Source MIB Counters

The following tables have not been implemented:

- Compressed Reporting
- MIB Source Configuration

- Source Authorization Policy
- Custody Authorization Policy
- Custodian Authorization Policy
- Report-To-EID Authorization Policy
- Source Latency Policy
- Storage

For telemetry packets or tables where only certain fields have not been implemented, these fields will be indicated with *italics*.

1.3. Software Context

The BPNode software runs on Linux and real-time operating systems in a context where BP clients (BPApps from RFC 9171) communicate directly with BPNode. BPNode expects a Publish/Subscribe pattern where a BPApp publishes Application Data Units (ADUs) and BPNode subscribes to them. Likewise, a BPApp subscribes for expected ADUs and BPNode publishes them. The rest of the diagram below refers to:

1. Core Flight System (cFS) applications, such as
 - a. Telemetry Output (TO)
 - b. Scheduler (SCH)
 - c. Command Ingest (CI)
2. Operating System Abstraction Layer (OSAL)
3. Convergence Layer Adapters (CLAs)
4. Mission Operations Center (MOC), bottom center, which represents the flight controllers and ground systems that communicate with the spacecraft through the M&C interface.

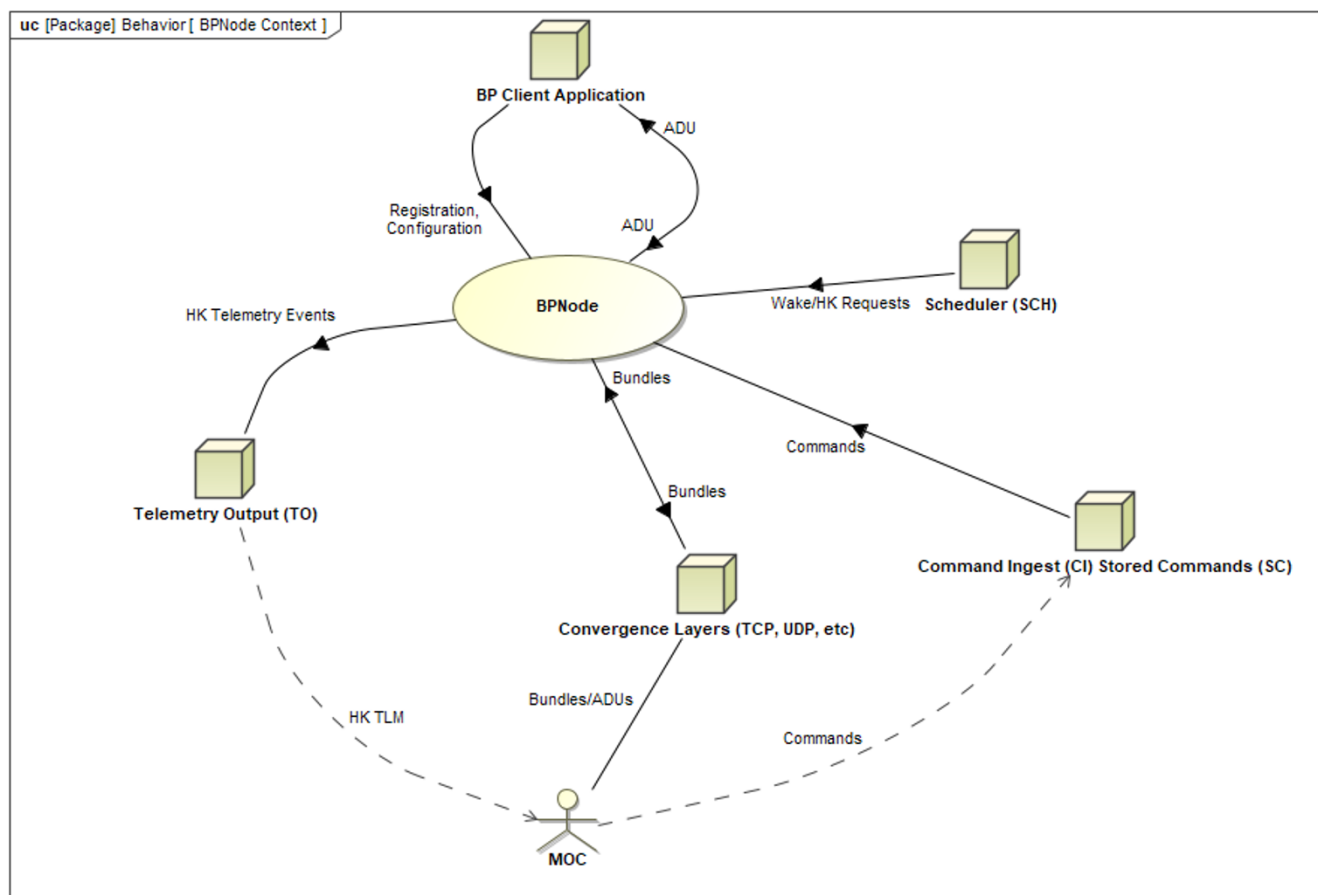


Figure 1. BPNODE Context Diagram

1.4. Configuration Management

Interface configuration management is documented in the Configuration Management Plan (450.2-DTN-CMP) baselined in Technical Data Management System (TDMS). DTN CM includes software naming conventions and Discrepancy Reporting management.

1.5. Requirements Verification

Requirements are stored in the GSFC DOORS database and formally exported to TDMS after review and approval by a Configuration Control Board (CCB). The Requirements Verification Traceability Matrix (RVTM) provides verification traceability to testing.

DOORS synchronizes requirements to MagicDraw, which produces system and component diagrams as well as views of requirements that are saved in Teamwork Cloud. DOORS maps requirements to software modules, components, software versions, and source code files.

1.6. Interface Characteristics and Functions

DTN Nodes provide Management Information Base (MIB) objects to collect information required by Network Management. Mission M&C, DTN Network Management (DTNNM), and MOC use the same MIB-defined objects, which include directives, configuration containers, policy information, events, and telemetry. MIB object transport is mission-defined and has significant mission security, authority, and operational constraints.

DTN nodes support both policy and configuration management interfaces:

- Policy is the management interface that defines user access to network services and resources. It is negotiated between users and service providers to ensure adherence to user Service Level Agreements (SLA). DTNNM applies Node Policy based on protocol parameters and distributes it to node operators. Policy can change per contact schedule. The Internet Engineering Task Force (IETF) and Consultative Committee for Space Data Systems (CCSDS) develop policy distribution format and transport.
- Configuration is a management interface to configure node services and resources. It is more static but can change due to off-nominal operations, fault handling, or policy modifications.

DTNNM ensures that configurations are consistent across the network to support the user SLAs. MIB object scope can address sets of related bundles, all bundles, and node operations. Local and remote MIB object transports are necessary for robust operations and fault handling. All MIB objects have associated Level 6 requirements.

1.7. Space Packets

Once the BPNode starts, the M&C connects to it and establishes distinct connections for the exchange of control directives (command messages) and status messages (telemetry). Both types of messages are standard CCSDS Space Packets as defined in CCSDS 133.0.B-2. The User Data Field contains either the control directive sent by the M&C or the Status Data provided by the BPNode, differentiated by the Packet Type indicator, which is set to 0 for telemetry packets and 1 for telecommands.

Bit 4 of the Packet Primary Header contains the Secondary Header Flag, which indicates the presence or absence of the Packet Secondary Header within this Space Packet. It is set to '0' if a secondary header is absent and '1' if it is present. The latter is the case for both types of DTN packets:

- In a command message, the secondary header contains the Function Code (it is the first data point in the User Data Field) and the command checksum value. It also contains parameters associated with that function, encoded in accordance with their associated data type.
- In a telemetry message, it contains the time stamp.

1.8. DTN-Specific Field Types

Most of the mnemonic field types are standard data types (uint, string, etc), but the following data types will also be referenced in this ICD and defined here:

Table 1. Endpoint ID (EID)

| Subfield | Description | Type |
|--------------|---|-------------|
| Scheme | Defines how to parse scheme-specific part (SSP), is either DTN (1) or IPN (2) | uint64 enum |
| IpnSspFormat | If the Scheme is IPN, defines whether it is in the 2 or 3 digit format | uint64 enum |

| Subfield | Description | Type |
|-----------|--|--------|
| Allocator | Unique identifier for controlling organization | uint64 |
| Node | Unique identifier for system that implements DTN communications protocol service | uint64 |
| Service | Unique identifier for DTN communication protocol service | uint64 |

Table 2. Endpoint ID (EID) Pattern

| Subfield | Description | Type |
|--------------|---|-------------|
| Scheme | Defines how to parse scheme-specific part (SSP), is either DTN (1) or IPN (2) | uint64 enum |
| IpnSspFormat | If the Scheme is IPN, defines whether it is in the 2 or 3 digit format | uint64 enum |
| MaxAllocator | Unique identifier for controlling organization, maximum inclusive value | uint64 |
| MinAllocator | Unique identifier for controlling organization, minimum inclusive value | uint64 |
| MaxNode | Unique identifier for system that implements DTN communications protocol service, maximum inclusive value | uint64 |
| MinNode | Unique identifier for system that implements DTN communications protocol service, minimum inclusive value | uint64 |
| MaxService | Unique identifier for DTN communication protocol service, maximum inclusive value | uint64 |
| MinService | Unique identifier for DTN communication protocol service, minimum inclusive value | uint64 |

Chapter 2. Documentation

2.1. Reference Documents

The following documents serve as reference material for this document.

Table 3. Reference Documents

| Document No. | Document Title |
|------------------|---|
| RFC-9171 | Bundle Protocol Specification (Version 7) |
| CCSDS 734.2-B-1 | CCSDS Bundle Protocol Specification |
| CCSDS 133.0.B-2 | Space Packet Protocol |
| 450.2-DTN-SRD-L6 | DTN Level 6 Systems Requirements Document |

Chapter 3. Directives

DTN subscribes to cFS directive-type CCSDS command messages from the cFS Software Bus (SB). DTN directives are listed below. The Space Packet secondary header for commands specifies the Function Code, which identifies the action being requested of the Node. It is the first data point in the User Data Field, which also contains parameters associated with that function, encoded in accordance with their associated data type.

Table 4. Directives Packet Secondary Header

| Name | Description | Type | Start Byte | Start Bit | Length Bits |
|--------------|---|------|------------|-----------|-------------|
| Reserved | Reserved | uint | 6 | 0 | 1 |
| FunctionCode | Unique function code for each directive | uint | 6 | 1 | 7 |
| Checksum | Command checksum value | uint | 7 | 0 | 8 |



Directives followed by an asterisk are deferred to a future build.

Directive parameters can be formatted as a directive message or table. In general, the issuance of a **valid** control directive increments the **valid** command counter, the issuance of an *invalid* control directive increments the *invalid* command error counter. A directive may be invalid because of the wrong Function Code, length, format, or parameters. The subsequent sections discuss each directive in greater detail.

3.1. Startup Directives

Startup directives add and start all applications and control storage and metadata. None of the startup directives have parameters.



None of the functionality of the startup directives has been implemented as of this build.

3.1.1. Add All Applications*

| | |
|----------------------|--|
| Name | add-all-applications |
| Function Code | 1 |
| Table | <ul style="list-style-type: none"> • Channel Configuration Table • ADU Proxy Table |
| Parameter(s) | none |
| Description | Registers with the node all client applications configured to start on startup. |

3.1.2. Start All Applications*

| | |
|----------------------|---|
| Name | start-all-applications |
| Function Code | 2 |
| Table | <ul style="list-style-type: none"> • Channel Configuration Table • ADU Proxy Table |
| Parameter(s) | none |
| Description | Starts all applications configured to start at startup. Begins accepting and delivering ADUs for all configured applications. |

3.1.3. Verify Bundle Storage*

| | |
|----------------------|--|
| Name | verify-bundle-storage |
| Function Code | 3 |
| Table | no |
| Parameter(s) | none |
| Description | Verifies headers of bundles in persistent storage upon a cold restart. |

3.1.4. Initialize Bundle Storage*

| | |
|----------------------|---|
| Name | initialize-bundle-storage |
| Function Code | 4 |
| Table | no |
| Parameter(s) | none |
| Description | Executes on node startup for a cold start and deletes all bundles in storage for a factory reset. |

3.1.5. Verify Bundle Metadata*

| | |
|----------------------|--|
| Name | verify-bundle-metadata |
| Function Code | 5 |
| Table | no |
| Parameter(s) | none |
| Description | Checks whether the bundle metadata reflects the actual bundle storage. |

3.1.6. Rebuild Bundle Metadata*

| | |
|----------------------|--|
| Name | rebuild-bundle-metadata |
| Function Code | 6 |
| Table | no |
| Parameter(s) | none |
| Description | Rebuilds bundle storage metadata from stored bundles, including their indices (source Endpoint ID (EID), destination EID, next action time). |

3.1.7. Clear Volatile*

| | |
|----------------------|--|
| Name | clear-volatile |
| Function Code | 7 |
| Table | no |
| Parameter(s) | none |
| Description | Executes on warm restart and clears volatile data, including bundle metadata and bundles that are not in persistent storage. |

3.1.8. Reload Saved Data*

| | |
|----------------------|---|
| Name | reload-saved-data |
| Function Code | 8 |
| Table | No |
| Parameter(s) | None |
| Description | Reload saved node configuration, bundle metadata from persistent storage, and saved MIB counters. |

3.2. Counter Directives

These directives instruct the node to reset various counters.

3.2.1. Reset All Counters

| | |
|----------------------|--------------------|
| Name | reset-all-counters |
| Function Code | 9 |
| Table | No |

| | |
|---------------------|---|
| Parameter(s) | None |
| Description | Sets all resettable MIB counters to zero. |

3.2.2. Reset Counter

| | |
|----------------------|--|
| Name | reset-counter |
| Function Code | 10 |
| Table | no |
| Parameter(s) | <ul style="list-style-type: none"> • uint16 <i>mibArrayIndex</i>: source MIB counter array index corresponding to counter (if the counter to reset is a node MIB counter, should be set to the maximum number of source MIB sets allowed, 10 by default) • uint16 <i>spare</i>: spare bytes • uint32 enum <i>counter</i>: Counter to reset. See the Field IDs of the Node and Source MIB Counters Packets for the enumeration values. |
| Description | Sets to zero the MIB counter specified by the parameter. |

3.2.3. Reset Source Counters*

| | |
|----------------------|---|
| Name | reset-source-counters |
| Function Code | 11 |
| Table | no |
| Parameter(s) | <ul style="list-style-type: none"> • uint16 <i>mibArrayIndex</i>: source MIB counter array index • uint16 <i>spare</i>: spare bytes |
| Description | Sets to zero all resettable MIB counters associated with a source EID pattern identified by the parameter. |

3.2.4. Reset Bundle Counters

| | |
|----------------------|---|
| Name | reset-bundle-counters |
| Function Code | 12 |
| Table | no |
| Parameter(s) | None |
| Description | Sets all bundle-related counters to zero. |

3.2.5. Reset Error Counters

| | |
|----------------------|---|
| Name | reset-error-counters |
| Function Code | 13 |
| Table | no |
| Parameter(s) | <ul style="list-style-type: none"> • uint16 <i>mibArrayIndex</i>: source MIB counter array index • uint16 <i>spare</i>: spare bytes |
| Description | Sets all error counters to zero. |

3.3. Application Directives

Application directives add, start, stop, and remove specific applications, as well as set the channel's registration state.

3.3.1. Add Application

| | |
|----------------------|--|
| Name | add-application |
| Function Code | 14 |
| Table | <ul style="list-style-type: none"> • Channel Configuration Table • ADU Proxy Table |
| Parameter(s) | uint32 <i>ChanId</i> : The index in the Channel Configuration Table with this application's configurations, also functions as a unique identifier for this application. |
| Description | <p>This directive adds a new application by:</p> <ul style="list-style-type: none"> • Setting the channel configuration based on client application configuration • Establishing mapping between client application connection and channel • Opening an ADU channel |

3.3.2. Remove Application

| | |
|----------------------|--------------------|
| Name | remove-application |
| Function Code | 15 |
| Table | no |

| | |
|---------------------|---|
| Parameter(s) | uint32 <i>ChanId</i> : The index in the Channel Configuration Table with this application's configurations, also functions as a unique identifier for this application. |
| Description | Terminates the connection, closes the ADU channel, and flushes the egress queue for the application specified by the parameter. |

3.3.3. Set Registration State*

| | |
|----------------------|--|
| Name | set-registration-state |
| Function Code | 16 |
| Table | <ul style="list-style-type: none"> • Channel Configuration Table • ADU Proxy Table |
| Parameter(s) | <ul style="list-style-type: none"> • uint32 <i>ChanId</i>: The index in the Channel Configuration Table with this application's configurations, also functions as a unique identifier for this application • uint8 enum <i>registrationState</i>: Active (0), PassiveDeferred (1), or PassiveAbandon (2) |
| Description | Sets given application's registration state to specified state. |

3.3.4. Start Application

| | |
|----------------------|---|
| Name | start-application |
| Function Code | 17 |
| Table | no |
| Parameter(s) | uint32 <i>ChanId</i> : The index in the Channel Configuration Table with this application's configurations, also functions as a unique identifier for this application. |
| Description | Verifies the channel configuration of the application indicated by the parameter and begins moving payloads bidirectionally between the node and the given application. |

3.3.5. Stop Application

| | |
|----------------------|------------------|
| Name | stop-application |
| Function Code | 18 |
| Table | no |

| | |
|---------------------|---|
| Parameter(s) | uint32 <i>ChanId</i> : The index in the Channel Configuration Table with this application's configurations, also functions as a unique identifier for this application. |
| Description | Stops moving bundles bidirectionally between the node and the given application. |

3.4. Policy Directives

Policy Directives add and remove authorized EIDs.



None of the functionality of the policy directives has been implemented as of this build.

3.4.1. Add Authorized Sources*

| | |
|----------------------|--|
| Name | add-authorized-sources |
| Function Code | 19 |
| Table | Yes |
| Parameter(s) | uint32 <i>Placeholder</i> : Placeholder parameter |
| Description | Adds the EID pattern to a set of authorized source EIDs if the pattern being added does not exceed the maximum size of authorized sources. |

3.4.2. Remove Authorized Sources*

| | |
|----------------------|---|
| Name | remove-authorized-sources |
| Function Code | 20 |
| Table | No |
| Parameter(s) | uint32 <i>Placeholder</i> : Placeholder parameter |
| Description | Removes the EID pattern from a set of authorized source EIDs. |

3.4.3. Add Authorized Custody Sources*

| | |
|----------------------|--|
| Name | add-authorized-custody-sources |
| Function Code | 21 |
| Table | Yes |
| Parameter(s) | uint32 <i>Placeholder</i> : Placeholder parameter |
| Description | Adds the EID pattern to a set of authorized custody source EIDs. |

3.4.4. Remove Authorized Custody Sources*

| | |
|----------------------|---|
| Name | remove-authorized-custody-sources |
| Function Code | 22 |
| Table | No |
| Parameter(s) | uint32 <i>Placeholder</i> : Placeholder parameter |
| Description | Removes the EID pattern from a set of authorized custody source EIDs. |

3.4.5. Add Authorized Custodians*

| | |
|----------------------|---|
| Name | add-authorized-custodians |
| Function Code | 23 |
| Table | Yes |
| Parameter(s) | uint32 <i>Placeholder</i> : Placeholder parameter |
| Description | Adds the EID pattern to a set of authorized custodian EIDs. |

3.4.6. Remove Authorized Custodians*

| | |
|----------------------|--|
| Name | remove-authorized-custodians |
| Function Code | 24 |
| Table | No |
| Parameter(s) | uint32 <i>Placeholder</i> : Placeholder parameter |
| Description | Removes the EID pattern from a set of authorized custodian EIDs. |

3.4.7. Add Authorized Report-to EID*

| | |
|----------------------|---|
| Name | add-authorized-report-to-eid |
| Function Code | 25 |
| Table | No |
| Parameter(s) | uint32 <i>Placeholder</i> : Placeholder parameter |
| Description | Adds the EID pattern to a set of authorized report-to EIDs. |

3.4.8. Remove Authorized Report-to EID*

| | |
|-------------|---------------------------------|
| Name | remove-authorized-report-to-eid |
|-------------|---------------------------------|

| | |
|----------------------|--|
| Function Code | 26 |
| Table | No |
| Parameter(s) | uint32 <i>Placeholder</i> : Placeholder parameter |
| Description | Removes the EID pattern from a set of authorized report-to EIDs. |

3.4.9. Add Latency*

| | |
|----------------------|--|
| Name | add-latency |
| Function Code | 27 |
| Table | No Parameter(s) |
| Parameter(s) | uint32 <i>Placeholder</i> : Placeholder parameter |
| Description | Adds the source EID pattern and latency information to the set of source latency policies. |

3.4.10. Remove Latency*

| | |
|----------------------|---|
| Name | remove-latency |
| Function Code | 28 |
| Table | No |
| Parameter(s) | uint32 <i>Placeholder</i> : Placeholder parameter |
| Description | Removes source EID pattern and latency information from the set of source latency priorities. |

3.5. Contact Directives

Contact directives set up, start, stop, and teardown CLA contacts. Note that in build 7.0, only the UDP CLA is supported.

3.5.1. Set Up

| | |
|----------------------|---|
| Name | contact-setup |
| Function Code | 29 |
| Table | Contact Table |
| Parameter(s) | uint32 <i>contactId</i> : unique CLA contact ID, points to row in Contact Table with necessary configurations |

Description Establishes and configures CLA to obtain output queue bundles from Node storage to send to Convergence Layer (CL). It creates the output queue and configures the rate at which CLA sends and receives bundles to and from CL. If CLA type is:

- LTP - the directive also configures the destination LTP engine ID
- TCPCLP - it also establishes a session with peer entity.



This directive is rejected if setting up the contact would exceed the allowed maximum of simultaneous contacts.

3.5.2. Start

| | |
|---------------------|--|
| Name | contact-start |
| ID | 30 |
| Table | No |
| Parameter(s) | uint32 <i>contactId</i> : unique CLA contact ID |
| Description | Starts transferring bundles between the underlying network and the node. |

3.5.3. Stop

| | |
|---------------------|--|
| Name | contact-stop |
| ID | 31 |
| Table | No |
| Parameter(s) | uint32 <i>contactId</i> : unique CLA contact ID |
| Description | <p>This directive performs the following:</p> <ul style="list-style-type: none"> • stops transferring bundles to and from CL • requests the CL to cancel the transfers in progress • sends any Compressed Reporting Signals (CRSs) (Multiple bundle status reports compressed into one ADU) and custody signals under construction. |

If CL is LTP, the directive requests LTP to cancel active session(s) and notify the node of complete and incomplete bundle transmissions.

3.5.4. Tear Down

| | |
|-------------|------------------|
| Name | contact-teardown |
| ID | 32 |

| | |
|---------------------|--|
| Table | No |
| Parameter(s) | uint32 <i>contactId</i> : unique CLA contact ID |
| Description | Disestablishes CLA, frees all CLA resources, stores any bundles remaining in the egress queue, and deletes custody timers. |

3.6. MIB Directives

MIB directives modify the MIB configurations.

3.6.1. Add MIB Array Key*

| | |
|----------------------|--|
| Name | add-MIB-array-key |
| Function Code | 33 |
| Table | Yes |
| Parameter(s) | EID Pattern[4] <i>eidPatterns</i> : EID patterns to add |
| Description | Adds the given EID patterns as key to the map of MIB configuration elements and counters accessed by the source EID. |

3.6.2. Remove MIB Array Key*

| | |
|----------------------|---|
| Name | remove-MIB-array-key |
| Function Code | 34 |
| Table | No |
| Parameter(s) | uint32 <i>Placeholder</i> : Placeholder parameter |
| Description | Removes the elements indexed by given EID pattern from the map of MIB configuration elements and counters accessed by source EID. |

3.6.3. Set MIB Item

| | |
|----------------------|--------------|
| Name | set-MIB-item |
| Function Code | 35 |
| Table | Yes |

| | |
|---------------------|--|
| Parameter(s) | <ul style="list-style-type: none"> EID Pattern <i>eid</i>: EID(s) to set MIB item for. Only the node MIB is supported for this build. uint32 enum <i>mibId</i>: MIB item ID. See the Field IDs of the Node and Source MIB Configuration Packets/Tables for the enumeration values. uint32 <i>value</i>: value to which the MIB item will be set |
| Description | Sets the value of a MIB configuration item specified by the parameter. |

3.7. Storage Directives

Storage directives add and remove storage allocation. None of the functionality of the storage directives has been implemented as of this build.

3.7.1. Add Storage Allocation*

| | |
|----------------------|--|
| Name | add-storage-allocation |
| Function Code | 36 |
| Table | Yes Parameter(s) |
| Parameter(s) | uint32 <i>Placeholder</i> : Placeholder parameter |
| Description | Adds the storage partition of a specified size for storing bundles whose source EID matches the given pattern. |

3.7.2. Remove Storage Allocation*

| | |
|----------------------|---|
| Name | remove-storage-allocation |
| Function Code | 37 |
| Table | No |
| Parameter(s) | uint32 <i>Placeholder</i> : Placeholder parameter |
| Description | Removes the storage partition corresponding to a given EID pattern. |

3.7.3. Perform Self-Test*

| | |
|----------------------|---|
| Name | perform-self-test |
| Function Code | 38 |
| Table | No |
| Parameter(s) | None |
| Description | Perform TBD tests, returning pass/fail. |

3.8. Routine Directives

Routine directives test aliveness, trigger the node to wake up, and send telemetry packets.

3.8.1. Wakeup

| | |
|----------------------|---|
| Name | Wakeup |
| Function Code | 39 |
| Table | No |
| Parameter(s) | None |
| Description | Triggers BPNode tasks to wake up and start processing directives and bundles, as well as performing maintenance activities, such as time calculation, framework management, and garbage collection. |

3.8.2. Send Node MIB Configuration HK

| | |
|----------------------|--|
| Name | send-node-mib-config-hk |
| Function Code | 40 |
| Table | No |
| Parameter(s) | None |
| Description | Sends the Per Node MIB Configuration telemetry packet. |

3.8.3. Send Per Source MIB Configuration HK

| | |
|----------------------|--|
| Name | send-per-source-mib-config-hk |
| Function Code | 41 |
| Table | No |
| Parameter(s) | None |
| Description | Sends the Per Source MIB Configuration telemetry packet. |

3.8.4. Send Node MIB Counters HK

| | |
|----------------------|---------------------------|
| Name | send-node-mib-counters-hk |
| Function Code | 42 |
| Table | No |
| Parameter(s) | None |

| | |
|--------------------|---|
| Description | Sends the Per Node MIB Counters telemetry packet. |
|--------------------|---|

3.8.5. Send Per Source MIB Counters HK

| | |
|----------------------|---|
| Name | send-per-source-mib-counters-hk |
| Function Code | 43 |
| Table | No |
| Parameter(s) | None |
| Description | Sends the Per Source MIB Counters telemetry packet. |

3.8.6. Send Storage HK

| | |
|----------------------|-------------------------------------|
| Name | send-storage-hk |
| Function Code | 44 |
| Table | No |
| Parameter(s) | None |
| Description | Sends the Storage telemetry packet. |

3.8.7. Send Channel/Contact Status HK

| | |
|----------------------|--|
| Name | send-channel-contact-status-hk |
| Function Code | 45 |
| Table | No |
| Parameter(s) | None |
| Description | Sends the Channel/Contact Status telemetry packet. |

3.8.8. Send Node MIB Reports HK

| | |
|----------------------|--|
| Name | send-node-mib-reports-hk |
| Function Code | 46 |
| Table | No |
| Parameter(s) | None |
| Description | Sends the Per Node MIB Reports telemetry packet. |

3.8.9. Noop

| | |
|----------------------|---|
| Name | Noop |
| Function Code | 0 |
| Table | No |
| Parameter(s) | None |
| Description | Ensures that the connection is still alive. The BPNode version information is sent out in an event message. |

Chapter 4. Telemetry

BPNode converts telemetry data received from its modules from internal library format to standard CCSDS Space Packets and publishes them to cFS SB to send them to M&C. The DTN Node generates the following telemetry packets:

- Node MIB Configuration
- Per-Source MIB Configuration
- Node MIB Counters
- Per-Source MIB Counters
- Node MIB Reports
- Storage HK
- Channel and Contact Status HK.

The Space Packet secondary header for telemetry indicates host time (absolute time value in an epoch defined by cFS) in seconds and subseconds.

Table 5. Telemetry Packet Secondary Header

| Name | Description | Type | Start Byte | Start Bit | Length Bits |
|------------|--|------|------------|-----------|-------------|
| Seconds | Seconds since host epoch | uint | 6 | 0 | 32 |
| Subseconds | Subseconds (one subsecond = 2^{-16} seconds) | uint | 8 | 0 | 16 |

In addition, DTN also applies timestamps within the body of generated telemetry packets so that operators can determine the DTN time:

Table 6. DTN Time Terminology

| Term | Data Type | Units | Description |
|--------------------------|-----------|-------|---|
| currentMonotonicTime | uint64 | msec | The current time indicated by the monotonic clock, usually the time elapsed since the clock was last powered on |
| currentCorrelationFactor | uint64 | msec | The offset needed to correlate the current monotonic time to the DTN epoch (DTN Time = currentMonotonicTime + currentCorrelationFactor) |

Upon receiving one of the send HK directives, the node generates a CCSDS space packet, adds the relevant telemetry fields, acquires time data, and sends the packet to SB.

The telemetry packets generated by the node are listed in the following sections.



Although the per-source packets are generated by BPNode, in build 7.0 none of the

fields are implemented, so they will always be set to 0. For the remaining packets, any fields in *italics* are similarly not implemented and will always be set to 0.

4.1. Node MIB Configuration

This telemetry packet contains all node MIB configurations variables.

Table 7. MIB Node Configuration

| Field ID | Field Name | Field Type | Description |
|----------|---------------------------------------|------------|--|
| N/A | instanceEID | EID | Endpoint ID of this node |
| 0 | <i>paramBundleSizeNoFragment</i> | uint32 | Maximum size of bundles that can traverse DTN without additional bundle layer fragmentation (provided by DTNNM). |
| 1 | paramSetMaxSequenceNum | uint32 | Maximum bundle sequence number. |
| 2 | <i>paramSetMaxPayloadLength</i> | uint32 | Maximum payload length for fragmentation. |
| 3 | paramSetMaxBundleLength | uint32 | Maximum bundle length. |
| 4 | <i>paramSetNodeDtnTime</i> | uint32 | Time being tracked by the node |
| 5 | <i>paramSetBehaviorEventReporting</i> | uint32 | Indication that only events at specified level or above are generated and reported via the M&C interface. |
| 6 | paramSetMaxLifetime | uint32 | Maximum bundle lifetime allowed on node |
| N/A | spare | uint32 | Spare for alignment |

4.2. Per-Source MIB Configuration*

This telemetry packet contains the MIB configuration variables for each set of sources.



None of the fields in this packet are implemented.

| Field Name | Data Type | # Entries | Description |
|---------------|----------------------|---------------|--|
| sourceConfigs | Source Configs Array | 10 by default | Configurations for each source (see table below) |

The Source Configurations Array contains the following fields for each entry:

Table 8. Source Configuration Array

| Field ID | Field Name | Data Type | # Entries | Description |
|----------|---------------------------------------|-------------|---|---|
| N/A | SrcEIDs | EID Pattern | Max MIB Per Source EID Patterns, 4 by default | Source EID Patterns |
| 6 | ParamSetMaxLifetime | uint32 | 1 | Maximum bundle lifetime (in seconds) that ensures that bundle retention until its expiration time will not degrade operation of the receiving node. Used by node to determine when the bundle must be deleted to prevent network performance degradation. |
| 7 | ParamSetMaxBSRGenerationRate | uint32 | 1 | Maximum number of bundles per minute that can be generated for each source |
| 8 | ParamSetMaxCBRGenerationRate | uint32 | 1 | Maximum number of bundles per minute that can be generated for each source |
| 9 | BundleSetBehaviorReceivedBSRGenerate | uint32 | 1 | Flag indicating bundle reception status reports should be generated |
| 10 | BundleSetBehaviorAcceptedBSRGenerate | uint32 | 1 | Flag indicating bundle custody accepted status reports should be generated |
| 11 | BundleSetBehaviorForwardedBSRGenerate | uint32 | 1 | Flag indicating bundle forwarded status reports should be generated |
| 12 | BundleSetBehaviorDeliveredBSRGenerate | uint32 | 1 | Flag indicating bundle delivered status reports should be generated |
| 13 | BundleSetBehaviorDeletedBSRGenerate | uint32 | 1 | Flag indicating bundle deleted status reports should be generated |

| Field ID | Field Name | Data Type | # Entries | Description |
|----------|---------------------------------------|-----------|-----------|--|
| 14 | BundleSetBehaviorReceivedCBRGenerate | uint32 | 1 | Flag indicating bundle reception status reports should be generated |
| 15 | BundleSetBehaviorAcceptedCBRGenerate | uint32 | 1 | Flag indicating bundle custody accepted status reports should be generated |
| 16 | BundleSetBehaviorForwardedCBRGenerate | uint32 | 1 | Flag indicating bundle forwarded status reports should be generated |
| 17 | BundleSetBehaviorDeliveredCBRGenerate | uint32 | 1 | Flag indicating bundle delivered status reports should be generated |
| 18 | BundleSetBehaviorDeletedCBRGenerate | uint32 | 1 | Flag indicating bundle deleted status reports should be generated |

4.3. Node MIB Counters

This telemetry packet includes all node MIB counter variables.

Table 9. Node MIB Counters

| Field ID | Field Name | Data Type | Description |
|----------|-----------------------------------|-----------|---|
| 0 | aduCountDelivered | uint32 | Number of ADUs delivered to an application. |
| 1 | aduCountReceived | uint32 | Number of ADUs received |
| 2 | <i>bundleCountAbandoned</i> | uint32 | Number of abandoned bundle payloads |
| 3 | <i>bundleCountCustodyRejected</i> | uint32 | Number of unsuccessful custody transfers |
| 4 | <i>bundleCountCustodyRequest</i> | uint32 | Number of bundles requesting custody transfer |

| Field ID | Field Name | Data Type | Description |
|----------|---|-----------|--|
| 5 | <i>bundleCountCustodyReforwarded</i> | uint32 | Number of bundles reforwarded for custody timeout |
| 6 | <i>bundleCountCustodyTransferred</i> | uint32 | Number of successful custody transfers |
| 7 | bundleCountDeleted | uint32 | Total number of bundle deletions |
| 8 | <i>bundleCountDeletedBadEid</i> | uint32 | Number of bundles deleted to to having an unrecognized destination EID |
| 9 | <i>bundleCountDeletedCancelled</i> | uint32 | Number of bundles deleted due to Transmission Cancelled condition |
| 10 | bundleCountDeletedExpired | uint32 | Number of bundles deleted due to Lifetime Expired condition |
| 11 | <i>bundleCountDeletedForwardFailed</i> | uint32 | Number of bundles deleted due to Forwarding Failed condition |
| 12 | bundleCountDeletedHopExceeded | uint32 | Number of bundles deleted due to Hop Limit Exceeded condition |
| 13 | <i>bundleCountDeletedInvalidPayload</i> | uint32 | Number of bundles deleted due to corrupted payload |
| 14 | bundleCountDeletedNoStorage | uint32 | Number of bundles deleted due to insufficient storage |
| 15 | bundleCountDeletedTooLong | uint32 | Number of bundles deleted due to being longer than the maximum bundle length |
| 16 | <i>bundleCountDeletedTrafficPared</i> | uint32 | Number of bundles deleted due to Traffic Pared condition |
| 17 | <i>bundleCountDeletedUnauthorized</i> | uint32 | Number of bundles deleted due to unrecognized source EID |
| 18 | bundleCountDeletedUnintelligible | uint32 | Number of bundles deleted due to Block Unintelligible condition |

| Field ID | Field Name | Data Type | Description |
|----------|--|-----------|---|
| 19 | bundleCountDeletedUnsupportedBlock | uint32 | Number of bundles deleted due to Unsupported Block condition |
| 20 | bundleCountDelivered | uint32 | Number of bundles delivered |
| 21 | <i>bundleCountDepleted</i> | uint32 | Number of bundles whose rejected Custody Signals indicated lack of storage |
| 22 | bundleCountDiscarded | uint32 | Number of bundles discarded |
| 23 | bundleCountForwarded | uint32 | Number of bundles forwarded |
| 24 | <i>bundleCountForwardedFailed</i> | uint32 | Number of bundles where forwarding failed |
| 25 | <i>bundleCountFragmented</i> | uint32 | Number of bundles that needed fragmentation |
| 26 | <i>bundleCountFragmentError</i> | uint32 | Number of fragments discarded due to error |
| 27 | <i>bundleCountGeneratedAccepted</i> | uint32 | Number of accepted bundle transmission requests |
| 28 | <i>bundleCountGeneratedCustodySignal</i> | uint32 | Number of custody signals generated |
| 29 | <i>bundleCountGeneratedFragment</i> | uint32 | Number of generated bundle fragments |
| 30 | <i>bundleCountGeneratedRejected</i> | uint32 | Number of rejected bundle transmission requests |
| 31 | <i>bundleCountMaxBsrRateExceeded</i> | uint32 | Number of BSR bundles not sent due to rate limit |
| 32 | <i>bundleCountNoContact</i> | uint32 | Number of bundles whose rejected Custody Signals indicated destination is not reachable before expiration |
| 33 | <i>bundleCountNoFurtherInfo</i> | uint32 | Number of bundles whose rejected Custody Signals indicated No Further Info |

| Field ID | Field Name | Data Type | Description |
|----------|--|-----------|---|
| 34 | <i>bundleCountNoRoute</i> | uint32 | Number of bundles whose rejected Custody Signals indicated the destination is not reachable |
| 35 | <i>bundleCountReassembled</i> | uint32 | Number of bundles delivered that were reassembled fragments |
| 36 | <i>bundleCountReceived</i> | uint32 | Number of bundles received |
| 37 | <i>bundleCountReceivedAdminRecord</i> | uint32 | Number of admin records received |
| 38 | <i>bundleCountReceivedBsrAccepted</i> | uint32 | Number of Accepted BSRs received |
| 39 | <i>bundleCountReceivedBsrDeleted</i> | uint32 | Number of Deleted BSRs received |
| 40 | <i>bundleCountReceivedBsrDelivered</i> | uint32 | Number of Delivered BSRs received |
| 41 | <i>bundleCountReceivedBsrForwarded</i> | uint32 | Number of Forwarded BSRs received |
| 42 | <i>bundleCountReceivedBsrReceived</i> | uint32 | Number of Received BSRs received |
| 43 | <i>bundleCountReceivedCrsAccepted</i> | uint32 | Number of Accepted CRSs received |
| 44 | <i>bundleCountReceivedCrsDeleted</i> | uint32 | Number of Deleted CRSs received |
| 45 | <i>bundleCountReceivedCrsDelivered</i> | uint32 | Number of Delivered CRSs received |
| 46 | <i>bundleCountReceivedCrsForwarded</i> | uint32 | Number of Forwarded CRSs received |
| 47 | <i>bundleCountReceivedCrsReceived</i> | uint32 | Number of Received CRSs received |

| Field ID | Field Name | Data Type | Description |
|----------|---|-----------|--|
| 48 | <i>bundleCountReceivedCustodySignal</i> | uint32 | Number of Custody Signals received |
| 49 | <i>bundleCountReceivedFragment</i> | uint32 | Number of fragment bundles received |
| 50 | <i>bundleCountRedundant</i> | uint32 | Number of bundles where Custody Signals indicated redundancy |
| 51 | <i>bundleCountRejectedCustody</i> | uint32 | Number of bundles whose custody the node rejected |
| 52 | <i>bundleCountReturned</i> | uint32 | Number of bundles returned to sender |
| 53 | <i>bundleCountUnintelligibleBlock</i> | uint32 | Number of bundles for which Custody Signals indicated the bundle contained an unknown block type |
| 54 | <i>bundleCountUnintelligibleEid</i> | uint32 | Number of bundles rejected for unknown EIDs |
| 55 | bundleCountUnprocessedBlocks | uint32 | Number of unprocessed blocks removed |
| 56 | bundleAgentAcceptedDirectiveCount | uint32 | Number of accepted control directives received from the M&C interface. |
| 57 | bundleAgentRejectedDirectiveCount | uint32 | Number of rejected invalid control directives received from the M&C interface. |
| 58 | <i>bundleCountCustodySignalReceived</i> | uint32 | Number of Custody Signal bundles received. |
| 59 | <i>bundleCountGeneratedAnonymous</i> | uint32 | Number of anonymous bundles created |
| 60 | <i>bundleCountGeneratedBsrAccepted</i> | uint32 | Number of BSRs of bundle accepted for custody since the last counter reset. |
| 61 | <i>bundleCountGeneratedBsrDeleted</i> | uint32 | Number of BSRs of bundles deleted since the last counter reset. |

| Field ID | Field Name | Data Type | Description |
|----------|---|-----------|--|
| 62 | <i>bundleCountGeneratedBsrDelivered</i> | uint32 | Number of BSRs of bundles delivered since the last counter reset. |
| 63 | <i>bundleCountGeneratedBsrForwarded</i> | uint32 | Number of BSRs of bundles forwarded since the last counter reset. |
| 64 | <i>bundleCountGeneratedBsrReceived</i> | uint32 | Number of BSRs of bundles received generated since the last counter reset. |
| 65 | <i>bundleCountGeneratedCrs</i> | uint32 | Number of CRSs generated since last counter reset. |
| 66 | <i>bundleCountGeneratedCrsAccepted</i> | uint32 | Number of accepted bundle reports in each CRS since the last counter reset. |
| 67 | <i>bundleCountGeneratedCrsDeleted</i> | uint32 | Number of deleted bundle reports in each CRS since the last counter reset. |
| 68 | <i>bundleCountGeneratedCrsDelivered</i> | uint32 | Number of delivered bundle reports in each CRS since the last counter reset. |
| 69 | <i>bundleCountGeneratedCrsForwarded</i> | uint32 | Number of forwarded bundle reports in each CRS since the last counter reset. |
| 70 | <i>bundleCountGeneratedCrsReceived</i> | uint32 | Number of received bundle reports in each CRS since the last counter reset. |
| 71 | <i>bundleCountGeneratedCustody</i> | uint32 | Number of custody signal bundles generated since the last counter reset. |
| 72 | <i>bundleCountInvalidPrimaryBlock</i> | uint32 | Number of unprocessed bundles received with invalid primary blocks. |
| 73 | <i>bundleCountInCustody</i> | uint32 | Number of bundles in custody |
| 74 | <i>bundleCountMaxCrsRateExceeded</i> | uint32 | Number of CRS bundles not sent to avoid exceeding maximum rate. |
| 75 | <i>bundleCountReceivedCrs</i> | uint32 | Number of CRSs received since last counter reset. |

4.4. Per-Source MIB Counters

This telemetry packet includes all MIB counter variables for each set of sources.



None of the fields in this packet are implemented.

Table 10. Source Counters*

| Field Name | Data Type | # Entries | Description |
|----------------|-----------------------|---------------|--|
| sourceCounters | Source Counters Array | 10 by default | Counters for each source (see table below) |

The Source Counters Array contains the following fields for each entry:

Table 11. Source MIB Counters

| Field ID | Field Name | Data Type | Description |
|----------|-------------------------------|-------------------------|---|
| N/A | sourceEIDs | Array of 4 EID patterns | Source EID patterns for this entry |
| N/A | activeKeys | uint8 | Number of keys are active in the EID patterns |
| N/A | spare | uint8[3] | Spare for alignment |
| 0 | aduCountDelivered | uint32 | Number of ADUs delivered to an application. |
| 1 | aduCountReceived | uint32 | Number of ADUs received |
| 2 | bundleCountAbandoned | uint32 | Number of abandoned bundle payloads |
| 3 | bundleCountCustodyRejected | uint32 | Number of unsuccessful custody transfers |
| 4 | bundleCountCustodyRequest | uint32 | Number of bundles requesting custody transfer |
| 5 | bundleCountCustodyReforwarded | uint32 | Number of bundles reforwarded for custody timeout |
| 6 | bundleCountCustodyTransferred | uint32 | Number of successful custody transfers |
| 7 | bundleCountDeleted | uint32 | Total number of bundle deletions |

| Field ID | Field Name | Data Type | Description |
|----------|-------------------------------------|-----------|--|
| 8 | bundleCount DeletedBadEid | uint32 | Number of bundles deleted to to having an unrecognized destination EID |
| 9 | bundleCount DeletedCancelled | uint32 | Number of bundles deleted due to Transmission Cancelled condition |
| 10 | bundleCount DeletedExpired | uint32 | Number of bundles deleted due to Lifetime Expired condition |
| 11 | bundleCount DeletedForwardFailed | uint32 | Number of bundles deleted due to Forwarding Failed condition |
| 12 | bundleCount DeletedHopExceeded | uint32 | Number of bundles deleted due to Hop Limit Exceeded condition |
| 13 | bundleCount DeletedInvalidPayload | uint32 | Number of bundles deleted due to corrupted payload |
| 14 | bundleCount DeletedNoStorage | uint32 | Number of bundles deleted due to insufficient storage |
| 15 | bundleCount DeletedTooLong | uint32 | Number of bundles deleted due to being longer than the maximum bundle length |
| 16 | bundleCount DeletedTrafficPared | uint32 | Number of bundles deleted due to Traffic Pared condition |
| 17 | bundleCount DeletedUnauthorized | uint32 | Number of bundles deleted due to unrecognized source EID |
| 18 | bundleCount DeletedUnintelligible | uint32 | Number of bundles deleted due to Block Unintelligible condition |
| 19 | bundleCount DeletedUnsupportedBlock | uint32 | Number of bundles deleted due to Unsupported Block condition |
| 20 | bundleCount Delivered | uint32 | Number of bundles delivered |
| 21 | bundleCount Depleted | uint32 | Number of bundles whose rejected Custody Signals indicated lack of storage |

| Field ID | Field Name | Data Type | Description |
|----------|------------------------------------|-----------|---|
| 22 | bundleCount Discarded | uint32 | Number of bundles discarded |
| 23 | bundleCount Forwarded | uint32 | Number of bundles forwarded |
| 24 | bundleCount ForwardedFailed | uint32 | Number of bundles where forwarding failed |
| 25 | bundleCount Fragmented | uint32 | Number of bundles that needed fragmentation |
| 26 | bundleCount FragmentError | uint32 | Number of fragments discarded due to error |
| 27 | bundleCount GeneratedAccepted | uint32 | Number of accepted bundle transmission requests |
| 28 | bundleCount GeneratedCustodySignal | uint32 | Number of custody signals generated |
| 29 | bundleCount GeneratedFragment | uint32 | Number of generated bundle fragments |
| 30 | bundleCount GeneratedRejected | uint32 | Number of rejected bundle transmission requests |
| 31 | bundleCount MaxBsrRateExceeded | uint32 | Number of BSR bundles not sent due to rate limit |
| 32 | bundleCount NoContact | uint32 | Number of bundles whose rejected Custody Signals indicated destination is not reachable before expiration |
| 33 | bundleCount NoFurtherInfo | uint32 | Number of bundles whose rejected Custody Signals indicated No Further Info |
| 34 | bundleCount NoRoute | uint32 | Number of bundles whose rejected Custody Signals indicated the destination is not reachable |
| 35 | bundleCount Reassembled | uint32 | Number of bundles delivered that were reassembled fragments |
| 36 | bundleCount Received | uint32 | Number of bundles received |

| Field ID | Field Name | Data Type | Description |
|----------|--------------------------------------|-----------|--|
| 37 | bundleCount ReceivedAdminRecord | uint32 | Number of admin records received |
| 38 | bundleCount ReceivedBsrAccepted | uint32 | Number of Accepted BSRs received |
| 39 | bundleCount ReceivedBsrDeleted | uint32 | Number of Deleted BSRs received |
| 40 | bundleCount ReceivedBsrDelivered | uint32 | Number of Delivered BSRs received |
| 41 | bundleCount ReceivedBsrForwarded | uint32 | Number of Forwarded BSRs received |
| 42 | bundleCount ReceivedBsrReceived | uint32 | Number of Received BSRs received |
| 43 | bundleCount ReceivedCrsAccepted | uint32 | Number of Accepted CRSs received |
| 44 | bundleCount ReceivedCrsDeleted | uint32 | Number of Deleted CRSs received |
| 45 | bundleCount ReceivedCrsDelivered | uint32 | Number of Delivered CRSs received |
| 46 | bundleCount ReceivedCrsForwarded | uint32 | Number of Forwarded CRSs received |
| 47 | bundleCount ReceivedCrsReceived | uint32 | Number of Received CRSs received |
| 48 | bundleCount ReceivedCustodySignal | uint32 | Number of Custody Signals received |
| 49 | bundleCount ReceivedFragment | uint32 | Number of fragment bundles received |
| 50 | bundleCount Redundant | uint32 | Number of bundles where Custody Signals indicated redundancy |

| Field ID | Field Name | Data Type | Description |
|----------|--|-----------|--|
| 51 | bundleCount RejectedCustody | uint32 | Number of bundles whose custody the node rejected |
| 52 | bundleCount Returned | uint32 | Number of bundles returned to sender |
| 53 | bundleCount Unintelligible Block | uint32 | Number of bundles for which Custody Signals indicated the bundle contained an unknown block type |
| 54 | bundleCount Unintelligible Eid | uint32 | Number of bundles rejected for unknown EIDs |
| 55 | bundleCount Unprocessed Blocks | uint32 | Number of unprocessed blocks removed |

4.5. Node MIB Reports

This telemetry packet contains all node MIB reports variables.

Table 12. Node MIB Reports

| Field Name | Data Type | Description |
|-----------------------------|-----------|---|
| systemNodeName | char[32] | Textual name of the entity with DTN functionality. This name is human readable and used to unambiguously identify a node in the network. |
| systemNodeOwner | char[32] | Textual identifier for the primary manager of the node, who allocates node resources or functions. |
| systemSoftwareExec | char[32] | Textual identification of the underlying operating system or executive that controls the resources upon which the DTN functionality is running. |
| systemSoftwareExecVersion | char[32] | Textual representation of the version and patch-level of the software defined via nodeExecutive. Need to know the full OS with version and patch numbers. |
| bundleAgentSoftwareVersion | char[32] | Version of the BPA |
| bundleAgentOperationalState | char[32] | Operational state of the BPA |
| bundleAgentConfiguration | char[32] | Indication of the BPA configuration |
| paramSupportedCLAs | char[32] | List of supported CLAs |
| nodeActiveEndpoints | char[32] | List of active endpoints |

| Field Name | Data Type | Description |
|---|-----------|---|
| systemNodeUpTime | uint32 | Time in seconds since node has been reinitialized |
| bundleAgentAvailableStorage | uint32 | Amount of memory initially allocated for bundle storage. |
| kbytesCountStorageAvailable | uint32 | Kilobytes of storage that is free |
| bundleCountStored | uint32 | Number of bundles currently in storage |
| <i>BundleIngressRateBytesPerSec</i> | uint32 | Rate of bundles received from CLAs in bytes per second |
| <i>BundleIngressRateBundlesPerSec</i> | uint32 | Rate of bundles received from CLAs in bundles per second |
| <i>BundleEgressRateBytesPerSec</i> | uint32 | Rate of bundles forwarded to CLAs in bytes per second |
| <i>BundleEgressRateBundlesPerSec</i> | uint32 | Rate of bundles forwarded to CLAs in bundles per second |
| <i>BundleIngestedRateBytesPerSec</i> | uint32 | Rate of bundles received locally in bytes per second |
| <i>BundleIngestedRateBundlesPerSec</i> | uint32 | Rate of bundles received locally in bundles per second |
| <i>BundleDeliveryRateBytesPerSec</i> | uint32 | Rate of bundles delivered locally in bytes per second |
| <i>BundleDeliveryRateBundlesPerSec</i> | uint32 | Rate of bundles delivered locally in bundles per second |
| <i>BundleIngressRejectedRateBytesPerSec</i> | uint32 | Rate of bundles received and rejected from CLAs in bytes per second |
| <i>BundleIngressRejectedRateBundlesPerSec</i> | uint32 | Rate of bundles received and rejected from CLAs in bundles per second |
| Spare | uint32 | Spare for alignment |
| nodeStartupCounter | uint32 | Number of times node has started up |

4.6. Storage Telemetry

This packet contains telemetry values related to storage or memory usage.

Table 13. Storage Telemetry

| Field Name | Data Type | Description |
|-------------------|-----------|----------------------------------|
| BytesMemInUse | size_t | Bytes of memory currently in use |
| BytesMemFree | size_t | Bytes of memory that are free |
| BytesMemHighWater | size_t | Memory high water mark in bytes |

| Field Name | Data Type | Description |
|-----------------|-----------|--|
| KbStorageInUse | size_t | Kilobytes of storage currently in use |
| KbBundlesInStor | size_t | Kilobytes of storage currently occupied by bundles |

4.7. Channel/Contact Status Telemetry

The telemetry packet contains the following components:

Table 14. Channel/Contact Status Telemetry

| Field Name | Data Type | # Entries | Description |
|---------------|----------------------|--------------|---|
| channelStatus | Channel Status Array | 2 by default | Status for each channel (see table below) |
| contactStatus | Contact Status Array | 1 by default | Status for each contact (see table below) |

4.7.1. Channel Status Data

The Channel Status Array contains the following fields for each entry:

Table 15. Channel Status Data

| Field Name | Data Type | Description |
|-------------------|------------|---|
| localServiceNum | uint32 | Service number for the application sending/receiving ADUs on this channel |
| state | uint8 enum | Removed (0), Stopped (1), Added (2), or Started (3) |
| registrationState | uint8 enum | Active (0), PassiveDeferred (1), or PassiveAbandon (2) |
| spare | uint32 | Spare for alignment |

4.7.2. Contact Status Data

The Contact Status Array contains the following fields for each entry:

Table 16. Contact Status Data

| Field Name | Data Type | Description |
|------------|-------------------------|--|
| state | uint32 enum | Torndown (0), Setup (1), Started (2), or Stopped (3) |
| spare | uint32 | Spare for alignment |
| EIDs | Array of 3 EID patterns | List of destination EIDs for this contact |

Chapter 5. Tables

BPNode contains a built-in table translator and reader of cFS tables. The node receives table parameters through cFE Table Service, parses, translates, and passes them to the relevant internal components, e.g., for node configuration. The tables can be modified by commands to cFE Table Services and/or the specified directive(s). BPNode has the following tables and directives for their implementation:

Table 17. BPNode Tables

| Table Name | Directive or Ground Table Load |
|------------------------------------|---|
| Compressed Reporting | Ground Table Load |
| Channel Configuration | Ground Table Load |
| ADU Proxy Configuration | Ground Table Load |
| Contact Configuration | Ground Table Load |
| MIB Configuration per Node | <i>set-MIB-item</i> |
| MIB Configuration per Source | <i>set-MIB-item, add/remove-MIB-array-key</i> |
| Storage | <i>add/remove-storage-allocation</i> |
| Source Authorization Policy | <i>add/remove-authorized-sources</i> |
| Custody Authorization Policy | <i>add/remove-authorized-custody-sources</i> |
| Custodian Authorization Policy | <i>add/remove-authorized-custodians</i> |
| Report-To-EID Authorization Policy | <i>add/remove-authorized-report-to-eid</i> |
| Source Latency Policy | <i>add/remove-latency</i> |



Build 7.0 implements only the MIB configuration per node, ADU proxy, channel configuration, and contact configuration tables. Non-implemented fields in those tables are *italicized*. The remaining tables are part of BPNode but not yet used.

5.1. Compressed Reporting

This table can be updated by a ground table load. A *contact-stop* directive as well as CRS time or size triggers will prompt the processor to send an in-progress CRS. This table's functionality has not been implemented as of this build. This table contains the following components:

Table 18. CRS Trigger Data

| Field Name | Data Type | # Entries | Description |
|----------------|-------------------|---------------|-------------------------------------|
| crsTriggerData | CRS Trigger Array | 10 by default | Configurations for each CRS trigger |

Table 19. CRS Trigger Data

| Field Name | Field Type | Description |
|----------------|------------|---|
| destinationEID | EID | Destination EID. |
| timeTrigger | uint32 | A timeout value that triggers sending a CRS after no longer than the specified value. |
| sizeTrigger | uint32 | Maximum CSR size before it is encoded and sent. |

5.2. Channel Configuration

This table captures the configurations for flowing bundles to a client application. After loading the table through cFE Table Services, channel configurations in the table can be added or removed from the node with add-application/remove-application directives. The table contains the following components:

Table 20. Channel Configuration

| Field Name | Data Type | # Entries | Description |
|----------------|-----------------------|--|---|
| channelConfigs | Channel Configs Array | Maximum number of channels, 2 by default | Configurations for each channel (see table below) |

The Channel Configurations Array contains the following fields for each entry:

Table 21. Channel Configuration Array Entry Fields

| Field Name | Data Type | Description |
|----------------------|------------|--|
| AddAutomatically | bool | Load this configuration upon node startup. |
| RequestCustody | bool | Whether to request custody. |
| AduWrapping | bool | Whether to wrap an ADU in a CCSDS header upon egress. |
| AduUnwrapping | bool | Whether to unwrap an ADU in a CCSDS header upon ingress. |
| RegistrationState | uint8 enum | Active (0), PassiveDeferred (1), or PassiveAbandon (2). |
| HopLimit | uint8 | Maximum number of forwards/hops. |
| CrcType | uint8 enum | Primary block CRC type: None (0), CRC-16 (1), or CRC-32 (2). |
| Spare | uint8 | Spare for alignment |
| IngressBitsPerCycle | size_t | Maximum number of bits to ingress per wakeup cycle. Note: default wakeup rate is 10Hz. |
| EgressBitsPerCycle | size_t | Maximum number of bits to ingress per wakeup cycle. Note: default wakeup rate is 10Hz. |
| LocalServiceNumber | uint32 | Local service number (node number assumed). |
| MaxBundlePayloadSize | uint32 | Maximum bundle payload size. |

| Field Name | Data Type | Description |
|---------------------------|------------------------|---|
| BundleProcessingCtrlFlags | uint64 | RFC-9171 Bundle Processing Control Flags |
| Lifetime | uint64 | Lifetime for all bundles. |
| DestEID | EID | Destination EID |
| ReportToEID | EID | EID to send status reports to. |
| PrevNodeBlkConfig | Canonical Block Config | Configurations for the previous node block. |
| AgeBlkConfig | Canonical Block Config | Configurations for the age block. |
| HopCountBlkConfig | Canonical Block Config | Configurations for the hop count block. |
| PayloadBlkConfig | Canonical Block Config | Configurations for the payload block. |

Table 22. Canonical Block Configuration

| Field Name | Field Type | Description |
|--------------------------|------------|--|
| includeBlock | bool | Whether to include this block (must be true for the payload block) |
| CrcType | uint8 enum | CRC type: None (0), CRC-16 (1), or CRC-32 (2). |
| Spare | uint16 | Spare for alignment |
| BlockNum | uint32 | Block number |
| BlockProcessingCtrlFlags | uint64 | Canonical block processing control flags |

5.3. ADU Proxy Configuration

This table is the only table not managed by BPLib since it is specific to cFS. It defines the cFS-specific configurations for each ADU Proxy channel. The table contains the following components:

Table 23. ADU Configuration

| Field Name | Data Type | # Entries | Description |
|------------|-------------------|--|---|
| aduConfigs | ADU Configs Array | Maximum number of channels, 2 by default | Configurations for each channel (see table below) |

The ADU Configurations Array contains the following fields for each entry:

Table 24. ADU Configurations Array Entry fields

| Field Name | Data Type | # Entries | Description |
|-----------------|-----------|-----------|--|
| SendToMID | uint32 | 1 | Outgoing ADU message ID (if packetization is enabled). |
| NumRecvFromMIDs | uint32 | 1 | Number of valid MIDs in RecvFromMIDs array. |
| MsgLims | uint32 | 10 | Array of message limits corresponding to each of the message IDs |
| RecvFromMIDs | uint32 | 10 | Array of MIDs to which the node will subscribe. |

5.4. Contact Configuration

This table captures configurations for flowing bundles to a CLA. After loading the table through cFE Table Services, contact configurations in the table can be added or removed from the node with the contact-setup/contact-teardown directives. The table contains the following components:

Table 25. Contact Configuration

| Field Name | Data Type | # Entries | Description |
|----------------|-----------------------|------------------|---|
| contactConfigs | Contact Configs Array | Max contacts TBD | Configurations for each contact (see table below) |

The Contact Configurations Array contains the following fields for each entry. The following Convergence Layer Protocols are planned to be supported:

- UDP - User Datagram Protocol
- TCP - Transmission Control Protocol (with a TCP Convergence Layer Protocol (TCPCLP) header)
- EPP - Encapsulation Packet Protocol
- LTP - Licklider Transmission Protocol.
- SB - cFS Software Bus

As of build 7.0, only UDP is presently supported.

Table 26. Contact Configurations Array Entry Fields

| Field Name | Field Type | Description |
|------------|--|---|
| destEIDs | EID pattern array of size 3 by default | Destination EID patterns corresponding to this contact |
| claType | uint32 enum | Type of CLA. UDP (0), TCP (1), EPP (2), LTP (3), SB (4) |

| Field Name | Field Type | Description |
|--------------------------|------------|--|
| claInAddr | char[10] | CLA ingress IP address |
| claOutAddr | char[10] | CLA egress IP address |
| claInPort | uint16 | CLA ingress port number |
| claOutPort | uint16 | CLA egress port number |
| <i>retransmitTimeout</i> | uint32 | Bundle reforwarding timeout. |
| <i>csTimeTrigger</i> | uint32 | Custody signal time trigger in seconds. |
| <i>csSizeTrigger</i> | uint32 | Custody signal size trigger. |
| ingressBitsPerCycle | size_t | Maximum bits to ingress per wakeup cycle. Note: default wakeup rate is 10Hz. |
| egressBitsPerCycle | size_t | Maximum bits to egress per wakeup cycle. Note: default wakeup rate is 10Hz. |

5.5. MIB Node Configuration

This table defines the MIB configurations for the node:

Table 27. MIB Node Configuration

| Field ID | Field Name | Field Type | Description |
|----------|---------------------------------------|------------|--|
| N/A | instanceEID | EID | Endpoint ID of this node |
| 0 | <i>paramBundleSizeNoFragment</i> | uint32 | Maximum size of bundles that can traverse DTN without additional bundle layer fragmentation (provided by DTNNM). |
| 1 | paramSetMaxSequenceNum | uint32 | Maximum bundle sequence number. |
| 2 | <i>paramSetMaxPayloadLength</i> | uint32 | Maximum payload length for fragmentation. |
| 3 | paramSetMaxBundleLength | uint32 | Maximum bundle length. |
| 4 | <i>paramSetNodeDtnTime</i> | uint32 | Time being tracked by the node |
| 5 | <i>paramSetBehaviorEventReporting</i> | uint32 | Indication that only events at specified level or above are generated and reported via the M&C interface. |
| 6 | paramSetMaxLifetime | uint32 | Maximum bundle lifetime allowed on node |
| N/A | spare | uint32 | Spare for alignment |

5.6. MIB Source Configuration*

This table defines the MIB configurations for each specified source. This table's functionality has not been implemented as of this build.

Table 28. Source Configuration

| Field Name | Data Type | # Entries | Description |
|---------------|----------------------|----------------------------|--|
| SourceConfigs | Source Configs Array | Max sources, 10 by default | Configurations for each source (see table below) |

The Source Configurations Array contains the following fields for each entry:

Table 29. Source Configuration Array

| Field ID | Field Name | Data Type | # Entries | Description |
|----------|--------------------------------------|-------------|---|---|
| N/A | SrcEIDs | EID Pattern | Max MIB Per Source EID Patterns, 4 by default | Source EID Patterns |
| 6 | ParamSetMaxLifetime | uint32 | 1 | Maximum bundle lifetime (in seconds) that ensures that bundle retention until its expiration time will not degrade operation of the receiving node. Used by node to determine when the bundle must be deleted to prevent network performance degradation. |
| 7 | ParamSetMaxBSRGenerationRate | uint32 | 1 | Maximum number of bundles per minute that can be generated for each source |
| 8 | ParamSetMaxCBRGenerationRate | uint32 | 1 | Maximum number of bundles per minute that can be generated for each source |
| 9 | BundleSetBehaviorReceivedBSRGenerate | uint32 | 1 | Flag indicating bundle reception status reports should be generated |
| 10 | BundleSetBehaviorAcceptedBSRGenerate | uint32 | 1 | Flag indicating bundle custody accepted status reports should be generated |

| Field ID | Field Name | Data Type | # Entries | Description |
|----------|---------------------------------------|-----------|-----------|--|
| 11 | BundleSetBehaviorForwardedBSRGenerate | uint32 | 1 | Flag indicating bundle forwarded status reports should be generated |
| 12 | BundleSetBehaviorDeliveredBSRGenerate | uint32 | 1 | Flag indicating bundle delivered status reports should be generated |
| 13 | BundleSetBehaviorDeletedBSRGenerate | uint32 | 1 | Flag indicating bundle deleted status reports should be generated |
| 14 | BundleSetBehaviorReceivedCBRGenerate | uint32 | 1 | Flag indicating bundle reception status reports should be generated |
| 15 | BundleSetBehaviorAcceptedCBRGenerate | uint32 | 1 | Flag indicating bundle custody accepted status reports should be generated |
| 16 | BundleSetBehaviorForwardedCBRGenerate | uint32 | 1 | Flag indicating bundle forwarded status reports should be generated |
| 17 | BundleSetBehaviorDeliveredCBRGenerate | uint32 | 1 | Flag indicating bundle delivered status reports should be generated |
| 18 | BundleSetBehaviorDeletedCBRGenerate | uint32 | 1 | Flag indicating bundle deleted status reports should be generated |

5.7. Policy by EID Pattern Authorization Tables*

The Policy by EID Pattern Authorization Tables are: Source Authorization Policy, Custodian Authorization Policy, Report-To-EID Authorization Policy, Source Latency Policy, and Storage Allocation. These tables' functionality have not been implemented as of this build.

Note: When a table has only one field its entry is simplified to two columns.

5.8. Source Authorization Policy*

This table contains the following components:

authorizedSources (EID Pattern[10]) Source EIDs from which the node is authorized to receive data.

5.9. Custodian Authorization Policy*

This table contains the following components:

authorizedCustodians (EID Pattern[10]) Custodian block source node IDs to which the node is authorized to acknowledge custody.

5.10. Report-To-EID Authorization Policy*

This table contains the following components:

authorizedReportToEIDs (EID Pattern[10]) Node EIDs to which this node is authorized to send reports.

5.11. Source Latency Policy*

This table contains the following components:

Table 30. Latencies

| Field Name | Data Type | # Entries | Description |
|------------|---------------|-------------------------------------|---|
| Latencies | Latency Array | Max source latencies, 10 by default | Latencies for each defined source EID (see table below) |

The Latency Array contains the following fields for each entry:

sourceEID (EID Pattern) Source EID pattern

latency (uint32 enum) Source latency: Low, Medium, High

spare (uint32) Spare for alignment

5.12. Storage*

The storage allocation defines how to partition the storage database by source EIDs. This table's functionality has not been implemented as of this build. This table contains the following components:

Table 31. Partition Configuration

| Field Name | Data Type | # Entries | Description |
|------------|-----------|-----------|-------------|
|------------|-----------|-----------|-------------|

| | | | |
|------------------|-------------------------|-------------------------------|---|
| partitionConfigs | Partition Configs Array | Max partitions, 10 by default | Partition sizes for each source EID (see table below) |
|------------------|-------------------------|-------------------------------|---|

The Partition Configurations Array contains the following fields for each entry:

sourceEID (EID Pattern array of length 10 by default) Source EID patterns

partitionSize (uint32) Storage partition size

Chapter 6. Events

Events are a subset of telemetry with a real-time transport Quality of Service for local fault handling. When a BPNode event occurs, the node logs messages and reports them to operators in the form of the CCSDS space packets.

| | |
|---------------------------------------|---|
| BPLib_EM_EventType_DEBUG | (1) Intended only for debugging, not nominal operations |
| BPLib_EM_EventType_INFORMATION | (2) Identify a state change or action that is nominal |
| BPLib_EM_EventType_WARNING | (3) Identify a state change or action that is not an error but is off-nominal |
| BPLib_EM_EventType_ERROR | (4) Identify an error that is not catastrophic (e.g., a bad command) |
| BPLib_EM_EventType_CRITICAL | (5) Identify errors that are unrecoverable autonomously. |

In a cFS-based system, these event types map onto the equivalent cFS event types, with the exception of `BPLib_EM_EventType_WARNING`, which maps onto `CFE_EVS_EventType_INFORMATION`.

The sections below group events by subsystem or module that generates them. All event messages are time-stamped.

6.1. BPNode Main Task Events

These events are within the scope of the cFS BPNode app and are issued by the main task.

Table 32. BPNode Main Task Events

| Event Mnemonic | Event ID | Event Type | Description |
|-------------------------------------|----------|---------------|---|
| <code>BPNODE_INIT_INF_EID</code> | 1 | Informational | Issued after a successful app initialization |
| <code>BPNODE_CC_ERR_EID</code> | 2 | Error | An invalid command code was received |
| <code>BPNODE_NOOP_INF_EID</code> | 3 | Informational | A no-op command was received |
| <code>BPNODE_MID_ERR_EID</code> | 5 | Error | An invalid message ID was received |
| <code>BPNODE_CMD_LEN_ERR_EID</code> | 6 | Error | A command with an invalid length was received |
| <code>BPNODE_PIPE_ERR_EID</code> | 7 | Error | A SB pipe error was received when attempting to read a pipe |

| Event Mnemonic | Event ID | Event Type | Description |
|-----------------------------------|----------|---------------|---|
| BPNODE_CR_CMD_PIPE_ERR_EID | 8 | Error | Error creating the SB command pipe |
| BPNODE_CR_WKP_PIPE_ERR_EID | 9 | Error | Error creating the SB wakeup pipe |
| BPNODE_SUB_CMD_ERR_EID | 10 | Error | Error subscribing to the SB command pipe |
| BPNODE_SUB_WKP_ERR_EID | 11 | Error | Error subscribing to the SB wakeup pipe |
| BPNODE_TBL_REG_ERR_EID | 12 | Error | Error registering a table |
| BPNODE_TBL_LD_ERR_EID | 13 | Error | Error loading a table |
| BPNODE_TBL_ADD_R_ERR_EID | 14 | Error | Error getting the address for a table |
| BPNODE_TBL_MNG_ERR_EID | 15 | Error | Error checking for table updates |
| BPNODE_FWP_INIT_ERR_EID | 16 | Error | Error initializing the Framework Proxy |
| BPNODE_EXIT_CRIT_EID | 17 | Critical | App is shutting down |
| BPNODE_AUTO_ADD_APP_INF_EID | 18 | Informational | Automatically adding and starting an application at initialization |
| BPNODE_ADU_START_SUB_DBG_EID | 23 | Debug | Error subscribing to a message ID on a start-application directive |
| BPNODE_ADU_STOP_UNSUB_DBG_EID | 26 | Debug | Error unsubscribing to a message ID on a stop-application directive |
| BPNODE_TIME_INIT_ERR_EID | 51 | Error | Error initializing Time Management |
| BPNODE_TIME_WKP_ERR_EID | 52 | Error | Error performing time maintenance operations |
| BPNODE_CLA_IN_CFG_PORT_ERR_EID | 62 | Error | Error setting UDP port for CLA ingress |
| BPNODE_CLA_IN_CFG_IP_ERR_EID | 63 | Error | Error setting IP address for CLA ingress |
| BPNODE_CLA_IN_CFG_SET_RUN_ERR_EID | 65 | Error | Error setting I/O run state for CLA ingress |

| Event Mnemonic | Event ID | Event Type | Description |
|------------------------------------|----------|------------|---|
| BPNODE_CLA_OUT_CFG_PORT_ERR_EID | 84 | Error | Error setting UDP port for CLA egress |
| BPNODE_CLA_OUT_CFG_IP_ERR_EID | 85 | Error | Error setting IP address for CLA egress |
| BPNODE_CLA_OUT_CFG_SET_RUN_ERR_EID | 87 | Error | Error setting I/O run state for CLA egress |
| BPNODE_NC_AS_INIT_ERR_EID | 114 | Error | Error initializing NC/AS |
| BPNODE_DEL_HANDLER_ERR_EID | 118 | Error | Error installing delete handler |
| BPNODE_QM_INIT_ERR_EID | 122 | Error | Error initializing QM |
| BPNODE_MEM_INIT_ERR_EID | 123 | Error | Error initializing memory |
| BPNODE_ADU_OUT_PI_OUT_ERR_EID | 124 | Error | Error egressing an ADU |
| BPNODE_NC_CFG_UPDATE_ERR_EID | 126 | Error | Error managing configuration updates |
| BPNODE_INIT_NOTIFY_CR_ERR_EID | 128 | Error | Error creating the start work child task notification |

6.2. BPNode ADU In Task Events

These events are within the scope of the cFS BPNode app and are issued by the ADU In Tasks. Since there can be multiple ADU In tasks (one for each allowed channel), the channel ID of the task is specified at the beginning of every event message.

Table 33. BPNode ADU In Task Events

| Event Mnemonic | Event ID | Event Type | Description |
|--------------------------------|----------|------------|--|
| BPNODE_ADU_IN_TOO_BIG_ERR_EID | 27 | Error | Received an ADU that is larger than the channel configuration table allows |
| BPNODE_ADU_IN_INIT_SEM_ERR_EID | 28 | Error | Error creating the initialization semaphore |
| BPNODE_ADU_IN_NOTIFY_ERR_EID | 29 | Error | Error pending on start work notification |
| BPNODE_ADU_IN_EXIT_SEM_ERR_EID | 30 | Error | Error creating the exit semaphore |

| Event Mnemonic | Event ID | Event Type | Description |
|-----------------------------------|----------|---------------|---|
| BPNODE_ADU_IN_CREATE_ERR_EID | 31 | Error | Error creating the child task |
| BPNODE_ADU_IN_RUN_ERR_EID | 32 | Error | Error taking the initialization semaphore |
| BPNODE_ADU_IN_INIT_SEM_TK_ERR_EID | 33 | Error | Error giving the initialization semaphore |
| BPNODE_ADU_IN_INIT_INF_EID | 34 | Informational | Child task initialized |
| BPNODE_ADU_IN_EXIT_CRIT_EID | 35 | Critical | Child task is shutting down |
| BPNODE_ADU_IN_NO_ID_ERR_EID | 36 | Critical | Failed to get task ID |
| BPNODE_ADU_IN_NV_ID_ERR_EID | 37 | Error | Unable to match task ID to a channel ID |
| BPNODE_ADU_IN_CREATE_PIPE_ERR_EID | 38 | Error | Error creating ADU in SB pipe |
| BPNODE_ADU_IN_UNK_EXIT_CRIT_EID | 39 | Critical | Unable to obtain channel ID of task and shutting down |

6.3. BPNode ADU Out Task Events

These events are within the scope of the cFS BPNode app and are issued by the ADU Out Tasks. Since there can be multiple ADU Out tasks (one for each allowed channel), the channel ID of the task is specified at the beginning of every event message.

Table 34. BPNode ADU Out Task Events

| Event Mnemonic | Event ID | Event Type | Description |
|---------------------------------|----------|------------|---|
| BPNODE_ADU_OUT_INIT_SEM_ERR_EID | 40 | Error | Error creating the initialization semaphore |
| BPNODE_ADU_OUT_NOTIF_ERR_EID | 41 | Error | Error pending on start work notification |
| BPNODE_ADU_OUT_EXIT_SEM_ERR_EID | 42 | Error | Error creating the exit semaphore |
| BPNODE_ADU_OUT_CREATE_ERR_EID | 43 | Error | Error creating the child task |
| BPNODE_ADU_OUT_RUN_ERR_EID | 44 | Error | Error taking the initialization semaphore |

| Event Mnemonic | Event ID | Event Type | Description |
|------------------------------------|----------|---------------|---|
| BPNODE_ADU_OUT_INIT_SEM_TK_ERR_EID | 45 | Error | Error giving the initialization semaphore |
| BPNODE_ADU_OUT_INIT_INF_EID | 46 | Informational | Child task initialized |
| BPNODE_ADU_OUT_EXIT_CRIT_EID | 47 | Critical | Child task is shutting down |
| BPNODE_ADU_OUT_NO_ID_ERR_EID | 48 | Critical | Failed to get task ID |
| BPNODE_ADU_OUT_INV_ID_ERR_EID | 49 | Error | Unable to match task ID to a channel ID |
| BPNODE_ADU_OUT_UNK_EXIT_CRIT_EID | 50 | Critical | Unable to obtain channel ID of task and shutting down |

6.4. BPNode CLA In Task Events

These events are within the scope of the cFS BPNode app and are issued by the CLA In Tasks. Since there can be multiple CLA In tasks (one for each allowed contact), the contact ID of the task is specified at the beginning of every event message.

Table 35. BPNode CLA In Task Events

| Event Mnemonic | Event ID | Event Type | Description |
|---------------------------------|----------|---------------|--|
| BPNODE_CLA_IN_FIND_NAME_ERR_EID | 61 | Error | Error finding UDP I/O driver |
| BPNODE_CLA_IN_CFG_DIR_ERR_EID | 64 | Error | Error setting I/O direction to input |
| BPNODE_CLA_IN_INIT_SEM_ERR_EID | 66 | Error | Error creating the initialization semaphore |
| BPNODE_CLA_IN_INIT_INF_EID | 67 | Informational | Child task initialized |
| BPNODE_CLA_IN_NOTIFY_ERR_EID | 68 | Error | Error pending on start work notification |
| BPNODE_CLA_IN_EXIT_SEM_ERR_EID | 69 | Error | Error creating the exit semaphore |
| BPNODE_CLA_IN_CREATE_ERR_EID | 70 | Error | Error creating the child task |
| BPNODE_CLA_IN_RETURN_ERR_EID | 71 | Error | Error giving/taking the initialization semaphore |

| Event Mnemonic | Event ID | Event Type | Description |
|---------------------------------|----------|------------|---|
| BPNODE_CLA_IN_EXIT_CRIT_EID | 72 | Critical | Child task is shutting down |
| BPNODE_CLA_IN_NO_ID_ERR_EID | 73 | Critical | Failed to get task ID |
| BPNODE_CLA_IN_INV_ID_ERR_EID | 74 | Error | Unable to match task ID to a contact ID |
| BPNODE_CLA_IN_UNK_EXIT_CRIT_EID | 77 | Critical | Unable to obtain contact ID of task and shutting down |
| BPNODE_CLA_IN_IO_READ_ERR_EID | 81 | Error | Error reading from the UDP port |

6.5. BPNODE CLA Out Task Events

These events are within the scope of the cFS BPNODE app and are issued by the CLA Out Tasks. Since there can be multiple CLA Out tasks (one for each allowed contact), the contact ID of the task is specified at the beginning of every event message.

Table 36. BPNODE CLA Out Task Events

| Event Mnemonic | Event ID | Event Type | Description |
|----------------------------------|----------|---------------|--|
| BPNODE_CLA_OUT_LIB_LOAD_ERR_EID | 82 | Error | Error getting bundle for egress |
| BPNODE_CLA_OUT_FIND_NAME_ERR_EID | 83 | Error | Error finding UDP I/O driver |
| BPNODE_CLA_OUT_CFG_DIR_ERR_EID | 86 | Error | Error setting I/O direction to output |
| BPNODE_CLA_OUT_INIT_SEM_ERR_EID | 88 | Error | Error creating the initialization semaphore |
| BPNODE_CLA_OUT_INIT_INF_EID | 89 | Informational | Child task initialized |
| BPNODE_CLA_OUT_NOTIF_ERR_EID | 90 | Error | Error pending on start work notification |
| BPNODE_CLA_OUT_EXIT_SEM_ERR_EID | 91 | Error | Error creating the exit semaphore |
| BPNODE_CLA_OUT_CREATE_ERR_EID | 92 | Error | Error creating the child task |
| BPNODE_CLA_OUT_RUN_ERR_EID | 93 | Error | Error giving/taking the initialization semaphore |
| BPNODE_CLA_OUT_INV_ID_ERR_EID | 98 | Error | Unable to match task ID to a contact ID |

| Event Mnemonic | Event ID | Event Type | Description |
|----------------------------------|----------|------------|-----------------------------|
| BPNODE_CLA_OUT_UNK_EXIT_CRIT_EID | 100 | Critical | Child task is shutting down |

6.6. BPNode Generic Worker Task Events

These events are within the scope of the cFS BPNode app and are issued by the Generic Worker tasks. Since there can be multiple Generic Worker tasks, the worker ID of the task is specified at the beginning of every event message.

Table 37. BPNode Generic Worker Events

| Event Mnemonic | Event ID | Event Type | Description |
|-----------------------------------|----------|---------------|--|
| BPNODE_GEN_WRKR_SEM_CR_ERR_EID | 101 | Error | Error creating the initialization semaphore |
| BPNODE_GEN_WRKR_EXIT_SEM_ERR_EID | 102 | Error | Error creating the exit semaphore |
| BPNODE_GEN_WRKR_CREATE_ERR_EID | 103 | Error | Error creating the child task |
| BPNODE_GEN_WRKR_RUN_ERR_EID | 104 | Error | Error taking the initialization semaphore |
| BPNODE_GEN_WRKR_SEM_INIT_ERR_EID | 105 | Error | Error giving/taking the initialization semaphore |
| BPNODE_GEN_WRKR_INIT_INF_EID | 106 | Informational | Child task initialized |
| BPNODE_GEN_WRKR_EXIT_CRIT_EID | 107 | Critical | Child task is shutting down |
| BPNODE_GEN_WRKR_NO_ID_ERR_EID | 108 | Error | Failed to get task ID |
| BPNODE_GEN_WRKR_INV_ID_ERR_EID | 109 | Error | Unable to match task ID to a worker ID |
| BPNODE_GEN_WRKR_UNK_EXIT_CRIT_EID | 110 | Critical | Unable to obtain worker ID of task and shutting down |
| BPNODE_GEN_WRKR_NOTIF_ERR_EID | 111 | Error | Error pending on start work notification |

| Event Mnemonic | Event ID | Event Type | Description |
|--|----------|------------|-------------------------------------|
| BPNODE_GEN_WR KR_REGISTER_ERR_ EID | 112 | Error | Error registering worker with BPLib |
| BPNODE_GEN_WR KR_TASKRUN_ERR_ EID | 113 | Error | Error running worker job |

6.7. BPLib Node Configuration Events

These events are issued directly by BPLib and relate to directive processing and node configuration. They can be issued by any of the specified tasks, although the task name should be specified at the beginning of every event message if the issuing task is not the main task.

Table 38. BPLib Node Configuration Events

| Event Mnemonic | Event ID | Event Type | Description |
|--|----------|---------------|---|
| BPLIB_NC_NOOP_S UCCESS_EID | 501 | Informational | Success receiving a noop directive |
| BPLIB_NC_ADD_AL L_APPS_SUCCESS_E ID | 502 | Informational | Success receiving an add-all-applications directive |
| BPLIB_NC_ADD_AP P_SUCCESS_EID | 503 | Informational | Success receiving an add-application directive |
| BPLIB_NC_ADD_AU TH_CUSTODIANS_S UCCESS_EID | 504 | Informational | Success receiving an add-authorized-custodians directive |
| BPLIB_NC_ADD_AU TH_CUST_SRCS_SUC CESS_EID | 505 | Informational | Success receiving an add-authorized-custody-sources directive |
| BPLIB_NC_ADD_AU TH_RPT_EID_SUCCE SS_EID | 506 | Informational | Success receiving an add-authorized-report-to-eid directive |
| BPLIB_NC_ADD_AU TH_SRCS_SUCCESS_ EID | 507 | Informational | Success receiving an add-authorized-sources directive |
| BPLIB_NC_ADD_LA TENCY_SUCCESS_EI D | 508 | Informational | Success receiving an add-latency directive |
| BPLIB_NC_ADD_MI B_ARR_KEY_SUCCE SS_EID | 509 | Informational | Success receiving an add-mib-array-key directive |

| Event Mnemonic | Event ID | Event Type | Description |
|--|----------|---------------|--|
| BPLIB_NC_ADD_STOR_ALLOC_SUCCESS_EID | 510 | Informational | Success receiving an add-storage-allocation directive |
| BPLIB_NC_CLR_VOLATILE_SUCCESS_EID | 511 | Informational | Success receiving a clear-volatile directive |
| BPLIB_NC_CONTACT_SETUP_SUCCESS_EID | 512 | Informational | Success receiving a contact-setup directive |
| BPLIB_NC_CONTACT_START_SUCCESS_EID | 513 | Informational | Success receiving a contact-start directive |
| BPLIB_NC_CONTACT_STOP_SUCCESS_EID | 514 | Informational | Success receiving a contact-stop directive |
| BPLIB_NC_CONTACT_TEARDOWN_SUCCESS_EID | 515 | Informational | Success receiving a contact-teardown directive |
| BPLIB_NC_INIT_BUNDLE_STOR_SUCCESS_EID | 516 | Informational | Success receiving an initialize-bundle-storage directive |
| BPLIB_NC_PERFORM_SELF_TEST_SUCCESS_EID | 517 | Informational | Success receiving a perform-self-test directive |
| BPLIB_NC_REBUILD_BUNDLE_METADATA_SUCCESS_EID | 518 | Informational | Success receiving a rebuild-bundle-metadata directive |
| BPLIB_NC_RELOAD_SVD_DATA_SUCCESS_EID | 519 | Informational | Success receiving a reload-saved-data directive |
| BPLIB_NC_RESET_ALL_COUNTERS_SUCCESS_EID | 520 | Informational | Success receiving a reset-all-counters directive |
| BPLIB_NC_RESET_BUNDLE_COUNTERS_SUCCESS_EID | 521 | Informational | Success receiving a reset-bundle-counters directive |
| BPLIB_NC_RESET_COUNTER_SUCCESS_EID | 522 | Informational | Success receiving a reset-counter directive |
| BPLIB_NC_RESET_ERROR_COUNTERS_SUCCESS_EID | 523 | Informational | Success receiving a reset-error-counters directive |

| Event Mnemonic | Event ID | Event Type | Description |
|---|----------|---------------|---|
| BPLIB_NC_RESET_SRC_CTRS_SUCCESS_EID | 524 | Informational | Success receiving a reset-source-counters directive |
| BPLIB_NC_RM_APP_SUCCESS_EID | 525 | Informational | Success receiving a remove-application directive |
| BPLIB_NC_RM_AUTH_CUSTODIANS_SUCCESS_EID | 526 | Informational | Success receiving a remove-authorized-custodians directive |
| BPLIB_NC_RM_AUTH_CUST_SRCS_SUCCESS_EID | 527 | Informational | Success receiving a remove-authorized-custody-sources directive |
| BPLIB_NC_RM_AUTH_RPT_EID_SUCCESS_EID | 528 | Informational | Success receiving a remove-authorized-report-to-eid directive |
| BPLIB_NC_RM_AUTH_SRCS_SUCCESS_EID | 529 | Informational | Success receiving a remove-authorized-sources directive |
| BPLIB_NC_RM_LATENCY_SUCCESS_EID | 530 | Informational | Success receiving a remove-latency directive |
| BPLIB_NC_RM_MIB_ARR_KEY_SUCCESS_EID | 531 | Informational | Success receiving a remove-mib-array-key directive |
| BPLIB_NC_RM_STORAGE_ALLOC_SUCCESS_EID | 532 | Informational | Success receiving a remove-storage-allocation directive |
| BPLIB_NC_SET_MIB_ITEM_SUCCESS_EID | 533 | Informational | Success receiving a set-mib-item directive |
| BPLIB_NC_SET_REGI_STAT_SUCCESS_EID | 534 | Informational | Success receiving a set-registration-state directive |
| BPLIB_NC_START_ALL_APPS_SUCCESS_EID | 535 | Informational | Success receiving a start-all-applications directive |
| BPLIB_NC_START_APP_SUCCESS_EID | 536 | Informational | Success receiving a start-application directive |
| BPLIB_NC_STOP_APP_SUCCESS_EID | 537 | Informational | Success receiving a stop-application directive |

| Event Mnemonic | Event ID | Event Type | Description |
|--------------------------------------|----------|---------------|--|
| BPLIB_NC_VERIF_BNDL_META_SUCCESS_EID | 538 | Informational | Success receiving a verify-bundle-metadata directive |
| BPLIB_NC_VERIF_BNDL_SUCCESS_EID | 539 | Informational | Success receiving a verify-bundle-storage directive |
| BPLIB_NC_ADD_ALL_APPS_ERR_EID | 540 | Error | Error receiving an add-all-applications directive |
| BPLIB_NC_ADD_APP_ERR_EID | 541 | Error | Error receiving an add-application directive |
| BPLIB_NC_ADD_AUTH_CUSTODIANS_ERR_EID | 542 | Error | Error receiving an add-authorized-custodians directive |
| BPLIB_NC_ADD_AUTH_CUST_SRCS_ERR_EID | 543 | Error | Error receiving an add-authorized-custody-sourcesdirective |
| BPLIB_NC_ADD_AUTH_RPT_EID_ERR_EID | 544 | Error | Error receiving an add-authorized-report-to-eid directive |
| BPLIB_NC_ADD_AUTH_SRCS_ERR_EID | 545 | Error | Error receiving an add-authorized-sources directive |
| BPLIB_NC_ADD_LATENCY_ERR_EID | 546 | Error | Error receiving an add-latency directive |
| BPLIB_NC_ADD_MIB_ARRAY_KEY_ERR_EID | 547 | Error | Error receiving an add-mib-array-key directive |
| BPLIB_NC_ADD_STORAGE_ALLOC_ERR_EID | 548 | Error | Error receiving an add-storage-allocation directive |
| BPLIB_NC_CLR_VOLATILE_ERR_EID | 549 | Error | Error receiving a clear-volatile directive |
| BPLIB_NC_CONTACT_SETUP_ERR_EID | 550 | Error | Error receiving a contact-setup directive |
| BPLIB_NC_CONTACT_START_ERR_EID | 551 | Error | Error receiving a contact-start directive |
| BPLIB_NC_CONTACT_STOP_ERR_EID | 552 | Error | Error receiving a contact-stop directive |
| BPLIB_NC_CONTACT_TEARDOWN_ERR_EID | 553 | Error | Error receiving a contact-teardown directive |

| Event Mnemonic | Event ID | Event Type | Description |
|---|----------|------------|---|
| BPLIB_NC_INIT_BN DL_STOR_ERR_EID | 554 | Error | Error receiving a initialize-bundle-storage directive |
| BPLIB_NC_PERFOR M_SELF_TEST_ERR_ EID | 555 | Error | Error receiving a perform-self-test directive |
| BPLIB_NC_REBUIL D_BNDL_META_ER R_EID | 556 | Error | Error receiving a rebuild-bundle-metadata directive |
| BPLIB_NC_RELOAD _SVD_DATA_ERR_EI D | 557 | Error | Error receiving a reload-saved-data directive |
| BPLIB_NC_RESET_C TR_ERR_EID | 558 | Error | Error receiving a reset-counter directive |
| BPLIB_NC_RESET_S RC_CTRS_ERR_EID | 559 | Error | Error receiving a reset-source-counters directive |
| BPLIB_NC_RESET_B NDL_CTRS_ERR_EI D | 560 | Error | Error receiving a reset-bundle-counters directive |
| BPLIB_NC_RESET_E RR_CTRS_ERR_EID | 561 | Error | Error receiving a reset-error-counters directive |
| BPLIB_NC_RM_APP _ERR_EID | 562 | Error | Error receiving a remove-application directive |
| BPLIB_NC_RM_AUT H_CUSTODIANS_ER R_EID | 563 | Error | Error receiving a remove-authorized-custodians directive |
| BPLIB_NC_RM_AUT H_CUST_SRCS_ERR_ EID | 564 | Error | Error receiving a remove-authorized-custody-sources directive |
| BPLIB_NC_RM_AUT H_RPT_EID_ERR_EI D | 565 | Error | Error receiving a remove-authorized-report-to-eid directive |
| BPLIB_NC_RM_AUT H_SRCS_ERR_EID | 566 | Error | Error receiving a remove-authorized-sources directive |
| BPLIB_NC_RM_LAT ENCY_ERR_EID | 567 | Error | Error receiving a remove-latency directive |
| BPLIB_NC_RM_MIB _ARR_KEY_ERR_EID | 568 | Error | Error receiving a remove-mib-array-key directive |
| BPLIB_NC_RM_STO R_ALLOC_ERR_EID | 569 | Error | Error receiving a remove-storage-allocation directive |

| Event Mnemonic | Event ID | Event Type | Description |
|-----------------------------------|----------|---------------|--|
| BPLIB_NC_SET_MIB_ITEM_ERR_EID | 570 | Error | Error receiving a set-mib-item directive |
| BPLIB_NC_SET_REGI_STAT_ERR_EID | 571 | Error | Error receiving a set-registration-state directive |
| BPLIB_NC_START_ALL_APPS_ERR_EID | 572 | Error | Error receiving a start-all-applications directive |
| BPLIB_NC_START_APP_ERR_EID | 573 | Error | Error receiving a start-application directive |
| BPLIB_NC_STOP_APP_ERR_EID | 574 | Error | Error receiving a stop-application directive |
| BPLIB_NC_VERIF_BNDL_ERR_EID | 575 | Error | Error receiving a verify-bundle-storage directive |
| BPLIB_NC_VERIF_BNDL_META_ERR_EID | 576 | Error | Error receiving a verify-bundle-metadata directive |
| BPLIB_NC_SEND_NODE_CONFIG_ERR_EID | 577 | Error | Error receiving a send-node-mib-config-hk directive |
| BPLIB_NC_SEND_SRC_CONFIG_ERR_EID | 578 | Error | Error receiving a send-source-mib-config-hk directive |
| BPLIB_NC_SEND_NODE_CNTRS_ERR_EID | 579 | Error | Error receiving a send-node-mib-counters-hk directive |
| BPLIB_NC_SEND_SRC_CNTRS_ERR_EID | 580 | Error | Error receiving a send-source-mib-counters-hk directive |
| BPLIB_NC_SEND_STORAGE_ERR_EID | 581 | Error | Error receiving a send-storage-hk directive |
| BPLIB_NC_SEND_CONTACTS_ERR_EID | 582 | Error | Error receiving a send-channel-contact-status-hk directive |
| BPLIB_NC_SEND_REPORTS_ERR_EID | 583 | Error | Error receiving a send-node-mib-reports-hk directive |
| BPLIB_NC_TBL_UPDATE_INF_EID | 606 | Informational | Updated a configuration table successfully |

6.8. BPLib Admin Statistics (AS) Events

These events are issued directly by BPLib and relate to AS operations. They can be issued by any of the specified tasks, although the task name should be specified at the beginning of every event message if the issuing task is not the main task.

Table 39. BPLib Admin Statistics Events

| Event Mnemonic | Event ID | Event Type | Description |
|---------------------------------|----------|------------|---|
| BPLIB_AS_TAKE_M UTEX_ERR_EID | 590 | Error | Error taking counters mutex |
| BPLIB_AS_GIVE_M UTEX_ERR_EID | 591 | Error | Error giving counters mutex |
| BPLIB_AS_SET_CTR _ERR_EID | 592 | Error | Error incrementing/decrementing a counter |

6.9. BPLib Storage Events

These events are issued directly by BPLib and relate to Storage operations. They can be issued by any of the specified tasks, although the task name should be specified at the beginning of every event message if the issuing task is not the main task.

Table 40. BPLib Storage Events

| Event Mnemonic | Event ID | Event Type | Description |
|------------------------------------|----------|---------------|---|
| BPLIB_STOR_SQL_L OAD_ERR_EID | 608 | Error | Error loading bundles from storage for egress |
| BPLIB_STOR_SQL_S TORE_ERR_EID | 609 | Error | Error storing bundle |
| BPLIB_STOR_SQL_G C_ERR_EID | 610 | Error | Error discarding egressed/expired bundles |
| BPLIB_STOR_DB_FU LL_INF_EID | 611 | Informational | Storage is full, dropping bundles |
| BPLIB_STOR_DB_G ET_SIZE_ERR_EID | 612 | Error | Error getting database size |

6.10. BPLib Bundle Interface Events

These events are issued directly by BPLib and relate to BI and CLA operations. They can be issued by any of the specified tasks, although the task name should be specified at the beginning of every event message if the issuing task is not the main task.

Table 41. BPLib BI/CLA Events

| Event Mnemonic | Event ID | Event Type | Description |
|--|----------|------------|---|
| BPLIB_BI_INGRESS_ CBOR_DECODE_INF _EID | 650 | Error | Error ingressing a bundle |
| BPLIB_CLA_CONTA CT_NO_STATE_CHG _DBG_EID | 661 | Debug | A contact directive was received that didn't change the contact state |

| Event Mnemonic | Event ID | Event Type | Description |
|--------------------------------------|----------|------------|---|
| BPLIB_CLA_INVALID_CONTACT_ID_DBG_EID | 662 | Debug | Invalid contact ID provided by a contact directive |
| BPLIB_CLA_REMOVE_QUEUE_FLUSH_DBG_EID | 663 | Debug | Error storing bundles in egress queue upon receiving a contact-teardown directive |

6.11. BPLib Payload Interface (PI) Events

These events are issued directly by BPLib and relate to PI operations. They can be issued by any of the specified tasks, although the task name should be specified at the beginning of every event message if the issuing task is not the main task.

Table 42. BPLib PI Events

| Event Mnemonic | Event ID | Event Type | Description |
|-------------------------------|----------|------------|--|
| BPLIB_PI_EGRESS_ERR_EID | 682 | Error | Error copying ADU out for egress |
| BPLIB_PI_INGRESS_ERR_EID | 683 | Error | Error ingressing an ADU |
| BPLIB_PI_REMOVE_STATE_DBG_EID | 684 | Debug | Invalid app state upon receiving a remove-application directive |
| BPLIB_PI_REMOVE_ID_DBG_EID | 685 | Debug | Invalid channel ID in a remove-application directive |
| BPLIB_PI_REMOVE_FWP_DBG_EID | 686 | Debug | Framework-specific error upon receiving a remove-application directive |
| BPLIB_PI_ADD_ID_DBG_EID | 687 | Debug | Invalid channel ID in an add-application directive |
| BPLIB_PI_ADD_STATE_DBG_EID | 688 | Debug | Invalid app state upon receiving an add-application directive |
| BPLIB_PI_ADD_FWP_DBG_EID | 689 | Debug | Framework-specific error upon receiving an add-application directive |
| BPLIB_PI_START_ID_DBG_EID | 690 | Debug | Invalid channel ID in a start-application directive |
| BPLIB_PI_START_STATE_DBG_EID | 691 | Debug | Invalid app state upon receiving a start-application directive |
| BPLIB_PI_START_FWP_DBG_EID | 692 | Debug | Framework-specific error upon receiving a start-application directive |
| BPLIB_PI_STOP_ID_DBG_EID | 693 | Debug | Invalid channel ID in a stop-application directive |

| Event Mnemonic | Event ID | Event Type | Description |
|---|----------|------------|---|
| BPLIB_PI_STOP_ST ATE_DBG_EID | 694 | Debug | Invalid app state upon receiving a stop-application directive |
| BPLIB_PI_STOP_FW P_DBG_EID | 695 | Debug | Framework-specific error upon receiving a stop-application directive |
| BPLIB_PI_REMOVE_ QUEUE_FLUSH_DB G_EID | 696 | Debug | Error storing bundles in egress queue upon receiving a remove-application directive |

6.12. BPLib Queue Management (QM) Events

These events are issued directly by BPLib and relate to queue and job operations. They can be issued by any of the specified tasks, although the task name should be specified at the beginning of every event message if the issuing task is not the main task.

Table 43. BPLib QM Events

| Event Mnemonic | Event ID | Event Type | Description |
|------------------------------|----------|------------|---------------------------------|
| BPLIB_QM_EBP_OU T_ERR_EID | 700 | Error | Error updating extension blocks |

Appendix A: Acronyms and Abbreviations

| Acronym or Abbreviation | Description |
|-------------------------|---|
| ADU | Application Data Unit |
| AS | Admin Statistics |
| BI | Bundle Interface |
| BP | Bundle Protocol |
| BPNode | Bundle Protocol Node |
| BPLib | Bundle Protocol Library |
| BSR | Bundle Status Report |
| CBOR | Concise Binary Object Representation |
| CBR | Compressed Bundle Reporting |
| CCB | Configuration Control Board |
| CCSDS | Consultative Committee for Space Data Systems |
| cFS | core Flight System |
| CL | Convergence Layer |
| CLA | Convergence Layer Adapter |
| CM | Configuration Management |
| CRC | Cyclic Redundancy Check |
| CREB | Compressed Reporting Extension Block |
| CRS | Compressed Reporting Signal |
| CTDB | Custody Transfer Database |
| CTEB | Custody Transfer Extension Block |
| CTI | Custody Transfer Items |
| DOORS | Dynamic Object-Oriented Requirements System |
| DTN | Delay/Disruption-Tolerant Networking |
| DTNNM | DTN Network Management |
| EID | Endpoint Identifier |
| FSW | Flight Software |
| GSFC | Goddard Space Flight Center |
| HK | Housekeeping |
| ICD | Interface Control Document |
| IETF | Internet Engineering Task Force |
| LTP | Licklider Transmission Protocol |

| Acronym or Abbreviation | Description |
|--------------------------------|---|
| M&C | Monitor and Control |
| MIB | Management Information Base |
| MOC | Mission Operations Center |
| NC | Node Configuration |
| PI | Payload Interface |
| QM | Queue Management |
| RVTM | Requirements Verification Traceability Matrix |
| SB | Software Bus |
| SLA | Service Level Agreement |
| TDMS | Technical Data Management System |