

# IEEE P802.1Qbg/D2.1

Draft Standard for Local and Metropolitan Area Networks—

## MAC Bridges and Virtual Bridged Local Area Networks - Amendment XX: Edge Virtual Bridging

Sponsor

LAN/MAN Standards Committee of the IEEE Computer Society

Prepared by the DCB and Interworking Task Groups of IEEE 802.1

**Abstract:** This amendment to IEEE Std 802.1Q defines enhancements to the functions of a VLAN Bridge to support Edge Virtual Bridging functionality.

**Keywords:** Bridged Local Area Networks, local area networks (LANs), MAC Bridges, metropolitan area networks, Multiple Spanning Tree Protocol (MSTP), Virtual Bridged Local Area Networks (virtual LANs), Edge Virtual Bridging

### DRAFT STATUS:

Draft issued for initial Sponsor ballot. The content of this draft is technically identical to D1.9 with the exception that the root arc for the EVB MIB and the LLDP extension TLV IDs have now been assigned. Front matter that was irrelevant to the Sponsor ballot was also removed.

---

Copyright © 2012 by the Institute of Electrical and Electronics Engineers, Inc.  
Three Park Avenue  
New York, New York 10016-5997, USA  
All rights reserved.

This document is an unapproved draft of a proposed IEEE Standard. As such, this document is subject to change. USE AT YOUR OWN RISK! Because this is an unapproved draft, this document must not be utilized for any conformance/compliance purposes. Permission is hereby granted for IEEE Standards Committee participants to reproduce this document for purposes of international standardization consideration. Prior to adoption of this document, in whole or in part, by another standards development organization permission must first be obtained from the IEEE Standards Activities Department (stds.ipr@ieee.org). Other entities seeking permission to reproduce this document, in whole or in part, must also obtain permission from the IEEE Standards Activities Department.

IEEE Standards Activities Department  
445 Hoes Lane  
Piscataway, NJ 08854, USA

1 **IEEE Standards** documents are developed within the IEEE Societies and the Standards Coordinating Committees of the  
2 IEEE Standards Association (IEEE-SA) Standards Board. The IEEE develops its standards through a consensus develop-  
3 ment process, approved by the American National Standards Institute, which brings together volunteers representing varied  
4 viewpoints and interests to achieve the final product. Volunteers are not necessarily members of the Institute and serve with-  
5 out compensation. While the IEEE administers the process and establishes rules to promote fairness in the consensus devel-  
6 opment process, the IEEE does not independently evaluate, test, or verify the accuracy of any of the information contained  
7 in its standards.

8 Use of an IEEE Standard is wholly voluntary. The IEEE disclaims liability for any personal injury, property or other dam-  
9 age, of any nature whatsoever, whether special, indirect, consequential, or compensatory, directly or indirectly resulting  
10 from the publication, use of, or reliance upon this, or any other IEEE Standard document.

11 The IEEE does not warrant or represent the accuracy or content of the material contained herein, and expressly disclaims  
12 any express or implied warranty, including any implied warranty of merchantability or fitness for a specific purpose, or that  
13 the use of the material contained herein is free from patent infringement. IEEE Standards documents are supplied “**AS IS**.”  
14

15 The existence of an IEEE Standard does not imply that there are no other ways to produce, test, measure, purchase, market,  
16 or provide other goods and services related to the scope of the IEEE Standard. Furthermore, the viewpoint expressed at the  
17 time a standard is approved and issued is subject to change brought about through developments in the state of the art and  
18 comments received from users of the standard. Every IEEE Standard is subjected to review at least every five years for revi-  
19 sion or reaffirmation. When a document is more than five years old and has not been reaffirmed, it is reasonable to conclude  
20 that its contents, although still of some value, do not wholly reflect the present state of the art. Users are cautioned to check  
21 to determine that they have the latest edition of any IEEE Standard.

22 In publishing and making this document available, the IEEE is not suggesting or rendering professional or other services  
23 for, or on behalf of, any person or entity. Nor is the IEEE undertaking to perform any duty owed by any other person or  
24 entity to another. Any person utilizing this, and any other IEEE Standards document, should rely upon the advice of a com-  
25 petent professional in determining the exercise of reasonable care in any given circumstances.  
26

27 Interpretations: Occasionally questions may arise regarding the meaning of portions of standards as they relate to specific  
28 applications. When the need for interpretations is brought to the attention of IEEE, the Institute will initiate action to prepare  
29 appropriate responses. Since IEEE Standards represent a consensus of concerned interests, it is important to ensure that any  
30 interpretation has also received the concurrence of a balance of interests. For this reason, IEEE and the members of its  
31 societies and Standards Coordinating Committees are not able to provide an instant response to interpretation requests  
32 except in those cases where the matter has previously received formal consideration.

33 Comments for revision of IEEE Standards are welcome from any interested party, regardless of membership affiliation with  
34 IEEE. Suggestions for changes in documents should be in the form of a proposed change of text, together with appropriate  
35 supporting comments. Comments on standards and requests for interpretations should be addressed to:

36 Secretary, IEEE-SA Standards Board  
37 445 Hoes Lane  
38 P.O. Box 13 31  
39 Piscataway, NJ 08855-1331  
40 USA  
41

42  
43 Note: Attention is called to the possibility that implementation of this standard may require use of subject mat-  
44 ter covered by patent rights. By publication of this standard no position is taken with respect to the existence or  
45 validity of any patent rights in connection therewith. The IEEE is not responsible for identifying Essential Pat-  
46 ent Claims for which a license may be required, for conducting inquiries into the legal validity or scope of Pat-  
47 ents Claims or determining whether any licensing terms or conditions provided in connection with submission  
48 of a Letter of Assurance, if any, or in any licensing agreements are reasonable or non-discriminatory. Users of  
49 this standard are expressly advised that determination of the validity of any patent rights, and the risk of  
50 infringement of such rights, is entirely their own responsibility. Further information may be obtained from the  
51 IEEE Standards Association.

52 Authorization to photocopy portions of any individual standard for internal or personal use is granted by the Institute of  
53 Electrical and Electronics Engineers, Inc., provided that the appropriate fee is paid to Copyright Clearance Center. To  
54 arrange for payment of licensing fee, please contact Copyright Clearance Center, Customer Service, 222 Rosewood Drive,

# Introduction to IEEE P802.1Qbg/D2.1™

(This introduction is not part of P802.1Qbg/D2.1, Draft Standard for Local and Metropolitan Area Networks—MAC Bridges and Virtual Bridged Local Area Networks - Amendment XX: Edge Virtual Bridging.)

<<Editor's Note: Standard boilerplate material goes here, such as patent policy etc...>>

This standard contains state-of-the-art material. The area covered by this standard is undergoing evolution. Revisions are anticipated within the next few years to clarify existing material, to correct possible errors, and to incorporate new related material. Information on the current revision state of this and other IEEE 802 standards may be obtained from

Secretary, IEEE-SA Standards Board  
445 Hoes Lane  
P.O. Box 1331  
Piscataway, NJ 08855-1331  
USA

2  
3  
4  
5  
6  
7  
8  
9  
1  
1  
1  
1  
1  
1  
1  
1  
2  
2  
2  
2  
2  
2  
2  
2  
2  
3  
3  
3  
3  
3  
3  
3  
3  
3  
4  
4  
4  
4  
4  
4  
4  
4  
4  
5  
5  
5  
5  
5

At the time this standard was submitted to the IEEE-SA for approval, the IEEE P802.1 Working Group had the following membership:

**Tony Jeffree**, *Chair and Editor*  
**Paul Congdon**, *Vice Chair*  
**Patricia Thaler**, *Chair, Data Center Bridging Task Group*  
**Paul Borttorff**, *Editor, Clauses 12 and 17*

&lt;&lt;TBA&gt;&gt;

The following members of the balloting committee voted on P802.1Qbg. Balloters may have voted for approval, disapproval, or abstention.

<<TBA>>

When the IEEE-SA Standards Board approved this standard on <<TBA>>, it had the following membership:

???, Chair

???, Vice Chair

???, Secretary

<<TBA>>

## Contents

1. Overview.....	1
1.3 Introduction.....	1
2. References.....	2
3. Definitions .....	3
4. Abbreviations.....	5
5. Conformance.....	7
5.2 Conformant components and equipment .....	7
5.22 Edge Virtual Bridging (EVB) Bridge requirements .....	7
5.23 Edge Virtual Bridging (EVB) station requirements .....	8
6. Support of the MAC Service .....	11
6.6 Internal Sublayer Service.....	11
6.11 Regenerating priority .....	12
8. Principles of bridge operation.....	13
8.6 The Forwarding Process .....	13
8.7 The Learning Process.....	14
10. Multiple Registration Protocol (MRP) and Multiple MAC Registration Protocol (MMRP) .....	15
10.6 Protocol operation.....	15
12. Bridge management .....	16
12.1 Management functions.....	16
12.2 VLAN-aware bridge objects.....	16
12.3 Data types .....	16
12.4 Bridge Management Entity .....	16
12.5 MAC entities.....	19
12.26 Edge Virtual Bridging management .....	19
12.27 Edge Control Protocol management .....	35
17. Management protocol .....	36
17.2 Structure of the MIB .....	36
17.3 Relationship to other MIBs.....	36
17.4 Security considerations .....	40
17.5 Dynamic component and Port creation.....	42
17.7 MIB modules .....	47
40. Edge Virtual Bridging (EVB).....	112
40.1 EVB architecture without S-channels.....	114
40.2 EVB architecture with S-channels.....	115
40.3 Asymmetric EVB architecture without S-channels.....	117

1	41. VSI discovery and configuration protocol (VDP) .....	119
2	41.1 VSI manager ID TLV definition.....	119
3	41.2 VDP association TLV definitions.....	120
4	41.3 Organizationally defined TLV definitions.....	127
5	41.4 Validation rules for VDP TLVs.....	127
6	41.5 VDP state machines.....	128
7		
8	42. S-Channel Discovery and Configuration Protocol (CDCP) .....	135
9		
10	42.1 CDCP discovery and configuration .....	135
11	42.2 CDCP state machine overview .....	135
12	42.3 CDCP configuration state machine.....	136
13	42.4 CDCP configuration variables .....	137
14	42.5 CDCP configuration procedures.....	139
15		
16	43. Edge Control Protocol (ECP) .....	141
17		
18	43.1 Edge control protocol operation .....	141
19	43.2 Edge Control Sublayer Service (ECSS).....	142
20	43.3 Edge control protocol (ECP) and state machine.....	142
21		
22	Annex A (normative)PICS proforma—Bridge implementations .....	148
23	A.5 Major capabilities .....	148
24	A.21 MVRP .....	148
25	A.32 EVB Bridge.....	148
26	A.33 EVB station.....	150
27	A.34 Edge relay .....	152
28	A.35 VEB and VEPA edge relay components .....	154
29	A.36 VDP, CDCP, and ECP .....	155
30		
31	Annex D (normative)IEEE 802.1 Organizationally Specific TLVs .....	156
32		
33	D.1 Requirements of the IEEE 802.1 Organizationally Specific TLV set .....	156
34	D.2 Organizationally Specific TLV definitions.....	156
35	D.3 IEEE 802.1 Organizationally Specific TLV management.....	162
36	D.4 IEEE 802.1/LLDP extension MIB.....	162
37	D.5 PICS proforma for IEEE 802.1 Organizationally Specific TLV extensions .....	171
38		
39		
40		
41		
42		
43		
44		
45		
46		
47		
48		
49		
50		
51		
52		
53		
54		

## Figures

Figure 12-3	Relationships among EVB Bridge managed objects .....	20
Figure 12-4	Relationship among EVB station managed objects .....	21
Figure 17-22	Sensitive managed objects (of EVB): tables and notifications .....	41
Figure 17-23	Sensitive managed objects (of EVB) for read .....	42
Figure 40-1	EVB architecture overview .....	112
Figure 40-2	EVB architecture without S-channels .....	114
Figure 40-3	EVB architecture with S-channel .....	115
Figure 40-4	EVB components and internal LANs with S-channels .....	116
Figure 40-5	EVB architecture without S-channels, with EVB Bridge S-VLAN component .....	117
Figure 40-6	EVB architecture without S-channels, with EVB station S-VLAN component .....	118
Figure 41-1	VSI manager ID TLV .....	119
Figure 41-2	VDP association TLV .....	120
Figure 41-3	VID Filter Info format .....	124
Figure 41-4	MAC/VID filter format .....	125
Figure 41-5	GroupID/VID filter format .....	125
Figure 41-6	GroupID/MAC/VID filter format .....	126
Figure 41-7	Organizationally defined TLV .....	127
Figure 41-8	Bridge VDP state machine .....	128
Figure 41-9	Station VDP state machine .....	129
Figure 42-1	CDCP state machine - Station role .....	136
Figure 42-2	CDCP state machine - Bridge role .....	137
Figure 43-1	Example ECP exchange .....	141
Figure 43-2	ECPDU structure .....	143
Figure 43-3	ECP transmit state machine .....	144
Figure 43-4	ECP receive state machine .....	145
Figure D-9	EVB TLV format .....	157
Figure D-10	CDCP TLV structure .....	160

## Tables

Table 12-1	Component table entry managed object.....	17
Table 12-2	Port table entry.....	18
Table 12-3	ISS Port Number table entry.....	20
Table 12-17	EVB system base table.....	24
Table 12-18	EVB system parameter defaults.....	25
Table 12-19	SBP table entry.....	26
Table 12-20	VSI table entry.....	27
Table 12-21	VSI MAC/VLAN table entry.....	29
Table 12-22	UAP table entry.....	30
Table 12-23	UAP table entry parameters.....	31
Table 12-24	S-channel interface table entry.....	33
Table 12-25	URP table entry.....	34
Table 12-26	ECP table entry.....	35
Table 17-1	Structure of the MIB modules.....	36
Table 17-3	IEEE8021-BRIDGE MIB structure and relationship to IETF RFC 4188 and this standard.....	36
Table 17-21	EVB MIB structure and object cross reference.....	37
Table 41-1	VDP TLV types.....	120
Table 41-2	Flag values in VDP requests.....	121
Table 41-3	Error types in VDP responses.....	122
Table 41-4	Flag values in VDP responses.....	122
Table 41-5	VSIID format values.....	123
Table 41-6	Filter Info format values.....	123
Table 43-1	ECP sub-types.....	143
Table D-1	IEEE 802.1 Organizationally Specific TLVs specified in this standard.....	156
Table D-4	EVB Mode values.....	159
Table D-2	RRSAT flag values and meanings.....	159



# IEEE P802.1Qbg/D2.1

## Draft Standard for Local and Metropolitan Area Networks—

# MAC Bridges and Virtual Bridged Local Area Networks - Amendment XX: Edge Virtual Bridging

(This amendment is based on IEEE Std 802.1Q™-2011, as modified by those amendments that had been approved, but not incorporated into the base text of the standard, at the time that this amendment was approved, namely (in chronological order) IEEE Std 802.1Qaz, IEEE Std 802.1Qbb, IEEE Std 802.1Qbc, IEEE Std 802.1Qbe, and IEEE Std 802.1Qbf.)

NOTE—The editing instructions contained in this amendment define how to merge the material contained here into the base document and its other amendments to form the new comprehensive standard.

Editing instructions are shown in ***bold italic***. Four editing instructions are used: change, delete, insert, and replace.

***Change*** is used to make corrections in existing text or tables. The editing instruction specifies the location of the change and describes what is being changed either by using ~~strike through~~ (to remove old material) and underscore (to add new material). ***Delete*** removes existing material. ***Insert*** adds new material without disturbing the existing material. Insertions may require renumbering. If so, renumbering instructions are given in the editing instruction. ***Replace*** is used to make changes in figures or equations by removing the existing figure or equation and replacing it with a new one. Editing instructions, change markings, and this NOTE will not be carried over into future editions because the changes will be incorporated into the base standard.<sup>1</sup>

## 1. Overview

### 1.3 Introduction

***Insert the following text at the end of 1.3, renumbering the list items as necessary:***

This standard specifies protocols, procedures, and managed objects that:

- a) Provide for the discovery, configuration, and control of a pair of direct-attached Port-mapping Service VLAN (S-VLAN) components to extend the operation of a customer bridge to remote ports and enable coexistence of multiple services on station-resident ports (e.g., embedded bridging).
- b) Provide for discovery, configuration, and operation of reflective relay (8.6.1) for a bridge port.
- c) Provide for discovery of, and coordinated configuration of, edge relays (ERs) and other devices that utilize the reflective relay service.
- d) Provide for dynamic profile-driven port configuration.

<sup>1</sup>Notes in text, tables, and figures are given for information only, and do not contain requirements needed to implement the standard.

## 2. References

*Insert the following references into Clause 2, in appropriate collating sequence:*

IEEE P802.1BR, Standard for Local and Metropolitan Area Networks—Virtual Bridged Local Area Networks—Bridge Port Extension.

IETF RFC 4122, A Universally Unique IDentifier (UUID) URN Namespace.

IETF RFC 4291, IP Version 6 Addressing Architecture.

### 3. Definitions

*Insert the following definitions into Clause 3, in appropriate collating sequence, renumbering existing definitions as needed:*

**3.1 Downlink relay port (DRP):** A port of an edge relay that is capable of supporting at least one VSI.

**3.2 Edge Control Protocol (ECP):** A protocol that provides reliable delivery of control SDUs.

**3.3 Edge Relay (ER):** A bridge supporting the transfer of frames between one or more downlink relay ports (DRPs) and one uplink relay port (URP).

**3.4 Edge Virtual Bridging (EVB):** The set of functions supporting VSIs in Bridges and attached end stations.

**3.5 Edge Virtual Bridging Bridge (EVB Bridge):** A C-VLAN Bridge that supports the Virtual Station Interface (VSI) discovery and configuration protocol (VDP).

**3.6 Edge Virtual Bridging station (EVB station):** An end station containing one or more edge relays.

**3.7 GroupID:** A service instance identifier used in VDP.

**3.8 Reflective relay:** A mode of operation of the active topology enforcement function in which a received frame on a port that supports reflective operation can be forwarded on the same port on which it was received.

**3.9 S-channel:** A point-to-point S-VLAN established between a Port-mapping S-VLAN component in an EVB Bridge and a Port-mapping S-VLAN component in an EVB station.

**3.10 S-channel Access Port (CAP):** The Port that terminates an S-channel.

**3.11 S-channel Discovery and Configuration Protocol (CDCP):** A protocol that is used to configure S-VLAN components to create S-channels.

**3.12 Station-facing Bridge Port (SBP):** A Port of a Bridge that supports the EVB status parameters (6.6.5) with an EVBMode parameter value of "EVB Bridge".

**3.13 Uplink Access Port (UAP):** A Port on a Port-mapping S-VLAN component that connects an EVB Bridge with an EVB station.

**3.14 Uplink relay port (URP):** A port of an edge relay that supports the EVB status parameters (6.6.5) with an EVBMode parameter value of "EVB station".

**3.15 Virtual edge bridge (VEB):** An edge relay that requires reflective relay service to be disabled on the station-facing Bridge Port (SBP) of the attached Bridge.

**3.16 Virtual edge port aggregator (VEPA):** An edge relay that always forwards frames through its uplink relay port (URP) and that can make use of reflective relay service provided by the station-facing Bridge Port (SBP) of the attached Bridge.

**3.17 Virtual station:** An end station instantiated within an EVB station.

**3.18 Virtual Station Interface (VSI):** An interface to a virtual station that is attached to a DRP of an edge relay.

**3.19 Virtual Station Interface (VSI) Discovery and Configuration Protocol (VDP):** A protocol that supports the association of a VSI with a bridge port.

## 4. Abbreviations

*Insert the following abbreviations into Clause 4, in appropriate collating sequence:*

<b>ACK</b>	acknowledgement
<b>CAP</b>	S-channel Access Port
<b>CDCP</b>	S-channel discovery and configuration protocol
<b>DCN</b>	data center network
<b>DRP</b>	downlink relay port
<b>ECP</b>	edge control protocol
<b>ECPDU</b>	edge control protocol data unit
<b>ER</b>	edge relay
<b>EVB</b>	Edge Virtual Bridging
<b>IP</b>	Internet protocol
<b>IPv6</b>	Internet protocol version 6
<b>LLDP</b>	link layer discovery protocol
<b>OUI</b>	organizationally unique identifier
<b>SBP</b>	Station-facing Bridge Port
<b>SCID</b>	S-channel identifier
<b>SDU</b>	service data unit
<b>TLV</b>	type, length, value
<b>UAP</b>	Uplink Access Port
<b>ULP</b>	upper layer protocol
<b>ULPDU</b>	upper layer PDU
<b>URP</b>	uplink relay port
<b>UUID</b>	Universally Unique Identifier
<b>VDP</b>	VSI discovery and configuration protocol
<b>VEB</b>	virtual edge bridge
<b>VEPA</b>	virtual edge port aggregator

<b>VSID</b>	VSI Instance Identifier
<b>VSI</b>	Virtual Station Interface
<b>VTID</b>	VSI Type identifier

## 5. Conformance

*Change subclause 5.2 as shown:*

### 5.2 Conformant components and equipment

This subclause specifies requirements and options for the following core components:

- a) VLAN-aware Bridge component (5.4);
- b) VLAN-unaware Bridge component (5.12);

for the following components that use that core functionality:

- c) C-VLAN component (5.5);
- d) S-VLAN component (5.6);
- e) I-component (5.7);
- f) B-component (5.8);
- g) TPMR component (5.13);
- h) T-component (5.15);
- i) Edge relay (5.23.1);

and for the following systems that include instances of the above components:

- j) VLAN Bridge (5.9);
- k) S-VLAN Bridge (5.10.1);
- l) Provider Edge Bridge (5.10.2);
- m) Backbone Edge Bridge (5.11);
- n) TPMR (5.14);
- o) Edge Virtual Bridging Bridge (5.22);
- p) Edge Virtual Bridging station (5.23).

NOTE-A VLAN Bridge can also be referred to as a Customer Bridge or a C-VLAN Bridge. Both S-VLAN Bridges and Provider Edge Bridges are examples of Provider Bridges.

*Insert new subclauses 5.22 and 5.23, renumbering existing subclauses as necessary, as shown:*

### 5.22 Edge Virtual Bridging (EVB) Bridge requirements

An EVB Bridge shall comprise a single conformant C-VLAN component (5.5) and zero or one Port-mapping S-VLAN component (5.6) per externally accessible port.

Each externally accessible port shall be capable of being configured as one of, and may be capable of being configured as any of

- a) A C-VLAN Bridge Port.
- b) A Station-facing Bridge Port (SBP).
- c) An Uplink Access Port (UAP).

as specified in Clause 40.

A conformant EVB Bridge implementation shall:

- d) Support the functionality of a C-VLAN component (5.5).
- e) Support at least one SBP on the C-VLAN component (Clause 40).
- f) Support the EVB status parameters for EVBMode = EVB Bridge (6.6.5).
- g) Support an LLDP nearest Customer Bridge database (Clause 40).
- h) Support the EVB TLV on each SBP (D.2.13).
- i) Support ECP on each SBP (Clause 43).
- j) Support the Bridge role of VDP on each SBP (Clause 41).

A conformant EVB Bridge may support S-channels. A conformant EVB Bridge with S-channel support shall:

- k) Support at least one Port-mapping S-VLAN component (22.6.4) and associated UAP, configured as specified in 40.2 (a)-(d).
- l) Support CDCP, as specified in Clause 42, operating in Bridge mode.
- m) Support the enhanced filtering utility criteria (8.7.2) and not support the default filtering utility criteria (8.7.1).

A conformant EVB Bridge implementation may:

- n) Support configuration of reflective relay on each SBP of the C-VLAN component (8.6.1).
- o) Support management for the EVB components (12.4-12.12,12.26).
- p) Support the MIB module defined in 17.7.15.
- q) Support assignment of VIDs to GroupIDs (41.2.9).
- r) Support the use of the M and S bits in VDP (41.2.3).

### 5.23 Edge Virtual Bridging (EVB) station requirements

An EVB station shall comprise one or more conformant ERs (5.23.1) and zero or one Port-mapping S-VLAN component (5.6) per externally accessible port.

Each externally accessible port shall be capable of being configured as one of, and may be capable of being configured as any of:

- a) An Uplink Access Port (UAP).
- b) An Uplink Relay Port (URP).

as specified in Clause 40.

Each DRP shall be capable of attaching to one or more VSIs.

Each URP shall be capable of attaching its ER to the LAN connecting to an EVB Bridge, or in the case where a Port-mapping S-VLAN component is present, to an internal LAN (6.14) connecting the URP to a CAP.

A conformant EVB station implementation shall:

- c) Support at least one ER (5.23.1, Clause 40).
- d) Support the EVB status parameters for EVBMode = EVB station on each URP (6.6.5);
- e) Support an LLDP nearest Customer Bridge database (Clause 40).
- f) Support the EVB TLV on each URP of each ER (D.2.13).
- g) Support ECP on each URP of each ER (Clause 43).
- h) Support the station role of VDP for each URP of each ER (Clause 41).



In addition, a conformant EVB station implementation that supports a Port-mapping S-VLAN components shall:

- i) Support a Port-mapping S-VLAN component (22.6.4) on each port configured as a UAP (42.1.2) configured as specified in 40.2 (a)-(d).
- j) Support CDCP, as specified in Clause 42, operating in Station mode.
- k) Support the enhanced filtering utility criteria (8.7.2) and not support the default filtering utility criteria (8.7.1).

A conformant EVB station implementation may:

- l) Support multiple ERs (Clause 40).
- m) Support management for the EVB components (12.4-12.12,12.26).
- n) Support the MIB module defined in 17.7.15.
- o) Support assignment of VIDs to GroupIDs (41.2.9).
- p) Support the use of the M and S bits in VDP (41.2.3).

### 5.23.1 Edge relay requirements

A conformant implementation of an ER shall:

- a) Conform to the relevant standard for the Media Access Control technology implemented at each Port in support of the MAC ISS, as specified in 6.6, 6.7, and 6.14;
- b) Support the MAC Enhanced Internal Sublayer Service at each Port, as specified in 6.8 and 6.9;
- c) Recognize and use C-TAGs (6.9);
- d) Relay and filter frames as described in 8.1 and specified in 8.5, 8.6, and 8.8;
- e) Support the following on each DRP Port that supports untagged and priority-tagged frames:
  - 1) A Port VLAN Identifier (PVID) value (6.9);
  - 2) Configuration of at least one VID whose untagged set includes that Port (8.8.2).
- f) Support setting the Acceptable Frame Types parameter (6.9) to *Admit Only VLAN Tagged Frames* on the URP.
- g) Allow tag headers to be inserted, modified, and removed from relayed frames, as specified in 8.1 and Clause 9, as required by the value(s) of the Acceptable Frame Types parameter supported on each Port, and by the ability of each Port to transmit VLAN-tagged and/or untagged frames;
- h) Support at least one Filtering Identifier (FID) (6.6, 8.8.3, 8.8.8, and 8.8.9);
- i) Allow allocation of at least one VID to each FID that is supported (6.6, 8.8.3, 8.8.8, and 8.8.9).
- j) Support exactly one URP (Clause 40) supporting the parameters of 6.6.5 for EVBMode = EVB station.
- k) Support one or more DRPs each supporting access to VSIs (Clause 40).
- l) Filter the Reserved MAC Addresses specified in Table 8-1.
- m) If more than one DRP is supported, support setting the Enable Ingress Filtering parameter (8.6.2) on each DRP and the URP.
- n) Support the requirements of either a VEB ER (5.23.1.1), or a VEPA ER (5.23.1.2).

A conformant implementation of an ER may:

- o) Support the following if the URP supports untagged and priority-tagged frames:
  - 1) A Port VLAN Identifier (PVID) value (6.9);
  - 2) Configuration of at least one VID whose untagged set includes that Port (8.8.2).
- p) Comprise a single conformant C-VLAN component (5.4).
- q) Support disabling of learning on each DRP (8.6.1).
- r) Support the ability to discard frames received at each DRP if there is no entry in the filtering database that specifies forwarding on that Port for the frame's source MAC address and VLAN.
- s) Support the operation of the learning process as described in 8.7.

### 5.23.1.1 VEB ER requirements

In addition to the requirements stated in 5.23.1, a conformant VEB ER implementation shall:

- a) Request that reflective relay service not be provided by setting adminReflectiveRelayRequest to FALSE (6.6.5).

### 5.23.1.2 VEPA ER requirements

In addition to the requirements stated in 5.23.1, a conformant VEPA ER implementation shall:

- a) Disable learning on the URP (8.6.1).
- b) Filter frames received at the URP that are destined to a DRP that originated the frame (8.6.3.1).
- c) Filter frames as specified in 8.6.3.1.

A conformant VEPA ER implementation may:

- d) Filter frames received at each DRP that are destined for the URP until reflective relay is enabled (6.6.5).

A conformant VEPA ER implementation should:

- e) Request the provision of reflective relay service by setting adminReflectiveRelayRequest to TRUE (6.6.5).

NOTE—This item is optional because there can be cases where an EVB station is configured to prohibit VSIs from communicating with each other in VEPA mode.

## 6. Support of the MAC Service

### 6.6 Internal Sublayer Service

*Insert new subclause 6.6.5, renumbering existing subclauses as necessary, as shown:*

#### 6.6.5 EVB status parameters

The Internal Sublayer Service optionally makes available parameters that control and represent the EVB status of each instance of the service provided.

The **EVBMode** parameter determines whether EVB functionality is supported, and in what mode. The parameter can take one of three values:

- a) **EVBridge**. The service supports the functionality of an EVB Bridge.
- b) **EVStation**. The service supports the functionality of an EVB station.
- c) **Not Supported**. The service does not support EVB functionality. This value is assumed if the EVB status parameters are not implemented.

##### 6.6.5.1 EVBMode = Not supported

If the value of the **EVBMode** parameter is **Not Supported**, then no further status parameters are available, EVB functionality is not supported, and the operation of the service follows the normal forwarding rules for a Bridge.

##### 6.6.5.2 EVBMode = EVBridge

If the value of the **EVBMode** parameter is **EVBridge**, then further parameters are available, as follows:

- a) **reflectiveRelayCapable**. If this parameter is TRUE, then the active topology enforcement function is capable of performing reflective relay, as specified in 8.6.1; if FALSE, the active topology enforcement function is not capable of performing reflective relay.

NOTE 1—The value of the **reflectiveRelayCapable** parameter is an inherent property of the implementation and is not subject to administrative control.

- b) **operReflectiveRelayControl**. If this parameter is TRUE, then reflective relay is enabled; if FALSE, reflective relay is disabled.

NOTE 2—Reflective relay is enabled if a remote EVB station has requested that it be provided (as determined by protocol exchanges between the EVB station and EVB Bridge) and the EVB Bridge is capable of providing it, or disabled if the EVB station has not requested that it be provided or the EVB Bridge is not capable of providing it.

##### 6.6.5.3 EVBMode = EVStation

If the value of the **EVBMode** parameter is **EVStation**, then further parameters are available, as follows:

- a) **adminReflectiveRelayRequest**. This parameter can take one of two values:
  - 1) **TRUE**. The attached EVB Bridge is requested to enable Reflective relay.
  - 2) **FALSE**. The attached EVB Bridge is requested to disable Reflective relay.

NOTE 1—The value of **adminReflectiveRelayRequest** is used in the EVB TLV exchanges described in D.2.13 to indicate to an attached EVB Bridge that the EVB station needs reflective relay to be provided. A given EVB station is not required to support both possible values of **adminReflectiveRelayRequest**.

- b) **operReflectiveRelayStatus**. This parameter can take one of three values:
- 1) **TRUE**. The EVB Bridge has enabled reflective relay.
  - 2) **FALSE**. The EVB Bridge has disabled reflective relay.
  - 3) **Unknown**. It is not known whether the EVB Bridge has enabled reflective relay or not.

NOTE 2—The value of operReflectiveRelayStatus indicates whether or not the EVB Bridge has enabled reflective relay, or whether the EVB Bridge status is not currently known, as determined by protocol exchanges between the EVB station and EVB Bridge. The EVB Bridge status can be unknown during initialization or until the protocol exchanges have completed.

## 6.11 Regenerating priority

### *Change the NOTE as follows:*

NOTE—IEEE 802 LAN technologies signal a maximum of eight priority values. ~~Annex G~~Annex I further explains the use of priority values and how they map to traffic classes.

## 8. Principles of bridge operation

### 8.6 The Forwarding Process

#### 8.6.1 Active topology enforcement

*Change the initial paragraph as shown:*

To prevent data loops and unwanted learning of source MAC addresses, the Forwarding Process determines the values (TRUE, or FALSE) of the learning and forwarding controls (8.4) appropriate to each received frame and Bridge Port. If learning is ~~true~~ TRUE for the receiving Port and ingress filtering (8.6.2) would not cause the received frame to be discarded, the source address and VID are submitted to the Learning Process. If forwarding is ~~true~~ TRUE for the receiving Port, and either the EVBMode parameter value (6.6.5) for the Port is not “EVB Bridge” or the value of the operReflectiveRelayControl parameter for the Port is FALSE, each Bridge Port, other than the reception Port, with forwarding ~~true~~ TRUE is identified as a potential transmission Port. If forwarding is TRUE for the receiving Port and the EVBMode parameter value (6.6.5) for the Port is “EVB Bridge” and the operReflectiveRelayControl parameter value for the Port is TRUE, each Bridge Port, including the reception Port, with forwarding TRUE is identified as a potential transmission Port.

*Insert a new paragraph between the first and second paragraphs, as follows:*

In an edge relay (ER), the forwarding process may set learning FALSE for all frames.

*Insert new subclause 8.6.1.1 at the end of 8.6.1, as shown:*

##### 8.6.1.1 Requirements for the use of reflective relay

VEPA ERs (8.6.3.1) used in Edge Virtual Bridging (Clause 40) require reflective relay (6.6.5, 8.6.1) to be enabled on an attached EVB Bridge SBP in order to ensure that all VSIs connected to the VEPA ER are able to receive frames transmitted on one of the other VSIs. The following requirements ensure that a device operates correctly when using reflective relay:

- a) The operation of the device shall be such that it prevents the establishment of loops, i.e., the device shall not both request and provide reflective relay on the same port.
- b) The device shall ensure that any frame that it transmits on a given port, and that is reflected back to the device through the attached Bridge Port, is filtered by the device in order to prevent it being delivered to the originating port.
- c) Any device requesting reflective relay is responsible for performing frame replication as necessary for delivery to multiple ports.

NOTE 1—Information that can be used to assist in meeting these requirements is the source MAC address and the FID derived from the VLAN ID.

### 8.6.3 Frame filtering

*Change the first sentence of the second paragraph of 8.6.3 as shown:*

Each of the Reserved MAC Addresses specified in Table 8-1 shall be permanently configured in the Filtering Database in C-VLAN components and Edge Relays.

*Insert new subclause 8.6.3.1 at the end of 8.6.3, as shown:*

### 8.6.3.1 Virtual edge port aggregator (VEPA) filtering

A virtual edge port aggregator (VEPA) ER filters frames as follows.

If the receiving port is a DRP, then the URP shall be selected as the only transmission Port.

If the receiving port is a URP, then in addition to the filtering specified in 8.6.3, if there is a filtering entry that specifies forwarding for the source MAC address and VLAN of the frame for any DRP, then that DRP shall be removed from the list of potential transmission Ports.

## 8.7 The Learning Process

*Change the last paragraph, and insert a new paragraph after it, as shown:*

The purpose of filtering utility criteria is to reduce the capacity requirements of the Filtering Database and to reduce the time for which service can be denied (6.5.1) by retaining filtering information learned prior to a change in the physical topology of the network. Filtering utility criteria shall be applied to the learning and retention of information for each Filtering Identifier (FID) (8.8.8). In Bridges other than EVB Bridges (5.22), enhanced filtering utility criteria may be implemented for any Bridge Port as specified below (8.7.2); if implemented, both the default (8.7.1) and the enhanced criteria shall be selectable by management. In EVB Bridges, the enhanced filtering utility criteria shall be implemented for all Bridge Ports, and the default filtering utility criteria shall not be implemented.

Figure 8-4 illustrates the operation of the Learning Process in the inclusion of station location information carried by a single frame, received on one of the Ports of a Bridge, in the Filtering Database.

### 8.7.2 Enhanced filtering utility criteria

*Change 8.7.2 as shown:*

The enhanced criteria are satisfied if at least one VID that uses the FID includes the reception Port and at least one other Port with a Port State of Learning or Forwarding in its member set, and:

- a) The operPointToPointMAC parameter is false for the reception Port; or
- b) Ingress for the VID is permitted through a third Port; or
- c) The reception Port has reflective relay enabled (6.6.5.2).

NOTE—The third port can, but is not required to, be in the member set.

~~Figure 8-4 illustrates the operation of the Learning Process in the inclusion of station location information carried by a single frame, received on one of the Ports of a Bridge, in the Filtering Database.~~

## 10. Multiple Registration Protocol (MRP) and Multiple MAC Registration Protocol (MMRP)

### 10.6 Protocol operation

*Change the 2nd paragraph after NOTE 4 as follows:*

When two MRP Participants are connected by a point-to-point medium or service instance delaying MRPPDU transmission provides no benefit. In bridged networks it is desirable to transmit without delay, minimizing the denial of service that might occur while registration changes propagate after reconfiguration, and maximizing the benefit from using protocols such as RSTP and MSTP. When operPointToPointMAC (~~6.4.36.6.3~~) is TRUE, transmit opportunities are scheduled immediately on request, subject to rate limiting (10.7.4).

## 12. Bridge management

### 12.1 Management functions

#### 12.1.1 Configuration management

*Insert the following list item, re-lettered if necessary, to follow the existing list.*

- j) The ability to configure the functional elements of Edge Virtual Bridging and to control their operation.

### 12.2 VLAN-aware bridge objects

*Insert the following list item, re-lettered if necessary, to follow the existing list.*

- q) The Edge Virtual Bridging entities (12.26).

### 12.3 Data types

*Insert the following list items, re-lettered if necessary, and NOTE, to follow the existing list.*

- q) Timer exp, an unsigned value from 0-31 representing a positive integer for the exponent of 2 which forms the multiplier of 10 microseconds, used for EVB protocol timeout parameters.
- r) Boolean array, an array of Boolean values.

NOTE— For example, a value of 4 represents  $2^4 \times 10$  microseconds, or 160 microseconds.

### 12.4 Bridge Management Entity

#### 12.4.1 Bridge Configuration

*Insert the following new subclauses 12.4.1.5, 12.4.1.5.1, and 12.4.1.5.2, and Table 12-1 after subclause 12.4.1.4, re-numbering subsequent tables as necessary.*

##### 12.4.1.5 Bridge component configuration

There is a single Bridge component table per system. Each entry in the component table represents a component of the system (Table 12-1). The entries hold the parameters for each component including the component type and capabilities.

The operations that can be implemented on component table entries are as follows:

- a) Read component table entry;
- b) Update component table entry.

NOTE—The Bridge component table is implemented in Clause 17 as the BridgeBaseTable (see Table 17-3).

##### 12.4.1.5.1 Component type enumeration

The compComponentType parameter can be assigned the following values:



**Table 12-1—Component table entry managed object**

Name	Data type	Operations supported*	References
compComponentId	ComponentID	R	12.3 l)
compMACAddress	MAC Address	R	8.13.8, 13.24
compNumberPorts	unsigned (1..4095)	R	12.4.1.1.3 c)
compComponentType	ComponentType	R	12.3 m)
compDeviceCapabilities	Boolean array (0..7)	R	12.10.1.1.3 b)
compTrafficClassesEnabled	Boolean	RW	-
compMmrpEnabledStatus	Boolean	RW	-

\*R= Read-only access; RW = Read/Write access;

- a) iComponent(1) - An I-component (5.7);
- b) bComponent(2) - A B-component (5.8);
- c) cVlanComponent(3) - A C-VLAN component (5.5);
- d) sVlanComponent(4) - An S-VLAN component (5.6);
- e) dBridgeComponent(5) - A VLAN unaware component (5.12);
- f) [edgeRelay\(6\) - an EVB station edge relay \(5.23.1\).](#)

#### 12.4.1.5.2 Component device capabilities

The compDeviceCapabilities parameter can be assigned the following values:

- g) ExtendedFilteringServices(0);
- h) TrafficClasses(1);
- i) StaticEntryIndividualPort (2);
- j) IVLCapable (3);
- k) SVLCapable(4);
- l) HybridCapable(5);
- m) ConfigurablePvidTagging(6);
- n) LocalVlanCapable(7).

**Change subclause 12.4.2 and insert new Table 12-2, as shown:**

#### 12.4.2 Port configuration

The Port configuration object models the operations that modify, or inquire about, the configuration of the Ports of a Bridge. [Unless the system explicitly supports the ability to dynamically create and/or delete ports, there](#) There are a fixed set of Bridge Ports per Bridge (one for each MAC interface), and each is identified by a permanently allocated Port Number.

The allocated Port Numbers are not required to be consecutive. Also, some Port Numbers can be dummy entries, with no actual LAN Port (for example, to allow for expansion of the Bridge by addition of further

MAC interfaces in the future). Such dummy Ports can support the Port Configuration management operations and other Port-related management operations in a manner consistent with the Port being permanently disabled.

The information provided by the Port Configuration consists of summary data indicating its name and type. Specific counter information pertaining to the number of packets forwarded, filtered, and in error is maintained by the Forwarding Process resource. The management operations supported by the Bridge Protocol Entity allow for controlling the states of each Port.

A port table entry can be implemented by a Bridge for each Port of each component (Table 12-2). It comprises the parameters for each Port including the port type, capabilities, and statistics.

The management operations that can be implemented on the port-~~Configuration~~ are table are:

- a) ~~Read Port~~ Read port table entry (12.4.2.1);
- b) ~~Set Port Name (12.4.2.2)~~ Update port table entry (12.4.2.1).

**Table 12-2—Port table entry**

Name	Data type	Operations supported*	References
portComponentId	ComponentID	R	12.4.1.5
portPortNumber	Port Number	R	13.25
portMACAddress	MAC Address	R	12.4.1.1.3a
portDelayExceededDiscards	counter	R	-
portMtuExceededDiscards	counter	R	-
portCapabilities	unsigned	R	-
portTypeCapabilities	unsigned	R	-
portType	enumerated (ptVbp, ptPnp, ptCnp, ptCep, ptCbp, ptVip, ptDbp, ptRcap, ptSbp, ptUap, ptUrp)	R	-
portExternal	Boolean	R	-
portAdminPointToPoint	unsigned	RW	6.6.3
portOperPointToPoint	Boolean	R	6.6.3
portName	Latin1 String (SIZE(0..32))	RW	-

\*R= Read-only access; RW = Read/Write access;

***Replace occurrences of “unsigned integer” with “unsigned” in all the tables in Clause 12.***

***Replace subclause 12.4.2.1 through 12.4.2.2.3 with the following subclause 12.4.2.1.***

#### **12.4.2.1 Port type capabilities and enumeration**

The portTypeCapabilities array has a bit for each port type the Port can take, while the portType is an enumeration. The portTypeCapabilities can take any combination of port types while the portType can take exactly one of the following values:

- a) ptVbp - C-VLAN Bridge Port (0);
- b) ptPnp - Provider Network Port (PNP) (1);
- c) ptCnp - Customer Network Port (CNP) (2);
- d) ptCep - Customer Edge Port (CEP) (3);
- e) ptCbp - Customer Backbone Port (CBP) (4);
- f) ptVip - Virtual Instance Port (VIP) (5);
- g) ptDbp - D-Bridge Port (6);
- h) ptRcap - Remote Customer Access Port (RCAP) (7) - (12.13.4);
- i) [ptSbp - Station-facing Bridge Port \(SBP\) \(8\) - \(6.6.5, 12.26.2\);](#)
- j) [ptUap - Uplink Access Port \(UAP\) \(9\) - \(12.26.4\);](#)
- k) [ptUrp - Uplink Relay Port \(URP\) \(10\) - \(6.6.5, 12.26.5\);](#)

NOTE- A portType is not required for a Downlink Relay Port (DRP) or an S-channel Access Port (CAP) as no special EVB objects are necessary. A DRP is type ptVbp while a CAP is type ptCnp.

### **12.5 MAC entities**

***Insert the following new subclause 12.5.1 and Table 12-3 after 12.5:***

#### **12.5.1 ISS Port Number table managed object (optional)**

An instance of the ISS Port Number table can be implemented by a Bridge system to identify the ISS interfaces which can be assigned to Bridge Ports. The ISS table is required when the Bridge Port assigned to an ISS and the ISS itself are referenced using different Port Numbers. The ISS table is keyed on the ISS Port Number. Each ISS table entry identifies a mapping from the ISS Port Number to a Bridge Port's ComponentID and Port Number. An issToComponentID value of 0 indicates the ISS is not bound to a Bridge Port. The issToComponentID and issToPortNumber parameters are updated indirectly as a result of creating or updating other system specific Port objects.

The operation that can be implemented on an ISS Port Number table is:

- a) Read ISS Port Number table entry.

***Insert the following new subclauses, tables, and figures, following all existing subclauses, tables, and figures, re-numbering as necessary:***

### **12.26 Edge Virtual Bridging management**

The conformance requirements for EVB Bridges and EVB stations are defined in subclauses 5.22 and 5.23 respectively. Each C-VLAN component, edge relay (5.23.1) and Port-mapping S-VLAN component can be

Table 12-3—ISS Port Number table entry

Name	Data type	Operations supported*	References
issPortNumber	Port Number	R	12.3 i)
issMACAddress	MAC Address	R	8.13.2
issToComponentID	ComponentID, 0	R	12.4.2
issToPortNumber	Port Number, 0	R	12.4.2

\*R= Read-only access; RW = Read/Write access

managed using the managed objects of 12.4 through 12.12 along with the EVB managed objects specified in this subclause.

An EVB Bridge system (Figure 12-3) supports the EVB managed objects defined in subclauses 12.26.1 through 12.26.3 and 12.27. Optionally an EVB Bridge supports the managed objects for S-channels defined in subclause 12.26.4.


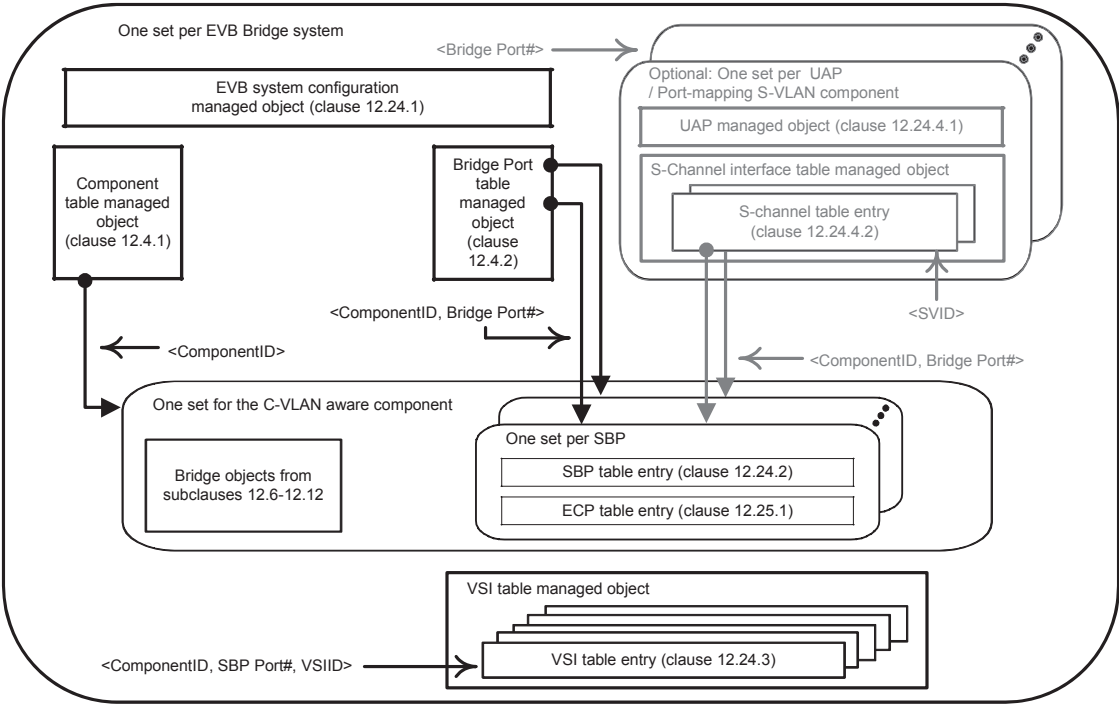


Figure 12-3—Relationships among EVB Bridge managed objects

An EVB station system (Figure 12-4) supports the EVB managed objects defined in subclauses 12.26.1, 12.26.3, 12.26.5 and 12.27. Optionally an EVB station supports the managed objects for S-channels defined in subclause 12.26.4.

The EVB specific managed objects defined here:

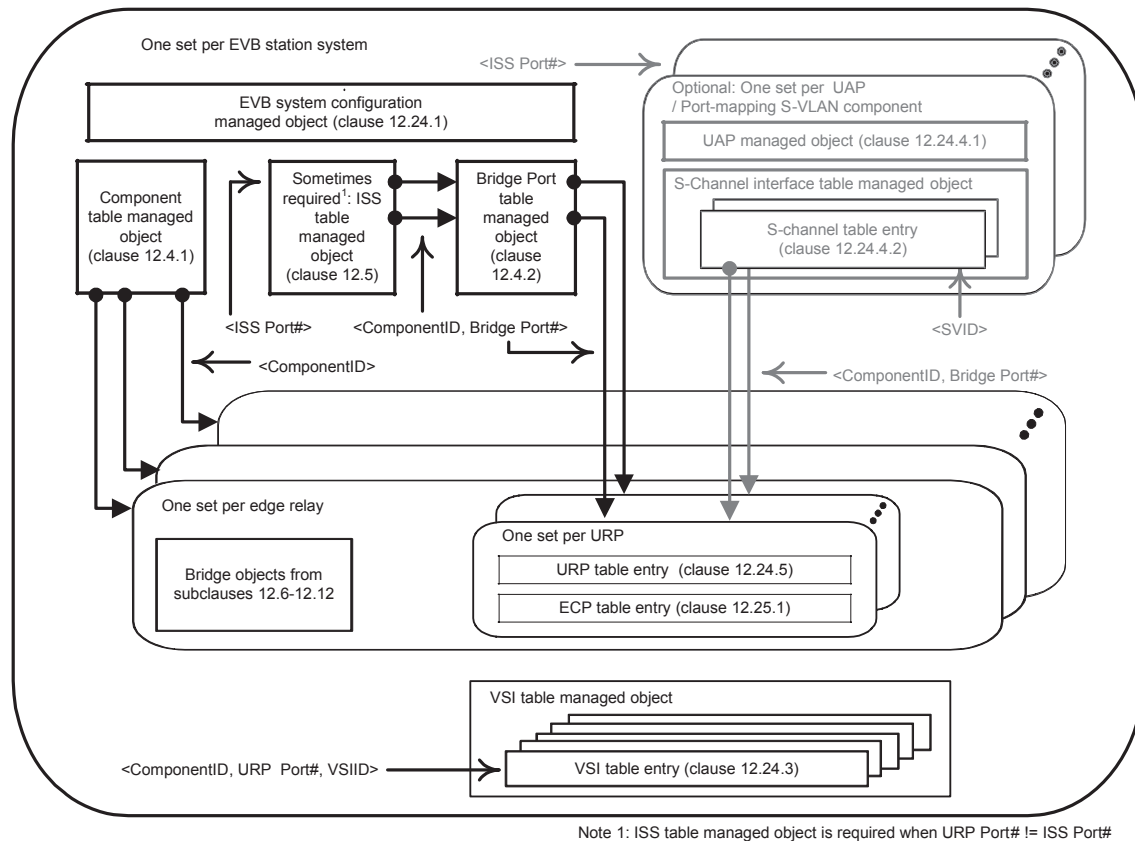

**Figure 12-4—Relationship among EVB station managed objects**

- Provide managed objects for identifying and configuring an EVB system and its system wide default parameters for LLDP, Virtual Station Interface Discovery and Configuration Protocol (VDP), and S-channel (12.26.1);
- Provide managed objects for configuring the Station-facing Bridge Ports of EVB Bridges (12.26.2);
- Provide a Virtual Station Interface (VSI) table which contains the current VSI and VDP state for each VSI which is active in the EVB system (12.26.3);
- Provide managed objects for configuring the Port-mapping S-VLAN components and S-channels (12.26.4).
- Provide managed objects for configuring the Uplink Relay Ports of the edge relays (12.26.5).

For each EVB system an EVB system configuration managed object exists containing the system wide defaults used to initialize the other EVB objects.

Every Port of the EVB system (40.1, 40.2, 40.3) is uniquely identified by a ComponentID (12.3) and Port Number (12.3) (which together identify a Port Index (12.3)). In EVB systems where the ISS and bound Bridge Port have different Port Numbers an ISS table (12.5.1) allows determining the associated Bridge Port's ComponentID and Port Number from the scalar ISS Port Number. An example where the ISS table would be needed is an EVB station where the station has multiple LANs each attaching to different edge relays and where the edge relays each use the same Port Number (however different ComponentIDs) to identify their Uplink Relay Ports (Figure 40-3). The ISS table is normally not necessary in an EVB Bridge since the single C-VLAN aware component provides a Bridge Port Number that is unique within the EVB Bridge for every ISS, allowing the ISS and the Bridge Port to use the same Port Number independent from the ComponentID.

The edge relays of an EVB station have two types of ports. Each edge relay DRP provides attachment to one or more Virtual Station Interfaces. No special EVB objects are used to manage the DRPs. URPs can attach to a LAN which can be externally accessible or attach through an internal LAN to a CAP of an S-channel. URPs are managed using the URP table. Each URP table entry identifies a URP within the system and allows configuration and monitoring of LLDP and VDP for the URP (12.26.5). For each URP there is also a ECP table entry which allows configuration and monitoring of ECP (12.27).

NOTE 1—The most common case is that a single VSI is associated with each DRP.

The C-VLAN component of an EVB Bridge has two types of Ports. Each C-VLAN Bridge Port is externally accessible and does not provide any EVB capabilities. No special EVB objects are used to manage the C-VLAN Bridge Ports. Each SBP attaches to a LAN which can be externally accessible or attach through an internal LAN to a CAP of an S-channel. SBPs are managed using the SBP table. Each SBP table entry identifies a single SBP within the system and allows configuration and monitoring of LLDP and VDP for the SBP (12.26.2). For each SBP there is also a ECP table entry which allows configuration and monitoring of ECP (12.27).

Within each EVB station and EVB Bridge a table holding the VSIs allows monitoring of the active VSIs (12.26.3). VSI table entries are keyed on the VSI Instance Identifier (VSIID) and the URP's or SBP's ComponentID and Port Number. During the movement of VSIs within the DCN it is possible to have a transient condition where the same VSIID exists at two locations. When these two instances are at the same URP or SBP they are indistinguishable, and therefore the table holds only the state for the most recent VSI command, however when the movement is between different URPs or SBPs the table will hold two copies of the same VSIID differentiated by the ComponentID and Port Number of the URPs or SBPs.

NOTE 2—In the case where a VSI is migrated between DRPs of the same ER, there is no reason to de-associate, as the table does not maintain any state that identifies which DRP of the ER to which the VSI is attached.

An association is identified by its URP and VSIID. If an association is established for a VSI, and a new association is established on the same URP for the same VSIID, then the new association replaces the old one. A subsequent de-association for that VSIID will remove the current association, regardless of the parameters.

In EVB systems supporting S-channels the optional UAP table and S-channel interface table are used to configure and control the Port-mapping S-VLAN components and CDCP protocol (12.26.4).

Each ISS which is bound to an Uplink Access Port (UAP) automatically has a Port-mapping S-VLAN component with a default S-channel (using S-VID 1). Each S-channel is identified by the ISS Port Number of the UAP and the S-VID, for SBPs, or SCID, for URPs, identifying the S-channel. The default S-channel carries all the un-S-tagged traffic which traverses the Port-mapping S-VLAN component.

In an EVB Bridge system S-channels are automatically connected to SBPs when the S-Channel is created. If the S-channel is the default S-channel it is connected to the SBP with the same Port Number as the ISS bound to the UAP. If the S-channel is not the default S-channel a new SBP is allocated to the S-channel (which has a Port Number different from any ISS Port Number where a UAP or C-VLAN Bridge Port could be bound) and connected to the CAP through an internal LAN (6.14). With CDCP enabled and operating in the 'B' role the S-channel interface table entries are automatically created (deleted) by CDCP to fill requests from the peer CDCP operating the 'S' role.

In an EVB station S-channels are connected to URPs by the operating system. The URP Port Numbers are not reserved, so the UAP's ISS Port Number may not be the same as the URP Port Number. The operating system is not required to automatically attach each S-channel to a URP, however it can if it chooses. The URP Port Numbers have no restrictions beyond the normal requirement that every relay port be uniquely identified in the EVB system by a ComponentID and Port Number pair. With CDCP enabled and operating



in the 'S' role CDCP uses the S-channel interface table to build requests for creating (deleting) S-channels from the peer CDCP operating in the 'B' role and enables these S-channels after the peer grants an S-VID for use by the S-channel.

Management of the UAP, Port-mapping S-VLAN component and CDCP is achieved through the UAP table (12.26.4.1). The management of CAPs and their LAN attachments is accomplished by the S-channel interface table entries (12.26.4.2). A UAP table entry along with the Port-mapping S-VLAN creation rules specified in subclause 12.26.4 are sufficient to manage the Port-mapping S-VLAN component. The Bridge managed objects in subclauses 12.4 through 12.12 can optionally be used, in addition to the objects of subclause 12.26.4, to manage the Port-mapping S-VLAN components.

The following managed objects, illustrated in Figure 12-3 and Figure 12-4, define the semantics of the management operations specific to EVB Bridges and stations:

- a) The EVB system base managed object (12.26.1);
- b) The SBP table entry managed object (12.26.2);
- c) The VSI table entry managed object (12.26.3);
- d) The MAC/VID pair table entry managed object (12.26.3);
- e) The UAP table entry managed object (12.26.4);
- f) The S-channels interface table entry managed object (12.26.4);
- g) The URP table entry managed object (12.26.5).

### 12.26.1 EVB system base table

An instance of the EVB system base table can be implemented by an EVB Bridge or EVB station. It comprises the identifiers for an EVB system (40) and system wide default parameters used to support EVB services (D.2.13, 6.6.5), VSI discovery (42.2) and ECP (43.3).

The management operations that can be performed on an EVB system table entry are as follows:

- a) Read EVB system table entry;
- b) Update EVB system table entry.

#### 12.26.1.1 System identifiers

The evbSysType identifies the system type. The enumerated types for evbSysType are:

- a) sysB - EVB Bridge;
- b) sysS - EVB station.

#### 12.26.1.2 System defaults for EVB

The parameters evbSysEvpLldpTxEnable and evbSysEvpLldpManual are used to initialize the LLDP EVB objects for new SBPs and URPs. When evbSysLldpTxEnable is TRUE a new SBP or URP will place the local EVB objects in the LLDP nearest Customer database; when FALSE a new SBP or URP will not place the local EVB objects in the LLDP database. When evbSysLldpManual is FALSE the operating configuration will be determined by the comparison between the local and remote LLDP EVB objects (automatic), regardless of the setting of evbSysLldpTxEnable. When evbSysLldpManual is TRUE the configuration will be determined by the setting of the local EVB objects only (manual).

The evbSysLldpGidCapable parameter indicates if the port is capable of processing GroupIDs. GroupIDs can be used if both the EVB Bridge and EVB station indicate they are capable by setting the EVB LLDP object for GroupID capable to TRUE. On an EVB Station this means the station can provide GroupIDs

**Table 12-17—EVB system base table**

Name	Data type	Operations supported <sup>*</sup>	Conformance <sup>†</sup>	References
evbSysType	enumerated {sysB, sysS}	R	BE	5.22, 5.23
evbSysNumExternalPorts	unsigned [1...4095]	R	BE	12.4.2, 12.5.1
evbSysEvpLdpTxEnable	Boolean	RW	BE	D.2.13
evbSysEvpLdpManual	Boolean	RW	BE	D.2.13
evbSysEvpLdpGidCapable	Boolean	RW	BE	D.2.13
evbSysEcpDfltAckTimerInit	timer exp	RW	BE	D.2, 43.3.6.1
evbSysEcpDfltMaxTries	unsigned [0...7]	RW	BE	D.2, 43.3.7.4
evbSysVdpDfltRsrcWaitDelay	timer exp	RW	BE	D.2.13, 41.5.5.7
evbSysVdpDfltReinitKeepAlive	timer exp	RW	BE	D.2.13, 41.5.5.5

<sup>\*</sup>R= Read-only access; RW = Read/Write access;

<sup>†</sup>B = Required for an EVB Bridge system; E = Required for an EVB station system;

rather than VIDs in VDP requests and accept VIDs in response from the EVB Bridge. On an EVB Bridge this means the Bridge can provide a VID corresponding to the GroupID provided by the EVB station.

The default value for evbSysEcpDfltAckTimerInit is 14 which provides a time of 164 msec. Systems are not required to implement smaller times and can reject requests to set the timers to small times, however are required to implement 14 and above to allow fall back to the longest time proposed by the EVB Bridge or EVB station.

The default value for evbSysVdpDfltRsrcWaitDelay and evbSysVdpDfltReinitKeepAlive is system dependant. All systems support the values of 20 and above which provide times of 10.5 seconds and greater. Systems are not required to implement smaller times and can reject requests to set the timers to small times, however are required to implement 20 and above to allow fall back to the longest time proposed by the EVB Bridge or EVB station.

Table 12-18 shows how the system defaults are used to initialize the parameters in the SBP, URP, and ECP table entries.



**Table 12-18—EVB system parameter defaults**

System Parameter	Default Value	LLDP, SBP, URP, ECP entry parameter
evbSysEvpLldpTxEnable	TRUE	LLDP Transmit Enable
evbSysEvpLldpManual	FALSE	sbpLldpManual, urpLldpManual
evbSysEvpLldpGidCapable	system dependant	LLDP GID Capable
evbSysEcpDfltAckTimerInit	14, for 164 milliseconds	ecpAdminAckTimerInit
evbSysEcpDfltMaxTries	3	ecpAdminMaxTries
evbSysVdpDfltRsrcWaitDelay	system dependant	sbpVdpAdminRsrcWaitDelay, urpVdpAdminRsrcWaitDelay
evbSysVdpDfltReinitKeepAlive	system dependant	sbpVdpAdminReinitKeepAlive, urpVdpAdminReinitKeepAlive

## 12.26.2 SBP table entry

SBP table entries may be created explicitly or implicitly as a result of creating an entry in the S-channel interface table. When an SBP table entry is created the port type in the Port table entry (12-2) changes to type 'ptSBP'. When an SBP table entry is deleted the Port table entry returns to type C-VLAN Bridge Port.

Whenever a new SBP table entry is created a new entry is also created in the ECP table (12.27) keyed under the ComponentID and Port Number of the SBP. Whenever an SBP table entry is deleted the corresponding entry in the ECP table is deleted.

The management operations that can be performed on an SBP table entry are as follows:

- a) Read SBP table entry;
- b) Update SBP table entry;
- c) Create SBP table entry;
- d) Delete SBP table entry.

**Table 12-19—SBP table entry**

Name	Data type	Operations supported*	Conformance†	References
sbpComponentID	ComponentID	R	B	12.4.1.5
sbpPortNumber	Port Number	R	B	12.4.2
sbpLldpManual	Boolean	RW	B	-
sbpVdpOperRsrcWaitDelay	timer exp	R	B	D.2.13, 41.5.5.7
sbpVdpOperReinitKeepAlive	timer exp	R	B	D.2.13, 41.5.5.5
sbpVdpOperToutKeepAlive	unsigned	R	B	D.2.13, 41.5.5.13

\*R= Read-only access; RW = Read/Write access;

†B = Required for an EVB Bridge system;

## 12.26.3 VSI table entry

Each EVB system maintains a table of the active Virtual Station Interfaces. The structure of a VSI table entry is shown in Table 12-20. This read-only table provides the current operation parameters of each VSI along with the VDP state associated with the VSI. The table is keyed on the SBP's or URP's ComponentID and Port Number and on the VSIID. The operations which can be performed on the VSI table are:

- a) Read entry for a ComponentID, Port Number and VSIID.

**Table 12-20—VSI table entry**

Name	Data type	Operations supported*	Conformance†	References
evbVsiComponentID	ComponentID	R	BE	12.4.1.5
evbVsiPortNumber	Port Number	R	BE	12.4.2
evbVsiIDType	enumerated {vsiidIPv4, vsiidIPv6, vsiidMAC, vsiidLocal, vsiidUUID }	R	BE	41.2.6
evbVsiID	Latin1 String (SIZE(16))	R	BE	41.2.7
evbVsiTimeSinceCreate	time interval	R	BE	41
evbVsiVdpOperCmd	enumerated {vdpDeassoc, vdpPreassoc, vdpPreassocR, vdpAssoc}	R	BE	41.2.1
evbVsiOperRevert	Boolean	R	BE	41.2.3
evbVsiOperHard	Boolean	R	BE	41.2.3
evbVsiOperReason	unsigned (0..15)	R	BE	41.2.3
evbVsiMgrID	Latin1 String (SIZE(1))	R	BE	41.1.3

**Table 12-20—VSI table entry (*continued*)**

Name	Data type	Operations supported*	Conformance†	References
evbVsiType	Latin1 String (SIZE(3))	R	BE	41.2.4
evbVsiTypeVersion	Latin1 String (SIZE(1))	R	BE	41.2.5
evbVsiMvFormat	Latin1 String (SIZE(1))	R	BE	41.2.8
evbVsiNumMACs	unsigned	R	BE	41.2.9
evbVdpMachineState	enumerated {vdpDeassoc, vdpPreassoc, vdpPreassocR, vdpAssoc}	R	BE	41.4.5.14
evbVdpCmdsSucceeded	counter	R	BE	41.4
evbVdpCmdsFailed	counter	R	BE	41.4
evbVdpCmdsReverts	counter	R	BE	41.4

\*R= Read-only access; RW = Read/Write access

†B = Required for an EVB Bridge system; E = Required for an EVB station system.

Each EVB Bridge or EVB station maintains a table of the VID/MACs on each Virtual Station Interface. This read-only table provides the current GroupID/VID/MAC assignments for each VSI. The operations which can be performed on the VSI table are:

- b) Read entries for a ComponentID, Port Number and VSIID
- c) Read entries for a ComponentID and Port Number

**Table 12-21—VSI MAC/VLAN table entry**

Name	Data type	Operations supported*	Conformance†	References
evbMvComponentID	ComponentID	R	BE	12.4.1.5
evbMvPortNumber	Port Number	R	BE	12.4.2
evbMvVsiIDType	enumerated {vsiidIPv4, vsiidIPv6, vsiidMAC, vsiidLocal, vsiidUUID }	R	BE	41.2.6
evbMvVsiID	Latin1 String (SIZE(16))	R	BE	41.2.7
evbMvVsiGroupID	unsigned	R	BE	41.2.9
evbMvVsiVID	unsigned (1..4094)	R	BE	41.2.9
evbMvVsiMAC	MAC Address	R	BE	41.2.9

\*R= Read-only access; RW = Read/Write access

†B = Required for an EVB Bridge system; E = Required for an EVB station system;

1       **12.26.4 S-channel configuration and management**

2

3       The S-channel managed objects are not required unless the system implements S-channels.

4

5       Creating an UAP table entry (40.2) causes a Port-mapping S-VLAN component (15.6) to be instantiated and

6       sets the portType parameter of the Port table entry (12.4.2) to type ‘ptUap’. The Port-mapping S-VLAN

7       component automatically includes a default S-channel with one CAP which can attach to an SBP or a URP

8       through an internal LAN (6.14). Each UAP is identified by the ISS Port Number where the UAP is attached.

9       The default S-channel and CAP shall be identified by the S-VID 1 and SCID 1.

10

11       **12.26.4.1 UAP table entry**

12

13       The management operations that can be performed on the UAP table entry managed object are as follows:

- 14
- 15       a)    Read UAP table entry;
  - 16       b)    Update UAP table entry;
  - 17       c)    Create UAP table entry;
  - 18       d)    Delete UAP table entry.
- 19

20

21                       **Table 12-22—UAP table entry**

22

Name	Data type	Operations supported*	Conformance†	References
uapISSPortNumber	Port Number	R	BE	12.4.2, 12.5.1
uapComponentID	ComponentID	R	be	12.4.1.5
uapPortNumber	Port Number	R	be	12.4.2

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53

54

**Table 12-22—UAP table entry (continued)**

Name	Data type	Operations supported <sup>*</sup>	Conformance <sup>†</sup>	References
uapSchCdcAdminEnable	Boolean	RW	BE	42.4.2
uapSchCdcAdminRole	enumerated {cdcB,cdcS}	RW	BE	42.4.2
uapSchCdcAdminChnCap	unsigned [1...167]	RW	BE	42.4.1
uapSchCdcOperChnCap	unsigned [1...167]	R	BE	42.4.8
uapSchAdminCdcSvidPoolLow	unsigned [0,2...4094]	RW	BE	42.4.7
uapSchAdminCdcSvidPoolHigh	unsigned [0,2...4094]	RW	BE	42.4.7
uapSchOperState	enumerated {cdcStop, cdcRun}	R	BE	42.4.15
uapSchCdcRemoteEnabled	Boolean	R	BE	42.4.14
uapSchCdcRemoteRole	enumerated {cdcB, cdcS}	R	BE	42.4.12

<sup>\*</sup>R= Read-only access; RW = Read/Write access

<sup>†</sup>B = Required for an EVB Bridge system; E = Required for an EVB station system; b = Optional for an EVB Bridge system; e = Optional for an EVB station system;

**Table 12-23—UAP table entry parameters**

UAP Table Name	Default Values
uapSchCdcAdminEnable	TRUE
uapSchCdcAdminRole	schS if EVB station and schB if EVB Bridge
uapSchCdcAdminChn-Cap	1
uapSchAdminCdcSvid-PoolLow	0
uapSchAdminCdcSvid-PoolHigh	0

The available SVIDs determined by the range of uapSchAdminCdcSvidPoolLow and uapSchAdminCdcSvidPoolHigh limit the S-channel capacity indicated by uapSchCdcAdminChnCap to

the available SVIDs plus one for the default S-channel. If the capacity is greater than the VID range plus one, then the VID range overrides the capacity (i.e., the actual capacity is never bigger than the available VID range plus one).



**12.26.4.2 S-channel interface table entry**

The S-channel interface table entry applies to each internal S-channel configured on an EVB Bridge or EVB station, as shown in Table 12-24. The management operations that can be performed on an S-channel interface table entry are as follows:

- a) Read S-channel interface table entry;
- b) Update S-channel interface table entry;
- c) Create S-channel interface table entry;
- d) Delete S-channel interface table entry.

**Table 12-24—S-channel interface table entry**

Name	Data type	Operations supported*	Conformance†	References
schUapISSPortNumber	Port Number	R	BE	12.4.2, 12.5.1
schScid	unsigned [1...4094]	R	bE	42.4.2
schSvid	unsigned [0...4094]	R	BE	42.4.12
schComponentID	ComponentID	R	be	42.1.2, 12.4.1.5
schCapPortNumber	Port Number	R	be	42.1.2, 12.4.2
schSbpOrUrpComponentID	ComponentID	RW	BE	12.4.1.5
schSbpOrUrpPortNumber	Port Number	RW	BE	12.4.2

\*R= Read-only access; RW = Read/Write access

†B = Required for an EVB Bridge system; E = Required for an EVB station system;

b = Optional for an EVB Bridge system; e = Optional for an EVB station system

If the S-channel interface table is being used with a UAP operating in the cdcP S role, then the table is keyed on schUapISSPortNumber and schScid. If the S-channel interface table is being used with a UAP operating in the cdcP B role, then the table is keyed on the schUapISSPortNumber and schSvid.

The schComponentID and schCapPortNumber refer to the Port-mapping S-VLAN component and the Port which may also be identified by the schISSPortNumber and S-VID (or SCID).

The schSbpOrUrpComponentID and schSbpOrUrpPortNumber are the ComponentID and Port Number of the attached SBP or URP.

## 12.26.5 Edge relay management

Edge relays can be built dynamically or statically within an EVB station. Each edge relay is assigned a ComponentID which is unique for the EVB station system. An edge relay always has a single Uplink Relay Port (URP) which exists as long as the edge relay exists. The Downlink Relay Ports (DRPs) of an edge relay may be built either along with the edge relay or on demand.

### 12.26.5.1 URP table entry

When a URP table entry is created a corresponding Component table entry is created for the edge relay along with a Port table entry for the URP. When a URP table entry is deleted the corresponding Component table entry is deleted along with the corresponding Port table entry.

When each URP table entry is created a corresponding entry is created in the ECP table (12.27) and keyed under the ComponentID and Port Number of the URP. Whenever a URP table entry is deleted the corresponding entry in the ECP table is deleted.

The management operations that can be performed on the URP table entry managed object are as follows:

- a) Read URP table entry;
- b) Update URP table entry;
- c) Create URP table entry;
- d) Delete URP table entry.

**Table 12-25—URP table entry**

Name	Data type	Operations supported <sup>*</sup>	Conformance <sup>†</sup>	References
urpComponentID	ComponentID	R	E	12.4.1.5
urpPortNumber	Port Number	R	E	12.4.2
urpBindToISSPortNumber	unsigned [0...4095]	RW	e	12.5.1
urpLldpManual	Boolean	RW	E	
urpVdpOperRsrcWaitDelay	timer exp	R	E	D.2.13, 41.5.5.7
urpVdpOperRespWaitDelay	unsigned	R	E	D.2.13, 41.5.5.9
urpVdpOperReinitKeepAlive	timer exp	R	E	D.2.13, 41.5.5.5

<sup>\*</sup>R= Read-only access; RW = Read/Write access

<sup>†</sup>E = Required for an EVB station system; e = Optional for an EVB station system

## 12.27 Edge Control Protocol management

### 12.27.1 ECP table entry

The management operations that can be performed on the ECP table entry managed object are as follows:

- a) Read ECP table entry.

ECP table entries are created or deleted implicitly as a result of the creation or deletion of other port objects.

**Table 12-26—ECP table entry**

Name	Data type	Operations supported <sup>*</sup>	Conformance <sup>†</sup>	References
ecpComponentID	ComponentID	R	BE	12.4.1.5
ecpPortNumber	Port Number	R	BE	12.4.2
ecpOperAckTimerInit	timer exp	R	BE	D.2.13, 43.3.7.1
ecpOperMaxTries	unsigned [0...7]	R	BE	D.2.13, 43.3.7.4
ecpTxFrameCount	counter	R	BE	43
ecpTxRetryCount	counter	R	BE	43
ecpTxFailures	counter	R	BE	43
ecpRxFrameCount	counter	R	BE	43

<sup>\*</sup>R= Read-only access; RW = Read/Write access;

<sup>†</sup>B = Required for an EVB Bridge system; E = Required for an EVB station system;

1       **17. Management protocol**

2  
3  
4       **17.2 Structure of the MIB**

5  
6       *Insert the following new row at the end of Table 17-1:*

7  
8  
9                               **Table 17-1—Structure of the MIB modules**

10

IEEE8021-EVB-MIB	17.7.15	802.1Qbg	5.22, 5.23	Initial version in IEEE Std 802.1Qbg
------------------	---------	----------	------------	--------------------------------------

11  
12  
13  
14

15       **17.2.2 Structure of the IEEE8021-Bridge MIB**

16  
17       *Insert the following new rows at the end of Table 17-3:*

18                               **Table 17-3—IEEE8021-BRIDGE MIB structure and rela-**  
19                               **tionship to IETF RFC 4188 and this standard**

20  
21  
22

ieee8021BridgePortTable		12.5.1
	ieee8021BridgePhyPort	
	ieee8021BridgePhyIfIndex	
	8021BridgePhyMacAddress	
	ieee8021BridgePhyPortToComponentId	
	ieee8021BridgePhyPortToInternalPort	
ieee8021BridgeBaseIfToPortTable		17.3.2.2
	ieee8021BridgeBaseIfToPortComponentID	
	ieee8021BridgeBaseIfIndexPort	

23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38

39       *Insert new subclause 17.2.15 as shown, following all existing subclauses of 17.2,*  
40       *renumbering as necessary:*

41  
42  
43       **17.2.15 Structure of the IEEE8021-EVB MIB**

44  
45       The IEEE8021-EVB MIB provides objects to configure and manage an EVB station system or EVB Bridge  
46       system. Objects in this MIB module are arranged into subtrees. Each subtree is organized as a set of related  
47       objects. Where appropriate, the corresponding Clause 12 management reference is also included. Table 17-  
48       21 indicates the structure of the IEEE8021-EVB MIB module.

49  
50       **17.3 Relationship to other MIBs**

51  
52       *Insert new subclause 17.3.15 as shown, following all existing subclauses of 17.3,*  
53       *renumbering as necessary:*  
54

**Table 17-21—EVB MIB structure and object cross reference**

MIB table	MIB object	References
ieee8021BridgeEvbNotifications subtree		
ieee8021BridgeEvbObjects subtree		
ieee8021BridgeEvbSys		12.26.1
	ieee8021BridgeEvbSysType	-
	ieee8021BridgeEvbSysNumExternalPorts	-
	ieee8021BridgeEvbSysEvbLldpTxEnable	-
	ieee8021BridgeEvbSysEvbLldpManual	-
	ieee8021BridgeEvbSysEvbLldpGidCapable	-
	ieee8021BridgeEvbSysEcpAckTimer	-
	ieee8021BridgeEvbSysEcpMaxRetries	-
	ieee8021BridgeEvbSysVdpDfltRsrcWaitDelay	-
	ieee8021BridgeEvbSysVdpDfltReinitKeepAlive	-
ieee8021BridgeEvbSbpTable		12.26.2
	ieee8021BridgeEvbSbpComponentID	
	ieee8021BridgeEvbSbpPortNumber	
	ieee8021BridgeEvbSbpLldpManual	
	ieee8021BridgeEvbSbpVdpOperRsrcWaitDelay	
	ieee8021BridgeEvbSbpVdpOperReinitKeepAlive	
	ieee8021BridgeEvbSbpVdpOperToutKeepAlive	
	ieee8021BridgeEvbSbpRowStatus	
ieee8021BridgeEvbVsiDbTable		12.26.3
	ieee8021BridgeEvbVsiComponentID	
	ieee8021BridgeEvbVsiPortNumber	
	ieee8021BridgeEvbVsiID	
	ieee8021BridgeEvbVsiTimeSinceCreate	
	ieee8021BridgeEvbVsiVdpOperCmd	
	ieee8021BridgeEvbVsiOperRevert	
	ieee8021BridgeEvbVsiOperHard	
	ieee8021BridgeEvbVsiOperReason	
	ieee8021BridgeEvbVsiMgrID	
	ieee8021BridgeEvbVsiType	
	ieee8021BridgeEvbVsiTypeVersion	

**Table 17-21—EVB MIB structure and object cross reference (continued)**

MIB table	MIB object	References
	ieee8021BridgeEvbVsiMvFormat	
	ieee8021BridgeEvbVsiNumMACs	
	ieee8021BridgeEvbVDPMachineState	
	ieee8021BridgeEvbVDPCommandsSucceeded	
	ieee8021BridgeEvbVDPCommandsFailed	
	ieee8021BridgeEvbVDPCommandReverts	
	ieee8021BridgeEvbVsiDbMacTable	12.26.3
	ieee8021BridgeEvbVsiComponentID	
	ieee8021BridgeEvbVsiPortNumber	
	ieee8021BridgeEvbVsiID	
	ieee8021BridgeEvbGroupID	
	ieee8021BridgeEvbVsiMac	
	ieee8021BridgeEvbVsiVlanId	
	ieee8021BridgeEvbUapConfigTable	12.26.4.1
	ieee8021BridgePort	
	ieee8021BridgeEvbUapComponentId	
	ieee8021BridgeEvbUapPort	
	ieee8021BridgeEvbUapConfigIfIndex	
	ieee8021BridgeEvbUapCdcAdminEnable	
	ieee8021BridgeEvbUapAdminCdcRole	
	ieee8021BridgeEvbUapAdminCdcChanCap	
	ieee8021BridgeEvbUapOperCdcChanCap	
	ieee8021BridgeEvbUapAdminCdcSVIDPoolLow	
	ieee8021BridgeEvbUapAdminCdcSVIDPoolHigh	
	ieee8021BridgeEvbUapOperState	
	ieee8021BridgeEvbUapCdcRemoteEnabled	
	ieee8021BridgeEvbUapCdcRemoteRole	
	ieee8021BridgeEvbUapConfigRowStatus	
	ieee8021BridgeEvbCapConfigTable	12.26.4.2
	ieee8021BridgeBridgePort	
	ieee8021BridgeEvbCapSchID	
	ieee8021BridgeEvbCapComponentId	
	ieee8021BridgeEvbCapIfIndex	

**Table 17-21—EVB MIB structure and object cross reference (continued)**

MIB table	MIB object	References
	ieee8021BridgeEvbCapPortNumber	
	ieee8021BridgeEvbCapSChannelID	
	ieee8021BridgeEvbCapAssociateSbpOrUrpCompID	
	ieee8021BridgeEvbCapAssociateSbpOrUrpPort	
	ieee8021BridgeEvbCapRowStatus	
	ieee8021BridgeEvbUrpTable	12.26.5
	ieee8021BridgeEvbUrpComponentID	
	ieee8021BridgeEvbUrpPort	
	ieee8021BridgeEvbUrpIfIndex	
	ieee8021BridgeEvbUrpBindToIssPort	
	ieee8021BridgeEvbUrpLldpManual	
	ieee8021BridgeEvbUrpVdpOperRsrcWaitDelay	
	ieee8021BridgeEvbUrpVdpOperRespWaitDelay	
	ieee8021BridgeEvbUrpVdpOperReinitKeepAlive	
	ieee8021BridgeEvbUrpRowStatus	
	ieee8021BridgeEvbEcpTable	12.27.1
	ieee8021BridgeEvbEcpComponentID	
	ieee8021BridgeEvbEcpPort	
	ieee8021BridgeEvbEcpOperAckTimerInit	
	ieee8021BridgeEvbEcpOperMaxTries	
	ieee8021BridgeEvbEcpTxFrameCount	
	ieee8021BridgeEvbEcpTxRetryCount	
	ieee8021BridgeEvbEcpFailures	
	ieee8021BridgeEvbEcpRxFrameCount	
	ieee8021BridgeEvbConformance subtree	
	ieee8021BridgeEvbGroups	

**Table 17-21—EVB MIB structure and object cross reference (continued)**

MIB table	MIB object	References
	ieee8021BridgeEvbSysGroup	
	ieee8021BridgeEvbSbpConfigGroup	
	ieee8021BridgeEvbVsiDbGroup	
	ieee8021BridgeEvbUapConfigGroup	
	ieee8021BridgeEvbCapConfigGroup	
	ieee8021BridgeEvbUrpConfigGroup	
	ieee8021BridgeEvbsEcpConfigGroup	
	ieee8021BridgeEvbCompliances	
	ieee8021BridgeEvbbCompliance	
	ieee8021BridgeEvbsCompliance	

### 17.3.15 Relationship of the IEEE8021-EVB MIB to other MIB modules

The IEEE8021-EVB MIB provides objects that extend the core management functionality of a Bridge, as defined by the IEEE8021-BRIDGE MIB (17.7.2), in order to support the management functionality needed for Edge Virtual Bridging (5.22, 5.23), as defined in Clause 40, 41, 42, and 43. As support of the objects defined in the IEEE8021-EVB MIB also requires support of the IEEE8021-TC-MIB and IEEE8021-BRIDGE-MIB, the provisions of 17.3.2 apply to implementations claiming support of the IEEE8021-EVB MIB.

## 17.4 Security considerations

*Insert new subclause 17.4.15 as shown, following all existing subclauses of 17.4, renumbering as necessary:*

### 17.4.15 Security considerations of the IEEE8021-EVB MIB

The purpose of EVB is to coordinate Virtual Station Interfaces within an EVB station with a DCN. In this environment the EVB station and the EVB Bridge may be under different management authorities. Access to the objects within the IEEE8021-EVB MIB module of the EVB Bridge by the EVB station and access to objects within the IEEE8021-EVB MIB module of the EVB station by the EVB Bridge may therefore need to be restricted.

Access to the objects within the IEEE8021-EVB MIB module, whether they have MAX-ACCESS of read-write, read-create, or read-only, can reveal sensitive information in some network environments. Very serious health and safety situations could arise if EVB systems were involved in configuring network resources for an emergency public safety announcement and the EVB Bridge system behavior of the bridged network was allowed to be modified unexpectedly.

With these considerations in mind it is thus important to control all types of access (including GET and/or NOTIFY) to these objects. SNMP versions prior to SNMPv3 did not include adequate security. Even if the



network itself is secure (for example by using IPsec), even then, there is no control as to who on the secure network is allowed to access and GET/SET (read/change/create/delete) the objects in this MIB module.

It is recommended that implementers consider the security features as provided by the SNMPv3 framework (see [RFC3410], section 8), including full support for the SNMPv3 cryptographic mechanisms (for authentication and privacy).

Further, deployment of SNMP versions prior to SNMPv3 is not recommended. Instead, it is recommended to deploy SNMPv3 and to enable cryptographic security. It is then a customer/operator responsibility to ensure that the SNMP entity giving access to an instance of this MIB module is properly configured to give access to the objects only to those principals (users) that have legitimate rights to indeed GET or SET (change/create/delete) them.

There are a number of management objects defined in IEEE8021-EVB MIB module with a MAX-ACCESS clause of read-write and/or read-create. Such objects may be considered sensitive or vulnerable in some network environments. The support for SET operations in a non-secure environment without proper protection can have a negative effect on network operations. These are the tables and objects and their sensitivity/vulnerability:

**Figure 17-22—Sensitive managed objects (of EVB): tables and notifications**

Table or object	Reason for sensitivity to security considerations
evbSysEvlLdpTxEnable evbSysEvlLdpManual evbSysEvlLdpGidCapable	The EVB TLV exchange controls how the VDP, ECP and reflective relay parameters are set. These parameters allow manual configurations of the EVB parameters which can be used to disable the operation of these protocols.
ieee8021BridgeEvlSysEcpAckTimer ieee8021BridgeEvlSysEcpMaxRetires	The ECP timer and re-try count are set to provide reliable delivery of control frames. Incorrect settings can cause failures of the control protocols.
ieee8021BridgeEvlSysVdpDfltRsrcWaitDelay	The VDP resource timer determines the time required by the system to locate a profile. Setting this time too short may make VDP requests always fail.
ieee8021BridgeEvlSbpRowStatus ieee8021BridgeEvlUapRowStatus ieee8021BridgeEvlCapRowStatus ieee8021BridgeEvlUrpRowStatus	These variables allow creations of new ports on an EVB Bridge or EVB station. Inappropriate use of these may allow un-authorized interception of data.

Some of the readable objects in this MIB module (i.e., objects with a MAX-ACCESS other than not-accessible) may be considered sensitive or vulnerable in some network environments. It is thus important to control even GET and/or NOTIFY access to these objects and possibly to even encrypt the values of these objects when sending them over the network via SNMP. The following tables provide the identity of VSIs and the addresses used to access them which could be used to identify the user application and what addresses can be used to interfere with or intercept their traffic:

**Figure 17-23—Sensitive managed objects (of EVB) for read**

ieee8021BridgeEvbVsiDbTable	The VSI database provides a list of all operating VSI's along with their primary system keys. This information may be used to spy on the operating applications and the activity associated with each application.
ieee8021BridgeEvbVsiDbMacTable	The VSI MAC table provides the network addresses associated with operating applications. This information may be used in system attacks.

## 17.5 Dynamic component and Port creation

### 17.5.1 Overview of the dynamically created Bridge entities

*Change subclauses 17.5.1.1, 17.5.1.2, and 17.5.1.3 as follows:*

#### 17.5.1.1 Components

A component contains a relay function whose purpose is to move frames between interfaces to the relay called a Bridge Port ~~s~~ [or a Edge Relay Port](#). Different types of components are provided in IEEE Std 802.1Q that are used to construct different types of Bridges.

#### 17.5.1.2 Bridge Ports

A Bridge Port [or Edge Relay Port](#) is a frame source or sink directly attached to the relay function of a Bridge component.

#### 17.5.1.3 Internal LAN connections

A Backbone Edge Bridge (BEB) is composed of zero or one B-component and zero or more I-components. When the BEB has both a B-component and some I-components, the PIPs and CBPs of these I-components are connected by internal LAN connections. There needs to be a way to specify the interconnections between the PIPs on the I-component and the Customer Backbone Port on the B-component. This is done via the ieee8021BridgeILanIfTable defined in the IEEE8021-BRIDGE MIB.

Essentially, this table allows for the creation of a new “interface” to represent the connection and then the ifStackTable is used to specify the interconnection.

These interconnections are used in multi-component Bridges, such as:

Provider Edge Bridges ~~and~~  
Backbone Edge Bridges,  
[EVB stations](#),  
[EVB Bridges](#).

to specify the relationship between two interfaces in the following manner.

Two Port interfaces are interconnected if the invocation of a request operation at one of the interfaces causes an indication operation with the same parameters to happen at the other interface.

***Change subclause 17.5.2 as follows:***

### **17.5.2 Component creation**

A component is created by making an entry in the `ieee8021BridgeBaseTable` with the `ieee8021BridgeBaseComponentType` set to the proper value. Components can also be created indirectly by making entries in other system specific tables which then automatically create entries in the `ieee8021BridgeBaseTable`.

A Bridge component consists of a relay function and related Bridge Ports or Edge Relay Ports. The component type determines if the relay operates on untagged, C-tagged, or S-tagged frames. It also determines which specific type(s) of Bridge Ports or Edge Relay Ports may be created on the component.

***Change subclause 17.5.2.2 and 17.5.2.3 as follows:***

#### **17.5.2.2 C-VLAN component creation**

C-VLAN components are used in ~~two~~the following different types of Bridges:

- a) ~~The first is the C-VLAN component of a~~ customer VLAN Bridges,
- b) ~~The second is as the C-VLAN component of a~~ Provider Edge Bridges,
- c) EVB Bridges.

Provider Edge Bridge C-VLAN components are created implicitly by the creation of a Customer Edge Port on the S-VLAN component of the Provider Edge Bridge. C-VLAN components that belong to customer Bridges or to EVB Bridges are created by a management station performing a row-create on the component table or by implicit action such as the insertion of blades into a system.

#### **17.5.2.3 S-component creation**

S-VLAN components are used in ~~two~~three different ways in Bridges. The first is as the S-VLAN component of an S-VLAN Bridge or Provider Edge Bridge or the foundation for an I-component or B-component. The second is as a Port-mapping S-VLAN component in a Provider Edge Bridge. The third is as a Port-mapping S-VLAN component in an EVB station or an EVB Bridge.

Provider Edge Bridge Port-mapping S-VLAN components are created implicitly by the creation of a Remote Customer Access Port on the primary S-VLAN component of the Provider Edge Bridge.

EVB Bridge and EVB station Port-mapping S-VLAN components are created implicitly by the creation of an Uplink Access Port on an ISS of an EVB Bridge or an EVB station. For an EVB Bridge the ISS is allocated to a Bridge Port of the primary C-VLAN component. On an EVB station the ISS has no permanent Bridge Port or Edge Relay Port assignment.

***Insert new subclause 17.5.2.6 as shown, following all existing subclauses of 17.5.2, renumbering as necessary:***

#### **17.5.2.6 Edge relay creation**

Edge relays of an EVB station are created implicitly by the creation of an Uplink Relay Port, or actions such as the insertion of blades into a system or the installation of a software driver on the EVB station.

***Change subclause 17.5.3 as follows:***

### 17.5.3 Port creation

This subclause of the document discusses how Ports of each relevant Port type are created on each relevant component type.

The general procedure is for the network administrator to perform an SNMP row-create operation on a table specific to the type of Port being created. If the operation succeeds, an entry will be implicitly created in the ieee8021BridgeBasePortTable by the agent.

The specific details are outlined in the 17.5.3.1 through 17.5.3.56.

*Change subclause 17.5.3.2 as follows:*

#### 17.5.3.2 Port creation on C-VLAN components

C-VLAN components support four different types of Bridge Ports. These are Customer VLAN Ports, Customer Edge Ports, ~~and~~ Provider Edge Ports, and Station-facing Bridge Ports.

A C-VLAN component that is not part of a Provider Edge Bridge may have Customer VLAN Ports. A C-VLAN component that is part of a Provider Edge Bridge has exactly 1 Customer Edge Port and any number of Provider Edge Ports.

The only type of Ports that may be created by operating on the C-VLAN component that is not part of an EVB Bridge are the Customer VLAN Ports. On an EVB Bridge it is possible to create both C-VLAN Bridge Ports and Station-facing Bridge Ports.

Customer Edge Ports are created by a management action on the S-VLAN component of a Provider Edge Bridge. From a management perspective, these entities are managed through the S-VLAN component or via management operations specific to the Provider Edge Bridge.

Provider Edge Ports are created as a side effect of adding a CEP to the member set of an S-VID in a Provider Edge Bridge.

##### 17.5.3.2.1 Creating Customer VLAN Ports

*Insert new subclause 17.5.3.2.2 after the existing 17.5.3.2.1 as shown:*

##### 17.5.3.2.2 Creating Station-facing Bridge Ports

SBPs are created by performing a row-create operation on the ieee8021BridgeEvpSbpConfigTable for a C-VLAN component that is configured to act as an EVB Bridge. The required columns are the component ID and the Port Number to use for the newly created Port.

The type of the component referred to by the component ID parameter is a cVlanComponent configured for Q-Bridge operation.

The implicitly constructed ieee8021BridgeBasePortTable entry will have the following fields filled in:

- ieee8021BridgeBasePortComponentId - As per Sbp Table
- ieee8021BridgeBasePort - As per Sbp Table
- ieee8021BridgeBasePortIfIndex - Implementation Specific Action
- ieee8021BridgeBasePortDelayExceededDiscards - Statistic, reset at creation
- ieee8021BridgeBasePortMtuExceededDiscards - Statistic, reset at creation

ieee8021BridgeBasePortCapabilities - Implementation Specific  
 ieee8021BridgeBasePortTypeCapabilities - Implementation Specific bit ptSbp(8) is set  
 ieee8021BridgeBasePortType - Station-facing Bridge Port (8)  
 ieee8021BridgeBasePortExternal - Implementation Specific

### 17.5.3.3 Port creation on S-components

*Insert new subclause 17.5.3.3.5 after existing 17.5.3.3.5 as shown:*

#### 17.5.3.3.5 Creating an Uplink Access Port (UAP)

UAPs are created by doing a row-create operation on the EVB Bridge's or EVB station's UAP table. The required column is the ISS Port Number to use for the newly created Port. The ComponentID and PortNumber are specified if the system chooses to build an implicit ieee8021BridgeBasePortTable entry. The ieee8021BridgeEvbUapConfigTable contains the following columns:

ieee8021BridgeEvbUapIssPortNumber  
 ieee8021BridgeEvbUapComponentId  
 ieee8021BridgeEvbUapPortNumber  
 ieee8021BridgeEvbUapCdcAdminEnable  
 ieee8021BridgeEvbUapAdminCDCPRole  
 ieee8021BridgeEvbUapAdminCDCPChanCap  
 ieee8021BridgeEvbUapOperCDCPChanCap  
 ieee8021BridgeEvbUapAdminCDCPSVIDPoolLow  
 ieee8021BridgeEvbUapAdminCDCPSVIDPoolHigh  
 ieee8021BridgeEvbUapOperState  
 ieee8021BridgeEvbUapCdcRemoteEnabled  
 ieee8021BridgeEvbUapCdcRemoteRole  
 ieee8021BridgeEvbUapConfigRowStatus

The optional implicitly constructed ieee8021BridgeBasePortTable entry will have the following fields filled in:

ieee8021BridgeBasePortComponentId - As per UAP Table  
 ieee8021BridgeBasePort - As per UAP Table UAPPort  
 ieee8021BridgeBasePortIfIndex - Implementation Specific Action  
 ieee8021BridgeBasePortDelayExceededDiscards - Statistic, reset to 0 by creation  
 ieee8021BridgeBasePortMtuExceededDiscards - Statistic, reset to 0 by creation  
 ieee8021BridgeBasePortCapabilities - Implementation Specific  
 ieee8021BridgeBasePortTypeCapabilities - Implementation Specific  
 bit ptUap(9) is set  
 ieee8021BridgeBasePortType - Uplink Access Port  
 ieee8021BridgeBasePortExternal - Implementation Specific

*Insert new subclauses 17.5.3.6, 17.5.3.6.1, and 17.5.3.6.2 as shown, following all existing subclauses of 17.5.3, renumbering as necessary:*

### 17.5.3.6 Port creation on edge relays

Creating an Uplink Relay Port implicitly creates the edge relay itself. When an Uplink Relay Port is created it is not necessarily bound to an ISS. The operating environment of the EVB system may choose to bind the

URP to either an S-channel or to an ISS when it chooses. The edge relay may be created with a Downlink Relay Port or it may dynamically create them on demand from the operating environment.

Creating a Downlink Relay Port on an edge relay works the same way as creating a Port on a C-VLAN aware component (17.5.3.1) with the exception that the rules for determining the legality of the Port type are different.

#### 17.5.3.6.1 Creating DRPs

Downlink Relay Ports are created by performing a row-create operation on the ieee8021EvpPortTable for an edge relay. The required columns are the component ID and the Port Number to use for the newly created DRP.

#### 17.5.3.6.2 Creating URPs

URPs are created by performing a row-create operation on the ieee8021BridgeEvpUrpConfigTable of an EVB station. The required columns are the component ID and the Port Number to use for the newly created Port.

The implicitly constructed ieee8021BridgeBaseTable entry will have the following fields filled in:

- ieee8021BridgeBaseComponentId - As per Urp Table
- ieee8021BridgeBaseBridgeAddress- As per Urp Table
- ieee8021BridgeBaseNumPorts - Implementation Specific Action
- ieee8021BridgeBaseComponentType - Type edge relay
- ieee8021BridgeBaseDeviceCapabilities - Implementation specific
- ieee8021BridgeBaseTrafficClassesEnabled - Implementation Specific
- ieee8021BridgeBaseMmrpEnabledStatus - Implementation Specific
- ieee8021BridgeBaseRowStatus -

The implicitly constructed ieee8021BridgeBasePortTable entry will have the following fields filled in:

- ieee8021BridgeBasePortComponentId - As per Urp Table
- ieee8021BridgeBasePort - As per Urp Table
- ieee8021BridgeBasePortIfIndex - Implementation Specific Action
- ieee8021BridgeBasePortDelayExceededDiscards - Statistic, reset to 0 by creation
- ieee8021BridgeBasePortMtuExceededDiscards - Statistic, reset to 0 by creation
- ieee8021BridgeBasePortCapabilities - Implementation Specific
- ieee8021BridgeBasePortTypeCapabilities - Implementation Specific
- bit ptUrp(10) is set
- ieee8021BridgeBasePortType - Uplink Relay Port (10)
- ieee8021BridgeBasePortExternal - Implementation Specific

## 17.7 MIB modules

### 17.7.1 Definitions for the IEEE8021-BRIDGE MIB module

*Replace the IEEE8021-BRIDGE MIB module with the following:*

```

IEEE8021-BRIDGE-MIB DEFINITIONS ::= BEGIN

-- =====
-- MIB for IEEE 802.1D devices
-- =====

IMPORTS
    MODULE-IDENTITY, OBJECT-TYPE,
    Integer32, Counter64
        FROM SNMPv2-SMI
    RowStatus, MacAddress, TruthValue, TimeInterval
        FROM SNMPv2-TC
    MODULE-COMPLIANCE, OBJECT-GROUP
        FROM SNMPv2-CONF
    ifIndex, InterfaceIndexOrZero, ifGeneralInformationGroup
        FROM IF-MIB
    ieee802dot1mibs, IEEE8021PbbComponentIdentifier,
    IEEE8021BridgePortNumber, IEEE8021PriorityCodePoint,
    IEEE8021BridgePortType, IEEE8021PriorityValue,
    IEEE8021PbbComponentIdentifierOrZero,
    IEEE8021BridgePortNumberOrZero
        FROM IEEE8021-TC-MIB
    SnmpAdminString
        FROM SNMP-FRAMEWORK-MIB
    systemGroup
        FROM SNMPv2-MIB
;

ieee8021BridgeMib MODULE-IDENTITY
    LAST-UPDATED "201201300000Z" -- January 30, 2012
    ORGANIZATION "IEEE 802.1 Working Group"
    CONTACT-INFO
        " WG-URL: http://grouper.ieee.org/groups/802/1/index.html
          WG-EMail: stds-802-1@ieee.org

          Contact: David Levi
          Postal: C/O IEEE 802.1 Working Group
                IEEE Standards Association
                445 Hoes Lane
                P.O. Box 1331
                Piscataway
                NJ 08855-1331
                USA
          E-mail: STDS-802-1-L@LISTSERV.IEEE.ORG"
    DESCRIPTION
        "The Bridge MIB module for managing devices that support
        IEEE 802.1D. This MIB module is derived from the IETF
        BRIDGE-MIB, RFC 4188.

        Unless otherwise indicated, the references in this MIB
        module are to IEEE Std 802.1Q-2011."

```



```
1      Copyright (C) IEEE.
2      This version of this MIB module is part of IEEE802.1Q;
3      see the draft itself for full legal notices."
4
5      REVISION      "201201300000Z" -- January 30, 2012
6      DESCRIPTION   "Extended ieee8021BridgeBaseComponentType to
7                    include erComponent and
8                    ieee8021BridgeBasePortTypeCapabilities to include
9                    stationFacingBridgePort, uplinkAccessPort and
10                   uplinkRelayPort.
11                   Added tables ieee8021BridgeBaseIfToPortTable and
12                   ieee8021BridgePortTable
13                   as part of IEEE Std 802.1Qbg."
14
15      REVISION      "201104060000Z" -- April 6, 2011
16      DESCRIPTION   "Modifications to support Remote Customer Service
17                   Interfaces."
18      REVISION      "201102270000Z" -- February 27, 2011
19      DESCRIPTION   "Minor edits to contact information etc. as part of
20                   2011 revision of IEEE Std 802.1Q."
21
22      REVISION      "200810150000Z" -- October 15, 2008
23      DESCRIPTION   "Initial revision, derived from RFC 4188."
24      ::= { ieee802dot1mibs 2 }
25
26      -- =====
27      -- subtrees in the Bridge MIB
28      -- =====
29
30      ieee8021BridgeNotifications
31      OBJECT IDENTIFIER ::= { ieee8021BridgeMib 0 }
32
33      ieee8021BridgeObjects
34      OBJECT IDENTIFIER ::= { ieee8021BridgeMib 1 }
35
36      ieee8021BridgeConformance
37      OBJECT IDENTIFIER ::= { ieee8021BridgeMib 2 }
38
39      ieee8021BridgeBase
40      OBJECT IDENTIFIER ::= { ieee8021BridgeObjects 1 }
41      ieee8021BridgeTp
42      OBJECT IDENTIFIER ::= { ieee8021BridgeObjects 2 }
43      ieee8021BridgePriority
44      OBJECT IDENTIFIER ::= { ieee8021BridgeObjects 3 }
45      ieee8021BridgeMrp
46      OBJECT IDENTIFIER ::= { ieee8021BridgeObjects 4 }
47      ieee8021BridgeMmrp
48      OBJECT IDENTIFIER ::= { ieee8021BridgeObjects 5 }
49      ieee8021BridgeInternalLan
50      OBJECT IDENTIFIER ::= { ieee8021BridgeObjects 6 }
51      ieee8021BridgeDot1d
52      OBJECT IDENTIFIER ::= { ieee8021BridgeObjects 7 }
53
54      -- =====
55      -- the ieee8021BridgeBase subtree
56      -- =====
```



```

1  -- Implementation of the ieee8021BridgeBase subtree is mandatory
2  -- for all bridges.
3  -- =====
4
5  -- =====
6  -- the ieee8021BridgeBaseTable
7  -- =====
8  ieee8021BridgeBaseTable OBJECT-TYPE
9      SYNTAX      SEQUENCE OF Ieee8021BridgeBaseEntry
10     MAX-ACCESS   not-accessible
11     STATUS       current
12     DESCRIPTION
13         "A table that contains generic information about every
14         bridge component. All writable objects in this table
15         MUST be persistent over power up restart/reboot."
16     REFERENCE    "12.4.1"
17     ::= { ieee8021BridgeBase 1 }
18
19 ieee8021BridgeBaseEntry OBJECT-TYPE
20     SYNTAX      Ieee8021BridgeBaseEntry
21     MAX-ACCESS   not-accessible
22     STATUS       current
23     DESCRIPTION
24         "A list of objects containing information for each bridge
25         component."
26     INDEX { ieee8021BridgeBaseComponentId }
27     ::= { ieee8021BridgeBaseTable 1 }
28
29 Ieee8021BridgeBaseEntry ::=
30     SEQUENCE {
31         ieee8021BridgeBaseComponentId
32         IEEE8021PbbComponentIdentifier,
33         ieee8021BridgeBaseBridgeAddress
34         MacAddress,
35         ieee8021BridgeBaseNumPorts
36         Integer32,
37         ieee8021BridgeBaseComponentType
38         INTEGER,
39         ieee8021BridgeBaseDeviceCapabilities
40         BITS,
41         ieee8021BridgeBaseTrafficClassesEnabled
42         TruthValue,
43         ieee8021BridgeBaseMmrpEnabledStatus
44         TruthValue,
45         ieee8021BridgeBaseRowStatus
46         RowStatus
47     }
48
49 ieee8021BridgeBaseComponentId OBJECT-TYPE
50     SYNTAX      IEEE8021PbbComponentIdentifier
51     MAX-ACCESS   not-accessible
52     STATUS       current
53     DESCRIPTION
54         "The component identifier is used to distinguish between the
55         multiple virtual bridge instances within a PBB. In simple
56         situations where there is only a single component the default
57         value is 1."
58     ::= { ieee8021BridgeBaseEntry 1 }

```

```
1 ieee8021BridgeBaseBridgeAddress OBJECT-TYPE
2     SYNTAX      MacAddress
3     MAX-ACCESS  read-create
4     STATUS      current
5     DESCRIPTION
6         "The MAC address used by this bridge when it is
7         referred to in a unique fashion. It is recommended
8         that this be the numerically smallest MAC address of
9         all ports that belong to this bridge. However, it is
10        only required to be unique. When concatenated with
11        ieee8021SpanningTreePriority, a unique BridgeIdentifier
12        is formed, which is used in the Spanning Tree Protocol.
13
14        This object may not be modified while the corresponding
15        instance of ieee8021BridgeBaseRowStatus is active(1).
16
17        The value of this object MUST be retained across
18        reinitializations of the management system."
19    REFERENCE    "12.4.1.1.3 a)"
20    ::= { ieee8021BridgeBaseEntry 2 }
21
22 ieee8021BridgeBaseNumPorts OBJECT-TYPE
23     SYNTAX      Integer32
24     UNITS       "ports"
25     MAX-ACCESS  read-only
26     STATUS      current
27     DESCRIPTION
28         "The number of ports controlled by this bridging
29         entity."
30    REFERENCE    "12.4.1.1.3 c)"
31    ::= { ieee8021BridgeBaseEntry 3 }
32
33 ieee8021BridgeBaseComponentType OBJECT-TYPE
34     SYNTAX      INTEGER {
35         iComponent(1),
36         bComponent(2),
37         cVlanComponent(3),
38         sVlanComponent(4),
39         dBridgeComponent(5),
40         erComponent(6)
41     }
42     MAX-ACCESS  read-create
43     STATUS      current
44     DESCRIPTION
45         "Indicates the component type(s) of this bridge. The
46         following component types are possible:
47
48         iComponent(1) - An S-VLAN component of a Backbone
49         Edge Bridge which performs encapsulation of customer
50         frames.
51
52         bComponent(2) - An S-VLAN component of a Backbone
53         Edge Bridge which bundles backbone service instances
54         into B-VLANs.
55
56         cVlanComponent(3) - A C-VLAN component of an
57         enterprise VLAN bridge or of a Provider Bridge used
58         to process C-tagged frames.
```

```
1         sVlanComponent(4) - An S-VLAN component of a
2             Provider Bridge.
3
4         dBridgeComponent(5) - A VLAN unaware component of an
5             802.1D bridge.
6
7         erComponent (6) - An Edge Relay component of an EVB Station.
8
9         This object may not be modified while the corresponding
10            instance of ieee8021BridgeBaseRowStatus is active(1).
11
12         The value of this object MUST be retained across
13            reinitializations of the management system."
14     REFERENCE    "12.3 m)"
15     ::= { ieee8021BridgeBaseEntry 4 }
16
17 ieee8021BridgeBaseDeviceCapabilities OBJECT-TYPE
18     SYNTAX      BITS {
19         dot1dExtendedFilteringServices(0),
20         dot1dTrafficClasses(1),
21         dot1qStaticEntryIndividualPort(2),
22         dot1qIVLCapable(3),
23         dot1qSVLCapable(4),
24         dot1qHybridCapable(5),
25         dot1qConfigurablePvidTagging(6),
26         dot1dLocalVlanCapable(7)
27     }
28     MAX-ACCESS  read-create
29     STATUS      current
30     DESCRIPTION
31         "Indicates the optional parts of IEEE 802.1D and 802.1Q
32         that are implemented by this device and are manageable
33         through this MIB. Capabilities that are allowed on a
34         per-port basis are indicated in
35         ieee8021BridgeBasePortCapabilities.
36
37         dot1dExtendedFilteringServices(0),
38             -- can perform filtering of
39             -- individual multicast addresses
40             -- controlled by MMRP.
41         dot1dTrafficClasses(1),
42             -- can map user priority to
43             -- multiple traffic classes.
44         dot1qStaticEntryIndividualPort(2),
45             -- dot1qStaticUnicastReceivePort &
46             -- dot1qStaticMulticastReceivePort
47             -- can represent non-zero entries.
48         dot1qIVLCapable(3),    -- Independent VLAN Learning (IVL).
49         dot1qSVLCapable(4),    -- Shared VLAN Learning (SVL).
50         dot1qHybridCapable(5), -- both IVL & SVL simultaneously.
51         dot1qConfigurablePvidTagging(6),
52             -- whether the implementation
53             -- supports the ability to
54             -- override the default PVID
55             -- setting and its egress status
56             -- (VLAN-Tagged or Untagged) on
57             -- each port.
58         dot1dLocalVlanCapable(7)
```

```

1          -- can support multiple local
2          -- bridges, outside of the scope
3          -- of 802.1Q defined VLANs.
4
5      This object may not be modified while the corresponding
6      instance of ieee8021BridgeBaseRowStatus is active(1).
7
8      The value of this object MUST be retained across
9      reinitializations of the management system."
10     REFERENCE    "12.10.1.1.3 b)"
11     ::= { ieee8021BridgeBaseEntry 5 }
12
13 ieee8021BridgeBaseTrafficClassesEnabled OBJECT-TYPE
14     SYNTAX      TruthValue
15     MAX-ACCESS  read-create
16     STATUS      current
17     DESCRIPTION
18         "The value true(1) indicates that Traffic Classes are
19         enabled on this bridge. When false(2), the bridge
20         operates with a single priority level for all traffic.
21
22         This object may be modified while the corresponding
23         instance of ieee8021BridgeBaseRowStatus is active(1).
24
25         The value of this object MUST be retained across
26         reinitializations of the management system."
27     DEFVAL      { true }
28     ::= { ieee8021BridgeBaseEntry 6 }
29
30 ieee8021BridgeBaseMmrpEnabledStatus OBJECT-TYPE
31     SYNTAX      TruthValue
32     MAX-ACCESS  read-create
33     STATUS      current
34     DESCRIPTION
35         "The administrative status requested by management for
36         MMRP. The value true(1) indicates that MMRP should
37         be enabled on this device, in all VLANs, on all ports
38         for which it has not been specifically disabled. When
39         false(2), MMRP is disabled, in all VLANs and on all
40         ports, and all MMRP packets will be forwarded
41         transparently. This object affects both Applicant and
42         Registrar state machines. A transition from false(2)
43         to true(1) will cause a reset of all MMRP state
44         machines on all ports.
45
46         This object may be modified while the corresponding
47         instance of ieee8021BridgeBaseRowStatus is active(1).
48
49         The value of this object MUST be retained across
50         reinitializations of the management system."
51     DEFVAL      { true }
52     ::= { ieee8021BridgeBaseEntry 7 }
53
54 ieee8021BridgeBaseRowStatus OBJECT-TYPE
55     SYNTAX      RowStatus
56     MAX-ACCESS  read-create
57     STATUS      current
58     DESCRIPTION
59         "The object indicates the status of an entry, and is used

```

```

1      to create/delete entries.
2
3      The following objects MUST be set prior to making a new
4      entry active:
5          ieee8021BridgeBaseBridgeAddress
6          ieee8021BridgeBaseComponentType
7          ieee8021BridgeBaseDeviceCapabilities
8      It is recommended that these three objects not be allowed
9      to be modified while the corresponding instance of
10     ieee8021BridgeBaseRowStatus object is active(1).
11
12     The following objects are not required to be set before
13     making a new entry active (they will take their defaults),
14     and they also may be modified while the corresponding
15     instance of this object is active(1):
16         ieee8021BridgeBaseTrafficClassesEnabled
17         ieee8021BridgeBaseMmrpEnabledStatus
18
19     The value of this object and all corresponding instances
20     of other objects in this table MUST be retained across
21     reinitializations of the management system."
22 ::= { ieee8021BridgeBaseEntry 8 }
23
24 -- =====
25 -- The Generic Bridge Port Table
26 -- =====
27 ieee8021BridgeBasePortTable OBJECT-TYPE
28     SYNTAX      SEQUENCE OF Ieee8021BridgeBasePortEntry
29     MAX-ACCESS  not-accessible
30     STATUS      current
31     DESCRIPTION
32         "A table that contains generic information about every
33         port that is associated with this bridge.  Transparent,
34         and source-route ports are included."
35     REFERENCE   "12.4.2"
36     ::= { ieee8021BridgeBase 4 }
37
38 ieee8021BridgeBasePortEntry OBJECT-TYPE
39     SYNTAX      Ieee8021BridgeBasePortEntry
40     MAX-ACCESS  not-accessible
41     STATUS      current
42
43     DESCRIPTION
44         "A list of objects containing information for each port
45         of the bridge."
46     INDEX { ieee8021BridgeBasePortComponentId,
47             ieee8021BridgeBasePort }
48     ::= { ieee8021BridgeBasePortTable 1 }
49
50 Ieee8021BridgeBasePortEntry ::=
51     SEQUENCE {
52         ieee8021BridgeBasePortComponentId
53         IEEE8021PbbComponentIdentifier,
54         ieee8021BridgeBasePort
55         IEEE8021BridgePortNumber,
56         ieee8021BridgeBasePortIfIndex
57         InterfaceIndexOrZero,
58         ieee8021BridgeBasePortDelayExceededDiscards
59         Counter64,

```

```

1         ieee8021BridgeBasePortMtuExceededDiscards
2             Counter64,
3         ieee8021BridgeBasePortCapabilities
4             BITS,
5         ieee8021BridgeBasePortTypeCapabilities
6             BITS,
7         ieee8021BridgeBasePortType
8             IEEE8021BridgePortType,
9         ieee8021BridgeBasePortExternal
10            TruthValue,
11         ieee8021BridgeBasePortAdminPointToPoint
12            INTEGER,
13         ieee8021BridgeBasePortOperPointToPoint
14            TruthValue,
15         ieee8021BridgeBasePortName
16            SnmpAdminString
17     }
18
19     ieee8021BridgeBasePortComponentId OBJECT-TYPE
20     SYNTAX      IEEE8021PbbComponentIdentifier
21     MAX-ACCESS  not-accessible
22     STATUS      current
23     DESCRIPTION
24         "The component identifier is used to distinguish between the
25         multiple virtual bridge instances within a PBB. In simple
26         situations where there is only a single component the default
27         value is 1."
28     ::= { ieee8021BridgeBasePortEntry 1 }
29
30     ieee8021BridgeBasePort OBJECT-TYPE
31     SYNTAX      IEEE8021BridgePortNumber
32     MAX-ACCESS  not-accessible
33     STATUS      current
34     DESCRIPTION
35         "The port number of the port for which this entry
36         contains bridge management information."
37     REFERENCE   "12.4.2.1.2 a)"
38     ::= { ieee8021BridgeBasePortEntry 2 }
39
40     ieee8021BridgeBasePortIfIndex OBJECT-TYPE
41     SYNTAX      InterfaceIndexOrZero
42     MAX-ACCESS  read-write
43     STATUS      current
44     DESCRIPTION
45         "The value of the instance of the IfIndex object,
46         defined in the IF-MIB, for the interface corresponding
47         to this port, or the value 0 if the port has not been
48         bound to an underlying frame source and sink.
49
50         It is an implementation specific decision as to whether this object
51         may be modified if it has been created or if 0 is a legal value.
52
53         The underlying IfEntry indexed by this column MUST be persistent
54         across reinitializations of the management system."
55     ::= { ieee8021BridgeBasePortEntry 3 }
56
57     ieee8021BridgeBasePortDelayExceededDiscards OBJECT-TYPE
58     SYNTAX      Counter64
59     UNITS        "frames"

```

```

1      MAX-ACCESS    read-only
2      STATUS        current
3      DESCRIPTION
4          "The number of frames discarded by this port due
5          to excessive transit delay through the bridge. It
6          is incremented by both transparent and source
7          route bridges.
8
9          Discontinuities in the value of the counter can occur
10         at re-initialization of the management system, and at
11         other times as indicated by the value of
12         ifCounterDiscontinuityTime object of the associated
13         interface (if any)."
```

REFERENCE "12.6.1.1.3 f)"

```

14 ::= { ieee8021BridgeBasePortEntry 4 }

15
16 ieee8021BridgeBasePortMtuExceededDiscards OBJECT-TYPE
17     SYNTAX      Counter64
18     UNITS        "frames"
19     MAX-ACCESS  read-only
20     STATUS      current
21     DESCRIPTION
22         "The number of frames discarded by this port due
23         to an excessive size. It is incremented by both
24         transparent and source route bridges.
25
26         Discontinuities in the value of the counter can occur
27         at re-initialization of the management system, and at
28         other times as indicated by the value of
29         ifCounterDiscontinuityTime object of the associated
30         interface (if any)."
```

REFERENCE "12.6.1.1.3 g)"

```

31 ::= { ieee8021BridgeBasePortEntry 5 }

32
33 ieee8021BridgeBasePortCapabilities OBJECT-TYPE
34     SYNTAX      BITS {
35         dot1qDot1qTagging(0),
36         dot1qConfigurableAcceptableFrameTypes(1),
37         dot1qIngressFiltering(2)
38     }
39     MAX-ACCESS  read-only
40     STATUS      current
41     DESCRIPTION
42         "Indicates the parts of IEEE 802.1D and 802.1Q that are
43         optional on a per-port basis, that are implemented by
44         this device, and that are manageable through this MIB.
45
46         dot1qDot1qTagging(0), -- supports 802.1Q VLAN tagging of
47                                -- frames and MVRP.
48         dot1qConfigurableAcceptableFrameTypes(1),
49                                -- allows modified values of
50                                -- dot1qPortAcceptableFrameTypes.
51         dot1qIngressFiltering(2)
52                                -- supports the discarding of any
53                                -- frame received on a Port whose
54                                -- VLAN classification does not
55                                -- include that Port in its Member
56                                -- set."
```

REFERENCE "12.10.1.1.3 c)"

```

1      ::= { ieee8021BridgeBasePortEntry 6 }
2
3  ieee8021BridgeBasePortTypeCapabilities OBJECT-TYPE
4      SYNTAX      BITS {
5          customerVlanPort(0),
6          providerNetworkPort(1),
7          customerNetworkPort(2),
8          customerEdgePort(3),
9          customerBackbonePort(4),
10         virtualInstancePort(5),
11         dBridgePort(6),
12         remoteCustomerAccessPort(7),
13         stationFacingBridgePort(8),
14         uplinkAccessPort(9),
15         uplinkRelayPort(10)
16     }
17     MAX-ACCESS   read-only
18     STATUS       current
19     DESCRIPTION
20         "Indicates the capabilities of this port. The corresponding
21         instance of ieee8021BridgeBasePortType can potentially take
22         any of the values for which the corresponding bit in this
23         object is 1. The possible port types are as follows:
24
25         customerVlanPort(0) - Indicates the port can be a C-tag
26         aware port of an enterprise VLAN aware bridge.
27
28         providerNetworkPort(1) - Indicates the port can be an
29         S-tag aware port of a Provider Bridge or Backbone
30         Edge Bridge used for connections within a PBN or
31         PBBN.
32
33         customerNetworkPort(2) - Indicates the port can be an
34         S-tag aware port of a Provider Bridge or Backbone
35         Edge Bridge used for connections to the exterior of
36         a PBN or PBBN.
37
38         customerEdgePort(3) - Indicates the port can be a C-tag
39         aware port of a Provider Bridge used for connections
40         to the exterior of a PBN or PBBN.
41
42         customerBackbonePort(4) - Indicates the port can be a
43         I-tag aware port of a Backbone Edge Bridge's
44         B-component.
45
46         virtualInstancePort(5) - Indicates the port can be a
47         virtual S-tag aware port within a Backbone Edge
48         Bridge's I-component which is responsible for
49         handling S-tagged traffic for a specific backbone
50         service instance.
51
52         dBridgePort(6) - Indicates the port can be a VLAN-unaware
53         member of an 802.1D bridge.
54
55         remoteCustomerAccessPort(7) - Indicates the port can be an
56         S-tag aware port of a Provider Bridge capable of providing
57         Remote Customer Service Interfaces.
58
59         stationFacingBridgePort(8) - Indicates the station-facing

```



```

1         Bridge Port in a EVB Bridge.
2
3         uplinkAccessPort(9) - Indicates the uplink access port
4         in an EVB Bridge or EVB station.
5
6         uplinkRelayPort (10) - Indicates the uplink relay port
7         in an EVB station."
8
9     REFERENCE    "12.16.1.1.3 h4), 12.16.2.1/2,
10                12.13.1.1, 12.13.1.2, 12.15.2.1, 12.15.2.2,
11                12.26.2, 12.26.4.1, 12.26.5.1"
12
13 ::= { ieee8021BridgeBasePortEntry 7 }
14
15 ieee8021BridgeBasePortType OBJECT-TYPE
16     SYNTAX      IEEE8021BridgePortType
17     MAX-ACCESS  read-only
18     STATUS      current
19     DESCRIPTION
20         "The port type. This value MUST be persistent over power up
21         restart/reboot."
22     REFERENCE    "12.16.1.1.3 h4), 12.16.2.1/2,
23                12.13.1.1, 12.13.1.2, 12.15.2.1, 12.15.2.2"
24 ::= { ieee8021BridgeBasePortEntry 8 }
25
26 ieee8021BridgeBasePortExternal OBJECT-TYPE
27     SYNTAX      TruthValue
28     MAX-ACCESS  read-only
29     STATUS      current
30     DESCRIPTION
31         "A boolean indicating whether the port is external. A value of
32         true(1) means the port is external. A value of false(2) means
33         the port is internal."
34     REFERENCE    "12.16.1.1.3 h4)"
35 ::= { ieee8021BridgeBasePortEntry 9 }
36
37 ieee8021BridgeBasePortAdminPointToPoint OBJECT-TYPE
38     SYNTAX      INTEGER {
39         forceTrue(1),
40         forceFalse(2),
41         auto(3)
42     }
43     MAX-ACCESS  read-write
44     STATUS      current
45     DESCRIPTION
46         "For a port running spanning tree, this object represents the
47         administrative point-to-point status of the LAN segment
48         attached to this port, using the enumeration values of
49         6.4.3. A value of forceTrue(1) indicates
50         that this port should always be treated as if it is
51         connected to a point-to-point link. A value of
52         forceFalse(2) indicates that this port should be treated as
53         having a shared media connection. A value of auto(3)
54         indicates that this port is considered to have a
55         point-to-point link if it is an Aggregator and all of its
56         members are aggregatable, or if the MAC entity
57         is configured for full duplex operation, either through
58         auto-negotiation or by management means. Manipulating this
59         object changes the underlying adminPointToPointMAC.

```

For a VIP, the adminPointToPointMAC parameter controls the mechanism by which the Default Backbone Destination parameter for the VIP is determined. For a backbone service instance that includes only 2 VIPs, the value may be set to forceTrue(1) which permits dynamic learning of the Default Backbone Destination parameter. For a backbone service instance that includes more than 2 VIPs, the value MUST be set to ForceFalse(2) or auto(3).

When this object is set to forceTrue(1) for a VIP, the Default Backbone Destination parameter is modified by the subsequent M\_UNITDATA.indications as specified in 6.10.1 (and described in 26.4.1). Whenever the parameter is set to ForceFalse(2) or auto(3), the value for the Default Backbone Destination parameter is set to the Backbone Service Instance Group Address for the VIP-ISID.

The value of this object MUST be retained across reinitializations of the management system."

REFERENCE "6.6.3, 6.10, 12.8.2.1.3 o), 12.8.2.3.2 f), 26.4.1"

DEFVAL { forceFalse }

::= { ieee8021BridgeBasePortEntry 10 }

ieee8021BridgeBasePortOperPointToPoint OBJECT-TYPE

SYNTAX TruthValue

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"For a port running spanning tree, this object represents the operational point-to-point status of the LAN segment attached to this port. It indicates whether a port is considered to have a point-to-point connection. If adminPointToPointMAC is set to auto(2), then the value of operPointToPointMAC is determined in accordance with the specific procedures defined for the MAC entity concerned, as defined in 6.5 of IEEE 802.1w. The value is determined dynamically; that is, it is re-evaluated whenever the value of adminPointToPointMAC changes, and whenever the specific procedures defined for the MAC entity evaluate a change in its point-to-point status.

For a VIP, this object simply reflects the value of the corresponding instance of ieee8021BridgeBasePortAdminPointToPoint. The value will be true(1) if that object is forceTrue(1), and the value will be false(2) if the value of that object is either forceFalse(2) or auto(3)."

REFERENCE "6.6.3, 6.10, 12.8.2.1.3 p), 12.8.2.3.2 f), 26.4.1"

::= { ieee8021BridgeBasePortEntry 11 }

ieee8021BridgeBasePortName OBJECT-TYPE

SYNTAX SnmpAdminString

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"A text string of up to 32 characters, of locally determined significance."

REFERENCE "12.4.2.1.3 a)"

::= { ieee8021BridgeBasePortEntry 12 }

```

1  -- =====
2  -- The Generic Bridge ifIndex to Port Table
3  -- =====
4  ieee8021BridgeBaseIfToPortTable OBJECT-TYPE
5      SYNTAX      SEQUENCE OF Ieee8021BridgeBaseIfToPortEntry
6      MAX-ACCESS  not-accessible
7      STATUS      current
8      DESCRIPTION
9          "A table that contains generic information about every
10         ifIndex that is associated with this bridge."
11      REFERENCE   "17.2.2"
12      ::= { ieee8021BridgeBase 5 }
13
14  ieee8021BridgeBaseIfToPortEntry OBJECT-TYPE
15      SYNTAX      Ieee8021BridgeBaseIfToPortEntry
16      MAX-ACCESS  not-accessible
17      STATUS      current
18      DESCRIPTION
19          "A list of objects containing information for each ifIndex
20         of the bridge."
21      INDEX { ifIndex }
22      ::= { ieee8021BridgeBaseIfToPortTable 1 }
23
24  Ieee8021BridgeBaseIfToPortEntry ::=
25      SEQUENCE {
26          ieee8021BridgeBaseIfIndexComponentId
27              IEEE8021PbbComponentIdentifier,
28          ieee8021BridgeBaseIfIndexPort
29              IEEE8021BridgePortNumber
30      }
31
32  ieee8021BridgeBaseIfIndexComponentId OBJECT-TYPE
33      SYNTAX      IEEE8021PbbComponentIdentifier
34      MAX-ACCESS  read-only
35      STATUS      current
36      DESCRIPTION
37          "The component ID for this ifIndex."
38      ::= { ieee8021BridgeBaseIfToPortEntry 1 }
39
40  ieee8021BridgeBaseIfIndexPort OBJECT-TYPE
41      SYNTAX      IEEE8021BridgePortNumber
42      MAX-ACCESS  read-only
43      STATUS      current
44      DESCRIPTION
45          "The port for this ifIndex."
46      ::= { ieee8021BridgeBaseIfToPortEntry 2 }
47
48  -- =====
49  -- port number table section 12.5.1
50  -- =====
51
52  ieee8021BridgePhyPortTable OBJECT-TYPE
53      SYNTAX      SEQUENCE OF Ieee8021BridgePhyPortEntry
54      MAX-ACCESS  not-accessible
55      STATUS      current
56      DESCRIPTION
57          "A table that contains ISS port number to bridge

```

```
1      componentID and port number mapping."
2      REFERENCE    "12.5.1"
3      ::= { ieee8021BridgeBase 6}
4
5      ieee8021BridgePhyPortEntry OBJECT-TYPE
6          SYNTAX      Ieee8021BridgePhyPortEntry
7          MAX-ACCESS   not-accessible
8          STATUS      current
9          DESCRIPTION
10             "A list of objects containing mapping for ISS port
11              numbers to bridge componentID and port numbers "
12          INDEX { ieee8021BridgePhyPort }
13          ::= { ieee8021BridgePhyPortTable 1 }
14
15      Ieee8021BridgePhyPortEntry ::=
16      SEQUENCE {
17          ieee8021BridgePhyPort
18              IEEE8021BridgePortNumber,
19          ieee8021BridgePhyPortIfIndex
20              InterfaceIndexOrZero,
21          ieee8021BridgePhyMacAddress
22              MacAddress,
23          ieee8021BridgePhyPortToComponentId
24              IEEE8021PbbComponentIdentifierOrZero,
25          ieee8021BridgePhyPortToInternalPort
26              IEEE8021BridgePortNumberOrZero
27      }
28
29      ieee8021BridgePhyPort OBJECT-TYPE
30          SYNTAX      IEEE8021BridgePortNumber
31          MAX-ACCESS   not-accessible
32          STATUS      current
33          DESCRIPTION
34             "The ISS port."
35          REFERENCE    "12.26"
36          ::= { ieee8021BridgePhyPortEntry 1 }
37
38      ieee8021BridgePhyPortIfIndex OBJECT-TYPE
39          SYNTAX      InterfaceIndexOrZero
40          MAX-ACCESS   read-only
41          STATUS      current
42          DESCRIPTION
43             "The value of the instance of the IfIndex object,
44              defined in the IF-MIB, for the interface corresponding
45              to this port, or the value 0 if the port has not been
46              bound to an underlying frame source and sink.
47
48              The underlying IfEntry indexed by this column MUST
49              be persistent across reinitializations of the
50              management system."
51          ::= { ieee8021BridgePhyPortEntry 2 }
52
53      ieee8021BridgePhyMacAddress OBJECT-TYPE
54          SYNTAX      MacAddress
55          MAX-ACCESS   read-only
56          STATUS      current
57          DESCRIPTION   "The mac address"
```

```

1      ::= { ieee8021BridgePhyPortEntry 3 }
2
3  ieee8021BridgePhyPortToComponentId OBJECT-TYPE
4      SYNTAX      IEEE8021PbbComponentIdentifierOrZero
5      MAX-ACCESS  read-only
6      STATUS      current
7      DESCRIPTION
8          "The component ID that this ISS port belongs to."
9
10     ::= { ieee8021BridgePhyPortEntry 4 }
11
12  ieee8021BridgePhyPortToInternalPort OBJECT-TYPE
13      SYNTAX      IEEE8021BridgePortNumberOrZero
14      MAX-ACCESS  read-only
15      STATUS      current
16      DESCRIPTION
17          "The port number to which this ISS port maps to."
18
19     ::= { ieee8021BridgePhyPortEntry 5 }
20
21  -- =====
22  -- the ieee8021BridgeTp subtree
23  -- =====
24  -- This is implemented by those bridges that support the
25  -- transparent bridging mode. A transparent bridge will
26  -- implement this subtree.
27  -- =====
28  -- Port Table for Transparent Bridges
29  -- =====
30
31  ieee8021BridgeTpPortTable OBJECT-TYPE
32      SYNTAX      SEQUENCE OF Ieee8021BridgeTpPortEntry
33      MAX-ACCESS  not-accessible
34      STATUS      current
35      DESCRIPTION
36          "A table that contains information about every port that
37          is associated with this transparent bridge."
38      REFERENCE   "12.4.2, C.4"
39      ::= { ieee8021BridgeTp 1 }
40
41  ieee8021BridgeTpPortEntry OBJECT-TYPE
42      SYNTAX      Ieee8021BridgeTpPortEntry
43      MAX-ACCESS  not-accessible
44      STATUS      current
45      DESCRIPTION
46          "A list of objects containing information for each port of
47          a transparent bridge."
48      INDEX      { ieee8021BridgeTpPortComponentId,
49                  ieee8021BridgeTpPort }
50      ::= { ieee8021BridgeTpPortTable 1 }
51
52  Ieee8021BridgeTpPortEntry ::=
53      SEQUENCE {
54          ieee8021BridgeTpPortComponentId
55          IEEE8021PbbComponentIdentifier,
56          ieee8021BridgeTpPort

```

```

1         IEEE8021BridgePortNumber,
2         ieee8021BridgeTpPortMaxInfo
3         Integer32,
4         ieee8021BridgeTpPortInFrames
5         Counter64,
6         ieee8021BridgeTpPortOutFrames
7         Counter64,
8         ieee8021BridgeTpPortInDiscards
9         Counter64
10    }
11
12    ieee8021BridgeTpPortComponentId OBJECT-TYPE
13    SYNTAX      IEEE8021PbbComponentIdentifier
14    MAX-ACCESS  not-accessible
15    STATUS      current
16    DESCRIPTION
17        "The component identifier is used to distinguish between the
18        multiple virtual bridge instances within a PBB. In simple
19        situations where there is only a single component the default
20        value is 1."
21    ::= { ieee8021BridgeTpPortEntry 1 }
22
23    ieee8021BridgeTpPort OBJECT-TYPE
24    SYNTAX      IEEE8021BridgePortNumber
25    MAX-ACCESS  not-accessible
26    STATUS      current
27    DESCRIPTION
28        "The port number of the port for which this entry
29        contains Transparent bridging management information."
30    ::= { ieee8021BridgeTpPortEntry 2 }
31
32    ieee8021BridgeTpPortMaxInfo OBJECT-TYPE
33    SYNTAX      Integer32
34    UNITS       "bytes"
35    MAX-ACCESS  read-only
36    STATUS      current
37    DESCRIPTION
38        "The maximum size of the INFO (non-MAC) field that
39        this port will receive or transmit."
40    ::= { ieee8021BridgeTpPortEntry 3 }
41
42    ieee8021BridgeTpPortInFrames OBJECT-TYPE
43    SYNTAX      Counter64
44    UNITS       "frames"
45    MAX-ACCESS  read-only
46    STATUS      current
47    DESCRIPTION
48        "The number of frames that have been received by this
49        port from its segment. Note that a frame received on the
50        interface corresponding to this port is only counted by
51        this object if and only if it is for a protocol being
52        processed by the local bridging function, including
53        bridge management frames.
54
55        Discontinuities in the value of the counter can occur
56        at re-initialization of the management system, and at
57        other times as indicated by the value of
58        ifCounterDiscontinuityTime object of the associated
59        interface (if any)."
```

```

1      REFERENCE    "12.6.1.1.3 a)"
2      ::= { ieee8021BridgeTpPortEntry 4 }
3
4  ieee8021BridgeTpPortOutFrames OBJECT-TYPE
5      SYNTAX      Counter64
6      UNITS       "frames"
7      MAX-ACCESS  read-only
8      STATUS      current
9      DESCRIPTION
10         "The number of frames that have been transmitted by this
11         port to its segment. Note that a frame transmitted on
12         the interface corresponding to this port is only counted
13         by this object if and only if it is for a protocol being
14         processed by the local bridging function, including
15         bridge management frames.
16
17         Discontinuities in the value of the counter can occur
18         at re-initialization of the management system, and at
19         other times as indicated by the value of
20         ifCounterDiscontinuityTime object of the associated
21         interface (if any)."
```

```

22      REFERENCE    "12.6.1.1.3 d)"
23      ::= { ieee8021BridgeTpPortEntry 5 }
24
25  ieee8021BridgeTpPortInDiscards OBJECT-TYPE
26      SYNTAX      Counter64
27      UNITS       "frames"
28      MAX-ACCESS  read-only
29      STATUS      current
30      DESCRIPTION
31         "Count of received valid frames that were discarded
32         (i.e., filtered) by the Forwarding Process.
33
34         Discontinuities in the value of the counter can occur
35         at re-initialization of the management system, and at
36         other times as indicated by the value of
37         ifCounterDiscontinuityTime object of the associated
38         interface (if any)."
```

```

39      REFERENCE    "12.6.1.1.3 c)"
40      ::= { ieee8021BridgeTpPortEntry 6 }
41
42  -- =====
43  -- the ieee8021BridgePrioritysubtree
44  -- =====
45
46  -- =====
47  -- Port Priority Table
48  -- =====
49
50  ieee8021BridgePortPriorityTable OBJECT-TYPE
51      SYNTAX      SEQUENCE OF Ieee8021BridgePortPriorityEntry
52      MAX-ACCESS  not-accessible
53      STATUS      current
54      DESCRIPTION
55         "A table that contains information about every port that
56         is associated with this transparent bridge."
```

```

57      ::= { ieee8021BridgePriority 1 }
58
59  ieee8021BridgePortPriorityEntry OBJECT-TYPE
```

```
1      SYNTAX      Ieee8021BridgePortPriorityEntry
2      MAX-ACCESS  not-accessible
3      STATUS      current
4      DESCRIPTION
5          "A list of Default User Priorities for each port of a
6          transparent bridge. This is indexed by
7          ieee8021BridgeBasePortComponentId and
8          ieee8021BridgeBasePort."
9      AUGMENTS { ieee8021BridgeBasePortEntry }
10     ::= { ieee8021BridgePortPriorityTable 1 }
11
12     Ieee8021BridgePortPriorityEntry ::=
13     SEQUENCE {
14         ieee8021BridgePortDefaultUserPriority
15             IEEE8021PriorityValue,
16         ieee8021BridgePortNumTrafficClasses
17             Integer32,
18         ieee8021BridgePortPriorityCodePointSelection
19             IEEE8021PriorityCodePoint,
20         ieee8021BridgePortUseDEI
21             TruthValue,
22         ieee8021BridgePortRequireDropEncoding
23             TruthValue,
24         ieee8021BridgePortServiceAccessPrioritySelection
25             TruthValue
26     }
27
28     ieee8021BridgePortDefaultUserPriority OBJECT-TYPE
29     SYNTAX      IEEE8021PriorityValue
30     MAX-ACCESS  read-write
31     STATUS      current
32     DESCRIPTION
33         "The default ingress User Priority for this port. This
34         only has effect on media, such as Ethernet, that do not
35         support native User Priority.
36
37         The value of this object MUST be retained across
38         reinitializations of the management system."
39     ::= { ieee8021BridgePortPriorityEntry 1 }
40
41     ieee8021BridgePortNumTrafficClasses OBJECT-TYPE
42     SYNTAX      Integer32 (1..8)
43     MAX-ACCESS  read-write
44     STATUS      current
45     DESCRIPTION
46         "The number of egress traffic classes supported on this
47         port. This object may optionally be read-only.
48
49         The value of this object MUST be retained across
50         reinitializations of the management system."
51     ::= { ieee8021BridgePortPriorityEntry 2 }
52
53     ieee8021BridgePortPriorityCodePointSelection OBJECT-TYPE
54     SYNTAX      IEEE8021PriorityCodePoint
55     MAX-ACCESS  read-write
56     STATUS      current
57     DESCRIPTION
58         " This object identifies the rows in the PCP encoding and
59         decoding tables that are used to remark frames on this
```



```

1         port if this remarking is enabled."
2     REFERENCE    "12.6.2.6, 12.6.2.7"
3     ::= { ieee8021BridgePortPriorityEntry 3 }
4
5     ieee8021BridgePortUseDEI OBJECT-TYPE
6         SYNTAX      TruthValue
7         MAX-ACCESS   read-write
8         STATUS      current
9         DESCRIPTION
10            "If the Use_DEI is set to true(1) for the Port then the
11            drop_eligible parameter is encoded in the DEI of transmitted
12            frames, and the drop_eligible parameter shall be true(1) for a
13            received frame if the DEI is set in the VLAN tag or the Priority
14            Code Point Decoding Table indicates drop_eligible True for
15            the received PCP value. If the Use_DEI parameter is false(2),
16            the DEI shall be transmitted as zero and ignored on receipt.
17            The default value of the Use_DEI parameter is false(2)."
18     REFERENCE    "12.6.2.12, 12.6.2.13"
19     ::= { ieee8021BridgePortPriorityEntry 4 }
20
21     ieee8021BridgePortRequireDropEncoding OBJECT-TYPE
22         SYNTAX      TruthValue
23         MAX-ACCESS   read-write
24         STATUS      current
25         DESCRIPTION
26            "If a Bridge supports encoding or decoding of drop_eligible
27            from the PCP field of a VLAN tag (6.7.3) on any of its Ports,
28            then it shall implement a Boolean parameter Require Drop
29            Encoding on each of its Ports with default value false(2). If
30            Require Drop Encoding is True and the Bridge Port cannot
31            encode particular priorities with drop_eligible, then frames
32            queued with those priorities and drop_eligible true(1) shall
33            be discarded and not transmitted."
34     REFERENCE    "12.6.2.14, 12.6.2.15"
35     DEFVAL { false }
36     ::= { ieee8021BridgePortPriorityEntry 5 }
37
38     ieee8021BridgePortServiceAccessPrioritySelection OBJECT-TYPE
39         SYNTAX      TruthValue
40         MAX-ACCESS   read-write
41         STATUS      current
42         DESCRIPTION
43            "Indication of if the Service Access Priority Selection
44            function is supported on the Customer Bridge Port to request
45            priority handling of the frame from a Port-based service
46            interface."
47     REFERENCE    "12.6.2.16, 12.6.2.17"
48     ::= { ieee8021BridgePortPriorityEntry 6 }
49
50     -- =====
51     -- User Priority Regeneration Table
52     -- =====
53
54     ieee8021BridgeUserPriorityRegenTable OBJECT-TYPE
55         SYNTAX      SEQUENCE OF Ieee8021BridgeUserPriorityRegenEntry
56         MAX-ACCESS   not-accessible
57         STATUS      current
58         DESCRIPTION
59            "A list of Regenerated User Priorities for each received

```

```

1      User Priority on each port of a bridge. The Regenerated
2      User Priority value may be used to index the Traffic
3      Class Table for each input port. This only has effect
4      on media that support native User Priority. The default
5      values for Regenerated User Priorities are the same as
6      the User Priorities."
7      REFERENCE    "6.5"
8      ::= { ieee8021BridgePriority 2 }
9
10     ieee8021BridgeUserPriorityRegenEntry OBJECT-TYPE
11     SYNTAX      Ieee8021BridgeUserPriorityRegenEntry
12     MAX-ACCESS  not-accessible
13     STATUS      current
14     DESCRIPTION
15         "A mapping of incoming User Priority to a Regenerated
16         User Priority."
17     INDEX      { ieee8021BridgeBasePortComponentId,
18                 ieee8021BridgeBasePort,
19                 ieee8021BridgeUserPriority }
20     ::= { ieee8021BridgeUserPriorityRegenTable 1 }
21
22     Ieee8021BridgeUserPriorityRegenEntry ::=
23     SEQUENCE {
24         ieee8021BridgeUserPriority
25         IEEE8021PriorityValue,
26         ieee8021BridgeRegenUserPriority
27         IEEE8021PriorityValue
28     }
29
30     ieee8021BridgeUserPriority OBJECT-TYPE
31     SYNTAX      IEEE8021PriorityValue
32     MAX-ACCESS  not-accessible
33     STATUS      current
34     DESCRIPTION
35         "The User Priority for a frame received on this port."
36     ::= { ieee8021BridgeUserPriorityRegenEntry 1 }
37
38     ieee8021BridgeRegenUserPriority OBJECT-TYPE
39     SYNTAX      IEEE8021PriorityValue
40     MAX-ACCESS  read-write
41     STATUS      current
42     DESCRIPTION
43         "The Regenerated UserPriority that the incoming User
44         Priority is mapped to for this port."
45
46         The value of this object MUST be retained across
47         reinitializations of the management system."
48     ::= { ieee8021BridgeUserPriorityRegenEntry 2 }
49
50     -- =====
51     -- Traffic Class Table
52     -- =====
53
54     ieee8021BridgeTrafficClassTable OBJECT-TYPE
55     SYNTAX      SEQUENCE OF Ieee8021BridgeTrafficClassEntry
56     MAX-ACCESS  not-accessible
57     STATUS      current
58     DESCRIPTION
59         "A table mapping evaluated User Priority to Traffic

```

```

1      Class, for forwarding by the bridge. Traffic class is a
2      number in the range (0..(ieee8021BridgePortNumTrafficClasses-1))."
3      REFERENCE      "Table 8-3"
4      ::= { ieee8021BridgePriority 3 }
5
6      ieee8021BridgeTrafficClassEntry OBJECT-TYPE
7      SYNTAX          Ieee8021BridgeTrafficClassEntry
8      MAX-ACCESS      not-accessible
9      STATUS          current
10     DESCRIPTION
11         "User Priority to Traffic Class mapping."
12     INDEX      { ieee8021BridgeBasePortComponentId,
13                 ieee8021BridgeBasePort,
14                 ieee8021BridgeTrafficClassPriority }
15     ::= { ieee8021BridgeTrafficClassTable 1 }
16
17     Ieee8021BridgeTrafficClassEntry ::=
18     SEQUENCE {
19         ieee8021BridgeTrafficClassPriority
20             IEEE8021PriorityValue,
21         ieee8021BridgeTrafficClass
22             Integer32
23     }
24
25     ieee8021BridgeTrafficClassPriority OBJECT-TYPE
26     SYNTAX          IEEE8021PriorityValue
27     MAX-ACCESS      not-accessible
28     STATUS          current
29     DESCRIPTION
30         "The Priority value determined for the received frame.
31         This value is equivalent to the priority indicated in
32         the tagged frame received, or one of the evaluated
33         priorities, determined according to the media-type.
34         For untagged frames received from Ethernet media, this
35         value is equal to the ieee8021BridgePortDefaultUserPriority value
36         for the ingress port.
37
38         For untagged frames received from non-Ethernet media,
39         this value is equal to the ieee8021BridgeRegenUserPriority value
40         for the ingress port and media-specific user priority."
41     ::= { ieee8021BridgeTrafficClassEntry 1 }
42
43     ieee8021BridgeTrafficClass OBJECT-TYPE
44     SYNTAX          Integer32 (0..7)
45     MAX-ACCESS      read-write
46     STATUS          current
47     DESCRIPTION
48         "The Traffic Class the received frame is mapped to.
49
50         The value of this object MUST be retained across
51         reinitializations of the management system."
52     ::= { ieee8021BridgeTrafficClassEntry 2 }
53
54     -- =====
55     -- Outbound Access Priority Table
56     -- =====
57
58     ieee8021BridgePortOutboundAccessPriorityTable OBJECT-TYPE
59     SYNTAX          SEQUENCE OF Ieee8021BridgePortOutboundAccessPriorityEntry

```

```

1      MAX-ACCESS    not-accessible
2      STATUS        current
3      DESCRIPTION
4          "A table mapping Regenerated User Priority to Outbound
5          Access Priority. This is a fixed mapping for all port
6          types, with two options for 802.5 Token Ring, and three
7          options for 802.17 RPR."
8      REFERENCE      "Table 8-3"
9      ::= { ieee8021BridgePriority 4 }

10     ieee8021BridgePortOutboundAccessPriorityEntry OBJECT-TYPE
11         SYNTAX      Ieee8021BridgePortOutboundAccessPriorityEntry
12         MAX-ACCESS  not-accessible
13         STATUS      current
14         DESCRIPTION
15             "Regenerated User Priority to Outbound Access Priority
16             mapping."
17         INDEX       { ieee8021BridgeBasePortComponentId,
18                     ieee8021BridgeBasePort,
19                     ieee8021BridgeRegenUserPriority }
20         ::= { ieee8021BridgePortOutboundAccessPriorityTable 1 }

21     Ieee8021BridgePortOutboundAccessPriorityEntry ::=
22         SEQUENCE {
23             ieee8021BridgePortOutboundAccessPriority
24             IEEE8021PriorityValue
25         }

26     ieee8021BridgePortOutboundAccessPriority OBJECT-TYPE
27         SYNTAX      IEEE8021PriorityValue
28         MAX-ACCESS  read-only
29         STATUS      current
30         DESCRIPTION
31             "The Outbound Access Priority the received frame is
32             mapped to."
33         ::= { ieee8021BridgePortOutboundAccessPriorityEntry 1 }

34
35     -- =====
36     -- ieee8021BridgePortDecodingTable:
37     -- =====

38     ieee8021BridgePortDecodingTable OBJECT-TYPE
39         SYNTAX      SEQUENCE OF Ieee8021BridgePortDecodingEntry
40         MAX-ACCESS  not-accessible
41         STATUS      current
42         DESCRIPTION
43             "A table that contains information about Priority Code
44             Point Decoding Table for a Port of a provider bridge.
45             Alternative values for each table are specified as rows
46             in Table 6-4 (6.7.3), with each alternative labeled by
47             the number of distinct priorities that can be communicated,
48             and the number of these for which drop precedence can
49             be communicated. All writable objects in this table MUST
50             be persistent over power up restart/reboot."
51         ::= { ieee8021BridgePriority 5 }

52     ieee8021BridgePortDecodingEntry OBJECT-TYPE
53         SYNTAX      Ieee8021BridgePortDecodingEntry
54         MAX-ACCESS  not-accessible

```

```

1      STATUS      current
2      DESCRIPTION
3          "A list of objects containing Priority Code Point Decoding
4          information for a port of a provider bridge."
5      INDEX { ieee8021BridgePortDecodingComponentId,
6              ieee8021BridgePortDecodingPortNum,
7              ieee8021BridgePortDecodingPriorityCodePointRow,
8              ieee8021BridgePortDecodingPriorityCodePoint }
9      ::= { ieee8021BridgePortDecodingTable 1 }

10     ieee8021BridgePortDecodingEntry ::= SEQUENCE {
11         ieee8021BridgePortDecodingComponentId
12         IEEE8021PbbComponentIdentifier,
13         ieee8021BridgePortDecodingPortNum
14         IEEE8021BridgePortNumber,
15         ieee8021BridgePortDecodingPriorityCodePointRow
16         IEEE8021PriorityCodePoint,
17         ieee8021BridgePortDecodingPriorityCodePoint
18         Integer32,
19         ieee8021BridgePortDecodingPriority
20         IEEE8021PriorityValue,
21         ieee8021BridgePortDecodingDropEligible
22         TruthValue
23     }

24     ieee8021BridgePortDecodingComponentId OBJECT-TYPE
25         SYNTAX      IEEE8021PbbComponentIdentifier
26         MAX-ACCESS  not-accessible
27         STATUS      current
28         DESCRIPTION
29             "The component identifier is used to distinguish between the
30             multiple virtual bridge instances within a PBB. In simple
31             situations where there is only a single component the default
32             value is 1."
33         ::= { ieee8021BridgePortDecodingEntry 1 }

34     ieee8021BridgePortDecodingPortNum OBJECT-TYPE
35         SYNTAX      IEEE8021BridgePortNumber
36         MAX-ACCESS  not-accessible
37         STATUS      current
38         DESCRIPTION
39             "A unique identifier of a port controlled by this VLAN
40             bridging entity."
41         ::= { ieee8021BridgePortDecodingEntry 2 }

42     ieee8021BridgePortDecodingPriorityCodePointRow OBJECT-TYPE
43         SYNTAX      IEEE8021PriorityCodePoint
44         MAX-ACCESS  not-accessible
45         STATUS      current
46         DESCRIPTION
47             "The specific row in Table 6-3 (6.7.3) indicating the PCP."
48         ::= { ieee8021BridgePortDecodingEntry 3 }

49     ieee8021BridgePortDecodingPriorityCodePoint OBJECT-TYPE
50         SYNTAX      Integer32 (0..7)
51         MAX-ACCESS  not-accessible
52         STATUS      current
53         DESCRIPTION
54             "The specific PCP value in Table 6-3 (6.7.3)."
```

```

1      ::= { ieee8021BridgePortDecodingEntry 4 }
2
3  ieee8021BridgePortDecodingPriority OBJECT-TYPE
4      SYNTAX      IEEE8021PriorityValue
5      MAX-ACCESS  read-write
6      STATUS      current
7      DESCRIPTION
8          "The specific priority value in Table 6-3 (6.7.3)."
```

REFERENCE "12.6.2.8, 12.6.2.9"

```

9      ::= { ieee8021BridgePortDecodingEntry 5 }
10
11  ieee8021BridgePortDecodingDropEligible OBJECT-TYPE
12      SYNTAX      TruthValue
13      MAX-ACCESS  read-write
14      STATUS      current
15      DESCRIPTION
16          "The drop eligibility value in Table 6-3 (6.7.3)."
```

REFERENCE "12.6.2.8, 12.6.2.9"

```

17      ::= { ieee8021BridgePortDecodingEntry 6 }
18
19  -- =====
20  -- ieee8021BridgePortEncodingTable:
21  -- =====
22
23  ieee8021BridgePortEncodingTable OBJECT-TYPE
24      SYNTAX      SEQUENCE OF Ieee8021BridgePortEncodingEntry
25      MAX-ACCESS  not-accessible
26      STATUS      current
27      DESCRIPTION
28          "A table that contains information about Priority Code
29          Point Decoding Table for a Port of a provider bridge.
30          Alternative values for each table are specified as rows
31          in Table 6-3 (6.7.3), with each alternative labeled by
32          the number of distinct priorities that can be communicated,
33          and the number of these for which drop precedence can be
34          communicated. All writable objects in this table MUST be
35          persistent over power up restart/reboot."
36      ::= { ieee8021BridgePriority 6 }
37
38  ieee8021BridgePortEncodingEntry OBJECT-TYPE
39      SYNTAX      Ieee8021BridgePortEncodingEntry
40      MAX-ACCESS  not-accessible
41      STATUS      current
42      DESCRIPTION
43          "A list of objects containing Priority Code Point Encoding
44          information for a port of a provider bridge."
45      INDEX { ieee8021BridgePortEncodingComponentId,
46              ieee8021BridgePortEncodingPortNum,
47              ieee8021BridgePortEncodingPriorityCodePointRow,
48              ieee8021BridgePortEncodingPriorityCodePoint,
49              ieee8021BridgePortEncodingDropEligible }
50      ::= { ieee8021BridgePortEncodingTable 1 }
51
52  Ieee8021BridgePortEncodingEntry ::= SEQUENCE {
53      ieee8021BridgePortEncodingComponentId
54          IEEE8021PbbComponentIdentifier,
55      ieee8021BridgePortEncodingPortNum
56          IEEE8021BridgePortNumber,
57      ieee8021BridgePortEncodingPriorityCodePointRow
```

```

1         IEEE8021PriorityCodePoint,
2         ieee8021BridgePortEncodingPriorityCodePoint
3         Integer32,
4         ieee8021BridgePortEncodingDropEligible
5         TruthValue,
6         ieee8021BridgePortEncodingPriority
7         IEEE8021PriorityValue
8     }
9
10    ieee8021BridgePortEncodingComponentId OBJECT-TYPE
11        SYNTAX      IEEE8021PbbComponentIdentifier
12        MAX-ACCESS  not-accessible
13        STATUS      current
14        DESCRIPTION
15            "The component identifier is used to distinguish between the
16            multiple virtual bridge instances within a PBB. In simple
17            situations where there is only a single component the default
18            value is 1."
19        ::= { ieee8021BridgePortEncodingEntry 1 }
20
21    ieee8021BridgePortEncodingPortNum OBJECT-TYPE
22        SYNTAX      IEEE8021BridgePortNumber
23        MAX-ACCESS  not-accessible
24        STATUS      current
25        DESCRIPTION
26            "A unique identifier of a port controlled by this VLAN bridging
27            entity."
28        ::= { ieee8021BridgePortEncodingEntry 2 }
29
30    ieee8021BridgePortEncodingPriorityCodePointRow OBJECT-TYPE
31        SYNTAX      IEEE8021PriorityCodePoint
32        MAX-ACCESS  not-accessible
33        STATUS      current
34        DESCRIPTION
35            "The specific row in Table 6-3 (6.7.3) indicating the PCP row.
36            (i.e. 8P0D, 7P1D, 6P2D, 5P3D)"
37        ::= { ieee8021BridgePortEncodingEntry 3 }
38
39    ieee8021BridgePortEncodingPriorityCodePoint OBJECT-TYPE
40        SYNTAX      Integer32 (0..7)
41        MAX-ACCESS  not-accessible
42        STATUS      current
43        DESCRIPTION
44            "The specific row in Table 6-3 (6.7.3) indicating the PCP.
45            (i.e., 0,1,2,3,4,5,6,7)."
46        ::= { ieee8021BridgePortEncodingEntry 4 }
47
48    ieee8021BridgePortEncodingDropEligible OBJECT-TYPE
49        SYNTAX      TruthValue
50        MAX-ACCESS  not-accessible
51        STATUS      current
52        DESCRIPTION
53            "The specific row in Table 6-3 (6.7.3) indicating the drop
54            eligibility. A value of true(1) means eligible for drop."
55        ::= { ieee8021BridgePortEncodingEntry 5 }
56
57    ieee8021BridgePortEncodingPriority OBJECT-TYPE
58        SYNTAX      IEEE8021PriorityValue
59        MAX-ACCESS  read-write

```

```

1      STATUS      current
2      DESCRIPTION
3          "The encoding priority in Table 6-3 (6.7.3)."
```

REFERENCE "12.6.2.10, 12.6.2.11"

```

4      ::= { ieee8021BridgePortEncodingEntry 6 }
5
6      -- =====
7      -- ieee8021BridgeServiceAccessPriorityTable:
8      -- =====
9
10     ieee8021BridgeServiceAccessPriorityTable OBJECT-TYPE
11     SYNTAX      SEQUENCE OF Ieee8021BridgeServiceAccessPriorityEntry
12     MAX-ACCESS  not-accessible
13     STATUS      current
14     DESCRIPTION
15         "A table that contains information about the Service Access
16         Priority Selection function for a provider bridge. The use
17         of this table enables a mechanism for a Customer Bridge
18         attached to a Provider Bridged Network to request priority
19         handling of frames. All writable objects in this table MUST
20         be persistent over power up restart/reboot."
21     ::= { ieee8021BridgePriority 7 }
22
23     ieee8021BridgeServiceAccessPriorityEntry OBJECT-TYPE
24     SYNTAX      Ieee8021BridgeServiceAccessPriorityEntry
25     MAX-ACCESS  not-accessible
26     STATUS      current
27     DESCRIPTION
28         "A list of objects containing information about the Service
29         Access Priority Selection function for a provider bridge."
30     INDEX { ieee8021BridgeServiceAccessPriorityComponentId,
31             ieee8021BridgeServiceAccessPriorityPortNum,
32             ieee8021BridgeServiceAccessPriorityReceived }
33     ::= { ieee8021BridgeServiceAccessPriorityTable 1 }
34
35     Ieee8021BridgeServiceAccessPriorityEntry ::= SEQUENCE {
36         ieee8021BridgeServiceAccessPriorityComponentId
37             IEEE8021PbbComponentIdentifier,
38         ieee8021BridgeServiceAccessPriorityPortNum
39             IEEE8021BridgePortNumber,
40         ieee8021BridgeServiceAccessPriorityReceived
41             IEEE8021PriorityValue,
42         ieee8021BridgeServiceAccessPriorityValue
43             IEEE8021PriorityValue
44     }
45
46     ieee8021BridgeServiceAccessPriorityComponentId OBJECT-TYPE
47     SYNTAX      IEEE8021PbbComponentIdentifier
48     MAX-ACCESS  not-accessible
49     STATUS      current
50     DESCRIPTION
51         "The component identifier is used to distinguish between the
52         multiple virtual bridge instances within a PBB. In simple
53         situations where there is only a single component the default
54         value is 1."
55     ::= { ieee8021BridgeServiceAccessPriorityEntry 1 }
56
57     ieee8021BridgeServiceAccessPriorityPortNum OBJECT-TYPE
58     SYNTAX      IEEE8021BridgePortNumber
```



```

1      MAX-ACCESS    not-accessible
2      STATUS        current
3      DESCRIPTION
4          "A unique identifier of a port controlled by this VLAN bridging
5          entity."
6      ::= { ieee8021BridgeServiceAccessPriorityEntry 2 }
7
8  ieee8021BridgeServiceAccessPriorityReceived OBJECT-TYPE
9      SYNTAX          IEEE8021PriorityValue
10     MAX-ACCESS      not-accessible
11     STATUS          current
12     DESCRIPTION
13         "The default received priority value in Table 6-3 (6.7.3).
14         (i.e., 0,1,2,3,4,5,6,7)"
15     ::= { ieee8021BridgeServiceAccessPriorityEntry 3 }
16
17 ieee8021BridgeServiceAccessPriorityValue OBJECT-TYPE
18     SYNTAX          IEEE8021PriorityValue
19     MAX-ACCESS      read-write
20     STATUS          current
21     DESCRIPTION
22         "The regenerated priority value in Table 6-3 (6.7.3).
23         (i.e., 0,1,2,3,4,5,6,7)"
24     REFERENCE       "12.6.2.18, 12.6.2.19"
25     ::= { ieee8021BridgeServiceAccessPriorityEntry 4 }
26
27 -- =====
28 -- the ieee8021BridgeMrp subtree
29 -- =====
30
31 -- =====
32 -- The MRP Port Table
33 -- =====
34
35 ieee8021BridgePortMrpTable OBJECT-TYPE
36     SYNTAX          SEQUENCE OF Ieee8021BridgePortMrpEntry
37     MAX-ACCESS      not-accessible
38     STATUS          current
39     DESCRIPTION
40         "A table of MRP control information about every bridge
41         port. This is indexed by ieee8021BridgeBasePortComponentId
42         and ieee8021BridgeBasePort."
43     ::= { ieee8021BridgeMrp 1 }
44
45 ieee8021BridgePortMrpEntry OBJECT-TYPE
46     SYNTAX          Ieee8021BridgePortMrpEntry
47     MAX-ACCESS      not-accessible
48     STATUS          current
49     DESCRIPTION
50         "MRP control information for a bridge port."
51     AUGMENTS { ieee8021BridgeBasePortEntry }
52     ::= { ieee8021BridgePortMrpTable 1 }
53
54 Ieee8021BridgePortMrpEntry ::=
55     SEQUENCE {
56         ieee8021BridgePortMrpJoinTime
57             TimeInterval,
58         ieee8021BridgePortMrpLeaveTime
59             TimeInterval,

```

```

1         ieee8021BridgePortMrpLeaveAllTime
2             TimeInterval
3     }
4
5     ieee8021BridgePortMrpJoinTime OBJECT-TYPE
6         SYNTAX      TimeInterval
7         UNITS        "centi-seconds"
8         MAX-ACCESS   read-write
9         STATUS       current
10        DESCRIPTION
11            "The MRP Join time, in centiseconds.
12
13            The value of this object MUST be retained across
14            reinitializations of the management system."
15        DEFVAL      { 20 }
16        ::= { ieee8021BridgePortMrpEntry 1 }
17
18    ieee8021BridgePortMrpLeaveTime OBJECT-TYPE
19        SYNTAX      TimeInterval
20        UNITS        "centi-seconds"
21        MAX-ACCESS   read-write
22        STATUS       current
23        DESCRIPTION
24            "The MRP Leave time, in centiseconds.
25
26            The value of this object MUST be retained across
27            reinitializations of the management system."
28        DEFVAL      { 60 }
29        ::= { ieee8021BridgePortMrpEntry 2 }
30
31    ieee8021BridgePortMrpLeaveAllTime OBJECT-TYPE
32        SYNTAX      TimeInterval
33        UNITS        "centi-seconds"
34        MAX-ACCESS   read-write
35        STATUS       current
36        DESCRIPTION
37            "The MRP LeaveAll time, in centiseconds.
38
39            The value of this object MUST be retained across
40            reinitializations of the management system."
41        DEFVAL      { 1000 }
42        ::= { ieee8021BridgePortMrpEntry 3 }
43
44    -- =====
45    -- The MMRP Port Configuration and Status Table
46    -- =====
47
48    ieee8021BridgePortMmrpTable OBJECT-TYPE
49        SYNTAX      SEQUENCE OF Ieee8021BridgePortMmrpEntry
50        MAX-ACCESS   not-accessible
51        STATUS       current
52        DESCRIPTION
53            "A table of MMRP control and status information about
54            every bridge port. Augments the ieee8021BridgeBasePortTable."
55        ::= { ieee8021BridgeMmrp 1 }
56
57    ieee8021BridgePortMmrpEntry OBJECT-TYPE
58        SYNTAX      Ieee8021BridgePortMmrpEntry
59        MAX-ACCESS   not-accessible

```

```

1      STATUS      current
2      DESCRIPTION
3          "MMRP control and status information for a bridge port."
4      AUGMENTS { ieee8021BridgeBasePortEntry }
5      ::= { ieee8021BridgePortMmrpTable 1 }

6
7      Ieee8021BridgePortMmrpEntry ::=
8          SEQUENCE {
9              ieee8021BridgePortMmrpEnabledStatus
10                 TruthValue,
11                 ieee8021BridgePortMmrpFailedRegistrations
12                 Counter64,
13                 ieee8021BridgePortMmrpLastPduOrigin
14                 MacAddress,
15                 ieee8021BridgePortRestrictedGroupRegistration
16                 TruthValue
17             }

18      ieee8021BridgePortMmrpEnabledStatus OBJECT-TYPE
19          SYNTAX      TruthValue
20          MAX-ACCESS  read-write
21          STATUS      current
22          DESCRIPTION
23              "The administrative state of MMRP operation on this port. The
24              value true(1) indicates that MMRP is enabled on this port
25              in all VLANs as long as ieee8021BridgeMmrpEnabledStatus is
26              also true(1). A value of false(2) indicates that MMRP is
27              disabled on this port in all VLANs: any MMRP packets received
28              will be silently discarded, and no MMRP registrations will be
29              propagated from other ports. Setting this to a value of
30              true(1) will be stored by the agent but will only take
31              effect on the MMRP protocol operation if
32              ieee8021BridgeMmrpEnabledStatus
33              also indicates the value true(1). This object affects
34              all MMRP Applicant and Registrar state machines on this
35              port. A transition from false(2) to true(1) will
36              cause a reset of all MMRP state machines on this port.
37
38              The value of this object MUST be retained across
39              reinitializations of the management system."
40          DEFVAL      { true }
41          ::= { ieee8021BridgePortMmrpEntry 1 }

42      ieee8021BridgePortMmrpFailedRegistrations OBJECT-TYPE
43          SYNTAX      Counter64
44          UNITS        "failed MMRP registrations"
45          MAX-ACCESS  read-only
46          STATUS      current
47          DESCRIPTION
48              "The total number of failed MMRP registrations, for any
49              reason, in all VLANs, on this port."
50          ::= { ieee8021BridgePortMmrpEntry 2 }

51      ieee8021BridgePortMmrpLastPduOrigin OBJECT-TYPE
52          SYNTAX      MacAddress
53          MAX-ACCESS  read-only
54          STATUS      current
55          DESCRIPTION
56              "The Source MAC Address of the last MMRP message

```

```

1         received on this port."
2         ::= { ieee8021BridgePortMmrpEntry 3 }
3
4     ieee8021BridgePortRestrictedGroupRegistration OBJECT-TYPE
5         SYNTAX      TruthValue
6         MAX-ACCESS  read-write
7         STATUS      current
8         DESCRIPTION
9             "The state of Restricted Group Registration on this port.
10             If the value of this control is true(1), then creation
11             of a new dynamic entry is permitted only if there is a
12             Static Filtering Entry for the VLAN concerned, in which
13             the Registrar Administrative Control value is Normal
14             Registration.
15
16             The value of this object MUST be retained across
17             reinitializations of the management system."
18         REFERENCE   "11.2.3.2.3, 12.11.1.3"
19         DEFVAL      { false }
20         ::= { ieee8021BridgePortMmrpEntry 4 }
21
22 -- =====
23 -- I-LAN Interface configuration table
24 -- =====
25
26 ieee8021BridgeILanIfTable OBJECT-TYPE
27     SYNTAX      SEQUENCE OF Ieee8021BridgeILanIfEntry
28     MAX-ACCESS  not-accessible
29     STATUS      current
30     DESCRIPTION
31         "This table is a sparse augmentation of ifTable and controls
32         the creation of the I-LAN Interface.  An I-LAN Interface is
33         used to create internal connections between bridge ports in a
34         802.1 device.  An I-LAN Interfaces can be directly associated
35         with a set of bridge ports.  An I-LAN Interfaces can also be
36         used as a stacking interface to relate other interfaces before
37         association to bridge ports.
38
39         For example, an I-LAN interface can be created to link traffic
40         between a PIP and a CBP.  In this case a CBP is created on the
41         B-Component and the CBP's related IfEntry is stacked upon the
42         IfEntry of the I-LAN.  The PIP is stacked upon the I-LAN using
43         the IfStackTable.  Finally, a VIP is created on the I-Component
44         and is associated with the PIP, thus completing the path from
45         the I-Component's MAC relay to the CBP on the B-Component.
46
47         Entries in this table MUST be persistent over power up
48         restart/reboot."
49     REFERENCE   "17.3.2.2"
50     ::= { ieee8021BridgeInternalLan 1 }
51
52 ieee8021BridgeILanIfEntry OBJECT-TYPE
53     SYNTAX      Ieee8021BridgeILanIfEntry
54     MAX-ACCESS  not-accessible
55     STATUS      current
56     DESCRIPTION
57         "Each entry consists of a Row Status to control creation."
58     INDEX       { ifIndex }
59     ::= { ieee8021BridgeILanIfTable 1 }

```

```
1
2 Ieee8021BridgeILanIfEntry ::=
3     SEQUENCE {
4         ieee8021BridgeILanIfRowStatus
5         RowStatus
6     }
7
8 ieee8021BridgeILanIfRowStatus OBJECT-TYPE
9     SYNTAX      RowStatus
10    MAX-ACCESS   read-create
11    STATUS       current
12    DESCRIPTION
13        "This object is used to create and delete entries in this
14        table and the Interface table."
15    ::= { ieee8021BridgeILanIfEntry 1 }
16
17 -- =====
18 -- 802.1D Dynamic Port Creation table
19 -- =====
20
21 ieee8021BridgeDot1dPortTable OBJECT-TYPE
22     SYNTAX      SEQUENCE OF Ieee8021BridgeDot1dPortEntry
23     MAX-ACCESS   not-accessible
24     STATUS       current
25     DESCRIPTION
26         "This table provides the capability to dynamically create and
27         delete 802.1D bridge ports. Each entry in this table MUST
28         have a corresponding entry in the ieee8021BridgeBasePortTable.
29
30         Entries in this table MUST be persistent over power up
31         restart/reboot."
32     REFERENCE    "17.5.3"
33     ::= { ieee8021BridgeDot1d 1 }
34
35 ieee8021BridgeDot1dPortEntry OBJECT-TYPE
36     SYNTAX      Ieee8021BridgeDot1dPortEntry
37     MAX-ACCESS   not-accessible
38     STATUS       current
39     DESCRIPTION
40         "Each entry consists of a Row Status to control creation."
41     INDEX { ieee8021BridgeBasePortComponentId,
42             ieee8021BridgeBasePort }
43     ::= { ieee8021BridgeDot1dPortTable 1 }
44
45 Ieee8021BridgeDot1dPortEntry ::=
46     SEQUENCE {
47         ieee8021BridgeDot1dPortRowStatus
48         RowStatus
49     }
50
51 ieee8021BridgeDot1dPortRowStatus OBJECT-TYPE
52     SYNTAX      RowStatus
53     MAX-ACCESS   read-create
54     STATUS       current
55     DESCRIPTION
56         "This object is used to create and delete entries in this
57         table and the ieee8021BridgeBasePortTable."
58     ::= { ieee8021BridgeDot1dPortEntry 1 }
```

```

1
2  -- =====
3  -- IEEE 802.1D MIB - Conformance Information
4  -- =====
5
6  ieee8021BridgeCompliances
7      OBJECT IDENTIFIER ::= { ieee8021BridgeConformance 1 }
8  ieee8021BridgeGroups
9      OBJECT IDENTIFIER ::= { ieee8021BridgeConformance 2 }
10
11  -- =====
12  -- units of conformance
13  -- =====
14
15  -- =====
16  -- the ieee8021BridgeBase group
17  -- =====
18  ieee8021BridgeBaseBridgeGroup OBJECT-GROUP
19      OBJECTS {
20          ieee8021BridgeBaseBridgeAddress,
21          ieee8021BridgeBaseNumPorts,
22          ieee8021BridgeBaseComponentType
23      }
24      STATUS      current
25      DESCRIPTION
26          "Bridge level information for this device."
27          ::= { ieee8021BridgeGroups 1 }
28
29  ieee8021BridgeBasePortGroup OBJECT-GROUP
30      OBJECTS {
31          ieee8021BridgeBasePortIfIndex,
32          ieee8021BridgeBasePortDelayExceededDiscards,
33          ieee8021BridgeBasePortMtuExceededDiscards,
34          ieee8021BridgeBasePortType,
35          ieee8021BridgeBasePortExternal,
36          ieee8021BridgeBasePortAdminPointToPoint,
37          ieee8021BridgeBasePortOperPointToPoint,
38          ieee8021BridgeBasePortName
39      }
40      STATUS      current
41      DESCRIPTION
42          "Information for each port on this device."
43          ::= { ieee8021BridgeGroups 2 }
44
45  ieee8021BridgeCapGroup OBJECT-GROUP
46      OBJECTS {
47          ieee8021BridgeBaseDeviceCapabilities,
48          ieee8021BridgeBasePortCapabilities,
49          ieee8021BridgeBasePortTypeCapabilities
50      }
51      STATUS      current
52      DESCRIPTION
53          "A collection of objects indicating the optional
54          capabilities of the device."
55          ::= { ieee8021BridgeGroups 3 }
56
57  ieee8021BridgeDeviceMmrpGroup OBJECT-GROUP
58      OBJECTS {

```

```

1         ieee8021BridgeBaseMmrpEnabledStatus
2     }
3     STATUS          current
4     DESCRIPTION
5         "A collection of objects providing device-level control
6         for the Multicast Filtering extended bridge services."
7     ::= { ieee8021BridgeGroups 4 }
8
9     -- =====
10    -- the ieee8021BridgeTp group
11    -- =====
12
13    ieee8021BridgeTpPortGroup OBJECT-GROUP
14        OBJECTS {
15            ieee8021BridgeTpPortMaxInfo,
16            ieee8021BridgeTpPortInFrames,
17            ieee8021BridgeTpPortOutFrames,
18            ieee8021BridgeTpPortInDiscards
19        }
20        STATUS          current
21        DESCRIPTION
22            "Dynamic Filtering Database information for each port of
23            the Bridge."
24        ::= { ieee8021BridgeGroups 6 }
25
26    -- =====
27    -- Bridge Priority groups
28    -- =====
29
30    ieee8021BridgeDevicePriorityGroup OBJECT-GROUP
31        OBJECTS {
32            ieee8021BridgeBaseTrafficClassesEnabled
33        }
34        STATUS          current
35        DESCRIPTION
36            "A collection of objects providing device-level control
37            for the Priority services."
38        ::= { ieee8021BridgeGroups 7 }
39
40    ieee8021BridgeDefaultPriorityGroup OBJECT-GROUP
41        OBJECTS {
42            ieee8021BridgePortDefaultUserPriority,
43            ieee8021BridgePortPriorityCodePointSelection,
44            ieee8021BridgePortUseDEI,
45            ieee8021BridgePortRequireDropEncoding,
46            ieee8021BridgePortServiceAccessPrioritySelection
47        }
48        STATUS          current
49        DESCRIPTION
50            "A collection of objects defining the User Priority
51            applicable to each port for media that do not support
52            native User Priority."
53        ::= { ieee8021BridgeGroups 8 }
54
55    ieee8021BridgeRegenPriorityGroup OBJECT-GROUP
56        OBJECTS {
57            ieee8021BridgeRegenUserPriority
58        }
59        STATUS          current

```

```
1      DESCRIPTION
2      "A collection of objects defining the User Priorities
3      applicable to each port for media that support native
4      User Priority."
5      ::= { ieee8021BridgeGroups 9 }
6
7  ieee8021BridgePriorityGroup OBJECT-GROUP
8      OBJECTS {
9          ieee8021BridgePortNumTrafficClasses,
10         ieee8021BridgeTrafficClass
11     }
12     STATUS      current
13     DESCRIPTION
14         "A collection of objects defining the traffic classes
15         within a bridge for each evaluated User Priority."
16         ::= { ieee8021BridgeGroups 10 }
17
18  ieee8021BridgeAccessPriorityGroup OBJECT-GROUP
19     OBJECTS {
20         ieee8021BridgePortOutboundAccessPriority
21     }
22     STATUS      current
23     DESCRIPTION
24         "A collection of objects defining the media-dependent
25         outbound access level for each priority."
26         ::= { ieee8021BridgeGroups 11 }
27
28  ieee8021BridgePortMrpGroup OBJECT-GROUP
29     OBJECTS {
30         ieee8021BridgePortMrpJoinTime,
31         ieee8021BridgePortMrpLeaveTime,
32         ieee8021BridgePortMrpLeaveAllTime
33     }
34     STATUS      current
35     DESCRIPTION
36         "A collection of objects providing port level control
37         and status information for MRP operation."
38         ::= { ieee8021BridgeGroups 12 }
39
40  ieee8021BridgePortMmrpGroup OBJECT-GROUP
41     OBJECTS {
42         ieee8021BridgePortMmrpEnabledStatus,
43         ieee8021BridgePortMmrpFailedRegistrations,
44         ieee8021BridgePortMmrpLastPduOrigin,
45         ieee8021BridgePortRestrictedGroupRegistration
46     }
47     STATUS      deprecated
48     DESCRIPTION
49         "A collection of objects providing port level control
50         and status information for MMRP operation."
51         ::= { ieee8021BridgeGroups 13 }
52
53  ieee8021BridgePortDecodingGroup OBJECT-GROUP
54     OBJECTS {
55         ieee8021BridgePortDecodingPriority,
56         ieee8021BridgePortDecodingDropEligible
57     }
58     STATUS      current
59     DESCRIPTION
```



```

1      "A collection of objects providing statistics counters for
2      decoding priority and drop eligibility for bridge ports."
3      ::= { ieee8021BridgeGroups 14 }
4
5  ieee8021BridgePortEncodingGroup OBJECT-GROUP
6      OBJECTS {
7          ieee8021BridgePortEncodingPriority
8      }
9      STATUS      current
10     DESCRIPTION
11         "A collection of objects providing statistics counters for
12         encoding priority and drop eligibility for bridge ports."
13         ::= { ieee8021BridgeGroups 15 }
14
15  ieee8021BridgeServiceAccessPriorityGroup OBJECT-GROUP
16      OBJECTS {
17          ieee8021BridgeServiceAccessPriorityValue
18      }
19      STATUS      current
20      DESCRIPTION
21          "A collection of objects providing statistics
22          counters for service access priority."
23          ::= { ieee8021BridgeGroups 16 }
24
25  -- =====
26  -- Internal LAN group
27  -- =====
28
29  ieee8021BridgeInternalLANGroup OBJECT-GROUP
30      OBJECTS {
31          ieee8021BridgeILanIfRowStatus
32      }
33      STATUS      current
34      DESCRIPTION
35          "A collection of objects providing control of internal
36          LAN configuration."
37          ::= { ieee8021BridgeGroups 17 }
38
39  -- =====
40  -- Bridge Creation Group
41  -- =====
42
43  ieee8021BridgeCreatableBaseBridgeGroup OBJECT-GROUP
44      OBJECTS {
45          ieee8021BridgeBaseRowStatus
46      }
47      STATUS      current
48      DESCRIPTION
49          "Controls the managment system directed creation of
50          Bridge Components."
51          ::= { ieee8021BridgeGroups 18 }
52
53  -- =====
54  -- Dot1d Dynamic Port Creation group
55  -- =====
56
57  ieee8021BridgeDot1dDynamicPortCreationGroup OBJECT-GROUP
58      OBJECTS {
59          ieee8021BridgeDot1dPortRowStatus

```

```

1      }
2      STATUS      current
3      DESCRIPTION
4          "A collection of objects providing dynamic creation and
5          deletion of 802.1D bridge ports."
6      ::= { ieee8021BridgeGroups 19 }
7
8      -- =====
9      -- Bridge interface index to port table group
10     -- =====
11
12     ieee8021BridgeBaseIfToPortGroup OBJECT-GROUP
13         OBJECTS {
14             ieee8021BridgeBaseIfIndexComponentId,
15             ieee8021BridgeBaseIfIndexPort
16         }
17         STATUS      current
18         DESCRIPTION
19             "A collection of objects providing a map between interface
20             index and component ID and bridge ports."
21         ::= { ieee8021BridgeGroups 20 }
22
23
24
25     -- =====
26     -- Bridge interface index to component group
27     -- =====
28     ieee8021BridgePhyPortGroup OBJECT-GROUP
29         OBJECTS {
30             ieee8021BridgePhyPortIfIndex,
31             ieee8021BridgePhyMacAddress,
32             ieee8021BridgePhyPortToComponentId,
33             ieee8021BridgePhyPortToInternalPort
34         }
35         STATUS      current
36         DESCRIPTION
37             "The collection of objects used to represent a ISS port management objects."
38         ::= { ieee8021BridgeGroups 21 }
39
40     -- =====
41     -- compliance statements
42     -- =====
43
44     ieee8021BridgeCompliance1 MODULE-COMPLIANCE
45         STATUS      current
46         DESCRIPTION
47             "The compliance statement for devices supporting bridging
48             services as defined in 802.1D-2004. Such devices support
49             path cost values of 32-bits, and bridge and port priority
50             values are more restricted than in 802.1D-1995.
51
52             Full support for the 802.1D management objects requires
53             implementation of the objects listed in the systemGroup
54             from the SNMPv2-MIB [RFC3418], as well as the objects
55             listed in the ifGeneralInformationGroup from the
56             IF-MIB [RFC2863]."
```

```

1
2     MODULE SNMPv2-MIB -- The SNMPv2-MIB, RFC 3418
3         MANDATORY-GROUPS {
4             systemGroup
5         }
6
7     MODULE IF-MIB -- The interfaces MIB, RFC 2863
8         MANDATORY-GROUPS {
9             ifGeneralInformationGroup
10        }
11
12    MODULE
13        MANDATORY-GROUPS {
14            ieee8021BridgeBaseBridgeGroup,
15            ieee8021BridgeBasePortGroup
16        }
17
18    GROUP ieee8021BridgeCreatableBaseBridgeGroup
19    DESCRIPTION
20        "Implementation of this group is mandatory for
21        bridges that allow management systems to add and delete
22        bridge components. Provider Backbone Edge Bridges would
23        typically fall in this category."
24
25    GROUP ieee8021BridgeTpPortGroup
26    DESCRIPTION
27        "Implementation of this group is mandatory for
28        bridges that support the transparent bridging
29        mode. A transparent bridge will implement
30        this group."
31
32    GROUP ieee8021BridgeInternalLANGroup
33    DESCRIPTION
34        "Implementation of this group is optional. It can be supported
35        to provide control over the relationship between interfaces and
36        bridge ports where such relationships are more complex than a
37        simple 1-to-1 mapping."
38
39    GROUP ieee8021BridgeDot1dDynamicPortCreationGroup
40    DESCRIPTION
41        "Implementation of this group is optional. It can be supported
42        to provide the ability to dynamically create and deleted 802.1D
43        bridge ports."
44
45    GROUP ieee8021BridgeBaseIfToPortGroup
46    DESCRIPTION
47        "A collection of objects providing a map between interface
48        index and component ID and bridge ports."
49
50    GROUP ieee8021BridgePhyPortGroup
51    DESCRIPTION
52        "A colelction of objects providing a map between port numbers
53        to the component id, interface index."
54
55    ::= { ieee8021BridgeCompliances 3 }
56
57    ieee8021BridgeCompliance MODULE-COMPLIANCE
58        STATUS current
59        DESCRIPTION

```

```
1      "The compliance statement for devices supporting bridging
2      services as defined in 802.1D-2004. Such devices support
3      path cost values of 32-bits, and bridge and port priority
4      values are more restricted than in 802.1D-1995.
5
6      Full support for the 802.1D management objects requires
7      implementation of the objects listed in the systemGroup
8      from the SNMPv2-MIB [RFC3418], as well as the objects
9      listed in the ifGeneralInformationGroup from the
10     IF-MIB [RFC2863]."
```

```
11     MODULE SNMPv2-MIB -- The SNMPv2-MIB, RFC 3418
12         MANDATORY-GROUPS {
13             systemGroup
14         }
15
16     MODULE IF-MIB -- The interfaces MIB, RFC 2863
17         MANDATORY-GROUPS {
18             ifGeneralInformationGroup
19         }
20
21     MODULE
22         MANDATORY-GROUPS {
23             ieee8021BridgeBaseBridgeGroup,
24             ieee8021BridgeBasePortGroup
25         }
26
27     GROUP ieee8021BridgeCreatableBaseBridgeGroup
28     DESCRIPTION
29         "Implementation of this group is mandatory for
30         bridges that allow management systems to add and delete
31         bridge components. Provider Backbone Edge Bridges would
32         typically fall in this category."
```

```
33     GROUP ieee8021BridgeTpPortGroup
34     DESCRIPTION
35         "Implementation of this group is mandatory for
36         bridges that support the transparent bridging
37         mode. A transparent bridge will implement
38         this group."
```

```
39     GROUP ieee8021BridgeInternalLANGroup
40     DESCRIPTION
41         "Implementation of this group is optional. It can be supported
42         to provide control over the relationship between interfaces and
43         bridge ports where such relationships are more complex than a
44         simple 1-to-1 mapping."
```

```
45     GROUP ieee8021BridgeDot1dDynamicPortCreationGroup
46     DESCRIPTION
47         "Implementation of this group is optional. It can be supported
48         to provide the ability to dynamically create and deleted 802.1D
49         bridge ports."
```

```
50     ::= { ieee8021BridgeCompliances 1 }
```

```
51
52     ieee8021BridgePriorityAndMulticastFilteringCompliance MODULE-COMPLIANCE
53         STATUS deprecated
54         DESCRIPTION
```

"The compliance statement for device support of Priority and Multicast Filtering extended bridging services."

## MODULE

MANDATORY-GROUPS { ieee8021BridgeCapGroup }

GROUP ieee8021BridgeDeviceMmrpGroup

## DESCRIPTION

"This group is mandatory for devices supporting the MMRP application, defined by IEEE 802.1D Extended Filtering Services."

GROUP ieee8021BridgeDevicePriorityGroup

## DESCRIPTION

"This group is mandatory only for devices supporting the priority forwarding operations defined by IEEE 802.1D."

GROUP ieee8021BridgeDefaultPriorityGroup

## DESCRIPTION

"This group is mandatory only for devices supporting the priority forwarding operations defined by the extended bridge services with media types, such as Ethernet, that do not support native User Priority."

GROUP ieee8021BridgeRegenPriorityGroup

## DESCRIPTION

"This group is mandatory only for devices supporting the priority forwarding operations defined by IEEE 802.1D and that have interface media types that support native User Priority, e.g., IEEE 802.5."

GROUP ieee8021BridgePriorityGroup

## DESCRIPTION

"This group is mandatory only for devices supporting the priority forwarding operations defined by IEEE 802.1D."

GROUP ieee8021BridgeAccessPriorityGroup

## DESCRIPTION

"This group is optional and is relevant only for devices supporting the priority forwarding operations defined by IEEE 802.1D and that have interface media types that support native Access Priority, e.g., IEEE 802.5."

GROUP ieee8021BridgePortMrpGroup

## DESCRIPTION

"This group is mandatory for devices supporting any of the MRP applications: e.g., MMRP, defined by the extended filtering services of 802.1D; or MVRP, defined by 802.1Q (refer to the Q-BRIDGE-MIB for conformance statements for MVRP)."

GROUP ieee8021BridgePortMmrpGroup

## DESCRIPTION

"This group is mandatory for devices supporting the MMRP application, as defined by IEEE 802.1D Extended Filtering Services."

GROUP ieee8021BridgePortDecodingGroup

```
1      DESCRIPTION
2          "This group is optional and supports Priority Code Point
3          Decoding Table for a Port of a provider bridge."
4
5      GROUP      ieee8021BridgePortEncodingGroup
6      DESCRIPTION
7          "This group is optional and supports Priority Code Point
8          Encoding Table for a Port of a provider bridge."
9
10     GROUP      ieee8021BridgeServiceAccessPriorityGroup
11     DESCRIPTION
12         "This group is optional and supports Priority Code Point
13         Encoding Table for a Port of a provider bridge."
14
15     OBJECT      ieee8021BridgePortNumTrafficClasses
16     MIN-ACCESS  read-only
17     DESCRIPTION
18         "Write access is not required."
19
20     OBJECT      ieee8021BridgeTrafficClass
21     MIN-ACCESS  read-only
22     DESCRIPTION
23         "Write access is not required."
24
25     OBJECT      ieee8021BridgeRegenUserPriority
26     MIN-ACCESS  read-only
27     DESCRIPTION
28         "Write access is not required."
29
30 ::= { ieee8021BridgeCompliances 2 }
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
```

END

*Insert new subclause 17.7.15 as shown, following all existing subclauses of 17.7, renumbering as necessary:*

#### **17.7.15 Definitions of the IEEE8021-EVB MIB module**

```

IEEE8021-EVB-MIB DEFINITIONS ::= BEGIN

-- =====
-- MIB for EVB Bridges and EVB Stations
-- =====

IMPORTS
    MODULE-IDENTITY, OBJECT-TYPE,
    Integer32, Counter32, Unsigned32, TimeTicks
    FROM SNMPv2-SMI
    MacAddress, TruthValue, RowStatus, StorageType
    FROM SNMPv2-TC

    ieee802dot1mibs, IEEE8021PbbComponentIdentifier,
    IEEE8021BridgePortNumber
    FROM IEEE8021-TC-MIB
    VlanIndex
    FROM Q-BRIDGE-MIB
    InterfaceIndexOrZero
    FROM IF-MIB
    ieee8021BridgePhyPort
    FROM IEEE8021-BRIDGE-MIB
    MODULE-COMPLIANCE, OBJECT-GROUP
    FROM SNMPv2-CONF;

ieee8021BridgeEvbMib MODULE-IDENTITY
    LAST-UPDATED "201201300000Z" -- January 30, 2012
    ORGANIZATION "IEEE 802.1 Working Group"
    CONTACT-INFO
        "WG-URL: http://www.ieee802.org/1
        WG-EMail: stds-802-1@ieee.org

        Contact: Tony Jeffree
        Postal: C/O IEEE 802.1 Working Group
                IEEE Standards Association
                445 Hoes Lane
                Piscataway
                NJ 08854
                USA
        E-mail: STDS-802-1-L@LISTSERV.IEEE.ORG"

    DESCRIPTION
        "The EVB MIB module for managing devices that support
        Ethernet Virtual Bridging.

        Unless otherwise indicated, the references in this MIB
        module are to IEEE Std 802.1Q-2011.

        Copyright (C) IEEE.
        This version of this MIB module is part of IEEE802.1Q;
        see the draft itself for full legal notices."
    REVISION "201201300000Z" -- January 30, 2012
    DESCRIPTION
        "Initial version published in IEEE Std 802.1Qbg."
 ::= { ieee802dot1mibs 24 }

```

```

1
2  -- =====
3  -- subtrees in the EVB MIB
4  -- =====
5
6  ieee8021BridgeEvbNotifications
7      OBJECT IDENTIFIER ::= { ieee8021BridgeEvbMib 0 }
8
9  ieee8021BridgeEvbObjects
10     OBJECT IDENTIFIER ::= { ieee8021BridgeEvbMib 1 }
11
12  ieee8021BridgeEvbConformance
13     OBJECT IDENTIFIER ::= { ieee8021BridgeEvbMib 2 }
14
15  -- =====
16  -- EVB Bridge managed object
17  -- =====
18
19  ieee8021BridgeEvbSys OBJECT IDENTIFIER ::= { ieee8021BridgeEvbObjects 1 }
20
21  ieee8021BridgeEvbSysType OBJECT-TYPE
22      SYNTAX          INTEGER {
23          evbBridge (1),
24          evbStation (2)
25      }
26      MAX-ACCESS      read-only
27      STATUS          current
28      DESCRIPTION     "The evbSysType determines if this is an EVB Bridge
29                      or EVB station."
30      REFERENCE       "5.22,5.23"
31
32      ::= { ieee8021BridgeEvbSys 1}
33
34  ieee8021BridgeEvbSysNumExternalPorts OBJECT-TYPE
35      SYNTAX          Unsigned32 (1..4095)
36      MAX-ACCESS      read-only
37      STATUS          current
38      DESCRIPTION     "The evbSysNumExternalPorts parameter indicates how
39                      many externally accessible port are available."
40      REFERENCE       "12.4.2, 12.5.1"
41      ::= {ieee8021BridgeEvbSys 2}
42
43  ieee8021BridgeEvbSysEvbLldpTxEnable OBJECT-TYPE
44      SYNTAX          TruthValue
45      MAX-ACCESS      read-write
46      STATUS          current
47      DESCRIPTION     "This object is used to initialize the LLDP EVB
48                      objects for new SBPs and URPS.
49                      When set to 'true' a new SBP or URP will place the local
50                      EVB objects in the LLDP nearest Customer database;
51                      when set to 'false' a new SBP or URP will not place
52                      the local EVB objects in the LLDP database."
53      REFERENCE       "D.2.13"
54      DEFVAL          { true }
55      ::= {ieee8021BridgeEvbSys 3}
56
57  ieee8021BridgeEvbSysEvbLldpManual OBJECT-TYPE
58      SYNTAX          TruthValue

```



```

1      MAX-ACCESS      read-write
2      STATUS          current
3      DESCRIPTION     "This object is used to initialize the LLDP EVB
4                      objects for new SBPs and URPS.
5                      When set to 'false' the operating configuration
6                      will be determined by the comparison between
7                      the local and remote LLDP EVB objects
8                      (automatic), regardless of the setting of
9                      ieee8021BridgeEvbSysLldpTxEnable.
10                     When ieee8021BridgeEvbSysLldpManual is 'true' the
11                     configuration will be determined by the setting
12                     of the local EVB objects only (manual)."
```

```

12     REFERENCE       "D.2.13"
13     DEFVAL          { false }
14     ::= { ieee8021BridgeEvbSys 4 }

ieee8021BridgeEvbSysEvbLldpGidCapable  OBJECT-TYPE
16     SYNTAX          TruthValue
17     MAX-ACCESS      read-write
18     STATUS          current
19     DESCRIPTION     "The value of this object is used as the default
20                     value of the BGID or SGID bit of the EVB LLDP TLV string."
21     REFERENCE       "D.2.13"
22     ::= { ieee8021BridgeEvbSys 5 }

ieee8021BridgeEvbSysEcpAckTimer  OBJECT-TYPE
24     SYNTAX          Integer32
25     MAX-ACCESS      read-write
26     STATUS          current
27     DESCRIPTION     "A value indicating the Bridge Proposed ECP ackTimer."
28     REFERENCE       "D.2.13.6, 43.3.6.1"
29     ::= { ieee8021BridgeEvbSys 6 }

ieee8021BridgeEvbSysEcpMaxRetries  OBJECT-TYPE
33     SYNTAX          Integer32 (0..7)
34     MAX-ACCESS      read-write
35     STATUS          current
36     DESCRIPTION     "A value indicating the Bridge ECP maxRetries."
37     REFERENCE       "D.2.13.5, 43.3.7.4"
38     DEFVAL          { 3 }
39     ::= { ieee8021BridgeEvbSys 7 }

ieee8021BridgeEvbSysVdpDfltRsrcWaitDelay  OBJECT-TYPE
44     SYNTAX          Integer32
45     MAX-ACCESS      read-write
46     STATUS          current
47     DESCRIPTION     "A value indicating the Bridge Resource VDP Timeout."
48     REFERENCE       "D.2.13, 41.5.5.7"
49     ::= { ieee8021BridgeEvbSys 8 }

ieee8021BridgeEvbSysVdpDfltReinitKeepAlive  OBJECT-TYPE
53     SYNTAX          Integer32
54
```

```

1      MAX-ACCESS    read-write
2      STATUS        current
3      DESCRIPTION
4      "A value indicating the Bridge Proposed VDP Keep Alive Timeout."
5      REFERENCE "D.2.13, 41.4.5.5"
6      ::= { ieee8021BridgeEvbSys 9 }
7
8      -- =====
9      -- Station facing bridge port table
10     -- =====
11
12     ieee8021BridgeEvbSbpTable OBJECT-TYPE
13     SYNTAX          SEQUENCE OF Ieee8021BridgeEvbSbpEntry
14     MAX-ACCESS      not-accessible
15     STATUS          current
16     DESCRIPTION
17     "A table that contains Station-facing Bridge Port (SBP)
18     details."
19     REFERENCE       "12.26.2"
20     ::= { ieee8021BridgeEvbSys 10}
21
22     ieee8021BridgeEvbSbpEntry OBJECT-TYPE
23     SYNTAX          Ieee8021BridgeEvbSbpEntry
24     MAX-ACCESS      not-accessible
25     STATUS          current
26     DESCRIPTION
27     "A list of objects describing SBP."
28     INDEX { ieee8021BridgeEvbSbpComponentID,
29             ieee8021BridgeEvbSbpPortNumber
30           }
31     ::= { ieee8021BridgeEvbSbpTable 1 }
32
33     Ieee8021BridgeEvbSbpEntry ::=
34     SEQUENCE {
35         ieee8021BridgeEvbSbpComponentID
36             IEEE8021PbbComponentIdentifier,
37         ieee8021BridgeEvbSbpPortNumber
38             IEEE8021BridgePortNumber,
39         ieee8021BridgeEvbSbpLldpManual          TruthValue,
40         ieee8021BridgeEvbSbpVdpOperRsrcWaitDelay Unsigned32,
41         ieee8021BridgeEvbSbpVdpOperReinitKeepAlive Unsigned32,
42         ieee8021BridgeEvbSbpVdpOperToutKeepAlive Unsigned32
43     }
44
45     ieee8021BridgeEvbSbpComponentID OBJECT-TYPE
46     SYNTAX          IEEE8021PbbComponentIdentifier
47     MAX-ACCESS      not-accessible
48     STATUS          current
49     DESCRIPTION
50     "The SBP component ID"
51     REFERENCE       "12.4.1.5"
52     ::= { ieee8021BridgeEvbSbpEntry 1 }
53
54     ieee8021BridgeEvbSbpPortNumber OBJECT-TYPE
55     SYNTAX          IEEE8021BridgePortNumber
56     MAX-ACCESS      not-accessible
57     STATUS          current
58     DESCRIPTION     "The SBP port number."
59     REFERENCE       "12.4.2"

```

```

1      ::= { ieee8021BridgeEvbSbpEntry 2 }
2
3  ieee8021BridgeEvbSbpLldpManual    OBJECT-TYPE
4      SYNTAX      TruthValue
5      MAX-ACCESS  read-write
6      STATUS      current
7      DESCRIPTION
8          "The evbSbpLldpManual parameter switches EVB TLVs to manual mode.
9          In manual mode the running parameters are determined solely from
10         the local LLDP database values."
11      ::= { ieee8021BridgeEvbSbpEntry 3 }
12
13  ieee8021BridgeEvbSbpVdpOperRsrcWaitDelay    OBJECT-TYPE
14      SYNTAX      Unsigned32
15      UNITS       "micro-seconds"
16      MAX-ACCESS  read-only
17      STATUS      current
18      DESCRIPTION "The value used to initialize the waitWhile timer
19                  (41.4.5.7) by the station VDP state machine when
20                  the state machine is waiting for a response."
21      REFERENCE   "D.2.13, 41.5.5.7"
22      ::= { ieee8021BridgeEvbSbpEntry 4 }
23
24  ieee8021BridgeEvbSbpVdpOperReinitKeepAlive    OBJECT-TYPE
25      SYNTAX      Unsigned32
26      UNITS       "micro-seconds"
27      MAX-ACCESS  read-only
28      STATUS      current
29      DESCRIPTION "The value used to initialize the waitWhile timer
30                  (41.4.5.5) by the station VDP state machine in
31                  order to determine when to transmit a keep alive
32                  message."
33      REFERENCE   "D.2.13, 41.5.5.5"
34      ::= { ieee8021BridgeEvbSbpEntry 5 }
35
36  ieee8021BridgeEvbSbpVdpOperToutKeepAlive    OBJECT-TYPE
37      SYNTAX      Unsigned32
38      UNITS       "micro-seconds"
39      MAX-ACCESS  read-only
40      STATUS      current
41      DESCRIPTION "The value used to initialize the waitWhile timer
42                  (41.4.5.13) by the EVBCB VDP state machine in order to
43                  determine when to transmit a keep alive message."
44      REFERENCE   "D.2.13, 41.5.5.13"
45      ::= { ieee8021BridgeEvbSbpEntry 6 }
46
47  -- =====
48  -- VSI Database
49  -- =====
50
51  ieee8021BridgeEvbVSIDBObjects OBJECT IDENTIFIER ::= { ieee8021BridgeEvbObjects 2
52  }
53
54  ieee8021BridgeEvbVSIDBTable OBJECT-TYPE
55      SYNTAX      SEQUENCE OF Ieee8021BridgeEvbVSIDBEntry
56      MAX-ACCESS  not-accessible
57      STATUS      current
58      DESCRIPTION

```

```

1      "A table that contains database of the active Virtual Station
2      Interfaces."
3      REFERENCE "12.26.3"
4      ::= { ieee8021BridgeEvbVSIDBObjects 1}

5
6      ieee8021BridgeEvbVSIDBEntry OBJECT-TYPE
7          SYNTAX      Ieee8021BridgeEvbVSIDBEntry
8          MAX-ACCESS  not-accessible
9          STATUS      current
10         DESCRIPTION
11             "A list of objects containing database of the active Virtual Station
12             Interfaces."
13         INDEX { ieee8021BridgeEvbVSIComponentID,
14                 ieee8021BridgeEvbVSIPortNumber,
15                 ieee8021BridgeEvbVSIIDType,
16                 ieee8021BridgeEvbVSIID
17             }
18         ::= { ieee8021BridgeEvbVSIDBTable 1 }

19
20      Ieee8021BridgeEvbVSIDBEntry ::=
21      SEQUENCE {
22          ieee8021BridgeEvbVSIComponentID
23              IEEE8021PbbComponentIdentifier,
24          ieee8021BridgeEvbVSIPortNumber
25              IEEE8021BridgePortNumber,
26          ieee8021BridgeEvbVSIIDType          INTEGER,
27          ieee8021BridgeEvbVSIID              OCTET STRING,
28          ieee8021BridgeEvbVSITimeSinceCreate Unsigned32,
29          ieee8021BridgeEvbVsiVdpOperCmd      INTEGER,
30          ieee8021BridgeEvbVsiOperRevert      TruthValue,
31          ieee8021BridgeEvbVsiOperHard        TruthValue,
32          ieee8021BridgeEvbVsiOperReason      BITS,
33          ieee8021BridgeEvbVSIID              OCTET STRING,
34          ieee8021BridgeEvbVSIType            Integer32,
35          ieee8021BridgeEvbVSITypeVersion     OCTET STRING,
36          ieee8021BridgeEvbVSIMvFormat        INTEGER,
37          ieee8021BridgeEvbVSINumMACs         Integer32,
38          ieee8021BridgeEvbVDPMachineState    INTEGER,
39          ieee8021BridgeEvbVDPCmdsSucceeded   Counter32,
40          ieee8021BridgeEvbVDPCmdsFailed      Counter32,
41          ieee8021BridgeEvbVDPCommandReverts  Counter32,
42          ieee8021BridgeEvbVDPCounterDiscontinuity TimeTicks
43      }

44
45      ieee8021BridgeEvbVSIComponentID OBJECT-TYPE
46          SYNTAX      IEEE8021PbbComponentIdentifier
47          MAX-ACCESS  not-accessible
48          STATUS      current
49          DESCRIPTION "The evbVSIComponentID is the ComponentID for the
50                      C-VLAN component of the EVB Bridge or for the edge
51                      relay of the EVB station."
52          REFERENCE "12.4.1.5"
53          ::= { ieee8021BridgeEvbVSIDBEntry 1}

54
55      ieee8021BridgeEvbVSIPortNumber OBJECT-TYPE
56          SYNTAX      IEEE8021BridgePortNumber
57          MAX-ACCESS  not-accessible
58          STATUS      current
59          DESCRIPTION "The evbVSIPortNumber is the Port Number for the SBP

```

```

1         or URP where the VSI is accessed."
2     REFERENCE "12.4.2"
3     ::= { ieee8021BridgeEvbVSIDBEntry 2 }
4
5     ieee8021BridgeEvbVSIIDType OBJECT-TYPE
6         SYNTAX      INTEGER{
7             vsiidIpv4 (1),
8             vsiidIpv6 (2),
9             vsiidMAC (3),
10            vsiidLocal (4),
11            vsiidUUID (5)
12        }
13     MAX-ACCESS      not-accessible
14     STATUS          current
15     DESCRIPTION
16     "This object specifies the VSIID Type for the VSIID in the DCN "
17     REFERENCE      "41.2.6"
18     ::= { ieee8021BridgeEvbVSIDBEntry 3 }
19
20     ieee8021BridgeEvbVSIID OBJECT-TYPE
21     SYNTAX          OCTET STRING (SIZE (16))
22     MAX-ACCESS      not-accessible
23     STATUS          current
24     DESCRIPTION
25     "This object specifies the VSIID that uniquely identifies the VSI
26     in the DCN "
27     REFERENCE      "41.2.7"
28     ::= { ieee8021BridgeEvbVSIDBEntry 4 }
29
30     ieee8021BridgeEvbVSITimeSinceCreate OBJECT-TYPE
31     SYNTAX          Unsigned32
32     UNITS           "centi-seconds"
33     MAX-ACCESS      read-only
34     STATUS          current
35     DESCRIPTION
36     "This object specifies the time since creation "
37     REFERENCE      "41"
38     ::= { ieee8021BridgeEvbVSIDBEntry 5 }
39
40     ieee8021BridgeEvbVsiVdpOperCmd OBJECT-TYPE
41     SYNTAX          INTEGER
42     {
43         preAssociate (1),
44         preAssociateWithRsrcReservation (2),
45         associate (3),
46         deAssociate (4)
47     }
48     MAX-ACCESS      read-only
49     STATUS          current
50     DESCRIPTION
51     "This object identifies the type of TLV."
52     REFERENCE      "41.2.1"
53     ::= { ieee8021BridgeEvbVSIDBEntry 6 }
54
55     ieee8021BridgeEvbVsiOperRevert OBJECT-TYPE
56     SYNTAX          TruthValue

```

```

1      MAX-ACCESS    read-only
2      STATUS        current
3      DESCRIPTION   "The evbOperRevert status indicator shows the most
4                    recent value of the KEEP indicator from the VDP
5                    protocol exchange."
6      REFERENCE     "41.2.3"
7      ::= { ieee8021BridgeEvbVSIDBEntry 7 }
8
9      ieee8021BridgeEvbVsiOperHard  OBJECT-TYPE
10     SYNTAX      TruthValue
11     MAX-ACCESS  read-only
12     STATUS      current
13     DESCRIPTION "The evbVsiHard status indicator shows the most
14                 recent value of the HARD indicator from the VDP
15                 protocol exchange."
16     REFERENCE   "41.2.3"
17     ::= { ieee8021BridgeEvbVSIDBEntry 8 }
18
19     ieee8021BridgeEvbVsiOperReason  OBJECT-TYPE
20     SYNTAX      BITS
21     {
22         success (0),
23         invalidFormat (1),
24         insufficientResources (2),
25         otherfailure(3)
26     }
27     MAX-ACCESS  read-only
28     STATUS      current
29     DESCRIPTION "This object indicates the outcome of a request."
30     REFERENCE   "41.2.3"
31
32     ::= { ieee8021BridgeEvbVSIDBEntry 9 }
33
34
35     ieee8021BridgeEvbVSiMgrID        OBJECT-TYPE
36     SYNTAX      OCTET STRING (SIZE (1))
37     MAX-ACCESS  read-only
38     STATUS      current
39     DESCRIPTION "This object identifies the VSI Manager with a database that holds
40                 the detailed VSI type and or instance definitions."
41
42     REFERENCE   "41.1.3"
43     ::= { ieee8021BridgeEvbVSIDBEntry 10 }
44
45     ieee8021BridgeEvbVSiType  OBJECT-TYPE
46     SYNTAX      Integer32
47     MAX-ACCESS  read-only
48     STATUS      current
49     DESCRIPTION " The VTID is an integer value used to identify
50                 a pre-configured set of controls and attributes
51                 that are associated with a set of VSIs."
52     REFERENCE   " 41.2.4"
53     ::= { ieee8021BridgeEvbVSIDBEntry 11 }
54

```

```
1  ieee8021BridgeEvbVSITypeVersion  OBJECT-TYPE
2      SYNTAX      OCTET STRING (SIZE (1))
3      MAX-ACCESS   read-only
4      STATUS      current
5      DESCRIPTION
6          "The VSI Type Version is an integer identifier designating the
7          expected/desired VTID version. The VTID version allows a VSI
8          Manager Database to contain multiple versions of a given VSI
9          Type, allowing smooth migration to newer VSI types."
10
11      REFERENCE    "41.2.5"
12      ::= { ieee8021BridgeEvbVSIDBEntry 12 }
13
14  ieee8021BridgeEvbVSIMvFormat      OBJECT-TYPE
15      SYNTAX      INTEGER
16          {
17              basic (1),
18              partial (2),
19              vlanOnly (3)
20          }
21      MAX-ACCESS   read-only
22      STATUS      current
23      DESCRIPTION
24          "This object specifies the MAC/VLAN format.
25          basic - Basic MAC/VLAN format
26          partial - Partial MAC/VLAN format
27          vlanOnly - Vlan-only MAC/VLAN format
28          "
29      REFERENCE    "41.2.8"
30      ::= { ieee8021BridgeEvbVSIDBEntry 13 }
31
32  ieee8021BridgeEvbVSINumMACs      OBJECT-TYPE
33      SYNTAX      Integer32
34      MAX-ACCESS   read-only
35      STATUS      current
36      DESCRIPTION
37          "This object specifies the the number of MAC address/VLAN ID pairs
38          contained in the repeated portion of the MAC/VLANs field in the
39          VDP TLV."
40      REFERENCE    "41.2.9"
41      ::= { ieee8021BridgeEvbVSIDBEntry 14 }
42
43  ieee8021BridgeEvbVDPMachineState  OBJECT-TYPE
44      SYNTAX      INTEGER
45          {
46              preAssociate (1),
47              preAssociateWithRsrcReservation (2),
48              associate (3),
49              deAssociate (4)
50          }
51      MAX-ACCESS   read-only
52      STATUS      current
53      DESCRIPTION
54          "This object specifies the VDP state machine. "
```

```

1
2  ieee8021BridgeEvbVDPCCommandsSucceeded  OBJECT-TYPE
3      SYNTAX          Counter32
4      MAX-ACCESS      read-only
5      STATUS          current
6      DESCRIPTION
7          "This object specifies the VDP number of successful commands since
8          creation."
9      REFERENCE       "41.5"
10     ::= { ieee8021BridgeEvbVSIDBEntry 16 }
11
12  ieee8021BridgeEvbVDPCCommandsFailed  OBJECT-TYPE
13      SYNTAX          Counter32
14      MAX-ACCESS      read-only
15      STATUS          current
16      DESCRIPTION
17          "This object specifies the VDP number of failed commands since
18          creation "
19      REFERENCE       "41.5"
20     ::= { ieee8021BridgeEvbVSIDBEntry 17 }
21
22  ieee8021BridgeEvbVDPCCommandReverts  OBJECT-TYPE
23      SYNTAX          Counter32
24      MAX-ACCESS      read-only
25      STATUS          current
26      DESCRIPTION
27          "This object specifies the VDP command reverts since creation "
28      REFERENCE       "41.5"
29     ::= { ieee8021BridgeEvbVSIDBEntry 18 }
30
31  ieee8021BridgeEvbVDPCounterDiscontinuity OBJECT-TYPE
32      SYNTAX          TimeTicks
33      UNITS           "hundredths of a second"
34      MAX-ACCESS      read-only
35      STATUS          current
36      DESCRIPTION
37          "The time (in hundredths of a second) since the
38          last counter discontinuity."
39     ::= { ieee8021BridgeEvbVSIDBEntry 19}
40
41  -- =====
42  -- List of MAC/VLANs
43  -- =====
44
45  ieee8021BridgeEvbVSIDBMacTable OBJECT-TYPE
46      SYNTAX          SEQUENCE OF Ieee8021BridgeEvbVSIDBMacEntry
47      MAX-ACCESS      not-accessible
48      STATUS          current
49      DESCRIPTION
50          "A table that contains database of the active Virtual Station
51          Interfaces."
52      REFERENCE       "12.26.3"
53     ::= { ieee8021BridgeEvbVSIDBObjects 2 }
54
55  ieee8021BridgeEvbVSIDBMacEntry OBJECT-TYPE
56      SYNTAX          Ieee8021BridgeEvbVSIDBMacEntry
57      MAX-ACCESS      not-accessible
58      STATUS          current

```



```

1      DESCRIPTION
2      "A list of objects containing database of the MAC/VLANs
3      associated with Virtual Station Interfaces."
4
5      INDEX { ieee8021BridgeEvbVSIComponentID,
6              ieee8021BridgeEvbVSIPortNumber,
7              ieee8021BridgeEvbVSIIDType,
8              ieee8021BridgeEvbVSIID,
9              ieee8021BridgeEvbGroupID,
10             ieee8021BridgeEvbVSIMac,
11             ieee8021BridgeEvbVSIVlanId
12
13             }
14
15     ::= { ieee8021BridgeEvbVSIDBMacTable 1 }
16
17     ieee8021BridgeEvbVSIDBMacEntry ::=
18     SEQUENCE {
19         ieee8021BridgeEvbGroupID      Unsigned32,
20         ieee8021BridgeEvbVSIMac       MacAddress,
21         ieee8021BridgeEvbVSIVlanId    VlanIndex
22     }
23
24     ieee8021BridgeEvbGroupID OBJECT-TYPE
25     SYNTAX      Unsigned32
26     MAX-ACCESS  not-accessible
27     STATUS      current
28     DESCRIPTION "Group ID"
29     REFERENCE   "41.2.9"
30     ::= { ieee8021BridgeEvbVSIDBMacEntry 1}
31
32     ieee8021BridgeEvbVSIMac OBJECT-TYPE
33     SYNTAX      MacAddress
34     MAX-ACCESS  not-accessible
35     STATUS      current
36     DESCRIPTION
37     "The mac-address part of the MAC/VLANs for a VSI."
38     REFERENCE   "41.2.9"
39     ::= { ieee8021BridgeEvbVSIDBMacEntry 2}
40
41     ieee8021BridgeEvbVSIVlanId OBJECT-TYPE
42     SYNTAX      VlanIndex
43     MAX-ACCESS  read-only
44     STATUS      current
45     DESCRIPTION
46     "The Vlan ID part of the MAC/VLANs for a VSI."
47     REFERENCE   "41.2.9"
48     ::= { ieee8021BridgeEvbVSIDBMacEntry 3}
49
50     -- =====
51     -- Uplink Access Port table entry managed object
52     -- =====
53
54     ieee8021BridgeEvbSChannelObjects OBJECT IDENTIFIER ::=
55         { ieee8021BridgeEvbObjects 3 }
56
57     ieee8021BridgeEvbUAPConfigTable OBJECT-TYPE

```

```

1      SYNTAX      SEQUENCE OF Ieee8021BridgeEvbUAPConfigEntry
2      MAX-ACCESS  not-accessible
3      STATUS      current
4      DESCRIPTION
5          "A table that contains configuration parameters for UAP."
6      REFERENCE   "12.26.4.1 "
7      ::= { ieee8021BridgeEvbSChannelObjects 1 }

8  ieee8021BridgeEvbUAPConfigEntry OBJECT-TYPE
9      SYNTAX      Ieee8021BridgeEvbUAPConfigEntry
10     MAX-ACCESS  not-accessible
11     STATUS      current
12     DESCRIPTION
13         "A list of objects containing information to configure the
14         attributes for UAP."
15     INDEX {
16         ieee8021BridgePhyPort
17     }
18     ::= { ieee8021BridgeEvbUAPConfigTable 1 }

19  Ieee8021BridgeEvbUAPConfigEntry ::=
20     SEQUENCE {
21         ieee8021BridgeEvbUAPComponentId
22             IEEE8021PbbComponentIdentifier,
23         ieee8021BridgeEvbUAPPort
24             IEEE8021BridgePortNumber,
25         ieee8021BridgeEvbUapConfigIfIndex
26             InterfaceIndexOrZero,
27         ieee8021BridgeEvbUAPSchCdcAdminEnable      INTEGER,
28         ieee8021BridgeEvbUAPSchAdminCDCPRole      INTEGER,
29         ieee8021BridgeEvbUAPSchAdminCDCPChanCap   Integer32,
30         ieee8021BridgeEvbUAPSchOperCDCPChanCap    Integer32,
31         ieee8021BridgeEvbUAPSchAdminCDCPSVIDPoolLow  VlanIndex,
32         ieee8021BridgeEvbUAPSchAdminCDCPSVIDPoolHigh VlanIndex,
33         ieee8021BridgeEvbUAPSchOperState           INTEGER,
34         ieee8021BridgeEvbSchCdcRemoteEnabled       INTEGER,
35         ieee8021BridgeEvbSchCdcRemoteRole          INTEGER,
36         ieee8021BridgeEvbUAPConfigStorageType      StorageType,
37         ieee8021BridgeEvbUAPConfigRowStatus        RowStatus
38     }

39  ieee8021BridgeEvbUAPComponentId OBJECT-TYPE
40     SYNTAX      IEEE8021PbbComponentIdentifier
41     MAX-ACCESS  read-only
42     STATUS      current
43     DESCRIPTION
44         "The ComponentID of the port for the UAP."
45     ::= { ieee8021BridgeEvbUAPConfigEntry 1 }

46

47  ieee8021BridgeEvbUAPPort OBJECT-TYPE
48     SYNTAX      IEEE8021BridgePortNumber
49     MAX-ACCESS  read-only
50     STATUS      current
51     DESCRIPTION
52         "The port number of the port for the UAP."
53     ::= { ieee8021BridgeEvbUAPConfigEntry 2 }

54  ieee8021BridgeEvbUapConfigIfIndex OBJECT-TYPE

```

```

1      SYNTAX      InterfaceIndexOrZero
2      MAX-ACCESS  read-only
3      STATUS      current
4      DESCRIPTION
5          "The value of the instance of the IfIndex object,
6          defined in the IF-MIB, for the interface corresponding
7          to this port, or the value 0 if the port has not been
8          bound to an underlying frame source and sink."
9      ::= { ieee8021BridgeEvbUAPConfigEntry 3 }
10
11  ieee8021BridgeEvbUAPSchCdcAdminEnable  OBJECT-TYPE
12      SYNTAX      INTEGER
13          {
14              enable (1),
15              disable (2)
16          }
17      MAX-ACCESS  read-create
18      STATUS      current
19      DESCRIPTION  "Administrative status of CDCP."
20      REFERENCE   "42.4.2"
21      ::= { ieee8021BridgeEvbUAPConfigEntry 4 }
22
23
24  ieee8021BridgeEvbUAPSchAdminCDCPRole  OBJECT-TYPE
25      SYNTAX      INTEGER
26          {
27              cdcpRoleB(1),
28              cdcpRoleS (2)
29          }
30      MAX-ACCESS  read-create
31      STATUS      current
32      DESCRIPTION  "The administratively configured value for the local
33      port's role parameter. The value of AdminRole is not reflected in
34      the S-channel TLV. The AdminRole may take the value S or B.
35      S indicates the sender is unwilling to accept S-channels
36      configuration (mode, # channels supported, channel index) from
37      its neighbor and that the sender is willing to accept SVID
38      assignments from the neighbor. Stations usually take the S role.
39      B indicates the sender is willing to accept S-channels
40      configuration (mode, # channels supported, channel index)
41      from its neighbor and that the sender is willing do the best
42      it can to fill the SVID assignments
43      from the neighbor. Bridges usually take the B role."
44      REFERENCE   "42.4.2"
45      DEFVAL      { 1 }
46      ::= { ieee8021BridgeEvbUAPConfigEntry 5 }
47
48
49  ieee8021BridgeEvbUAPSchAdminCDCPChanCap OBJECT-TYPE
50      SYNTAX      Integer32 (1 .. 167)
51      MAX-ACCESS  read-create
52      STATUS      current
53      DESCRIPTION  "The administratively configured value for the
54      Number of Channels supported parameter. This
      value is included as the ChanCap parameter in

```

```

1           the S-channel TLV."
2     REFERENCE "42.4.1"
3
4     ::= { ieee8021BridgeEvbUAPConfigEntry 6 }
5
6     ieee8021BridgeEvbUAPSchOperCDCPChanCap  OBJECT-TYPE
7         SYNTAX      Integer32 (1 .. 167)
8         MAX-ACCESS   read-only
9         STATUS       current
10        DESCRIPTION  "The operational value for the Number of Channels
11                      supported parameter. This value is included
12                      as the ChnCap parameter in the S-channel TLV."
13        REFERENCE    "42.4.8"
14        ::= { ieee8021BridgeEvbUAPConfigEntry 7 }
15
16     ieee8021BridgeEvbUAPSchAdminCDCPSVIDPoolLow  OBJECT-TYPE
17         SYNTAX      VlanIndex
18         MAX-ACCESS   read-create
19         STATUS       current
20         DESCRIPTION  "Determines the lowest S-VIDs available for
21                      assignment by CDCP."
22        REFERENCE    "42.4.7"
23        ::= { ieee8021BridgeEvbUAPConfigEntry 8 }
24
25
26     ieee8021BridgeEvbUAPSchAdminCDCPSVIDPoolHigh  OBJECT-TYPE
27         SYNTAX      VlanIndex
28         MAX-ACCESS   read-create
29         STATUS       current
30         DESCRIPTION  "Determines the highest S-VIDs available for
31                      assignment by CDCP."
32        REFERENCE    "42.4.7"
33        ::= { ieee8021BridgeEvbUAPConfigEntry 9 }
34
35
36     ieee8021BridgeEvbUAPSchOperState  OBJECT-TYPE
37         SYNTAX      INTEGER
38         {
39             running (1),
40             notRunning (2)
41         }
42         MAX-ACCESS   read-only
43         STATUS       current
44         DESCRIPTION  "The current running state of CDCP."
45         REFERENCE    "42.4.15"
46        ::= { ieee8021BridgeEvbUAPConfigEntry 10 }
47
48
49     ieee8021BridgeEvbSchCdcPRemoteEnabled  OBJECT-TYPE
50         SYNTAX      INTEGER
51         {
52             enable (1),
53             disable (2)
54         }

```

```

1      MAX-ACCESS      read-only
2      STATUS          current
3      DESCRIPTION     "CDCP state for the remote S-channel."
4      REFERENCE       "42.4.14"
5      ::= { ieee8021BridgeEvbUAPConfigEntry 11 }
6
7      ieee8021BridgeEvbSchCdcPRemoteRole  OBJECT-TYPE
8      SYNTAX          INTEGER
9                      {
10                     cdcpRoleB (1),
11                     cdcpRoleS (2)
12                     }
13      MAX-ACCESS      read-only
14      STATUS          current
15      DESCRIPTION     "The value for the remote port's role parameter."
16      REFERENCE       "42.4.12"
17      ::= { ieee8021BridgeEvbUAPConfigEntry 12 }
18
19      ieee8021BridgeEvbUAPConfigStorageType  OBJECT-TYPE
20      SYNTAX          StorageType
21      MAX-ACCESS      read-create
22      STATUS          current
23      DESCRIPTION     "The storage type for this row. Rows in this table that
24                     were created through an external process may have a storage
25                     type of readOnly or permanent.
26                     For a storage type of permanent, none of the columns have
27                     to be writable."
28      DEFVAL { nonVolatile }
29      ::= { ieee8021BridgeEvbUAPConfigEntry 13 }
30
31      ieee8021BridgeEvbUAPConfigRowStatus  OBJECT-TYPE
32      SYNTAX          RowStatus
33      MAX-ACCESS      read-create
34      STATUS          current
35      DESCRIPTION     "RowStatus for creating a UAP table entry."
36      ::= { ieee8021BridgeEvbUAPConfigEntry 14 }
37
38
39      -- =====
40      -- S-Channel Interface Table
41      -- =====
42
43      ieee8021BridgeEvbCAPConfigTable  OBJECT-TYPE
44      SYNTAX          SEQUENCE OF Ieee8021BridgeEvbCAPConfigEntry
45      MAX-ACCESS      not-accessible
46      STATUS          current
47      DESCRIPTION     "A table that contains configuration information for
48                     the S-Channel Access Ports (CAP)."
```

REFERENCE "12.26.4.2 "

```

50      ::= { ieee8021BridgeEvbSChannelObjects 2 }
51
52      ieee8021BridgeEvbCAPConfigEntry  OBJECT-TYPE
53      SYNTAX          Ieee8021BridgeEvbCAPConfigEntry
54      MAX-ACCESS      not-accessible

```

```

1      STATUS      current
2      DESCRIPTION
3      "A list of objects containing information for the S-Channel
4      Access Ports (CAP)"
5      INDEX { ieee8021BridgePhyPort,
6              ieee8021BridgeEvbSchID
7      }
8      ::= { ieee8021BridgeEvbCAPConfigTable 1 }
9
10     ieee8021BridgeEvbCAPConfigEntry ::=
11     SEQUENCE {
12         ieee8021BridgeEvbSchID
13             Unsigned32,
14         ieee8021BridgeEvbCAPComponentId
15             IEEE8021PbbComponentIdentifier,
16         ieee8021BridgeEvbCapConfigIfIndex
17             InterfaceIndexOrZero,
18         ieee8021BridgeEvbCAPPort
19             IEEE8021BridgePortNumber,
20         ieee8021BridgeEvbCAPSChannelID
21             Unsigned32,
22         ieee8021BridgeEvbCAPAssociateSBPOrURPCompID
23             IEEE8021PbbComponentIdentifier,
24         ieee8021BridgeEvbCAPAssociateSBPOrURPPort
25             IEEE8021BridgePortNumber,
26         ieee8021BridgeEvbCAPRowStatus
27             RowStatus
28     }
29
30     ieee8021BridgeEvbSchID OBJECT-TYPE
31     SYNTAX      Unsigned32 (1..4094)
32     MAX-ACCESS  not-accessible
33     STATUS      current
34     DESCRIPTION
35     "This object represents the SVID for a ieee8021BridgeEvbSysType
36     of evbBridge and a SCID(S-Channel ID) for a
37     ieee8021BridgeEvbSysType of evbStation."
38     REFERENCE   "42.4.3"
39     ::= { ieee8021BridgeEvbCAPConfigEntry 1 }
40
41     ieee8021BridgeEvbCAPComponentId OBJECT-TYPE
42     SYNTAX      IEEE8021PbbComponentIdentifier
43     MAX-ACCESS  read-only
44     STATUS      current
45     DESCRIPTION "Component ID for S-channel Access Port."
46     ::= { ieee8021BridgeEvbCAPConfigEntry 2 }
47
48     ieee8021BridgeEvbCapConfigIfIndex OBJECT-TYPE
49     SYNTAX      InterfaceIndexOrZero
50     MAX-ACCESS  read-only
51     STATUS      current
52     DESCRIPTION "The value of the instance of the IfIndex object,
53     defined in the IF-MIB, for the interface corresponding
54     to this port, or the value 0 if the port has not been
55     bound to an underlying frame source and sink.
56     The underlying IfEntry indexed by this column MUST be persistent
57     across reinitializations of the management system."
58     ::= { ieee8021BridgeEvbCAPConfigEntry 3 }

```

```

1
2
3 ieee8021BridgeEvbCAPPort OBJECT-TYPE
4     SYNTAX      IEEE8021BridgePortNumber
5     MAX-ACCESS  read-only
6     STATUS      current
7     DESCRIPTION "Port number for the S-Channel Access Port."
8     ::= { ieee8021BridgeEvbCAPConfigEntry 4 }
9
10 ieee8021BridgeEvbCAPSChannelID OBJECT-TYPE
11     SYNTAX      Unsigned32
12     MAX-ACCESS  read-only
13     STATUS      current
14     DESCRIPTION "S-Channel ID (SCID) for this CAP."
15     REFERENCE   "4.2.4.2"
16     ::= { ieee8021BridgeEvbCAPConfigEntry 5 }
17
18 ieee8021BridgeEvbCAPAssociateSBPOrURPCompID OBJECT-TYPE
19     SYNTAX      IEEE8021PbbComponentIdentifier
20     MAX-ACCESS  read-write
21     STATUS      current
22     DESCRIPTION "Component ID of the Server Edge Port to be
23                associated with the CAP."
24     REFERENCE   "12.4.1.5"
25     ::= { ieee8021BridgeEvbCAPConfigEntry 6 }
26
27 ieee8021BridgeEvbCAPAssociateSBPOrURPPort OBJECT-TYPE
28     SYNTAX      IEEE8021BridgePortNumber
29     MAX-ACCESS  read-write
30     STATUS      current
31     DESCRIPTION "Port number of the Server Edge Port to be
32                associated with the CAP."
33     REFERENCE   "12.4.2"
34     ::= { ieee8021BridgeEvbCAPConfigEntry 7 }
35
36 ieee8021BridgeEvbCAPRowStatus OBJECT-TYPE
37     SYNTAX      RowStatus
38     MAX-ACCESS  read-create
39     STATUS      current
40     DESCRIPTION "RowStatus to create/destroy this table."
41
42     ::= { ieee8021BridgeEvbCAPConfigEntry 8 }
43
44 -- =====
45 -- Uplink Relay Port table entry
46 -- =====
47
48 ieee8021BridgeEvbURPTable OBJECT-TYPE
49     SYNTAX      SEQUENCE OF Ieee8021BridgeEvbURPEntry
50     MAX-ACCESS  not-accessible
51     STATUS      current
52     DESCRIPTION
53     "A table that contains configuration information for
54     the Uplink Relay Ports (URP)."
```

```

1      ::= { ieee8021BridgeEvbSChannelObjects 3 }
2
3  ieee8021BridgeEvbURPEntry OBJECT-TYPE
4      SYNTAX      Ieee8021BridgeEvbURPEntry
5      MAX-ACCESS  not-accessible
6      STATUS      current
7      DESCRIPTION
8          "A list of objects containing information for the Uplink
9          Relay Ports (URP)."
```

INDEX { ieee8021BridgeEvbURPComponentId,  
ieee8021BridgeEvbURPPort  
}

```

12     ::= { ieee8021BridgeEvbURPTable 1 }
13
14 Ieee8021BridgeEvbURPEntry ::=
15     SEQUENCE {
16         ieee8021BridgeEvbURPComponentId
17             IEEE8021PbbComponentIdentifier,
18         ieee8021BridgeEvbURPPort
19             IEEE8021BridgePortNumber,
20         ieee8021BridgeEvbURPIfIndex
21             InterfaceIndexOrZero,
22         ieee8021BridgeEvbURPBindToISSPort
23             IEEE8021BridgePortNumber,
24         ieee8021BridgeEvbURPLldpManual
25             TruthValue,
26         ieee8021BridgeEvbURPVdpOperRsrcWaitDelay
27             Unsigned32,
28         ieee8021BridgeEvbURPVdpOperRespWaitDelay
29             Unsigned32,
30         ieee8021BridgeEvbURPVdpOperReinitKeepAlive
31             Unsigned32
32     }
33
34 ieee8021BridgeEvbURPComponentId OBJECT-TYPE
35     SYNTAX      IEEE8021PbbComponentIdentifier
36     MAX-ACCESS  not-accessible
37     STATUS      current
38     DESCRIPTION "Component ID that the URP belongs to."
39     ::= { ieee8021BridgeEvbURPEntry 1 }
40
41 ieee8021BridgeEvbURPPort OBJECT-TYPE
42     SYNTAX      IEEE8021BridgePortNumber
43     MAX-ACCESS  not-accessible
44     STATUS      current
45     DESCRIPTION "port number of the urp."
46     ::= { ieee8021BridgeEvbURPEntry 2 }
47
48 ieee8021BridgeEvbURPIfIndex OBJECT-TYPE
49     SYNTAX      InterfaceIndexOrZero
50     MAX-ACCESS  read-write
51     STATUS      current
52     DESCRIPTION "The value of the instance of the IfIndex object,
53                 defined in the IF-MIB, for the interface corresponding
54                 to this port, or the value 0 if the port has not been
55                 bound to an underlying frame source and sink."
```



It is an implementation specific decision as to whether this object may be modified if it has been created or if 0 is a legal value.

The underlying IfEntry indexed by this column MUST be persistent across reinitializations of the management system. "

```
::= { ieee8021BridgeEvbURPEntry 3 }
```

```
ieee8021BridgeEvbURPBindToISSPort      OBJECT-TYPE
```

```
SYNTAX      IEEE8021BridgePortNumber
```

```
MAX-ACCESS  read-write
```

```
STATUS      current
```

```
DESCRIPTION "The evbURPBindToISSPort is the ISS Port Number where
              the URP is attached.
              This binding is optional and only required in some
              systems."
```

```
::= { ieee8021BridgeEvbURPEntry 4 }
```

```
ieee8021BridgeEvbURPLldpManual          OBJECT-TYPE
```

```
SYNTAX      TruthValue
```

```
MAX-ACCESS  read-write
```

```
STATUS      current
```

```
DESCRIPTION "The evbUrpLldpManual parameter control how the EVB
              TLV determines the operating values for parameters.
              When set TRUE only the local EVB TLV will be used to
              determine the parameters."
```

```
::= { ieee8021BridgeEvbURPEntry 6 }
```

```
ieee8021BridgeEvbURPVdpOperRsrcWaitDelay OBJECT-TYPE
```

```
SYNTAX      Unsigned32
```

```
UNITS       "micro-seconds"
```

```
MAX-ACCESS  read-only
```

```
STATUS      current
```

```
DESCRIPTION "The parameter evbURPVdpOperRsrcWaitDelay is the
              exponent of 2 used to set the VDP resourceWaitDelay
              timer at the EVB Bridge."
```

```
::= { ieee8021BridgeEvbURPEntry 9 }
```

```
ieee8021BridgeEvbURPVdpOperRespWaitDelay OBJECT-TYPE
```

```
SYNTAX      Unsigned32
```

```
UNITS       "micro-seconds"
```

```
MAX-ACCESS  read-write
```

```
STATUS      current
```

```
DESCRIPTION "The evbUrpVdpOperRespWaitDelay is how long a
              Evb station VDP will wait for a response from
              the EVB Bridge VDP."
```

```
::= { ieee8021BridgeEvbURPEntry 10 }
```

```
ieee8021BridgeEvbURPVdpOperReinitKeepAlive OBJECT-TYPE
```

```
SYNTAX      Unsigned32
```

```
UNITS       "micro-seconds"
```

```
MAX-ACCESS  read-write
```

```
STATUS      current
```

```
DESCRIPTION "The evbURPVdpOperReinitKeepAlive is the exponent
              of 2 used to determine the time interval of Keep
```

```

1           "Alives transmitted by the EVB station."
2       ::= { ieee8021BridgeEvpURPEntry 11 }
3
4
5       -- =====
6       -- Edge Control Protocol Table
7       -- =====
8
9       ieee8021BridgeEvpEcpTable OBJECT-TYPE
10          SYNTAX      SEQUENCE OF Ieee8021BridgeEvpEcpEntry
11          MAX-ACCESS  not-accessible
12          STATUS      current
13          DESCRIPTION
14             "A table that contains configuration information for
15             the Edge Control Protocol (ECP)."
```

REFERENCE "12.26.4.2 "

```

16          ::= { ieee8021BridgeEvpSChannelObjects 4 }
17
18       ieee8021BridgeEvpEcpEntry OBJECT-TYPE
19          SYNTAX      Ieee8021BridgeEvpEcpEntry
20          MAX-ACCESS  not-accessible
21          STATUS      current
22          DESCRIPTION
23             "A list of objects containing information for theEdge Control
24             Protocol (ECP)."
```

INDEX { ieee8021BridgeEvpEcpComponentId,  
          ieee8021BridgeEvpEcpPort }

```

25          ::= { ieee8021BridgeEvpEcpTable 1 }
26
27
28       Ieee8021BridgeEvpEcpEntry ::=
29          SEQUENCE {
30             ieee8021BridgeEvpEcpComponentId
31                 IEEE8021PbbComponentIdentifier,
32             ieee8021BridgeEvpEcpPort
33                 IEEE8021BridgePortNumber,
34             ieee8021BridgeEvpEcpOperAckTimerInit      Unsigned32,
35             ieee8021BridgeEvpEcpOperMaxRetries        Unsigned32,
36             ieee8021BridgeEvpEcpTxFrameCount          Counter32,
37             ieee8021BridgeEvpEcpTxRetryCount          Counter32,
38             ieee8021BridgeEvpEcpTxFailures            Counter32,
39             ieee8021BridgeEvpEcpRxFrameCount          Counter32
40          }
41
42
43       ieee8021BridgeEvpEcpComponentId OBJECT-TYPE
44          SYNTAX      IEEE8021PbbComponentIdentifier
45          MAX-ACCESS  not-accessible
46          STATUS      current
47          DESCRIPTION "Component ID."
```

::= { ieee8021BridgeEvpEcpEntry 1 }

```

48
49       ieee8021BridgeEvpEcpPort OBJECT-TYPE
50          SYNTAX      IEEE8021BridgePortNumber
51          MAX-ACCESS  not-accessible
52          STATUS      current
53          DESCRIPTION "Port number."
```

::= { ieee8021BridgeEvpEcpEntry 2 }

```

1
2      ieee8021BridgeEvpEcpOperAckTimerInit      OBJECT-TYPE
3          SYNTAX      Unsigned32
4          UNITS        "micro-seconds"
5          MAX-ACCESS   read-only
6          STATUS       current
7          DESCRIPTION  "The initial value used to initialize ackTimer
8                      (43.3.6.1)."
```

```

9      ::= { ieee8021BridgeEvpEcpEntry 3 }

10     ieee8021BridgeEvpEcpOperMaxRetries          OBJECT-TYPE
11         SYNTAX      Unsigned32
12         MAX-ACCESS   read-only
13         STATUS       current
14         DESCRIPTION  "This integer variable defines the maximum number
15                     of times that the ECP transmit state machine will
16                     retry a transmission if no ACK is received."
```

```

17     ::= { ieee8021BridgeEvpEcpEntry 4 }

18     ieee8021BridgeEvpEcpTxFrameCount            OBJECT-TYPE
19         SYNTAX      Counter32
20         MAX-ACCESS   read-only
21         STATUS       current
22         DESCRIPTION  "The evbECPTxFrameCount is the number of ECP frame
23                     transmitted since ECP was instantiated."
```

```

24     ::= { ieee8021BridgeEvpEcpEntry 5 }

25
26     ieee8021BridgeEvpEcpTxRetryCount            OBJECT-TYPE
27         SYNTAX      Counter32
28         MAX-ACCESS   read-only
29         STATUS       current
30         DESCRIPTION  "The evbECPTxRetryCount is the number of times
31                     ECP re-tried transmission since ECP was
32                     instantiated."
```

```

33     ::= { ieee8021BridgeEvpEcpEntry 6 }

34
35     ieee8021BridgeEvpEcpTxFailures              OBJECT-TYPE
36         SYNTAX      Counter32
37         MAX-ACCESS   read-only
38         STATUS       current
39         DESCRIPTION  "The evbECPTxFailures is the number of times ECP
40                     failed to successfully deliver a frame since ECP
41                     was instantiated."
```

```

42     ::= { ieee8021BridgeEvpEcpEntry 7 }

43
44     ieee8021BridgeEvpEcpRxFrameCount            OBJECT-TYPE
45         SYNTAX      Counter32
46         MAX-ACCESS   read-only
47         STATUS       current
48         DESCRIPTION  "The evbECPRxFrameCount is the number
49                     of frames received since ECP was instantiated."
```

```

50     ::= { ieee8021BridgeEvpEcpEntry 8 }

51
52
53     -- =====
54     -- Conformance Information
```

```
1  -- =====
2
3  ieee8021BridgeEvbGroups
4      OBJECT IDENTIFIER ::= { ieee8021BridgeEvbConformance 1 }
5
6  ieee8021BridgeEvbCompliances
7      OBJECT IDENTIFIER ::= { ieee8021BridgeEvbConformance 2 }
8
9  -- =====
10 -- Units of conformance
11 -- =====
12
13 ieee8021BridgeEvbSysGroup OBJECT-GROUP
14     OBJECTS {
15         ieee8021BridgeEvbSysType,
16         ieee8021BridgeEvbSysNumExternalPorts,
17         ieee8021BridgeEvbSysEvpLldpTxEnable,
18         ieee8021BridgeEvbSysEvpLldpGidCapable,
19         ieee8021BridgeEvbSysEvpLldpManual,
20         ieee8021BridgeEvbSysEcpAckTimer,
21         ieee8021BridgeEvbSysEcpMaxRetries,
22         ieee8021BridgeEvbSysVdpDfltRsrcWaitDelay,
23         ieee8021BridgeEvbSysVdpDfltReinitKeepAlive
24     }
25     STATUS      current
26     DESCRIPTION
27         "The collection of objects used to represent a EVB
28         management objects."
29     ::= { ieee8021BridgeEvbGroups 1 }
30
31 ieee8021BridgeEvbSbpGroup OBJECT-GROUP
32     OBJECTS {
33         ieee8021BridgeEvbSbpLldpManual,
34         ieee8021BridgeEvbSbpVdpOperRsrcWaitDelay ,
35         ieee8021BridgeEvbSbpVdpOperReinitKeepAlive,
36         ieee8021BridgeEvbSbpVdpOperToutKeepAlive
37     }
38     STATUS current
39     DESCRIPTION
40         "The collection of objects used to represent a SBP
41         management objects."
42     ::= { ieee8021BridgeEvbGroups 3 }
43
44 ieee8021BridgeEvbVSIDBGroup OBJECT-GROUP
45     OBJECTS {
46         ieee8021BridgeEvbVSITimeSinceCreate ,
47         ieee8021BridgeEvbVsiVdpOperCmd,
48         ieee8021BridgeEvbVsiOperRevert,
49         ieee8021BridgeEvbVsiOperHard,
50         ieee8021BridgeEvbVsiOperReason,
51         ieee8021BridgeEvbVSIMgrID,
52         ieee8021BridgeEvbVSIType,
53         ieee8021BridgeEvbVSITypeVersion ,
54         ieee8021BridgeEvbVSIMvFormat,
55         ieee8021BridgeEvbVSINumMACs ,
```

```

1         ieee8021BridgeEvbVDPMachineState ,
2         ieee8021BridgeEvbVDPCommandsSucceeded ,
3         ieee8021BridgeEvbVDPCommandsFailed ,
4         ieee8021BridgeEvbVDPCommandReverts ,
5         ieee8021BridgeEvbVDPCounterDiscontinuity,
6         ieee8021BridgeEvbVSIVlanId
7     }
8     STATUS          current
9     DESCRIPTION
10        "The collection of objects used to represent a EVB VSI
11        DB table."
12    ::= { ieee8021BridgeEvbGroups 4 }
13
14    ieee8021BridgeEvbUAPGroup OBJECT-GROUP
15        OBJECTS {
16            ieee8021BridgeEvbUAPComponentId,
17            ieee8021BridgeEvbUAPPort,
18            ieee8021BridgeEvbUapConfigIfIndex,
19            ieee8021BridgeEvbUAPSchCdcAdminEnable,
20            ieee8021BridgeEvbUAPSchAdminCDCPRole,
21            ieee8021BridgeEvbUAPSchAdminCDCPChanCap,
22            ieee8021BridgeEvbUAPSchOperCDCPChanCap,
23            ieee8021BridgeEvbUAPSchAdminCDCPSVIDPoolLow,
24            ieee8021BridgeEvbUAPSchAdminCDCPSVIDPoolHigh,
25            ieee8021BridgeEvbUAPSchOperState,
26            ieee8021BridgeEvbSchCdcRemoteEnabled,
27            ieee8021BridgeEvbSchCdcRemoteRole,
28            ieee8021BridgeEvbUAPConfigStorageType ,
29            ieee8021BridgeEvbUAPConfigRowStatus
30        }
31        STATUS          current
32        DESCRIPTION
33            "The collection of objects used to represent a EVB UAP
34            table."
35        ::= { ieee8021BridgeEvbGroups 5 }
36
37    ieee8021BridgeEvbCAPConfigGroup OBJECT-GROUP
38        OBJECTS {
39            ieee8021BridgeEvbCAPComponentId,
40            ieee8021BridgeEvbCapConfigIfIndex,
41            ieee8021BridgeEvbCAPPort,
42            ieee8021BridgeEvbCAPSChannelID,
43            ieee8021BridgeEvbCAPAssociateSBPOrURPCompID,
44            ieee8021BridgeEvbCAPAssociateSBPOrURPPort,
45            ieee8021BridgeEvbCAPRowStatus
46        }
47        STATUS          current
48        DESCRIPTION
49            "The collection of objects used to represent a EVB
50            CAP management objects."
51        ::= { ieee8021BridgeEvbGroups 6 }
52
53    ieee8021BridgeEvbsURPGroup OBJECT-GROUP
54        OBJECTS {
55            ieee8021BridgeEvbURPIfIndex,

```

```

1         ieee8021BridgeEvpURPBindToISSPort ,
2         ieee8021BridgeEvpURPLldpManual,
3         ieee8021BridgeEvpURPVdpOperRsrcWaitDelay,
4         ieee8021BridgeEvpURPVdpOperRespWaitDelay ,
5         ieee8021BridgeEvpURPVdpOperReinitKeepAlive
6     }
7     STATUS          current
8     DESCRIPTION
9         "The collection of objects used to represent a EVBS URP
10        management objects."
11 ::= { ieee8021BridgeEvpGroups 7 }
12
13 ieee8021BridgeEvpEcpGroup OBJECT-GROUP
14     OBJECTS {
15         ieee8021BridgeEvpEcpOperAckTimerInit,
16         ieee8021BridgeEvpEcpOperMaxRetries ,
17         ieee8021BridgeEvpEcpTxFrameCount,
18         ieee8021BridgeEvpEcpTxRetryCount,
19         ieee8021BridgeEvpEcpTxFailures ,
20         ieee8021BridgeEvpEcpRxFrameCount
21     }
22     STATUS          current
23     DESCRIPTION
24         "The collection of objects used to represent a EVB CAP
25        management objects."
26 ::= { ieee8021BridgeEvpGroups 8 }
27
28 -- =====
29 -- compliance statements
30 -- =====
31
32 ieee8021BridgeEvbbCompliance MODULE-COMPLIANCE
33     STATUS          current
34     DESCRIPTION
35         "The compliance statement for devices supporting EVB
36        as defined in IEEE 802.1Qbg."
37     MODULE
38         MANDATORY-GROUPS {
39             ieee8021BridgeEvpSysGroup,
40             ieee8021BridgeEvpVSIDBGroup,
41             ieee8021BridgeEvpSbpGroup,
42             ieee8021BridgeEvpEcpGroup
43         }
44
45         GROUP ieee8021BridgeEvpUAPGroup
46         DESCRIPTION "This group is mandatory when S-Channels
47        are present."
48
49         GROUP ieee8021BridgeEvpCAPConfigGroup
50         DESCRIPTION "This group is mandatory when S-Channels
51        are present."
52 ::= { ieee8021BridgeEvbbCompliances 1 }
53
54 ieee8021BridgeEvbsCompliance MODULE-COMPLIANCE
55     STATUS          current


```

```
1      DESCRIPTION
2          "The compliance statement for devices supporting EVBS
3          as defined in IEEE 802.1Qbg."
4      MODULE
5          MANDATORY-GROUPS {
6              ieee8021BridgeEvbSysGroup,
7              ieee8021BridgeEvbVSIDBGroup,
8              ieee8021BridgeEvbsURPGroup,
9              ieee8021BridgeEvbEcpGroup
10         }
11         GROUP ieee8021BridgeEvbUAPGroup
12         DESCRIPTION "This group is mandatory when S-Channels
13                     are present."
14
15         GROUP ieee8021BridgeEvbCAPConfigGroup
16         DESCRIPTION "This group is mandatory when S-Channels
17                     are present."
18
19         ::= { ieee8021BridgeEvbCompliances 2 }
20
21     END
```

*Insert the following text, tables, and figures as new Clause 40:*

## 40. Edge Virtual Bridging (EVB)

Figure 40-1 provides an overview of the Edge Virtual Bridging (EVB) architecture. An end station that supports the attachment of one or more virtual stations is said to be an EVB station. Each virtual station has at least one virtual station interface (VSI). Each virtual station communicates with other virtual stations or other stations on the bridged LAN via the edge relay (ERs) to which it is attached (see 3.2).

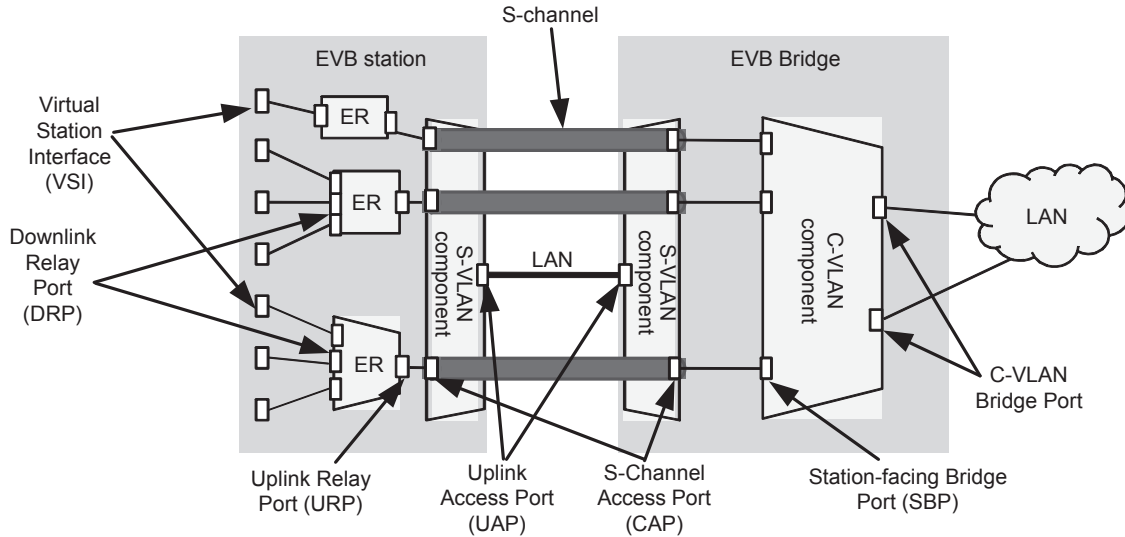

**Figure 40-1—EVB architecture overview**

An ER supports local relay among virtual stations and/or relay between a virtual station and other stations on the bridged LAN through an EVB Bridge. When forwarding of frames from one DRP to one or more other DRPs associated with the same ER (i.e., local relay) is not supported, then forwarding of traffic from one DRP to one or more other DRPs is performed by the EVB Bridge, utilizing reflective relay (8.6.1).

Connection between a DRP and a virtual station is achieved via a Virtual Station Interface (VSI). Traffic from a VSI traverses an internal LAN connecting the DRP to the virtual station. The operation of an ER does not result in any modifications to relayed frames over and above the normal tagging and un-tagging functions of a VLAN Bridge. ERs do not participate in, or affect, Spanning Tree operation; it is therefore necessary that the logical connectivity maintained within the station is always loop-free (5.23.1).

Figure 40-1 shows a 2-port ER within the EVB station; this illustrates the fact that even where a single VSI is supported by an S-channel, an ER is present in order to provide C-tagging, reserved address filtering (per Table 8-1) and support for the VSI Discovery and Configuration Protocol (VDP, Clause 41), the edge control protocol (ECP), the EVB TLV (D.2.13), and LLDP (IEEE Std 802.1AB).

Each VSI instance is assigned a VSI manager ID, VSI Type ID (VTID) and VSI Instance Identifier (VSIID). VDP associates a VSI instance and its related VLAN Identifier(s), MAC Address(es), GroupID(s), VSI manager ID, VTID<sup>8</sup>, and VSIID with an SBP. Similarly, the VDP protocol de-associates a VSI instance from an SBP.

<sup>8</sup>The meaning of the VTID is decided by local system and network management.



1 The VDP protocol can also be used to associate a single VTID with, or de-associate a single VTID from the  
2 SBP. In this case, the VSI instance does not contain any MAC addresses, VLAN identifiers or Group IDs,  
3 and uses the wildcard VID format (41.2.9.1). Only the most recent associate command is used to configure  
4 the VTID for the SBP.

5  
6 An ER supports relaying of frames associated with one or more VSIs. In order to achieve this, an ER can  
7 support two types of operation. In the first type, referred to as Virtual Edge Bridge (VEB), traffic transferred  
8 from one DRP to another DRP of the same ER is forwarded directly by that ER. In the second type, referred  
9 to as VEPA, traffic transferred from one DRP to another DRP of the same ER is forwarded onto a single  
10 uplink relay port (URP) beyond the ER to the EVB Bridge. In this case, the EVB Bridge's SBP is enabled  
11 with reflective relay (6.6.5, 8.6.1); this allows the frame to be reflected back to the same ER from which it  
12 was received by the EVB Bridge. The ER can then forward the frame to the destination. Thus, in the second  
13 mode, all traffic transits the EVB Bridge's SBP and is subject to, for example, filtering or policing behavior  
14 associated with the EVB Bridge.

15  
16 NOTE—Connection between an EVB Bridge and an ordinary end station takes place via a C-VLAN Bridge Port, not an  
17 SBP.

18  
19 An S-channel is a point-to-point S-VLAN that spans a pair of Port-mapping S-VLAN components (22.6.4)  
20 and can be used to interconnect an ER and the C-VLAN component of an EVB Bridge. Multiple S-channels  
21 can share the use of a LAN. The use of multiple S-channels allows the EVB station to support multiple ERs.  
22 The end point of an S-channel is known as an S-channel Access Port (CAP); frames are S-tagged on entry  
23 to, and are untagged on exit from, the S-VLAN component through a CAP.

24  
25 EVB TLVs (D.2.13) exchanged via LLDP allow an EVB station and an EVB Bridge to exchange  
26 information related to the use of reflective relay and other operational parameters. Each ER has an LLDP  
27 database at its URP. Each ER can also have an LLDP database at each DRP.

28  
29 Each URP and each SBP has an instance of Edge Control Protocol (ECP, Clause 43) used to support the  
30 VDP. These instances of ECP use the Nearest Customer Bridge address as the destination for frames  
31 exchanged between the URP and SBP. VDP TLVs are packed into PDUs that are handed to ECP for  
32 delivery. ECP provides reliable delivery of VDP PDUs.

## 40.1 EVB architecture without S-channels

Figure 40-2 illustrates the relationship of the EVB entities to the Bridge architecture when no S-channels are supported and no Port-mapping S-VLAN components are implemented. In this configuration, the EVB station and EVB Bridge may exchange an S-channel discovery and configuration protocol (CDCP) TLV over the Nearest non-TMPR Bridge address indicating that the S-VLAN component is not present. If the CDCP TLV managed object does not exist in the LLDP database, then the transmitting station or bridge is assumed to not support S-channels. A URP or an SBP can send a CDCP TLV. If the EVB station supports the CDCP TLV then the nearest non-TMPR LLDP database is located at the URP. If the EVB Bridge supports the CDCP TLV then the nearest non-TMPR LLDP database is located at the SBP.


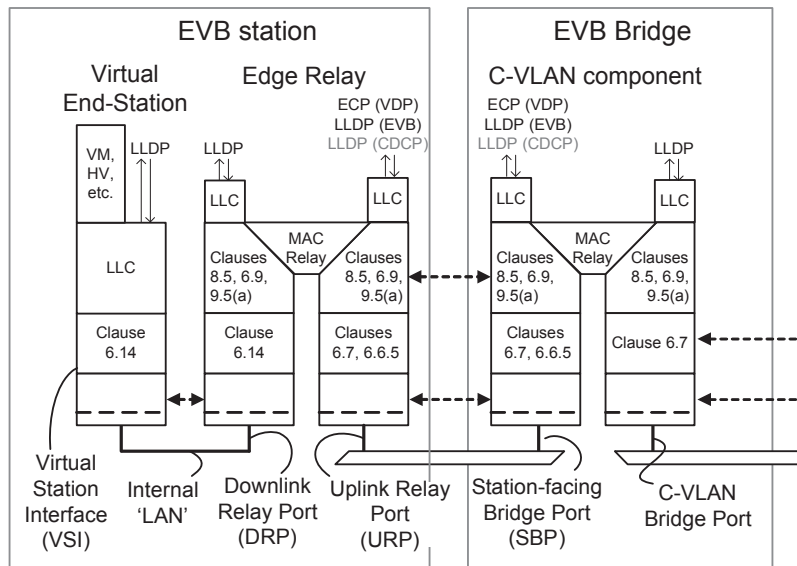


Figure 40-2—EVB architecture without S-channels

## 40.2 EVB architecture with S-channels

Figure 40-3 shows the relationship of the EVB entities to the Bridge architecture when S-channels are supported. In this configuration, the EVB station and Bridge build nearest non-TPMR LLDP databases at their Uplink Access Ports (UAPs) and use them to exchange CDCP TLVs. Both the EVB station and EVB Bridge set the SComp parameter in the CDCP TLV to TRUE indicating they have an S-VLAN component. The CDCP protocol operating on the CDCP TLVs exchanged by LLDP is used to configure the S-channels.

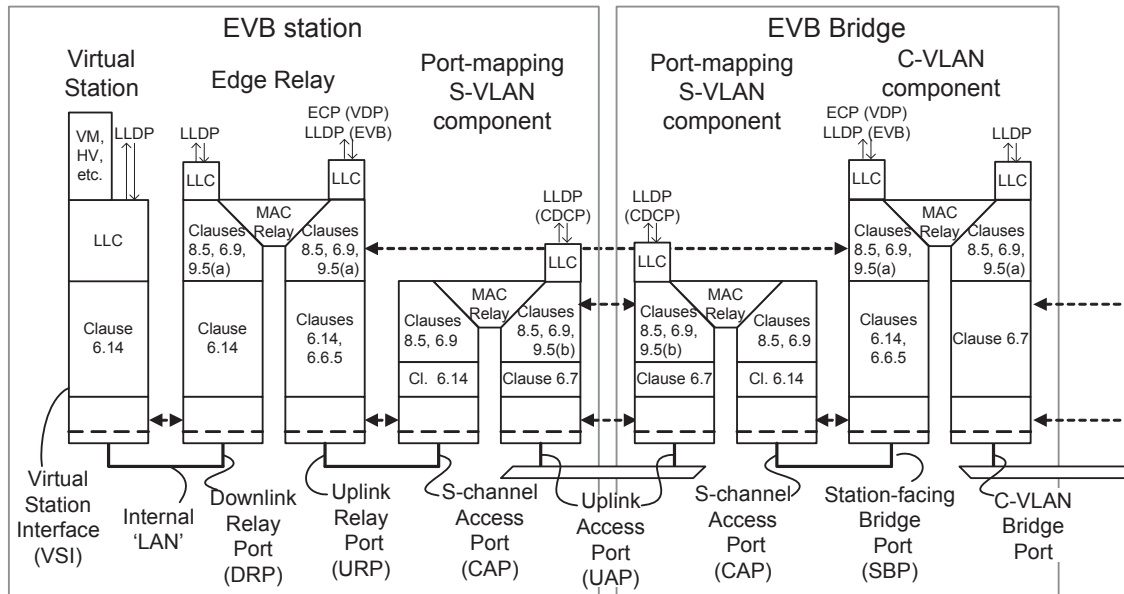


**Figure 40-3—EVB architecture with S-channel**

EVB stations and EVB Bridges use Port-mapping S-VLAN components (5.6, 22.6.4) to instantiate S-channels. Each S-channel connects an S-channel Access Port (CAP) on the EVB station to a CAP on the EVB Bridge. The CAP on an EVB station connects to a single URP on an ER via an internal LAN. The CAP on an EVB Bridge connects to a single SBP on the C-VLAN component via an internal LAN. There is a 1:1 relationship between a CAP and an SBP of the EVB Bridge, and a 1:1 relationship between a CAP and a URP of the EVB station. S-channel support allows the EVB station and EVB Bridge to support multiple ERs on a LAN. Each S-channel is associated with the URP of a distinct ER.

Figure 40-4 shows the relationship between S-channels and S-channel Access Ports (CAPs) and the positioning of a station's internal and external LANs. When S-channels are supported, each physical LAN can be used to support multiple S-channels identified on the LAN by S-tagging. The S-channels are supported by one Port-mapping S-VLAN component for each UAP. Each Port-mapping S-VLAN component within an EVB station can be identified by its single UAP. A CAP is uniquely identified by the combination of the UAP of the S-VLAN component and the S-VID of the S-channel. Each CAP attaches by internal C-tagged LANs to a single URP or SBP. The C-VLANs carried over each S-channel are determined by configuration of the EVB station and of the C-VLAN component within the EVB Bridge.

NOTE—As a result of normal Bridge behaviour described in 6.9, the priority carried in the C-tag is regenerated at the CAP to form the S-tag priority.

The C-VLAN component of the EVB Bridge is a standard C-VLAN component (5.5) that additionally supports reflective relay (6.6.5, 8.6.1), the EVB LLDP TLV, and VDP.

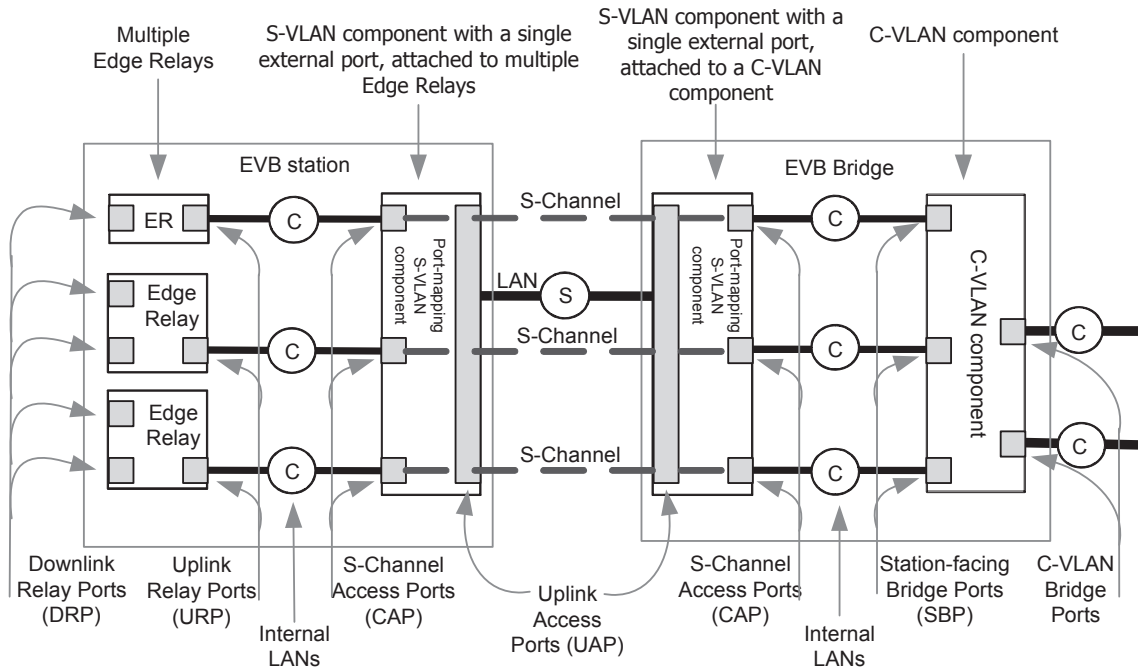

**Figure 40-4—EVB components and internal LANs with S-channels**


When a UAP table entry (12.26.4.1) is created, a Port-mapping S-VLAN component is instantiated and the following actions are taken automatically:

- a) The UAP is configured to:
  - 1) Admit all frames (6.9);
  - 2) have a PVID parameter equal to the default S-channel S-VID (6.9, 40.3);
  - 3) be included in the member set for the default S-channel S-VID (8.8.10);
  - 4) be a member of the untagged set for the default S-channel S-VID (8.8.2);
  - 5) be included in the member set for all S-VIDs of active S-channels.
- b) An S-channel Interface table entry is created if one does not already exist for the default S-channel. This table provides the equivalent functionality of:
  - 1) creating a CAP for the default S-channel;
  - 2) configuring the CAP to accept only un-S-tagged frames (6.9);
  - 3) setting the member set for the default S-channel's S-VID to include the CAP;
  - 4) setting the CAP's PVID to the default S-channel's S-VID;
  - 5) adding the CAP to the default S-channel S-VID's untagged set;
  - 6) setting filters on the CAP for the Nearest Bridge and Nearest non-TPMR Bridge group MAC addresses;
  - 7) in the case of an EVB Bridge allocating (or creating) an SBP on the C-VLAN component attached to the CAP by an internal LAN.
- c) An instance of LLDP is started on the UAP transmitting a local database on the Nearest Non-TPMR Bridge Address and including the CDCP TLV.
- d) The CDCP protocol is started on the UAP and configured with the parameters specified when the UAP was created.
  - 1) If the CDCP role is 'B' then CDCP will wait for new S-channel creation requests. As new requests are found CDCP creates new S-channel interface table entries for each new S-channel and deletes entries when S-channels are removed.
  - 2) If the CDCP role is 'S' then CDCP uses the S-channel interface table to create the list of SCIDs for the S-channels it is requesting from the 'B' side.

### 40.3 Asymmetric EVB architecture without S-channels

Figure 40-5 and Figure 40-6 illustrate the relationship of the EVB entities to the Bridge architecture when S-channels are supported by only one side at a time; either the EVB Bridge or EVB station, but not both simultaneously. In these configurations, the EVB entity with S-channel support will advertise it has an S-VLAN component by building a nearest non-TPMR LLDP databases at its UAP and including the CDCP TLV with the parameter SComp set to TRUE. The EVB entity without S-channel support may advertise a Nearest non-TPMR Bridge LLDP database with the CDCP TLV indicating an SComp parameter set to FALSE. CDCP is assumed not to be supported by the peer EVB entity until a CDCP TLV has been received.

Each Port-mapping S-VLAN component within an EVB entity supports an internal default S-channel identified by S-VID 1 and uses it to pass untagged frames to its UAP. This default S-channel is always present in the entity supporting an S-VLAN component. In the asymmetric configurations, frames from the system without S-channel support are carried over the default S-channel within the system that has S-channel support.

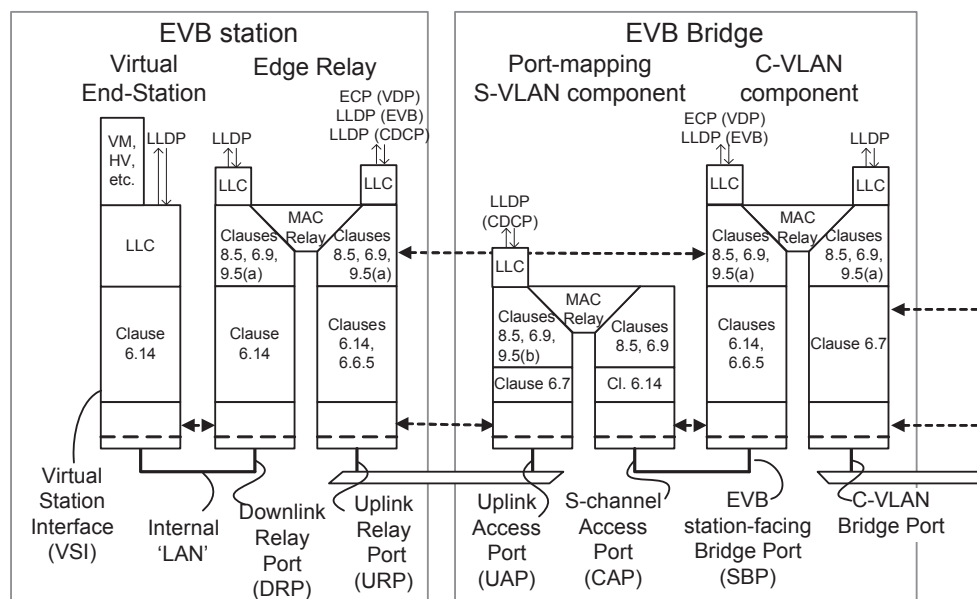

**Figure 40-5—EVB architecture without S-channels, with EVB Bridge S-VLAN component**

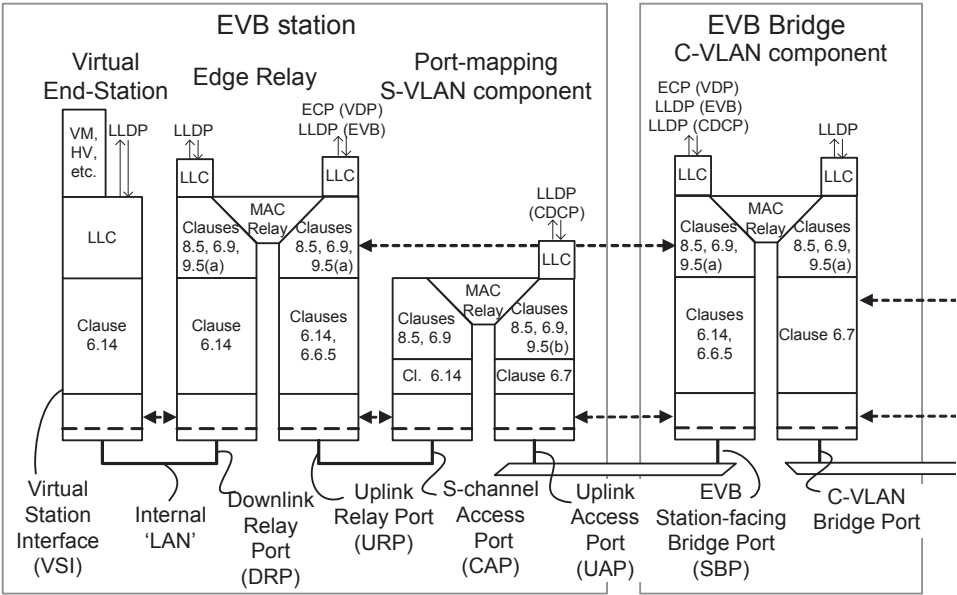


Figure 40-6—EVB architecture without S-channels, with EVB station S-VLAN component

***Insert the following text, tables, and figures as new Clause 41:***

## **41. VSI discovery and configuration protocol (VDP)**

The VSI discovery and configuration protocol (VDP) associates (registers) a VSI instance with an SBP of an EVB Bridge. VDP simplifies and automates virtual station configuration by enabling the movement of a VSI instance (and its related VSI Type information) from one virtual station to another or from one EVB Bridge to another. VDP supports VSI discovery and configuration across a channel interconnecting an EVB station and an EVB Bridge. VDP TLVs are exchanged between the station and the Bridge in support of this protocol.

This subclause defines the VDP TLV structure and state machines. VDP uses the Edge Control Protocol (ECP, Clause 43) as a transport protocol for VDP TLV exchanges. Three VDP TLVs are defined:

- a) The VSI manager ID TLV (41.1). There is a single instance of this TLV in any ECPDU that carries VDP, and it appears as the first TLV in the ECPDU.
- b) The VDP association TLV (41.2). One or more of these TLVs can appear in any ECPDU, following the VSI manager ID TLV.
- c) The organizationally defined TLV (41.3).

When ECP is used as a transport protocol for VDP, ECP uses the Nearest Customer Bridge group MAC address (Table 8-1) as the destination address for ECPDUs.


NOTE 1—If there are multiple VSI managers, then their TLVs are transmitted in separate ECPDUs.

NOTE 2—Beyond the requirement stated, that the VSI manager ID TLV appears as the first TLV in ECPDUs carrying VDP, there are no further constraints placed upon how an implementation chooses to pack VDP TLVs into an ECPDU.

NOTE 3—VDP TLVs are not LLDP TLVs, and the TLV type values used in VDP TLVs are assigned from a distinct number space from those used in LLDP TLVs.

### **41.1 VSI manager ID TLV definition**

Figure 41-1 illustrates the format of the VSI manager ID TLV.

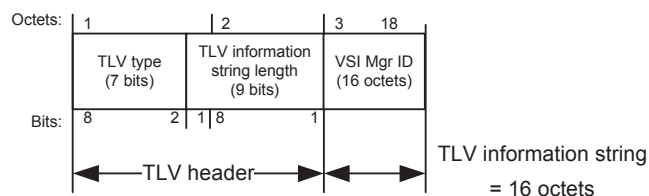

**Figure 41-1—VSI manager ID TLV**

The VSI manager ID TLV field definitions are contained in 41.1.1 through 41.1.3.

#### **41.1.1 TLV type**

The TLV type field takes the value shown in Table 41-1 for VSI manager ID.

#### **41.1.2 TLV information string length**

This field contains the length of the TLV information string, which is 16 octets.

Table 41-1—VDP TLV types

TLV type	Value
Pre-Associate	0x01
Pre-Associate with resource reservation	0x02
Associate	0x03
De-associate	0x04
VSI manager ID	0x05
Organizationally defined TLV	0x7F
Reserved for future standardization	0x00, 0x06-0x7E

41.1.3 VSI Manager ID

Identifies the database that should be accessed to get the VSI Type. The value 0 means that the station does not know what VSI Manager ID to use, indicating that the Bridge should select a default value. Any other value is interpreted as an IPv6 address, as defined in IETF RFC 4291.

41.2 VDP association TLV definitions

Figure 41-2 illustrates the format of the VDP association TLV.

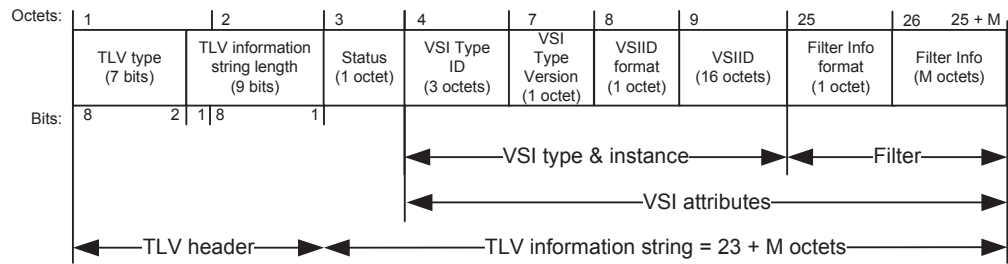


Figure 41-2—VDP association TLV

The VDP association TLV field definitions are contained in 41.2.1 through 41.2.9. The semantics of the VDP association TLV types are defined in 41.2.10.

When the VDP association TLV is sent as a response, the Status field indicates the outcome of the requested operation, and the remaining fields are populated using the information provided in the request or information provided by the EVB Bridge.

41.2.1 TLV type

The TLV type field identifies the type of the VDP association TLV, and can take any of the values shown in Table 41-1 for pre-associate, pre-associate with resource reservation, associate, or de-associate.



### 41.2.2 TLV information string length

This field contains the length of the TLV information string, calculated as  $23 + M$  octets, where  $M$  is the number of octets in the filter info field (41.2.9).

### 41.2.3 Status

The Status field contains a 4-bit error type, encoded in bits 1-4, and four individual Boolean flags, encoded in bits 5-8.

For all requests, the error type field is reserved for future standardization; it is transmitted as 0x0 and is ignored on receipt.

For all requests, the Boolean flags are interpreted as shown in Table 41-2.

**Table 41-2—Flag values in VDP requests**

Name	Bit position	Interpretation
M-bit	Bit 5	Indicates that the user of the VSI (e.g., the virtual station) is migrating (M-bit = 1) or provides no guidance on the migration of the user of the VSI (M-bit = 0). The M-bit is used as an indicator relative to the VSI that the user is migrating to.
S-bit	Bit 6	Indicates that the VSI user (e.g., the virtual station) is suspended (S-bit = 1) or provides no guidance as to whether the user of the VSI is suspended (S-bit = 0). A keep-alive Associate request with S-bit = 1 can be sent when the VSI user is suspended. The S-bit is used as an indicator relative to the VSI that the user is migrating from.
Req/Ack	Bit 7	Set to 0 to indicate that the TLV contains a request.
Reserved	Bit 8	Reserved for future standardization.

NOTE—The M-bit is restored to 0 when migration has stopped, either because the migration has succeeded, or it has failed. The S-bit is restored to 0 when the VSI user is no longer suspended.

For all responses, the value of the error type indicates the outcome of the request, as shown in Table 41-3, and the Boolean flags are interpreted as shown in Table 41-4.

### 41.2.4 VSI Type ID (VTID)

The VTID is an integer value used to identify a VSI Type.

NOTE—One VTID could describe the VSI Type configuration of multiple VSIs. A VTID is only unique per VSI manager ID.

### 41.2.5 VSI Type Version

The VSI Type Version is an integer identifier that allows a VSI Manager Database to contain multiple versions of a given VSI Type.

**Table 41-3—Error types in VDP responses**

Name	Value	Interpretation
Success	0x0	The VDP Request was successfully completed by the bridge.
Invalid Format	0x1	The VDP TLV format is invalid.
Insufficient Resources	0x2	The bridge does not have enough resources to complete the VDP operation successfully.
Unable to contact VSI manager	0x3	The Bridge was unable to contact the VSI manager.
Other failure	0x4	The operation failed for some other reason.
Invalid VID, GroupID, or MAC address	0x5	The operation failed because the VID, GroupID, or MAC address was invalid.
Reserved	0x6 - 0xF	Reserved for future standardization.

NOTE—"Success" is only interpreted as success by the state machines if all of the flag bits (Table 41-4) are zero.

**Table 41-4—Flag values in VDP responses**

Name	Bit position	Interpretation
Hard error	Bit 5	Set to 1 to indicate that the operation failed, and if the same operation is re-tried, it is likely to fail in the same way.
Keep	Bit 6	Set to 1 to indicate that the command was rejected and the state prior to the requested command has been kept.
Req/Ack	Bit 7	Set to 1 to indicate that the TLV contains a response.
Reserved	Bit 8	Reserved for future standardization.

#### 41.2.6 VSIID format

The VSIID format field defines the format of the VSIID field that follows it (41.2.7). The possible values of VSIID format are as shown in Table 41-5.

#### 41.2.7 VSIID

The VSIID is an identifier for the VSI instance. A VSIID is generated when a VSI instance is created. The VSIID remains constant during virtual station migration. The format of the VSIID is determined by the VSIID format field (41.2.6). In cases where the format uses an identifier value that has fewer than 16 octets, the VSIID field is packed out to 16 octets with leading octets containing zeroes.

#### 41.2.8 Filter Info format

The Filter Info format field determines the format of the Filter Info field (41.2.9). The Filter Info formats defined by this standard are shown in Table 41-6.

**Table 41-5—VSIID format values**

Name	Description	Value
IPv4	An IPv4 address, encoded as specified in IETF RFC 4291.	0x01
IPv6	An IPv6 address, encoded as specified in IETF RFC 4291.	0x02
MAC	An IEEE 802 MAC address (6 octets), with 10 leading octets containing all zeroes.	0x03
Local	The interpretation of the VSIID is locally defined.	0x04
UUID	A UUID as specified in IETF RFC 4122.	0x05
Reserved	Reserved for future standardization.	0x00, 0x06 through 0xFF

**Table 41-6—Filter Info format values**

Format	Value
VID (41.2.9.1)	0x01
MAC/VID (41.2.9.2)	0x02
GroupID/VID (41.2.9.3)	0x03
GroupID/MAC/VID (41.2.9.4)	0x04
Reserved for future standardization	0x00, 0x05 through 0xFF

### 41.2.9 Filter Info field

The Filter Info field contains information from which a filter can be constructed. The filter is a set of VID values or a set of MAC/VID values. The MAC address in a MAC/VID value is an individual MAC address. The filter is applied to traffic transiting ports that do not have direct knowledge of the associated VSI, such as an EVB station-facing Bridge Port, in order to identify the traffic associated with a particular VSI. This allows such ports to apply a VSI Type to the traffic of an individual VSI. Other devices that have direct knowledge of the traffic associated with a VSI, for example devices that form a 1:1 relationship between a port and VSI, simply provide this information via management interfaces.

The Filter Info field can also contain information that is not part of the filter. In particular, the Filter Info field can contain GroupID values. Like the VID, the GroupID identifies a VLAN. When the number of VLANs in the network is less than 4095, each VLAN can be assigned a VID value that is global within the network. When the number of VLANs in the network exceeds 4094 a globally-scoped VID can no longer be

used to uniquely identify each VLAN. Instead, overlapping VIDs may be used in different regions of the network, and a per-region mapping between the global VLAN and the region-specific VID is maintained. In this case, the VLAN is uniquely and globally identified by a GroupID.

When VLANs are identified by GroupID, the station has knowledge of the GroupID but it does not, in general, know the corresponding VID to be used by traffic associated with the VLAN. The Bridge is aware of, or can obtain knowledge of, the VID associated with the specified GroupID. Thus, the station can send GroupID values to the Bridge via the Filter Info field of the VDP Request. The Bridge can map GroupID values to local VID values. The VID is included in the filter constructed by the Bridge and is returned with its corresponding GroupID to the station via the VDP Response.

NOTE 1—The mechanism by which the EVB Bridge determines the GroupID to local VID associations is outside the scope of this standard.

Additionally, the Filter Info field of a VDP TLV in a VDP Response can specify a Priority Code Point (PCP) value associated with any, or all, of the VID values carried by that VDP Response. The PCP value, if specified, is used by the EVB station as the default PCP value associated with the VSI and VID. The Filter Info field contains a PCP Significant (PS) bit associated with each PCP field, indicating whether the PCP field carries a PCP value (binary 1) or does not carry a PCP value (binary 0). If the PCP field carries a PCP value, then the EVB station can adopt that value as the default PCP value associated with the VSI and VID. When sending data frames associated with a given VSI and VID, the EVB station can determine the PCP value associated with each frame by using an algorithm local to the EVB station. For example, the PCP value can be based on the identity of an application associated with the frame as determined by examining higher layer information. For any given frame, it is possible that the algorithm does not provide a specific value of PCP. In such cases, the PCP field is assigned the value of the default PCP associated with the VSI and VID.

NOTE 2—Specification of a PCP value in the VDP Response does not imply that all frames sent by the EVB station, associated with the VSI and VID, carry the specified PCP. It implies only that, if the EVB station has no other information regarding the PCP value that should appear in that particular frame, then the specified default PCP value is used.

41.2.9.1 VID Filter Info format

The VID Filter Info format specifies that the Format Info field contains a set of VID values to be associated with the VSI instance (41.2.7). Figure 41-3 illustrates the VID Filter Info format.

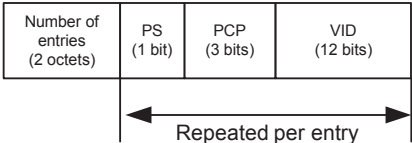


Figure 41-3—VID Filter Info format

The number of VID values in the sequence is specified by the Number of entries field.


The VID field can specify the null VID (see Table 9-2). When the null VID is specified, it is the only VID specified in the Filter Info field (ie., the Number of entries field is assigned the value 0x0001). Use of the null VID indicates that the set of VID values associated with the VSI is supplied by the Bridge. The Bridge can obtain VID values from the VSI Type whose identity is specified by the VSI Type information in the VDP Request. The set of VID values is returned to the station via the VDP Response.

NOTE—In the case that more than one VID is assigned, the policy that determines how the VIDs are used is outside the scope of this standard.

The Filter Info field can specify the wildcard VID (see Table 9-2). When the wildcard VID is specified, it is the only VID specified in the Filter Info field (ie., the Number of entries field is assigned the value 0x0001). Use of the wildcard VID value indicates that the VSI Type specified by the VDP Request is designated as the channel VSI Type applied to the EVB station-facing Bridge Port associated with the S-channel.

#### 41.2.9.2 MAC/VID Filter Info format

The MAC/VID Filter Info format indicates that the Format Info field specifies a sequence of MAC/VID value pairs to be associated with the VSI instance (41.2.7). Figure 41-4 illustrates the MAC/VID Filter Info format of the Filter Info field.

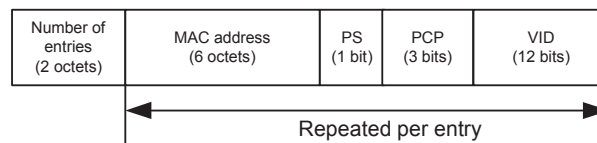

**Figure 41-4—MAC/VID filter format**


The number of MAC/VID pair values is specified by the field Number of Filter Info entries. Each MAC/VID pair value carries a 6-octet individual MAC address and a 2-octet VID value.

The Filter Info field can specify the null VID for any entry. Use of the null VID indicates that the VID value is supplied by the Bridge.

#### 41.2.9.3 GroupID/VID Filter Info format

The GroupID/VID Filter Info format indicates that the Format Info field specifies a sequence of GroupID/VID pairs to be associated with the VSI instance (41.2.7).

Figure 41-5 illustrates the GroupID/VID Filter Info format of the Filter Info field.

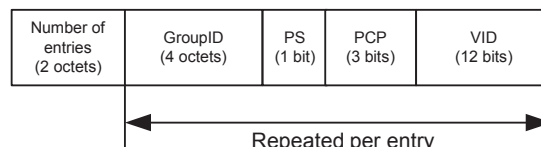

**Figure 41-5—GroupID/VID filter format**


The number of GroupID/VID pairs is specified by the Number of entries field.

The null VID (see Table 9-2) can be used in a GroupID/VID pair when the GroupID/VID filter format is specified in the VDP Request. In this case, the Bridge is expected to supply the corresponding local VID value in the VDP Response. For this purpose, the Bridge maintains, or has access to, the mapping between GroupID and local VID.

#### 41.2.9.4 GroupID/MAC/VID Filter Info format

The GroupID/MAC/VID Filter Info format indicates that the Filter Info field specifies a sequence of GroupID/MAC/VID triples to be associated with the VSI instance (41.2.7). Figure 41-6 illustrates the GroupID/MAC/VID Filter Info format of the Filter Info field.

The number of GroupID/MAC/VID triples is specified by the value of the Number of entries field. The null VID (see Table 9-2) can be used in a GroupID/MAC/VID triple when the GroupID/MAC/VID filter format is specified in the VDP Request. In this case, the Bridge is expected to supply the corresponding local VID

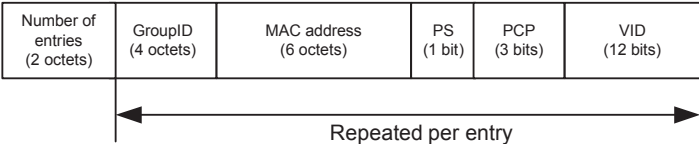

**Figure 41-6—GroupID/MAC/VID filter format**

value in the VDP Response. For this purpose, the Bridge maintains, or has access to, the mapping between GroupID and local VID.

**41.2.10 VDP TLV type and Status semantics**

The following subclauses define the semantics associated with each VDP TLV type.

**41.2.10.1 Pre-Associate**

The Pre-Associate TLV type is used to pre-associate a VSI instance with a bridge port. The bridge validates the request (see below) and returns a failure Status in case of errors. Successful pre-association does not imply that the VSI Type will be applied to any traffic flowing through the VSI. The pre-associate enables faster response to an associate, by allowing the bridge to obtain the VSI Type prior to an association.

NOTE—If the VSI Type changes without a corresponding change to its version, then inconsistent behavior can result.

**41.2.10.2 Pre-Associate with Resource Reservation**

Pre-Associate with Resource Reservation involves the same steps as Pre-Associate (41.2.10.1), but on successful pre-association also reserves resources in the Bridge to prepare for a subsequent Associate request.

**41.2.10.3 Associate**

The Associate TLV Type creates and activates an association between a VSI instance and a bridge port. The Bridge allocates any required bridge resources for the referenced VSI. The Bridge activates the configuration for the VSI Type ID. This association is then applied to the traffic flow to/from the VSI instance.

NOTE—The mechanism used by a Bridge to determine the required resources associated with a VSI Type ID is outside the scope of this standard.

For a given VSIID, a station may issue an Associate without having previously issued a Pre-Associate or Pre-Associate with Resource Reservation. During normal operations a VSI instance is associated on only one port. During network transitions (e.g. virtual station migration) a VSI instance might be associated with more than one port.

If a Pre-Associate or a Pre-Associate with Resource Reservation had previously been received for a given VSI instance, the Bridge establishes the association and allocates resources based only on the information contained in the Associate TLV. Any resources that had been reserved in order to satisfy a previous Pre-Associate with Resource Reservation, and that are not required in order to establish the association as specified in the Associate, are released.

1       **41.2.10.4 De-Associate**

2  
3       The de-associate TLV Type is used to remove an association between a VSI instance and a bridge port. Pre-  
4       Associated and Associated VSIs can be de-associated. De-associate releases any resources that were  
5       reserved as a result of prior Associate or Pre-Associate operations for that VSI instance.


6  
7       A de-associate can be initiated either by the station or the Bridge. In the latter case, the Bridge sends a de-  
8       associate TLV as if it was a response to a request from the station.

9  
10      NOTE 1—A Bridge could, for example, issue a de-associate as a consequence of changes in the bridge’s status or  
11      configuration.

12  
13      NOTE 2—The result of the above semantics is that a de-associate can be initiated at any time and by either party.

14  
15       **41.3 Organizationally defined TLV definitions**

16  
17       Figure 41-7 illustrates the format of the organizationally defined TLV.

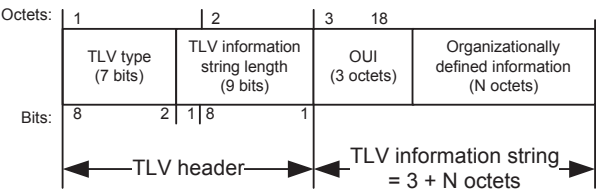

26       **Figure 41-7—Organizationally defined TLV**

27  
28       The organizationally defined TLV field definitions are contained in 41.3.3 and 41.3.4.

29  
30       **41.3.1 TLV type**

31  
32       The TLV type field takes the value shown in Table 41-1 for the organizationally defined TLV.

33  
34       **41.3.2 TLV information string length**

35  
36       This field contains the length of the TLV information string, which is 3 + N octets, where N is the number of  
37       octets in the organizationally defined information field (41.3.4).

38  
39       **41.3.3 Organizationally unique identifier (OUI)**

40  
41       Identifies the organization that is responsible for defining the content of the organizationally defined  
42       information field (41.3.4). The value of the OUI field is an OUI (see IEEE Std 802) assigned to that  
43       organization by the IEEE registration authority.

44  
45       **41.3.4 Organizationally defined information**

46  
47       The content and interpretation of this field is specified by the organization that owns the OUI value  
48       contained in the OUI field (41.3.3).

49  
50       **41.4 Validation rules for VDP TLVs**

51  
52       The following rules apply to the validation of received ECPDUs that carry VDP TLVs:



- a) If the first TLV in the ECPDU is not a VSI manager ID TLV (41.1), then the entire ECPDU is discarded without further processing.
- b) If the ECPDU contains a TLV of a type that is not recognized by the implementation, then that TLV is discarded and is ignored by the VDP state machines.
- c) If a TLV extends past the physical end of the ECPDU, then that TLV is discarded.

## 41.5 VDP state machines

The station VDP state machine is defined in 41.5.3. A station that supports VDP shall support one instance of the station VDP state machine for each active VSI.

The Bridge VDP state machine is defined in 41.5.2. A Bridge that supports VDP shall support one instance of the Bridge VDP state machine for each active VSI.

### 41.5.1 State machine conventions

The notational conventions used in the specification of VDP are as stated in Annex E.

### 41.5.2 Bridge VDP state machine

The Bridge VDP state machine shall implement the function defined in Figure 41-8 and the attendant definitions in 41.5.4 through 41.5.7.


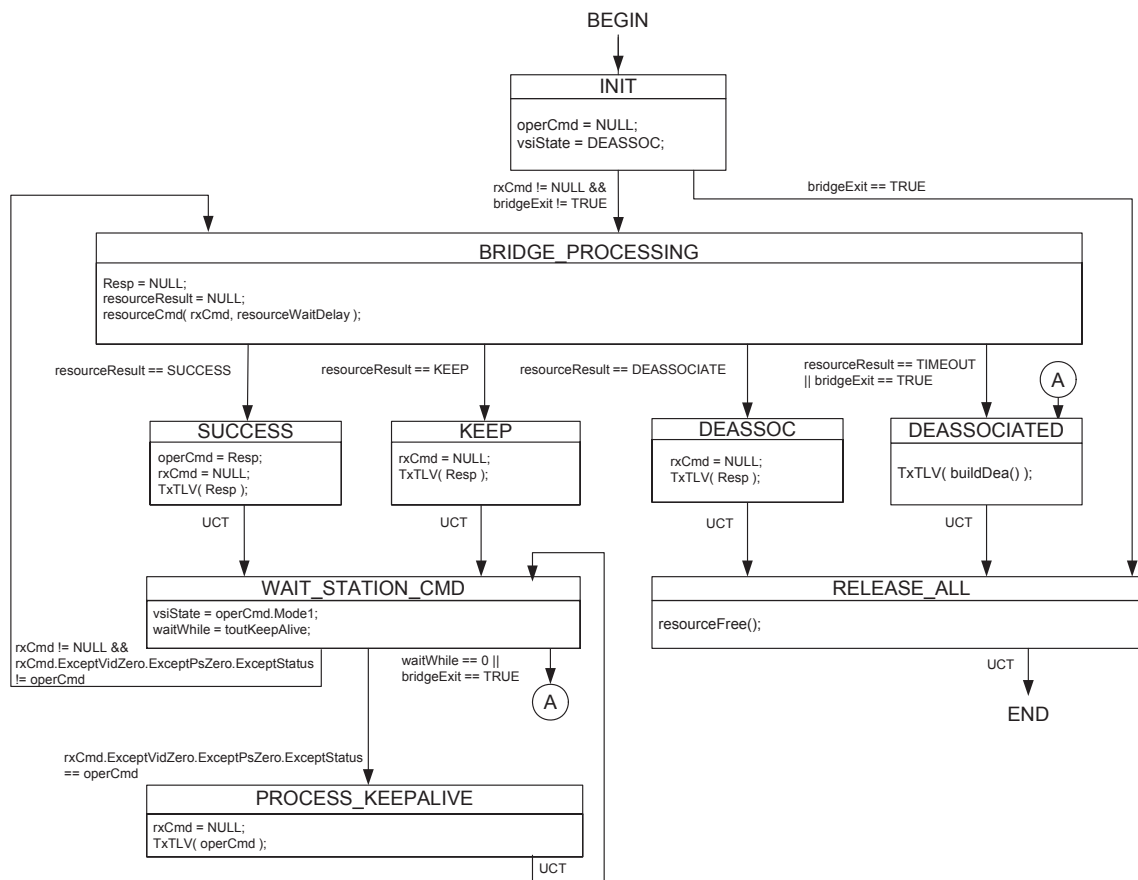


Figure 41-8—Bridge VDP state machine



### 41.5.3 Station VDP state machine

The station VDP state machine shall implement the function defined in Figure 41-9 and the attendant definitions in 41.5.4 through 41.5.7.

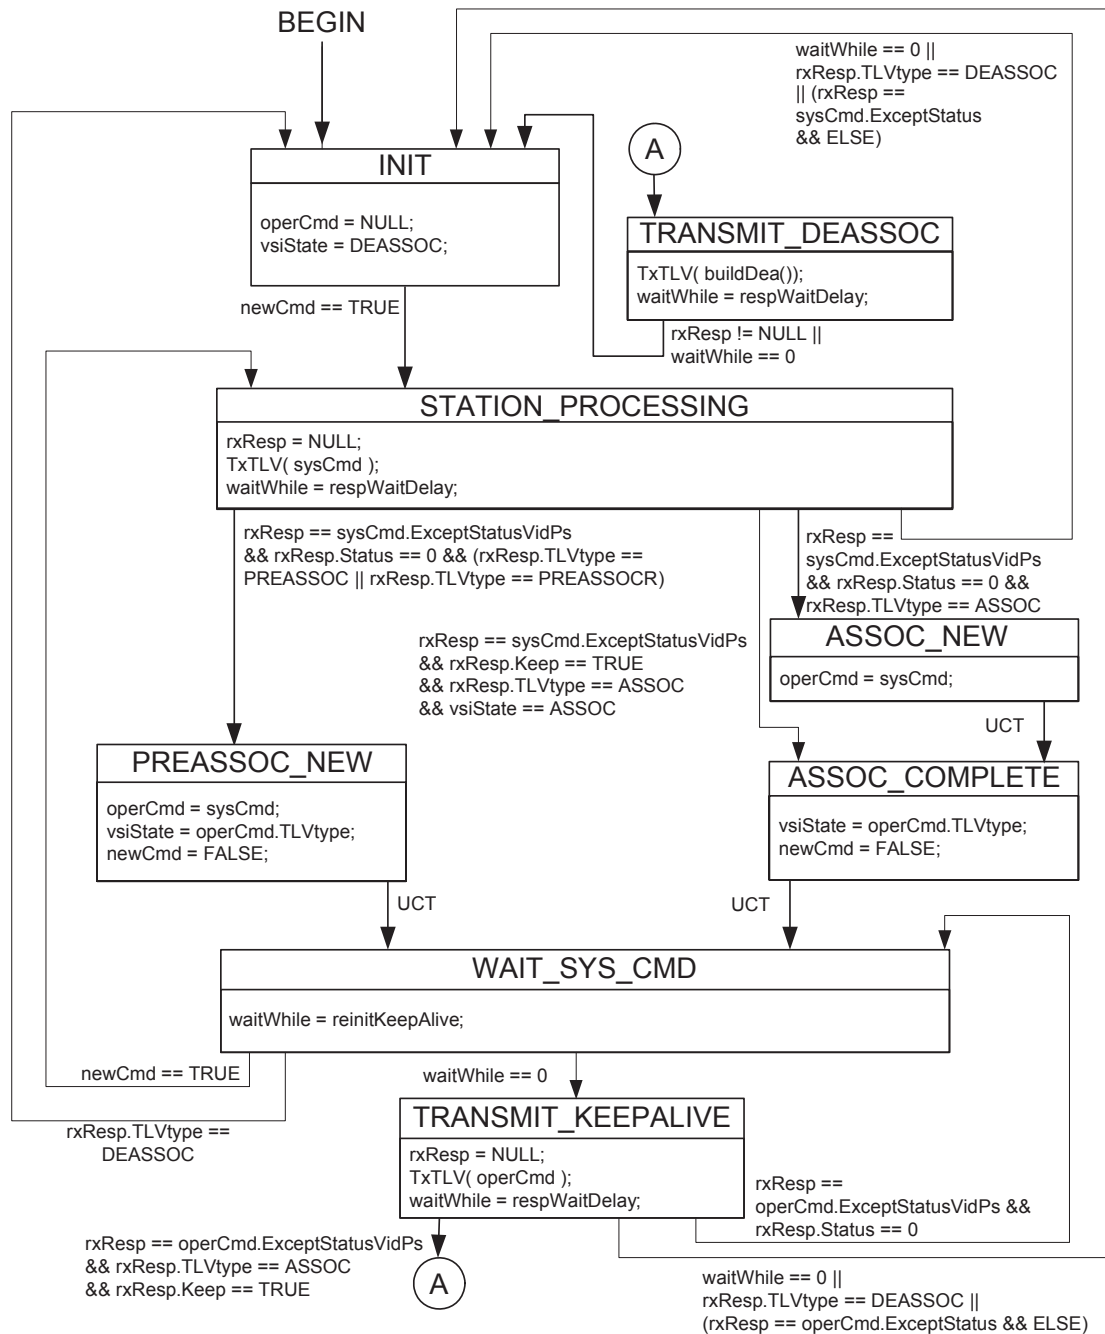

NOTE - The ".Except" notation used in some exit conditions is described in 41.5.6. In this state machine, "ExceptStatus.ExceptVidZero.ExceptPsZero" has been abbreviated to "ExceptStatusVidPs".

Figure 41-9—Station VDP state machine

#### 41.5.4 VDP state machine timers

A set of timers is used by the VDP state machines; these operate as countdown timers (i.e., they expire when their value reaches zero). These timers are 32-bit countdown timers. They

- a) Have a resolution of ten microseconds, with a tolerance of  $\pm 20\%$ .
- b) Are started by loading an initial integer value,  $n$ , where  $0 < n \leq 2^{31}$ .
- c) Are decremented by one per timer tick, as long as  $n > 0$ ; the interval between timer ticks is the same as the timer resolution.
- d) Represent the remaining time in the period.

NOTE—Where timers are used in the VDP state machines to initiate keep-alive messages, it is recommended that a small random component is added to the timer interval in order to avoid the possibility that timers associated with different VSIs become synchronized.

##### 41.5.4.1 waitWhile

An instance of the waitWhile timer exists for each instance of the station VDP state machine (41.5.3) and for each instance of the Bridge VDP state machine (41.5.2).

#### 41.5.5 VDP state machine variables and parameters

##### 41.5.5.1 bridgeExit

A Boolean signal from the Bridge. When TRUE, this variable indicates that the Bridge VDP state machine should exit.

##### 41.5.5.2 newCmd

This variable is set to TRUE by the system to indicate to the state machine that there is a command ready to be transmitted. The state machine sets newCmd FALSE when that command has been processed and is ready to process a further command.

##### 41.5.5.3 NULL

A null value. If NULL is assigned to a TLV variable it indicates that the variable contains no TLV.

##### 41.5.5.4 operCmd

The command TLV (the TLV that carried the current operating command - associate, pre-associate, or de-associate), at the station or bridge, or NULL if there is no current operating command.

##### 41.5.5.5 reinitKeepAlive

The value used to initialize the waitWhile timer (41.5.4.1) by the station VDP state machine in order to determine when to transmit a keep alive message. This value is derived from the value of the management variable `urpVdpOperReinitKeepAlive` (12.26.5), which is type `timer_exp`, by using `urpVdpOperReinitKeepAlive` as an exponent of 2. The variable `urpVdpOperReinitKeepAlive` is the larger of the values proposed by the station and Bridge.

The default value used by the station for `urpVdpOperReinitKeepAlive` is an exponent value of 20, representing a timer interval of about 10.5 seconds.

**41.5.5.6 resourceCmdResult**

This variable is used to record the result of a resourceCmd() procedure call (41.5.7.2). The possible result values are:

- a) Success.
- b) timeOut.
- c) Fail (insufficient resources).
- d) Fail (invalid format).
- e) Fail (other).

**41.5.5.7 resourceWaitDelay**

The value used to initialize the waitWhile timer (41.5.4.1) by the Bridge VDP state machine when the state machine is waiting for a response. This value is derived from the values of the management variable sbpVdpResourceWaitDelay (12.26.2), which is type timer exp, by using sbpVdpResourceWaitDelay as an exponent of 2. The variable sbpVdpResourceWaitDelay is the larger of the values proposed by the EVB station and EVB Bridge.

The default value used by the station and Bridge for sbpVdpResourceWaitDelay is an exponent value of 20, representing a timer interval of about 10.5 seconds.

**41.5.5.8 Resp**

A response TLV returned from the procedure resourceCmd() (41.5.7.2). Resp can be set to NULL prior to issuing resourceCmd(). The variable is always non-NULL when resourceCmd() completes.

**41.5.5.9 respWaitDelay**

The value used to initialize the waitWhile timer (41.5.4.1) by the station VDP state machine when the state machine is waiting for a response. This value is derived from the values of the management variables urpVdpResourceWaitDelay (12.26.5), ecpOperAckTimerInit (12.27) and ecpOperMaxTries (12.27). The value is expressed by the following equation:

$$\text{respWaitDelay} = 1.5 \times (2^{\text{urpVdpResourceWaitDelay}} + (2 \times \text{ecpOperMaxTries} + 1) \times 2^{\text{ecpOperAckTimerInit}})$$

NOTE—The factor of 1.5 allows for a 20% tolerance in the timer values.

The values of urpVdpResourceWaitDelay, ecpOperAckTimerInit and ecpOperMaxTries that are used are the larger of the values proposed by the station and Bridge.

The default value used by the station and Bridge is about 11.6 s. The default value for urpVdpResourceWaitDelay is an exponent of 20 representing a timer interval of about 10.5 seconds and for ecpOperAckTimerInit is an exponent of 14 representing a timer interval of about 164 milliseconds. The default value for ecpOperMaxTries is 3.

**41.5.5.10 rxCmd**

The last received command TLV, or NULL if no command TLV has been received. The rxCmd variable is updated only if it is NULL.

#### 41.5.5.11 rxResp

The last received response TLV. The rxResp variable contains the last received Resp TLV at the station or NULL. RxResp is NULL if no TLVs have been received or if the variable has been cleared by the state machine.

Note—It is possible to have a race condition when clearing rxResp since it can be updated asynchronously if the Bridge issues an unsolicited DEASSOC command. If the race condition occurs, the de-associate will occur as a result of the station timer expiring.

#### 41.5.5.12 sysCmd

A command TLV from the system or hypervisor, or NULL if there is no pending command. The VDP state machine is ready to accept a new command when the value of sysCmd is NULL.

#### 41.5.5.13 toutKeepAlive

The value used to initialize the waitWhile timer (41.5.4.1) by the Bridge VDP state machine in order to determine when to expect to receive a keep alive message. This variable is derived from the values of the management variables sbpVdpOperReinitKeepAlive (12.26.2), ecpOperAckTimerInit (12.27) and ecpOperMaxTries (12.27). The value is expressed by the following equation:

$$\text{toutKeepAlive} = 1.5 \times (2^{\text{sbpVdpOperReinitKeepAlive}} + (2 \times \text{ecpOperMaxTries} + 1) \times 2^{\text{ecpOperAckTimerInit}})$$

NOTE—The factor of 1.5 allows for a 20% tolerance in the timer values.

The values of sbpVdpOperReinitKeepAlive, ecpOperAckTimerInit and ecpOperMaxTries that are used are the larger of the values proposed by the EVB station and EVB Bridge.

The default value used by the station and Bridge is about 11.6 seconds. The default for sbpVdpOperReinitKeepAlive is an exponent of 20 representing a timer interval of about 10.5 seconds and for ecpOperAckTimerInit is an exponent of 14 representing a timer interval of about 164 milliseconds. The default value for ecpOperMaxTries is 3.

#### 41.5.5.14 vsiState

The current association state of the VDP state machine. This variable may take the values DEASSOC (de-associated), PREASSOC (pre-associated), PREASSOCR (pre-associated with resource reservation), or ASSOC (associated).

### 41.5.6 Command-Response TLV field references in state machines

The state machines can make use of the value of individual fields within the value of a TLV by using the following notation:

Tlv-variable-name.Field-name

In practice, only two Field-names are used in the state machines:

- a) TLVtype, which references the TLV type field of the TLV (41.2.1); and
- b) Keep, which references the Keep bit of the Status field in the TLV (41.2.3).

So, for example, a reference in the state diagram to sysCmd.Keep is a reference to the Keep bit of the Status field of the TLV value contained in the sysCmd variable.

The state machines also make use of the ability to compare TLV values for equality or inequality while ignoring a specific field, using the following notation:

Tlv-variable-name.ExceptField-name

This is interpreted as meaning “The value of the TLV contained in the Tlv-variable-name variable, ignoring the value of Field-Name in the comparison”.

The reserved Field-name “VidZero” is used to specify that if any VID in the Filter Info field (41.2.9.1) contains zero, then that VID is ignored in the comparison. The reserved Field-name “PsZero” is used to specify that if PS in the Filter Info field contains zero, then the PS and PCP are both ignored in the comparison.

Multiple fields can be excepted by concatenating ExceptField-name items with a separating period.

The value of the Flag bits (Table 41-2 and Table 41-4) are always ignored in field comparison operations.

#### **41.5.7 VDP state machine procedures**

##### **41.5.7.1 buildDea()**

The buildDea() procedure builds a DEASSOCIATE TLV for the VSI as the return parameter.

##### **41.5.7.2 resourceCmd(rxCmd, delay)**

This procedure makes a resource request from the Bridge, waits for a response, builds a response TLV and places it in the variable Resp. The response values reflect the requested resource action (PREASSOC, ASSOC, or DEASSOC), conditioned by return variable resourceResult which is set to NULL before calling the resourceCmd procedure and set to one of the following values by the procedure:

- a) SUCCESS
- b) KEEP
- c) DEASSOCIATE
- d) TIMEOUT

The response constructed by the procedure in the Resp variable can be PREASSOC, ASSOC, or DEASSOC with a Status, keep indicator and hard error indicator. For a successful completion the procedure will copy the rxCmd parameter into the Resp variable. If the Bridge is selecting VIDs based on GroupIDs, then the procedure also replaces zero VIDs with valid VIDs.

The delay parameter specifies how long the procedure should wait for a response. If the delay is exceeded, no response is received, and the VSI is not associated, then the procedure returns a value of TIMEOUT. If the delay is exceeded, no response is received and the VSI is associated, then the procedure returns a value of KEEP along with a Resp equal to the rxCmd parameter. If the delay is not exceeded, then the procedure returns SUCCESS, KEEP or DEASSOCIATE depending on the response received along with the rxCmd in the Resp and the Status set as follows:

- e) **DEASSOC:**  
The procedure returns DEASSOCIATE along with Resp.Status set to Success.
- f) **PREASSOC:**

- 1) If the request can be satisfied, the procedure returns SUCCESS along with Resp.Status set to Success.
  - 2) If the request can not be satisfied, the procedure returns DEASSOCIATE along with Resp.Status set to a code other than Success and the Resp.hard set to TRUE if a retry will not change the situation or FALSE if a retry might change the situation.
- g) **PREASSOCR:**
- 1) If the request can be satisfied, and the resources requested are available and reserved for this VSI, the procedure returns SUCCESS along with the Resp.Status set to Success.
  - 2) If the request can not be satisfied, or the resources are unavailable or not reserved for this VSI, the procedure returns DEASSOCIATE along with the Resp.Status code other than Success and the Resp.hard set to TRUE if a retry will not change the situation or FALSE if a retry might change the situation.
- h) **ASSOC:**
- 1) If the request can be satisfied, and the resources requested are available and enabled for this VSI, the procedure returns SUCCESS along with the Resp.Status set to Success.
  - 2) If the request can not be satisfied, or the resources are unavailable or not reserved for this VSI, and the VSI is not currently Associated, the procedure returns DEASSOCIATE along with the Resp.Status code other than Success and the Resp.hard set to TRUE if a retry will not change the situation or FALSE if a retry might change the situation.
  - 3) If the request can not be satisfied, or the resources are unavailable or not reserved for this VSI, and the VSI is currently Associated, the procedure returns KEEP along with the Resp.Status code other than Success and the Resp.hard set to TRUE if a retry will not change the situation or FALSE if a retry might change the situation.

NOTE—A deassociate can happen at any time, initiated by either party to an association.

#### **41.5.7.3 resourceFree()**

The resourceFree() procedure frees all resources associated with this VSI.

#### **41.5.7.4 TxTlv(tlv)**

The TxTlv() procedure causes the TLV passed in the tlv parameter to be transmitted.

*Insert the following text, tables, and figures as new Clause 42:*

## 42. S-Channel Discovery and Configuration Protocol (CDCP)

This clause provides an overview, detailed semantics, and state machines for the S-Channel Discovery and Configuration Protocol (CDCP).

### 42.1 CDCP discovery and configuration

CDCP is used to configure S-channels (see 40.2). S-channels are implemented in stations and bridges using a Port-mapping S-VLAN component (22.6.4). Figure 40-1 illustrates the use of S-channels.

When the Port-mapping S-VLAN components used to create S-channels exist, they can exchange un-S-tagged frames which are assigned to S-VID 1 and are considered to be assigned to the default S-channel, which has an S-channel identifier (SCID) of 1. The default S-channel is always un-S-tagged even when S-channels are enabled.

NOTE 1—SCIDs are locally assigned identifiers.

The S-channel configuration is determined by the bridge's capabilities and by requests made using CDCP described in this clause. The station requests S-channels using CDCP. CDCP in turn uses an LLDP TLV exchange to co-ordinate the creation and deletion of S-channels. The LLDP database used by CDCP is addressed using the Nearest non-TPMR Bridge address. The Port-mapping S-VLAN component filters both the Nearest Bridge and the Nearest non-TPMR Bridge addresses on all ports and passes the Nearest Customer Bridge address.

The S-channel identifier (SCID) value 1 and S-VID value 1 are always reserved for the exclusive use as the un-S-tagged default S-channel. CDCP reports the default S-channel in the CDCP TLV as the first SCID, S-VID pair (i.e. <1,1>). The Bridge shall not assign this S-VID except to the default S-channel.

NOTE 2—For the default S-channel, any QoS information that is necessary is extracted from the PCP bits of the C-tag.

### 42.2 CDCP state machine overview

CDCP requires each side of the configuration be assigned a role as a Bridge or a station. This is done by setting the AdminRole variable. In most cases the station or bridge role will not be settable, though the protocol allows for systems that can take either role. For CDCP to configure an S-channel, one side takes the station role and the other side takes the Bridge role. If both sides of the LAN have equipment configured as stations or as bridges the protocol will not configure S-channels.

NOTE—The role adopted by a given system can be fixed if the system is only capable of operating in a given role.

The CDCP state machine (Figure 42-1) operates on data contained in LLDP MIBs that is updated as a result of the reception of CDCP TLVs, exchanged using LLDP operating on the Nearest non-TPMR Bridge address. The structure of CDCP TLVs is defined in Annex D.2.14.

The configuration proceeds by the bridge providing the best match it can to the station's requested channels and configuration. The station makes the resource request, the bridge responds with its best matching resources, the station then goes operational and reports its running configuration to the bridge, and finally the bridge goes operational with the running configuration of the station.



In the event the station wishes to change its configuration it alters the request in its CDCP TLV and then follows the same process as above. If the 'B' loses its ability to support the current configuration it can alter the current configuration in its CDCP TLV at which time the station drops down to the resources supplied by the bridge.

42.3 CDCP configuration state machine

The notational conventions used in the specification of CDCP are as stated in Annex E.

In an implementation that supports the station role, the CDCP configuration state machine shall implement the function specified by the state diagram in Figure 42-1 and the attendant definitions in 42.4 and 42.5.


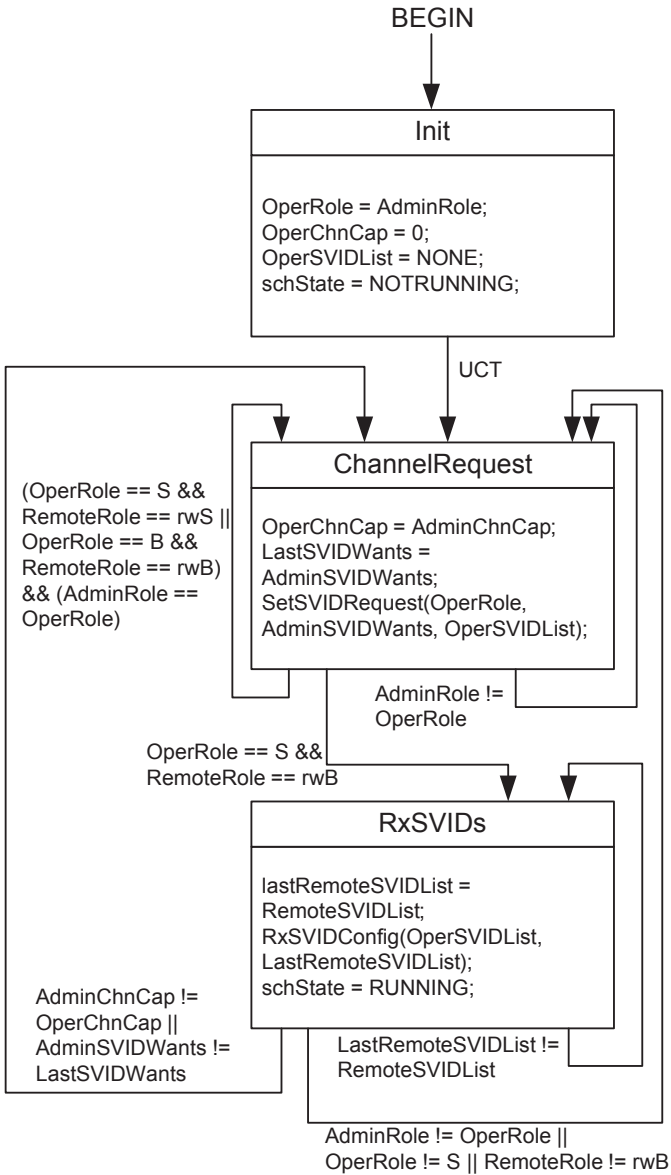


Figure 42-1—CDCP state machine - Station role



In an implementation that supports the Bridge role, the CDCP configuration state machine shall implement the function specified by the state diagram in Figure 42-2 and the attendant definitions in 42.4 and 42.5.

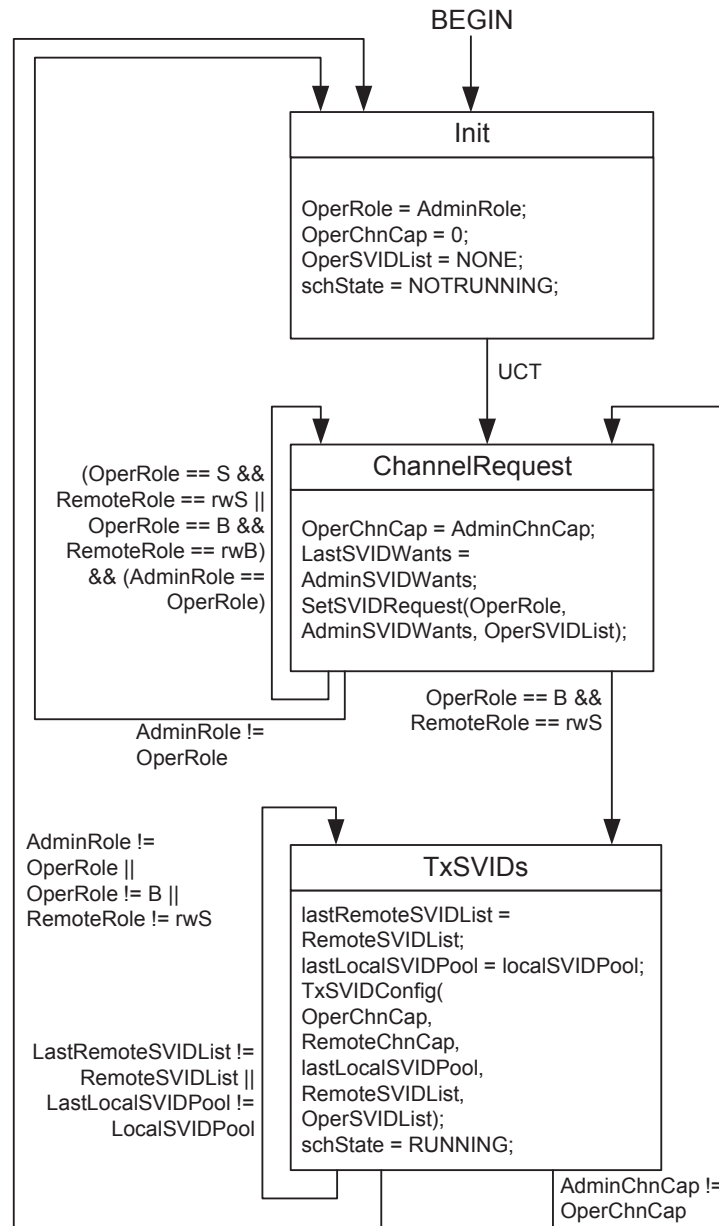

**Figure 42-2—CDCP state machine - Bridge role**

## 42.4 CDCP configuration variables

### 42.4.1 AdminChnCap

The administratively configured value for the Number of Channels supported parameter. This value is included as the ChnCap parameter in the CDCP TLV.

#### 42.4.2 AdminRole

The administratively configured value for the local port's role parameter. The value of AdminRole is not reflected in the CDCP TLV. The AdminRole can take the value S or B. S indicates the sender is unwilling to accept S-channels configuration (mode, number of channels supported, channel index) from its neighbor and that the sender is willing to accept S-VID assignments from the neighbor. Stations usually take the S role. B indicates the sender is willing to accept S-channels configuration (mode, number of channels supported, channel index) from its neighbor and that the sender is willing do the best it can to fill the S-VID requests from the neighbor. Bridges usually take the B role.

#### 42.4.3 AdminSVIDWants

The administratively configured value for (SCID, S-VID) pairs wanted by a station; it is not used by a bridge. The first value is always the pair (1, 1) for the default S-channel assignment. The S-channel numbers may be any valid number in the range 0-167. A 0 S-channel number indicates reserved space in the TLV. If the S-VID value is 0 it means the station is requesting any available S-VID. S-VID value 1 is reserved for exclusive use for the default S-channel S-VID. The AdminSVIDWants parameter is used to form the (SCID, S-VID) pairs in the CDCP TLV. This list is formed from the EVB station's S-channel interface table (12.26.4) and is used to build the EVB Bridge's S-channel interface table.

#### 42.4.4 LastLocalSVIDPool

A temporary copy of the LocalSVIDPool.

#### 42.4.5 LastRemoteSVIDList

Temporary local copy of the RemoteSVIDList. This variable is not included in the CDCP TLV. The LastRemoteSVIDList has the same syntax as RemoteSVIDList.

#### 42.4.6 LastSVIDWants

A local temporary copy of the AdminSVIDWants.

#### 42.4.7 LocalSVIDPool

The set of S-VIDs and bridge ports available for S-channel assignment. These are determined by both administrative resource assignments and by resource availability. The OperSVIDList for a B role is drawn from the LocalSVIDPool.

#### 42.4.8 OperChnCap

The current value for the ChnCap parameter. This value is included as the ChnCap parameter in the local CDCP TLV. The range for this variable is 1-167.

#### 42.4.9 OperRole

The current operational value of the Role parameter in the local port. This value is included as the Role parameter in the CDCP TLV and may take values S or B as described for AdminRole.

#### 42.4.10 OperSVIDList

The current value for (SCID, S-VID) assignments. This is the list of (SCID, S-VID) pairs included in the local CDCP TLV. The total size of the list cannot exceed 167 pairs. The list always includes the default S-channel pair (1,1). The valid range for each S-channel of this list is from 1-167. The valid range for each S-

VID in the list is from 0 to 0xffe. For the S role a S-VID of 0 indicates a request for a channel. For the B role an S-VID of 0 indicates a non-configured channel.

#### 42.4.11 RemoteChnCap

The current value for the ChnCap parameter. This value is included as the ChnCap parameter in the remote CDCP TLV. NULL means no remote CDCP TLV exists in the local LLDP database. The range for this variable is 1-167.

#### 42.4.12 RemoteRole

Indicates the value in the remote CDCP TLV role field. rrNull indicates either the TLV was not present in the last LLDP PDU or that no LLDP PDUs have been received. rwS and rwB indicate that the Role field was set in the CDCP TLV received and that it had a value of S or B respectively as described for the AdminRole variable.

#### 42.4.13 RemoteSVIDList

The current value for (SCID, S-VID) assignments. This is the list of (SCID, S-VID) pairs included in the remote CDCP TLV. NULL means no remote CDCP TLV exists in the local LLDP database. If the list is empty but the CDCP TLV is present its value is NONE. The total size of the list cannot exceed 167 pairs. The valid range for each S-channel of this list is from 1-167. The valid range for each S-VID in the list is from 0 to 0xffe. When the S-VID is value is 0 the S-VID is not configured. For the S role a S-VID of 0 indicates a request for a channel. For the B role an S-VID of 0 indicates a non-configured channel. The RemoteSVIDList is reflected within the EVB Bridge in the S-channel interface table (12.26.4)

#### 42.4.14 RemoteVersion

The current value for the remote S-channel Vers parameter. This value is included as the Vers parameter in the remote CDCP TLV. NULL means no remote CDCP TLV exists in the local LLDP database. Setting the value of this variable to VER1=001b enables S-channel setup; setting the value to 000b stops S-channel operation.

#### 42.4.15 schState

The current running state of the S-channel. The values for this variable are NOTRUNNING or RUNNING. This variable can be read using the management functionality defined in Clause 12.

### 42.5 CDCP configuration procedures

#### 42.5.1 SetSVIDRequest (OperRole, AdminSVIDWants, OperSVIDList)

This function creates the OperSVIDList placed in the Local LLDP database, as follows.

- a) If the OperRole for the equipment is B, then the OperSVIDList remains unchanged.
- b) If the OperRole for the equipment is S, the function compares the AdminSVIDWants with the OperSVIDList and amends the OperSVIDList, as follows.
  - 1) All active S-channels in the OperSVIDList that are in the AdminSVIDWants are kept active, and in addition, any channels not currently in the OperSVIDList are requested by including them in the OperSVIDList along with a 0 S-VID number. The OperSVIDList S-channel order is changed to match the AdminSVIDWants.
  - 2) Any S-channels in the OperSVIDList that are not in AdminSVIDWants are made inactive and are removed from the OperSVIDList.

#### 42.5.2 RxSVIDConfig (OperSVIDList, LastRemoteSVIDList)

This function creates the OperSVIDList placed in the Local LLDP database for an S role port.

The function compares the AdminSVIDWants with the LastRemoteSVIDList. For each AdminSVIDWants S-channel with an S-VID assignment in the LastRemoteSVIDList a (SCID, S-VID) pair is generated in the OperSVIDList. For each AdminSVIDWants S-channel without an S-VID assignment in the LastRemoteSVIDList a (SCID,0) pair is generated in the OperSVIDList. The OperSVIDList S-channel order is set to match the AdminSVIDWants.

#### 42.5.3 TxSVIDConfig (OperChnCap, RemoteChnCap, LastLocalSVIDPool, RemoteSVIDList, OperSVIDList)

This function creates the OperSVIDList placed in the Local LLDP database for a B role port.

First the function takes the smaller of the OperChnCap and RemoteChnCap and truncates the RemoteSVIDList to the smaller of the two.

A new OperSVIDList is created as follows:

- a) For each S-channel in the RemoteSVIDList with a (SCID, S-VID) pair in the OperSVIDList the (SCID, S-VID) remains unchanged unless the S-VID is no longer part of the LastLocalSVIDPool. If the S-VID is no longer in the pool a new one is selected if available. If no S-VID is available the (SCID, S-VID) pair will be deleted from the OperSVIDList.
- b) For each S-channel in the OperSVIDList without a (SCID, SVID) pair in the RemoteSVIDList the (SCID, SVID) pair will be deleted from the OperSVIDList.
- c) For a (SCID, SVID) pair in the remote list, where the S-VID is zero, an S-VID is assigned if it is available and the pair is inserted in the OperSVIDList. If an S-VID is not available, the pair is not inserted in the OperSVIDList.


*Insert the following text, tables, and figures as new Clause 43:*

### 43. Edge Control Protocol (ECP)

This clause provides an overview, detailed semantics, and state machines for the Edge Control Protocol (ECP).

#### 43.1 Edge control protocol operation

Figure 43-1 depicts, at a high level, ECP operation. In step 1, the upper layer protocol (ULP) passes an outgoing ULP Data Unit (ULPDU) to ECP by invoking a transmit request procedure. In step 2, the ULPDU, which for some ULPs (e.g., VDP) may contain a set of ULP TLVs, is transmitted and an ECP low level acknowledgement timer is set. The frame is not yet deleted from the transmit buffer until an acknowledgement (L-ACK in the diagram) is received for that ECPDU. In step 3, the arriving ECP frame is received into a receive buffer, where it is held until it is removed by an ECP indication procedure that passes the ULP Data Unit to the associated upper level protocol. In step 4, when the receive buffer is emptied, a L-ACK is sent to the sender. In step 5, if the L-ACK is received before the L-ACK timer expires, then the transmit buffer is cleared and ECP can process another ULP PDU through the ECP procedure. However, if the L-ACK timer expires before the L-ACK is received, then the frame in the transmit buffer is re-sent and the L-ACK timer is re-initialized. This timeout and re-sending can occur up to a maximum number of retries determined by the value of the *maxRetries* parameter of the transmit state machine. If this number of retries is reached and there is still no response, then the transmit buffer is cleared, a failure counter is incremented, and the transmit state machine is then ready to process another ULP PDU. There is no indication to the ULP that a transmission failure has occurred; it is the ULP's responsibility both to detect the failure condition and to recover from it in an appropriate way.

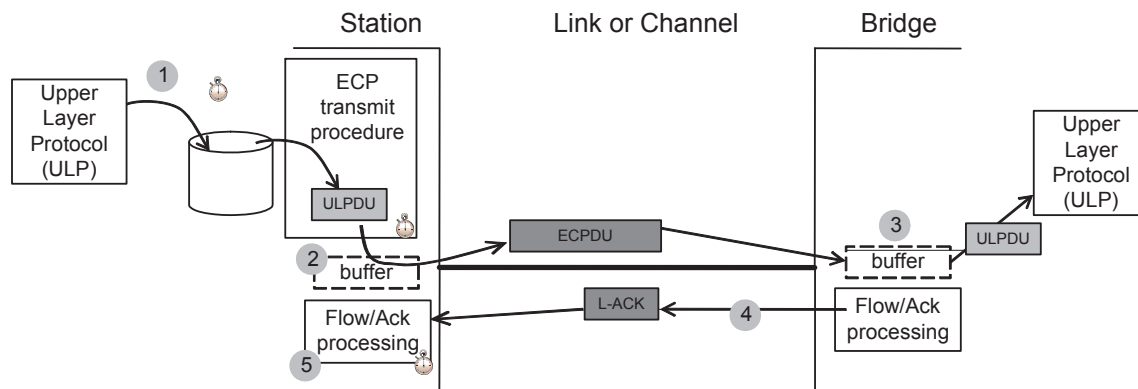

**Figure 43-1—Example ECP exchange**

ECP is intended to operate between two peers over an IEEE 802 LAN. ECP delivers the following service characteristics:

- Reliable delivery of ULP PDUs, resilient against frame loss. The value of the *maxRetries* parameter determines the number of sequential lost frames that the protocol can sustain.
- Delivery of ULP PDUs to the recipient ULP in the order that they were transmitted by the sending ULP.
- Delivery of a single copy of each ULP PDU to the recipient.
- Flow control that provides protection against buffer overrun on the receive side.

## 43.2 Edge Control Sublayer Service (ECSS)

Two service primitives model the hand-off of data units between the ULP and ECP: ECP\_UNITDATA.request and ECP\_UNITDATA.indication.

ECP\_UNITDATA.request (ulptype, ulpdu)

The ECP\_UNITDATA.request primitive is invoked by the ULP to notify ECP that a ULDPDU is ready to be transmitted. The **ulpdu** parameter is the ULDPDU that the ULP wishes to transmit. The **ulptype** parameter identifies the type of the ULP (see 43.3.3).

NOTE—For example, for VDP the ULDPDU consists of a set of VDP TLVs passed to ECP for transmission. The maximum size of the ULDPDU, and therefore the set of TLVs that it can contain, is determined by the maximum SDU size supported by the underlying MAC (see 6.5.8).

ECP\_UNITDATA.indication (ulptype, ulpdu)

The ECP\_UNITDATA.indication is invoked by ECP to indicate a ULDPDU has been received and is available for ULP processing. The **ulpdu** parameter is the ULDPDU that has been received. The **ulptype** parameter identifies the type of the ULP, as indicated in the received ECPDU (see 43.3.3).

## 43.3 Edge control protocol (ECP) and state machine

### 43.3.1 State machine conventions

The notational conventions used in the specification of ECP are as stated in Annex E.

### 43.3.2 Overview

There are two state machines used by each ECP instance: the ECP transmit state machine (43.3.4) and the ECP receive state machine (43.3.5). A Bridge Port that supports ECP shall support one instance of the ECP transmit state machine and one instance of the ECP receive state machine.

Initialization of the transmit and receive state machines occurs when portEnabled (43.3.7.5) is FALSE, or when a BEGIN global event occurs. The transmit state machine transmits an ECPDU in response to an ECP\_UNITDATA.request from the ULP that indicates there is a PDU ready to be transmitted. The PDU is transmitted with a sequence number that is used by the (remote) receive state machine in a responding acknowledgement ECPDU. If no acknowledgement with the correct sequence number is received within a defined time period, and if the maximum number of retries has not been reached, the transmit state machine re-transmits the ECPDU. If the maximum number of retries is exceeded, or if an acknowledgement is received that matches the last sequence number sent, then the transmit state machine increments the sequence number and waits for the next ECP\_UNITDATA.request.


NOTE—The sequence number for the first ECPDU transmitted after a state machine initialisation (which occurs when BEGIN is TRUE or portEnabled [43.3.7.5] is FALSE) is an implementation choice; for example, it could be a pre-determined number, a random number, or it could continue the sequence from the last sequence number used.

When the first ECPDU is received following initialization, the receive state machine initializes its local record of the last sequence number received to be one less than the sequence number in the received ECPDU. This record of the last sequence number received allows the state machine to detect whether the received ECPDU has been received already (current and last sequence numbers match) or this is a new ECPDU (current and last sequence numbers differ). In both cases, the receive state machine sends an acknowledgement ECPDU, using the current sequence number. In the case that the received ECPDU is new,

the last received sequence number is updated to reflect the sequence number of the received ECPDU, and an ECP\_UNITDATA.indication is sent to the ULP to pass the contents of the ECPDU to the service user.

**43.3.3 Edge control protocol data unit (ECPDU)**

This subclause specifies the format of a ECPDU, along with the header that is added to and removed from ECP frames by the ECP function. The ECP header allows each ECPDU from the sender to be identified through a sequence number, which the receiver acknowledges by sending a ECP Acknowledgement frame. The format of the ECPDU is illustrated in Figure 43-2.

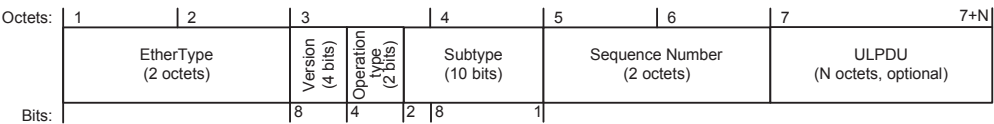

**Figure 43-2—ECPDU structure**

The destination address of the Ethernet frame that contains a ECPDU is specified by the ULP. The address used is either an individual MAC address or one of the reserved addresses specified in Table 8-1.

The source address shall be the individual MAC address of the sending station or port.

The fields of the ECPDU are defined in the following subclauses.

**43.3.3.1 EtherType**

A 16-bit field that contains the EtherType assigned for use by ECP (89-40).

**43.3.3.2 Version**

A 4-bit field that identifies the protocol version. The version shall be 0x01.

**43.3.3.3 Operation type**

A 2-bit field that identifies the operation type:

- a) ECP request (0x0).
- b) ECP acknowledgement (0x1).

**43.3.3.4 Sub-type**

A 10-bit field that defines the ULP type included in the PDU. For ACKs the sub-type is ignored at the station. The sub-type used by VDP is as shown in Table 43-1.

**Table 43-1—ECP sub-types**

Use	Reference	Sub-type
VDP	Clause 41	0x0001
Port Extender Control and StatusProtocol (PE CSP)	IEEE P802.1BR	0x0002
Reserved for future standardization		All other values



### 43.3.3.5 Sequence number

A 2-octet field that identifies the sequential order of the PDU, with respect to other ECPDUs. The starting sequence number can start anywhere for the first ECPDU, but the sequence number for each subsequent new request ECPDU is incremented by 1 modulo 65536.

NOTE—The sequence numbers used by each instance of the ECP transmit state machine are independent of each other.

### 43.3.3.6 ULDPDU

This field contains an upper layer protocol data unit (ULPDU) if the operation type in the Mode field is ECP request; the field is absent if the operation type is ECP acknowledgement.

## 43.3.4 ECP transmit state machine

The ECP transmit state machine shall implement the function specified by the state diagram in Figure 43-3 and the attendant definitions in 43.3.6 through 43.3.8.

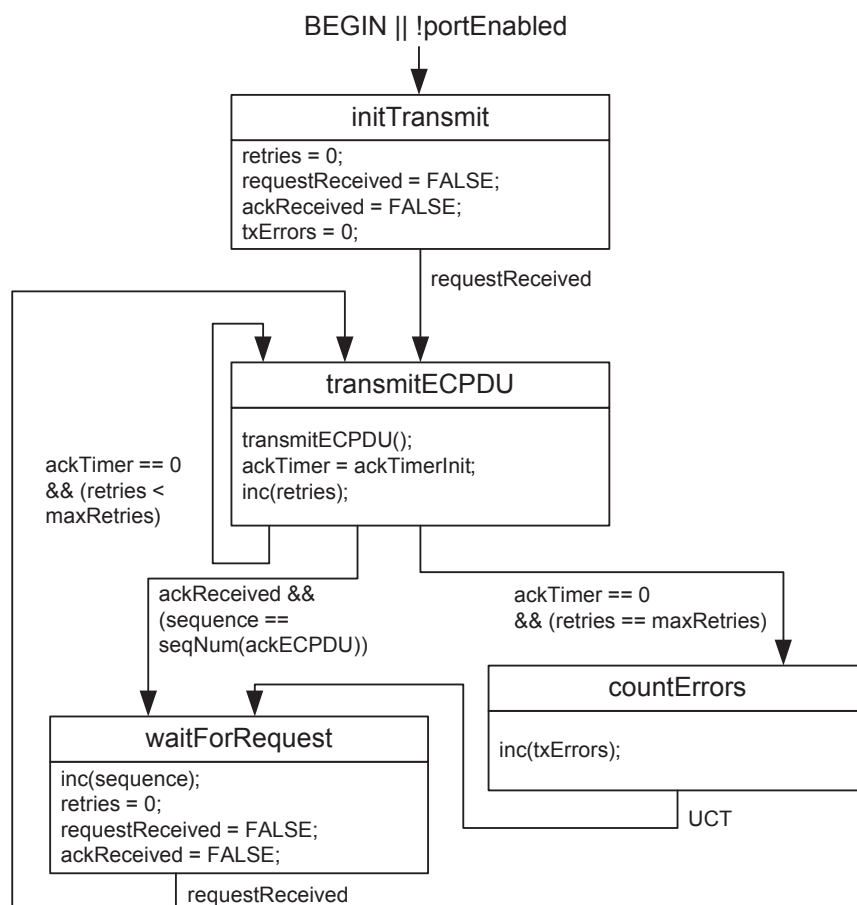


Figure 43-3—ECP transmit state machine

### 43.3.5 ECP receive state machine

The ECP receive state machine shall implement the function specified by the state diagram in Figure 43-4 and the attendant definitions in 43.3.6 through 43.3.8.



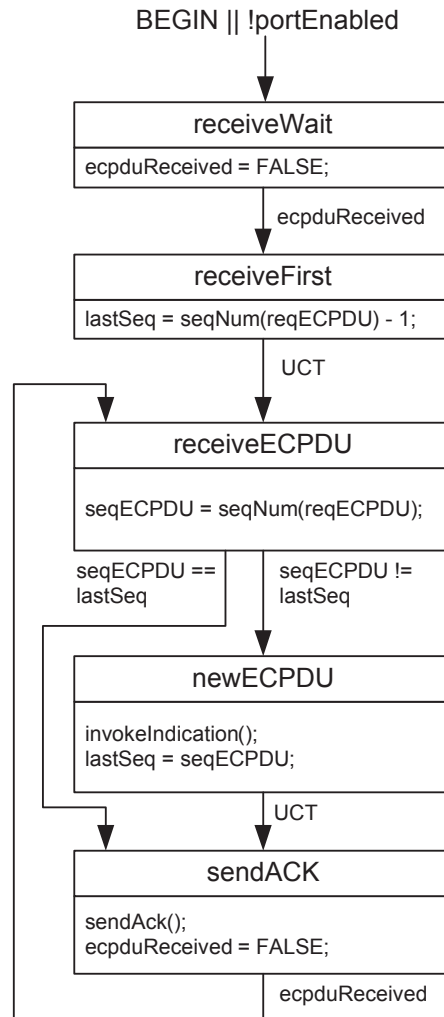


Figure 43-4—ECP receive state machine

### 43.3.6 ECP state machine timers

A set of timers is used by the ECP state machines; these operate as countdown timers (i.e., they expire when their value reaches zero). These timers are based on the Timer Exp data type (12.3). They

- Have a resolution of ten microseconds, with a tolerance of  $\pm 20\%$ .
- Are started by loading an initial integer value,  $n$ , where  $0 < n \leq 2^{31}$ .
- Are decremented by one per timer tick, as long as  $n > 0$ ; the interval between timer ticks is the same as the timer resolution.
- Represent the remaining time in the period.

#### 43.3.6.1 ackTimer

The ackTimer is used to determine how long the transmit state machine will wait for an acknowledgement PDU to be received before it either retries a transmission or aborts a transmission due to too many retries. This timer is initialized using the value of ackTimerInit determined as stated in D.2.13.6.

### **43.3.7 ECP state machine variables and parameters**

#### **43.3.7.1 ackReceived**

This Boolean variable is set to TRUE when an ECPDU is received with a MODE field indicating that the PDU is an ACK. The variable is set FALSE by the ECP transmit state machine once the ACK has been processed.

#### **43.3.7.2 ecpduReceived**

This Boolean variable is set to TRUE when an ECPDU is received with a MODE field indicating that the PDU is a request. The variable is set FALSE by the ECP receive state machine once the request has been processed and the ACK has been sent.

#### **43.3.7.3 lastSeq**

This integer variable is used to record the previous received sequence number.

#### **43.3.7.4 maxRetries**

This integer variable defines the maximum number of times that the ECP transmit state machine will retry a transmission if no ACK is received. The default value of maxRetries is 3; this variable can be changed by management as documented in 12.26.2. The value is derived from ecpOperMaxTries, Table 12-26.

#### **43.3.7.5 portEnabled**

This Boolean variable is set to the value of the MAC\_Operational parameter (6.6.2) for the Port.

#### **43.3.7.6 requestReceived**

This Boolean variable is set to TRUE when a ULP issues an ECP\_UNITDATA.request primitive. The variable is set FALSE by the state machine once the request has been processed.

#### **43.3.7.7 retries**

This integer variable counts the number of transmission retries that have been made for the current ECPDU.

#### **43.3.7.8 seqECPDU**

This integer variable is used to record the sequence number contained in the most recent received request ECPDU.

#### **43.3.7.9 sequence**

This integer variable is used to record the current sequence number that is used in transmitted request ECPDUs.

#### **43.3.7.10 txErrors**

This integer variable is used to count the number of times that the ECP transmit state machine has re-transmitted an ECPDU.

### 43.3.8 ECP state machine procedures

#### 43.3.8.1 inc(counter)

This procedure increments the counter variable by 1 modulo 65536.

#### 43.3.8.2 transmitECPDU()

This procedure causes an ECPDU to be transmitted, using the PDU structure defined in 43.3.3. The sequence number field is set to the least significant 16 bits of the current sequence number contained in the sequence variable (43.3.7.9). The mode field is set to ECP request. The ULPDU field is set to the value of the ulpdu parameter of the request primitive. The subtype field is set to the value of the ulptype parameter of the request primitive.

#### 43.3.8.3 invokeIndication()

This procedure causes an ECP\_UNITDATA.indication primitive to be invoked in order to pass the contents of an incoming ECPDU to the ECP service user. The ulptype parameter carries the value of the ULP type carried in the ECPDU. The ulpdu parameter carries the value of the ULPDU field of the ECPDU.

#### 43.3.8.4 sendAck()

This procedure causes an ECPDU to be transmitted, using the PDU structure defined in 43.3.3. The sequence number field is set to the least significant 16 bits of the sequence number contained in the seqECPDU variable (43.3.7.8). The mode field is set to ECP acknowledgement. The ULPDU field is absent. The subtype field is set to the value of the ulptype parameter of the received request ECPDU.

#### 43.3.8.5 seqNum(pdu-type)

This procedure returns an integer value equal to the value of the most recently received request ECPDU (pdu-type = reqECPDU) or acknowledgement ECPDU (pdu-type = ackECPDU).

## Annex A (normative)

### PICS proforma—Bridge implementations<sup>9</sup>

#### A.5 Major capabilities

*Insert the following rows at the end of the table:*

EVB-B	Does the implementation support the functionality of an EVB Bridge?	O	5.22	Yes [ ]	No [ ]
EVB-S	Does the implementation support the functionality of an EVB station?	O	5.23	Yes [ ]	No [ ]

#### A.21 MVRP

*Change items MVRP1 and MVRP2 in A.21 as shown:*

MVRP1	Does the implementation support the exchange of MMRPDUs, using the generic MRPDU format defined in 11.2 to exchange <del>MMRPMVRP</del> -specific information, as defined in 10.12?	M	5.4.2, 10.8, 11.2	Yes [ ]
MVRP2	Is the <del>MMRPMVRP</del> Application supported as defined in 11.2?	M	5.4.2, 11.2	Yes [ ]

*Insert new A.32 through A.36 at the end of the clause, re-numbering if necessary, as shown:*

#### A.32 EVB Bridge

Item	Feature	Status	Reference	Support
	If EVB Bridge functionality (EVB-B in Table A.5) is not supported, mark N/A and ignore the remainder of this table.			N/A [ ]
EVB-B-1	Does the implementation comprise a single conformant C-VLAN component?	M	5.5, 5.6, 5.22	Yes [ ]
EVB-B-2	Is each externally accessible port capable of being configured as either a C-VLAN Bridge Port or a Station Facing Bridge Port (SBP)?	M	5.22, 40	Yes [ ]
EVB-B-3	Does the implementation support the functionality of a C-VLAN component?	M	5.5, 5.22	Yes [ ]

<sup>9</sup>Copyright release for PICS proformas: Users of this standard may freely reproduce the PICS proforma in this annex so that it can be used for its intended purpose and may further publish the completed PICS.

**A.32 EVB Bridge (continued)**

Item	Feature	Status	Reference	Support
EVB-B-4	Does the implementation support at least one SBP on the C-VLAN component?	M	5.22, 40	Yes [ ]
EVB-B-5	Does the implementation support the EVB status parameters for EVBMode = EVB Bridge?	M	5.22, 6.6.5	Yes [ ]
EVB-B-6	Does the implementation support an LLDP nearest Customer Bridge database including the EVB TLV on each SBP?	M	5.22, D.2.13	Yes [ ]
EVB-B-7	Does the implementation support ECP on each SBP?	M	5.22, 43	Yes [ ]
EVB-B-8	Does the implementation support the Bridge role of VDP on each SBP?	M	5.22, 41	Yes [ ]
EVB-B-9	Does the implementation support at least one Port-mapping S-VLAN component and associated UAP configured as specified in 40.2 (a)-(d)?	O	5.22, 22.6.4, 40.2 (a)-(d)	Yes [ ] No [ ]
EVB-B-10	Is each externally accessible port capable of being configured as an Uplink Access Port (UAP)?	O	5.22, 40	Yes [ ] No [ ]
EVB-B-11	Does the implementation support CDCP, as specified in Clause 42, operating in Bridge mode?	EVB-B-9:M	42, 42.3	Yes [ ] N/A [ ]
EVB-B-12	Does the implementation support the enhanced filtering utility criteria and not support the default filtering utility criteria (8.7)?	EVB-B-9:M	8.7	Yes [ ] N/A [ ]
EVB-B-13	Does the implementation support configuration of reflective relay on each SBP of the C-VLAN component?	O	5.22, 6.6.5, 8.6.1	Yes [ ] No [ ]
EVB-B-14	Does the implementation support management for the EVB components?	O	5.22, 12.4-12.12, 12.26	Yes [ ] No [ ]
EVB-B-15	Does the implementation support an SNMP management MIB module?	O	5.22, 17.7.15	Yes [ ] No [ ]
EVB-B-16	Does the implementation support assignment of VIDs to GroupIDs?	O	5.22, 41.2.9	Yes [ ] No [ ]
EVB-B-17	Does the implementation support the use of the M and S bits in VDP?	O	5.22, 41.2.3	Yes [ ] No [ ]
EVB-B-18	Does the Bridge reserve the S-channel identifier (SCID) value 1 and S-VID value 1 for the exclusive use as the un-S-tagged default S-channel?	M	42.1	Yes [ ]

**A.33 EVB station**

Item	Feature	Status	Reference	Support
	If EVB station functionality (EVB-S in Table A.5) is not supported, mark N/A and ignore the remainder of this table.			N/A [ ]
EVB-S-1	Does the EVB station comprise one or more conformant ER components?	M	5.6, 5.23.1	Yes [ ]
EVB-S-2	Is each externally accessible port capable of being configured as at least one of: - An Uplink Access Port (UAP); - An Uplink relay port (URP)?	M	5.23, 40	Yes [ ]
EVB-S-3	Is each DRP capable of attaching its ER to one or more VSIs?	M	5.23, 40	Yes [ ]
EVB-S-4	Is each URP capable of attaching its ER to a point-to-point LAN connecting the URP to a CAP, or to the LAN connecting to an EVB Bridge in the case where no Port-mapping S-VLAN component is present?	M	5.23, 40	Yes [ ]
EVB-S-5	Does the implementation support at least one ER?	M	5.23, 40	Yes [ ]
EVB-S-6	Does the implementation support at least one accessible URP?	M	5.23, 40	Yes [ ]
EVB-S-7	Does the implementation support the EVB status parameters for EVBMode = EVB station on each URP?	M	5.23, 6.6.5	Yes [ ]
EVB-S-8	Does the implementation support an LLDP Nearest Customer Bridge database including the EVB TLV on each URP of each ER?	M	5.23, D.2.13	Yes [ ]
EVB-S-9	Does the implementation support ECP on each URP of each ER?	M	5.23, 43	Yes [ ]
EVB-S-10	Does the implementation support the station role of VDP for each URP of each ER?	M	5.23, 41	Yes [ ]
EVB-S-11	Does the implementation support a Port-mapping S-VLAN component on each Port configured as a UAP, configured as specified in 40.2 (a)-(d)?	O	5.23, 22.6.4, 40.2 (a)-(d)	Yes [ ] No [ ]
EVB-S-12	Does the implementation support CDCP, as specified in Clause 42, operating in Station mode?	EVB-S-11:M	42, 42.3	Yes [ ] N/A [ ]
EVB-S-13	Does the implementation support the enhanced filtering utility criteria (8.7.2) and not support the default filtering utility criteria (8.7.1)?	EVB-S-11:M	8.7.1, 8.7.2	Yes [ ] N/A [ ]

**A.33 EVB station (continued)**

Item	Feature	Status	Reference	Support
EVB-S-14	Does the implementation support multiple ERs?	O	5.23, 40	Yes [ ] No [ ]
EVB-S-15	Does the implementation support management for the EVB components?	O	5.23, 12.26	Yes [ ] No [ ]
EVB-S-16	Does the implementation support an EVB station SNMP management MIB module?	O	5.23, 17.7.15	Yes [ ] No [ ]
EVB-S-17	Does the implementation support assignment of VIDs to GroupIDs?	O	5.23, 41.2.9	Yes [ ] No [ ]
EVB-S-18	Does the implementation support Support the use of the M and S bits in VDP?	O	5.23, 41.2.3	Yes [ ] No [ ]

## A.34 Edge relay

Item	Feature	Status	Reference	Support
	If EVB station functionality (EVB-S in Table A.5) is not supported, mark N/A and ignore the remainder of this table.			N/A [ ]
ERC-1	Does the ER conform to the relevant standard for the Media Access Control technology implemented at each Port in support of the MAC ISS, as specified in 6.6, 6.7, and 6.14?	M	6.6, 6.7, 6.14	Yes [ ]
ERC-2	Does the ER support the MAC Enhanced Internal Sublayer Service at each Port, as specified in 6.8 and 6.9?	M	6.8, 6.9	Yes [ ]
ERC-3	Does the ER recognize and use C-TAGs?	M	6.9	Yes [ ]
ERC-4	Does the ER relay and filter frames as described in 8.1 and specified in 8.5, 8.6, 8.7, and 8.8?	M	8.5, 8.6, 8.8	Yes [ ]
ERC-5	Does the ER support a PVID value, and configuration of at least one VID whose untagged set includes that Port, on each DRP that supports untagged and priority-tagged frames?	M	6.9, 8.8.2	Yes [ ]
ERC-6	Does the ER support setting the Acceptable Frame Types parameter to <i>Admit Only VLAN Tagged Frames</i> on the URP?	M	5.23.1, 6.9	Yes [ ]
ERC-7	Does the ER allow tag headers to be inserted, modified, and removed from relayed frames, as specified in 8.1 and Clause 9, as required by the value(s) of the Acceptable Frame Types parameter supported on each Port, and by the ability of each Port to transmit VLAN-tagged and/or untagged frames?	M	8.1, Clause 9	Yes [ ]
ERC-8	Does the ER support at least one FID?	M	6.6, 8.8.3, 8.8.8, 8.8.9	Yes [ ]
ERC-9	Does the ER allow allocation of at least one VID to each FID that is supported?	M	6.6, 8.8.3, 8.8.8, 8.8.9	Yes [ ]
ERC-10	Does the ER support exactly one URP supporting the parameters of 6.6.5 for EVBMode = EVB station?	M	5.23.1, 6.6.5, 40	Yes [ ]
ERC-11	Does the ER support one or more DRPs each supporting access to VSIs?	M	5.23.1, 40	Yes [ ]
ERC-12	Does the ER filter the Reserved MAC Addresses?	M	5.23.1, Table 8-1	Yes [ ]
ERC-13	Does the ER support more than one DRP?	O	5.23.1	Yes [ ]    No [ ]



**A.34 Edge relay (continued)**

Item	Feature	Status	Reference	Support
ERC-14	Does the ER support setting the Enable Ingress Filtering parameter (8.6.2) on each DRP?	ERC-13:M	5.23.1, 8.6.2	Yes [ ] N/A [ ]
ERC-15	Does the ER support setting the Enable Ingress Filtering parameter (8.6.2) on each URP?	ERC-13:M	5.23.1, 8.6.2	Yes [ ] N/A [ ]
ERC-16	Does the ER support the requirements of either a VEB ER or a VEPA ER?	M	5.23.1, 5.23.1.1, 5.23.1.2	Yes [ ]
ERC-17	Does the ER support a PVID value, and configuration of at least one VID whose untagged set includes that Port, if the URP supports untagged and priority-tagged frames?	O	6.9, 8.8.2	Yes [ ]
ERC-18	Does the ER comprise a single conformant C-VLAN component?	O	5.4	Yes [ ]    No [ ]
ERC-19	Does the ER support disabling of learning on each DRP?	O	5.23.1, 8.6.1	Yes [ ]    No [ ]
ERC-20	Does the ER support discarding frames with unregistered source addresses at each DRP?	O	5.23.1, 8.8.1	Yes [ ]    No [ ]
ERC-21	Does the ER support the operation of the learning process?	O	8.7	Yes [ ]    No [ ]

## A.35 VEB and VEPA edge relay components

Item	Feature	Status	Reference	Support
	If EVB station functionality (EVB-S in Table A.5) is not supported, mark N/A and ignore the remainder of this table.			N/A [ ]
VERC-1	Does the ER component support VEB functionality?	O.6	5.23.1.1	Yes [ ] No [ ]
VERC-2	Does the ER component support VEPA functionality?	O.6	5.23.1.2	Yes [ ] No [ ]
VERC-3	Does the ER component request that reflective relay service not be provided by setting adminReflectiveRelayRequest to FALSE?	VERC-1:M	5.23.1.1	Yes [ ] N/A [ ]
VERC-4	Does the VEPA ER disable learning on the URP?	VERC-2:M	5.23.1.2, 8.6.1	Yes [ ] N/A [ ]
VERC-5	Does the VEPA ER filter frames received at each URP that are destined to a DRP that originated the frame ?	VERC-2:M	5.23.1.2, 8.6.1	Yes [ ] N/A [ ]
VERC-6	Does the VEPA ER request reflective relay service by setting adminReflectiveRelayRequest to True?	VERC-2:O	5.23.1.2, 6.6.5	Yes [ ] N/A [ ]
VERC-7	Does the ER filter frames received at each DRP that are destined for the URP until reflective relay is enabled ?	VERC-2:O	5.23.1.2, 8.6.1.1	Yes [ ] No [ ] N/A [ ]
VERC-8	Does the ER forward frames as specified in 8.6.3.1?	VERC-2:M	5.23.1.2, 8.6.3.1	Yes [ ] N/A [ ]

**A.36 VDP, CDCP, and ECP**

Item	Feature	Status	Reference	Support
	If neither EVB station functionality (EVB-S in Table A.5) nor EVB Bridge functionality (EVB-B in Table A.5) is supported, mark N/A and ignore the remainder of this table.			N/A [ ]
VDP-1	Does the implementation support the Bridge VDP state machine as specified in Clause 41?	EVB-B:M	41, 41.5.2	Yes [ ]
VDP-2	Does the implementation support the Station VDP state machine as specified in Clause 41?	EVB-S:M	41, 41.5.3	Yes [ ]
CDCP-1	Does the implementation support the CDCP configuration state machine for the Bridge role, as specified in Clause 42?	EVB-B AND EVB-B-9: M	42, 42.3	Yes [ ] N/A [ ]
CDCP-2	Does the implementation support the CDCP configuration state machine for the station role, as specified in Clause 42?	EVB-S AND EVB-S-11: M	42, 42.3	Yes [ ] N/A [ ]
ECP-1	Does the implementation support the ECP transmit state machine as specified in Clause 43?	M	43, 43.3.4	Yes [ ]
ECP-2	Does the implementation support the ECP receive state machine as specified in Clause 43?	M	43, 43.3.5	Yes [ ]

## Annex D (normative)

### IEEE 802.1 Organizationally Specific TLVs

#### D.1 Requirements of the IEEE 802.1 Organizationally Specific TLV set

*Change the third paragraph as shown:*

The currently defined IEEE 802.1 Organizationally Specific TLVs specified in this standard are listed in Table D-1. Other standards can also define IEEE 802.1 Organizationally Specific TLVs. The “TLV set name” column identifies the TLV set to which each TLV belongs. Any additions or changes to these TLVs will be included in this annex.

*Delete the last row of Table D-1, insert two new rows at the end of the table, change the table title, and add the footnote and NOTE to the table, as shown:*

**Table D-1— IEEE 802.1 Organizationally Specific TLVs specified in this standard**

IEEE 802.1 subtype	TLV name	TLV set name	TLV reference	Feature clause reference
<del>08-FF</del>	<del>Reserved</del>		—	
<u>0D</u>	<u>EVB TLV</u>	<u>evbSet</u>	<u>D.2.13</u>	<u>D.2.13</u>
<u>0E</u>	<u>CDCP TLV</u>	<u>evbSet</u>	<u>D.2.14</u>	<u>D.2.14</u>

#### D.2 Organizationally Specific TLV definitions

*Insert the following paragraph:*

In the TLV definitions that follow, any fields that are labelled as “Reserved” are transmitted as zero and ignored on receipt.

*Insert new subclauses D.2.13 and D.2.14 as shown, following any existing subclauses that define TLVs, renumbering the subclauses, tables and figures as necessary.*

##### D.2.13 EVB TLV

The EVB TLV is used to:

- Advertise a station or bridge's EVB capabilities.
- Negotiate and activate common capabilities.

The EVB TLV is exchanged via LLDP and conforms to the LLDP TLV specification. The LLDP database carrying the EVB TLV is addressed using the Nearest Customer Bridge address. One LLDP database is built at the URP of each ER.

The EVB TLV allows setting the EVB Bridge's C-VLAN component Port to operate in reflective relay. Reflective relay is implemented by changing the active topology enforcement rules described in 8.6.1 to allow forwarding on the reception Bridge Port. When reflective relay is enabled on a given Bridge Port, that port is a potential transmission port for frames received on that port.

The EVB TLV structure is illustrated in Figure D-9.

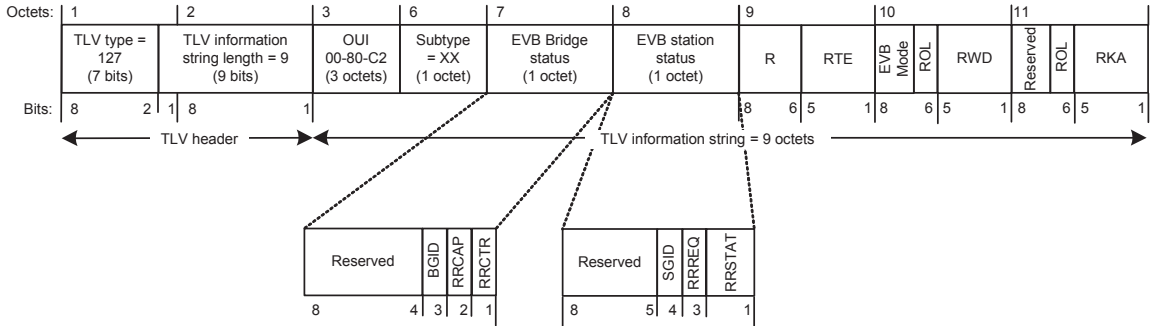


Figure D-9—EVB TLV format

The EVB TLV information string fields are as defined in D.2.13.1 through D.2.13.9.

D.2.13.1 OUI

The OUI used to identify the EVB TLV is the 802.1 OUI 00-80-C2.

D.2.13.2 Subtype

The subtype used to identify the EVB TLV is as shown in Table D-1.

D.2.13.3 EVB Bridge status

The EVB Bridge status field describes EVB capabilities that are supported by the EVB Bridge. If the sender of the TLV is an EVB Bridge (EVB Mode = EVB Bridge - see D.2.13.7), then the field reflects its own capabilities; if the sender of the TLV is an EVB station (EVB Mode = EVB station), then the field reflects the capabilities received from an attached EVB Bridge, or a value of zero if no TLV has been received from an attached EVB Bridge.

Each capability is represented by a single bit flag; a value of TRUE (1) indicates that the capability is supported, a value of FALSE (0) indicates that the capability is not supported. The capabilities are as defined in D.2.13.3.1 through D.2.13.3.3.

D.2.13.3.1 BGID

A value of TRUE indicates that the EVB Bridge wishes to control VID assignments and use the GroupID in VDP exchanges. A value of FALSE indicates that the EVB Bridge does not wish to make use of the Group ID in VDP exchanges.

If the EVB station sets SGID = TRUE, and the EVB Bridge also sets BGID = TRUE, then the EVB Bridge can control VID assignments and use the GroupID in VDP exchanges.

If the EVB station does not set SGID = TRUE, or the EVB Bridge does not set BGID = TRUE, then the EVB Bridge cannot control VID assignments or use the GroupID in VDP exchanges.

### **D.2.13.3.2 RRCAP**

The RRCAP flag indicates the state of the EVB Bridge's reflectiveRelayCapable parameter (6.6.5.2).

If the EVB Bridge's reflectiveRelayCapable parameter is TRUE, and a TLV has been received by the EVB Bridge from an attached EVB station in which the value of RRREQ (D.2.13.4.2) is also TRUE, then the value of the EVB Bridge's operReflectiveRelayControl parameter (6.6.5.2) shall be set to TRUE. Otherwise, the value of the EVB Bridge's operReflectiveRelayControl parameter (6.6.5.2) shall be set to FALSE.

### **D.2.13.3.3 RRCTR**

The RRCTR flag indicates the state of the EVB Bridge's operReflectiveRelayControl parameter (6.6.5.2).

### **D.2.13.4 EVB station status**

The EVB station status field describes EVB capabilities that are supported by the EVB station. If the sender of the TLV is an EVB station (EVB Mode = EVB station - see D.2.13.7), then the field reflects its own capabilities; if the sender of the TLV is an EVB Bridge (EVB Mode = EVB Bridge), then the field reflects the capabilities received from an attached EVB station, or a value of zero if no TLV has been received from an attached EVB station.

Each capability is represented by a single bit flag; a value of TRUE (1) indicates that the capability is supported, a value of FALSE (0) indicates that the capability is not supported. The capabilities are as defined in D.2.13.3.1 through D.2.13.3.3.

#### **D.2.13.4.1 SGID**

A value of TRUE indicates that the EVB station can support the use of the GroupID.

If the EVB station sets SGID = TRUE, and the EVB Bridge also sets BGID = TRUE, then the EVB Bridge can control VID assignments and use the GroupID in VDP exchanges.

If the EVB station does not set SGID = TRUE, or the EVB Bridge does not set BGID = TRUE, then the EVB Bridge cannot control VID assignments or use the GroupID in VDP exchanges.

#### **D.2.13.4.2 RRREQ**

The RRREQ flag indicates the state of the EVB station's adminReflectiveRelayRequest parameter (6.6.5.3).

#### **D.2.13.4.3 RRSTAT**

RRSTAT is a composite flag that indicates the state of the EVB station's operReflectiveRelayStatus parameter (6.6.5.3) as shown in Table D-2.

If a TLV has been received by the EVB station from an attached EVB Bridge in which the value of RRCTR (D.2.13.3.3) is TRUE, then the value of the EVB station's operReflectiveRelayStatus parameter (6.6.5.3) shall be set to TRUE. If a TLV has been received by the EVB station from an attached EVB Bridge in which the value of RRCTR (D.2.13.3.3) is FALSE, then the value of the EVB station's operReflectiveRelayStatus parameter (6.6.5.3) shall be set to FALSE. If no TLV has been received by the EVB station from an attached EVB Bridge, then the value of the EVB station's operReflectiveRelayStatus parameter (6.6.5.3) shall be set to Unknown.

**Table D-2—RRSAT flag values and meanings**

Bit 1	Bit 2	Meaning
TRUE	FALSE	operReflectiveRelayStatus is TRUE
FALSE	FALSE	operReflectiveRelayStatus is FALSE
TRUE	TRUE	operReflectiveRelayStatus is Unknown
FALSE	TRUE	operReflectiveRelayStatus is Unknown

**D.2.13.5 R**

This field carries the maxRetries value for the ECP state machine (43.3.7.4). Both sides use the largest of the two values of R. If no remote value is available, then the local value is used.

**D.2.13.6 Retransmission Exponent (RTE)**

RTE is an EVB link or S-channel attribute used to calculate the minimum ECPDU retransmission time, ackTimerInit. The value of ackTimerInit is calculated as:

$$10 \times 2^{\text{RTE}} \text{ micro-seconds}$$

Both sides use the largest of the two values of RTE for this calculation. If no remote value is available, then the greater of 2 ms and local value is used.

**D.2.13.7 EVB Mode**

The EVB Mode field represents the value of the EVBMode parameter (6.6.5) for the sender of the TLV, as shown in Table D-4.

**Table D-4—EVB Mode values**

EVBMode (6.6.5)	Field value
Not Supported	0
EVB Bridge	1
EVB station	2
Reserved for future standardization	3

**D.2.13.8 Remote or Local (ROL) and Resource Wait Delay (RWD)**

The RWD values transmitted by the EVB Bridge and EVB station indicate the exponent value that each device proposes for determining the value of the resourceWaitDelay variable (41.5.5.7). The value of resourceWaitDelay is calculated as:

$$10 \times 2^{\text{RWD}} \text{ micro-seconds}$$

Both sides use the largest of the local and remote values of RWD for this calculation; if there is no remote value available, the local (proposed) value is used. The Remote or Local (ROL) flag is used by the EVB station to indicate whether the remote RWD value is in use (TRUE) or the local value is in use (FALSE).

D.2.13.9 Remote or Local (ROL) and Reinit Keep Alive (RKA)

The RKA value transmitted by the EVB station indicates the exponent value in use by the EVB station for determining the value of the reinitKeepAlive variable (41.5.5.5). The value of reinitKeepAlive is calculated as:

$10 \times 2^{RKA}$  micro-seconds

Both sides use the largest of the two values of RKA for this calculation; if there is no remote value available, the local value is used. The Remote or Local (ROL) flag is used by the EVB Bridge to indicate whether the remote RKA value is in use (TRUE) or the local value is in use (FALSE). In both cases, the EVB Bridge transmits the exponent value being used for its toutKeepAlive variable.

D.2.14 CDCP TLV

The EVB station and Bridge both use the same LLDP TLV to configure S-channels (see Figure D-10). This TLV is in LLDP OUI format (8.6 of IEEE Std 802.1AB). The S-channel's capabilities, requests and running configuration is encoded in the information string of this TLV as defined in D.2.14.1 through D.2.14.8.

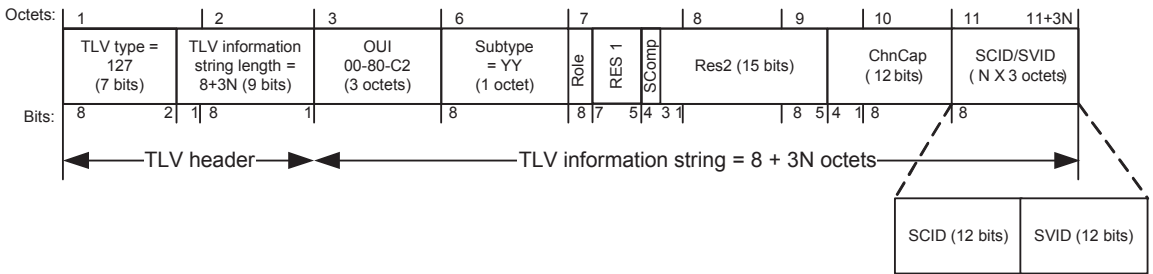


Figure D-10—CDCP TLV structure

D.2.14.1 OUI

The OUI used to identify the CDCP TLV is the 802.1 OUI 00-80-C2.

D.2.14.2 Subtype

The subtype used to identify the CDCP TLV is as shown in Table D-1.

D.2.14.3 Role

Role is a 1-bit field, defined as follows:

- a) S(1) - Indicates the sender is operating in the station role, assigns channels numbers and a default S-VID for the default channel 1, and requests S-VID assignments from the neighboring 'B'.
- b) B(0) - Indicates the sender is operating in the bridge role, accepts S-channel configuration requests from its neighboring 'S' and that the sender will do the best it can to fill the S-VID assignment requests from the neighboring 'S'.



#### D.2.14.4 RES1

RES1 is a 3-bit field, reserved for future standardization. This field is transmitted as zero and ignored on receipt.

#### D.2.14.5 SComp

SComp is a 1-bit field that indicates the presence or absence of an S-VLAN component for S-channel support. A value of 1 indicates TRUE, zero indicates FALSE.

NOTE—If this bit is zero, then the sender does not have a CDCP state machine, and the other fields in the TLV are not valid.

#### D.2.14.6 Res2

RES2 is a 15-bit field, reserved for future standardization. This field is transmitted as zero and ignored on receipt.

#### D.2.14.7 ChnCap

Channel capacity. Identifies the total number of S-channels, both assigned and available to be assigned, that the sender has.

#### D.2.14.8 SCID/S-VID

An SCID/S-VID pair exists for each S-channel that is currently supported by the sender. Each SCID/S-VID pair consists of two 12-bit values, as follows:

- a) SCID - indicates the index number of the S-channel. The station assigns S-channel numbers in the range 0-167. Zero is reserved. The S-channel index should be between 1 and the maximum number of S-channels supported by the port.
- b) S-VID - The VLAN ID assigned to the S-channel. The Bridge assigns SVIDs to channels in the range 1-0xffe. A station uses the 0 S-VID to request an S-VID assignment from the Bridge.

After the station receives the S-VID assignment from the Bridge, it uses the S-VID assigned value in all subsequent exchanges for that specific SCID (SCID/S-VID pair).

NOTE 1—The first entry in the list of SCID/S-VID pairs contains the default S-channel. (i.e., the first channel pair is <1,1>).

NOTE 2—A maximum of 167 S-channels can be supported. Other formats (assuming sequential SVIDs) could be defined to allow support for 4K+ S-channels.

NOTE 3—This listing can be sparse (in order to indicate arrival and removal of S-channels). The S-channel going away is indicated by removing the SCID/S-VID pair.

NOTE 4—The order of the list determines the priority of S-VID assignments. If the Bridge does not have resources for all channels, it assigns the first channels in the list.

## D.3 IEEE 802.1 Organizationally Specific TLV management

### D.3.2 IEEE 802.1 managed objects—TLV variables

*Insert new subclauses as shown:*

#### D.3.2.9 EVB TLV managed objects

- a) **EVB TLV:** see D.2.13.

#### D.3.2.10 CDCP TLV managed objects

- a) **CDCP TLV:** see D.2.14.

## D.4 IEEE 802.1/LLDP extension MIB

*Insert the following rows in existing Table D-5, at the end of the Configuration group section, as shown:*

lldpXdot1EvbConfigEvbTable		Augments lldpV2Xdot1LocManVidEntry
	lldpXdot1EvbConfigEvbTxEnable	Normal LLPDUs, 9.1.2.1 of IEEE Std 802.1AB
lldpXdot1EvbConfigCdcTable		Augments lldpV2Xdot1LocManVidEntry
	lldpXdot1EvbConfigCdcTxEnable	Normal LLPDUs, 9.1.2.1 of IEEE Std 802.1AB

*Insert the following rows in existing Table D-5, at the end of the Local system information section, as shown:*

lldpV2Xdot1LocEvbTlvTable		D.2.13
	lldpV2LocPortIfIndex	(Table index)
	lldpV2Xdot1LocEvbTlvString	EVB TLV string, D.2.13
lldpV2Xdot1LocCDCPTlvTable		D.2.14
	lldpV2LocPortIfIndex	(Table index)
	lldpV2Xdot1LocCDCPTlvString	CDCP TLV string, D.2.14

*Insert the following rows in existing Table D-5, at the end of the Remote system information, as shown:*

lldpV2Xdot1RemEvbTlvTable		D.2.13
	lldpV2RemTimeMark	(Table index)
	lldpV2RemLocalIfIndex	(Table index)
	lldpV2RemLocalDestMACAddress	(Table index)
	lldpV2RemIndex	(Table index)
	lldpV2Xdot1RemEvbTlvString	EVb TLV string, D.2.13
lldpV2Xdot1RemCDCPTlvTable		D.2.14
	lldpV2RemTimeMark	(Table index)
	lldpV2RemLocalIfIndex	(Table index)
	lldpV2RemLocalDestMACAddress	(Table index)
	lldpV2RemIndex	(Table index)
	lldpV2Xdot1RemCDCPTlvString	CDCP TLV string, D.2.14

*Insert new subclause D.4.6 as shown:*

#### **D.4.6 EVB extensions to the IEEE 802.1 LLDP extension MIB module**

In the following MIB definition, should any discrepancy between the DESCRIPTION text and the corresponding definition in D.2.1 through D.4 occur, the definition in D.2.1 through D.4 shall take precedence.

```
LLDP-EXT-DOT1-EVB-EXTENSIONS-MIB DEFINITIONS ::= BEGIN
```

```
IMPORTS
```

```
    MODULE-IDENTITY,
    OBJECT-TYPE
        FROM SNMPv2-SMI
    TruthValue
        FROM SNMPv2-TC
    MODULE-COMPLIANCE,
    OBJECT-GROUP
        FROM SNMPv2-CONF
    ifGeneralInformationGroup
        FROM IF-MIB
    lldpV2LocPortIfIndex,
    lldpV2RemTimeMark,
    lldpV2RemLocalIfIndex,
    lldpV2RemLocalDestMACAddress,
    lldpV2RemIndex,
    lldpV2PortConfigEntry
        FROM LLDP-V2-MIB
    lldpV2Xdot1MIB
        FROM LLDP-EXT-DOT1-V2-MIB;
```

```
1
2  -- Define the MIB module
3      lldpXdot1EvbExtensions MODULE-IDENTITY
4          LAST-UPDATED "201111160000Z" -- November 16, 2011
5          ORGANIZATION "IEEE 802.1 Working Group"
6          CONTACT-INFO
7              "WG-URL: http://www.ieee802.org/1
8              WG-Email: STDS-802-1-L@LISTSERV.IEEE.ORG
9
10             Contact: Tony Jeffree
11             Postal: C/O IEEE 802.1 Working Group
12                   IEEE Standards Association
13                   445 Hoes Lane
14                   Piscataway
15                   NJ 08854
16                   USA
17             E-mail: STDS-802-1-L@LISTSERV.IEEE.ORG"
18 DESCRIPTION
19     "The LLDP Management Information Base extension module for
20     IEEE 802.1 organizationally defined discovery information
21     for the EVB extension objects.
22
23     This MIB module is rooted under the lldpXdot1StandAloneExtensions
24     OID arc, in order to allow it to be defined independently
25     of other 802.1 LLDP extension MIBs.
26
27     Unless otherwise indicated, the references in this
28     MIB module are to IEEE Std 802.1Qbg-20XX.
29
30     Copyright (C) IEEE (2011). This version of this MIB module
31     is published as D.4.6 of IEEE Std 802.1Qbg-20XX;
32     see the standard itself for full legal notices."
33 REVISION "201111160000Z" -- November 16, 2011
34 DESCRIPTION
35     "Initial version published as part of IEEE Std. 802.1Qbg"
36
37 -- Hang this MIB module under the stand-alone extension MIBs arc:
38 ::= { lldpXdot1StandAloneExtensions 1 }
39
40 -- Define the root arc for stand-alone extension MIBs in 802.1
41 lldpXdot1StandAloneExtensions OBJECT IDENTIFIER ::= { lldpV2Xdot1MIB 7 }
42
43 -----
44 -----
45 --
46 -- Organizationaly Defined Information Extension - IEEE 802.1
47 -- Definitions to support the evbSet TLV set (Table D-1)
48 -- for Edge Virtual Bridging
49 --
50 -----
51 -----
52 lldpXdot1EvbMIB OBJECT IDENTIFIER ::= { lldpXdot1EvbExtensions 1 }
53 lldpXdot1EvbObjects OBJECT IDENTIFIER ::= { lldpXdot1EvbMIB 1 }
54
55 -- EVB 802.1 MIB Extension groups
56
57 lldpXdot1EvbConfig OBJECT IDENTIFIER ::= { lldpXdot1EvbObjects 1 }
58 lldpXdot1EvbLocalData OBJECT IDENTIFIER ::= { lldpXdot1EvbObjects 2 }
59 lldpXdot1EvbRemoteData OBJECT IDENTIFIER ::= { lldpXdot1EvbObjects 3 }
```

```

1  -----
2  -- IEEE 802.1 - EVB Configuration
3  -----
4
5  --
6  -- lldpXdot1EvbConfigEvbTable : configure the
7  -- transmission of the EVB TLV on a set of ports
8  --
9  lldpXdot1EvbConfigEvbTable OBJECT-TYPE
10     SYNTAX      SEQUENCE OF LldpXdot1EvbConfigEvbEntry
11     MAX-ACCESS   not-accessible
12     STATUS      current
13     DESCRIPTION
14         "A table that controls selection of EVB
15         TLVs to be transmitted on individual ports."
16     ::= { lldpXdot1EvbConfig 1 }
17
18 lldpXdot1EvbConfigEvbEntry OBJECT-TYPE
19     SYNTAX      LldpXdot1EvbConfigEvbEntry
20     MAX-ACCESS   not-accessible
21     STATUS      current
22     DESCRIPTION
23         "LLDP configuration information that controls the
24         transmission of IEEE 802.1 organizationally defined
25         EVB TLV on LLDP transmission capable ports.
26
27         This configuration object augments the lldpV2PortConfigEntry of
28         the LLDP-MIB, therefore it is only present along with the port
29         configuration defined by the associated lldpV2PortConfigEntry
30         entry.
31
32         Each active lldpConfigEntry is restored from non-volatile
33         storage (along with the corresponding lldpV2PortConfigEntry)
34         after a re-initialization of the management system."
35     AUGMENTS     { lldpV2PortConfigEntry }
36     ::= { lldpXdot1EvbConfigEvbTable 1 }
37
38 lldpXdot1EvbConfigEvbEntry ::= SEQUENCE {
39     lldpXdot1EvbConfigEvbTxEnable TruthValue
40 }
41
42 lldpXdot1EvbConfigEvbTxEnable OBJECT-TYPE
43     SYNTAX      TruthValue
44     MAX-ACCESS   read-write
45     STATUS      current
46     DESCRIPTION
47         "The lldpXdot1EvbConfigEvbTxEnable, which is
48         defined as a truth value and configured by the network
49         management, determines whether the IEEE 802.1 organizationally
50         defined EVB TLV transmission is allowed
51         on a given LLDP transmission capable port.
52
53         The value of this object is restored from non-volatile
54         storage after a re-initialization of the management system."
55     REFERENCE
56         "D.2.13"
57     DEFVAL      { false }
58     ::= { lldpXdot1EvbConfigEvbEntry 1 }
59
60 --
61 -- lldpXdot1EvbConfigCdcPTable : configure the
62 -- transmission of the CDCP TLV on a set of ports
63 --

```

```

1      lldpXdot1EvbConfigCdcTable OBJECT-TYPE
2          SYNTAX      SEQUENCE OF LldpXdot1EvbConfigCdcEntry
3          MAX-ACCESS   not-accessible
4          STATUS      current
5          DESCRIPTION
6              "A table that controls selection of EVB
7              TLVs to be transmitted on individual ports."
8          ::= { lldpXdot1EvbConfig 2 }
9
10     lldpXdot1EvbConfigCdcEntry OBJECT-TYPE
11         SYNTAX      LldpXdot1EvbConfigCdcEntry
12         MAX-ACCESS   not-accessible
13         STATUS      current
14         DESCRIPTION
15             "LLDP configuration information that controls the
16             transmission of IEEE 802.1 organizationally defined
17             CDCP TLV on LLDP transmission capable ports.
18
19             This configuration object augments the lldpV2PortConfigEntry of
20             the LLDP-MIB, therefore it is only present along with the port
21             configuration defined by the associated lldpV2PortConfigEntry
22             entry.
23
24             Each active lldpConfigEntry is restored from non-volatile
25             storage (along with the corresponding lldpV2PortConfigEntry)
26             after a re-initialization of the management system."
27         AUGMENTS     { lldpV2PortConfigEntry }
28         ::= { lldpXdot1EvbConfigCdcTable 1 }
29
30     lldpXdot1EvbConfigCdcEntry ::= SEQUENCE {
31         lldpXdot1EvbConfigCdcTxEnable TruthValue
32     }
33
34     lldpXdot1EvbConfigCdcTxEnable OBJECT-TYPE
35         SYNTAX      TruthValue
36         MAX-ACCESS   read-write
37         STATUS      current
38         DESCRIPTION
39             "The lldpXdot1EvbConfigCdcTxEnable, which is
40             defined as a truth value and configured by the network
41             management, determines whether the IEEE 802.1 organizationally
42             defined CDCP TLV transmission is allowed
43             on a given LLDP transmission capable port.
44
45             The value of this object is restored from non-volatile
46             storage after a re-initialization of the management system."
47         REFERENCE
48             "D.2.14"
49         DEFVAL      { false }
50         ::= { lldpXdot1EvbConfigCdcEntry 1 }
51
52     -----
53     -- IEEE 802.1 - EVB Local System Information
54     -----
55
56     ---
57     ---
58     --- lldpV2Xdot1LocEvbTlvTable: EVB TLV Information Table
59     ---
60     ---
61
62     lldpV2Xdot1LocEvbTlvTable OBJECT-TYPE
63         SYNTAX      SEQUENCE OF LldpV2Xdot1LocEvbTlvEntry

```

```

1      MAX-ACCESS    not-accessible
2      STATUS        current
3      DESCRIPTION
4          "This table contains one row per port of EVB
5          TLV information (as a part of the LLDP
6          802.1 organizational extension) on the local system
7          known to this agent."
8      ::= { lldpXdot1EvbLocalData 1 }
9
10     lldpV2Xdot1LocEvbTlvEntry OBJECT-TYPE
11     SYNTAX          LldpV2Xdot1LocEvbTlvEntry
12     MAX-ACCESS      not-accessible
13     STATUS          current
14     DESCRIPTION
15         "EVB TLV information about a
16         particular port component."
17     INDEX           { lldpV2LocPortIfIndex }
18     ::= { lldpV2Xdot1LocEvbTlvTable 1 }
19
20     LldpV2Xdot1LocEvbTlvEntry ::= SEQUENCE {
21         lldpV2Xdot1LocEvbTlvString      OCTET STRING
22     }
23
24     lldpV2Xdot1LocEvbTlvString OBJECT-TYPE
25     SYNTAX          OCTET STRING (SIZE (0..514))
26     MAX-ACCESS      read-only
27     STATUS          current
28     DESCRIPTION
29         "This object contains the EVB TLV information string
30         for the Port, as defined in D.2.13.
31         As the elements within the string are not individually
32         manipulated via SNMP (they are of concern only to the
33         state machines), the sub-structure of the string
34         is not visible as separate objects within the
35         local database."
36     REFERENCE
37         "D.2.13"
38     ::= { lldpV2Xdot1LocEvbTlvEntry 1 }
39
40     ---
41     ---
42     --- lldpV2Xdot1LocCdcplTlvTable: CDCP TLV Information Table
43     ---
44     ---
45
46     lldpV2Xdot1LocCdcplTlvTable OBJECT-TYPE
47     SYNTAX          SEQUENCE OF LldpV2Xdot1LocCdcplTlvEntry
48     MAX-ACCESS      not-accessible
49     STATUS          current
50     DESCRIPTION
51         "This table contains one row per port of CDCP
52         TLV information (as a part of the LLDP
53         802.1 organizational extension) on the local system
54         known to this agent."
55     ::= { lldpXdot1EvbLocalData 2 }
56
57     lldpV2Xdot1LocCdcplTlvEntry OBJECT-TYPE
58     SYNTAX          LldpV2Xdot1LocCdcplTlvEntry
59     MAX-ACCESS      not-accessible
60     STATUS          current
61     DESCRIPTION
62         "CDCP TLV information about a
63         particular port component."

```

```

1      INDEX    { lldpV2LocPortIfIndex }
2      ::= { lldpV2Xdot1LocCdcplvTable 1 }
3
4      lldpV2Xdot1LocCdcplvEntry ::= SEQUENCE {
5          lldpV2Xdot1LocCdcplvString    OCTET STRING
6          }
7
8      lldpV2Xdot1LocCdcplvString OBJECT-TYPE
9      SYNTAX      OCTET STRING (SIZE(0..514))
10     MAX-ACCESS  read-only
11     STATUS      current
12     DESCRIPTION
13         "This object contains the CDCP TLV information string
14         for the Port, as defined in D.2.14.
15         As the elements within the string are not individually
16         manipulated via SNMP (they are of concern only to the
17         state machines), the sub-structure of the string
18         is not visible as separate objects within the
19         local database."
20     REFERENCE
21         "D.2.14"
22     ::= { lldpV2Xdot1LocCdcplvEntry 1 }
23
24     -----
25     -- IEEE 802.1 - EVB Remote System Information
26     -----
27
28     ---
29     ---
30     --- lldpV2Xdot1RemEvpTlvTable: EVB TLV Information Table
31     ---
32     ---
33
34     lldpV2Xdot1RemEvpTlvTable OBJECT-TYPE
35     SYNTAX      SEQUENCE OF LldpV2Xdot1RemEvpTlvEntry
36     MAX-ACCESS  not-accessible
37     STATUS      current
38     DESCRIPTION
39         "This table contains one row per port of EVB
40         TLV information (as a part of the LLDP
41         802.1 organizational extension) on the remote system
42         known to this agent."
43     ::= { lldpXdot1EvpRemoteData 1 }
44
45     lldpV2Xdot1RemEvpTlvEntry OBJECT-TYPE
46     SYNTAX      LldpV2Xdot1RemEvpTlvEntry
47     MAX-ACCESS  not-accessible
48     STATUS      current
49     DESCRIPTION
50         "EVB TLV information about a
51         particular port component."
52     INDEX      { lldpV2RemTimeMark,
53                 lldpV2RemLocalIfIndex,
54                 lldpV2RemLocalDestMACAddress,
55                 lldpV2RemIndex }
56     ::= { lldpV2Xdot1RemEvpTlvTable 1 }
57
58     lldpV2Xdot1RemEvpTlvEntry ::= SEQUENCE {
59         lldpV2Xdot1RemEvpTlvString    OCTET STRING
60         }
61
62     lldpV2Xdot1RemEvpTlvString OBJECT-TYPE
63     SYNTAX      OCTET STRING (SIZE (0..514))
64     MAX-ACCESS  read-only

```



```

1      STATUS      current
2      DESCRIPTION
3          "This object contains the EVB TLV information string
4          for the Port, as defined in D.2.13.
5          As the elements within the string are not individually
6          manipulated via SNMP (they are of concern only to the
7          state machines), the sub-structure of the string
8          is not visible as separate objects within the
9          local database."
10     REFERENCE
11         "D.2.13"
12     ::= { lldpV2Xdot1RemEvbTlvEntry 1 }
13
14     ---
15     ---
16     --- lldpV2Xdot1RemCdcPtlvTable: CDCP TLV Information Table
17     ---
18     lldpV2Xdot1RemCdcPtlvTable OBJECT-TYPE
19         SYNTAX      SEQUENCE OF LldpV2Xdot1RemCdcPtlvEntry
20         MAX-ACCESS   not-accessible
21         STATUS      current
22         DESCRIPTION
23             "This table contains one row per port of CDCP
24             TLV information (as a part of the LLDP
25             802.1 organizational extension) on the remote system
26             known to this agent."
27         ::= { lldpXdot1EvbRemoteData 2 }
28
29     lldpV2Xdot1RemCdcPtlvEntry OBJECT-TYPE
30         SYNTAX      LldpV2Xdot1RemCdcPtlvEntry
31         MAX-ACCESS   not-accessible
32         STATUS      current
33         DESCRIPTION
34             "CDCP TLV information about a
35             particular port component."
36         INDEX       { lldpV2RemTimeMark,
37                     lldpV2RemLocalIfIndex,
38                     lldpV2RemLocalDestMACAddress,
39                     lldpV2RemIndex }
40         ::= { lldpV2Xdot1RemCdcPtlvTable 1 }
41
42     LldpV2Xdot1RemCdcPtlvEntry ::= SEQUENCE {
43         lldpV2Xdot1RemCdcPtlvString      OCTET STRING
44     }
45
46     lldpV2Xdot1RemCdcPtlvString OBJECT-TYPE
47         SYNTAX      OCTET STRING (SIZE (0..514))
48         MAX-ACCESS   read-only
49         STATUS      current
50         DESCRIPTION
51             "This object contains the CDCP TLV information string
52             for the Port, as defined in D.2.14.
53             As the elements within the string are not individually
54             manipulated via SNMP (they are of concern only to the
55             state machines), the sub-structure of the string
56             is not visible as separate objects within the
57             local database."
58         REFERENCE
59             "D.2.14"
60         ::= { lldpV2Xdot1RemCdcPtlvEntry 1 }

```

```
1  -----
2  -- IEEE 802.1 - EVB Conformance Information
3  -----
4
5  lldpXdot1EvbConformance OBJECT IDENTIFIER ::= { lldpXdot1EvbExtensions 2 }
6
7  lldpXdot1EvbCompliances
8      OBJECT IDENTIFIER ::= { lldpXdot1EvbConformance 1 }
9  lldpXdot1EvbGroups
10     OBJECT IDENTIFIER ::= { lldpXdot1EvbConformance 2 }
11
12
13 --
14 -- EVB - Compliance Statements
15 --
16
17 lldpXdot1EvbCompliance MODULE-COMPLIANCE
18     STATUS          current
19     DESCRIPTION
20         "A compliance statement for SNMP entities that implement
21         the IEEE 802.1 organizationally defined Congestion
22         Notification LLDP extension MIB.
23
24         This group is mandatory for agents that implement the
25         EVB evbSet TLV set."
26     MODULE          -- this module
27     MANDATORY-GROUPS { lldpXdot1EvbGroup,
28                        ifGeneralInformationGroup }
29     ::= { lldpXdot1EvbCompliances 1 }
30
31
32 --
33 -- EVB - MIB groupings
34 --
35
36 lldpXdot1EvbGroup OBJECT-GROUP
37     OBJECTS {
38         lldpXdot1EvbConfigEvbTxEnable,
39         lldpXdot1EvbConfigCdcpxTxEnable,
40         lldpV2Xdot1LocEvbTlvString,
41         lldpV2Xdot1LocCdcpxTlvString,
42         lldpV2Xdot1RemEvbTlvString,
43         lldpV2Xdot1RemCdcpxTlvString
44     }
45     STATUS current
46     DESCRIPTION
47         "The collection of objects that support the
48         EVB evbSet TLV set."
49     ::= { lldpXdot1EvbGroups 1 }
50
51
52 END
53
54
```

**D.5 PICS proforma for IEEE 802.1 Organizationally Specific TLV extensions***Insert the following rows immediately after row "dot1cntltv" of Table D.5.3:*

dot1evbSet	Is the IEEE 802.1 Organizationally Specific TLV evbSet implemented?	O.1	D.2.13, D.2.14, Table D-1	Yes [ ] No [ ]
dot1evbTlv	Is each TLV in the IEEE 802.1 Organizationally Specific TLV evbSet implemented?	dot1evbSet:M	D.2.13, D.2.14, Table D-1	Yes [ ] N/A [ ]