

Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1

PB14255/PB14255 2-in-1

Owner's Manual

Notes, cautions, and warnings

 **NOTE:** A NOTE indicates important information that helps you make better use of your product.

 **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

 **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

Contents

Chapter 1: Views of Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.....	7
Right.....	7
Left.....	8
Top.....	9
Front.....	10
Bottom.....	11
Modes.....	12
Battery-charge status light.....	13
Service Tag.....	13
 Chapter 2: Set up your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.....	 15
 Chapter 3: Specifications of Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.....	 17
Dimensions and weight.....	17
Processor.....	17
Chipset.....	18
Operating system.....	19
Memory.....	19
External ports and slots.....	19
Internal slots.....	20
Ethernet.....	20
Wireless module.....	20
WWAN module.....	21
Audio.....	22
Storage.....	22
Keyboard.....	23
Keyboard function keys of Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.....	23
Camera (optional).....	25
Touchpad.....	26
Fingerprint reader (optional).....	26
Power adapter.....	26
Power adapter requirements (computers shipped with 3-cell, 45 Wh battery)	27
Power adapter requirements (computers shipped with 3-cell, 55 Wh battery)	28
Battery.....	29
Power requirements (for computers shipped with 3-cell, 45 Wh battery).....	30
Power requirements (for computers shipped with 3-cell, 55 Wh battery).....	31
Display.....	31
Hardware security.....	32
GPU—Integrated.....	33
Smart-card reader.....	33
Contactless smart-card reader.....	33
Contacted smart-card reader.....	37
Operating and storage environment.....	37
Dell support policy.....	38

Chapter 4: Working inside your computer.....	39
Safety instructions.....	39
Before working inside your computer.....	39
Safety precautions.....	40
Electrostatic discharge—ESD protection.....	40
ESD Field Service kit	41
Transporting sensitive components.....	42
After working inside your computer.....	42
BitLocker.....	42
Recommended tools.....	42
Screw list.....	43
Major components of Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.....	44
 Chapter 5: Removing and installing Customer Replaceable Units (CRUs).....	 47
SIM-card tray (optional).....	47
Removing the SIM-card tray (optional).....	47
Installing the SIM-card tray (optional).....	48
Base cover.....	49
Removing the base cover.....	49
Installing the base cover.....	51
Battery.....	53
Rechargeable Li-ion battery precautions.....	53
Removing the battery.....	54
Installing the battery.....	55
Battery cable.....	56
Removing the battery cable.....	56
Installing the battery cable.....	57
Wireless Wide Area Network (WWAN) card.....	58
Removing the 4G WWAN card.....	58
Installing the 4G WWAN card.....	59
Solid State Drive (SSD).....	60
Removing the M.2 2230 solid state drive.....	60
Installing the M.2 2230 solid state drive.....	61
Removing the M.2 2280 solid state drive.....	62
Installing the M.2 2280 solid state drive.....	63
Speakers.....	64
Removing the speakers.....	64
Installing the speakers.....	65
 Chapter 6: Removing and installing Field Replaceable Units (FRUs).....	 67
Fan.....	67
Removing the fan	67
Installing the fan.....	68
Heat sink.....	69
Removing the heat sink	69
Installing the heat sink.....	70
USH daughterboard.....	71
Removing the USH daughterboard.....	71

Installing the USH daughterboard	72
Smart-card reader.....	73
Removing the smart-card reader	73
Installing the smart-card reader	75
System board.....	76
Removing the system board.....	76
Installing the system board	79
Wireless Local Area Network (WLAN) antenna modules.....	82
Removing the WLAN antenna modules.....	82
Installing the WLAN antenna modules.....	83
USB Type-C connector module.....	85
Removing the USB Type-C connector module.....	85
Installing the USB Type-C connector module.....	86
I/O board.....	87
Removing the I/O board.....	87
Installing the I/O board.....	89
Power-button with optional fingerprint reader.....	90
Removing the power button with optional fingerprint reader.....	90
Installing the power button with optional fingerprint reader.....	91
Display assembly.....	92
Removing the display assembly	92
Installing the display assembly	94
Display bezel.....	96
Removing the display bezel	96
Installing the display bezel	101
Display panel.....	103
Removing the display panel.....	103
Installing the display panel.....	106
Display hinge caps.....	109
Removing the display hinge caps	109
Installing the display hinge caps	110
RGB/IR camera.....	112
Removing the RGB/IR camera.....	112
Installing the RGB/IR camera.....	113
MIPI camera.....	115
Removing the MIPI camera.....	115
Installing the MIPI camera.....	116
Display cable for RGB/IR camera.....	117
Removing the display cable for RGB/IR camera	117
Installing the display cable for RGB/IR camera.....	118
Display cable for MIPI camera.....	120
Removing the display cable for MIPI camera.....	120
Installing the display cable for MIPI camera.....	121
Middle-daughterboard cable.....	122
Removing the middle-daughterboard cable	122
Installing the middle-daughterboard cable	123
Middle daughterboard.....	124
Removing the middle daughterboard	124
Installing the middle daughterboard	125
Display back-cover and antenna assembly.....	126

Removing the display back-cover and antenna assembly.....	126
Installing the display back-cover and antenna assembly	127
Keyboard.....	128
Removing the keyboard.....	128
Installing the keyboard.....	130
Palm-rest assembly.....	132
Removing the palm-rest assembly.....	132
Installing the palm-rest assembly.....	133
Chapter 7: Software.....	135
Operating system.....	135
Drivers and downloads.....	135
Chapter 8: BIOS Setup.....	136
Entering BIOS Setup program.....	136
Navigation keys.....	136
F12 One Time Boot menu.....	136
View Advanced Setup options.....	137
View Service options.....	137
BIOS Setup options.....	137
Updating the BIOS.....	151
Updating the BIOS in Windows.....	151
Updating the BIOS in Linux and Ubuntu.....	152
Updating the BIOS using the USB drive in Windows.....	152
Updating the BIOS from the One-Time boot menu.....	152
System and setup password.....	153
Assigning a System Setup password.....	154
Deleting or changing an existing system password or setup password.....	154
Clearing system and setup passwords.....	154
Chapter 9: Troubleshooting.....	155
Handling swollen rechargeable Li-ion batteries.....	155
Dell SupportAssist Pre-boot System Performance Check diagnostics.....	155
Running the SupportAssist Pre-Boot System Performance Check.....	156
Built-in self-test (BIST).....	156
Motherboard Built-In Self-Test (M-BIST).....	156
Logical Built-in Self-test (L-BIST).....	157
LCD Built-in Self-Test (LCD-BIST).....	157
System-diagnostic lights.....	157
Recovering the operating system.....	158
Real-Time Clock (RTC Reset).....	159
Backup media and recovery options.....	159
Network power cycle.....	159
Drain flea power (perform hard reset).....	159
Chapter 10: Getting help and contacting Dell.....	161

Views of Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1

Right

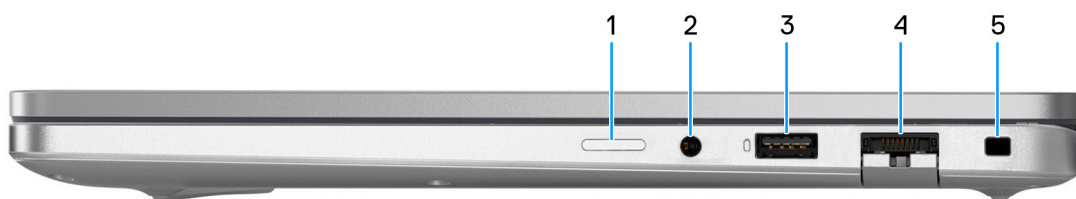


Figure 1. Right view of Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1

1. Nano-SIM card slot (optional)

Insert a nano-SIM card to connect to a mobile broadband network.

NOTE: Availability of the nano-SIM card slot depends on the region and configuration ordered.

2. Global headset jack

Connect headphones or a headset (headphone and microphone combo).

3. USB 3.2 Gen 1 port with PowerShare

Connect devices such as external storage devices and printers. It provides data transfer speeds up to 5 Gbps. PowerShare enables you to charge your USB devices even when your computer is turned off.

NOTE: If your computer is turned off or in a hibernate state, you must connect the power adapter to charge your devices using the PowerShare port. You must enable this feature in the BIOS setup program.

NOTE: Certain USB devices may not charge when the computer is turned off or in a sleep state. In such cases, turn on the computer to charge the device.

4. Optional RJ45 ethernet port (1 Gbps)

Connect an RJ45 ethernet cable from a router or a broadband modem for network or Internet access, with a transfer rate of 10/100/1000 Mbps (maximum 1 Gbps).

5. Security-cable slot (wedge-shaped)

Connect a security cable to prevent unauthorized movement of your computer.

Left

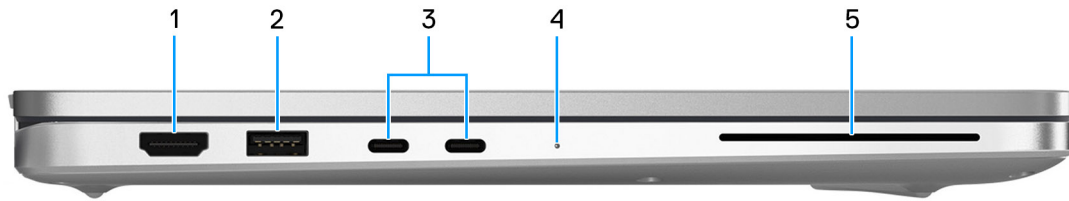


Figure 2. Left view of Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1

1. HDMI 2.1 TMDs port

Connect to a TV, external display or another HDMI-in enables device. Provides video and audio output.

2. USB 3.2 Gen 1 port

Connect devices such as external storage devices and printers. Provides data transfer rate of up to 5 Gbps.

3. USB (40 Gbps) Type-C with DisplayPort Alt Mode/Power Delivery ports

Supports USB Type-C and data transfer rates of up to 40 Gbps.

NOTE: A 40 Gbps-certified cable is required to achieve the maximum performance of 40 Gbps.

NOTE: DisplayPort 2.1 is supported in computers shipped with AMD Ryzen AI 300 series processors. DisplayPort 1.4a is supported in computers shipped with AMD Ryzen 200 series processors and enables you to connect to an external display using a display adapter.

NOTE: A USB Type-C to DisplayPort adapter (sold separately) is required to connect a DisplayPort device.

NOTE: Supports Power Delivery that enables two-way power supply between devices. Provides up to 5 V/3 A power output that enables faster charging.

NOTE: For 8K monitors, AMD Ryzen AI series support maximum resolution 7680 x 4320, 60 Hz, with Display Stream Compression. For 4K monitors, AMD Ryzen series support maximum resolution 3840 x 2160, 240 Hz, with Display Stream Compression.

4. Battery-charge status light

Indicates the battery-charge status.

- Solid white — Battery is charging.
- Solid amber — Battery charge is low.
- Off — Battery is fully charged.

5. Smart-card reader slot (optional)

Using smart card provides authentication in corporate networks.

Top

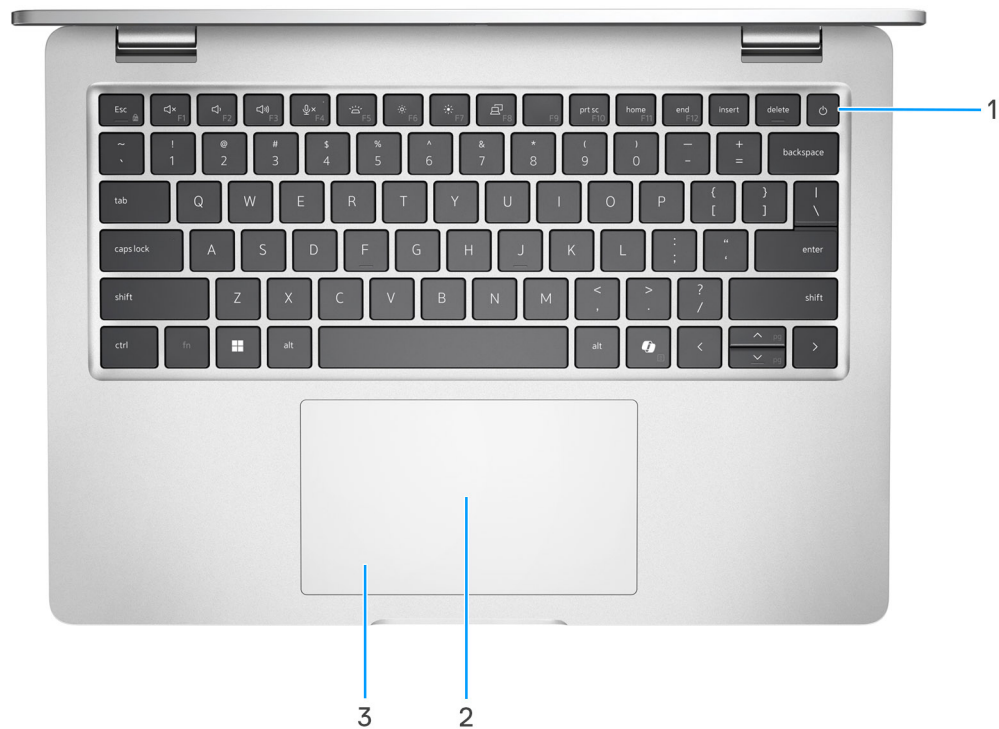


Figure 3. Top view of Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1

1. Power button with optional fingerprint reader

Press to turn on the computer if it is turned off, in sleep state, or in hibernate state.

NOTE: When the computer is turned on, press the power button to put the computer into sleep state; press and hold the power button for 10 seconds to force shut-down the computer.

NOTE: You can customize the power-button behavior in Windows.

2. NFC/Contactless smart card reader (optional)

Enables NFC-enabled devices to connect to your computer and supports data transfer across the devices.

3. Touchpad

Move your finger on the touchpad to move the mouse pointer. Tap to left-click, and tap with two fingers to right-click.

Front

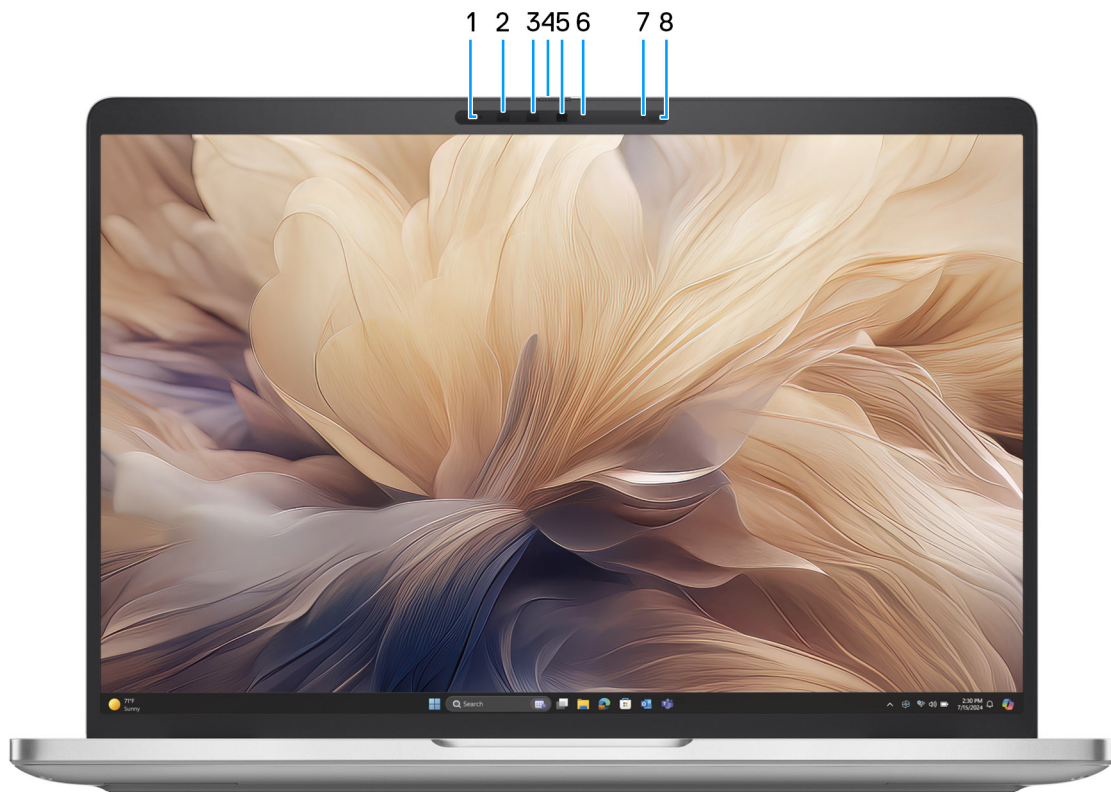


Figure 4. Front view of Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1

1. Left microphone

Provides digital sound input for audio recording and voice calls.

2. Infrared camera (optional)

Enhances security when paired with Windows Hello face authentication.

3. Infrared emitter (optional)

Emits infrared light, which enables the infrared camera to sense and track motion.

4. Camera shutter

Slide the privacy shutter to the left to access the camera lens.

5. Camera

A camera enables you to video chat, capture photos, and record videos.

6. Camera-status light

Turns on when the camera is in use.

7. Right microphone

Provides digital sound input for audio recording and voice calls.

8. Ambient-light sensor (optional)

The sensor detects the ambient light and automatically adjusts the display brightness.

Bottom

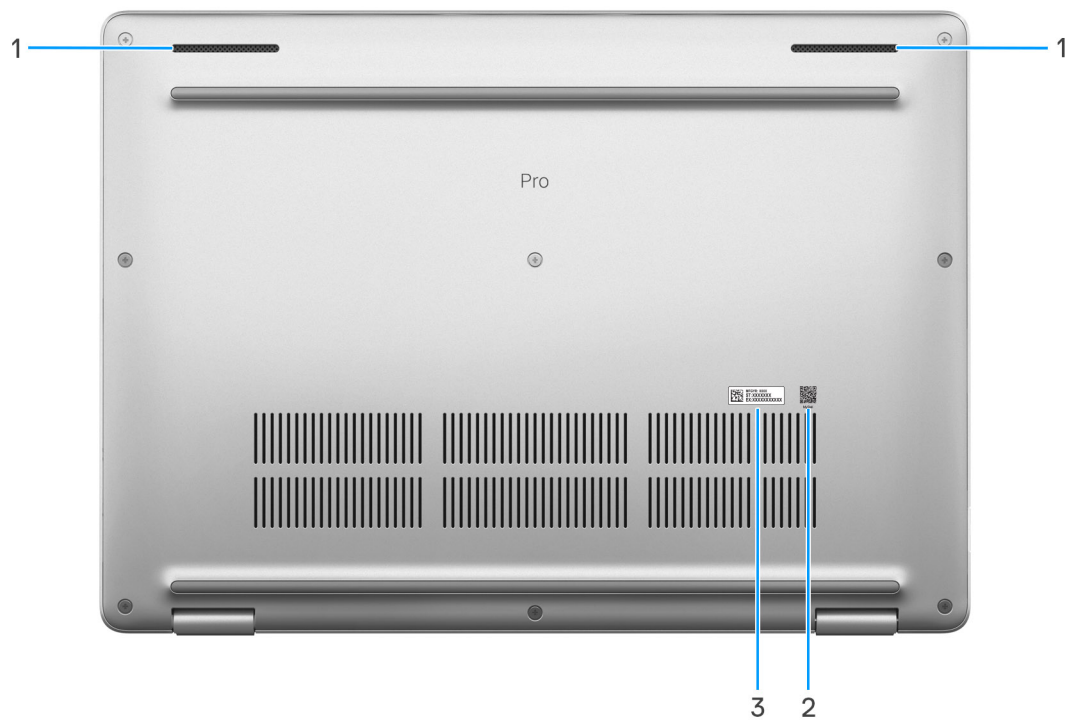


Figure 5. Bottom view of Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1

1. Speakers

Provide audio output.

2. MyDell QR Code

MyDell is your hub for content personalized to your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1, including videos, articles, manuals, and easy access to support.

3. Service Tag label

The Service Tag is a unique alphanumeric identifier that enables Dell service technicians to identify the hardware components in your computer and access warranty information.

Modes

The following modes are supported only on Dell Pro 14 Plus 2-in-1 configuration.

Notebook



Figure 6. Notebook mode

Tablet



Figure 7. Tablet Mode

Stand



Figure 8. Stand mode

Tent



Figure 9. Tent mode

Battery-charge status light

The following table lists the battery-charge status light of your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.

Table 1. Battery-charge status light behavior

Power source	LED behavior	System power state	Battery charge level
AC adapter	Off	S0 or S5	Fully charged
AC adapter	Solid white	S0 or S5	< Fully charged
Battery	Off	S0 or S5	11-100%
Battery	Solid amber (590+/-3 nm)	S0 or S5	< 10%

- S0 (ON): Computer is turned on.
- S4 (Hibernate): The computer consumes the least power in the Hibernate state than in the ON or OFF state. The computer is almost in the OFF state. The context data is written to a storage device, allowing you to resume from where you left when the computer is turned on.
- S5 (OFF): The computer is in a shutdown state.

Service Tag

The service tag is a unique alphanumeric identifier that allows Dell service technicians to identify the hardware components in your computer and access warranty information.

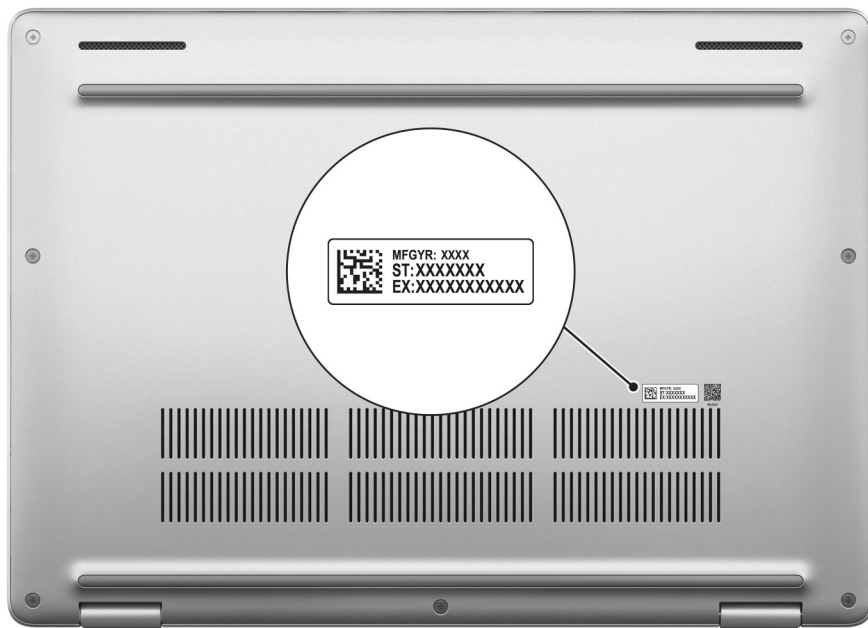


Figure 10. Service tag location

Set up your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1

About this task

NOTE: The images in this document may differ from your computer depending on the configuration you ordered.

Steps

1. Connect the power adapter and press the power button.



Figure 11. Connect the power adapter and press the power button

NOTE: The battery may go into power-saving mode during shipment to conserve charge on the battery. Ensure that the power adapter is connected to your computer when it is turned on for the first time.

2. Finish the operating system setup.

For Ubuntu:

Follow the on-screen instructions to complete the setup. For more information about installing and configuring Ubuntu, search in the Knowledge Base Resource at [Dell Support Site](#).

For Windows:

Follow the on-screen instructions to complete the setup. When setting up, it is recommended that you:

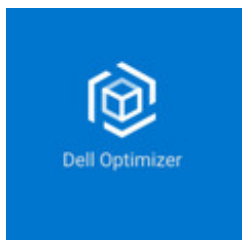




- Connect to a network for Windows updates.

NOTE: If connecting to a secured wireless network, enter the password for the wireless network access when prompted.

- If connected to the Internet, sign-in with an existing Microsoft account or create an account. If not connected to the Internet, create an offline account.

- On the **Support and Protection** screen, enter your contact details.
3. Locate and use Dell apps from the Windows Start menu—Recommended.

Table 2. Locate Dell apps


Resources	Description
	<p>Dell Optimizer is an application that is designed to enhance computer performance and productivity by optimizing settings for power, battery, display, collaboration touchpad, and presence detection. It also provides access to applications purchased with your new computer.</p> <p>For more information, see Dell Optimizer User's Guide at Dell Support Site.</p>
	<p>Dell Product Registration</p> <p>Register your computer with Dell.</p>
	<p>Dell Help & Support</p> <p>Access help and support for your computer.</p>
	<p>SupportAssist</p> <p>SupportAssist is a proactive and predictive technology that offers automated technical support for Dell computers. It proactively monitors both hardware and software, addressing performance issues, preventing security threats, and automating engagement with Dell Technical Support.</p> <p>For more information, see SupportAssist documentation at Dell Support Site.</p> <p> NOTE: In SupportAssist, click the warranty expiry date to renew or upgrade your warranty.</p>

Specifications of Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1

Dimensions and weight

The following table lists the height, width, depth, and weight of your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.

Table 3. Dimensions and weight

Description		400 nits non-touchscreen laptop	300 nits non-touchscreen and 300 nits touchscreen laptop	300 nits touchscreen 2-in-1
Height:				
	Front height	19.78 mm (0.78 in.)	19.50 mm (0.77 in.)	19.92 mm (0.78 in.)
	Rear height	19.77 mm (0.77 in.)	19.98 mm (0.79 in.)	20.17 mm (0.79 in.)
	Maximum height	19.95 mm (0.79 in.)	21.20 mm (0.83 in.)	20.25 mm (0.80 in.)
Width		313.50 mm (12.34 in.)	313.50 mm (12.34 in.)	313.50 mm (12.34 in.)
Depth		224.00 mm (8.82 in.)	224.00 mm (8.82 in.)	224.00 mm (8.82 in.)
Weight (maximum)		1.43 kg (3.15 lb)	1.56 kg (3.44 lb)	1.59 kg (3.51 lb)
 NOTE: The weight of your computer depends on the configuration ordered and manufacturing variability.				

Processor

The following table lists the details of the processors that are supported in your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.

Table 4. Processor (For computers shipped with AMD Ryzen AI 300 series)

Description		Option one	Option two	Option three
Processor type		AMD Ryzen AI 5 PRO 340	AMD Ryzen AI 7 PRO 350	AMD Ryzen AI 9 HX PRO 370
Configurable Thermal Design Power (cTDP)		15 W–54 W	15 W–54 W	15 W–54 W
Thermal Mode/Thermal Design Power (TDP)				
	Optimized	17 W	17 W	17 W
	Performance	19 W	19 W	19 W
Processor core count		6	8	12
Processor thread count		12	16	24
Processor speed		Up to 4.8 GHz	Up to 5.0 GHz	Up to 5.1 GHz
Processor cache L2		6 MB	8 MB	12 MB

Table 4. Processor (For computers shipped with AMD Ryzen AI 300 series) (continued)

Description	Option one	Option two	Option three
Processor cache L3	16 MB	16 MB	24 MB
Integrated graphics	AMD Radeon 840M Graphics	AMD Radeon 860M Graphics	AMD Radeon 890M Graphics
Neural Processing Units (NPU) Performance	Up to 50 TOPS	Up to 50 TOPS	Up to 50 TOPS

Table 5. Processor (For computers shipped with AMD Ryzen 200 series)

Description	Option one	Option two	Option three	Option four	Option five	Option six
Processor type	AMD Ryzen 3 210	AMD Ryzen 5 220	AMD Ryzen 5 PRO 215	AMD Ryzen 5 PRO 220	AMD Ryzen 5 PRO 230	AMD Ryzen 7 PRO 250
Configurable Thermal Design Power (cTDP)	15 W–30 W	15 W–30 W	15 W–30 W	15 W – 30 W	15 W–30 W	15 W–30 W
Thermal Mode/Thermal Design Power (TDP)						
Optimized	17 W	17 W	17 W	17 W	17 W	17 W
Performance	19 W	19 W	19 W	19 W	19 W	19 W
Processor core count	4	6	6	6	6	8
Processor thread count	8	12	12	12	12	16
Processor speed	Up to 4.7 GHz	Up to 4.9 GHz	Up to 4.9 GHz	Up to 4.9 GHz	Up to 4.9 GHz	Up to 5.1 GHz
Processor cache L2	4 MB	6 MB	6 MB	6 MB	6 MB	8 MB
Processor cache L3	8 MB	16 MB	16 MB	16 MB	16 MB	16 MB
Integrated graphics	AMD Radeon 740M Graphics	AMD Radeon 740M Graphics	AMD Radeon 740M Graphics	AMD Radeon 740M Graphics	AMD Radeon 760M Graphics	AMD Radeon 780M Graphics
Neural Processing Units (NPU) Performance	Not applicable	Not applicable	Not applicable	Not applicable	Up to 16 TOPS	Up to 16 TOPS

Chipset

The following table lists the details of the chipset that is supported by your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.

Table 6. Chipset

Description	Values
Chipset	Integrated in the processor
Processor	<ul style="list-style-type: none"> • AMD Ryzen 3/5 • AMD Ryzen 5/7 PRO • AMD Ryzen AI 5/7 PRO • AMD Ryzen AI 9 HX PRO
DRAM bus width	64-bit
Flash EPROM	64 MB
PCIe bus	Up to Gen4

Operating system

Your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1 supports the following operating systems:

- Windows 11 Home
- Windows 11 Pro
- Windows 10 Home
- Windows 10 Pro
- Ubuntu Linux 24.04 LTS

i **NOTE:** Ubuntu is supported only on Dell Pro 14 Plus.

i **NOTE:** If you downgrade your computer from Windows 11 to Windows 10 22H2, Dell Technologies support follows the Microsoft Windows 10 End of Support plan.

i **NOTE:** Windows 10 Home and Windows 10 Pro is supported only on computers shipped with AMD Ryzen 200 series processors.

Memory

The following table lists the memory specifications of your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.

Table 7. Memory specifications

Description	Values
Memory slots	On-board memory <i>i</i> NOTE: The memory is integrated on the system board and is not upgradeable.
Memory type	LPDDR5X
Memory speed	7500 MT/s
Maximum memory configuration	64 GB
Minimum memory configuration	16 GB
Memory configurations supported	<ul style="list-style-type: none">• 16 GB: LPDDR5X, 7500 MT/s• 32 GB: LPDDR5X, 7500 MT/s• 64 GB: LPDDR5X, 7500 MT/s

External ports and slots

The following table lists the external ports and slots of your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.

Table 8. External ports and slots

Description	Values
Network port	One optional RJ45 ethernet port (1 Gbps)
USB ports	<ul style="list-style-type: none">• Two USB (40 Gbps) Type-C with DisplayPort Alt Mode/ Power Delivery ports <i>i</i> NOTE: You can connect a Dell Docking Station to these ports. <ul style="list-style-type: none">• One USB 3.2 Gen 1 (5 Gbps) port with PowerShare

Table 8. External ports and slots (continued)

Description	Values
	<ul style="list-style-type: none"> One USB 3.2 Gen 1 (5 Gbps) port
Audio port	One Global headset jack
Video port(s)	One HDMI 2.1 TMDS port
Media-card reader	One smart-card reader slot (optional)
Power-adaptor port	USB Type-C power input
Security-cable slot	One wedge-shaped security slot
SIM-card slot	One Nano-SIM card slot (optional)

Internal slots

The following table lists the internal slots of your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.

Table 9. Internal slots

Description	Values
M.2	<ul style="list-style-type: none"> One M.2 2230 or M.2 2280 solid-state drive slot One M.2 3042 for 4G WWAN slot (optional) <p>NOTE: To learn more about the features of different types of M.2 cards, search in the Knowledge Base Resource at Dell Support Site.</p>

Ethernet

Table 10. Ethernet specifications

Description	Values
Model number	<ul style="list-style-type: none"> Realtek RTL8111EPP Integrated 10/100/1000M ethernet controller DASH configuration Realtek RTL8111HS Integrated 10/100/1000M ethernet controller Non-DASH configuration
Transfer rate	10/100/1000 Mbps

Wireless module

The following table lists the Wireless Local Area Network (WLAN) module that is supported on your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.

Table 11. Wireless module specifications

Description	Values
Model number	MediaTek MT7925
Transfer rate	Up to 2882 Mbps

Table 11. Wireless module specifications (continued)

Description	Values
Frequency bands supported	2.4 GHz/5 GHz/6 GHz
Wireless standards	<ul style="list-style-type: none"> • Wi-Fi 802.11a/b/g • Wi-Fi 4 (Wi-Fi 802.11n) • Wi-Fi 5 (Wi-Fi 802.11ac) • Wi-Fi 6E (Wi-Fi 802.11ax) • Wi-Fi 7 (Wi-Fi 802.11be)
Encryption	<ul style="list-style-type: none"> • 128-bit AES-CCMP • 256-bit AES-GCMP • 256-GMAC
Bluetooth wireless card	Bluetooth 5.4 wireless card

WWAN module

The following table lists the Wireless Wide Area Network (WWAN) module that is supported in your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.



NOTE: The WWAN module is available only on certain configurations and in certain regions.



NOTE: Availability of the eSIM feature on this module depends on your region and mobile carrier's requirements.





NOTE: For instructions on how to setup SIM or eSIM connections on your computer, see the *SIM/eSIM Setup Guide for Windows* available with your product documentation at [Dell Support Site](#).

Table 12. WWAN module specifications

Description	Values
Model number	DW5826e, Qualcomm Snapdragon SDX12 Global LTE-Advanced, CAT12
Form factor	M.2 3042 Key-B
Host interface	USB 3.0/2.0
Network standard	<ul style="list-style-type: none"> • LTE FDD/TDD • WCDMA • GPS/BDS/GLONASS/Galileo/BeiDou/QZSS
Transfer data rate	<ul style="list-style-type: none"> • Up to 600 Mbps DL(CAT12) • Up to 150 Mbps UL
Operating frequency bands	<ul style="list-style-type: none"> • LTE (B1, B2, B3, B4, B5, B7, B8, B12, B13, B14, B18, B19, B20, B25, B26, B28, B29, B32, B38, B39, B40, B41, B42, B43, B48, B66, B71) • WCDMA (1, 2, 4, 5, 6, 8, 9, 19)
Power supply	DC 3.135 V to 4.4 V, Typical 3.3 V
SIM card	Supported through external SIM slot
eSIM with dual SIM (DSSA)	Supported

Table 12. WWAN module specifications (continued)

Description	Values
	 NOTE: The availability of eSIM functionality embedded on the module is dependent on the region and specific carrier requirements.
Antenna diversity	Supported
Radio on/off	Supported
Wake On Wireless	Supported
Temperature	<ul style="list-style-type: none"> • Normal operating temperature: –30°C to +70°C • Extended operating temperature: –40°C to +85°C • Storage temperature: –40°C to +85°C
Antenna connector	<ul style="list-style-type: none"> • WWAN Main Antenna x 1 • WWAN Diversity Antenna x 1
 NOTE: For instructions to find your computer's International Mobile Equipment Identity (IMEI) number, search in the Knowledge Base Resource at Dell Support Site .	

Audio

The following table lists the audio specifications of your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.

Table 13. Audio specifications

Description	Values
Audio controller	Realtek ALC3329 SoundReal
Stereo conversion	Supported
Internal audio interface	Soundwire interface
External audio interface	Global headset jack
Number of speakers	Two
Internal-speaker amplifier	Not supported
External volume controls	Keyboard shortcut controls
Speaker output:	
	Average
	2 W
	Peak
	2.5 W
Microphone	Digital-array microphones

Storage

This section lists the storage options on your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.

Your computer supports one of the following solid state drive.

Table 14. Storage specifications

Storage type	Interface type	Capacity
M.2 2280 solid state drive, self-encrypting drive	PCIe Gen4 NVMe, up to 64 Gbps	Up to 2 TB
M.2 2230 solid state drive	PCIe Gen4 NVMe, up to 64 Gbps	Up to 1 TB

Keyboard

The following table lists the keyboard specifications of your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.

Table 15. Keyboard specifications

Description	Values
Keyboard type	<ul style="list-style-type: none"> Standard non-backlit keyboard Standard backlit keyboard
Keyboard layout	QWERTY
Number of keys	<ul style="list-style-type: none"> Arabic, English International, English US, Thai, French (Canadian), Canada Bilingual (MUI), Chinese Traditional, Greek, Hebrew, Korean, Russian, and Ukrainian: 79 keys Portuguese Iberian, English UK, Belgian, Bulgarian, Czech/Slovak (MUI), Danish, Estonian, French European, German, Hungarian, Icelandic, Italian, Nordic (MUI), Norwegian, Spanish (Castilian), Swedish/Finnish, Swiss/European (MUI), Turkish, Turkish (F), Slovenian, Spanish (Latin America): 80 keys Portuguese (Brazil): 81 keys French Canadian Quebec (ACNOR): 81 keys Japanese: 83 keys
Key pitch	X=19.05 mm key pitch Y=18.05 mm key pitch
Keyboard shortcuts	<p>Some keys on your keyboard have two symbols on them. These keys can be used to type alternate characters or to perform secondary functions. To type the alternate character, press Shift and the desired key. To perform secondary functions, press Fn and the desired key.</p> <p>NOTE: Press Fn+Esc to switch the primary behavior of the function keys (F1-F12) between two modes - multimedia key mode and function key mode.</p> <p>NOTE: You can define the primary behavior of the function keys (F1-F12) by changing Function Key Behavior in BIOS setup program.</p> <p>For more information, see Keyboard function keys.</p>

Keyboard function keys of Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1

NOTE: Keyboard characters may differ depending on the keyboard language configuration. Keys that are used for shortcuts remain the same across all language configurations.

Some keys on your keyboard have two symbols on them. These keys can be used to type alternate characters or to perform secondary functions. The symbol that is shown on the lower part of the key refers to the character that is typed out when the

key is pressed. If you press shift and the key, the symbol that is shown on the upper part of the key is typed out. For example, if you press **2**, 2 is typed out; if you press **Shift + 2**, @ is typed out.

The keys F1-F12 at the top row of the keyboard are function keys for multimedia control, as indicated by the icon on the key. Press the function key to enable the task represented by the icon. For example, pressing F1 mutes the audio (see the table below).

However, if the function keys F1-F12 are needed for specific software applications, multimedia functionality can be disabled by pressing **fn + Esc**. Later, multimedia control can be invoked by pressing **fn** and the respective function key. For example, mute audio by pressing **fn + F1**.





 **NOTE:** You can also define the primary behavior of the function keys (F1–F12) by changing **Function Key Behavior** in the BIOS setup program.

Table 16. Function key primary behavior

Function key	Primary behavior
F1	Mute or unmute audio
F2	Decrease volume
F3	Increase volume
F4	Mute or unmute microphone
F5	Turn on or turn off backlit keyboard (optional).  NOTE: Non-backlit keyboards have the F10 function key without the backlit icon and do not support the toggle backlit keyboard function.  NOTE: Toggle the backlit keyboard status through off, low, and high.
F6	Decrease display brightness
F7	Increase display brightness
F8	Switch to external display
F10	Print screen
F11	Home
F12	End
Copilot	Launch Copilot in Windows  NOTE: If Copilot in Windows is not available on your computer, the Copilot key launches Windows Search. For more information about Copilot in Windows, search in the Knowledge Base Resource at the Dell Support Site .

The **fn** key is also used with selected keys on the keyboard to invoke secondary functions.

Table 17. Secondary behavior

Function key	Secondary behavior
fn + F1	Operating system and application-specific F1 behavior
fn + F2	Operating system and application-specific F2 behavior
fn + F3	Operating system and application-specific F3 behavior
fn + F4	Operating system and application-specific F4 behavior
fn + F5	Operating system and application-specific F5 behavior
fn + F6	Operating system and application-specific F6 behavior
fn + F7	Operating system and application-specific F7 behavior
fn + F8	Operating system and application-specific F8 behavior
fn + F10	Operating system and application-specific F10 behavior

Table 17. Secondary behavior (continued)

Function key	Secondary behavior
fn + F11	Operating system and application-specific F11 behavior
fn + F12	Operating system and application-specific F12 behavior
fn + Copilot	Context menu behavior
fn + Esc	Toggle Function key lock
fn + PgUp (cursor up)	Scroll up the document or page
fn + PgDn (cursor down)	Scroll down the document or page

Camera (optional)

The following table lists the camera specifications of your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1


 **NOTE:** These specifications are applicable only for computers shipped with a camera module.

Table 18. Camera specifications

Description		Values
Number of cameras		One
Camera type		<ul style="list-style-type: none"> FHD RGB HDR camera FHD RGB-IR HDR camera 5MP RGB-IR MIPI HDR camera
Camera location		Front
Camera sensor type		CMOS sensor technology
Camera resolution:		
	Still image	<ul style="list-style-type: none"> 2.07 megapixels 5.20 megapixels
	Video	<ul style="list-style-type: none"> 1920 x 1080 at 30 fps 2560 x 1440 at 30 fps
Infrared camera resolution:		
	Still image	0.23 megapixels
	Video	640 x 360 at 15 fps
Diagonal viewing angle:		
	Camera	<ul style="list-style-type: none"> 80.20 degrees 91.20 degrees
	Infrared camera	86.60 degrees

Touchpad

The following table lists the touchpad specifications of your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.

Table 19. Touchpad specifications

Description		Values
Touchpad resolution:		>=300dpi
Touchpad dimensions:		
	Horizontal	124.40 mm (4.90 in.)
	Vertical	72.40 mm (2.85 in.)
Touchpad gestures		For more information about the touchpad gestures that are available on: <ul style="list-style-type: none">Windows, see the Microsoft Knowledge Base article at Microsoft Support Site.Ubuntu, see Ubuntu Support Site.

Fingerprint reader (optional)

The following table lists the specifications of the optional fingerprint-reader of your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.

Table 20. Fingerprint reader specifications

Description	Values
Sensor technology	Trans-capacitive sensing
Sensor resolution	500 dpi
Sensor pixel size	<ul style="list-style-type: none">X: 108Y: 88


Power adapter

The following table lists the power adapter specifications of your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.

Table 21. Power adapter specifications

Description		Option one	Option two	Option three
Type		60 W Blackchin adapter, USB-C	65 W Pecos adapter, USB-C	100 W Miami Beach adapter, USB-C
Power-adapter dimensions:				
	Height	22 mm (0.87 in.)	28 mm (1.10 in.)	26.50 mm (1.04 in.)
	Width	55 mm (2.16 in.)	51 mm (2.01 in.)	60 mm (2.36 in.)
	Depth	66 mm (2.60 in.)	112 mm (4.41 in.)	122 mm (4.80 in.)
Input voltage		100 VAC to 240 VAC	100 VAC to 240 VAC	100 VAC to 240 VAC
Input frequency		50 Hz to 60 Hz	50 Hz to 60 Hz	50 Hz to 60 Hz

Table 21. Power adapter specifications (continued)

Description		Option one	Option two	Option three
Input current (maximum)		1.70 A	1.70 A	1.70 A
Output current (continuous)		<ul style="list-style-type: none"> 20 V/3 A (continuous) 15 V/3 A (continuous) 9 V/3 A (continuous) 5 V/3 A (continuous) 	<ul style="list-style-type: none"> 20 V/3.25 A (continuous) 15 V/3 A (continuous) 9 V/3 A (continuous) 5 V/3 A (continuous) 	<ul style="list-style-type: none"> 20 V/5 A (continuous) 15 V/3 A (continuous) 9 V/3 A (continuous) 5 V/3 A (continuous)
Rated output voltage		<ul style="list-style-type: none"> 20 VDC 15 VDC 9 VDC 5 VDC 	<ul style="list-style-type: none"> 20 VDC 15 VDC 9 VDC 5 VDC 	<ul style="list-style-type: none"> 20 VDC 15 VDC 9 VDC 5 VDC
Temperature range:				
	Operating	0°C to 40°C (32°F to 104°F)	0°C to 40°C (32°F to 104°F)	0°C to 35°C (32°F to 95°F)
	Storage	–20°C to 70°C (–4°F to 158°F)	–40°C to 70°C (–40°F to 158°F)	–40°C to 70°C (–40°F to 158°F)
 CAUTION: Operating and storage temperature ranges may differ among components, so operating or storing the device outside these ranges may impact the performance of specific components.				

Power adapter requirements (computers shipped with 3-cell, 45 Wh battery)

This section contains the power adapter requirements for the Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.


 **NOTE:** If you did not purchase the Dell-branded power adapter that is recommended for your computer, ensure that the power adapter you use meets the following requirements:

Table 22. Power adapter requirements for Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1



Description	Value
Power that is required from a power adapter to achieve optimal performance.	65 W
Power that is required to charge the computer at a slower speed.  NOTE: A warning message may appear informing you about the use of a lower-powered adapter and slower charging speed.	Less than 60 W
Minimum power that is required from a power adapter to operate the computer and charge the battery.  NOTE: A warning message appears informing you about the use of a lower-powered adapter and slower charging speed.	45 W
USB Power Delivery (PD) fast charging	Supported

Table 22. Power adapter requirements for Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1 (continued)

Description	Value
ExpressCharge mode	<p>i NOTE: Ensure that the computer with a 45 Wh battery is connected to a 65 W power adapter for this feature to be supported.</p> <p>i NOTE: ExpressCharge mode must also be enabled in the BIOS Setup screen by selecting Power > Battery Configuration > ExpressCharge, then clicking Apply Changes.</p>

Power adapter requirements (computers shipped with 3-cell, 55 Wh battery)

This section contains the power adapter requirements for the Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.

i **NOTE:** If you did not purchase the Dell-branded power adapter that is recommended for your computer, ensure that the power adapter you use meets the following requirements:

Table 23. Power adapter requirements for Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1

Description	Value
Power that is required from a power adapter to achieve optimal performance.	65 W
Power that is required to charge the computer at a slower speed. i NOTE: A warning message may appear informing you about the use of a lower-powered adapter and slower charging speed.	Less than 60 W
Minimum power that is required from a power adapter to operate the computer and charge the battery. i NOTE: A warning message appears informing you about the use of a lower-powered adapter and slower charging speed.	45 W
USB Power Delivery (PD) fast charging	Supported
ExpressCharge mode	<p>i NOTE: Ensure that the computer with a 55 Wh battery is connected to a 100 W power adapter for this feature to be supported.</p> <p>i NOTE: ExpressCharge mode must also be enabled in the BIOS Setup screen by selecting Power > Battery Configuration > ExpressCharge, then clicking Apply Changes.</p>

Battery

The following table lists the battery specifications of your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.

Table 24. Battery specifications

Description		Option one	Option two	Option three	Option four
Battery type		3-cell, 45 Wh, ExpressCharge, ExpressCharge Boost	3-cell, 55 Wh, ExpressCharge, ExpressCharge Boost	3-cell, 45 Wh, Long Life Cycle, ExpressCharge, ExpressCharge Boost	3-cell, 55 Wh, Long Life Cycle, ExpressCharge, ExpressCharge Boost
Battery voltage		11.25 VDC	11.70 VDC	11.25 VDC	11.70 VDC
Battery weight (minimum)		0.20 kg (0.44 lb)	0.22 kg (0.48 lb)	0.20 kg (0.44 lb)	0.22 kg (0.48 lb)
Battery dimensions:					
	Height	72.80 mm (2.83 in.)	72.80 mm (2.83 in.)	72.80 mm (2.83 in.)	72.80 mm (2.83 in.)
	Width	254.80 mm (10.03 in.)	254.80 mm (10.03 in.)	254.80 mm (10.03 in.)	254.80 mm (10.03 in.)
	Depth	6.30 mm (0.25 in.)	6.30 mm (0.25 in.)	6.30 mm (0.25 in.)	6.30 mm (0.25 in.)
Temperature range:					
	Operating	<ul style="list-style-type: none"> Charge: 0°C to 45°C (32°F to 113°F) Discharge: 0°C to 70°C (32°F to 158°F) 	<ul style="list-style-type: none"> Charge: 0°C to 45°C (32°F to 113°F) Discharge: 0°C to 70°C (32°F to 158°F) 	<ul style="list-style-type: none"> Charge: 0°C to 45°C (32°F to 113°F) Discharge: 0°C to 70°C (32°F to 158°F) 	<ul style="list-style-type: none"> Charge: 0°C to 45°C (32°F to 113°F) Discharge: 0°C to 70°C (32°F to 158°F)
	Storage	–20°C to 65°C (–4°F to 149°F)	–20°C to 65°C (–4°F to 149°F)	–20°C to 65°C (–4°F to 149°F)	–20°C to 65°C (–4°F to 149°F)
Battery operating time		Varies depending on operating conditions and can significantly reduce under certain power-intensive conditions.	Varies depending on operating conditions and can significantly reduce under certain power-intensive conditions.	Varies depending on operating conditions and can significantly reduce under certain power-intensive conditions.	Varies depending on operating conditions and can significantly reduce under certain power-intensive conditions.
Battery charging time (approximate) i NOTE: Control the charging time, duration, start and end time, and so on using the Dell Power Manager application. For more information about Dell Power Manager, search in the Knowledge Base Resource at Dell Support Site .		Standard charge/ Predominately AC User Charge Method: <ul style="list-style-type: none"> 0°C to 15°C maximum allowable charge time from 0% to 100% RSOC is 4 hours 16°C to 45°C maximum allowable charge time from 0% to 100% RSOC is 3 hours Express Charge Method:	Standard charge/ Predominately AC User Charge Method: <ul style="list-style-type: none"> 0°C to 15°C maximum allowable charge time from 0% to 100% RSOC is 4 hours 16°C to 45°C maximum allowable charge time from 0% to 100% RSOC is 3 hours Express Charge Method:	Standard charge/ Predominately AC User Charge Method: <ul style="list-style-type: none"> 0°C to 15°C maximum allowable charge time from 0% to 100% RSOC is 4 hours 16°C to 45°C maximum allowable charge time from 0% to 100% RSOC is 3 hours Express Charge Method:	Standard charge/ Predominately AC User Charge Method: <ul style="list-style-type: none"> 0°C to 15°C maximum allowable charge time from 0% to 100% RSOC is 4 hours 16°C to 45°C maximum allowable charge time from 0% to 100% RSOC is 3 hours Express Charge Method:

Table 24. Battery specifications (continued)

Description	Option one	Option two	Option three	Option four
	<ul style="list-style-type: none"> 16°C to 45°C maximum allowable charge time from 0% to 60% RSOC is 1 hours 16°C to 45°C maximum allowable charge time from 0% to 100% RSOC is 2 hours Express Charge Boost charge Method: <ul style="list-style-type: none"> 16°C to 45°C maximum allowable charge time from 0% to 35% RSOC is 20 min 	<ul style="list-style-type: none"> 16°C to 45°C maximum allowable charge time from 0% to 60% RSOC is 1 hours 16°C to 45°C maximum allowable charge time from 0% to 100% RSOC is 2 hours Express Charge Boost charge Method: <ul style="list-style-type: none"> 16°C to 45°C maximum allowable charge time from 0% to 35% RSOC is 20 min 	<ul style="list-style-type: none"> 16°C to 45°C maximum allowable charge time from 0% to 60% RSOC is 1 hours 16°C to 45°C maximum allowable charge time from 0% to 100% RSOC is 2 hours Express Charge Boost charge Method: <ul style="list-style-type: none"> 16°C to 45°C maximum allowable charge time from 0% to 35% RSOC is 20 min 	<ul style="list-style-type: none"> 16°C to 45°C maximum allowable charge time from 0 to 60% RSOC is 1 hours 16°C to 45°C maximum allowable charge time from 0 to 100% RSOC is 2 hours Express Charge Boost charge Method: <ul style="list-style-type: none"> 16°C to 45°C maximum allowable charge time from 0% to 35% RSOC is 20 min
Coin-cell battery	Not supported	Not supported	Not supported	Not supported

CAUTION: Operating and storage temperature ranges may differ among components, so operating or storing the device outside these ranges may impact the performance of specific components.

CAUTION: Dell recommends that you charge the battery regularly for optimal power consumption. If your battery charge is completely depleted, connect the power adapter, turn on your computer, and then restart your computer to reduce the power consumption.

Power requirements (for computers shipped with 3-cell, 45 Wh battery)

NOTE: The information in this section is applicable to the European Union (EU) countries.

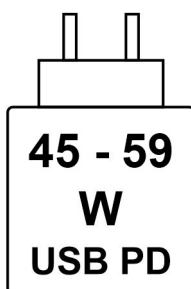


Figure 12. Pictogram for power charging requirements

The power that is delivered by the charger must be between a minimum of 45 Watts that is required by the radio equipment, and a maximum of 59 Watts in order to achieve the maximum charging speed.

This computer supports USB Power Delivery (PD) fast charging.

Power requirements (for computers shipped with 3-cell, 55 Wh battery)

NOTE: The information in this section is applicable to the European Union (EU) countries.

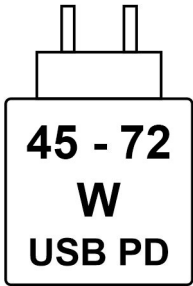


Figure 13. Pictogram for power charging requirements

The power that is delivered by the charger must be between a minimum of 45 Watts that is required by the radio equipment, and a maximum of 72 Watts in order to achieve the maximum charging speed.

This computer supports USB Power Delivery (PD) fast charging.

Display

The following table lists the display specifications of your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.

Table 25. Display specifications

Description		Option one	Option two	Option three	Option four	Option five
Display type		14-inch Full High Definition (FHD+)	14-inch Full High Definition (FHD+)	14-inch (QHD+)	14-inch Full High Definition (FHD+) NOTE: Applicable for 2-in-1 configuration only.	14-inch Full High Definition (FHD+)
Touch options		No	Yes	No	Yes	No
Anti-glare vs glossy finish		Anti-glare	Anti-glare	Anti-glare	Anti-reflection	Anti-glare
Display-panel technology		Wide Viewing Angle (WVA)	Wide Viewing Angle (WVA)	Wide Viewing Angle (WVA)	Wide Viewing Angle (WVA)	Wide Viewing Angle (WVA)
Display-panel dimensions (active area):						
	Height	188.50 mm (7.42 in.)	188.50 mm (7.42 in.)	188.50 mm (7.42 in.)	188.50 mm (7.42 in.)	188.50 mm (7.42 in.)
	Width	301.59 mm (11.87 in.)	301.59 mm (11.87 in.)	301.59 mm (11.87 in.)	301.59 mm (11.87 in.)	301.59 mm (11.87 in.)
	Diagonal	355.60 mm (14 in.)	355.60 mm (14 in.)	355.60 mm (14 in.)	355.60 mm (14 in.)	355.60 mm (14 in.)

Table 25. Display specifications (continued)

Description	Option one	Option two	Option three	Option four	Option five
Display-panel native resolution	1920 x 1200	1920 x 1200	2560 x 1600	1920 x 1200	1920 x 1200
Luminance (typical)	300 nits	300 nits	300 nits	300 nits	400 nits
Megapixels	2.3	2.3	4.1	2.3	2.3
Color gamut	45% NTSC	100% sRGB	100% sRGB	100% sRGB	100% sRGB
Pixels Per Inch (PPI)	162	162	215.6	162	162
Contrast ratio (typical)	800:1	800:1	1200:1	1000:1	1500:1
Response time (maximum)	35 ms	35 ms	35 ms	35 ms	35 ms
Refresh rate	60 Hz	60 Hz	90 Hz	60 Hz	30 Hz to 60 Hz
Horizontal view angle	+/- 80 degrees (min)	+/- 80 degrees (min)	+/- 80 degrees (min)	+/- 88 degrees (min)	+/- 88 degrees (min)
Vertical view angle	+/- 80 degrees (min)	+/- 80 degrees (min)	+/- 80 degrees (min)	+/- 88 degrees (min)	+/- 88 degrees (min)
Pixel pitch	0.157	0.157	0.157	0.157	0.157
Power consumption (maximum)	3.68 W	4.40 W	4.40 W	3.10 W	2.50 W

Hardware security

The following table lists the hardware security of your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.

Table 26. Hardware security

Hardware security
Noble Lock
Trusted Platform Module (TPM) 2.0 discrete
FIPS 140-2 certification for TPM
TCG Certification for TPM (Trusted Computing Group)
Touch fingerprint reader in the power button available with ControlVault 3+
Contacted Smart Card with ControlVault 3+
Contactless Smart Card and NFC with ControlVault 3+
SED SSD NVMe, SSD and HDD (Opal and non-Opal) per SDL
Chassis Intrusion Detection
BIOS - TPM clear and/or system boot lock after chassis intrusion detection

GPU—Integrated

The following table lists the specifications of the integrated Graphics Processing Unit (GPU) supported by your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.

Table 27. GPU—Integrated

Controller	Memory size	Processor
AMD Radeon 740M Graphics	Shared system memory	<ul style="list-style-type: none">• AMD Ryzen 3 210• AMD Ryzen 5 220• AMD Ryzen 5 PRO 220
AMD Radeon 760M Graphics	Shared system memory	AMD Ryzen 5 PRO 230
AMD Radeon 780M Graphics	Shared system memory	AMD Ryzen 7 PRO 250
AMD Radeon 840M Graphics	Shared system memory	AMD Ryzen AI 5 PRO 340
AMD Radeon 860M Graphics	Shared system memory	AMD Ryzen AI 7 PRO 350
AMD Radeon 890M Graphics	Shared system memory	AMD Ryzen AI 9 HX PRO 370

Smart-card reader

Contactless smart-card reader

This section lists the contactless smart-card reader specifications of your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1. This module is only available in computers shipped with smart-card readers.

Table 28. Contactless smart-card reader specifications

Title	Description	Dell ControlVault 3 Plus Contactless smart-card reader with NFC
FeliCA Card Support	Reader and software capable of supporting Felica contactless cards	Yes
Prox (Proximity) (125 KHz) Card support	Reader and software capable of supporting Prox/Proximity/125 KHz contactless cards	No
ISO 14443 Type A Card Support	Reader and software capable of supporting ISO 14443 Type A contactless cards	Yes
ISO 14443 Type B Card Support	Reader and software capable of supporting ISO 14443 Type B contactless cards	Yes
ISO/IEC 21481	Reader and software capable of supporting ISO/IEC 21481 compliant contactless cards and tokens	Yes
ISO/IEC 18092	Reader and software capable of supporting ISO/IEC 18092 compliant contactless cards and tokens	Yes
ISO 15693 Card Support	Reader and software capable of supporting ISO15693 contactless cards	Yes
NFC Tag Support	Supports reading and processing of NFC compliant tag information	Yes
NFC Reader Mode	Support for NFC Forum Defined Reader mode	Yes

Table 28. Contactless smart-card reader specifications (continued)

Title	Description	Dell ControlVault 3 Plus Contactless smart-card reader with NFC
NFC Writer Mode	Support for NFC Forum Defined Writer mode	Yes
NFC Peer-to-Peer Mode	Support for NFC Forum Defined Peer to Peer mode	Yes
NFC Proximity OS Interface	Enumerates NFP (Near Field Proximity) device for operating system to utilize	Yes
PC/SC operating system interface	Personal Computer/Smart Card specification for integration of hardware readers into personal computer environments	Yes
CCID driver compliance	Common driver support for Integrated Circuit Card Interface Device for operating system level drivers	Yes
Dell ControlVault support	The device connects to Dell ControlVault for usage and processing	Yes


 **NOTE:** 125 KHz proximity cards are not supported.

Table 29. Contactless card types supported

Interface	Card type	Supported functionality
NFC Forum (Microsoft Proximity Device)	Type 1 tag	Read/Write NDEF
	Type 2 tag	Read/Write NDEF
	Type 3 tag	Read/Write NDEF
	Type 4 tag	Read/Write NDEF
	Type 5 tag	Read/Write NDEF
	P2P	Exchange NDEF
RFID (Microsoft Smartcard Device)	ISO14443A	Read UUID and APDU Exchange (ISO7816)
	ISO14443B	Read UUID and APDU Exchange (ISO7816)
	Sony FeliCa	Read UUID only
	Legacy iClass (ISO15693)	Read UUID only
	MIFARE Classic	Read UUID only
	Low Frequency (125 KHz)	Not supported

Table 30. Supported cards

Manufacturer	Card
HID	JCOP readertest3 A card (14443a)
	1430 1L
	MIFARE DESFire D8H
	DESFIRE 4K Standard - 1450NGGNN
	iClass 16K/16 - 2002PGGMN
	iClass SR 16K/16 - 2002HPGGMN

Table 30. Supported cards (continued)

Manufacturer	Card
	iCLASS 2K tag
	iCLASS GP - 2003 PGGMN
	iClass Clamshell - 2080PMSMV
	iClass Prox 16K/16 - 2022BGGMNN
	Mifare M1P 1430 NGGNN
	iclass Prox 2020BGGMNM
	DesFire D8P 1456CSGMN
	iCLASS MIFARE Px GM49Y 2623BNPGGBNAB
	iCLASS MIFARE Px 8M1L
	iClass SEOS JW 5006PGGMN
	Crescendo iCLASS Px G8H
	iCLASS Seos IY
	SEOS JMC4 J1Y 5806VNG1NNN4
	SEOS Key FOB 5266PNNA
	SEOS Clamshell 5656PMSAV
	SEOS + Prox 5106RGGMNN
	SEOS + DESFire 5906PNG1ANN7
	SEOS iClass 5006PGGMN7
	Seos Essential + Prox 551PPGGANN
	iCLASS 2K 2000PGGMN
	iCLASS 2K 3000PGGMN
	MIFARE DESFire 3700CPGGAN
	iCLASS DP
	DESFire 1Y
NXP/Mifare	Mifare DESFire 8K White PVC card
	Mifare Classic 1K White PVC card
	NXP Mifare Classic S50 ISO card
	Mifare DESFire 2K
	Mifare Plus S 2K/4K
	Mifare Plus X 4K
G&D	idOnDemand - SCE3.2 144K
	SCE6.0 FIPS 80K Dual + 1K Mifare
	SCE6.0 nonFIPS 80K Dual + 1K Mifare
	SCE6.0 FIPS 144K Dual + 1K Mifare
	SCE6.0 nonFIPS 144K Dual + 1K Mifare
	SCE7.0 FIPS 144K
Oberthur	idOnDemand - OCS5.2 80K

Table 30. Supported cards (continued)

Manufacturer	Card
	ID-One Cosmo 64 RSA D V5.4 T = 0 card
	ID-One Cosmo 128K V5.5 card
Gemalto	TOP DL GX4 144K card
Sony	Felica RC-S962
	Felica RC-S965
	Felica RC-S966
PIVKey	C910 PKI
NIST	PIV1
IDENTIV	PIV programmed cards
	uTrust
Transport cards	Oyster (London) MIFARE DESFire
	T-Money (Korea)
	Octopus Card (Hong Kong)
	SUICA (Japan)

Table 31. Qualified NFC tags

NFC tag	Supported
Tap and do - NFC Forum Type 1 Tag - Topaz 512 (BCM920203)	Yes
Tap and do - NFC Forum Type 1 Tag - Topaz 512 (BCM20203T512)	Yes
Tap and do - NFC Forum Type 1 Tag - Topaz (BCM20203T96)	Yes
Tap and do - NFC Forum Type 2 Tag - Mifare UltraLight	Yes
Tap and do - NFC Forum Type 2 Tag - Mifare UltraLight C	Yes
Tap and do - NFC Forum Type 2 Tag - NTAG203	Yes
Tap and do - NFC Forum Type 3 Tag - FeliCa Lite RC-S965	Yes
Tap and do - NFC Forum Type 3 Tag - FeliCa RC-S962	Yes
Tap and do - NFC Forum Type 4 Tag - Mifare DESFire EV1Card 2K	Yes
Tap and do - NFC Forum Type 4 Tag - Mifare DESFire EV1Card 4K	Yes
Tap and do - NFC Forum Type 4 Tag - Mifare DESFire EV1Card 8K	Yes
Tap and do - ISO 15693 - Tag-it Plus	Yes
HID I-code ISO card	Yes

Contacted smart-card reader

The following table lists the contacted smart-card reader specifications of your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.

Table 32. Contacted smart-card reader specifications

Title	Description	Dell ControlVault 3 Plus Contacted smart-card reader
ISO 7816-3 Class A Card Support	Reader capable of reading 5 V powered smart card	Yes
ISO 7816-3 Class B Card Support	Reader capable of reading 3 V powered smart card	Yes
ISO 7816-3 Class C Card support	Reader capable of reading 1.8 V powered smart card	Yes
T = 0 support	Cards support character level transmission	Yes
T = 1 support	Cards support block level transmission	Yes
EMVCo Certified	Formally certified based on EMVCo smart card standards	Yes
PC/SC operating system interface	Personal Computer/Smart Card specification for integration of hardware readers into personal computer environments	Yes
CCID driver compliance	Common driver support for Integrated Circuit Card Interface Device for operating system level drivers	Yes
Windows Certified	Certified by the Windows Hardware Certification program	Yes
FIPS 201 (PIV/HSPD-12) Compliant	Device compliant with FIPS 201/PIV/HSPD-12 requirements	Yes
ISO 7816-1 Compliant	Specification for the physical characteristics of integrated circuit cards with contacts	Yes
ISO 7816-2 Compliant	Specification for the dimensions and location of the contacts	Yes
ISO 7816-3 Compliant	Specification for electrical interface and transmission protocols	Yes
ISO 7816-4 Compliant	Specification for organization, security and commands for interchange	Yes
Dell ControlVault support	Device connects to Dell ControlVault for usage and processing	Yes

Operating and storage environment


This table lists the operating and storage specifications of your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.

Airborne contaminant level: G1 as defined by ISA-S71.04-1985

Table 33. Computer environment

Description	Operating	Storage
Temperature range	0°C to 35°C (32°F to 95°F)	-40°C to 65°C (-40°F to 149°F)

Table 33. Computer environment (continued)

Description	Operating	Storage
Relative humidity (maximum)	10% to 90% (non-condensing)	0% to 95% (non-condensing)
Vibration (maximum)*	0.66 GRMS	1.30 GRMS
Shock (maximum)	110 G†	160 G†
Altitude range	-15.20 m to 3048 m (-49.87 ft to 10000 ft)	-15.20 m to 10668 m (-49.87 ft to 35000 ft)
 CAUTION: Operating and storage temperature ranges may differ among components, so operating or storing the device outside these ranges may impact the performance of specific components.		

* Measured using a random vibration spectrum that simulates the user environment.

† Measured using a 2 ms half-sine pulse.










Dell support policy

For information about Dell support policy, search in the Knowledge Base Resource at [Dell Support Site](#).

Working inside your computer



Safety instructions

Use the following safety guidelines to protect your computer from potential damage and to ensure your personal safety. Unless otherwise noted, each procedure in this document assumes that you have read the safety information that shipped with your computer.

-  **WARNING:** Before working inside your computer, read the safety information that is shipped with your computer. For more safety best practices, see [Dell Regulatory Compliance Home Page](#).
-  **WARNING:** Disconnect your computer from all power sources before opening the computer cover or panels. After you finish working inside the computer, replace all covers, panels, and screws before connecting your computer to an electrical outlet.
-  **CAUTION:** To avoid damaging the computer, ensure that the work surface is flat, dry, and clean.
-  **CAUTION:** You should only perform troubleshooting and repairs as authorized or directed by the Dell technical support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. See the safety instructions that are shipped with the product or at [Dell Regulatory Compliance Home Page](#).
-  **CAUTION:** Before touching anything inside your computer, ground yourself by touching an unpainted metal surface, such as the metal at the back of the computer. While you work, periodically touch an unpainted metal surface to dissipate static electricity which could harm internal components.
-  **CAUTION:** To avoid damaging the components and cards, handle them by their edges, and avoid touching the pins and the contacts.
-  **CAUTION:** When you disconnect a cable, pull it by its connector or its pull tab, not the cable itself. Some cables have connectors with locking tabs or thumbscrews that you must disengage before disconnecting the cable. When disconnecting cables, keep them evenly aligned to avoid bending the connector pins. When connecting cables, ensure that the connector on the cable is correctly oriented and aligned with the port.
-  **CAUTION:** Press and eject any installed card from the media-card reader.
-  **CAUTION:** Exercise caution when handling rechargeable Li-ion batteries in laptops. Swollen batteries should not be used and should be replaced and disposed properly.

Before working inside your computer

Steps

1. Save and close all open files and exit all open applications.
2. Shut down your computer. For Windows operating system, click **Start** >  **Power** > **Shut down**.
 **NOTE:** If you are using a different operating system, see the documentation of your operating system for instructions.
3. Turn off all the attached peripherals.
4. Disconnect your computer from the electrical outlet.
5. Disconnect all attached network devices and peripherals, such as keyboard, mouse, and monitor from your computer.
6. Remove any media card and optical drive from your computer, if applicable.
7. To clean the air vents, use a soft brush and move vertically.


 **NOTE:** Do not remove the base cover or use any blower to clean the vents.

8. Enter the Service Mode.

Service Mode

Service Mode is used to cut off power without disconnecting the battery cable from the system board before conducting repairs in the computer.

 **CAUTION:** If you are unable to turn on the computer to put it into Service Mode, proceed to disconnect the battery cable. To disconnect the battery cable, follow the steps in [Removing the battery](#).

 **NOTE:** Ensure that your computer is shut down and the power adapter is disconnected.

- a. Press and hold the B key and the power button for 3 seconds or until the Dell logo appears on the screen.
- b. Press any key to continue.
- c. If the power adapter is not disconnected, a message prompting you to disconnect the power adapter appears on the screen. Disconnect the power adapter and then press any key to enter into the Service Mode. The Service Mode process automatically skips the following step if the **Owner Tag** of the computer is not set up in advance by the user.
- d. When the **ready-to-proceed** message appears on the screen, press any key to proceed. The computer emits three short beeps and shuts down immediately.
The computer shuts down and enters the Service Mode.

Safety precautions

This section details the primary steps to be followed before disassembling any device or component.

Observe the following safety precautions before any installation or break-fix procedures involving disassembly or reassembly:

- Turn off the computer and all attached peripherals.
- Disconnect the computer from AC power.
- Disconnect all network cables and peripherals from the computer.
- Use an ESD field service kit when working inside your computer to avoid electrostatic discharge (ESD) damage.
- Place the removed component on an anti-static mat after removing it from the computer.
- Wear shoes with nonconductive rubber soles to reduce the chance of getting electrocuted.
- Press and hold the power button for 15 seconds to discharge the residual power in the system board.

Standby power

Dell products with standby power must be unplugged before you open the back cover. Systems that are equipped with standby power are powered while turned off. The internal power enables the computer to be remotely turned on (Wake-on-LAN) and suspended into a sleep mode and has other advanced power management features.

Bonding

Bonding is a method for connecting two or more grounding conductors to the same electrical potential. This is done by using a field service electrostatic discharge (ESD) kit. When connecting a bonding wire, ensure that it is connected to bare metal and never to a painted or nonmetal surface. Ensure that the wrist strap is secure and in full contact with your skin. Remove all jewelry, watches, bracelets, or rings before grounding yourself and the equipment.

Electrostatic discharge—ESD protection

ESD is a major concern when you handle electronic components, especially sensitive components such as expansion cards, processors, memory modules, and system boards. A slight charge can damage circuits in ways that may not be obvious, such as intermittent problems or a shortened product life span. As the industry pushes for lower power requirements and increased density, ESD protection is an increasing concern.

Two recognized types of ESD damage are catastrophic and intermittent failures.

- **Catastrophic** – Catastrophic failures represent approximately 20 percent of ESD-related failures. The damage causes an immediate and complete loss of device functionality. An example of catastrophic failure is a memory module that has

received a static shock and immediately generates a "No POST/No Video" symptom with a beep code that is emitted for missing or nonfunctional memory.

- **Intermittent** – Intermittent failures represent approximately 80 percent of ESD-related failures. The high rate of intermittent failures means that most of the time when damage occurs, it is not immediately recognizable. The memory module receives a static shock, but the tracing is merely weakened and does not immediately produce outward symptoms that are related to the damage. The weakened trace may take weeks or months to melt, and in the meantime may cause degradation of memory integrity, intermittent memory errors, and so on.


Intermittent failures that are also called latent or "walking wounded" are difficult to detect and troubleshoot.

Perform the following steps to prevent ESD damage:

- Use a wired ESD wrist strap that is properly grounded. Wireless anti-static straps do not provide adequate protection. Touching the chassis before handling parts does not ensure adequate ESD protection on parts with increased sensitivity to ESD damage.
- Handle all static-sensitive components in a static-safe area. If possible, use anti-static floor pads and workbench pads.
- When unpacking a static-sensitive component from its shipping carton, do not remove the component from the anti-static packing material until you are ready to install the component. Before unwrapping the anti-static packaging, use the anti-static wrist strap to discharge the static electricity from your body. For more information about the wrist strap and ESD wrist strap tester, see [Components of an ESD Field Service Kit](#).
- Before transporting a static-sensitive component, place it in an anti-static container or packaging.

ESD Field Service kit

The unmonitored field service kit is the most commonly used service kit. Each Field Service kit includes three main components: anti-static mat, wrist strap, and bonding wire.

 **CAUTION:** It is critical to keep ESD-sensitive devices away from internal parts that are insulated and often highly charged, such as plastic heat sink casings.

Working Environment

Before deploying the ESD Field Service kit, assess the situation at the customer location. For example, deploying the kit for a server environment is different than for a desktop or laptop environment. Servers are typically installed in a rack within a data center; desktops or laptops are typically placed on office desks or cubicles. Always look for a large open flat work area that is free of clutter and large enough to deploy the ESD kit with additional space to accommodate the type of computer that is being repaired. The workspace should also be free of insulators that can cause an ESD event. On the work area, insulators such as styrofoam and other plastics should always be moved at least 12 inches or 30 centimeters away from sensitive parts before physically handling any hardware components.

ESD Packaging

All ESD-sensitive devices must be shipped and received in static-safe packaging. Metal, static-shielded bags are preferred. However, you should always return the damaged component using the same ESD bag and packaging that the new part arrived in. The ESD bag should be folded over and taped shut and all the same foam packing material should be used in the original box that the new part arrived in. ESD-sensitive devices should be removed from packaging only at an ESD-protected work surface, and parts should never be placed on top of the ESD bag because only the inside of the bag is shielded. Always place parts in your hand, on the anti-static mat, in the computer, or inside an ESD bag.


Components of an ESD Field Service kit

The components of an ESD Field Service kit are:

- **Anti-Static Mat** – The anti-static mat is dissipative and parts can be placed on it during service procedures. When using an anti-static mat, your wrist strap should be snug and the bonding wire should be connected to the anti-static mat and to any bare metal on the computer being worked on. Once deployed properly, service parts can be removed from the ESD bag and placed directly on the anti-static mat. ESD-sensitive items are safe in your hand, on the anti-static mat, in the computer, or inside an ESD bag.
- **Wrist Strap and Bonding Wire** – The wrist strap and bonding wire can be either directly connected between your wrist and bare metal on the hardware if the anti-static mat is not required, or connect to the anti-static mat to protect hardware that is temporarily placed on the mat. The physical connection of the wrist strap and bonding wire between your skin, the anti-static mat, and the hardware is known as bonding. Use only Field Service kits with a wrist strap, anti-static mat, and

bonding wire. Never use wireless wrist straps. Always be cautious that the internal wires of a wrist strap are prone to damage from normal wear and tear, and must be checked regularly with a wrist strap tester in order to avoid accidental ESD hardware damage. It is recommended to test the wrist strap and bonding wire at least once per week.

- **ESD Wrist Strap Tester** – The wires inside an ESD strap are prone to damage over time. When using an unmonitored kit, it is a best practice to regularly test the strap before each service, and at a minimum, test once per week. A wrist strap tester is the best method for doing this test. To perform the test, plug the bonding-wire of the wrist-strap into the tester while it is strapped to your wrist and push the button to test. A green LED is lit if the test is successful; a red LED is lit and an alarm sounds if the test fails.


 **NOTE:** It is recommended to always use the traditional wired ESD grounding wrist strap and protective anti-static mat when servicing Dell products. In addition, it is critical to keep sensitive parts separate from all insulator parts while servicing the computer.

Transporting sensitive components

When transporting ESD sensitive components such as replacement parts or parts to be returned to Dell, it is critical to place these parts in anti-static bags for safe transport.

After working inside your computer

About this task

 **CAUTION:** Leaving stray or loose screws inside your computer may severely damage your computer.


Steps

1. Replace all screws and ensure that no stray screws remain inside your computer.
2. Connect any external devices, peripherals, or cables you removed before working on your computer.
3. Replace any media cards, disks, or any other parts that you removed before working on your computer.
4. Connect your computer to their electrical outlets.

 **NOTE:** To exit service mode, ensure to connect the AC adapter to the power-adapter port on your computer.

5. Press the power button to turn on the computer.

BitLocker

 **CAUTION:** If BitLocker is not suspended before updating the BIOS, the BitLocker key is not recognized the next time that you reboot the computer. You will be prompted to enter the recovery key to progress, and the computer displays a prompt for the recovery key on each reboot. If the recovery key is not known, this can result in data loss or an operating system reinstall. For more information, see Knowledge Article: [updating the BIOS on Dell computers with BitLocker enabled](#).

The installation of the following components triggers BitLocker:

- Hard disk drive or solid state drive
- System board

Recommended tools

The procedures in this document may require the following tools:

- Phillips screwdriver #0
- Phillips screwdriver #1
- Flat-head screwdriver (<4mm)
- Plastic scribe

Screw list

- NOTE:** When removing screws from a component, it is recommended to note the screw type and the quantity of screws, and then place them in a screw storage box. This is to ensure that the correct number of screws and correct screw type is restored when the component is replaced.
- NOTE:** Some computers have magnetic surfaces. Ensure that the screws are not left attached to such surfaces when replacing a component.
- NOTE:** Screw color may vary depending on the configuration ordered.

Table 34. Screw list




























Component	Screw type	Quantity	Screw image
Base cover	M2x8.5 captive screws	6	
	M2x6 captive screws	2	
Battery	M2x5 captive screws	4	
WWAN-card thermal shield	M2x4	3	
Solid state drive	M2x4	4	
Speakers	M1.6x1.5	6	
Fan	M2x4	2	
Heat sink	M2x3 captive screws	4	
USH daughterboard	M1.6x1.5	2	
Smartcard reader	M1.6x1.5	2	
WLAN card bracket	M2x3	1	
System board	M2x3	6	
	M2x4	4	
WLAN antenna module	M2x3	1	
	M1.6x2.5	4	
USB Type-C connector module	M2x5	3	

Table 34. Screw list (continued)

Component	Screw type	Quantity	Screw image
I/O board	M2x3	4	
Power button with optional fingerprint reader	M1.6x1.7	2	
Display-cable bracket	M2x3	2	
Display assembly	M2.5x4	4	
	M2x3	3	
Display panel	M1.6x1.4	4	
Display hinge cap and hinge assembly	M2x3	2	
	M2.5x3.5	4	
Display cable for MIPI camera	M1.6x1.4	2	
Middle daughter board cable	M1.6x1.4	2	
Keyboard assembly	M1.6x1.7	20	

Major components of Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1

The following image shows the major components of Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.

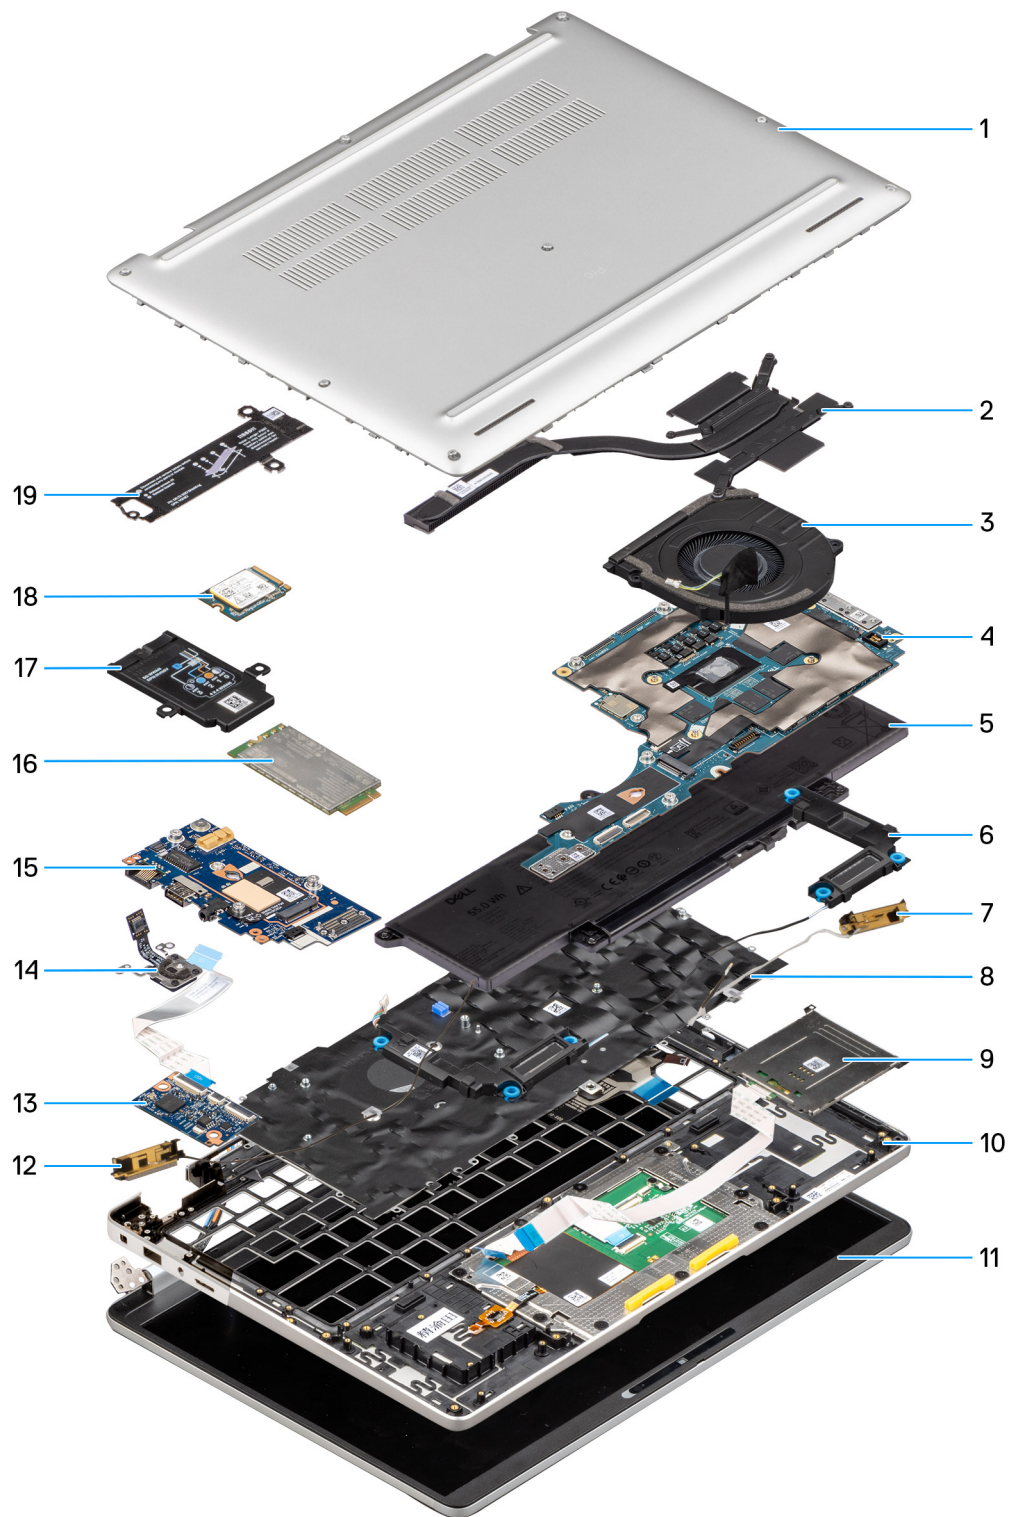



Figure 14. Major components of Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1

1. Base cover
2. Heat sink
3. Fan
4. System board
5. Battery
6. Speakers
7. WLAN antenna

8. Keyboard assembly
9. Smart-card reader (optional)
10. Palmrest assembly
11. Display assembly
12. WLAN antenna
13. USH daughterboard
14. Power button with optional fingerprint reader
15. I/O board
16. WWAN card
17. WWAN-card thermal shield
18. Solid state drive (SSD)
19. Solid state drive (SSD) thermal shield

 **NOTE:** Dell provides a list of components and their part numbers for the original computer configuration purchased. These parts are available according to warranty coverage purchased by the customer. Contact your Dell sales representative for purchase options.