



LTE and NR UE Simulator

Version: 2025-06-13

Table of Contents

1	Introduction	1
2	Features	2
2.1	4G LTE	2
2.2	5G NR	2
3	Requirements	4
3.1	Hardware requirements	4
3.2	Software requirements	4
4	Installation	5
4.1	Linux setup	5
4.1.1	Packages	5
4.1.2	OpenSSL	5
4.2	Linux setup for best performance	5
4.3	RRH setup	6
4.3.1	Amarisoft PCIe SDR	6
4.3.2	Ettus Research USRP	6
4.3.3	Lime Microsystems LimeSDR	6
4.4	LTEUE installation	6
4.4.1	RRH selection	6
4.4.2	License key installation	6
4.5	Initial testing	7
4.6	5G SA initial testing	7
4.7	Multiple UE case	7
4.8	Multiple UE case with Channel Simulator	8
4.9	Resources	8
4.9.1	Amarisoft eNB	9
4.9.2	Amarisoft MME	9
5	Using web interface	10
5.1	Configuration	10
5.2	Scenario tab	10
5.2.1	Create scenario	10
5.2.2	Create UEs tab	11
5.2.3	Power on/off tab	12
5.2.4	Simulations tab	12
5.2.4.1	Internal IP simulations	13
5.2.4.2	External application	13
5.2.5	Export scenario	13
5.3	UE tab	13
5.3.1	Actions	14
5.3.2	UE list	14
5.3.3	Statistics	14
5.4	Scenario example	14
5.5	Executing scenario tab	15
5.6	Example	15

6	Configuration reference	20
6.1	Configuration file syntax	20
6.1.1	JSON merge rules	21
6.2	Global properties	22
6.3	Radio driver configuration	27
6.4	Cell group configuration	28
6.5	Cell configuration	30
6.6	UE configuration	34
6.6.1	Virtual USIM	34
6.6.2	SIM card reader	36
6.6.3	UE parameters	36
6.6.3.1	Common parameters	36
6.6.3.2	LTE specific parameters	41
6.6.3.3	NB-IoT specific parameters	42
6.6.3.4	NR specific parameters	43
6.6.4	Power control	46
6.6.5	RF test mode	46
6.6.6	SWu and NWu interface	48
6.7	Channel simulator	50
6.7.1	Introduction	50
6.7.2	Per cell parameters	50
6.7.3	Per UE parameters	54
6.7.4	Known limitations and implementation details	56
7	CPU/Cores configuration	58
7.1	Hyperthreading	58
7.2	Core restriction cores	58
7.3	Affinity	58
7.4	Memory	59
8	Remote API	60
8.1	Messages	60
8.2	Startup	61
8.3	Errors	62
8.4	Sample nodejs program	62
8.5	Common messages	62
8.6	LTE messages	69
8.7	LTE events	83
8.8	IP simulation messages	85
8.8.1	Common message definition	85
8.8.2	Common response definition	85
8.8.3	Definitions	85
8.8.4	Start notification	88
8.9	IP simulation examples	88
8.9.1	IP simulation server	88
8.10	Examples	89
9	Command line monitor reference	90
10	Remote UE	92
10.1	Configuration	92

11	UDC configuration reference	93
11.1	args Configuration	93
11.2	Debug	93
12	Log file format	94
12.1	PHY layer	94
12.2	MAC and RRC layers	94
12.3	RLC, PDCP and NAS layers	95
12.4	IP layer	95
13	Known limitations	96
14	Change history	97
14.1	Version 2025-06-13	97
14.2	Version 2025-03-14	97
14.3	Version 2024-12-13	97
14.4	Version 2024-09-13	98
14.5	Version 2024-06-14	98
14.6	Version 2024-03-15	98
14.7	Version 2023-12-15	99
14.8	Version 2023-09-08	100
14.9	Version 2023-06-10	100
14.10	Version 2023-03-17	100
14.11	Version 2022-12-16	101
14.12	Version 2022-09-16	101
14.13	Version 2022-06-17	102
14.14	Version 2022-03-18	102
14.15	Version 2021-12-17	102
14.16	Version 2021-09-17	102
15	License	104

1 Introduction

LTEUE is a LTE and NR UE simulator.

It simulates one or more UEs (typically hundreds of UEs) by communicating through a RF system with eNodeB and core network.


It allows to test LTE and NR procedures and to simulate a large number of users on eNodeBs.

It supports NR both in Standalone (SA) and Non-standalone (NSA) mode.

It also supports connecting to a 5G core network through a ng-eNB.

The LTEUE is connected to network via eNB through the air on one side.

On the other side it can be managed using WebSocket and IP traffic may be reachable with a Linux TUN network interface.

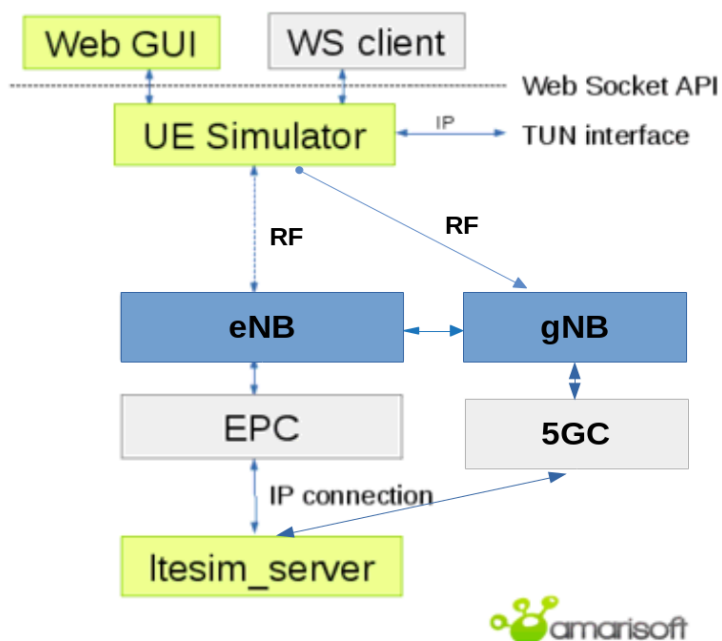

2 Features

- Simulate a large number of UEs sharing the same spectrum.
- IP traffic simulator (ping, constant bitrate UDP, HTTP).
- Remote API based on Websocket and JSON.
- Command line monitor.
- Access to external programs such as iPerf in tunnel interface mode with IPv6 support and automatic DNS configuration.
- Includes PHY, MAC, RLC, PDCP, RRC and NAS layers.
- Support of all ciphering and integrity protection algorithms including ZUC.

2.1 4G LTE

- LTE Release 8 support with features up to Release 17.
- FDD/TDD support.
- Bandwidths: 1.4, 3, 5, 10, 15 and 20 MHz.
- MIMO DL support.
- 1024QAM support in DL, 256QAM in UL.
- MBMS support.
- Category M1 support for FDD, HD-FDD and TDD.
- NB-IoT support (category NB1/NB2) with multi-tone, multi-carrier and multi-DRB support.
- Release 17 NTN support in NB-IoT.
- Release 16 WUS support in NB-IoT and Cat-M1.
- eDRX and PSM support.
- Multi-UE fading channel simulator.
- ETWS and CMAS support.
- Semi-persistent scheduling (SPS) support.
- TTI bundling support.
- EPS user plane integrity support.

2.2 5G NR

- Release 18 EN-DC support for 5G NSA mode.
- Release 18 5G SA support.
- FDD/TDD support.
- Support of all FR1 carrier spacings for DL, UL and SSB.
- Bandwidth up to 50 MHz or 100MHz depending on the product version.
- Up to 8 DL MIMO layers.
- Up to 4 UL MIMO layers.
- 256QAM support in DL and UL, 1024QAM in DL.
- Support of DCI formats 0-0, 0-1, 1-0 and 1-1.
- Support of PUCCH formats 0, 1, 2, 3 and 4.
- Periodic and aperiodic CSI reports.
- Periodic and aperiodic SRS.

- Multi-BWP support.
- Carrier aggregation support (DL and UL CA).
- Supplementary Uplink support.
- ETWS and CMAS support.
- RRC Inactive mode support.
- eDRX, MICO and active time support.
- Multi-UE fading channel simulator.
- Release 17 NTN support.
- Release 18 RedCap and eRedCap support.

3 Requirements

3.1 Hardware requirements

- A fast PC:
 - For best performances, a quad core Intel Core i7 CPU (Haswell architecture or later) is recommended. Support of the AVX2 instruction set extension is required to run the software.
 - At least 1 Gigabit Ethernet ports.
 - At least 2 GB of RAM.
 - At least 1 GB of hard disk space.
 - The video adapter does not matter.
- Radio front end
 - Amarisoft PCIe SDR
 - Ettus Research USRP N2x0 (SBX daughterboard). For MIMO 2x2, a second N2x0 with the SBX daughterboard and a USRP MIMO cable are needed.
 - Ettus Research USRP B2x0.
 - Ettus Research USRP X3x0.
 - Lime Microsystem LimeSDR
- Appropriate antennas for the intended LTE frequencies or cables and attenuators to connect to a UE.
- An eNodeB connected to a LTE Core Network must be available to communicate.

3.2 Software requirements

- A 64 bit Linux distribution. Fedora 39 is the officially supported distribution. The following distributions are known as compatible:
 - Fedora 22 to 39
 - Cent OS 7
 - Ubuntu 14 to 22

Your system requires at least GLIBC 2.17.

Other distributions can be used provided the radio frontend drivers are available for them.

4 Installation

4.1 Linux setup

4.1.1 Packages

The Remote UE feature of LTEUE uses the SCTP protocol for which the necessary packages are not usually installed. In order to install them, do as root user:

- Fedora

```
dnf install lksctp-tools kernel-modules-extra
```

- Ubuntu

```
sudo apt-get install lksctp-tools linux-image-extra-3.13.0-24-generic
```

Note that linux-image-extra package name may differ depending on your kernel version.

To verify that SCTP kernel module is running, do as root user:

```
checksgtp
```

If it reports that the protocol is not supported,

- check if you have a `/etc/modprobe.d/sctp-blacklist.conf` file
- edit it to comment the 'blacklist sctp' line

Then reboot the PC in case the Linux kernel was upgraded too.

4.1.2 OpenSSL

LTEUE has been compiled against openssl version 1.1.1w.

If your system does not have compatible version installed you may have this error message at startup:

```
error while loading shared libraries: libssl.so.1.1: cannot open shared ob-
ject file: No such file or directory
```

To overcome this problem, you may:

- Copy `libssl.so.1.1` and `libcrypto.so.1.1` from `libs` subdirectory of your release tarball. If you have installed software with automatic install script, this should have been done automatically.
- Compile and install proper openssl version yourself

In case of persisting issue, raise a ticket from our support site at <https://support.amarisoft.com/> with the information provided by below commands executed in LTEUE directory:

```
uname -a
ls -l
ldd ./lteue
openssl version
```

4.2 Linux setup for best performance

LTEUE requires a lot of CPU power and it has hard real time requirements (a maximum latency of 3 ms is required).

In order to get the lowest latency, it is recommended to set up the **performance** frequency governor for each CPU core. An example is included in the `lte_init.sh` script given with LTEUE.

Some buggy drivers are known to block the CPU during a few tens of ms. When it happens, LTEUE displays **UHD status: L=X U=Y S=Z**. One known problem is the DRM KMS cable polling. The script `lte_init.sh` disables it automatically.

Other drivers such as Wifi controllers can give the same problem. In order to avoid such problems, remove all unnecessary peripherals from the PC.

4.3 RRH setup

Please refer to sub section of your radio frontend to set it up.

When configured, you will have to select it (See [RRH selection], page 6).

4.3.1 Amarisoft PCIe SDR

Read the PCIe SDR documentation (`trx_sdr.pdf`).

4.3.2 Ettus Research USRP

Read the UHD Compatible RF frontends documentation (`trx_uhd.pdf`).

4.3.3 Lime Microsystems LimeSDR

Use LimeSuiteNG software suite located at <https://github.com/myriadrf/LimeSuiteNG>, which contains Amarisoft plugin. During build it creates the needed `trx_limesuite.so` (build directory) file, which can be sim linked or copy pasted.

4.4 LTEUE installation

Decompress the LTEUE archive to a convenient place. The executable `lteue` can be launched from this directory.

4.4.1 RRH selection

To select appropriate RF frontend to use, please execute following command:

```
./config/rf_select.sh <type>
```

Where `type` is your frontend type:

- `sdr`
- `n2x0`
- `b2x0`
- `n3x0`
- `x3x0`
- `limeMini`
- `limeSDR`

NB: you can lanch following command to see available frontends:

```
./config/rf_select.sh
```

4.4.2 License key installation

LTEUE needs a license key file to run. *It is associated to your PC, so if you replace it or change its hardware configuration you must contact Amarisoft to get a new license key.*

The following steps are needed to get this license file:

- Run LTEUE:

```
./lteue config/ue.cfg
```

It says that the license key is not present and prints a 16 digit hexadecimal code.

- Send by mail to `delivery@amarisoft.com` this hexadecimal code to your contact at Amarisoft. You will get back the `lteue.key` license key file.
- Copy the `lteue.key` file to the `${HOME}/.amarisoft/` directory (`${HOME}` is the home directory of the `root` user). You can use the shell variable `AMARISOFT_PATH` to change this path.

Once the license key is installed, `lteue` should start normally.

4.5 Initial testing

First update `config/ue.cfg` configuration file to match your eNB frequency and bandwidth by editing:

- `dl_earfcn`
- `sample_rate`

Look at `ue_list` section to match UE SIM parameters on MME side.

Check your eNB is running.

Start the LTEUE software as `root` user. `root` privileges are needed to use real time scheduling priority.

```
./lteue config/ue.cfg
```

You should see `SIB found` message displayed.

Type `ue` in the monitor, you should see list of UEs with their states.

If UE has been able to register to network, its `EMM_STATE` should be `registered`.

If not, look at logs on both UE and eNB/MME side.

4.6 5G SA initial testing

Update `config/ue-nr-sa.cfg` configuration file to match your gNB frequency, bandwidth and numerology by editing:

- `dl_nr_arfcn`
- `ssb_nr_arfcn`
- `bandwidth`
- `subcarrier_spacing`

Look at `ue_list` section to match UE SIM parameters on AMF side.

Check your gNB is running.

Start the LTEUE software as `root` user. `root` privileges are needed to use real time scheduling priority.

```
./lteue config/ue-nr-sa.cfg
```

You should see `SIB found` message displayed. If the gNB is not running, the message `TRX discontinuity too wide` might appear.

Type `ue` in the monitor, you should see list of UEs with their states.

4.7 Multiple UE case

To activate the simulation of multiple UEs, the parameter `multi_ue` should be set to `true`. In this mode, UE simulator may have difficulties to synchronize with eNB signal. If such a case occurs, you should see that UE is able to receive SIBs but further communications fails with bad CRC on physical layer.

This means that you should adjust the parameter `global_timing_advance` (See

[global_timing_advance], page 30) in your configuration file. The `global_timing_advance` parameter can be set automatically by using the special value -1 (`global_timing_advance:-1`). If automatic mode is set, the UE simulator uses the timing advance from the first received RAR for all UEs. This is the default behaviour.

You can also manually adjust the timing advance for all UEs in case you still experience CRC errors with automatic mode. You can check TA value on eNB side and set it to minus 1 in UE (`global_timing_advance = TA[enb] - 1`). if you are using simulator with Amarisoft eNB/gNB, you can type `t` at eNB/gNB screen and look at PRACH traces.

Then, use `ta` value minus one as `global_timing_advance`.

```
PRACH: cell=01 seq=17 ta=2 snr=18.5 dB
PRACH: cell=01 seq=22 ta=2 snr=18.0 dB
PRACH: cell=01 seq=23 ta=2 snr=18.5 dB
PRACH: cell=01 seq=29 ta=3 snr=17.6 dB
```

In this example, adjust `global_timing_advance` to 1.

If you are using another eNB and you do not have access to eNB logs and information, you can enable the PHY and MAC layer logs in UE simulator and look for `ta` value in MAC traces

```
12:13:37.086 [MAC] - 0001 ta=13 ul_grant=128768 c_rnti=0x0047
```

In this example, you should set the `global_timing_advance` to 12.

If all the simulated UEs are expected to share the same timing advance and if this timing advance will likely need further adjustments (moving UEs, NGSO NTN scenario, ...) the parameter `apply_ta_commands` can be set to apply the TA commands received by the network. The `apply_ta_commands` parameter is supported only in NB-IoT and NR.

To summarize:

- `apply_ta_commands` set to true: the UE simulator can change the timing advance of ALL UEs upon reception of the RAR and TA commands during the runtime
- `global_timing_advance` set to -1: the UE simulator can change the timing advance of ALL UEs only ONCE, upon reception of the first RAR
- `global_timing_advance` set to a <value>: the UE simulator statically fixes the timing advance of ALL UEs at start-up and the it is never adjusted

4.8 Multiple UE case with Channel Simulator

In multi_ue mode, because all UEs share the same physical layer, the timing advance cannot be adjusted independently for each UE. However, this can be achieved by using the [Channel Simulator], page 50, with the parameter [delay_sim], page 54, set to true.

With `delay_sim`, a different timing advance for each UE can be simulated by applying a cycling shift on each UE uplink signal. It assumes that the all timing advances stay in a certain range, the center of this range is set either by the first received RAR or by the value of `global_timing_advance`.

When `delay_sim` is set to true, the `apply_ta_command` is not applicable.

4.9 Resources

When using a big amount of UE (> 32), you need to check in your eNB and MME configurations that enough resources are available.

4.9.1 Amarisoft eNB

If you are using Amarisoft eNB for your simulation, you may need to increase SRS resources so that your UE can simultaneously connect to eNB.

You can check you are running into this issue if you find such message in your eNB log file:

```
11:44:06.533 [RRC] - 01 005d RRC connection request: ue_allocate_resources() fail
```

Please take a look at `srs_dedicated` parameter in eNB documentation.

Here is an example to allow more than 1000 UE on eNB:

```
srs_dedicated: {
    srs_period: 320,
    srs_bandwidth: 3,
    srs_hopping_bandwidth: 0,
    cyclic_shift: 0,
},
```

Depending on the number of UEs simulated, you may also need to provision enough resources for SR (Scheduling Request) and CQI (Channel Quality Indicator) reporting. One way of checking if all your resources are available, is to take a look at the eNB log. In the header part, you always see the following information:

```
# SR resource count=480
# CQI resource count=960
# SRS resources: offsets=32 freqs=10 total=640
```

In this example, the eNB has SR resources to serve 480 UEs, CQI resources to serve 960 UEs and SRS resources for 640 UEs. You can increase the SR resources by increasing the value of `sr_period`. The CQI resources could as well be increased by reducing its periodicity `cqi_period`. Depending on the number of UEs that you would like to simulate, you may as well need to increase the following parameters in SIB2:

- `n1PUCCH-AN` to add more RB (Resource Blocks) for SR
- `preambleTransMax` to increase the number of retries after PRACH collision

4.9.2 Amarisoft MME

If you are using Amarisoft MME for your simulation, you may need to increase IP allocation range so that your UE can simultaneously connect to network.

You can check you are running into this issue if you find such message in your MME log file:

```
11:47:54.643 [NAS] - 0041 Can't allocate new IPv4 address
```

Please take a look at `first_ip_addr`, `last_ip_addr` and `ip_addr_shift` parameter in eNB documentation.

Here is an example to allow more than 1000 UE on MME:

```
first_ip_addr: "192.168.4.2",
last_ip_addr: "192.168.7.254",
ip_addr_shift: 0,
```

Please make sure to change the `net_mask` in `mme-ifup` script as well to go with your IP allocation range.

5 Using web interface


You can configure your UEs and test scripts using configuration file or you can dynamically use remote API. As an example, the Amarisoft Web interface will allow you to make basic tests.

5.1 Configuration

First enable remote API by setting `com_addr` in configuration file.

If you want to add UEs, you also need to enable `multi_ue`.


Then, on Web interface, click on **Add server** button and set UE `com_addr`

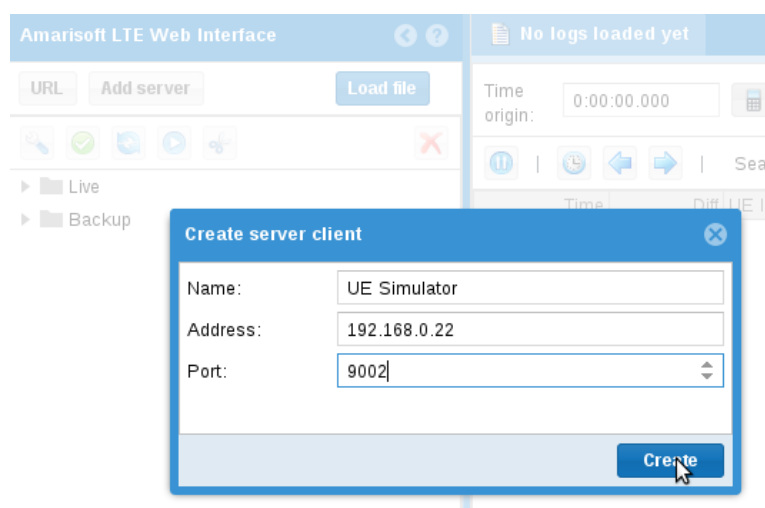

When Web interface is connected, you should see a green lightning icon on left panel, logs displayed on center panel and a two new tabs on top:

UE Scenario will be used to define scenariii.

UE Simulator is to control your UE simulator instance.

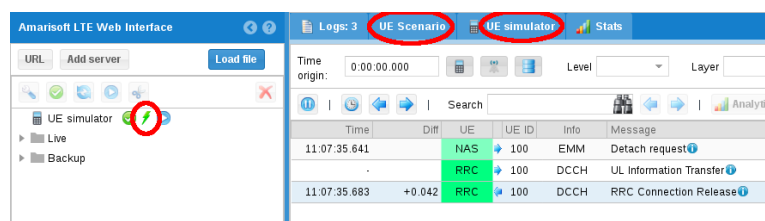

5.2 Scenario tab

5.2.1 Create scenario

Click on the **UE Scenario** tab.

Click on **Add** button and select **New scenario**.

The scenario panel will be displayed on right.
After modification, click on **Apply changes** to commit them.

The screenshot shows a web interface for configuring UEs. On the left, there is a table with columns: Name, Dur., UE, IP, and Power. The table contains one entry: 'My first test' with a value of '0' in the 'UE' column. On the right, there is a configuration panel with various fields and tabs. The 'Create UEs' tab is active. The fields include: Count (0), IMSI (001010123456789), Cell list, Preferred PLMNs, APN, RAT (LTE selected), AS release (8), NAS type (EPS), Category (Category 4), Forced RI (Auto), Forced CQI (Auto), Algo (XOR selected), K (00112233445566778899aabbccddeeff), Response length (Automatic), Type (Sim selected), Decoder max iteration (Turbo 6), Specification tolerance, and Remove UEs. At the top right of the configuration panel, there is an 'Apply changes' button and a 'Loop' dropdown set to 0.

5.2.2 Create UEs tab

You will then define for the UE that will be created their configuration:

Count	Number of UE to create. If set to 0, the scenario shall only be applied to an already created UE.
IMSI	IMSI of each UE. To differentiate each UE, the special character \$ or $\${f(i)}$ can be added. \$ will be replaced by the UE index and $\${f(i)}$ will be replaced by the result of the mathematical formula $f(i)$ where i is the UE index. Ex: $\${i+64}$ NB: if IMSI are all the same, your MME must support it (For Amarisoft MME, check that <code>multi_sim</code> parameter is true).
RAT	RAN technology of the UE: either LTE, NB-IoT, LTE + NR (5G NSA) or NR (5G SA).
category	UE category. This field is not present in NR SA.
Forced RI	Forces RI return by UE to base station. If set to 0, UE will estimate it. We recommend to force it to 2 when UE category is > 2 .
Forced CQI	Forces CQI return by UE to base station. If set to 0, UE will estimate it. We recommend to force it to when UE category is > 2 .
K	USIM secret. As for IMSI, \$ or $\${f(i)}$ can be used.
OP	USIM OP. Only available for milenage. As for IMSI, \$ or $\${f(i)}$ can be used. Configure either OP or OPc.
OPc	USIM OPc. Only available for milenage. As for IMSI, \$ or $\${f(i)}$ can be used. Configure either OP or OPc.
Algo	USIM Algo. Can be XOR or milenage.

Type Allow to select simulation mode between default simulation, tunnel interface mode and remote UE mode.

Setup script

Used with tunnel interface mode and remote UE mode as `tun_setup_script` parameter

Remote address

Used with remote UE mode as `rue_addr`.

5.2.3 Power on/off tab

If **Power on/off** is checked, simulation will generate on and off period for each UE and place inside each on period defined simulations.

Scenario will try to put as many simulation as possible, depending on parameters.

Duration Duration of the simulation in seconds.

All simulations and power off/on commands will be over before this duration.

If can be seen as the maximum simulation duration.

Connection attempts/s

Number of maximum UE connection attempt per second.

Max simultaneous connected UE

Maximum number of simultaneously connected UE.

Simulation will avoid any power on until this limit is reached, in other words, next power on will occur after new power off.

Power on duration

Duration in seconds of power on period. UE will remain powered on during this time and then will power off, allowing a new UE to connect.

Power off duration

Minimum duration in seconds of power off period. When powered off, a UE will remain powered off at least this time before being candidate to power on again.


5.2.4 Simulations tab

The simulation allow you to create different type of IP traffic simulation.

You can add several simulation per scenario.

Each simulation will be placed inside each power on period of each UE.

Click on add button and select simulation type:

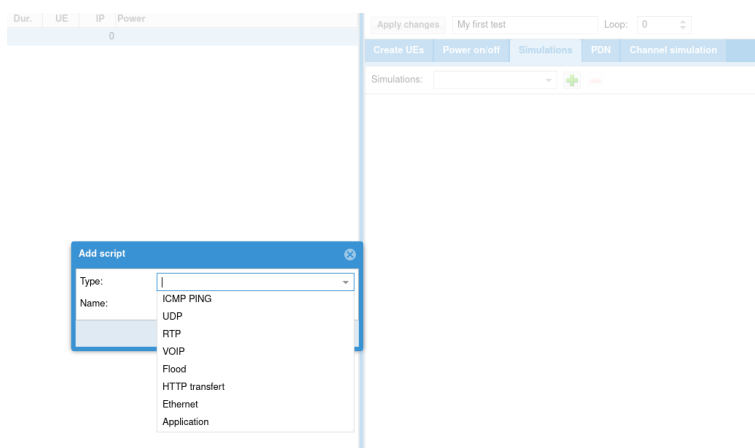

The following parameters apply to all simulations:

Start delay

Script start delay in seconds.

If power off/on procedure is not activated, script starts after this delay. If power on/off procedure is activated, you should always set a delay as power on procedure may take a while unless it is what you want to do.

Duration Duration of the script in seconds.

5.2.4.1 Internal IP simulations

You can choose the following simulations:

ICMP Ping Perform ICMP Ping request.

UDP Send UDP constant bitrate traffic.

RTP Send RTP constant bitrate traffic.

VOIP Simulate voice RTP traffic using statistical model.

Flood Send UDP packet burst

HTTP transfert

Send HTTP requests.

Application

Launches an external application.

Note that TUN mode must be enabled on UE.

For more detail on configuration, See [IP simulation messages], page 85.

5.2.4.2 External application

You can replace predefined simulation by a custom application.

For this, choose **Application** in IP simulation list. See [ext_app], page 76, for its configuration.

When started, the external application will fork a process and return its standard output and error.

To handle dedicated application, please take a look at `libsim_custom.js` file in LTEWWW component.

You can add specific result handler using **tag** for association.

Note that it requires associated UE to be configured in tunnel mode or with remote UE mode and thus IP simulations can't be mixed.

5.2.5 Export scenario


The **Export** will generate json config file that you can directly integrate in your UE configuration file.

Thus, you can start several time same scenario directly from command line.

5.3 UE tab

When selecting UE tab, several area are displayed.

- One to perform actions
- One for UE list that allows you to perform action and it
- One with various real time charts providing informations

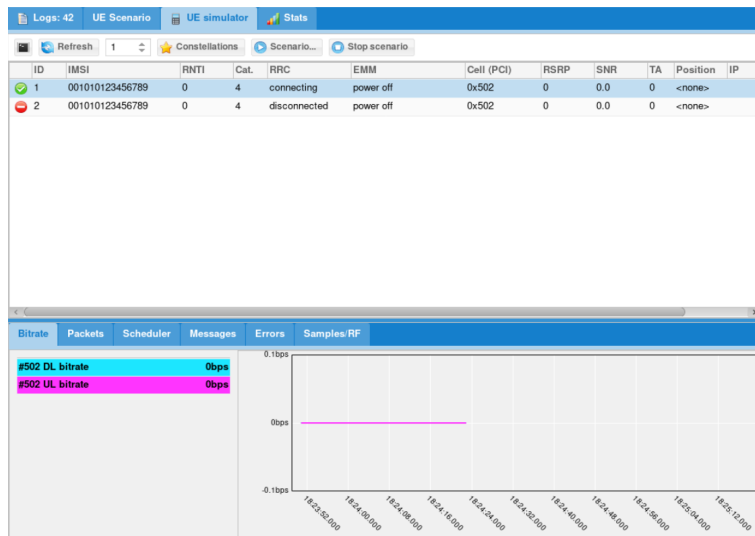

5.3.1 Actions

Refresh button will force refresh of UE list. Else it is done regularly and refresh period is defined by the number field on the right.

Start button will allow you to start predefined scenario. Note that only scenario that create UEs will be proposed.

Stop button will stop any pending simulation on UE simulator.

5.3.2 UE list

The UE list displays list of UE and their state. You can click on the first icon to power on and off UE. Right click on any UE to perform more actions:

- Power on/off
- Connect pdn: enter APN for PDN to connect
- Scenario: apply scenario on this UE (Only scenario without UE creation can be used).

5.3.3 Statistics


Here you can find some general real time statistics.

5.4 Scenario example

- First create a scenario in **UE scenario** tab and call it **My first test**.
- Select **Simulations** tab and add ICMP ping:


The screenshot shows the 'Simulations' tab in the UE simulator web interface. At the top, there are buttons for 'Apply changes', 'My first test', and 'Loop: 0'. Below these, there are tabs for 'Create UEs', 'Power on/off', 'Simulations', 'PDN', and 'Channel simulation'. The 'Simulations' tab is active, showing a list of simulations with a dropdown menu set to 'ICMP PING #0'. Below the list, there are input fields for configuring the simulation: Type (ICMP PING), Name (ICMP PING #0), Probability (1), Start delay (0), Duration (50), Payload size (1000), Delay (1), Destination (192.168.2.1), and APN (empty).

- Click on Apply changes
- Go to UE Simulator tab.
- Click on red icon to power on UE and right click on UE:

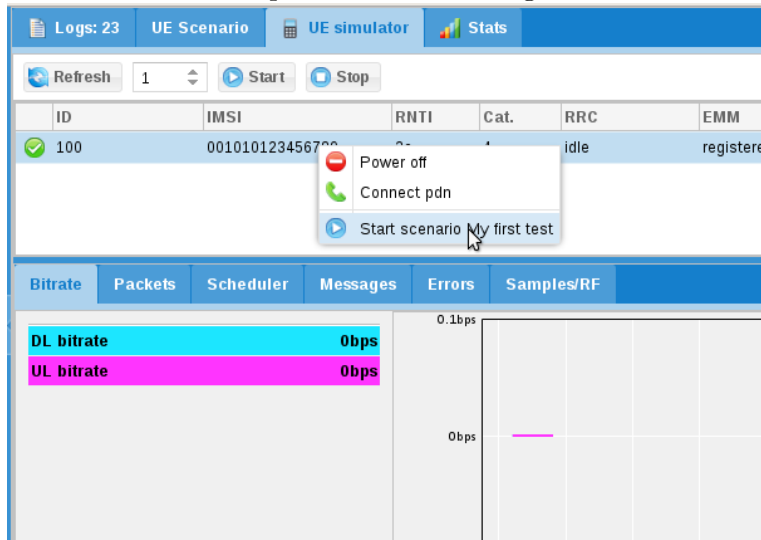

- Select My first test. A new tab is created to follow scenario.
- Select scenario tab

5.5 Executing scenario tab

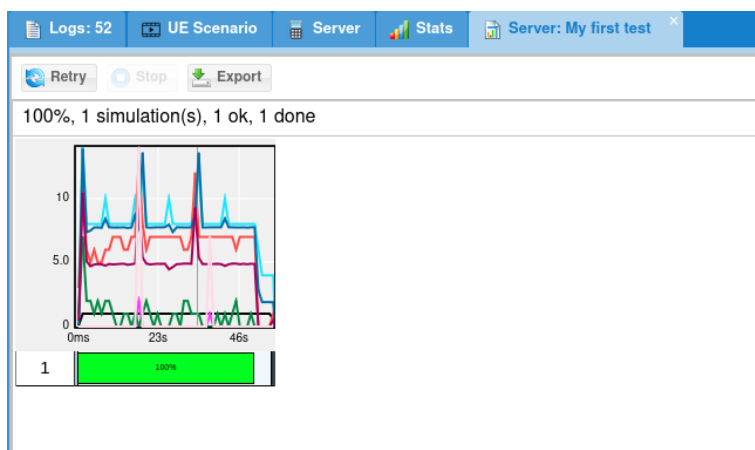

Following buttons are available:

- Reset will flush logs
- Retry will start scenario again
- Stop will stop current scenario
- Export will export in a CSV file scenario results

5.6 Example

Let's try the following exercise:

- 100 UE have to be connected simultaneously.
- 20 UE will connect every second.

- Each UE will stay connected 10s
- Each UE can't be powered of less than 10s
- Scenario will last 1 minute.
- UE will perform HTTP transfer and pings.


Let's create a new scenario.

First, we need to estimate the amount of necessary UE.

If we set only 100 UE:

- The first one will connect at $t=0s$ and disconnect at $t=10s$
- The last one will connect at $t=5s$ (100 UE will take 5s to connect at 20 caps).
- From $t=10s$, UE will start to disconnect but there will be no non connected remaining UE to connect again as UE have to stay disconnected at least 10s.

This implies between $t=10s$ and $t=20s$, total amount of connected UE will decrease to 0 at $t=20s$. As a result:

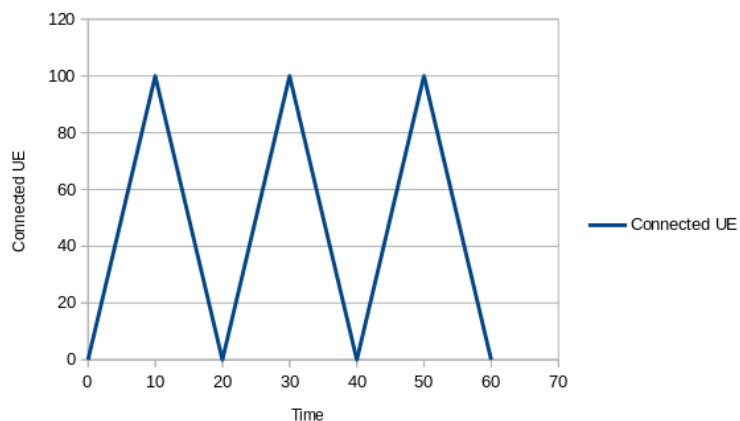

So what can we do ?

We can reduce power off duration but this will imply all UE will stay disconnected 0s !
And we can increase the amount of UE to have a constant pool of disconnected UE.

Let's do this:

Apply changes	Exercice	Loop: 0
Create UEs	Power on/off	Simulations PDN Channel simulation
Enabled: <input checked="" type="checkbox"/>		
Duration:	60	
Connection attempt/s:	20 +/- 0	
Max simult. connected UE:	100	
Power on duration (s):	10 +/- 0	
Power off duration (s):	10 +/- 0	

Then we can add our scripts:

The screenshot shows the LTEsim web interface with the 'Simulations' tab selected. At the top, there is a bar with 'Apply changes', 'Exercise', and 'Loop: 0'. Below this is a navigation bar with 'Create UEs', 'Power on/off', 'Simulations' (active), 'PDN', and 'Channel simulation'. The 'Simulations' section shows a list with 'HTTP transfert #0' and a green plus icon. The configuration details for this simulation are as follows:

Type:	HTTP transfert		
Name:	HTTP transfert #0		
Probability:	1		
Start delay:	0	+/-	0
Duration:	6	+/-	0
URL:	http://192.168.2.1:8080/data?size=10000		
Maximum delay:	1		
Maximum connections:	1000		
APN:			

With this configuration, HTTP transfer will last 6s. As power on duration is 10s, it means HTTP transfer will start 2s after power on and will stop 2s before power off.

Take a look at URL: `http://192.1.168.4.1:8080/data?size=10000`

This URL will be interpreted by `ltesim_server` embedded HTTP server as a transfer of 10000 byte(s).

Note that `ltesim_server` must be started with HTTP server enabled:

```
sudo ./ltesim_server -a 192.168.4.1 -H 8080
```

Then add ping

Apply changes

Exercise

Loop: 0

Create UEs

Power on/off

Simulations

PDN

Channel simulation

Simulations:

ICMP PING #1

+

−

Type:

ICMP PING

Name:

ICMP PING #1

Probability:

1

Start delay:

3

↑

±

0

↓

Duration:

6

↑

±

0

↓

Payload size:

1000

Delay:


1

Destination:

192.168.2.1

APN:

And start it

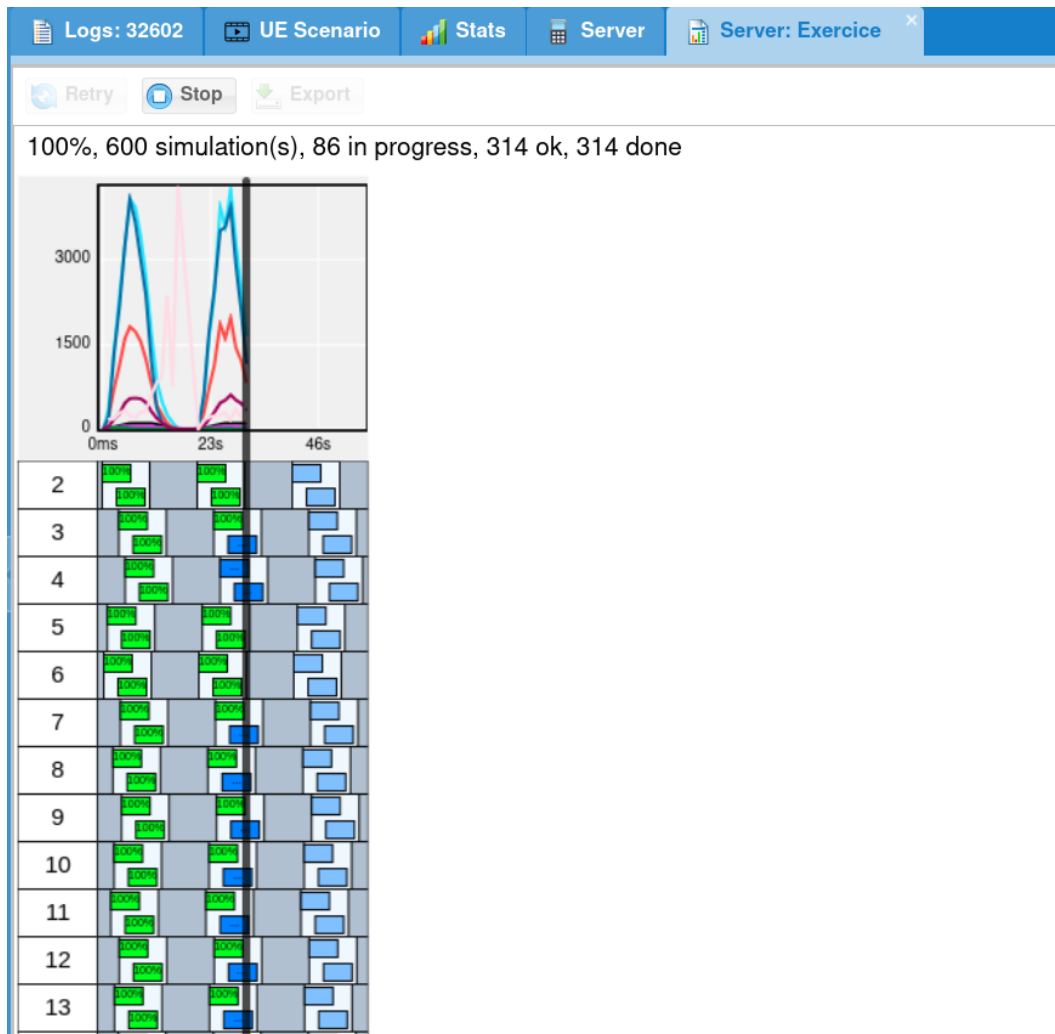

6 Configuration reference

6.1 Configuration file syntax

The main configuration file uses a syntax very similar to the Javascript Object Notation (JSON) with few extensions.

- Supported types:
 - Numbers (64 bit floating point). Notation: 13.4
 - Complex numbers. Notation: 1.2+3*I
 - Strings. Notation: "string"
 - Booleans. Notation: true or false.
 - Objects. Notation: { field1: value1, field2: value2, }
 - Arrays. Notation: [value1, value2,]
- The basic operations +, -, * and / are supported with numbers and complex numbers. + also concatenates strings. The operators !, ||, &&, ==, !=, <, <=, >=, > are supported too.
- The numbers 0 and 1 are accepted as synonyms for the boolean values false and true.
- { } at top level are optional.
- " for property names are optional, unless the name starts with a number.
- Properties can be duplicated.

If properties are duplicated, they will be merged following [JSON merge rules], page 21, with overriding occuring in reading direction (last overrides previous).

Ex:

```
{
  value: "foo",
  value: "bar",
  sub: {
    value: "foo"
  },
  sub: {
    value: "bar"
  }
}
```

Will be equivalent to:

```
{
  value: "bar",
  sub: {
    value: "bar"
  }
}
```

- Files can be included using *include* keyword (must not be quoted) followed by a string (without :) representing the file to include (path is relative to current file) and terminating by a comma.

Arrays can't be included.

Merge will be done as for duplicate properties.

If *file1.cfg* is:

```
value: "foo",
include "file2.cfg",
foo: "foo"
```


And *file2.cfg* is:

```
value: "bar",
foo: "bar"
```

Final config will be:

```
{
  value: "bar",
  foo: "foo"
}
```

8. A C like preprocessor is supported. The following preprocessor commands are available:

#define var *expr*

Define a new variable with value *expr*. *expr* must be a valid JSON expression. Note that unlike the standard C preprocessor, *expr* is evaluated by the preprocessor.

#undef var

Undefine the variable *var*.

#include *expr*

Include the file whose filename is the evaluation of the string expression *expr*.

#if *expr* Consider the following text if *expr* is true.

#else Alternative of **#if** block.

#elif Composition of **#else** and **#if**.

#endif End of **#if** block.

#ifdef var

Shortcut for **#if defined(var)**

#ifndef var

Shortcut for **#if !defined(var)**

In the JSON source, every occurrence of a defined preprocessor variable is replaced by its value.

9. Backquote strings: JSON expression can be inserted in backquote delimited strings with the ``${expr}` syntax. Example: `'abc${1+2}d'` is evaluated as the string `"abc3d"`. Preprocessor variables can be used inside the expression. Backquote strings may span several lines.

6.1.1 JSON merge rules

Merge overriding direction depends on context, i.e source may override destination or the opposite.

JSON merge is recursive for Objects and Arrays.

Example, merging

```
{
  foo: { value: "bar" },
  same: "one",
  one: 1
}
```

with

```
{
  foo: { value: "none", second: true },
```

```

    same: "two",
    two: 1
}

```

Will become:

```

{
  foo: { value: "bar", second: true },
  same: "one",
  one: 1
  two: 1
}

```

assuming first object overrides second one.

In case of Array merging, the final array length will be the maximum length of all merged arrays.

For each element of the final array, merge will be done considering defined elements only.

Ex:

```

{
  array: [0, 1, 2, { foo: "bar" } ],
  array: [3, 4],
  array: [5, 6, 7, { bar: "foo" }, 8 ]
}

```

Will be merged to:

```

{
  array: [5, 6, 7, { foo: "bar", bar: "foo" }, 8 ],
}

```

6.2 Global properties

log_filename

String. Set the log filename. If no leading /, it is relative to the configuration file path. See [Log file format], page 93.

log_options

String. Set the logging options as a comma separated list of assignments.

- *layer.level=verbosity*. For each layer, the log verbosity can be set to **none**, **error**, **info** or **debug**. In debug level, the content of the transmitted data is logged.
- *layer.max_size=n*. When dumping data content, at most **n** bytes are shown in hexa. For ASN.1, NAS or Diameter content, show the full content of the message if **n > 0**.
- *layer.payload=[0|1]*. Dump ASN.1, NAS, SGsAP or Diameter payload in hexadecimal.
- *layer.key=[0|1]*. Dump security keys (NAS and RRC layers).
- *layer.crypto=[0|1]*. Dump plain and ciphered data (NAS and PCDP layers).
- *phy.signal=[0|1]*. Dump binary received signal data of the physical layer to another file (*log_filename.bin*). The currently available data are QAM constellations and channel estimation for PDSCH, PUSCH and SRS. The GUI can be used to display them. Note: the size of the binary signal data is larger than the textual logs, so they should be enabled only when needed.

- `phy.rep=[0|1]`. Log the NPUSCH/NPDSCH allocations and repetitions in each subframe (NB-IoT UE only).
- `phy.dci_size=[0|1]`. Log the expected DCI sizes (NR UE only).
- `phy.csi=[0|1]`. Log the computed CSI information.
- `phy.cell_meas=[0|1]`. Log some cell related statistics.
- `phy.cch=[0|1]`. Log number of CCH symbols and SINR.
- `phy.ntn=[0|1]`. Log timing updates performed for NTN.
- `rrc.cell_meas=[0|1]`. Log RRC cell measurements.
- `nas.plmn=[0|1]`. Log the PLMNs used by the NAS PLMN selection.
- `time=[sec|short|full]`. Display the time as seconds, time only or full date and time (default = time only).
- `time.us=[0|1]`. Dump time with microseconds precision.
- `file=cut`. Close current file log and open a new one.
- `file.rotate=now`. Move and rename to the same directory or to the directory pointed by `file.path` and open a new log file (Headers are kept).
- `file.rotate=size`. Every time log file size reaches *size* bytes, move and rename to the same directory or to the directory pointed by `file.path`, and open a new log file (Headers are kept).
Size is an integer and can be followed by K, M or G.
- `file.rotate=#count`. Everytime number of logs in log file reaches *count*, move and rename to the same directory or to the directory pointed by `file.path`, and open a new log file (Headers are kept).
Size is an integer and can be followed by K, M or G.
- `file.path=path`. When log rotation is enabled (`file.rotate` set), rename and move current log to this path instead of initial log path.
- `append=[0|1]`. (default=0). If 0, truncate the log file when opening it. Otherwise, append to it.

Available layers are: `phy`, `mac`, `rlc`, `pdcp`, `rrc`, `nas`, `ip`, `ikev2`, `swu`, `nwu`, `ipsec`

log_sync Optional boolean (default = false). If true, logs will be synchronously dumped to file.

Warning, this may lead to performances decrease.

rf_driver

Object. Parameters of the radio driver. See [Radio driver configuration], page 27.

tx_gain Float or array of floats. Transmit gain in dB. The range is device dependent. For the PCIe SDR board, the range is between 0 and 89.75 dB. For the USRP N2x0 device with the SBX daughterboard, the range is 0 to 31.5 dB. With an array of floats a different gain is specified for each channel.

rx_gain Float or array of floats. Receive gain in dB. The range is device dependent. For the PCIe SDR board, the range is between -11 and 77 dB (the exact limits depend on the RX frequency). For the USRP N2x0 device with the SBX daughterboard, the range is 0 to 31.5 dB. With an array of floats a different gain is specified for each channel.

udc_ports

Optional array of objects. Each object contains the configuration of the corresponding UDC port.

Each object contains the following properties:

args	String. Set the UDC configuration parameters. Each parameter composing the string is separated by semicolon (See [args configuration], page 93).										
cmd	String. Specifies the path to the script for the UDC configuration (See [UDC configuration reference], page 92). The script is called once for each configured udc_port with the following command line arguments: <ul style="list-style-type: none"> • args: (See [args], page 24) • lo_freq: (See [lo_freq], page 24) • min_freq: automatically set by the software, spectrum minimum frequency for aggregated cells using the same udc_port • max_freq: automatically set by the software, spectrum maximum frequency for aggregated cells using the same udc_port • freq: automatically set by the software, FR2 cell central frequency, for each rf_port using the same udc_port • bandwidth: automatically set by the software, FR2 cell bandwidth, for each rf_port using the same udc_port 										
lo_freq	Optional float. Specifies the UDC LO frequency in MHz to be configured. If not present, it will be automatically computed.										
tx_power_offset	Optional float. Measured in dB, negative value. It corresponds to the amount of attenuation between the SDR and the UDC IF port. The default value is 0, in case of aggregated cells with combiner the attenuation is computed as $-10 \cdot \log_{10}(\text{COMBINER_PORTS})$.										
cell_groups	Array of object. Parameters for each group of similar cells. See [Cell group configuration], page 27.										
ue_list	Array of object. Each element gives the configuration of a UE. See [UE configuration], page 34.										
custom_freq_band	Optional object or array of objects. Define a non standard LTE or NR frequency band. Standard bands can also be overridden by this option. If the uplink information is not provided, it is assumed to be the same as the downlink (TDD band). Use an array of objects if you want to define more than one custom band. For LTE bands, the following parameters are available: <table> <tr> <td>band</td><td>Range: 1 to 256.</td></tr> <tr> <td>dl_earfcn_min</td><td>Range: 0 to 262143.</td></tr> <tr> <td>dl_earfcn_max</td><td>Range: 0 to 262143.</td></tr> <tr> <td>dl_freq_min</td><td>Float. Low DL frequency in MHz.</td></tr> <tr> <td>ul_earfcn_min</td><td>Optional integer. Range: 0 to 262143.</td></tr> </table>	band	Range: 1 to 256.	dl_earfcn_min	Range: 0 to 262143.	dl_earfcn_max	Range: 0 to 262143.	dl_freq_min	Float. Low DL frequency in MHz.	ul_earfcn_min	Optional integer. Range: 0 to 262143.
band	Range: 1 to 256.										
dl_earfcn_min	Range: 0 to 262143.										
dl_earfcn_max	Range: 0 to 262143.										
dl_freq_min	Float. Low DL frequency in MHz.										
ul_earfcn_min	Optional integer. Range: 0 to 262143.										

<code>ul_earfcn_max</code>	Optional integer. Range: 0 to 262143.
<code>ul_freq_min</code>	Optional Float. Low UL frequency in MHz.
<code>ntn</code>	Optional boolean. True if this is a NTN band.
For NR bands, the following parameters are available:	
<code>band_nr</code>	Range: 1 to 1024. NR band number.
<code>dl_freq_min</code>	Float. Range: 0 to 65535. Minimum DL frequency in MHz. Use 0 if no DL.
<code>dl_freq_max</code>	Float. Range: 0 to 65535. Maximum DL frequency in MHz. Use 0 if no DL.
<code>ul_freq_min</code>	Float. Range: 0 to 65535. Minimum UL frequency in MHz. Use 0 if no UL. If not provided, use the same value as DL (TDD).
<code>ul_freq_max</code>	Float. Range: 0 to 65535. Maximum UL frequency in MHz. Use 0 if no UL.
<code>ssb_scs</code>	Array of integers. List of allowed SSB subcarrier spacing for this band. Allowed values: 15, 30, 120 or 240.
<code>f_raster</code>	Enumeration: 100, 15, 15-30, 15-30-100, 60-120, 100-enhanced. Frequency raster in kHz.
<code>ssb_case_c</code>	Boolean. True if SSB case C is enabled on this band.
<code>min_40mhz_bw</code>	Boolean. True if the minimum allowed bandwidth on this band is at least 40 MHz. This information is used to select the CoReSet #0 table in standalone mode.
<code>delta_gscn</code>	Optional enumeration: 1, 3, 7, 16 (default = 1). GSCN step size.
<code>ntn</code>	Optional boolean. True if this is a NTN band.
<code>rue_bind_addr</code>	Optional string. Set it to enable and define <i>lterue</i> bind address.
<code>user_thread_count</code>	Optional integer (default = 1). Sets number of threads for external application launcher and <code>tun_setup_script</code> .
<code>com_addr</code>	Optional string. Address of the WebSocket server remote API. See [Remote API], page 59. If set, the WebSocket server for remote API will be enabled and bound to this address. Default port is 9002. Setting IP address to <code>::</code> will make remote API reachable through all network interfaces.

com_name Optional string. Sets server name. UE by default

com_ssl_certificate
Optional string. If set, forces SSL for WebSockets. Defines CA certificate filename.

com_ssl_key
Optional string. Mandatory if *com_ssl_certificate* is set. Defines CA private key filename.

com_ssl_peer_verify
Optional boolean (default is false). If *true*, server will check client certificate.

com_ssl_ca
Optional string. Set CA certificate. In case of peer verification with self signed certificate, you should use the client certificate.

com_log_lock
Optional boolean (default is false). If *true*, logs configuration can't be changed via *config_set* remote API.

com_log_us
Optional boolean (default is false). If *true*, logs sent by *log_get* remote API response will have a *timestamp_us* parameters instead of *timestamp*

com_auth Optional object. If set, remote API access will require authentication. Authentication mechanism is describe in [Remote API Startup], page 61, section.

passfile Optional string. Defines filename where password is stored (plaintext). If not set, **password** must be set

password Optional string. Defines password. If not set, **passfile** must be set.

unsecure Optional boolean (default false). If set, allow password to be sent plaintext.
NB: you should set it to true if you access it from a Web Browser (Ex: Amarisoft GUI) without SSL (https) as your Web Browser may prevent secure access to work.

com_log_count
Optional number (Default = 8192). Defines number of logs to keep in memory before dropping them.
Must be between 4096 and 2097152).

license_server
Configuration of the Amarisoft license server to use.
Object with following properties:

server_addr
String. IP address of the license server.

name Optional string. Text to be displayed inside server monitor or remote API.

tag Optional string. If set, server will only allow license with same tag.

Example:

```
license_server: {
  server_addr: "192.168.0.20",
  name: "My license"
}
```

sim_ip_remote_addr

Optional string. Defines default server address for IP simulation events of all UE.

cpu_core_list

Optional array. Defines the list of CPU cores indexes on which LTEUE will run. If not set, LTEUE may use all cores, refer to [cpu_core_list], page 58, for syntax. Note that the number of cores depends on Linux scheduler and LTEUE configuration.

vrblib_path

Optional string. Path to the **vrblib.so** dynamic library file located in the delivered tarball. If present, the eNodeB uses Intel vRANBoost device for LDPC decoding. The CPU must support vRANBoost, DPDK must be installed on the machine and the vRANBoost device must be configured properly before use. This mode enables faster LDPC decoding. It can be used to lower the CPU usage of the stack or to increase the number of LDPC decoding iterations in order to improve decoding sensitivity.

sim_events

Array of object. Each element defines a remote API request ([Remote API], page 59) except that **message** field is replaced by **event**.

sim_events_loop_count

If set, will define **loop_count** for each event of **sim_events**, See [loop-count], page 60.

sim_events_loop_delay

If set, will define **loop_delay** for each event of **sim_events**, See [loop-delay], page 60.

6.3 Radio driver configuration

name Driver name. The corresponding DLL file name is **trx_name.so**. It is searched in the lteue executable directory, in the path configured in the **path** property. The following drivers are currently available:

dummy Dummy driver. Can be used to measure the RX to TX latency.

sdr Amarisoft PCIe SDR driver.

Parameters are defined here:

SDR50 (https://tech-academy.amarisoft.com/trx_sdr.doc#TRX-driver-configuration-options)

SDR100 (https://tech-academy.amarisoft.com/trx_sdr100.doc#TRX-driver-configuration-options)

CPRI (https://tech-academy.amarisoft.com/trx_cpri.doc#TRX-driver-configuration-options)

uhd Ettus Research UHD driver for USRP N2x0, B2x0 and X3x0 series. Please check Amarisoft UHD documentation delivered within package.

lms7002m Lime MicroSystem LimeSDR platform driver.

Please check Amarisoft SDR documentation delivered within package.

If you don't have and need one of these drivers, please contact customer@amarisoft.com and ask for it.

6.4 Cell group configuration

A cell groups references the configuration of 1 or more cells of the same type.

Cells within same group must be synchronized at subframe/frame level.
Handovers are not allowed between cells of different groups.
NB-IoT groups can only handle one cell.

To perform 5G NSA, the configuration must contain at least two groups, one of LTE type and one of NR type.

group_type

String. Defines cell type, can be:

<code>lte</code>	LTE category 0 to max.
<code>cat_m1</code>	Cat-M1
<code>nbiot</code>	NB-IoT
<code>nr</code>	5G NR

tx_gain_offset

Optional float. Set the digital TX gain (can be seen as the opposite of the TX backoff power). Warning: do not change it unless you know what you do because a too high value introduces saturation in the output.

For LTE, the default value is -12 dB in multi UE mode and -8 dB in single UE mode.

For NB-IoT the default value is always -20 dB.

For NR the default value is always -14 dB.

tx_time_offset

Optional integer (LTE only). Time offset (in samples) for the TX stream relative to the RX stream. It may be needed to compensate internal delays in the radio head.

tx_pad_duration

Optional integer (default = 23) (NR only). Duration (in 1/1.92 us units) of the zero sample burst sent before the start of the uplink burst in TDD. It corresponds to the power amplifier ramp up duration. The appropriate value depends on the radio head.

ground_position

Optional object needed for GNSS location estimate for LPP and/or NTN. For NTN, this position will allow the dynamic computation of the timing advance, based on satellite realtime position. Defines the geographic coordinates at the origin [0, 0, 0] in the local coordinates system in which the position is defined See [position], page 54.

Contains the following parameters:

`latitude` Float value. Range -90 to 90. Degrees of latitude.

`longitude` Float value. Range -180 to 180. Degrees of longitude.

`altitude` Optional float value (default = 0). Range -1000m to 20km. Altitude in meters.

`cells` Array of object. Each element gives the configuration of a cell. See [Cell configuration], page 29.

- multi_ue** Boolean. If enabled, UE simulation mode is activated where multiple UEs can be run at the same time. Note that when this mode is enabled, you should adjust the `global_timing_advance` cell parameter. If set to false, the real UE mode is activated with one single instance of UE.
- cell_sync**
Optional boolean (default = true), NR only. When multiple cells are configured in the group, this parameter indicates that the cells are synchronized at the slot level. It must be set to `true` for CA or SUL operation. On the opposite, if the cells are known to have very different timing (eg in NTN scenarios), the parameter should be set to `false`.
- long_range**
Optional boolean (default = false). If true, enable a proprietary Amarisoft extension to extend the cell range (a modified eNodeB is necessary) (LTE only). This parameter applies to all the UEs in multi-UE mode.
- rel13_5** Optional boolean (default = true). If true, enable incompatible physical layer changes for NPBCH/BCCH introduced in release 13.5 (category NB1 only).
- channel_sim**
Optional boolean (default = false). If set, the UE channel simulator is enabled. It is only available in multi UE mode (`multi_ue = true`). See [channel_sim], page 50, for more information.
- pdccch_decode_opt**
Optional boolean (default = false). If set, `pdccch_decode_opt_threshold` will be used (LTE and NR).
- pdccch_decode_opt_threshold**
Optional float. `pdccch_decode_opt` must be set to true. This parameter defines an EPRE (Energy Per Resource Element) threshold relative to CRS (LTE) or SSB (NR) for PDCCH detection to save CPU time.
Use it only with high SNR (Ex: using cables) as it may prevent from decoding low power PDCCH.
- pdsch_max_its**
Optional integer (range 1 to 20, default = 6). CPU load limitation: set the maximum number of iterations of the turbo decoder (LTE only). A higher value gives a lower frame error rate but a higher CPU load.
- ldpc_max_its**
Optional integer (range 1 to 50, default = 5). CPU load limitation: set the maximum number of iterations of the LDPC decoder (NR only). A higher value gives a lower frame error rate but a higher CPU load.
- cpu_core_list**
Optional array. Defines the list of CPU cores indexes on which the cell group will run.
Refer to [cpu_core_list], page 58, for syntax.
If not set, LTEUE may use all cores, or if RF frontend driver provides NUMA nodes, they will be used.

6.5 Cell configuration

`n_antenna_dl`

Optional integer (default = 1). Range: 1 to 8. Set the number of downlink antennas. See [channel_sim], page 50, to have more information when the channel simulator is enabled. NB-IoT cells only support a single downlink antenna.

`n_antenna_ul`

Optional integer (default = 1). Range: 1 to 8. Set the number of uplink antennas. See [channel_sim], page 50, to have more information when the channel simulator is enabled. LTE and NB-IoT cells only support a single uplink antenna.

`sample_rate`

Optional float. Sample rate in MHz. It is normally automatically set depending on the radio head capabilities and selected bandwidth. To take effect, `bandwidth` must not be set.

`rf_dl_freq`

Optional float. Override the tuning frequency in MHz for the downlink. This optional is only needed if there is a frequency translator after the SDR device.

`rf_ul_freq`

Optional float. Override the tuning frequency in MHz for the uplink. This optional is only needed if there is a frequency translator after the SDR device.

`global_timing_advance`

Optional integer. Range: -1 to 1292 (default = -1). This option is only meaningful in multiple UE mode and specifies the timing advance of the uplink relative to the downlink. The unit is $1/1.92$ us for non NR cells and $1/(0.128 \cdot \text{SCS})$ us for NR cells where `SCS` is the cell subcarrier spacing in kHz. The special value -1 indicates to use the timing advance from the first received RAR. See [Multiple UE case], page 7, for more information.

`apply_ta_commands`

Optional boolean (default = false). This option is only meaningful in multiple UE mode and allows the UE to follow the TA commands received from the network. This option is only available for NB-IoT and NR UEs. It is not possible to have both `delay_sim` and `apply_ta_commands` set to true. See [Multiple UE case], page 7, for more information.

`forced_pci`

Optional integer (default = -1). Force the selected Physical Cell Identity. The default value -1 indicates to select the first detected PCI. This parameter is currently not available for NB-IoT cells.

`tx_gain_offset`

Optional float. If set, overrides group value: [tx_gain_offset], page 28.

`ntn_n_ta_ue`

Optional float (default = -1). If positive, specify a constant NTA_UE in microseconds when computing Timing Advance in NTN. If negative or left out and if the cell is in a NTN band, `ground_position` in the cell group is mandatory.

`ntn_eci_aligned_ecef`

Optional boolean (default = false). If set to true, the orbital parameters (read from SIB31 in NB-IoT or SIB19 in NR) are understood with the ECI reference frame aligned with the ECEF frame at the current epoch. If set to false, the ECI reference is aligned with the J2000 vernal equinox.

ntn_service_dl_freq

Optional integer (default = 0). NR only. If non zero, this parameter sets the value in Hz of the actual DL frequency used on the satellite service link when it is different from the DL frequency specified by **dl_nr_arfcn**.

ntn_service_ul_freq

Optional integer (default = 0). NR only. If non zero, this parameters sets the value in Hz of the actual UL frequency used on the satellite service link.

ntn_internal_model

Optional enumeration: orbital, state_vectors (default = orbital). Choose the internal propagation model for the satellite position, either based on keplerian orbital elements or based on a force-model integration of the state vectors. This is irrespective of the configuration from SIB19 which can either be `OrbitalElements` or `StateVectors`.

cpu_core_list

Optional Array. Defines the core affinity of the digital signal processing engine (Physical layer) for both UL and DL of the cells associated to this rf_port (See [cpu_core_list], page 58).

cpu_core_list_ul

Optional Array. Defines the core affinity of the digital signal processing engine (Physical layer) for UL of the associated cell(s). If set, overrides **cpu_core_list**.

cpu_core_list_dl

Optional Array. Defines the core affinity of the digital signal processing engine (Physical layer) for DL of the associated cell(s). If set, overrides **cpu_core_list**.

nb_threads

Optional number. If set, forces the number of threads used by the digital processing engine for DL or UL of the associated cell(s).

nb_threads_ul

Optional number. If set, forces the number of threads used by the digital processing engine for UL of the associated cell(s). If set, overrides **nb_threads**.

nb_threads_dl

Optional number. If set, forces the number of threads used by the digital processing engine for DL of the associated cell(s). If set, overrides **nb_threads**.

cpu_numa_list

Optional array of integers. Each integer represent a NUMA node index. If set will, digital processing engine will use the list of defined NUMA nodes for its memory usage.

If this field is not set but **cpu_core_list** is defined, LTEUE will select the NUMA nodes associated to the affected cores. This means that most of the time this parameter shouldn't be set. The only relevant case is when a NUMA node has no RAM bank connected, you may use this parameter to select the closest NUMA node with memory.

s72

Optional object. If set, this cell port will use ORAN split 7.2 TRX API to send data to the radio unit.

This section has the following properties:

rtc_id Integer. RTC id.

<code>ud_comp_hdr</code>	Optional integer (default = 0). Set User Data compression header configuration. Can be 0 for no compression, 0x81 for BF8, 0x91 for BF9, 0xc1 for BF12 or 0xe1 for BF14.
<code>port_mapping</code>	Optional array of integers. If set, allows to map UE antenna to different RU port. Each number represents the RU port ID used for the antenna in ORAN packets. This array must have same number of elements as the maximum between DL antenna count and UL antenna count. Each RU port must be set once in the array. Ex: <code>port_mapping: [1, 2, 4, 0]</code> , Means UE will use RU port 1 for the first antenna, RU port 2 for the second antenna... By default, it is set to <code>[0, 1, 2, ...]</code>
<code>port_mapping_dl</code>	Optional array of integers. Same as <code>port_mapping</code> except that it applies only for DL antenna and the array must have same number of elements as DL antenna count.
<code>port_mapping_ul</code>	Optional array of integers. Same as <code>port_mapping</code> except that it applies only for UL antenna and the array must have same number of elements as UL antenna count.
<code>port_mapping_prach</code>	Optional array of integers. Same as <code>port_mapping</code> except that it applies only for the PRACH ORAN packets.
<code>gen_prb0</code>	Optional boolean (default = false). If true, numPrbc of U-Plane ORAN section will be set to 0 when all ressources blocks are used and exceed 255. If set to false and number of ressources blocks exceed 255, multiple ORAN sections will be generated.
<code>relative_symbol</code>	Optional boolean (default = false). In case of section type 3, start symbol of both control and data packet will start at 0, i.e relative to time_offset
<code>debug</code>	Optional boolean (default = false). If true, mode information will be displayed in logs. May have an impact on performances.

The following parameters are available if `group_type` is not set to "nr":

<code>dl_earfcn</code>	Range: 0 to 262143. Set the DL EARFCN. See https://www.sqimway.com/lte_band.php to convert between the center frequency and EARFCN.
<code>ul_earfcn</code>	Optional. Range: 0 to 262143. Set the UL EARFCN. If not provided, the default DL/UL gap is used (i.e. <code>ul_earfcn = dl_earfcn + 18000</code> for FDD).
<code>bandwidth</code>	Optional number. Defines LTE bandwidth and can be 20, 15, 10, 5, 3 or 1.4. If omitted, <code>sample_rate</code> has to be set.

sample_rate_num

Optional integer (LTE only). Main sample rate used for the LTE signal processing in 1.92 MHz units (hence 3 means 5.76 MHz). It is normally automatically set depending on the radio head capabilities and selected bandwidth. If the resulting rate is different from **sample_rate**, a fractional sample rate interpolator is used to convert the sample rate.

prach_delay

Optional integer (LTE and NR only). Range: 0 to 1920 (default = 0). This option specifies the PRACH delay relative to the other uplink signals in TA units. The same PRACH delay is applied to all the UEs of the cell. This option is useful to simulate an arbitrary PRACH timing advance in multiple UE mode.

sync_id

Optional integer (default = 0). Cells with same **sync_id** must be synchronized in time (Same Frame/SubFrame numbers). To allow non synchronized cells within a group, set different **sync_id** for each cell. Only applicable to LTE UEs.

Note that for proper CA operation, the PCell and SCells must be synchronized.

The following parameters are available if **group_type** is set to "nr":

band Integer (range 0 to 1024). NR band.

dl_nr_arfcn

Integer (range 0 to 3279165). Set the DL NR-ARFCN. See https://www.sqimway.com/nr_band.php to convert between the center frequency and NR-ARFCN.

ul_nr_arfcn

Integer (range 0 to 3279165). Set the UL NR-ARFCN. See https://www.sqimway.com/nr_band.php to convert between the center frequency and NR-ARFCN.

subcarrier_spacing

Integer (15, 30, 60, 120). Set the cell subcarrier spacing.

ssb_subcarrier_spacing

Optional integer (15, 30, 120, 240). Set the SSB subcarrier spacing. If absent, the value from **subcarrier_spacing** is used instead.

ssb_nr_arfcn

Optional integer (range 0 to 3279165). Set the SSB NR-ARFCN. See https://www.sqimway.com/nr_band.php to convert between the center frequency and NR-ARFCN. If absent, the value from **dl_nr_arfcn** is used instead.

ssb_case_c

Optional boolean. Set to true if case C must be used instead of case B for 30 kHz SSB SCS. The default value depends on the selected frequency band (see 3GPP TS 38.101-1 table 5.4.3.3-1).

bandwidth

Optional integer (range 3 to 400). Cell bandwidth.

n_rb_dl

Optional integer (range 20 to 275). Number of DL resource blocks. Used if **bandwidth** is absent.

rx_to_tx_latency

Optional integer (Range 2 to 32, default = 4). Minimum allowed latency in slots between RX and TX.

This parameter will bound the minimum k1 and k2 parameter allowed by the system. Increasing the value will improve performances, especially in case of radio frontend underflows.

pdccch_log_filename	Optional string. Log the PDCCH decoding attempts to the pdccch_log_filename file. It is useful only when debugging the PHY layer. Do not enable it in other cases as it may generate a large log file and may degrade the UE performance.
udc_port	Optional integer. Selects the UDC port used for the cell. Cells aggregated with the same UDC device, will use the same udc_port number.
tx_power_offset	Optional float. If set add an offset in dB to any TX signal power information such as 't spl'. Useful when placing an attenuator (negative value) or a power amplifier (positive value) after the radio frontend TX output.

6.6 UE configuration

6.6.1 Virtual USIM

The following parameters configure the virtual USIM:

mnc_nb_digits	Optional enumeration: 2, 3 (default = 2). Set the number of digits in home network MNC.
imsi	Optional string. Shall be present if nai is absent. Set the IMSI.
nai	Optional string applicable to 5G only. Shall be present if imsi is not set. Set the Network specific identifier-based SUPI.
sim_algo	Optional enumeration. xor, milenage or tuak (default = xor). Set the USIM authentication algorithm. Note: test USIM cards use the XOR algorithm.
sqn	Optional String (6 byte hexadecimal string). Default = "000000000000". Set the initial sequence number. For the XOR algorithm, the actual value does not matter. For the Milenage or TUAK algorithm, a sequence number resynchronization is initiated if the sequence number does not match the one stored in the USIM.
K	String. Set the user secret key (as a 16 bytes hexadecimal string, or eventually 32 bytes hexadecimal string for TUAK).
op	Optional string. Operator key (as a 16 byte hexadecimal string). When the Milenage authentication algorithm is used, either op or opc must be set.
opc	Optional string. Operator key preprocessed with the user secret key (as a 16 byte hexadecimal string). When the Milenage authentication algorithm is used, either op or opc must be set.
r	Optional array of 5 integers (range: 0 to 127). Allows to customize the r1 to r5 parameters when Milenage authentication algorithm is used. If the array is not present, the default values (as defined in 3GPP TS 35.206) are used.
c	Optional array of 5 strings. Each value contains a 16 byte hexadecimal string. Allows to customize the c1 to c5 parameters when Milenage authentication algorithm is used. If the array is not present, the default values (as defined in 3GPP TS 35.206) are used.
top	Optional string. Operator key (as a 32 byte hexadecimal string). When the TUAK authentication algorithm is used, either top or topc must be set.

- topc** Optional string. Operator key preprocessed with the user secret key (as a 32 byte hexadecimal string). When the TUAK authentication algorithm is used, either **top** or **topc** must be set.
- keccak_iter** Optional integer (range: 1 to MAX_INT). Allows to customize the number of Keccak permutations performed when using the TUAK authentication algorithm. If the item is not present, the default value 1 (as defined in 3GPP TS 35.231) is used.
- cag_info_list** Optional array. Subscribed CAG information list. Each element of the array contains:
- plmn** String (5 or 6 digits).
 - cag_id_list** Array of 1 to 12 integers (range 0 to 4294967295) giving the list of the allowed CAG-Identifiers.
 - cag_only_ind** Optional boolean (default = FALSE). Indication that the UE is only allowed to access 5GS via CAG cells.
- csg_info_list** Optional array of objects. Subscribed CSG information. Each element of the array contains:
- plmn** String (5 or 6 digits).
 - csg_id_list** Array of integers in range 0 to 0x7FFFFFFF. Allowed CSG id list in the PLMN.
- res_len** Optional integer (default = 8). Defines length of response in bytes during authentication. For TUAK authentication algorithm, the RES length configured on UE and network side must match and the value must be 4, 8 or 16 bytes long.
- preferred_plmn_list** Optional array. Each element of the array contains a PLMN string (5 or 6 digits) ordered by decreasing priority. Can be present only if none of **plmnwact**, **oplmnwact** and **hplmn** is present.
- plmnwact** Optional array containing the list of user controlled PLMN with access technology (refer to 3GPP 31.102 chapter 4.2.5) used by the NAS PLMN selection procedure. Each element of the array contains a PLMN and the allowed access technologies, ordered by decreasing priority:
- plmn** String (5 or 6 digits).
 - access_techno** Array of enumeration: **eutra_nb**, **eutra_wb**, **eutra**, **nr**.
- oplmnwact** Optional array containing the list of operator controlled PLMN with access technology (refer to 3GPP 31.102 chapter 4.2.53) used by the NAS PLMN selection procedure. See [plmnwact], page 35, for coding.
- hplmnact** Optional array of elements listed in decreasing priority order, giving the access technologies of the home PLMN the UE will consider when searching for the HPLMN

(refer to 3GPP 31.102 chapter 4.2.54). Each element is an array of enumeration: eutra_nb, eutra_wb, eutra, nr. Example:

```
hplmnact:
[
  ["nr", "eutra_nb"],
  ["eutra_wb"]
]
```

ehplmn Optional array containing the equivalent home PLMN list (refer to 3GPP 31.102 chapter 4.2.84) used by the NAS PLMN selection procedure. Each element of the array contains a PLMN string (5 or 6 digits) ordered by decreasing priority.

lrplmnsi Optional enumeration: last_registered, hplmn_or_last_registered (default = last_registered). Gives the Last RPLMN Selection Indication as defined in 3GPP 31.102 chapter 4.2.86.

access_control_classes

Optional array of integers containing the assigned access control classes (refer to 3GPP 31.102 chapter 4.2.15 EFACC).

Default value is [0, 1, 2, 3, 4, 5, 6, 7, 8, 9].

Each element of the array is an access class number in range 0-9 or 11, 12, 13, 14, 15.

uac_access_identities

Optional array of enumeration: "mps", "mcs". Gives the configuration information pertaining to access identities allocated for specific high priority services. If "mps" is present in the array, the UE is configured for Multimedia Priority Service, if "mcs" is present in the array, the UE is configured for Mission Critical Services, see specified in 3GPP 31.102 chapter 4.4.11.7 EFUAC_AIC;

eab Optional boolean (default = false). Indicates whether the UE applies EAB (extended access barring). Equivalent parameter in the USIM is 'Extended access barring' in EFNASCONFIG (see 31.102 chapter 4.2.94 EFNASCONFIG).

6.6.2 SIM card reader

external_sim

Optional boolean (default = false). If set, will try to use SIM card reader instead previous parameters. (Uses the PCSC lite library)

sim_reader_index

Optional integer (range 0 to 1024). If *external_sim* is set, this allow to select SIM card reader if several are plugged.

6.6.3 UE parameters

6.6.3.1 Common parameters

The following parameters are available for UEs of all types, unless stated otherwise.

imeisv Optional string. Set the International Mobile station Equipment Identity and Software Version Number. If not set, will be automatically generated.

as_release

Optional integer (default = 8). Define the Access Stratum release for UE capabilities. Releases 8 to 18 are supported.

nas_5gs Optional boolean (default = false). When set to true, the LTE or NB-IoT UE will connect to a 5G core network through a ng-eNB.

- ue_category**
Optional integer (-2 to 13) or string (default = 4). Set the UE category/type. The string values **m1**, **nb1**, **nb2** or **nr** are also accepted. For backward compatibility, -1 means category M1 and -2 means category NB1. Category M1 or NB1 need at least **as_release** 13. Category NB2 needs at least **as_release** 14. Category NR needs at least **as_release** 15 and sets the UE in 5G SA mode.
All UEs must be either category ≥ 0 , category M1, NB-IoT or NR.
- long_drx** Optional boolean (default = true). When set to false, the UE does not indicate supporting DRX in its capabilities (LTE, NR).
- short_drx**
Optional boolean (default = true). When set to false, the UE does not indicate supporting short DRX cycles in its capabilities (LTE, NR).
- t3324** Optional integer. Value in seconds of the T3324 information element sent by the UE in the NAS Attach Request, Tracking Area Update Request and Registration Request messages.
- sprrt_support**
Optional boolean (default = false). Set strictly periodic registration timer support in 5GMM MICO indication IE.
- t3412** Optional integer. Value in seconds of the T3412 extended information element sent by the UE in the NAS Attach Request and Tracking Area Update Request messages, or requested T3512 information element sent by the UE in the NAS Registration Request message. **t3324** parameter must be set.
- edrx_params**
Optional integer (range 0 to 255). If present, UE will declare support for extended idle mode DRX. This integer is encoded according to 3GPP TS 24.008 chapter 10.5.5.32.
- dl_ca** Optional boolean (default = true). When set to false, the UE does not report BandCombinations with DL CA in its capabilities.
- ul_ca** Optional boolean (default = true). When set to false, the UE does not report BandCombinations with UL CA in its capabilities.
- ca_filter_bc_3x101**
Optional boolean (default = true). When set to false, the UE will report all the possible band combinations (in the SupportedBandCombinationList IE of the UE capabilities) based on the **cells** array, regardless of their support in 3GPP TS 36.101/38.101 v18.2.0.
When set to true, only the combinations supported in 3GPP specification will be reported.
- ca_intraband**
Optional enumeration: **all**, **contiguous-only**, **non-contiguous-only** (default = **all**). Controls how the UE reports the intraband CA band combinations.
- wus_support**
Optional boolean (default = true). When set to false, the UE does not indicate supporting wake up signal in NB-IoT and Cat-M1.
- wus_edrx_min_time_offset**
Optional enumeration: 40, 240, 1000, 2000 (default = 40). Minimum time offset (in ms) between the end of WUS transmission and beginning of paging occasion when UE is in eDRX.

gwus_paging_probability

Optional enumeration: -1, 0, 5, 10, 15, 20, 25, 30, 35, 40, 45, 50, 55, 60, 65, 70, 75, 80, 85, 90, 95, 100 (default = -1: group WUS not activated). Requested paging probability of the UE used to determine the WUS group to which belongs the UE.

apn

Optional string. If set, this APN will be used for UE attachment as default APN.

authentication

Optional enumeration: **none**, **pap**, **chap** or **eap** (default set to **none**). Defines the APN authentication mechanism used during attachment.
eap is applicable to 5G only.

username

Optional string (up to 100 characters) containing the user name used for **pap**, **chap** or **eap** authentication.

password

Optional string (up to 100 characters) containing the password used for **pap**, **chap** or **eap** authentication.

tun_setup_script

Optional string. Set the path of the shell script to set up the virtual network interface (Path can be absolute or relative to config file).
 Script is called for each PDN with following parameters:

1. UE ID
2. PDN unique ID (starts from 0)
3. Interface name
4. IPv4 address
5. IPv4 DNS address
6. IPv6 link local address
7. IPv6 DNS address
8. **tun_script_param** associated to UE
9. APN/DNN name

followed by those optional informations:

- **-cid <CID>** PDN connection ID associated to **pdn_connect** command
- **-mtu <MTU size>** Interface MTU size

A sample script is provided: **ue-ifup**.

It configures a network namespace for each UE.

As a result you can set IP traffic this way:

```
ip netns exec <UE ID> ping 192.168.3.1
```

If no script is given, no virtual network interface is created.

If **rue_addr** is set, this parameter will be forwarded to remote UE server.

When this mode is on, only **ext_app** simulation is available.

tun_script_param

Optional string. Parameter passed to **tun_setup_script** for this UE.

tun_ifname

Optional string. If **tun_setup_script** is set, defines the name of the TUN interface for the first PDN. The TUN interface may have been created outside of the program.

rue_addr

Optional string. Address of remote UE server. See [Remote UE], page 91. Default port is 2152.

Note that **tun_setup_script** is mandatory.

sim_events

Array of object. Each element defines a remote API request ([Remote API], page 59) except that **message** field is replaced by **event**.
ue_id is implicitly set to this UE so that the message may apply to it.

sim_events_loop_count

If set, will define **loop_count** for each event of **sim_events**, See [loop_count], page 60.

sim_events_loop_delay

If set, will define **loop_delay** for each event of **sim_events**, See [loop_delay], page 60.

sim_ip_remote_addr

Optional string. Defines default server address for IP simulation events

attach_request_with_dummy_guti

Optional boolean (default = false). If true, attach procedure will be done with a dummy GUTI instead of IMSI.

emergency_attach

Optional boolean (default = false). If true, attach procedure will be for emergency services.

imei_attach

Optional boolean (default = false). If true, attach procedure will be done with an IMEI instead of an IMSI.

ue_usage_setting

Optional enumeration: none, voice, data (default = data). Sets the UE usage setting as defined in 3GPP TS 24.008 chapter 10.5.5.28 and 3GPP TS 24.501 chapter 9.11.3.55.

voice_domain_preference_eutran

Optional enumeration: cs_only, ims_ps_only, cs_preferred, ims_ps_preferred (default = ims_ps_only). Sets the voice domain preference for E-UTRAN as defined in 3GPP TS 24.008 chapter 10.5.5.28.

cp_ciot_opt

Optional boolean (default = false). If true, enable control plane CIoT optimization support. It can be used if the network supports it.

cp_edt

Optional boolean (default = false). If true and control plane CIoT is supported, enable CP-EDT support.

attach_without_pdn

Optional boolean (default = false). If true ;
For LTE, enable attach without PDN for data transfer via SMS. It can be used if the network supports it.
For 5G, the UE will not set the Follow-On request bit in the initial registration message and will not request any PDU session establishment, unless a call to **pdn_connect** is performed.

attach_pdn_type

Optional enumeration: ipv4, ipv6, ipv4v6, unstructured, ethernet (default = ipv4v6).
For LTE, selects the PDN type for the PDN connectivity request message piggy-backed in attach request.
For 5G, selects the PDU session type for the PDU session establishment request

sent after the UE registration.

Note that IPv6 and Ethernet require the use of the tun interface.

`attach_pdn_ims`

Optional boolean (default = false). Specifies if the PDN connectivity request message piggybacked in attach request or the first PDU session establishment request sent after the UE registration is for IMS or not.

`combined_eps_imsi_attach`

Optional boolean (default = false). If true, attach procedure type will use combined EPS/IMSI.

`sms_centre_address`

Optional object used to configure the SMS centre address. Contains the following parameters:

`type_of_number`

Optional enumeration "unknown", "international", "national" (default = "unknown"). SMS centre address type of number.

`numbering_plan`

Optional enumeration "unknown", "national", "private" (default = "unknown"). SMS centre address numbering plan identification.

number String. Contains optional '+' at first position followed by a maximum of 20 digits. SMS centre address number.

`use_security_context_for_registration`

Optional boolean (default = true). If false, the UE will never use its current security context for the EMM attach request or initial 5GMM registration request message.

`eutra_voice_support`

Optional boolean (default = true). If true, UE declares voice support in EUTRA RRC capabilities.

`nr_voice_support`

Optional boolean (default = true). If true, UE declares voice support in NR RRC capabilities.

`lpp_support`

Optional boolean (default = true). Indicates the support of LPP in the UE.

`cipher_algo_bitmap`

Optional integer (default = 0xe0). Defines the ciphering algorithms advertised by the UE in the NAS UE Network Capability information element. The coding of the field is per 3GPP TS 24.301 chapter 9.9.3.34: most significant bit is for EEA0/5G-EA0, followed by EEA1/5G-EA1, EEA2/5G-EA2 and EEA3/5G-EA3.

If encryption is necessary, AES (EEA2/5G-EA2) would give the best performance if your CPU supports the AES NI Intel instruction set (use "grep -o aes /proc/cpuinfo" in Linux to see if AES is displayed). In this case, it is recommended to configure the network to use EEA2. Alternatively, the EEA2 usage could be forced at the network side by setting the supported algorithms to EEA0 and EEA2 in the bitmap, if there is no other solution.

`integ_algo_bitmap`

Optional integer (default = 0xe0). Defines the integrity algorithms advertised by the UE in the NAS UE Network Capability information element. The coding of the field

is per 3GPP TS 24.301 chapter 9.9.3.34: most significant bit is for EIA0/5G-IA0, followed by EIA1/5G-IA1, EIA2/5G-IA2 and EIA3/5G-IA3.

For best performance, use AES (EIA2/5G-IA2) if your CPU supports the AES NI Intel instruction set (use "grep -o aes /proc/cpuinfo" in Linux to see if AES is displayed). In this case, it is recommended to configure the network to use EIA2. Alternatively, the EIA2 usage could be forced at the network side by setting the supported algorithms to EIA0 and EIA2 in the bitmap, if there is no other solution.

cell_index

Optional integer. Defines the cell index (index of the object in the `cells` array) to be used for the initial cell selection. If `rrc_initial_selection` is set to true, `cell_index` is ignored.

rrc_initial_selection

Optional boolean (default = true). If set to true, RRC initial cell selection according to 3GPP 36.304 and 38.304 is performed and `cell_index` is ignored.

rrc_sel_resel

Optional boolean (default = true). If set to false, RRC cell selection and reselection according to 3GPP 36.304 and 38.304 are not performed.

ue_count

Optional integer (default = 1). Create n user entries by incrementing the IMSI and K. All other properties would stay the same for the UEs. Note that you should as well create the same user entries at the MME side with their corresponding IMSI and K values (For Amarisoft MME, you can use the `count` parameter).

rsrq_offset

Optional float (default = 0). Add an offset in dB to the measured RSRQ.

apply_ul_mbr

Optional boolean (default = true). If set to true, the UE restricts the UL traffic to the configured non-GBR AMBR or GBR MBR/MFBR.

pdsch_fer

Optional float. Range 0 to 1 (default = 0). If different from zero, simulate a given Frame Error Rate (or BLER) for each PDSCH decoding. The FER is simulated only when the PDSCH are successfully decoded. Note: `pdsch_fer` overrides the FER coming from the UE channel simulator.

6.6.3.2 LTE specific parameters

dl_category

Optional integer (0 to 15, 20). If present, set the DL UE category for a release 12 UE or for the secondary RAT in a NR UE with s1 mode support. Not all combinations of DL UE category and UL UE category are allowed (see Table 4.1A-6 in 3GPP TS 36.306). DL category 20 is only supported for release 15 UE.

ul_category

Optional integer (0 to 13, 16 to 20). Must be present if `dl_category` is present. Set the UL UE category for a release 12 UE or for the secondary RAT in a NR UE with s1 mode support. UL category 16 or higher is only supported for release 14 UE.

drx_cycle

Optional integer (32, 64, 128 or 256 for LTE and NR UEs, 32, 64, 128, 256, 512 or 1024 for NB-IOT UEs). If set, the UE indicates a UE specific DRX cycle in the EPS NAS Attach Request or 5GS Registration Request message and uses it for paging monitoring.

sps	Optional boolean (default = false). When set to true, the UE indicates semi-persistent scheduling support in its capabilities.
tti_bundling	Optional boolean (default = false). When set to true, the UE indicates TTI bundling support in its capabilities. UE with release 12 or higher will also declare support for e-HARQ-Pattern-FDD-r12 and noResourceRestrictionForTTIBundling-r12.
half_duplex	Optional boolean (default = false). Set UE duplex mode.
mbms	Optional boolean (default = true). If true, MBMS is enabled.
forced_cqi	Optional integer. Range 0 to 15 (default = -1). If ≥ 0 , forces the CQI reported to eNB.
forced_ri	Optional integer. Range -1 to 8 (default = 0). If ≥ 1 force the Rank Indicator (RI) reported to eNodeB. 0 indicates to compute the RI (currently it is always set to the maximum number of layers determined from the transmission mode, number of downlink antennas and UE capabilities). -1 forces the RI to cycle between 1 and the maximum number of layers.
forced_pmi	Optional integer. Range -1 to 15 (default = -1). If ≥ 0 , force the Precoding Matrix Indicator (PMI) in the CSI reports. Otherwise the PMI is randomly selected.
max_mimo_layers_dl	Optional integer (default = 0). Range 0 to 8. If $\neq 0$, the maximum number of DL MIMO layers in the UE capabilities is set to $\min(\text{max_mimo_layers_dl}, \text{n_antenna_dl})$.
random_ap_subband_cqi	Optional boolean (default = false). If true, send random aperiodic subband CQI (reporting modes 3-0 and 3-1). The wideband CQI is not random.
random_ap_subband_pmi	Optional boolean (default = false). If true, send random aperiodic subband PMI (reporting mode 1-2). The wideband PMI is not random.
forced_ce_level	Optional integer. Range -1 to 3 (default = -1). If ≥ 0 , force the coverage extension level (UE Category M1 or NB-IoT only).

6.6.3.3 NB-IoT specific parameters

multi_tone	Optional boolean (default = true). If true, UE declares support for multi tone.
multi_carrier	Optional boolean (default = false). If true, UE declares support for multi carriers. This option is only compatible in UE simulation mode (multi_ue:true). bandwidth or sample_rate should be large enough to fit the the expected non-anchor carriers around the anchor carrier. There is no need to specify the DL/UL EARFCN of the non anchor carriers. If the UE is also release 14 or higher, NPRACH and paging on non anchor carrier is supported.
two_harq	Optional boolean (default = false). If true, UE declares support for two HARQ processes (NB-IoT category NB2 only).

interf_rnd

Optional boolean (default = false). If true, UE declares support for interference randomisation feature (NB-IoT Rel 14 only). If UE declares multi carrier support, the value defaults to true.

6.6.3.4 NR specific parameters**en_dc_support**

Optional boolean (default = false). Activates EN-DC support to perform 5G NSA. Need at least **as_release** 15 and **ue_category** 1.

n1_support

Optional boolean applicable to a LTE UE only (default = false). Activates the N1 mode in the UE.

s1_support

Optional boolean applicable to a NR UE only (default = false). Activates the S1 mode in the UE.

srb3_support

Optional boolean (default = false). Activates SRB3 support for EN-DC UEs.

rrc_inactive_support

Optional boolean (default = false). Activates RRC Inactive mode support (SA only).

sul_support

Optional boolean (default = false). Activates Supplementary Uplink support. The cell used as supplementary uplink should be defined in the NR cell_group and transmit at least a valid SSB, similarly to carrier aggregation operation. **multi_ue** also needs to be set to true.

uplink_tx_switch_option

Optional enumeration : none, switched, dual, both (default = none). If set different from **none** and if **ul_ca** is false, the UE will advertise Uplink Tx Switch band combinations and set the corresponding value for uplinkTxSwitching-OptionSupport-r16.

ecc_params

Optional object. Set the parameters used for concealing the subscription permanent identifier (SA only).

scheme Optional enumeration: null, A, B (default = null). Set the protection scheme.

home_nw_public_key

Conditional string. Shall be absent if scheme is null, and present otherwise. Set the home network public key. Length shall be 32 bytes for profile A and 33 for profile B.

home_nw_public_key_id

Integer in range 0 to 255. Set the home network public key identifier related to the provided home network public key. Value 0 is only valid for null scheme protection.

routing_indicator

Optional string (default = "0"). 1 to 4 numerical digits. Set the home network routing indicator.

nr_forced_cqi
Optional integer. Range 0 to 15 (default = -1). If ≥ 0 , forces the CQI reported in the CSI reports.

nr_forced_ri
Optional integer. Range -1 to 8 (default = 0). If ≥ 1 force the Rank Indicator (RI) in the CSI reports.

nr_forced_pmi_i1
Optional integer (default = -1). If ≥ 0 , force the Precoding Matrix Indicator i1 in the CSI reports. The subparts of the i1 (i1_1, i1_2 and i1_3) are extracted from the value and cropped accordingly based on the network-configured codebook and reported rank indicator.

nr_forced_pmi_i2
Optional integer (default = -1). If ≥ 0 , force the Precoding Matrix Indicator i2 in the CSI reports.

nr_forced_li
Optional integer (default = -1). If ≥ 0 , force the Layer Indicator in the CSI reports with CRI_RI_LI_PMI_CQI report quantity.

nr_max_mimo_layers_dl
Optional integer (default = 0). Range 0 to 8. If $\neq 0$, the maximum number of DL MIMO layers in the UE capabilities is set to $\min(\text{nr_max_mimo_layers_dl}, \text{n_antenna_dl})$.

nr_max_mimo_layers_ul
Optional integer (default = 0). Range 0 to 8. If $\neq 0$, the maximum number of UL MIMO layers in the UE capabilities is set to $\min(\text{nr_max_mimo_layers_ul}, \text{n_antenna_ul})$.

ptrs_density_recommendation_dl
Optional object. Specify the `ptrs-DensityRecommendationSetDL` NR UE RRC capability for all the supported bands. The following object properties are defined:

frequency_density
Optional array of 2 integers (default = [1, 176]).

time_density
Optional array of 3 integers (default = [0, 0, 0]).

default_pdu_session_snssai
Optional object (SA only). S-NSSAI provided by the UE during the establishment of the default PDU session.
If not present, no S-NSSAI is provided.

sst Integer (range 0-255). Slice Service Type.

sd Optional integer (range 0-0xFFFFFE). Slice Differentiator.

default_nssai
Optional array (SA only). Default configured NSSAI as defined in 3GPP TS 23.501. Each entry will set a S-NSSAI value as defined below:
See [default_pdu_session_snssai], page 44,

snssai_credentials
Optional array (SA only). Each entry will set the credentials of a given S-NSSAI as defined below:

snssai S-NSSAI value. See [default_pdu_session_snssai], page 44,

	username	String (up to 100 characters) containing the user name used for NSSAA.
	password	String (up to 100 characters) containing the password used for NSSAA.
eap_tls	Optional object applicable to SA only. Shall be present if EAP-TLS method is supported by the UE. It contains the following objects:	
	certificate	Define the user certificate filename.
	private_key	Define the user private key filename.
	ca_certificate	Define the CA certificate filename. It contains a list of root certificates to authenticate the server.
snpn_access_mode	Optional boolean applicable to SA only (default = false). Activates the SNPN mode in the UE. This mode is configurable dynamically when the UE is powered off using the remote api config_set .	
allowed_snpn	Optional object (SA only). Set the SNPN id to select in SNPN mode.	
	plmn	String (5 or 6 digits).
	nid	Network Identifier as defined in 23.003 12.7 Stand-Alone Non-Public Network Identifier. Contains the following parameters:
	value	String (10 hexadecimal digits). NID value.
	assignment_mode	Optional enumeration ("self", "coordinated_1", "coordinated_2"). Default value is "self".
cag_info_list	Optional array (SA only). Preconfigured CAG information list as defined in 3GPP TS 23.501 5.30.3.3 UE configuration. Each element of the array contains:	
	plmn	String (5 or 6 digits).
	cag_id_list	Array of 1 to 12 integers (range 0 to 4294967295) giving the list of the allowed CAG-Identifiers.
	cag_only_ind	Optional boolean (default = false). Indication that the UE is only allowed to access 5GS via CAG cells.
redcap	Optional enumeration (normal redcap, eredcap). Set the UE type in SA. The as_release needs to be at least 17 for redcap and 18 for eredcap .	
eredcap_reduced_bb_bw	Optional boolean (default = true). Defines if the eRedCap UE is with reduced baseband bandwidth or not.	
half_duplex	Optional boolean (default = false). Set a RedCap UE as half-duplex. Value is ignored if redcap is not set.	

6.6.4 Power control

The following parameter control the UE power:

`power_control_enabled`

Optional boolean. If set, UE power control is enabled. The uplink messages are transmitted with the power specified by the standard.

The default value of `power_control_enabled` is `true` if the UE channel simulator is enabled and otherwise `false`.

If the UE power control is disabled, the uplink messages are transmitted with a constant EPRE (Energy Per Resource Element) = `EPRE_max` determined by `tx_gain_offset` (digital gain) and `[tx_gain]`, page 23, (RF interface TX gain).

When the UE power control is enabled, the EPRE (Energy Per Resource Element) is limited by `EPRE_max` so that there is no digital saturation even if the uplink bandwidth is shared between several UEs.

The `sat` column of the `tg` monitor command counts the number of times the UE simulator had to limit the TX power of an uplink signal (e.g. PUCCH or PUSCH) to `EPRE_max`. It indicates that the actual UE TX power was lower than the specified one.

`power`

Optional float (only meaningful if UE power control is enabled). Set the maximum UE transmit power in dBm. The default value is 23 dBm.

Note that the actual maximum TX power may be lower because of the limited power of the RF interface and because of the uplink EPRE limitation (see the `power_control_enabled` parameter).

`power_min`

Optional float (default = -40) (only meaningful if UE power control is enabled). Set the minimum UE transmit power in dBm.

6.6.5 RF test mode

The following parameters configure the UE RF test mode:

`test_mode`

Optional Object. If present, enable the UE RF test mode. In this mode, the UE automatically goes to RRC connected mode with a default configuration after acquiring the System Information. Then it listens to PDCCH to initiate PDSCH or PUSCH transmissions. It also transmits PUCCH ACK/NACK and listens to PHICH.

The following properties are available for LTE UEs:

`rnti` Integer. Range 0 to 65535. Select the C-RNTI.

`trans_mode`

Integer. (LTE only) Range 1 to 9. Select the PDSCH transmission mode.

`dl_256qam`

Optional boolean. (LTE only) Enable the DL 256QAM MCS table.

The following properties are available for NB-IoT UEs:

`rnti` Integer. Range 0 to 65535. Select the C-RNTI.

`npdcch_uss_n_rep_max`

Integer. Range: 1 to 2048. Maximum number of repetition for the User Search Space (USS) NPDCCH.

npdcch_uss_start_sf	Enumeration: 1.5, 2, 4, 8, 16, 32, 48, 64. Used to compute of the period of the USS NPDCCH by multiplying it to npdcch_uss_n_rep_max .								
npdcch_uss_offset	Integer. Range: 0 to 3. USS NPDCCH start offset in 8th of the USS NPDCCH period.								
ul_sc_spacing	Enumeration: 0, 1. Select the subcarrier spacing used by the UE. 0 = 3.75 KHz subcarriers, 1 = 15 KHz subcarriers.								
timing_advance	Integer (0 to 1282). Initial timing advance in 1/1.92 microsecond.								
The following properties are available for NR UEs:									
rnti	Integer. Range 0 to 65535. Select the C-RNTI.								
dmrs_type_a_pos	Integer. Range 2 to 3. dmrs-TypeA-Position parameter.								
ssb_pos_bitmap	String. SSB position bitmap in bits (4, 8 or 64 bits depending on the DL frequency).								
ssb_period	Enumeration (5, 10, 20, 40, 80, 160). SSB periodicity in ms.								
pdcch	Object containing the following parameters: <table> <tr> <td>rb_start</td><td>Integer. Range 0 to 274. PDCCH resource block start.</td></tr> <tr> <td>l_crb</td><td>Integer. PDCCH resource block length.</td></tr> <tr> <td>duration</td><td>Integer. Range 1 to 3. PDCCH duration.</td></tr> <tr> <td>n_candidates</td><td>Array of 5 integers. Enumeration: 0, 1, 2, 3, 4, 5, 6, 8. nrofCandidates parameters for each aggregation level (1, 2, 4, 8, 16).</td></tr> </table>	rb_start	Integer. Range 0 to 274. PDCCH resource block start.	l_crb	Integer. PDCCH resource block length.	duration	Integer. Range 1 to 3. PDCCH duration.	n_candidates	Array of 5 integers. Enumeration: 0, 1, 2, 3, 4, 5, 6, 8. nrofCandidates parameters for each aggregation level (1, 2, 4, 8, 16).
rb_start	Integer. Range 0 to 274. PDCCH resource block start.								
l_crb	Integer. PDCCH resource block length.								
duration	Integer. Range 1 to 3. PDCCH duration.								
n_candidates	Array of 5 integers. Enumeration: 0, 1, 2, 3, 4, 5, 6, 8. nrofCandidates parameters for each aggregation level (1, 2, 4, 8, 16).								
pdsch	Object containing the following parameters: <table> <tr> <td>start_symb</td><td>Integer. Range 0 to 3. PDSCH start symbol.</td></tr> <tr> <td>n_symb</td><td>Optional integer. Range 3 to 14-start_symb, default = 14-start_symb. Number of symbols for PDSCH.</td></tr> <tr> <td>k0</td><td>Integer. Range 0 to 3. Delay in slots from DCI to PDSCH.</td></tr> </table>	start_symb	Integer. Range 0 to 3. PDSCH start symbol.	n_symb	Optional integer. Range 3 to 14- start_symb , default = 14- start_symb . Number of symbols for PDSCH.	k0	Integer. Range 0 to 3. Delay in slots from DCI to PDSCH.		
start_symb	Integer. Range 0 to 3. PDSCH start symbol.								
n_symb	Optional integer. Range 3 to 14- start_symb , default = 14- start_symb . Number of symbols for PDSCH.								
k0	Integer. Range 0 to 3. Delay in slots from DCI to PDSCH.								
pucch	Object containing the following parameters: <table> <tr> <td>pucch_group_hopping</td><td>Enumeration: neither, enable, disable. pucch-GroupHopping parameter.</td></tr> </table>	pucch_group_hopping	Enumeration: neither, enable, disable. pucch-GroupHopping parameter.						
pucch_group_hopping	Enumeration: neither, enable, disable. pucch-GroupHopping parameter.								
pusch	Object containing the following parameters: <table> <tr> <td>beta_offset_ack_index</td><td>Integer. Range 0 to 15.</td></tr> <tr> <td>n_symb</td><td>Integer. Range 4 to 14. Number of symbols for PUSCH.</td></tr> </table>	beta_offset_ack_index	Integer. Range 0 to 15.	n_symb	Integer. Range 4 to 14. Number of symbols for PUSCH.				
beta_offset_ack_index	Integer. Range 0 to 15.								
n_symb	Integer. Range 4 to 14. Number of symbols for PUSCH.								

<code>tf_precoding</code>	Boolean. Enable transform precoding for PUSCH (only used in DCI 0-1).
<code>k2</code>	Integer. Range 0 to 7. Delay in slots from DCI to PUSCH.
<code>timing_advance</code>	Integer. Range 0 to 4095. Timing advance value in TA units.

6.6.6 SWu and NWu interface

The following parameters configure the SWu interface for communication with ePDG or NWu interface for communication with N3IWF:

n3gpp Optional object. Allow to configure the SWu or the NWu interface. It can contain the following object:

<code>bind_addr</code>	IP address and optional port on which the SWu/NWu connection is bound.
<code>server_addr</code>	ePDG/N3IWF address.
<code>server_certificate</code>	Optional string. Defines the ePDG/N3IWF certificate filename.
<code>esp_duration</code>	Optional integer in range 10 to 5*3600 (default = 300). Gives the duration in seconds of the ESP-Sa.
<code>ike_duration</code>	Optional integer in range 20 to 48*3600 (default = 24*3600). Gives the duration in seconds of the IKE-Sa.
<code>ike_encryption_algo_list</code>	Optional list of IKE-Sa supported encryption algorithms "aes-cbc-128" (AES CBC 128 bits key length), "aes-cbc-192" (AES CBC 192 bits key length), "aes-cbc-256" (AES CBC 256 bits key length), "aes-gcm-128-16" (AES GCM 128 bits key length and 16 bytes ICV), "aes-gcm-256-16" (AES GCM 256 bits key length and 16 bytes ICV), "des", "3des", "blowfish", "aes-ctr-128" (AES CTR 128 bits key length), "aes-ctr-192" (AES CTR 192 bits key length), and "aes-ctr-256" (AES CTR 256 bits key length) ordered from most preferred to least preferred. Default value is ["aes-cbc-128", "aes-cbc-192", "aes-cbc-256", "aes-gcm-128-16", "aes-gcm-256-16", "des", "3des", "blowfish", "aes-ctr-128", "aes-ctr-192", "aes-ctr-256"].
<code>ike_integrity_algo_list</code>	Optional list of IKE-Sa supported integrity algorithms "hmac-sha-1-96", "hmac-sha-1-160", "hmac-sha-256-128", "hmac-sha-384-192", "hmac-sha-512-256", "hmac-md5-96", "hmac-md5-128" and "aes-cmac-96" ordered from most preferred to least preferred. Default value is ["hmac-sha-1-96", "hmac-sha-1-160", "hmac-sha-256-128", "hmac-sha-384-192", "hmac-sha-512-256", "hmac-md5-96", "hmac-md5-128", "aes-cmac-96"];
<code>ike_prf_list</code>	Optional list of IKE-Sa supported pseudo-random functions "prf-hmac-sha1", "prf-hmac-sha2-256", "prf-hmac-sha2-384",

"prf-hmac-sha2-512", "prf-hmac-md5" and "prf-aes128-xcbc" ordered from most preferred to least preferred.

Default value is ["prf-hmac-sha1", "prf-hmac-sha2-256", "prf-hmac-sha2-384", "prf-hmac-sha2-512", "prf-hmac-md5", "prf-aes128-xcbc"].

ike_dh_group_list

Optional list of IKE-Sa supported Diffie-Hellman groups "group_1", "group_2", "group_5", "group_14", "group_15", "group_16", "group_17", "group_18", "group_19", "group_22", "group_23" and "group_24" ordered from most preferred to least preferred.

Default value is ["group_5", "group_14", "group_15", "group_16", "group_17", "group_18", "group_19", "group_22", "group_23", "group_24"].

esp_encryption_algo_list

Optional list of ESP-Sa supported encryption algorithms "null", "aes-cbc-128" (AES CBC 128 bits key length), "aes-cbc-192" (AES CBC 192 bits key length), "aes-cbc-256" (AES CBC 256 bits key length), "aes-gcm-128-16" (AES GCM 128 bits key length and 16 bytes ICV), "aes-gcm-192-16" (AES GCM 192 bits key length and 16 bytes ICV), "aes-gcm-256-16" (AES GCM 256 bits key length and 16 bytes ICV), "des", "3des", "blowfish", "aes-ctr-128" (AES CTR 128 bits key length), "aes-ctr-192" (AES CTR 192 bits key length), "aes-ctr-256" (AES CTR 256 bits key length), "encr-null-auth-aes-gmac-128" (ENCR_NULL_AUTH_AES_GMAC 128 bits key length), "encr-null-auth-aes-gmac-192" (ENCR_NULL_AUTH_AES_GMAC 192 bits key length) and "encr-null-auth-aes-gmac-256" (ENCR_NULL_AUTH_AES_GMAC 256 bits key length) ordered from most preferred to least preferred.

Default value is ["null", "aes-cbc-128", "aes-cbc-192", "aes-cbc-256", "aes-gcm-128-16", "aes-gcm-192-16", "aes-gcm-256-16", "des", "3des", "blowfish", "aes-ctr-128", "aes-ctr-192", "aes-ctr-256", "encr-null-auth-aes-gmac-128", "encr-null-auth-aes-gmac-192", "encr-null-auth-aes-gmac-256"].

esp_integrity_algo_list

Optional list of ESP-Sa supported integrity algorithms "null", "hmac-sha-1-96", "hmac-sha-1-160", "hmac-sha-256-128", "hmac-sha-384-192", "hmac-sha-512-256", "hmac-md5-96", "hmac-md5-128" and "aes-cmac-96" ordered from most preferred to least preferred.

Default value is ["null", "hmac-sha-1-96", "hmac-sha-1-160", "hmac-sha-256-128", "hmac-sha-384-192", "hmac-sha-512-256", "hmac-md5-96", "hmac-md5-128", "aes-cmac-96"].

esp_dh_group_list

Optional list of ESP-Sa supported Diffie-Hellman groups "none", "group_1", "group_2", "group_5", "group_14", "group_15", "group_16", "group_17", "group_18", "group_19", "group_22", "group_23" and "group_24" ordered from most preferred to least preferred.

This list is used for rekeying ESP-Sa. Default value is ["none", "group_5", "group_14", "group_15", "group_16", "group_17", "group_18", "group_19", "group_22", "group_23" and "group_24"].

multiple_auth_support

Optional boolean (default = false). Indicates if multiple UE authentications is supported in the UE (see 3GPP 33.402 chapter 6.5).

tun_setup_script

Optional string. Set the path of the shell script to set up the virtual network interface (Path can be absolute or relative to config file). Script is called for each PDN with following parameters:

1. UE ID
2. type (SWU/XWU)
3. APN name
4. interface name
5. IPv4 address
6. IPv6 link local address
7. remote address

6.7 Channel simulator

6.7.1 Introduction

The UE channel simulator simulates an AWGN or fading channel for each UE. It is available in multi UE mode for LTE or NR UEs.

On the downlink side, depending on the simulated UE path loss and fading model, the channel simulator modifies the PER (Packet Error Rate) of PDSCH and PDCCH and updates the measured RSRP and CSI. On the uplink side, the signal level is modified according to the path loss and the fading model is applied.

The path loss of each UE is computed according to the corresponding UE and cell positions and the channel and antenna models.

The channel simulator is enabled with the global **channel_sim** parameter. It can optionally be disabled with the per-UE parameter **channel_sim** parameter.

6.7.2 Per cell parameters

When the channel simulator is enabled, the following additional parameters may be specified for each cell:

n_antenna_dl

Optional integer (default = 1). Set the number of simulated UE downlink antennas.

n_antenna_ul

Optional integer (default = 1). Set the number of simulated UE uplink antennas.

n_antenna_dl_rf

Optional integer (default = **n_antenna_dl**). Specifies the number of eNB/gNB DL RF antennas for this cell. For LTE cells, it is usually equal to the number of PBCH antennas. When using a **parabolic_panel** antenna, it must be equal to $(p \cdot n1 \cdot n2)$.

n_antenna_ul_rf

Optional integer (default = **n_antenna_ul**). Specifies the number of eNB/gNB UL RF antennas for this cell. When using a **parabolic_panel** antenna, it must be equal to $(p \cdot n1 \cdot n2)$.

position Array of 1 to 3 floats. X, Y and Z coordinates of the cell antenna, in meters. If less than 3 elements are provided, the remaining coordinates are set to zero. For

the `satellite` antenna type, the position corresponds to the beam center on the ground.

antenna Object. Cell antenna parameters:

type Enumeration: `isotropic`, `parabolic`, `parabolic_panel`, `satellite`. An `isotropic` antenna radiates the same intensity in all directions. A `parabolic` antenna sends a beam in a given direction (attenuation in $\text{dB} = \min(\text{max_attenuation}, 12 * (\text{phi} / \text{beam_width})^2)$ where `phi` is the radiation angle. A `parabolic_panel` antenna is the same as a `parabolic` antenna except that it has several `N1` antenna elements in the Y direction, `N2` antenna elements in the Z direction and `P` polarisation channels per antenna elements. See 3GPP TR 38.901 section 7.3 for more information. A `satellite` antenna emulates a satellite link for NTN operation and is valid only for a NR cell.

attenuation

Optional enumeration (`urban`, `vacuum`, `atmospheric`, `custom`, `custom_freq`). Set the propagation loss model. It must be provided for the `satellite` antenna. For the other antenna types it is set to `urban` by default. The following values are available:

urban The path loss in dB is computed from the 3GPP urban model as $A + B * \log_{10}(d)$ where `d` is the distance in meters between the UE and the cell antenna, `A` = 15.3 and `B` = 37.6.

custom Same as `urban` except than `A` and `B` can be set.

custom_freq

Same as `custom` with an additional frequency term. The path loss is defined as $A + B * \log_{10}(d) + 20 * \log_{10}(f)$ where `f` is the downlink frequency in Hz.

vacuum Free space path loss depending only on the downlink frequency and distance.

atmospheric

Only available for `satellite`. Same as `vacuum` but with an additional atmospheric attenuation term depending on the satellite elevation.

attenuation_A

attenuation_B

Optional float. Parameters for the `custom` and `custom_freq` attenuation.

The following parameters are for the `parabolic`, `parabolic_panel` and `satellite` antennas:

max_attenuation

Optional float (default = 20). Maximum attenuation in dB when the UE is out of the beam coverage

The following parameters are for the `parabolic` and `parabolic_panel` antennas:

beam_width

Optional float (default = 70). Horizontal beam half-width in degrees.

vertical_beam_width

Optional float (default = 70). Vertical beam half-width in degrees.

orientation

Float (range = -180 to 180). Orientation of the antenna in the X-Y plane in degrees.

elevation

Optional float (range = -90 to 90, default = 0). Elevation of the antenna in degrees.

The following parameters are for the **parabolic_panel** antenna:

n1 Integer. Number of antenna elements in the Y direction.

n2 Optional integer (default = 1). Number of antenna elements in the Z direction.

p Optional integer (range = 1 to 2, default = 2). Number of polarisation channels per antenna element.

d1 Optional float (default = 0.5). Distance between the antenna elements in the Y direction in wavelength units.

d2 Optional float (default = 0.5). Distance between the antenna elements in the Z direction in wavelength units.

The RF channel index c corresponding to an antenna element can be computed as $c = (k * n2 + j) * n1 + i$ with $0 \leq i < n1$, $0 \leq j < n2$, $0 \leq k < p$ and $0 \leq c < p * n2 * n1$. i is the antenna element index in the Y direction, j is the antenna element index in the Z direction and k is the index of the polarisation channel.

The following parameters are for the **satellite** antenna:

beam_width

Optional float (default = 5). Conical beam half-width in degrees.

ephemeris_from_sib

Optional boolean (default = true). If true, the satellite orbit will be determined based on SIB19 reception. If false, the orbit information needs to be explicitly given by the **tle_filename** or **ephemeris** parameters.

tle_filename

Optional string. If **ephemeris_from_sib** is false, specifies a TLE file to describe satellite orbit.

ephemeris

Optional object. If **ephemeris_from_sib** is false and **tle_filename** is absent, this parameter describes explicitly the orbital elements of the satellite. The ephemeris configuration is understood in a fixed ECI reference frame aligned with the J2000 vernal equinox, like a TLE configuration.

Contains the following parameters:

eccentricity

Float value. Range 0 to 0.99. Eccentricity, unitless

inclination

Float value. Range 0 to π . Inclination, in radians. Value between $\pi/2$ and π will be encoded as $-\pi/2$ to -1 in RRC ASN.1 representation.

semi_major_axis

Float value. Semi-major axis, in meters.

longitude	Float value. Range 0 to 2π . Longitude of the ascending node, in radians.
periapsis	Float value. Range 0 to 2π . Argument of periapsis, in radians.
anomaly	Float value. Range 0 to 2π . Mean anomaly of the satellite on its orbit at epoch , in radians.
epoch	Optional string. Epoch for the anomaly parameter, formatted "YYYY-MM-DDTHH:MM:SS[.mmm]" (ISO 8601 format) in UTC time.
feeder_position	Optional object to specify the coordinate of the feeder link ground station. If not set, it is assumed that the feeder link ground station is located at cell position parameter. The feeder link ground position is used to compute the full delay of the satellite link (service link + feeder link). Contains the following parameters:
latitude	Float value. Range -90 to 90. Degrees of latitude.
longitude	Float value. Range -180 to 180. Degrees of longitude.
altitude	Optional float value (default = 0). Range -1000m to 20km. Altitude in meters.
gain	Optional float (default 0.0). Configures the directional gain (in dBi) of the satellite antenna. Any additional directional gain on the UE side antenna can also be added.
ref_signal_power	Float. Reference signal power in dBm. Should normally have the same value as SIB2.referenceSignalPower (LTE) or SIB1.ss-PBCH-BlockPower (NR).
ul_power_attenuation	Float. Real uplink analog attenuation (in dB) actually present between the UE simulator and the eNodeB. It is used to compute the TX power of each UE TX message so that the eNodeB receives them at the power level computed by the channel simulator. The UE TX power is calculated as $p_{TX} = p_0 - \text{path_loss} + \text{ul_power_attenuation}$

where p_0 is the simulated TX power (as per 3GPP power control) and **path_loss** is calculated by channel simulator.

The **ul_power_attenuation** should be set low enough so that there is no power saturation and high enough so that the DAC range of the RF interface is correctly used.

The **ul_power_attenuation** should be lowered until there is no saturation in the **sat** column of the **t g** monitor command while the virtual UEs are transmitting. The **sat** column counts the number of times the UE simulator had to limit the TX power of an uplink signal (e.g. PUCCH or PUSCH) so that it does not give a

saturated output on the DAC. These saturations do not degrade the signal like the saturations at the sample level (see `t spl monitor` command) but they indicate that the UE received power at the eNodeB will be lower than expected by the channel simulator.

The same can be achieved with the `[tx_gain]`, page 23, the `tx_gain` should be set high enough so that there is no power saturation (higher analog power requires less digital power) and low enough so that the DAC range of the RF interface is correctly used.

With the PCIe SDR board, it is suggested to start with a `tx_gain` at maximum value (90 dB) and 60 dB analog attenuation. The actual value depends on the simulated UE path loss.

`delay_sim`

Optional boolean (default = true). When the UE channel simulator is enabled, select whether the propagation delays are simulated. They are computed according to the distance between the UE and the cell antenna. The propagation delay is simulated by adding a cyclic shift to the corresponding uplink signal.

6.7.3 Per UE parameters

When the channel simulator is enabled, the following additional parameters may be specified for each UE:

`channel_sim`

Optional boolean. If group `channel_sim` parameter is set, allow to override its value on a UE basis.

position Array of 1 to 3 floats. X, Y and Z coordinates of the UE in meters. If less than 3 elements are provided, the remaining coordinates are set to zero.

`initial_radius`

Optional float (default = 0). If larger than zero, set the UE position randomly in a disc of `initial_radius` meters centered on `position`.

speed Optional float (default = 0). UE speed in kilometers per hour.

`direction`

Optional float (default = 0). the UE speed vector direction in degrees.

`elevation`

Optional float (default = 0). the UE speed vector elevation in degrees.

`noise_spd`

Optional float (default = -174). Noise spectral density in dBm/Hz.

`min_distance`

Optional float. If set, when UE is moving and its distance to origin is less than this value, UE will bounce according to `bounce` parameter.

`max_distance`

Optional float. If set, when UE is moving and its distance to origin is more than this value, UE will bounce according to `bounce` parameter.

bounce Optional string (default = random). Defines bouncing mode when `min_distance` or `max_distance` are reached.

Mode	Description
random	Get back with a random angle
back	Get back in opposite direction
normal	Get back while maintaining the same angle to the normal

channel

Object. Parameters of the downlink channel. If `ul_channel` is not present, the same parameters are used for the uplink channel. Each UE has separate uplink and downlink channel simulator instance to each connected cell. The following properties are available:

type Simulated channel type:

Type	Description
awgn	Additive White Gaussian Noise channel. When there are more than one input or output antennas, the channel matrix $a_{i,j}$ is set such as $a_{i,i \bmod n_{tx}} = 1$.
epa	Extended Pedestrian A model from 3GPP TS 36.101.
eva	Extended Vehicular A model from 3GPP TS 36.101.
etu	Extended Typical Urban model from 3GPP TS 36.101.
mbsfn	MBSFN channel from 3GPP TS 36.101.
tdla30	TDLA30 channel from 3GPP TS 38.141 (TDLA with 30 ns delay spread).
tdlb100	TDLB100 channel from 3GPP TS 38.141 (TDLB with 100 ns delay spread).
tdlc300	TDLC300 channel from 3GPP TS 38.141 (TDLC with 300 ns delay spread).
tdla, tdlb, tdlc, tdld or tdle	TDL channels from 3GPP TS 38.901 section 7.7.2. Note that the TDL channels from 3GPP TS 38.141 slightly differ from the ones defined in 3GPP TS 38.901 when using the same delay spread.

freq_doppler

Optional float. For non AWGN channels, sets the doppler frequency, in Hz. Note that it has no relation with the configured UE speed which is only used to update the UE position.

delay_spread

Set the delay spread in ns for TDL channels (`tdla`, `tdlb`, `tdlc`, `tdld` and `tdle`).

mimo_correlation

Optional enumeration. Set the MIMO correlation matrix for non AWGN channels.

Allowed values:

	Value	Description
	low	Low correlation matrix (identity matrix) (3GPP TS 36.101 section B.2.3.2).
	medium	Medium correlation matrix with uniform linear array (3GPP TS 36.101 section B.2.3.2).
	high	High correlation matrix with uniform linear array (3GPP TS 36.101 section B.2.3.2).
	cross_pol_medium	Medium correlation matrix with cross polarized antennas (3GPP TS 38.101-4 section B.2.3.2).
	cross_pol_high	High correlation matrix with cross polarized antennas (3GPP TS 38.101-4 section B.2.3.2).
A	Optional float (default = 15.3)	
B	Optional float (default = 37.6). If A or B are provided, the UE path loss in dB is computed as $A + B * \log_{10}(d)$ where d is the distance in meters between the UE and the cell antenna. Otherwise, the UE path loss is computed from the cell antenna <code>attenuation</code> parameter.	

`ul_channel`

Optional object. If present, specifies the parameters of the uplink channel. Otherwise the uplink channel has the same parameters as the downlink channel. This object contains the properties `type`, `freq_doppler` and `mimo_correlation` with the same definition as in the `channel` object.

DL and UL channel reciprocity on TDD NR serving cells is enabled provided the following conditions are met:

- `ul_channel` is not present
- `n_antenna_ul` is less or equal to `n_antenna_dl`
- `n_antenna_ul_rf` is equal to `n_antenna_dl_rf`

When channel reciprocity is enabled, SRS antenna switching is accurately simulated.

When channel reciprocity is not enabled or when the UE channel simulator is not used, SRS configured with antenna switching are sent to the n -th UL antenna assuming the UL antennas are connected to the same cables as the DL antennas so that they share the same channel propagation. In this case, SRS antenna switching can only be accurately simulated if `n_antenna_ul` is equal to `n_antenna_dl`.

6.7.4 Known limitations and implementation details

- The fading channels are implemented in the frequency domain. Hence the channel simulation is accurate only if the doppler frequency (`freq_doppler`) is small regarding to the subcarrier spacing.
- For the uplink, the channel is not modified between the symbol repetitions of a given PRACH.
- For the downlink, the PER of the PDCCH is currently computed assuming an AWGN channel. However the fading channel is accurately modeled for PDSCH and CSI measurements.

- In LTE, the PDSCH PER for UE specific transmission modes (TM7/TM8/TM9/TM10) is not accurately modeled. For TM9/TM10, the CSI measurement is currently modeled from the CRS (cell reference signal) instead of the CSI-RS.

7 CPU/Cores configuration

For optimal performances LTEUE will use multiple cores. Those cores can be spread on multiple CPUs (Multi socket) as long as Linux operating system makes them available.

By default, LTEUE will try to find the most suitable amount of necessary cores depending on the total number of available cores and the desired radio configuration (Mainly depending on number of cells, on their bandwidth and number of antenna).

For optimization purpose, this can be manually defined as explained in this chapter.

7.1 Hyperthreading

We strongly recommend to disable CPU hyperthreading.

The main reason is that LTEUE is memory intensive and any process running on a twin of a core used by the process may steal its cache resources, leading to performance degradation.

If you use Amarisoft automatic installation, you should disable it during the installation process.

For optimal performances, you may disable hyperthreading in the BIOS.

If you want to keep hyperthreading on for other processes, you may configure Linux to avoid scheduling other processes on the twin of the cores used by LTEUE using core isolation.

7.2 Core restriction cores

LTEUE will restrict its core usage to the list of cores affected to the process by the OS at startup.

If the process is launch with a dedicated core list, such as what **taskset** program will do, the software relies on it and will tries to use only specified cores.

In the case where cores would have been isolated by kernel at boot time, those cores won't be used by default.

If you want to use them, you will need to use **taskset** program (or equivalent) to prevent this restriction.

7.3 Affinity

You can force core affinity of the process externaly (Ex: using taskset program) or use **cpu_core_list** array.

Each element will represent cores to use or not, with following syntax:

Number Represent the core index to use (Same as processor information in `/proc/cpuinfo`).
String

String	Description
<a>	where <a> is a number, represents the core index to use.
*	all cores (excluding hyperthreaded twins) will be added to the list.
numa<n>	all cores related to NUMA node <n> will be added
<a>-	all cores between core index <a> and core index (included) will be added. can be "last" representing the index of the last core.

`!<cores>` remove all the cores defined by `<core>` where `<code>` can have the other string syntax defined above.

By default, only non hyperthreaded cores will be used. To select hyperthreaded core twins, use number syntax or start string by `"ht:"`.

Ex: `"ht:*`" will select all cores including hyperthreaded twins.

The `cpu_core_list` can be defined at top level of your configuration file to force the global affinity of the process or for dedicated sections.

Examples:

Let's assume we have a CPU with 8 hyperthreaded cores (16 logical cores).

```
cpu_core_list: ["*", "!4"]
```

Will assign cores 0, 1, 2, 3, 5, 6 and 7

```
cpu_core_list: ["5-last", "ht:12-last"]
```

Will assign cores 5, 6, 7, 12, 13, 14, 15

7.4 Memory

On NUMA (Non Uniform Memory Access) CPU architecture, you may improve performances by assigning NUMA nodes to different digital processing engines.

This is the case when you have multiple sockets on your motherboard or with AMD processor. Note that by default NUMA nodes are hidden by BIOS to the OS so you may change your BIOS configuration to use them.

For each digital processing engine, you should assign NUMA nodes for memory and for core affinity that has the shortest path.

In other words, when you affect cores to a DSP engine, you should ensure that the assigned cores are located on the fewest NUMA nodes possible and if needed select manually your NUMA node for memory (See `[cpu_numa_list]`, page 31).

As the DSP engine communicates huge amount of memory to the radio frontend, you may select same NUMA nodes as your radio frontend.

If you use Amarisoft PCIe radio frontends, you can check which NUMA node is used by checking kernel traces (`dmesg`) when inserting kernel driver.

Ex:

```
sdr PCI device 6c:00.0 assigned to minor 5, type=RF_SDR100_Slave (rev 1) numa=1 dma:1ch 64b
```

8 Remote API

You can access LTEUE via a remote API.

Protocol used is WebSocket as defined in RFC 6455 (<https://tools.ietf.org/html/rfc6455>).

Note that Origin header is mandatory for the server to accept connections. This behavior is determined by the use of `noopll` library. Any value will be accepted.

To learn how to use it, you can refer to our the following tutorial (<https://tech-academy.amarisoft.com/RemoteAPI.html>).

8.1 Messages

Messages exchanged between client and LTEUE server are in strict JSON format.

Each message is represented by an object. Multiple message can be sent to server using an array of message objects.

Time and delay values are floating number in seconds.

There are 3 types of messages:

- Request

Message sent by client.

Common definition:

message String. Represent type of message. This parameter is mandatory and depending on its value, other parameters will apply.

message_id

Optional any type. If set, response sent by the server to this message will have same message_id. This is used to identify response as WebSocket does not provide such a concept.

start_time

Optional float. Represent the delay before executing the message. If not set, the message is executed when received.

absolute_time

Optional boolean (default = false). If set, **start_time** is interpreted as absolute.

You can get current clock of system using **time** member of any response.

standalone

Optional boolean (default = false). If set, message will survive WebSocket disconnection, else, if socket is disconnected before end of processing, the message will be cancelled.

loop_count

Optional integer (default = 0, max = 1000000). If set, message will be repeated **loop_count** time(s) after **loop_delay** (From message beginning of event). Response will have a **loop_index** to indicate iteration number.

loop_delay

Optional number (min = 0.1, max = 86400). Delay in seconds to repeat message from its **start_time**. Mandatory when **loop_count** is set > 0.

- **Response**

Message sent by server after any request message as been processed.
Common definition:

message String. Same as request.

message_id

Optional any type. Same as in request.

time Number representing time in seconds since start of the process.
Usefull to send command with absolute time.

utc Number representing UTC seconds.

- **Events**

Message sent by server on its own initiative.
Common definition:

message String. Event name.

time Number representing time in seconds.
Usefull to send command with absolute time.

8.2 Startup

When WebSocket connections is setup, LTEUE will send a first message with name set to **com_name** and type set to **UE**.

If authentication is not set, message will be **ready**:

```
{
  "message": "ready",
  "type": "UE",
  "name": <com_name>,
  "version": <software version>,
  "product": <Amarisoft product name (optional)>
}
```

If authentication is set, message will be **authenticate** :

```
{
  "message": "authenticate",
  "type": "UE",
  "name": <com_name>,
  "challenge": <random challenge>
}
```

To authenticate, the client must answer with a **authenticate** message and a **res** parameter where:

```
res = HMAC-SHA256( "<type>:<password>:<name>", "<challenge>" )
```

res is a string and HMAC-SHA256 refers to the standard algorithm (<https://en.wikipedia.org/wiki/HMAC>)

If the authentication succeeds, the response will have a **ready** field set to **true**.

```
{
  "message": "authenticate",
```

```

    "message_id": <message id>,
    "ready": true
}

```

If authentication fails, the response will have an **error** field and will provide a new challenge.

```

{
  "message": "authenticate",
  "message_id": <message id>,
  "error": <error message>,
  "type": "UE",
  "name": <name>,
  "challenge": <new random challenge>
}

```

If any other message is sent before authentication succeeds, the error "Authentication not done" will be sent as a response.

8.3 Errors

If a message produces an error, response will have an error string field representing the error.

8.4 Sample nodejs program

You will find in this documentation a sample program: **ws.js**.

It is located in **doc** subdirectory.

This is a nodejs program that allow to send message to LTEUE.

It requires nodejs to be installed:

```

dnf install nodejs npm
npm install nodejs-websocket

```

Use relevant package manager instead of NPM depending on your Linux distribution.

Then simply start it with server name and message you want to send:

```

./ws.js 127.0.0.1:9002 '{"message": "config_get"}'

```

8.5 Common messages

config_get

Retrieve current config.

Response definition:

type	Always "UE"
name	String representing server name.
logs	Object representing log configuration. With following elements:
layers	Object. Each member of the object represent a log layer configuration:
layer name	Object. The member name represent log layer name and parameters are:
level	See [log_options], page 22,

	max_size	See [log-options], page 22,	
	key	See [log-options], page 22,	
	crypto	See [log-options], page 22,	
	payload	See [log-options], page 22,	
	rep	Optional boolean. [log-options], page 22,	See
	dci_size	Optional boolean. [log-options], page 22,	See
	csi	Optional boolean. [log-options], page 22,	See
	cell_meas	Optional boolean. [log-options], page 22,	See
	cch	Optional boolean. [log-options], page 22,	See
	ntn	Optional boolean. [log-options], page 22,	See
	plmn	Optional boolean. [log-options], page 22,	See
	signal	Optional boolean. [log-options], page 22,	See
count	Number. Number of bufferizer logs.		
rotate	Optional number. Max log file size before rotation.		
rotate_count	Optional number. Max log count before rotation.		
path	Optional string. Log rotation path.		
bcch	Boolean. True if BCCH dump is enabled (eNB only).		
mib	Boolean. True if MIB dump is enabled (eNB only).		
locked	Optional boolean. If true , logs configuration can't be changed with config_set API.		
cells	Object. List of objects (numbered by cell index) containing the following members:		
	pci	Optional integer. Physical cell ID. Not present if the cell is not synchronized.	
	dl_earfcn	Integer. Downlink EARFCN.	
	mode	Optional numeration: FDD, TDD. Operation mode.	
	n_rb_dl	Integer. Number of downlink resource blocks.	
	uldl_config	Optional integer. TDD subframe assignment. Only present if mode is "TDD".	

sp_config	Optional integer. TDD special subframe pattern. Only present if mode is "TDD".						
ul_earfcn	Optional integer. Uplink EARFCN. Present once SIB2 is read.						
ul_carrier_freq_offset	Optional integer. NB-IoT uplink carrier frequency offset in multiple of 2.5 kHz. Present once SIB2 is read.						
n_rb_ul	Optional integer. Number of uplink resource blocks. Present once SIB2 is read.						
counters	Object. List of counters, with following sub members: <table> <tr> <td>messages</td><td>Object. Each member name is the message name and its value is its occurrence. To get list of message, type <i>cevent help msg</i> in LTEUE monitor.</td></tr> <tr> <td>errors</td><td>Object. Each member name is the error name and its value is its occurrence. To get list of message, type <i>cevent help error</i> in LTEUE monitor.</td></tr> </table>	messages	Object. Each member name is the message name and its value is its occurrence. To get list of message, type <i>cevent help msg</i> in LTEUE monitor.	errors	Object. Each member name is the error name and its value is its occurrence. To get list of message, type <i>cevent help error</i> in LTEUE monitor.		
messages	Object. Each member name is the message name and its value is its occurrence. To get list of message, type <i>cevent help msg</i> in LTEUE monitor.						
errors	Object. Each member name is the error name and its value is its occurrence. To get list of message, type <i>cevent help error</i> in LTEUE monitor.						
rx_channels	Array of objects. Each entry contains the following members: <table> <tr> <td>gain</td><td>Float. Cell gain in dB.</td></tr> <tr> <td>freq</td><td>Float. Receive frequency in MHz.</td></tr> </table>	gain	Float. Cell gain in dB.	freq	Float. Receive frequency in MHz.		
gain	Float. Cell gain in dB.						
freq	Float. Receive frequency in MHz.						
rtx_channels	Array of objects. Each entry contains the following members: <table> <tr> <td>gain</td><td>Float. Cell gain in dB.</td></tr> <tr> <td>freq</td><td>Float. Transmit frequency in MHz.</td></tr> <tr> <td>port</td><td>Integer. RF port index.</td></tr> </table>	gain	Float. Cell gain in dB.	freq	Float. Transmit frequency in MHz.	port	Integer. RF port index.
gain	Float. Cell gain in dB.						
freq	Float. Transmit frequency in MHz.						
port	Integer. RF port index.						
config_set	Change current config. Each member is optional. Message definition: <table> <tr> <td>logs</td><td>Optional object. Represent logs configuration. Same structure as config_get (See [config_get member], page 62). All elements are optional. Layer name can be set to all to set same configuration for all layers. If set and logs are locked, response will have logs property set to locked.</td></tr> </table>	logs	Optional object. Represent logs configuration. Same structure as config_get (See [config_get member], page 62). All elements are optional. Layer name can be set to all to set same configuration for all layers. If set and logs are locked, response will have logs property set to locked .				
logs	Optional object. Represent logs configuration. Same structure as config_get (See [config_get member], page 62). All elements are optional. Layer name can be set to all to set same configuration for all layers. If set and logs are locked, response will have logs property set to locked .						
log_get	Get logs. This API has a per connection behavior. This means that the response will depend on previous calls to this API within the same WebSocket connection. In practice, logs that have been provided in a response won't be part of subsequent						

request unless connection is reestablished. To keep on receiving logs, client should send a new `log_get` request as soon as the previous response has been received. If a request is sent before previous request has been replied, previous request will be replied right now without considering specific min/max/timeout conditions.

Message definition:

<code>min</code>	Optional number (default = 1). Minimum amount of logs to retrieve. Response won't be sent until this limit is reached (Unless timeout occurs).
<code>max</code>	Optional number (default = 4096). Maximum logs sent in a response.
<code>timeout</code>	Optional number (default = 1). If at least 1 log is available and no more logs have been generated for this time, response will be sent.
<code>allow_empty</code>	Optional boolean (default = false). If set, response will be sent after timeout, event if no logs are available.
<code>rnti</code>	Optional number. If set, send only logs matching rnti.
<code>ue_id</code>	Optional number. If set, send only logs with matching ue_id.
<code>layers</code>	Optional Object. Each member name represents a log layer and values must be string representing maximum level. See [log-options], page 22. If <i>layers</i> is not set, all layers level will be set to <i>debug</i> , else it will be set to <i>none</i> . Note also the logs is also limited by general log level. See [log-options], page 22.
<code>short</code>	Optional boolean (default = false). If set, only first line of logs will be dumped.
<code>headers</code>	Optional boolean. If set, send log file headers.
<code>start_timestamp</code>	Optional number. Is set, filter logs older than this value in milliseconds.
<code>end_timestamp</code>	Optional number. Is set, filter logs more recent than this value in milliseconds.
<code>max_size</code>	Optional number (default = 1048576, i.e. 1MB). Maximum size in bytes of the generated JSON message. If the response exceeds this size, the sending of logs will be forced independently from other parameters.

Response definition:

<code>logs</code>	Array. List of logs. Each item is a an object with following members:
<code>data</code>	Array. Each item is a string representing a line of log.
<code>timestamp</code>	Number. Milliseconds since January 1st 1970. Not present if <code>com_log_us</code> is set in configuration.
<code>timestamp_us</code>	Number. Microseconds since January 1st 1970. Only present if <code>com_log_us</code> is set in configuration.

	layer	String. Log layer.
	level	String. Log level: <i>error</i> , <i>warn</i> , <i>info</i> or <i>debug</i> .
	dir	Optional string. Log direction: <i>UL</i> , <i>DL</i> , <i>FROM</i> or <i>TO</i> .
	ue_id	Optional number. UE_ID.
	cell	Optional number (only for PHY layer logs). Cell ID.
	rnti	Optional number (only for PHY layer logs). RNTI.
	frame	Optional number (only for PHY layer logs). Frame number (Subframe is decimal part).
	channel	Optional string (only for PHY layer logs). Channel name.
	src	String. Server name.
	idx	Integer. Log index.
	headers	Optional array. Array of strings.
	discontinuity	Optional number. If set, this means some logs have been discarded due to log buffer overflow.
	microseconds	Optional boolean. Present and set to true if <code>com_log_us</code> is set in configuration file.
log_set	Add log. Message definition:	
	log	Optional string. Log message to add. If set, <i>layer</i> and <i>level</i> are mandatory.
	layer	String. Layer name. Only mandatory if <i>log</i> is set.
	level	String. Log level: <i>error</i> , <i>warn</i> , <i>info</i> or <i>debug</i> . Only mandatory if <i>log</i> is set.
	dir	Optional string. Log direction: <i>UL</i> , <i>DL</i> , <i>FROM</i> or <i>TO</i> .
	ue_id	Optional number. UE_ID.
	flush	Optional boolean (default = false). If set, flushes fog file.
	rotate	Optional boolean (default = false). If set, forces log file rotation.
	cut	Optional boolean (default = false). If set, forces log file reset.
log_reset	Resets logs buffer.	
license	Retrieves license file information. Response definition:	
	products	String. List of products, separated by commas.
	user	String. License username.
	validity	String. License end of validity date.
	id	Optional string. License ID.
	id_type	Optional string. License ID type. Can be <code>host_id</code> or <code>dongle_id</code>

uid	Optional string. License unique ID.
filename	Optional string. License filename.
server	Optional string. License server URL.
server_id	Optional string. License server ID.
quit	Terminates lteue.
help	Provides list of available messages in <i>messages</i> array of strings and events to register in <i>events</i> array of strings.
stats	<p>Report statistics for LTEUE.</p> <p>Every time this message is received by server, statistics are reset.</p> <p>Warning, calling this message from multiple connections simultaneously will modify the statistics sampling time.</p> <p>Message definition:</p> <p>samples Optional boolean (default = false). Provide information similar to the 't spl' monitor command.</p> <p>rf Optional boolean (default = false). Provide information similar to the 't cpu' monitor command.</p> <p>Response definition:</p> <p>cpu Object. Each member name defines a type and its value cpu load in % of one core.</p> <p>instance_id Number. Constant over process lifetime. Changes on process restart.</p> <p>counters Object. List of counters, with following sub members:</p> <p> messages Object. Each member name is the message name and its value is its occurrence. To get list of message, type <i>cevent help msg</i> in LTEUE monitor.</p> <p> errors Object. Each member name is the error name and its value is its occurrence. To get list of message, type <i>cevent help error</i> in LTEUE monitor.</p> <p>cells Object. Each member name is the cell ID and each value is an object representing statistics as follow:</p> <p> dl_sched_users_min Number. Downlink minimum number of scheduled UE by TTI.</p> <p> dl_sched_users_max Number. Downlink maximum number of scheduled UE by TTI.</p> <p> dl_sched_users_avg Number. Downlink average number of scheduled UE by TTI.</p>

	ul_sched_users_min	Number. Uplink minimum number of scheduled UE by TTI.
	ul_sched_users_max	Number. Uplink maximum number of scheduled UE by TTI.
	ul_sched_users_avg	Number. Uplink average number of scheduled UE by TTI.
	dl_bitrate	Number. Downlink bitrate in bits per seconds.
	ul_bitrate	Number. Uplink bitrate in bits per seconds.
	dl_rx_count	Integer. Number of downlink transmitted packets (Without retransmissions).
	ul_tx_count	Integer. Number of uplink transmitted packets (Without retransmissions).
	dl_retx_count	Integer. Number of downlink retransmitted packets.
	ul_retx_count	Integer. Number of uplink retransmitted packets.
	dl_err_count	Integer. Number of downlink bad CRC packets.
	ue_count	Number. Current number of powered on UE.
	rx_tx_delay	Object. each value is an object representing the TX-RX latency statistics (average, max and min values).
	cfo	Number. Center frequency offset in Hz.
samples		Object. Set if samples has been set to true in request. This object has the following properties:
	tx	Array of objects. Each object represents samples statistics of the antenna port.
	rms	Number. RMS of the signal in dBFS
	max	Number. Maximum sample value in dBFS
	sat	Number. Number of saturation events
	count	Number of IQ samples analyzed
	rms_dbm	Number. RMS of the signal in dBm
	rx	Array of objects. Each object represents samples statistics of the antenna port.
	rms	Number. RMS of the signal in dBFS
	max	Number. Maximum sample value in dBFS

	sat	Number. Number of saturation events
	count	Number of IQ samples analyzed
	rms_db	Number. RMS of the signal in dBm.
register	Register client for messages generated by server. Message definition:	
	register	Optional string or array of string. List of messages to register to. Can be <code>ue_update</code> , <code>sms</code> , <code>non_ip_data</code> , <code>pws_msg</code> , <code>measurement_report</code> , <code>srs</code> , <code>pdsch</code> , <code>npdsch</code> .
	unregister	Optional string or array of string. List of messages to unregister. Can be <code>ue_update</code> , <code>sms</code> , <code>non_ip_data</code> , <code>pws_msg</code> , <code>measurement_report</code> , <code>srs</code> , <code>pdsch</code> , <code>npdsch</code> .

8.6 LTE messages

pdn_connect	Forces a connection to a PDN (LTE) or a PDU session (5G). Message definition:	
	ue_id	Integer. UE identifier.
	apn	Optional string. Access Point Name. Must be present if emergency is set to false.
	emergency	Optional boolean (default = false). Indicates if it is an emergency PDN. Must be set to true if apn is absent.
	authentication	Optional enumeration: <code>none</code> , <code>pap</code> , <code>chap</code> or <code>eap</code> . Default <code>none</code> . <code>eap</code> is applicable to 5GS only. Defines the authentication mechanism used for this APN.
	username	Optional string (up to 100 characters) containing the user name used for <code>pap</code> or <code>chap</code> or <code>eap</code> authentication.
	password	Optional string (up to 100 characters) containing the password used for <code>pap</code> or <code>chap</code> or <code>eap</code> authentication.
	pdn_type	Optional enumeration : <code>ipv4</code> , <code>ipv6</code> , <code>ipv4v6</code> , <code>unstructured</code> or <code>ethernet</code> . Default <code>ipv4v6</code> . Defines the PDN/PDU session type. Note that IPv6 and Ethernet require the use of the tun interface.
	ims	Optional boolean (default = false). Specifies if the PDN or PDU session is for IMS.
	pdu_session_id	Optional integer. PDU session identity.
	always_on	Optional boolean (default = true). Requests a non always-on PDU session if set to false (5G only).
	snssai	Optional S-NSSAI value (5G only). See [default_pdu_session_snssai], page 44,

Response definition:

erab_id Optional integer. Allocated ERAB identity for the corresponding default EPS bearer (LTE).

pdu_session_id
Optional integer. Allocated PDU session ID (5G).

cid Integer. Unique connection ID of the PDN connection / PDU session.

pdn_disconnect

Forces a PDN/PDU session deconnection.

Message definition:

ue_id Integer. UE identifier.

cid Optional integer. Unique connection ID of the PDN connection / PDU session allocated during **pdn_connect** procedure (value is set to 0 for the initial PDN connection / PDU session establishment during the registration procedure).

apn Optional string. Access Point Name. Must be present if **cid** is absent and if **emergency** is set to false.

emergency
Optional boolean (default = false). Indicates if it is an emergency PDN. Must be set to true if **cid** and **apn** are absent.

snssai Optional S-NSSAI value (5G only).

rrc_reest

Triggers a RRC reestablishment.

Message definition:

ue_id Integer. UE identifier.

power_on

Switch UE on.

Message definition:

ue_id Integer. UE identifier.

power_off

Switch UE off.

Message definition:

ue_id Integer. UE identifier.

n3gpp Optional boolean (default = FALSE). Indicates if the power off is required for non-3GPP only.

deregister

Deregister the UE.

Message definition:

ue_id Integer. UE identifier.

ue_get

Get list of UE with their states.

Message definition:

ue_id Optional integer. Identifier of UE to get state. If not set, returns all UE.

max Optional integer. Maximum number of UE to retrieve.

- update** Optional boolean. If set to true will only return modified UE since last call with update set to true on same Web Socket connection. If no UE have been modified, response will only occur when a UE will change or when timeout has been reached.
- timeout** Optional integer (default = 5). Time in seconds to wait before returning when no UE has changed. Only used when **update** is set to true.

Response definition:

- ue_list** Array of Object. Each object represent a UE with following parameters:
- imsi** String. UE IMSI.
 - ue_id** Integer. UE identifier
 - category** Integer or string. If integer, UE LTE category, else can be m1, nb1, nb2 or nr.
 - timing_advance** Integer. Current timing advance.
 - rnti** Integer. UE current RNTI.
 - power_on** Boolean. UE power state (true = powered on, false = powered off).
 - rrc_state** String. Radio connection state, can be disconnected, connecting, connected, idle or inactive.
 - emm_state** String. EMM/5GMM state. In 4G, it can be power off, deregistered, registering, registered, tracking area updating or unregistering. In 5G, it can be power off, deregistered, registering, registered, service request sending or deregistering.
 - cells** Array. List of cells (First one is always primary cell):
 - index** Number. Index of the cell (as reported by the config_get message).
 - pci** Number. Physical cell ID.
 - cqi** Number. Last reported cqi.
 - ri** Number. Last reported ri.
 - rsrp** Number. RSRP of cell.
 - rsrq** Number. RSRQ of cell.
 - snr** Number. SNR of cell.
 - path_loss** Number. Current path loss estimated by the UE from RSRP and SIB reference signal level.
 - sim_path_loss** Optional number. It is present if the channel simulator is enabled. Current path loss computed by the channel model.

cfo	Integer. Center frequency offset in hertz.																												
sample_rate_offset	Number. Sample rate offset compared to the RF frontend one in ppm.																												
position	Array of 3 floats. If the channel simulator is enabled, define the current position of the UE.																												
pdn_list	Optional array containing the list of PDN/PDU session connections. Each element contains the following objects: <table> <tr> <td>cid</td><td>Integer. Connection ID.</td></tr> <tr> <td>apn</td><td>String. Access point name.</td></tr> <tr> <td>ipv4</td><td>Optional string. IPv4 address for this PDN connection.</td></tr> <tr> <td>ipv6_if_id</td><td>Optional string. IPv6 interface identifier for this PDN connection.</td></tr> <tr> <td>mac_addr</td><td>Optional string. MAC address for this PDN connection.</td></tr> <tr> <td>pdu_session_id</td><td>Optional integer. Applicable to 5GS only. PDU session identity.</td></tr> <tr> <td>qos_flows</td><td>Optional array of objects. Applicable to 5GS only. Each objects contains: <table> <tr> <td>default</td><td>Optional boolean. If present and set to true, indicates that it is the default QoS flow.</td></tr> <tr> <td>qfi</td><td>Integer. Range: 0 to 63. QoS flow identifier.</td></tr> <tr> <td>drb_id</td><td>Integer. Data Radio Bearer identity.</td></tr> </table> </td></tr> <tr> <td>erabs</td><td>Optional array of objects. Applicable to EPS only. Each objects contains: <table> <tr> <td>default</td><td>Optional boolean. If present and set to true, indicates that it is the default PDN.</td></tr> <tr> <td>erab_id</td><td>Integer. EPS bearer identity.</td></tr> <tr> <td>drb_id</td><td>Integer. Data Radio Bearer identity.</td></tr> </table> </td></tr> </table>	cid	Integer. Connection ID.	apn	String. Access point name.	ipv4	Optional string. IPv4 address for this PDN connection.	ipv6_if_id	Optional string. IPv6 interface identifier for this PDN connection.	mac_addr	Optional string. MAC address for this PDN connection.	pdu_session_id	Optional integer. Applicable to 5GS only. PDU session identity.	qos_flows	Optional array of objects. Applicable to 5GS only. Each objects contains: <table> <tr> <td>default</td><td>Optional boolean. If present and set to true, indicates that it is the default QoS flow.</td></tr> <tr> <td>qfi</td><td>Integer. Range: 0 to 63. QoS flow identifier.</td></tr> <tr> <td>drb_id</td><td>Integer. Data Radio Bearer identity.</td></tr> </table>	default	Optional boolean. If present and set to true, indicates that it is the default QoS flow.	qfi	Integer. Range: 0 to 63. QoS flow identifier.	drb_id	Integer. Data Radio Bearer identity.	erabs	Optional array of objects. Applicable to EPS only. Each objects contains: <table> <tr> <td>default</td><td>Optional boolean. If present and set to true, indicates that it is the default PDN.</td></tr> <tr> <td>erab_id</td><td>Integer. EPS bearer identity.</td></tr> <tr> <td>drb_id</td><td>Integer. Data Radio Bearer identity.</td></tr> </table>	default	Optional boolean. If present and set to true, indicates that it is the default PDN.	erab_id	Integer. EPS bearer identity.	drb_id	Integer. Data Radio Bearer identity.
cid	Integer. Connection ID.																												
apn	String. Access point name.																												
ipv4	Optional string. IPv4 address for this PDN connection.																												
ipv6_if_id	Optional string. IPv6 interface identifier for this PDN connection.																												
mac_addr	Optional string. MAC address for this PDN connection.																												
pdu_session_id	Optional integer. Applicable to 5GS only. PDU session identity.																												
qos_flows	Optional array of objects. Applicable to 5GS only. Each objects contains: <table> <tr> <td>default</td><td>Optional boolean. If present and set to true, indicates that it is the default QoS flow.</td></tr> <tr> <td>qfi</td><td>Integer. Range: 0 to 63. QoS flow identifier.</td></tr> <tr> <td>drb_id</td><td>Integer. Data Radio Bearer identity.</td></tr> </table>	default	Optional boolean. If present and set to true, indicates that it is the default QoS flow.	qfi	Integer. Range: 0 to 63. QoS flow identifier.	drb_id	Integer. Data Radio Bearer identity.																						
default	Optional boolean. If present and set to true, indicates that it is the default QoS flow.																												
qfi	Integer. Range: 0 to 63. QoS flow identifier.																												
drb_id	Integer. Data Radio Bearer identity.																												
erabs	Optional array of objects. Applicable to EPS only. Each objects contains: <table> <tr> <td>default</td><td>Optional boolean. If present and set to true, indicates that it is the default PDN.</td></tr> <tr> <td>erab_id</td><td>Integer. EPS bearer identity.</td></tr> <tr> <td>drb_id</td><td>Integer. Data Radio Bearer identity.</td></tr> </table>	default	Optional boolean. If present and set to true, indicates that it is the default PDN.	erab_id	Integer. EPS bearer identity.	drb_id	Integer. Data Radio Bearer identity.																						
default	Optional boolean. If present and set to true, indicates that it is the default PDN.																												
erab_id	Integer. EPS bearer identity.																												
drb_id	Integer. Data Radio Bearer identity.																												
dl_bitrate	Number. DL bitrate in bit/s (excluding transport blocks with CRC errors).																												
ul_bitrate	Number. UL bitrate in bit/s (excluding retransmissions).																												

dl_rx_count	Integer. Number of received transport blocks without CRC error.				
dl_err_count	Integer. Number of received transport blocks with CRC errors.				
dl_retx_count	Integer. Number of received retransmitted transport blocks (with or without CRC errors).				
ul_tx_count	Integer. Number of sent transport blocks (first transmission only).				
ul_retx_count	Integer. Number of retransmitted transport blocks.				
dl_mcs	Number. Average MCS used for DL.				
ul_mcs	Number. Average MCS used for UL.				
dl_rb	Number. Average DL resource blocks per allocation.				
ul_rb	Number. Average UL resource blocks per allocation.				
dl_decoder_min	Optional number. Minimum turbo/ldpc decoder pass.				
dl_decoder_avg	Optional number. Average turbo/ldpc decoder pass.				
dl_decoder_max	Optional number. Maximum turbo/ldpc decoder pass.				
pending	Boolean. Set to true if update was set to true with max parameter and modified UE are remaining. You may call ue_get again with update set to true when receiving pending .				
counters	Object. List of counters, with following sub members: <table> <tr> <td>messages</td><td>Object. Each member name is the message name and its value is its occurrence. To get list of message, type <i>cevent help msg</i> in LTEUE monitor.</td></tr> <tr> <td>errors</td><td>Object. Each member name is the error name and its value is its occurrence. To get list of message, type <i>cevent help error</i> in LTEUE monitor.</td></tr> </table>	messages	Object. Each member name is the message name and its value is its occurrence. To get list of message, type <i>cevent help msg</i> in LTEUE monitor.	errors	Object. Each member name is the error name and its value is its occurrence. To get list of message, type <i>cevent help error</i> in LTEUE monitor.
messages	Object. Each member name is the message name and its value is its occurrence. To get list of message, type <i>cevent help msg</i> in LTEUE monitor.				
errors	Object. Each member name is the error name and its value is its occurrence. To get list of message, type <i>cevent help error</i> in LTEUE monitor.				
ue_add	Add one or several UE. Message definition: <table> <tr> <td>list</td><td>Array of object. Each object represent a UE as defined config file. See [UE configuration], page 34,</td></tr> </table> Response definition: <table> <tr> <td>info</td><td>Array of string. List of information.</td></tr> </table>	list	Array of object. Each object represent a UE as defined config file. See [UE configuration], page 34,	info	Array of string. List of information.
list	Array of object. Each object represent a UE as defined config file. See [UE configuration], page 34,				
info	Array of string. List of information.				

- ue_del** Remove a UE.
The UE will be removed without performing any deregistration.
Message definition:
- ue_id** Integer or array of integers. UE ID(s) of the UE to remove.
- Response definition:
- deleted** Integer. Number of deleted UE in case of list deletion.
- unknown** Array of integers. List of unknown UE IDs in case of list deletion.
- invalid** Array of integers. List of invalid UE IDs in case of list deletion.
- ue_del_all** Remove all UEs.
The UEs will be removed without performing any deregistration.
- ue_move** Move a UE to a specific position. Relevant only with *channel_sim* set to true.
Message definition:
- ue_id** Integer. Identifier of UE to move.
- position** Optional array. See [position], page 54, channel simulator option.
- speed** Optional number. See [speed], page 54, channel simulator option.
- direction** Optional number. See [direction], page 54, channel simulator option.
- elevation** Optional number. See [elevation], page 54, channel simulator option.
- rf** Set radio frontend channels gain.
Message definition:
- tx_gain** Optional number or array of numbers. Set TX gain.
Same definition as the [tx_gain], page 23, property.
- tx_channel_index** Optional number. If set, apply gain to specified channel only.
- rx_gain** Optional number or array of numbers. Set RX gain.
Same definition as the [rx_gain], page 23, property.
- rx_channel_index** Optional number. If set, apply gain to specified channel only.
- Response definition:
- tx_gain** Array. List of TX gain per channel.
- rx_gain** Array. List of RX gain per channel.
- rf_info** Optional string. RF driver information (depends on radio frontend).
- trx_iq_dump** Dump baseband IQ samples (time domain) to files.
The IQ samples are stored as little endian 32 bit floating point numbers.
Real and imaginary part are interleaved: the real part (I) is written first, the imaginary one (Q) next:
I(0) [0 ... 31]
Q(0) [32 ... 63]

I(1) [64 ... 95]
 Q(1) [96 ... 127]
 ...
 I(n) [n*64 ... n*64+31]
 Q(n) [n*64+32 ... n*64+63]

Message definition

duration Optional value (default = 1s, max = 30s). Sets dump duration in milliseconds.

rf_port Optional integer or array of integer. If set, dump only the related RF port channels.

rx_filename Optional string. If set defines the file where the received IQ samples will be dumped.
 May contain %d to differentiate antenna streams (printf style).
 If not set, no RX data will be dumped.

tx_filename Optional string. If set defines the file where the transmitted IQ samples will be dumped.
 May contain %d to differentiate antenna streams (printf style).
 If not set, no TX data will be dumped.

rx_channels Optional array of integer. Selects channel to dump. Each integer represents the global index of the channel.

tx_channels Optional array of integer. Selects channel to dump. Each integer represents the global index of the channel.

rx_header Optional boolean (Default = false). Set the dump mode.
 If not set, only the IQ samples are written to the files. If set, add a header for each TRX read or write operation. It is followed by the corresponding IQ samples.

Header:

timestamp

64 bit TRX timestamp, in samples.

count

32 bit integer: number of following IQ samples before next header.

tx_header

Optional boolean (Default = false). Same as *rx_header* for TX.

Message response:

dump_utc Integer. UTC time in milliseconds of the capture start

rf_ports Array of object representing information on each rf port capture.
 Defined as follow:

sample_rate

Integer. IQ sample rate in samples per seconds

	index	Integer. RF port index
	timestamp	Integer. Timestamp (in IQ sample) associated with frame/slot start.
	frame	Integer. Frame number of slot starting at timestamp
	slot	Integer. Slot number of slot starting at timestamp
	mu	Integer. Subcarrier spacing (0, 1...)
	rx_files	Array of string representing IQ files for RX.
	tx_files	Array of string representing IQ files for TX.
	rx_overflows	Optional integer. Number of RX lost data during capture process
	tx_overflows	Optional integer. Number of TX lost data during capture process
	rx_timestamp0	Integer. If rx_header mode not set, timestamp of first IQ sample in RX files.
	tx_timestamp0	Integer. If tx_header mode not set, timestamp of first IQ sample in TX files.
ext_app	Launch and external application. Only available if <i>tun_setup_script</i> is set. Message definition:	
	name	String. Session name.
	end_time	Float. End time. If external application is not over when this time is reached, a kill signal will be sent. The command may finish before this time if external application process ends up before.
	prog	String. Name of external application to launch. If path is not absolute, LTEUE config file path will be used. Arguments passed to application will be: <ul style="list-style-type: none"> – UE_ID – TUN interface name – Duration in seconds.
	args	Array of string or number that will be passed to application as argument (from 4th).
	dump_stdout	Optional boolean (default = false). If set, external application stdout will be redirected to LTEUE stdout. If external application is defined in [sim-events], page 38, the default value is true.
	dump_stderr	Optional boolean (default = false). If set, external application stderr will be redirected to LTEUE stderr.

If external application is defined in [sim-events], page 38, the default value is true.

Response definition:

output String. Standard output of the application.

error String. Standard error of the application.

Start notification:

A message with notification set to *start* will be sent when application is launched.

Progress notification:

A message with notification set to *progress* will be sent with *output* as defined in response.

Example:

Message sent:

```
{
  message: "ext_app",
  message_id: 'foo',
  ue_id: 1,
  start_time: 1,
  end_time: 5,
  prog: "ext_app.sh",
  args: ["iperf -c 220.103.220.10 -i 1 -t 4"],
}
```

Start notification:

```
{
  message_id: 'foo',
  notification: 'start'
}
```

Progress notifications:

```
{
  message_id: 'foo',
  output: 'ip netns exec ue1 iperf -c 220.103.220.10 -i 1 -t 4\n',
  notification: 'progress'
}
```

```
{
  message_id: 'foo',
  output: '-----\nClient
  notification: 'progress'
}
```

```
{
  message_id: 'foo',
  output: '[ ID] Interval      Transfer      Bandwidth\n[ 3]  0.0- 1.0 sec  1.2
  notification: 'progress'
}
```

```
{
  message_id: 'foo',
  output: '[ 3]  1.0- 2.0 sec  1.00 MBytes  8.39 Mbits/sec\n',
  notification: 'progress'
}
```

```

}
Final response:
{
    message: 'ext_app',
    message_id: 'foo',
    output: '[ 3]  2.0- 3.0 sec   896 KBytes   7.34 Mbits/sec\n'
}

```

sms Send a SMS over SG.

Message definition:

ue_id Integer. Identifier of UE.

dst String. Phone number to send SMS to.

text String. SMS text.

validity Optional integer (Default = 86400). Validity period in seconds.

status_req Optional boolean (Default = false). Indicates if a status report is requested.

sms_command

Send a SMS-COMMAND.

Message definition:

ue_id Integer. Identifier of UE.

type Enumeration: 0, 1, 2, 3. TP-Command-Type as defined in 3GPP 23.040 paragraph 9.2.3.19 TP-Command-Type:
 0 = Enquiry relating to previously submitted short message
 1 = Cancel Status Report Request relating to previously submitted short message
 2 = Delete previously submitted Short Message
 3 = Enable Status Report Request relating to previously submitted short message

msg_number Integer in range 0 to 255. Parameter indicating which SM in the SC to operate on. TP-Message-Number as defined in 3GPP 23.040 paragraph 9.2.3.18 TP-Message-Number.

dst String. Destination Address to which the TP-Command refers. TP-Destination-Address as defined in 3GPP 23.040 9.2.3.8 TP-Destination-Address

sms_memory

Set SMS memory availability.

Message definition:

memory Boolean. If true, UE will send a RP SMMA message, else received SMS will lead to **memory capacity exceeded** error message.

non_ip_data

Send data over a non IP PDN or unstructured PDU session.

Message definition:

ue_id Integer. Identifier of UE.

erab_id Optional integer. ERAB identity of the non IP default bearer, as given in pdn.connect response. Mandatory for a LTE UE.

pdu_session_id
Optional integer. PDU session identity of the non IP PDU session, as given in pdn_connect response. Mandatory for a 5G UE.

data
String. ASCII representation of the data hexadecimal dump.

force_meas_report
Force the sending of a RRC Measurement Report message.
Message definition:

ue_id
Integer. Identifier of UE.

meas_id
Integer. Measurement identifier.

tau_request
Trigger a NAS Tracking Area Update / mobility Registration Request procedure.
Message definition:

ue_id
Integer. Identifier of UE.

rlc_drop_rate
Define a percentage of downlink RLC PDUs dropped.
Message definition:

ue_id
Integer. Identifier of UE.

rb_id
Integer. Bearer identity.

srb
Boolean. Indicates if the bearer is for signalling or data.

percentage
Integer (range 0 to 100). Drop percentage.

mbms_set
Start/stop receiving MBMS service.
Message definition:

ue_id
Integer. Identifier of UE.

service_list
Array of strings. Each string should be formatted like "plmn.service_id" to start listening the given service.

ue_activate_dedicated_bearer
Trigger a Bearer Resource Allocation Request.
Message definition:

ue_id
Integer. Identifier of UE.

def_bearer_id
Integer. Default EPS bearer id.

qci
Optional integer (range 1 to 255). QoS Class Identifier of the E-RAB.

gbr
Optional object. Guaranteed Bitrate information. List of properties:

maximum_bitrate_dl
Integer. Bearer maximum bitrate for downlink (in bits/s).

maximum_bitrate_ul
Integer. Bearer maximum bitrate for uplink (in bits/s).

guaranteed_bitrate_dl
Integer. Bearer guaranteed bitrate for downlink (in bits/s).

	guaranteed_bitrate_ul	Integer. Bearer guaranteed bitrate for uplink (in bits/s).
filters	Optional array of objects. List of TFT filters or QoS rules. Each filter has the following properties:	
	direction	Enumeration: dl , ul or both . Set the filter direction.
	id	Range: 0 to 15. Set the filter identifier.
	precedence	Range: 0 to 255. Set the filter precedence. All the filters must have different precedence. 0 is the highest precedence. Note that precedence 80 is reserved for derived QoS rules in 5GS and thus will be rejected if configured.
	components	Array of objects. Each component contains one of the following properties as described in 3GPP TS 23.060 chapter 15.3.2:
	ipv4_remote_addr	String. Match a remote (external network entity) IPv4 address with the additional mask property.
	ipv4_local_addr	String. Match a local IPv4 address with the additional mask property. Note that not all core networks support it (they must indicate the support of the Local address in TFT in PCO/ePCO).
	ipv6_remote_addr	String. Match a remote (external network entity) IPv6 address with the additional mask property.
	ipv6_remote_addr_prefix	String. Match a remote (external network entity) IPv6 address with the additional prefix_len property. Note that not all core networks support it (they must indicate the support of the Local address in TFT in PCO/ePCO).
	ipv6_local_addr_prefix	String. Match a local IPv6 address with the additional prefix_len property. Note that not all core networks support it (they must indicate the support of the Local address in TFT in PCO/ePCO).
	proto_id	Range: 0 to 255. Match against the IP protocol identifier.
	local_port	Range: 0 to 65536. Match against the local (UE) port.

<code>local_port_range</code>	Array of 2 integers. Match against a local (UE) port range.
<code>remote_port</code>	Range: 0 to 65536. Match against the remote (external network entity) port.
<code>remote_port_range</code>	Array of 2 integers. Match against a remote (external network entity) port range.
<code>security_parameter_index</code>	32 bit integer. Match the ESP or AH security parameter index.
<code>type_of_service</code>	Range: 0 to 255. Match the type of service (IPv4) or the traffic class (IPv6) field. The additional <code>mask</code> property is the corresponding mask.
<code>mask</code>	Depends on TFT component. If <code>ipv4_remote_addr</code> is set, string representing IPv4 address used as a mask to apply on packet remote address. If <code>ipv6_remote_addr</code> is set, string representing IPv6 address used as a mask to apply on packet remote address. If <code>type_of_service</code> is set, integer between 0 and 255 used as a mask to apply on packet tos.
<code>flow_label</code>	20 bit integer. Match the IPv6 flow label.
<code>prefix_len</code>	Range: 1 to 128. IPv6 address prefix length.
<code>destination_mac_addr</code>	String. Match the destination MAC address.
<code>source_mac_addr</code>	String. Match the source MAC address.
<code>802.1q_ctag_vid</code>	Range: 0 to 4095. Match the 802.1Q C-TAG VID.
<code>802.1q_stag_vid</code>	Range: 0 to 4095. Match the 802.1Q S-TAG VID.
<code>802.1q_ctag_pcp_dei</code>	Range: 0 to 15. Match the 802.1Q C-TAG PCP and DEI.
<code>802.1q_stag_pcp_dei</code>	Range: 0 to 15. Match the 802.1Q S-TAG PCP and DEI.

ethertype

Range: 0 to 65535. Match the ethertype.

destination_mac_addr_range

Array of 2 strings. Match the destination MAC address range. Only applicable to 5GC.

source_mac_addr_range

Array of 2 strings. Match the source MAC address range. Only applicable to 5GC.

Response definition:

erab_id Integer. Allocated ERAB identity for the corresponding dedicated EPS bearer.

ue_bearer_resource_modification

Trigger a Bearer Resource Modification Request for bearer modification.

Message definition:

ue_id Integer. Identifier of UE.

beared_id

Integer . EPS bearer id.

qci Optional integer (range 1 to 255). QoS Class Identifier of the E-RAB.

gbr Optional object. See [GBR], page 79.

filters Optional array. See [TFT], page 80.

ue_deactivate_dedicated_bearer

Trigger a Bearer Resource Modification Request for bearer deactivation .

Message definition:

ue_id Integer. Identifier of UE.

beared_id

Integer . EPS bearer id.

ue_pdu_session_modification

Trigger a PDU Session Modification Request.

Message definition:

ue_id Integer. Identifier of UE.

cid Optional integer. Unique connection ID of the PDU session allocated during **pdn_connect** procedure (value is set to 0 for the initial PDU session establishment during the registration procedure).

apn Optional string. Access point name. Not required if **cid** is present.

qos_rules

Optional array. List of the QoS rules other than the default one. Each element of the array contains the followings objects:

id QoS rule identifier. Set it to 0 when creating a new QoS rule, or to the assigned value when modifying an existing QoS rule.

qfi Integer. Range: 0 to 63. QoS flow identifier.

filters Array of packet filters. See [TFT], page 80.

qos_flow	Optional object. QoS flow parameters for the qfi. Contains the following items:
qfi	Integer. Range: 0 to 63. QoS flow identifier.
5qi	Integer. Range: 1 to 254. 5QI of the QoS flow.
gbr	Optional object. See [GBR], page 79.
ue_assistance_information	Trigger the sending of a UE assistance information message. Message definition:
ue_id	Integer. Identifier of UE.
power_pref_indication	Optional enumeration (normal, lowPowerConsumption). Defines the power preference indication to be sent in the UE assistance information message. LTE UE only.
preferred_rrc_state	Optional enumeration (idle, inactive, connected, outOfConnected). Defines the preferred RRC state to be sent in the UE assistance information message. NR UE only.
preferred_max_cc	Optional integer. Range: 1 to 31. Defines the reducedMaxCCs value for DL and UL to be sent in the UE assistance information message. NR UE only.
preferred_max_layers	Optional integer. Range: 1 to 4. Defines the reducedMaxMIMO_Layers for DL and UL to be sent in the UE assistance information message. NR UE only.

8.7 LTE events

Following events are sent by UE if they have been registered on WebSocket.

ue_update	Generated by a UE NAS or RRC state change:
ue_id	Integer. UE ID.
measurement_report	Generated when a UE sends a measurement report:
ue_id	Integer. UE ID.
meas_id	Integer. Measurement identifier.
report_type	String. Measurement report type. Can be <code>periodical_strongest_cells</code> , <code>cgi</code> , <code>event_a1</code> , <code>event_a2</code> , <code>event_a3</code> , <code>event_a4</code> , <code>event_a5</code> , <code>event_a6</code> , <code>event_b1_nr</code> , <code>event_b2_nr</code> , <code>event_b1</code> , or <code>event_b2</code>
sms	Generated by SMS reception:
imsi	String. IMSI.
originator	String. SMS originator.

text	String. SMS text.
binary	String. If text is not set, base64 encoded string of SMS data.
dcs	Integer. Data coding scheme.
sms_status_report	Generated by the reception of SMS-STATUS-REPORT:
imsi	String. IMSI.
tp_qualifier	Enumeration: "SMS-SUBMIT", "SMS-COMMAND". TP-Status-Report-Qualifier as defined in 23.040 9.2.2.3 SMS-STATUS-REPORT type.
tp_message_ref	Integer. TP-Message-Reference as defined in 23.040 9.2.2.3 SMS-STATUS-REPORT type.
tp_recipient_address	String. TP-Recipient-Address as defined in 23.040 9.2.2.3 SMS-STATUS-REPORT type.
tp_discharge_time	String. TP-Discharge-Time as defined in 23.040 9.2.2.3 SMS-STATUS-REPORT type.
tp_status	Integer. TP-Status as defined in 23.040 9.2.2.3 SMS-STATUS-REPORT type.
non_ip_data	Generated by data reception over a non IP PDN or unstructured PDU session.
ue_id	Integer. Identifier of UE.
erab_id	Integer. ERAB identity of the non IP default bearer.
data	String. ASCII representation of the data hexadecimal dump.
pws_msg	Generated by reception of a PWS message (either CMAS or ETWS secondary message).
ue_id	Integer. Identifier of UE.
message_id	Integer. Message Identifier, as per 3GPP TS 23.041
serial_number	Integer. Serial Number, as per 3GPP TS 23.041.
message	Array of strings containing the UTF8 representation of each page of the message.
srs, pdsch, npdsch	Generated each time such a channel is decoded by the physical layer. This message is in binary format and includes a JSON structure and signal data as followed: First 4 bytes are an 32 bit integer representing the length in bytes of the serialized JSON, followed by the serialized JSON itself.

Next 4 bytes are the length of the signal data in bytes followed by the data itself. Note that the message can include several signal data. In this case, the pattern length/signal is repeated.

JSON data has the following definition:

label	String. Can be rs or re
data	Array of string. Information related to the signal being decoded. Check log_get API.

Signal data bytes are defined this way:

- Bytes 0...3: integer representing data length in bytes of the subsequent information.
- Bytes 4...7: integer representing data element size where:
 - 0: 32 bits floats
 - 1: 16 bits integer.
- Bytes 8..11: number of elements in data
- Remaining bytes are for data.

Note that $\langle \text{data length} \rangle = \langle \# \text{ of elements} \rangle * \langle \text{element size in bytes} \rangle + 8$

For more information about signal data, please check **signal.js** code inside **ltewww** software package.

8.8 IP simulation messages

8.8.1 Common message definition

name	String. Simulation name.
ue_id	Integer. UE identifier.
end_time	Float. End time.
dst_addr	Optional string. $\langle \text{address} \rangle [: \langle \text{port} \rangle]$ address and optionally port number of the remote test server. If not set, use sim_ip_remote_addr of LTEUE configuration. At least one of this two address must be set. Must be an IP address or a MAC address if type is ethernet (cbr_recv and cbr_send cases).
cid	Optional integer. Connection ID. If defined, IP simulation will use the corresponding PDN to send and receive packets.
apn	Optional string. Access point name. If defined, IP simulation will use the corresponding PDN to send and receive packets. It is ignored if cid is present.

8.8.2 Common response definition

info	String. Human readable simulation result.
-------------	---

8.8.3 Definitions

ping	Performs a ICMP ping. Message definition:
delay	Float. Delay in seconds between two ICMP echos.

payload_len
Integer. Size of ICMP payload (Between 4 and 1500).

id
Optional integer. ICMP id. If not set, randomly defined.

Response definition:

sent
Number of sent ECHO requests.

recv
Number of received ECHO replies.

cbr_send Send UDP/Ethernet packets at constant bitrate.
Message definition:

type
Optional enumeration: `udp`, `rtp` `voip` or `ethernet` (default = `udp`). Select the packet format: UDP, RTP, VOIP (Voice Over IP) or Ethernet. VOIP uses RTP packets with 8 kHz timestamps and an optional silence compression (SID (Silence Indicator) payload size of 6 bytes and one SID packet).

bit_rate Integer. Bitrate in bits per second.

payload_len
Integer. Size of UDP/RTP/Ethernet payload (Between 4 and 1500).

Additional parameter when type is `voip`:

vaf
Range: 0 to 100 (only for VOIP). Voice Activity Factor in percent. 100% means no silence.

mean_talking_duration
Float (only for VOIP). Mean talking duration in seconds.

sid_period
Optional integer. Silent duration in packets. If not set, period will be configured so that silent packets are sent at least every 160ms.

Additional parameter when type is `ethernet`:

ether_type
Optional integer (Between 0 and 65535). In case of Ethernet packets, sets the `ether_type` protocol number of the Ethernet header.

Response definition:

sent
Number of sent packets.

recv
Number of received packets.

cbr_recv Receive UDP/Ethernet packets at constant bitrate.
Message definition:

type
Optional enumeration: `udp`, `rtp` `voip` `ethernet` (default = `udp`). Select the packet format: UDP, RTP, VOIP (Voice Over IP) or Ethernet. VOIP uses RTP packets with 8 kHz timestamps and an optional silence compression (SID (Silence Indicator) payload size of 6 bytes and one SID every 8 normal voice packets).

bit_rate Integer. Bitrate in bits per second.

payload_len
Integer. Size of UDP/RTP/Ethernet payload (Between 4 and 1500).

vaf
Range: 0 to 100 (only for VOIP). Voice Activity Factor in percent. 100% means no silence.

mean_talking_duration

Float (only for VOIP). Mean talking duration in seconds.

start_delay

Optional float (default = 0). Tell the server to begin sending packets after **start_delay** seconds. It is useful to test paging.

ether_type

Optional integer (Between 0 and 65535). In case of Ethernet packets, sets the **ether_type** protocol number of the Ethernet header.

Response definition:

sent Number of sent packets.

recv Number of received packets.

flood_send

Send UDP packets by burst.

Message definition:

payload_len

Integer. Size of UDP payload (Between 4 and 1500).

Response definition:

sent Number of sent packets.

recv Number of received packets.

rate_kbps

Transfer rate.

flood_recv

Receive UDP packets by burst.

Message definition:

payload_len

Integer. Size of UDP payload (Between 4 and 1500).

Response definition:

sent Number of sent packets.

recv Number of received packets.

rate_kbps

Transfer rate.

http

Performs HTTP transfers in loop.

Message definition:

url String. URL to download.

max_delay

Float. Maximum delay between two connection attempts.

max_cnx Integer (default = 1000). Maximum number of connections.

Response definition:

connections

Number of transfer attempt.

rx_size Downloaded size in bytes.

duration Real transfer duration. Useful to estimate bitrate.

8.8.4 Start notification

When started, an intermediate message is sent.

This message is identified by a notification field set to string `start`.

8.9 IP simulation examples

1. Ping

1. Client message

```
{
  "message": "ping",
  "message_id": 42,
  "start_time": 1.5,
  "ue_id": 1,
  "delay": 1,
  "payload_len": 100
}
```

2. Server notification

```
{
  "message": "ping",
  "message_id": 42,
  "notification": "start"
}
```

3. Server response

```
{
  "message": "ping"
  "message_id": 42,
  "sent": 100,
  "recv": 100,
  "info": "PING: sent 100, received 100"
}
```

8.9.1 IP simulation server

Some IP simulations requires a server to communicate with.

PING test are handled directly by network stacks implementing ICMP protocol.

A common HTTP server can be used for HTTP simulations.

In LTEUE package, you will find a `ltesim_server` program used for this communication. It is mandatory for simulations like CBR and FLOOD.

In order to use this program, you need to copy the following files, available in your package, to your core network PC.

- `ltesim_server`
- `libnopoll.so`
- `libcrypto.so.1.1` (See [openssl], page 5)
- `libssl.so.1.1` (See [openssl], page 5)
- `libc_wrapper.so`
- `libnuma.so`

Now, you can start this program in core network as below:

```
./ltesim_server -a <interface address>[:<port>]
```

Or, if you want HTTP handling:

```
./ltesim_server -a <interface address> -H <port>
```

For Ethernet, you need to select listening interface:

```
./ltesim_server -e <interface name>[/<ether_type>] -H <port>
```

8.10 Examples

1. Config

1. Client sends

```
{
  "message": "config_get",
  "message_id": "foo"
}
```

2. Server replies

```
{
  "message_id": "foo",
  "message": "config_get",
  "name": "UE",
  "logs": {
    "phy": {
      "level": "error",
      "max_size": 0
    },
    ...
    "rrc": {
      "level": "debug",
      "max_size": 1
    }
  }
}
```

2. Error

1. Client sends

```
{
  "message": "bar",
  "message_id": "foo"
}
```

2. Server replies

```
{
  "message_id": "foo",
  "message": "bar",
  "error": "Unknown message: bar"
}
```

9 Command line monitor reference

The following commands are available:

help Display the help. Use **help *command*** to have a more detailed help about a command.

t [ue|g|cpu|spl] [period]

Activate various traces on the console. The display is stopped when typing return. The default trace is **ue**. An optional display period (in seconds) is accepted.

Available traces:

ue[:n] UE MAC and PRACH traces. If **n** is provided, only display the UE ID **n**.

g Show global statistics.

cpu Display the CPU usage from the TRX (transceiver) API and the TX-RX latency statistics.

spl Display various statistics about the sent and received complex samples (at the TRX API level). For the TX side, the RMS and maximum sample value are displayed. The number of saturation events (**abs(sample) > 1**) are displayed too. For the RX side the RMS and maximum sample value are displayed. The unit is dB FS (dB Full Scale). 0 dB FS is reached with a square signal of amplitude 1.

log [log_options]

Display the current log state. If *log_options* are given, change the log options. The syntax is the same as the *log_options* configuration property.

tx_gain gain [channel]

Set the TX gain in dB of the radio driver. With an array of floats a different gain is specified for each channel. Same definition as the [tx_gain], page 23, property.

rx_gain gain [channel]

Set the RX gain in dB of the radio driver. With an array of floats a different gain is specified for each channel. Same definition as the [rx_gain], page 23, property.

rf_info gain

Get RF driver information.

ue List the configured UEs.

pdn_connect [ue_id] apn|emergency [auth username password]

Send PDN connectivity / PDU session establishment request.

pdn_disconnect [ue_id] apn|emergency

Send PDN disconnect / PDU session release request.

rrc_reest [ue_id]

Trigger a RRC reestablishment.

power_on [ue_id]

Initiate a UE power on.

power_off [ue_id]

Initiate a UE power off.

n3gpp_power_off [ue_id] [n3gpp]

Initiate a UE power off.

deregister *[ue_id]*
Initiate a UE detach/deregistration.

sms ue_id tel text *[status_req]*
Send SMS

sms_command ue_id type msg_number dst
Send SMS-COMMAND.

mbms_set ue_id *[plmn.service_id]* *[plmn.service_id]*
Starting receiving MBMS service(s).

mbms ue_id
Show MBMS statistics.

rlc_drop_rate UE_ID rb_id rate *[is_srb]*
Define a *rate* percentage of downlink RLC PDUs dropped.

csfb *[ue_id]* *[service_type]*
Initiate a CS fallback.

force_meas_report *[ue_id]* *meas_id*
Force a RRC Measurement Report message sending.

tau_request ue_id
Trigger a NAS Tracking Area Update / mobility Registration Request procedure.

cevent error|msg|<event>|help *[error|msg]*
Display event counters for errors, messages or a selected event. To get the list of error or message counters, you can type **cevent help error** or **cevent help msg**.

com
COM connection status.

cell_gain cell_index gain
Set the UL gain of the cell *cell_index*. The gain is in dB and must be ≤ 0 . The gain of the other cells is not modified.
NR cell only.

10 Remote UE

When using tunnel interface with external program, you may want external program to be run on a different PC.

The Remote UE tool allows you to transfer IP traffic from each UE to a remote entity.

For this run `lterue` program on a different computer.
 You don't need any specific license.
`lterue` uses GTP over SCTP to communicate with LTEUE.
`lterue` must be used with *tun_setup_script*.

Note that we recommend to use same version of `lterue` and `lteue`.

10.1 Configuration

`bind_addr`

IP address and optional port on which the SCTP with connection to LTEUE is bound.

Note that *tun_setup_script* and *ext_app* prog member associated to UE will be forwarded to *lterue* and thus those scripts must be present in local directory.

For instance, if you put *lterue* on another PC, copy *lterue*, *config/rue.cfg*, *config/ue-if.cfg*, *config/ext_app.sh*, *libnopoll.so*, *libc-wrapper.so*, *libcrypto.so.1.1* and *libssl.so.1.1*.

11 UDC configuration reference

The UDC configuration is made by the script `udc-auto-cfg.sh`. For the input parameters See [cmd], page 24. The script needs to output on stdout the following lines:

- **LO_FREQ**: LO frequency configured for the UDC devices belonging to the same `udc_port`
- **TX_POWER_OFFSET**: UDC up conversion gain [dB]. This quantity is used by the software to estimate the value of `ss-PBCH-BlockPower`
- **TX_POWER_MAXn**: it corresponds to the maximum power level [dBm] tolerated by the UDC IF port equally divided by the number of aggregated carriers using the same `udc_port`. `n` line output, one for each `rf_port`. This quantity is used by the software to find the maximum allowed `tx_gain` for each `rf_port` in order to avoid the UDC device IF port saturation.
- **IFn**: it corresponds to the intermediate frequency at which each SDR is configured. `n` line output, one for each `rf_port`.
- **TX_GAIN_MARGINn**: it corresponds to the `tx_gain` reduction [dB] from the maximum allowed value. It is automatically applied by the software by `rf_port` during the startup. `n` line output, one for each `rf_port`.

11.1 args Configuration

This section specifies how to configure the parameter `args` (See [args], page 24). The only mandatory string parameter is the UDC device enumeration, it specifies how the UDC has been mounted at Linux level. UDCB2 and UDCB4 are mounted as `/dev/ttyUSBx` and UDCA2 as `/dev/ttyACMx`. The other string parameters are optional, if not specified, they are configured with the default value. Supported parameters:

Clock configuration:

- **A2**: default(ingored). Any possibility to send clock configuration command for this UDC
- **B2**: internal,external,default(master=internal,slave=external). If only one UDC B2 in the setup default=internal.
- **B4**: internal,external,gps,default(internal)

TX port configuration:

- **A2**: 1,2,default(1). 1=port IF1, 2=port IF2
- **B2**: 1,2,3,4,default(2). 1=port IF1A, 2=port IF1B, 3=port IF2A, 4=port IF2B
- **B4**: 1,2,3,4,default(1,3). 1=port IF1, 2=port IF2, 3=port IF3, 4=port IF4

RX port configuration:

- **A2**: 1,2,default(2). 1=port IF1, 2=port IF2
- **B2**: 1,3,default(3). 1=port IF1A, 3=port IF2A
- **B4**: 1,2,3,4,default(2,4). 1=port IF1, 2=port IF2, 3=port IF3, 4=port IF4

Example: `"/dev/ttyUSB0;clock=default;tx=default;rx=default"`

11.2 Debug

To enable the `udc-auto-cfg.sh` debug logs it is required to enable the `trx` log level in debug mode in the configuration file. Example:

```
log_options: "all.level=error,all.max_size=0,nas.level=debug,nas.max_size=1,
s1ap.level=debug,s1ap.max_size=1,x2ap.level=debug,x2ap.max_size=1,
rrc.level=debug,rrc.max_size=1,trx.level=debug,trx.max_size=1",
```

12 Log file format

12.1 PHY layer

When a PHY message is dumped (debug level), the format is:

```
time layer dir ue_id cell rnti frame.subframe channel:short_content
      long_content
```

time Time using the selected format.

layer Layer ([PHY] here).

dir UL (uplink) or DL (downlink).

ue_id eNodeB UE identifier (hexadecimal, unique among all cells).

cell Cell index (hexadecimal).

rnti Associated RNTI (hexadecimal) or - if none.

frame.subframe Frame number (0-1023) and either subframe number (0-9) for LTE and NB-IoT cells or slot number for NR cells.

channel PHY channel name (e.g. PUSCH, PUCCH, PRACH, SRS, PSS, PBCH, PCFICH, PDSCH, PHICH, PDCCH, EPDCCH, ...).

short_content Single line content.

long_content Hexadecimal dump of the message if `phy.max_size > 0`.

In the uplink messages, **epre** is the relative Energy per Resource Element in dB. The origin 0 dB corresponds to **tx_gain_offset** dBFS.

If UE power control is enabled, **p** is the absolute transmit power in dBm.

If the UE channel simulator is enabled, **p** is the absolute power before the channel simulation is applied. Moreover, if the UE channel simulator is enabled, **epre** is clamped to 0 dB to avoid a potential saturation in the RF interface.

12.2 MAC and RRC layers

When a message is dumped, the format is:

```
time layer - ue_id message
```

When a PDU is dumped (debug level), the format is:

```
time layer dir ue_id short_content
      long_content
```

time Time using the selected format

layer Layer ([MAC] or [RRC] here).

dir UL (uplink) or DL (downlink).

ue_id eNodeB UE identifier (hexadecimal, unique among all cells).

cell_id Primary cell index.

short_content Single line content.

`long_content`

- MAC: hexadecimal dump of the message if `layer.max_size > 0`.
- RRC: full ASN.1 content of the RRC message if `layer.max_size > 0`.

`long_content`

- MAC, RLC, PDCP: hexadecimal dump of the message if `layer.max_size > 0`.
- RRC: full ASN.1 content of the RRC message if `layer.max_size > 0`.

12.3 RLC, PDCP and NAS layers

When a message is dumped, the format is:

```
time layer - ue_id message
```

When a PDU is dumped (debug level), the format is:

```
time layer dir ue_id short_content
      long_content
```

`time` Time using the selected format

`layer` Layer ([RLC], [PDCP], or [NAS] here).

`dir` UL (uplink) or DL (downlink).

`ue_id` eNodeB UE identifier (hexadecimal, unique among all cells).

`short_content`

Single line content.

- RLC, PDCP: preceded by the SRB or DRB identifier.

`long_content`

- NAS: full content of the NAS message if `layer.max_size > 0`.

12.4 IP layer

When a IP data PDU is dumped (debug level), the format is:

```
time layer dir short_content
      long_content
```

`time` Time using the selected format

`layer` Indicate the layer ([IP] here).

`dir` UL (uplink) or DL (downlink).

`short_content`

Single line content (at least the IP protocol and the source and destination address).

`long_content`

Optional hexadecimal dump of the PDU if `ip.max_size > 0`.

13 Known limitations

We present here the known limitations of LTEUE:

- No cell search (except for the initial connection).
- Handover is supported both in LTE and NR in UE simulation mode (`multi_ue:true`) between the configured cells. The real UE mode does not yet support handover.
- In UE simulation mode (`multi_ue:true`), events A1 to A6 and periodical report for strongest cells are supported for the configured cells. Events B1 and B2 are supported for EN-DC. RRC measurements are not yet supported in real UE mode.
- Subband periodic CQI is not supported (but wideband CQI and aperiodic CQI are supported).
- Category M1 specific:
 - Only CE-Mode A is supported.
 - No message repetition for PRACH.
 - No frequency hopping.
- NB-IoT specific:
 - Channel simulator is not supported.
 - Multi cell is not supported.
- NR specific:
 - The maximum number of PDSCH codewords per DCI is one.
 - A single code block group is supported.
 - Semi-static HARQ ACK is not fully supported.
 - k1 (PDSCH to ACK delay in slots) must be larger than or equal to `rx_to_tx_latency`.
 - k2 (DCI to PUSCH delay in slots) must be larger than or equal to `rx_to_tx_latency`.
 - The RAR to PUSCH delay in slots must be larger than or equal to `rx_to_tx_latency + 1`.

14 Change history

14.1 Version 2025-06-13

- updated RRC ASN.1 to release 18.5.0
- updated NR RRC ASN.1 to release 18.5.1
- updated LPP ASN.1 to release 18.4.0
- added coarse location reporting
- added NB-IoT R14 servingCellMeasInfo support
- added non 3GPP (ePDG and N3IWF) support
 - added `n3gpp` parameter
- added access point name to `tun_setup_script` arguments
- added `cid` to `pdn_connect`, `pdn_disconnect`, `ue_pdu_session_modification`, `ue_get` remote APIs and IP simulation messages
- added `ntn_internal_model` parameter at cell level
- added `min_distance`, `max_distance` and `bounce` parameters
- added remote API for `lterue`
- added `cell_sync` parameter for NR cell group configuration

14.2 Version 2025-03-14

- updated NR RRC ASN.1 to release 18.4.0
- added NR DL MIMO 8x8
- added NR FR2 NTN
- the `crc=KO` log is renamed to `crc=FAIL`
- added direct SCell activation support
- added R18 NR PDCP SN gap report support
- added `tx_gain_offset` at cell level
- added `cell_gain` monitor command

14.3 Version 2024-12-13

- updated RRC ASN.1 to release 18.3.0
- updated NR RRC ASN.1 to release 18.3.0
- added R18 3MHz cell bandwidth support for NR cells
- added NR band 106 definition
- added R14 skip uplink TX dynamic and SPS support
- `redcap` parameter is changed from a boolean to an enum. Boolean is still supported for backward compatibility
- added `eredcap_reduced_bb_bw` parameter
- added `pdsch_fer` parameter
- added `dl_ca` parameter
- added `max_mimo_layers_dl`, `nr_max_mimo_layers_dl` and `nr_max_mimo_layers_ul` parameters
- added `measurement_report` remote API event
- added `vrb_lib_path` parameter to the NR UE configuration for Intel vRANBoost support

14.4 Version 2024-09-13

- added LTE bands 107 and 108 definition
- added split 7.2 multi cell support
- added support for NR Paging Early Indication (PEI)
- added `status_req` to `sms` remote API and monitor command
- added `sms_status_report` event
- added `sms_command` remote API and monitor command
- added `license` remote API
- added `attenuation` parameter to all antenna types in the channel simulator
- added `tun_ifname` parameter
- added `ue_del_all` remote API
- added value 100_enhanced to `f_raster` parameter
- `com_logs_lock` parameter is renamed to `com_log_lock`. `com_logs_lock` is still supported for backward compatibility
- added `com_log_us` parameter
- added `sid_period` to `cbr_send` remote API
- added `eab` parameter

14.5 Version 2024-06-14

- OpenSSL library is upgraded to 1.1.1w
- added FR2 support
- added NR band 54 definition
- added data inactivity monitoring
- added `apply_ul_mbr` parameter
- added `delay_sim` parameter
- added `ca_intraband` parameter
- added `access_control_classes` and `uac_access_identities` parameters
- added `satellite` antenna type for NTN channel simulator
- added `sim_path_loss` to `ue_get` remote API
- added `rrc_sel_resel` parameter

14.6 Version 2024-03-15

- updated NR RRC ASN.1 to release 17.6.0
- added LTE bands 106, 253 and 254 definition
- added NR bands 31, 72, 105, 109 and 254 definition
- added IPv4 Link MTU request in PCO and automatic configuration of TUN interface based on the value received from the network
- added NR 2-steps RA SDT support
- added NR multi-CSI-PUCCH support
- added NR R17 PUSCH repetition support
- added `qos_flows` and `erabs` parameters to `ue_get` remote API
- added `apply_ta_commands` parameter
- added `rlc_drop_rate` remote API

- added `cells.counters` to `config_get` remote API
- added support of '+' in `sms_centre_address`
- added `uplink_tx_switch_option` parameter
- `ntn_ground_position` and `ground_position_at_origin` are deprecated, replaced by a single `ground_position` parameter
- added `spmt_support` parameter
- increased `drx_cycle` value range for NB-IoT UEs
- added `handover_command`, `handover_success` and `handover_failure` event counters
- added `cfo` parameter to `stats` remote API
- use `trx_get_numa_nodes2` TRX API instead of `trx_get_numa_nodes`

14.7 Version 2023-12-15

- added EPS user plane integrity support when `as_release` is set to 17 or higher
- added RRC cell selection and reselection
- added NAS PLMN selection
- added support of TRX multi-thread API
- added extended measurement identities and measurement objects support
- added CSG support
- `ca_filter_bc_3x101` parameter replaces the old `ca_filter_bc_36101` and can now apply to NR UEs
- `ul_ca` parameter can also apply to NR UEs
- added `loop_count` and `loop_delay` to remote API messages
- added `sim_events_loop_count` and `sim_events_loop_delay`
- added `plmnwact`, `oplmnwact`, `hplmnact`, `ehplmn` and `lrplmnsi` used by the NAS PLMN selection procedure
- added `ntn` parameter to `custom_freq_band` object
- removed `ntn` parameter from the cell configuration object (the NTN info comes from the band used)
- added `ue_usage_setting` and `voice_domain_preference_eutran` parameters
- added Ethernet traffic generation type to `cbr_recv` and `cbr_send`
- added `preferred_max_cc` and `preferred_max_layers` parameters to `ue_assistance_information` API for NR UEs
- `altitude` parameter in `ground_position_at_origin` and `ntn_ground_position` parameters is now optional
- added `ntn_service_dl_freq` and `ntn_service_ul_freq` parameters for NR NTN cell groups
- added `csg_info_list` parameter
- added `com_ssl_ca` parameter for SSL verification
- added `emergency_attach` and `imei_attach` parameters
- added `emergency` parameter to `pdn_connect` and `pdn_disconnect` remote APIs
- `mnc_nb_digits` parameter is now also applicable to LTE and NB-IoT UEs

14.8 Version 2023-09-08

- updated EUTRA band combinations based on 3GPP TS 36.101 v18.2.0
- added the `ptrs_density_recommendation_dl` parameter
- `snssai` parameter is added to `pdn_disconnect` remote API
- `sms_centre_address` parameter is added
- NUMA configuration automatically uses RF frontend driver information
- `attach_pdn_type` parameter value `ethernet` is added
- `pdn_type` parameter value `ethernet` is added
- `wus_support`, `wus_edrx_min_time_offset` and `gwus_paging_probability` parameters are added for Cat-M1 UEs
- `redcap` and `half_duplex` parameters added for NR UEs
- `supi_concealment_by_sim` parameter is removed

14.9 Version 2023-06-10

- added LTE band 73 definition
- `ntn`, `ntn_n_ta_ue` and `ntn_ground_position` parameters have been moved to the cell configuration and are now available for NB-IoT and NR cells
- added `ntn_eci_aligned_ecef` parameter
- phy related logging parameters are moved in the phy layer object of `config_set/config_get` remote APIs
- added `rrc.cell_meas=[0|1]` log level
- fading is now applied to the PRACH signal when using the channel simulator
- `attach_pdn_type` parameter value `non-ip` is renamed to `unstructured`. `non-ip` is still supported for backward compatibility
- `pdn_type` parameter value `non-ip` in `pdn_connect` remote API is renamed to `unstructured`. `non-ip` is still supported for backward compatibility
- `com_logs_lock` parameter added to disable logs configuration change via remote API
- `attach_pdn_ims` parameter is added
- `ims` parameter is added to `pdn_connect` remote API
- `ground_position_at_origin` parameter is added
- `lpp_support` parameter is added

14.10 Version 2023-03-17

- `com_addr` parameter now uses `[::]` address instead of `0.0.0.0` in the delivered configuration files to allow IPv6 connection
- updated RRC ASN.1 to release 17.3.0
- updated NR RRC ASN.1 to release 17.3.0
- added LTE category 1bis support
- added inter-RAT EUTRA/NR support
- added EUTRA/NR CGI reporting support
- added LTE bands 54, 255 and 256 definition
- added NR bands 100, 101, 102, 104, 255 and 256 definition
- added `wus_support`, `wus_edrx_min_time_offset` and `gwus_paging_probability` parameters for NB-IoT UEs

- added `rms_dbm` parameter to `stats` remote API
- added `cpu_core_list` parameter to cell group
- added missing `deregister` monitor command in documentation
- `t3412` parameter can be used for MICO requested T3512
- added `eutra_voice_support` and `nr_voice_support` parameters
- `cfo` parameter was wrongly named `freq_shift` in `ue_get` remote API documentation
- `f_raster` parameter supports the value 15_30_100
- `delta_gscn` parameter supports the value 7
- added `snssai_credentials` parameter
- increased `sim_reader_index` parameter range

14.11 Version 2022-12-16

- updated RRC ASN.1 to release 17.2.0
- updated NR RRC ASN.1 to release 17.2.0
- added Configured Grant Type1 support
- added eDRX support for NR UEs
- added enhanced skip uplink TX support for NR UEs
- added `ca_certificate` parameter to `eap_tls`
- added `snpn_access_mode` and `allowed_snpn` parameters
- added `cag_info_list` parameters
- added `tun_script_param` for tun mode
- `nr_support` parameter is renamed to `en_dc_support`. `nr_support` is still supported for backward compatibility
- added `ntn`, `ntn_n_ta_ue`, `ntn_ground_position` in NB-IoT UEs for Rel17 NTN support
- added `random_ap_subband_cqi` and `random_ap_subband_pmi` parameters
- added `inactive` value to `rrc_state` parameter in `ue_get` remote API
- added `utc` parameter to remote API response messages

14.12 Version 2022-09-16

- updated RRC ASN.1 to release 17.1.0
- updated NR RRC ASN.1 to release 17.1.0
- added NUMA architecture support
- added log support for remote UE. GTP-U and IP layers available
- added `freq_shift` and `sample_rate_offset` parameters to `ue_get` remote API
- added `gtp_socket_size` option for remote UE
- added `nr_forced_li` parameter
- added `ue_assistance_information` remote API
- added R17 35MHz and 45MHz cell bandwidth support for NR cells
- added `cross_pol_medium` and `cross_pol_high` MIMO correlation matrixes to channel simulator
- added `deregister` remote API
- added band 103 support
- added support for CRI_RI_LI_PMI_CQI report quantity

- added Cat-M R14 PDSCH scheduling enhancement, HARQ ACK bundling and 10 HARQ processes support
- added `dump_stdout` and `dump_stderr` parameters to `ext_app`

14.13 Version 2022-06-17

- OpenSSL library is upgraded to 1.1.1n
- improved global NR performances
- added `ipv4_local_addr`, `ipv6_remote_addr_prefix` and `ipv6_local_addr_prefix` TFT components
- `pdccch_decode_opt` and `pdccch_decode_opt_threshold` are now supported with NR
- the `delay_spread` channel simulator parameter is added for the new `tdla`, `tdlb`, `tdlc`, `tdld` and `tdle` channel types
- added `start_timestamp` and `end_timestamp` to `log_get` API
- added `phy.rep=1` log level for NPUSCH/NPDSCH allocations and repetitions in each sub-frame
- added support for R16 NR RLC extended t-PollRetransmit and extended t-StatusProhibit
- added support for R16 NR PDCP extended discardTimer

14.14 Version 2022-03-18

- `prach_delay` is now available for NR UEs too
- added notes about channel reciprocity and SRS antenna switching
- updated NR UE capabilities reporting
- the NR UE configuration files found in `config` folder are changed to use a cell SCS of 15kHz in FDD to match the changes done in the gNB configuration files
- added channel estimation signal log for PDSCH (LTE, NR)
- `supi_concealment_by_sim` parameter is added

14.15 Version 2021-12-17

- a new `phy.cell_meas` log level is added
- `license` monitor command is added
- support of antenna panels in the multi-UE channel simulator is added
- `rx_agc` and `rx_agc_timeout` remote APIs are removed; use `rx_gain` instead
- `ssf5120` and `sf10240` DRX long cycle in RRC connected state is supported
- PDCCH order PRACH in LTE, NB-IoT and NR is supported
- aperiodic SRS is supported in NR
- NB-IoT NPRACH Format 2 is supported
- `mbms_set` remote API is added

14.16 Version 2021-09-17

- the minimum GLIBC version is now 2.17
- logs can be displayed with microseconds precision
- `nas_5gs` parameter is added for EUTRA/5GC in LTE, Category M1 and NB-IoT
- addition of control plane CIoT 5GS optimization
- `sul_support` parameter is added for NR supplementary uplink

- `cpu_core_list` parameter is added to control the list of cores used for multi threading
- `forced_pci` parameter is added for LTE, Category M1 and NR UEs
- new parameters are added to the channel simulator for antenna panels
- `f_raster` parameter supports the value 15
- `as_release` parameter supports the value 16
- NAI can be configured instead of IMSI
- the `ue-xwu` script is updated
- PRACH repetitions in LTE-M are added

15 License

`lteue` is copyright (C) 2012-2025 Amarisoft. Its redistribution without authorization is prohibited.

`lteue` is available without any express or implied warranty. In no event will Amarisoft be held liable for any damages arising from the use of this software.

For more information on licensing, please refer to `license.pdf` file.