

# **NutsBoard**

# **Pistachio Single Board Computer**

# **Hardware Manual**

**Rev 1.2    03072018**

## Copyright

NutsBoard Org., All rights reserved.

NutsBoard Org. reserves the right to make improvements in the products described in this manual at any time without notice. No part of this manual may be reproduced, copied, translated or transmitted in any form or by any means without prior written permission of NutsBoard Org..

## Trademark

The NutsBoard logo is a registered trademark of NutsBoard Org..  
All other trademarks or registered marks in this manual belong to their respective manufacturers.


## Revision History

Revision	Date	Author	Description
V1.0	05/25/2017	Victor	First Release
V1.1	08/15/2017	Wig	Change to NutsBoard style
V1.2	03/07/2018	Wig	Corrected J6 and J25 description

## Contents

Copyright.....	2
Trademark.....	2
Revision History.....	2
1. Pistachio Overview.....	1
2. Hardware Specification.....	2
3. Pin Header Definition.....	3
3-1. J27 USB header.....	4
3-2. J28 USB header.....	4
3-3. J29 CAN bus header.....	4
3-4. J18 speaker & microphone header.....	4
3-5. J5 LVDS connector.....	5
3-6. J20 Touch panel header (4/5-wire RTP & CTP).....	5
3-7. J6 LCD backlight header.....	5
3-8. J22 RS232 header.....	6
3-9. J23 RS232 header.....	6
3-10. J24 RS232 header.....	6
3-11. J25 Expansion header.....	7
3-12. J1 DC input header 2.54mm.....	7
3-13. J17 WiFi/Bluetooth Antenna 2.4G.....	7
3-14. J16 WiFi/Bluetooth Antenna 5G.....	7
3-15. J21 RS232/422/485 DSUB-9 connector.....	8
3-16. J13 mPCIE connector.....	8
4. Switch settings.....	9

## 1. Pistachio Overview


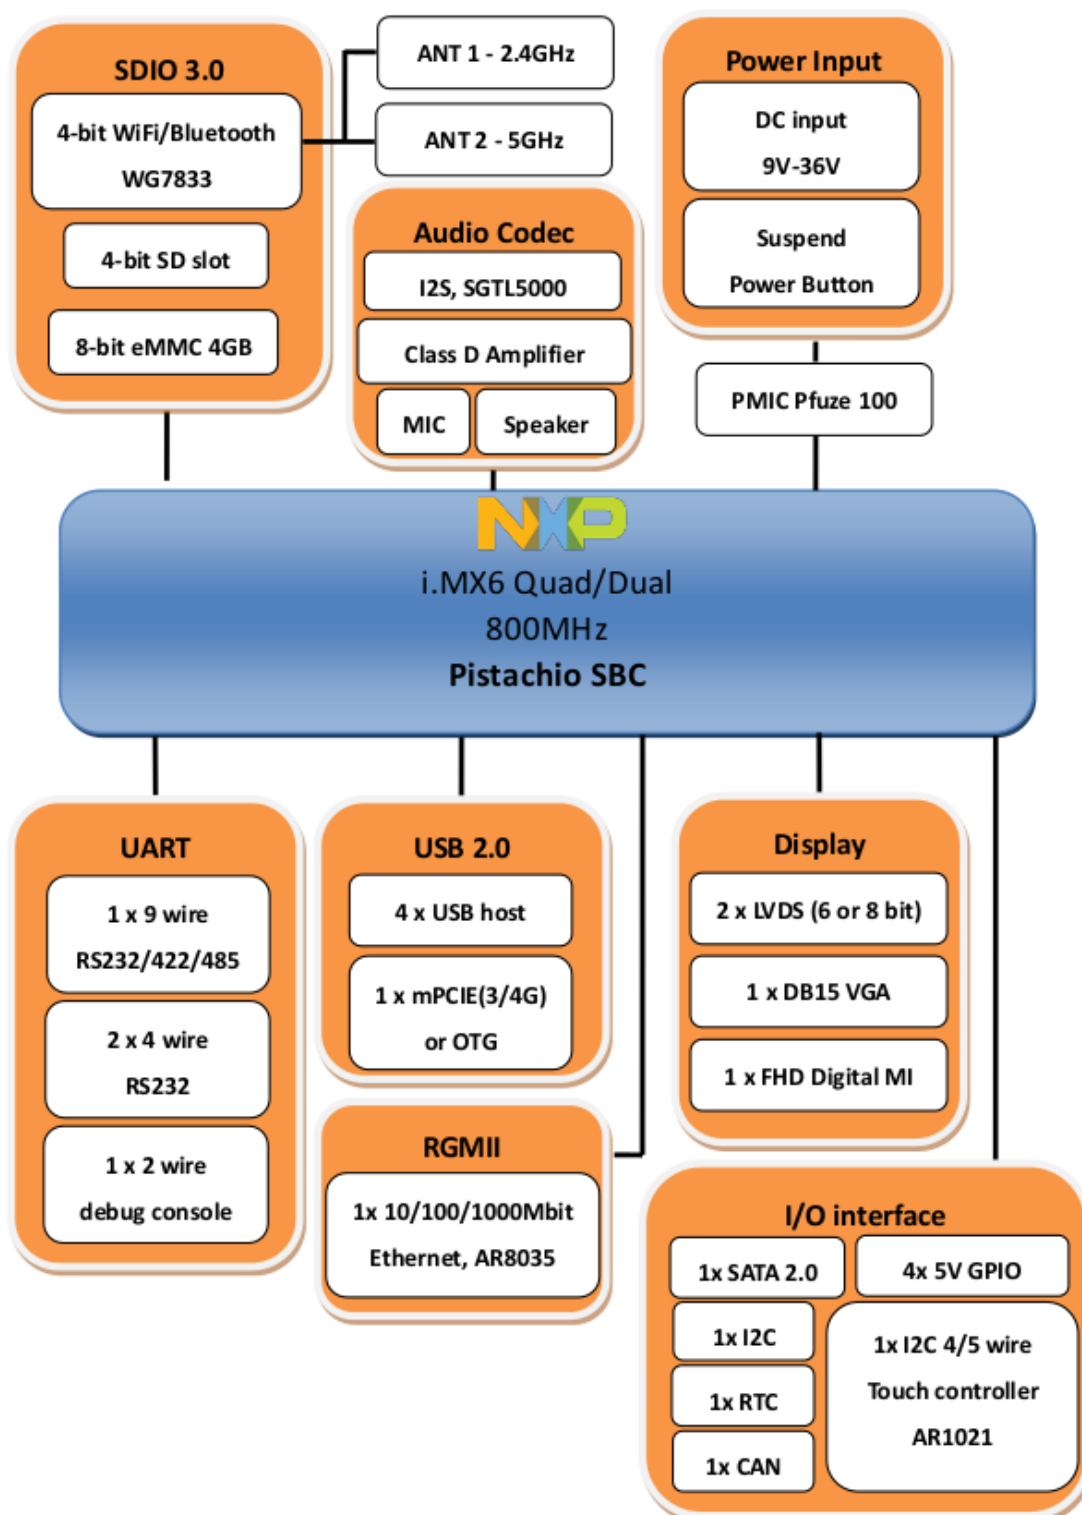


NutsBoard – Pistachio SBC block diagram

## 2. Hardware Specification

- CPU - NXP ARM Cortex-A9 Quad/Dual 800MHz
- Memory - 2GB DDR3
- Storage - 4GB eMMC
- PMIC - NXP PFUZE100
- WiFi - 802.11a/b/g/n 2.4GHz,5GHz
- Bluetooth - BT v4.2
- EEPROM - eFUSE
- RTC - x1
- Network - 10/100/1000Mb RGMII Ethernet
- USB Host/OTG - x4/x1(mPCIIE connector)
- Serial - RS232/422/485 x1, RS232 x3 ( one is debug console)
- CAN bus - x1
- I2C - x1
- PWM - x1
- Touch - I2C x1
- Audio - x1 with class D amplifier
- SD slot - x1
- GPIO - x4
- Display - LVDS x2, VGA x1, DMI x1
- SATA - x1
- mPCIIE - x1, SIM card slot x1

### 3. Pin Header Definition

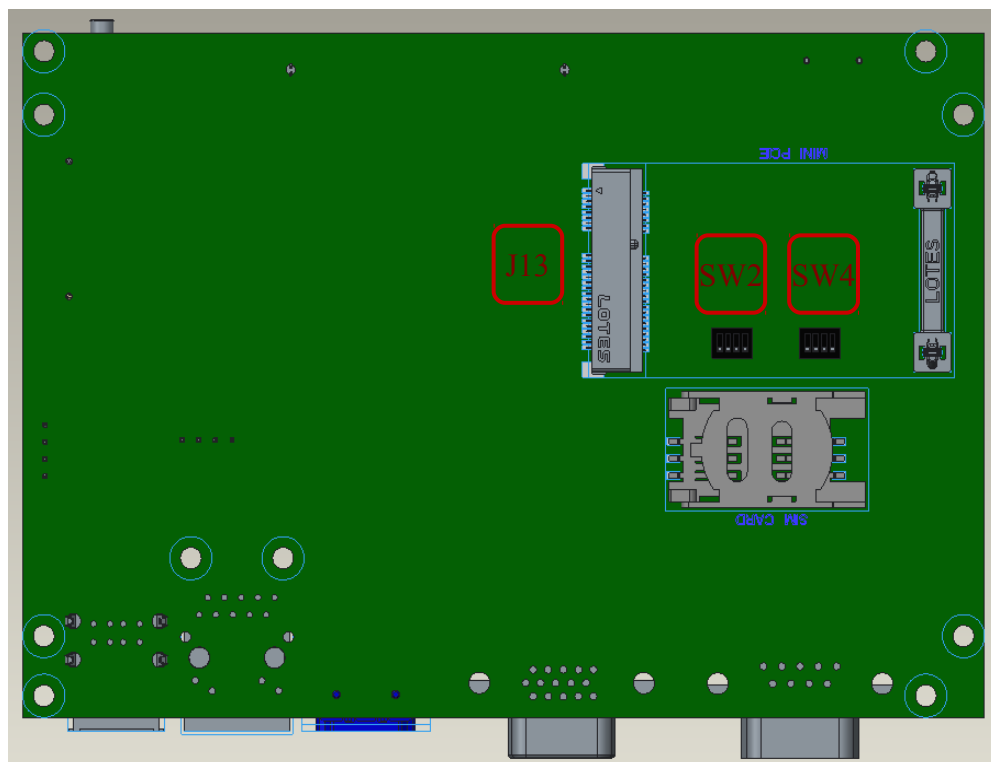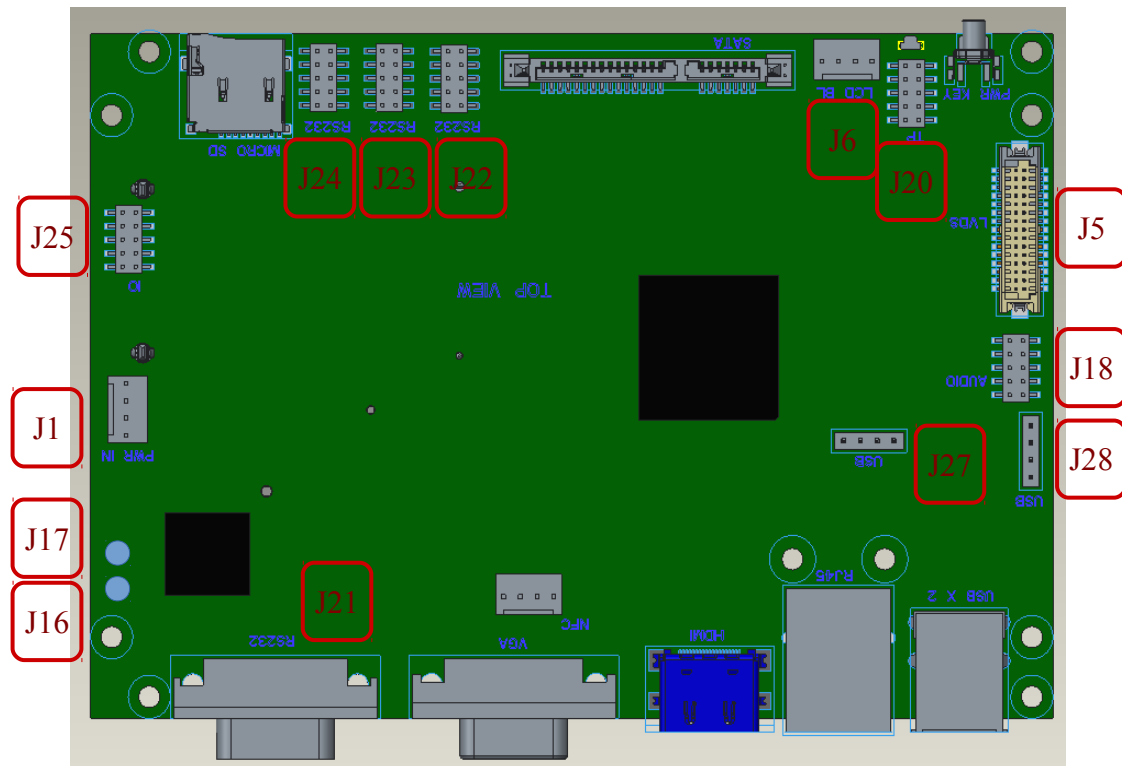

### 3-1. J27 USB header

Pin number	Pin name
1	+5V
2	D-
3	D+
4	GND

### 3-2. J28 USB header

Pin number	Pin name
1	+5V
2	D-
3	D+
4	GND

### 3-3. J29 CAN bus header

Pin number	Pin name
1	GND
2	CANH_B
3	CANL_B
4	GND

### 3-4. J18 speaker & microphone header

Pin number	Pin name
1	SPKLn
2	MICBIAS
3	SPKLp
4	MIC_IN
5	SPKRn
6	Microphone_DET
7	SPKRp
8	GND
9	Headphone_DET
10	NC

**3-5. J5 LVDS connector**

Pin number	Pin name	Pin number	Pin name
1	LV0_T0N	2	LV1_T0N
3	LV0_T0P	4	LV1_T0P
5	LV0_T1N	6	LV1_T1N
7	LV0_T1P	8	LV1_T1P
9	LV0_T2N	10	LV1_T2N
11	LV0_T2P	12	LV1_T2P
13	GND	14	GND
15	LV0_CKN	16	LV1_CKN
17	LV0_CKP	18	LV1_CKP
19	GND	20	GND
21	LV0_T3N	22	LV1_T3N
23	LV0_T3P	24	LV1_T3P
25	NC	26	NC
27	NC	28	NC
29	LCD_PWR	30	LCD_PWR

**3-6. J20 Touch panel header (4/5-wire RTP & CTP)**

Pin number	Pin name		
	CTP	4-Wire RTP	5-Wire RTP
1		RES_Y+	RES_Y+
2	TP_3V3		
3		RES_Y-	RES_Y-
4	TP_RST		
5	Ground(RP7 equipped)	NC(RP7 open)	RES_5W(RP7 open)
6	TP_INT		
7		RES_X+	RES_X+
8	TP_SCL		
9		RES_X-	RES_X-
10	TP_SDA		

**3-7. J6 LCD backlight header**

Pin number	Pin name
1	BL_PWR
2	GND
3	GND
4	GND
5	LCD_BL_ON
6	LCD_BL_PWM



### 3-8. J22 RS232 header

Pin number	Pin name
1	5VDC
2	RTS
3	5VDC
4	RX
5	GND
6	TX
7	GND
8	CTS
9	GND
10	GND

### 3-9. J23 RS232 header

Pin number	Pin name
1	5VDC
2	RTS
3	5VDC
4	RX
5	GND
6	TX
7	GND
8	CTS
9	GND
10	GND

### 3-10. J24 RS232 header

**Default as console port, baud:115200, data: 8, parity: N, stop: 1**

Pin number	Pin name
1	5VDC
2	RTS
3	5VDC
4	RX
5	GND
6	TX
7	GND

8	CTS
9	GND
10	GND

### 3-11. J25 Expansion header

Pin number	Pin name
1	GND
2	SDA
3	3.3V
4	SCL
5	GPIO_5V1
6	SAM_SHDNB (EIM_A22)
7	GPIO_5V2
8	SAM_SINTB (EIM_A23)
9	GPIO_5V3
10	GPIO_5V4

### 3-12. J1 DC input header 2.54mm

Pin number	Pin name
1	GND
2	DC_VIN
3	DC_VIN
4	GND

### 3-13. J17 WiFi/Bluetooth Antenna 2.4G

Pin number	Pin name
1	RF
2	GND

### 3-14. J16 WiFi/Bluetooth Antenna 5G

Pin number	Pin name
1	RF
2	GND

**3-15. J21 RS232/422/485 DSUB-9 connector**

Pin number	Pin name		
	RS232	RS422	RS485 2w
1	DCD	TX-	DATA-
2	RXD	TX+	DATA+
3	TXD	RX+	
4	DTR	RX-	
5	GND	GND	
6	DSR		
7	RTS		
8	CTS		
9	RI		

**3-16. J13 mPCIE connector**

Pin number	Pin name	Pin number	Pin name
1	RESERVED	2	VCC_3V3
3	RESERVED	4	GND
5	RESERVED	6	RESERVED
7	RESERVED	8	USIM_VDD
9	GND	10	USIM_DATA
11	NC	12	USIM_CLK
13	NC	14	USIM_RST
15	GND	16	RESERVED
17	NC	18	GND
19	NC	20	RESERVED
21	GND	22	3G_RST
23	NC	24	VCC_3V3
25	NC	26	GND
27	GND	28	RESERVED
29	GND	30	NC
31	NC	32	RESERVED
33	mPCIE_RST	34	GND
35	GND	36	USB_DM
37	GND	38	USB_DP
39	VCC_3V3	40	GND
41	VCC_3V3	42	RESERVED
43	GND	44	USB_ID
45	NC	46	NC
47	NC	48	NC
49	NC	50	GND

51	NC	52	VCC_3V3
----	----	----	---------

## 4. Switch settings

### 4-1. SW2 Boot configuration

Pin number	Pin position	
	SD boot	eMMC boot
1	OFF	ON
2	OFF	ON
3	ON	OFF
4	ON	OFF

### 4-2. SW4 RS232/RS422/RS485 settings for J21

Pin 1	Pin 2	Pin 3	Pin 4	Mode
ON	OFF	X	X	RS232
ON	ON	ON	OFF	RS422
ON	ON	ON	ON	RS422 RXD +/- with 120 ohm termination
ON	ON	OFF	OFF	RS485 full duplex
ON	ON	OFF	ON	RS485 full duplex RXD +/- with 120 ohm termination
OFF	ON	OFF	OFF	RS485 half duplex without ECHO
OFF	ON	OFF	ON	RS485 half duplex without ECHO Data +/- with 120 ohm termination