


CRUISE CONTROL SWITCH CIRCUIT

CIRCUIT DESCRIPTION

This circuit carries the SET/COAST, RESUME/ACCEL and CANCEL voltage signals to the ECU.

WIRING DIAGRAM

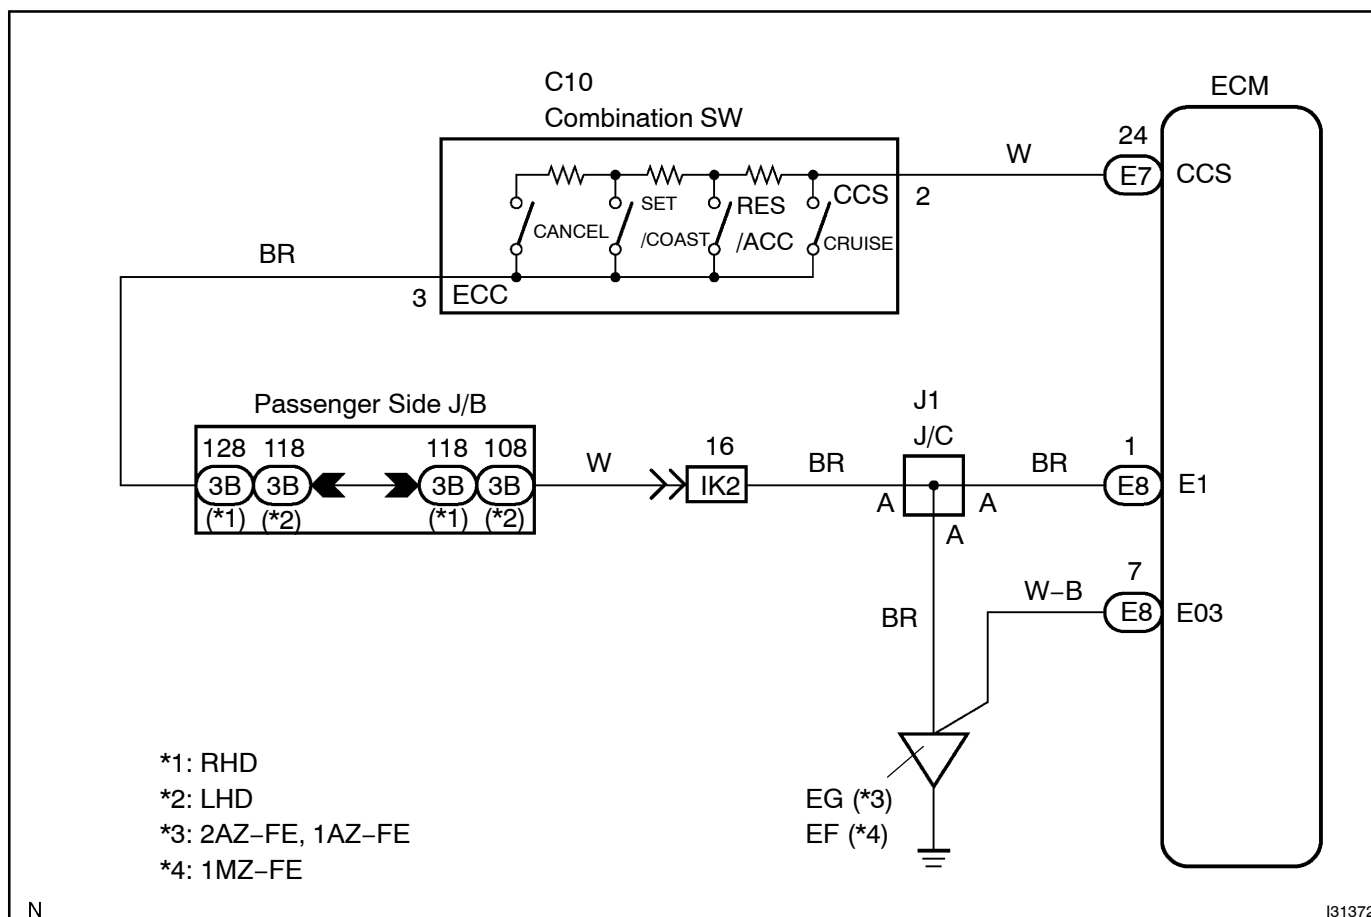

N

I31372

INSPECTION PROCEDURE

1 READ VALUE OF HAND-HELD TESTER

- (a) Connect the hand-held tester to the DLC3.
- (b) Turn the ignition switch ON and push the hand-held tester main SW ON.
- (c) Select the item CANCEL SW, SET/COAST SW, RES/ACC MAIN SW, MAIN SW in the DATA LIST and read its value displayed on the hand-held tester.

OK:


Description	Tester Display	Check Condition
Cruise control switch CANCEL switch ON	CANCEL SW	ON - OFF
Cruise control switch SET/COAST switch ON	SET/COAST SW	ON - OFF
Cruise control switch RES/ACC switch ON	RES/ACC SW	ON - OFF
Cruise main switch (Sub CPU)	MAIN SW (SUB)	ON - OFF
Cruise main switch (Main CPU)	MAIN SW (MAIN)	ON - OFF

OK

PROCEED TO NEXT CIRCUIT INSPECTION
SHOWN ON PROBLEM SYMPTOM TABLE
(See page 05-1298)

NG

2 INSPECT ECM (CCS)

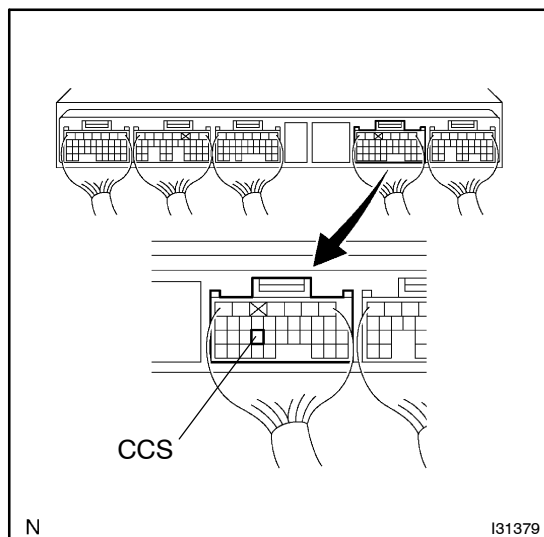

- (a) Remove the ECM with the connector still connected.
- (b) Turn the ignition switch ON.
- (c) Measure voltage between terminals CCS of ECM connector and body ground, when each of the SET/COAST, RESUME/ACCEL and CANCEL is turned ON.


Switch position	Resistance (V)
Neutral	10 - 16 V
RES/ACC	2.3 - 4.5 V
SET/COAST	4.5 - 8.1 V
CANCEL	6.6 - 11.4 V

OK

PROCEED TO NEXT CIRCUIT INSPECTION
SHOWN ON PROBLEM SYMPTOM TABLE
(See page 05-1298)

NG

3 INSPECT CRUISE CONTROL MAIN SWITCH ASSY

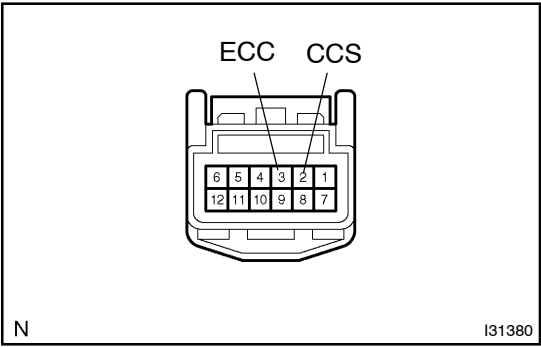

- (a) Remove the steering wheel center pad.
- (b) Disconnect the control switch connector.
- (c) Measure resistance between terminals CCS and ECC of the control switch connector when the control switch is operated.

Switch Position	Resistance (Ω)
Neutral	∞ (No continuity)
CRUISE	0 (Continuity)
RES/ACC	220 - 260
SET/COAST	600 - 660
CANCEL	1,500 - 1,600

NG

REPLACE CRUISE CONTROL MAIN SWITCH ASSY

OK

4 CHECK HARNESS AND CONNECTOR

- (a) Check for open and short circuit in harness and connector between terminal CCS of ECM and terminal CCS of cruise control switch.
- (b) Check for open and short circuit in harness and connector between terminal ECC of cruise control switch and body ground.

NG

REPAIR OR REPLACE HARNESS OR CONNECTOR (See page 01-31)

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN ON PROBLEM SYMPTOM TABLE
(See page 05-1298)