

## DTC B0103/12 SHORT IN D SQUIB CIRCUIT (TO B+)

### CIRCUIT DESCRIPTION

The D squib circuit consists of the airbag sensor assy center, spiral cable sub-assy and horn button assy. It causes the SRS to deploy when the SRS deployment conditions are satisfied.

DTC B0103/12 is recorded when a B+ short is detected in the D squib circuit.


DTC No.	DTC Detecting Condition	Trouble Area
B0103/12	<ul style="list-style-type: none"> <li>• Short circuit in D squib wire harness (to B+)</li> <li>• D squib malfunction</li> <li>• Spiral cable sub-assy malfunction</li> <li>• Airbag sensor assy center malfunction</li> </ul>	<ul style="list-style-type: none"> <li>• Horn button assy (D squib)</li> <li>• Spiral cable sub-assy</li> <li>• Airbag sensor assy center</li> <li>• Instrument panel wire</li> </ul>

### WIRING DIAGRAM

See page 05-771.

### INSPECTION PROCEDURE

#### 1 CHECK D SQUIB CIRCUIT (AIRBAG SENSOR ASSY CENTER - HORN BUTTON ASSY)

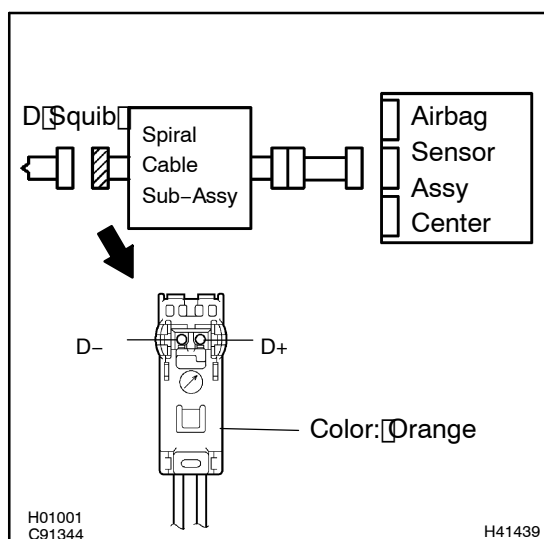

- Disconnect the negative (-) terminal cable from the battery, and wait at least for 90 seconds.
- Disconnect the connectors between the airbag sensor assy center and the horn button assy.
- Connect the negative (-) terminal cable to the battery, and wait at least for 2 seconds.
- Turn the ignition switch to ON.
- For the orange connector (on the spiral cable sub-assy side) between the horn button assy and the spiral cable sub-assy, measure the voltage between D+ and body ground.

**OK:**

**Voltage: Below 1 V**


**NG**

**Go to step 5**

**OK**

## 2 CHECK AIR BAG SENSOR ASSY CENTER

SST 09843-18040

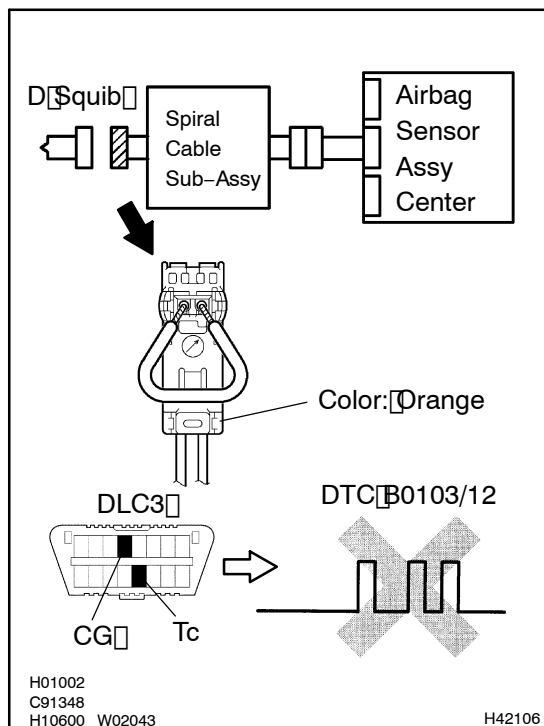

- Turn the Ignition switch to LOCK.
- Disconnect the negative (-) terminal cable from the battery, and wait at least for 90 seconds.
- Connect the connector to the airbag sensor assy center.
- Using a service wire, connect D+ and D- of the orange connector (on the spiral cable sub-assy side) between the horn button assy and the spiral cable sub-assy.
- Connect the negative (-) terminal cable to the battery, and wait at least for 2 seconds.
- Turn the Ignition switch to ON, and wait at least for 20 seconds.
- Clear the DTC stored in memory (See page 05-758).
- Turn the Ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the Ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page 05-758).


**OK:****DTC B0103/12 is not output.****HINT:**

Codes other than code B0103/12 may be output at this time, but they are not relevant to this check.

**NG****REPLACE AIR BAG SENSOR ASSY CENTER****OK**

3 CHECK DISQUIB

SST 09843-18040

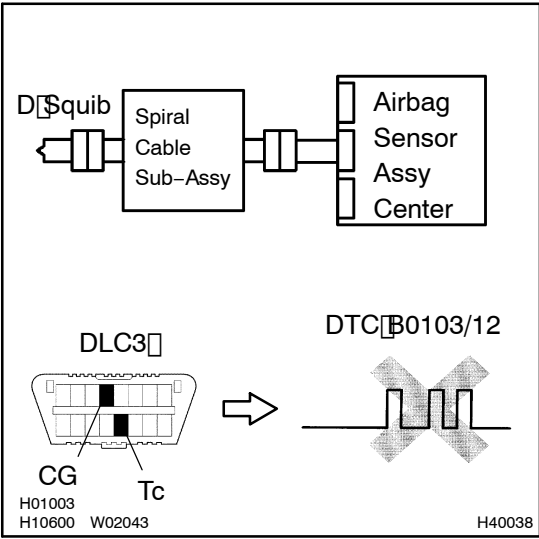

- (a) Turn the Ignition switch to LOCK.
- (b) Disconnect the negative (-) terminal cable from the battery, and wait at least for 90 seconds.
- (c) Connect the horn button Assy connectors.
- (d) Connect the negative (-) terminal cable to the battery, and wait at least for 2 seconds.
- (e) Turn the Ignition switch to ON, and wait at least for 20 seconds.
- (f) Clear the DTC stored in memory (See page 05-758).
- (g) Turn the Ignition switch to LOCK, and wait at least for 20 seconds.
- (h) Turn the Ignition switch to ON, and wait at least for 20 seconds.
- (i) Check the DTC (See page 05-758).

OK:

DTC B0103/12 is not output.

HINT:

Codes other than code B0103/12 may be output at this time, but they are not relevant to this check.

NG

REPLACE HORN BUTTON ASSY

OK

4 USE SIMULATION METHOD TO CHECK


NG

Go to step 1

OK

REPLACE ALL SRS COMPONENTS INCLUDING THE WIRE HARNESS

## 5 CHECK WIRE HARNESS(AIRBAG SENSOR ASSY CENTER - SPIRAL CABLE SUB-ASSY)

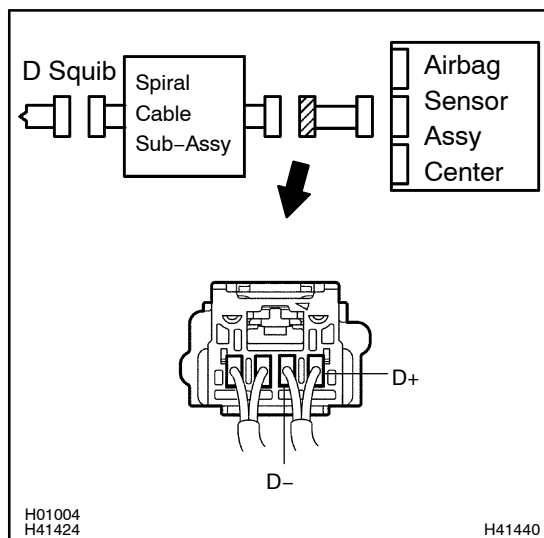

- Turn the ignition switch to LOCK.
- Disconnect the connectors of the instrument panel wire.
- Turn the ignition switch to ON.
- For the connector (on the spiral cable sub-assy side) between the airbag sensor assy center and the spiral cable sub-assy, measure the voltage between D+ and body ground.

**OK:**


**Voltage: Below 1 V**

**NG**

**REPAIR OR REPLACE WIRE HARNESS(AIRBAG SENSOR ASSY CENTER - SPIRAL CABLE SUB-ASSY)**

**OK**

## 6 CHECK SPIRAL CABLE SUB-ASSY

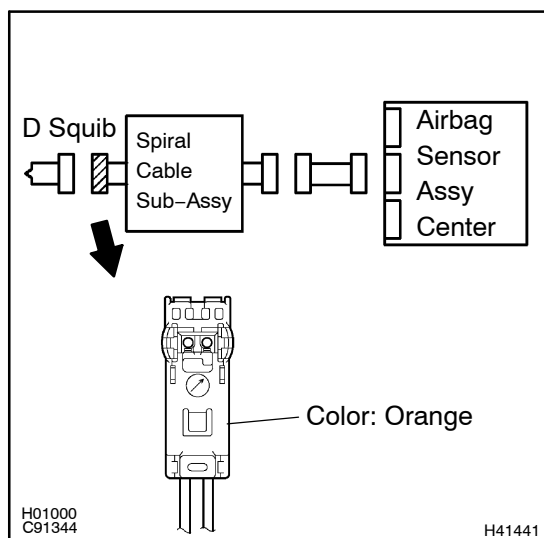

- For the orange connector (on the spiral cable sub-assy side) between the horn button assy and the spiral cable sub-assy, measure the voltage between D+ and body ground.

**OK:**

**Voltage: Below 1 V**

**NG**

**REPLACE SPIRAL CABLE SUB-ASSY**

**OK**

## 7 USE SIMULATION METHOD TO CHECK

**NG**

**Go to step 1**

**OK**

**REPLACE ALL SRS COMPONENTS INCLUDING THE WIRE HARNESS**