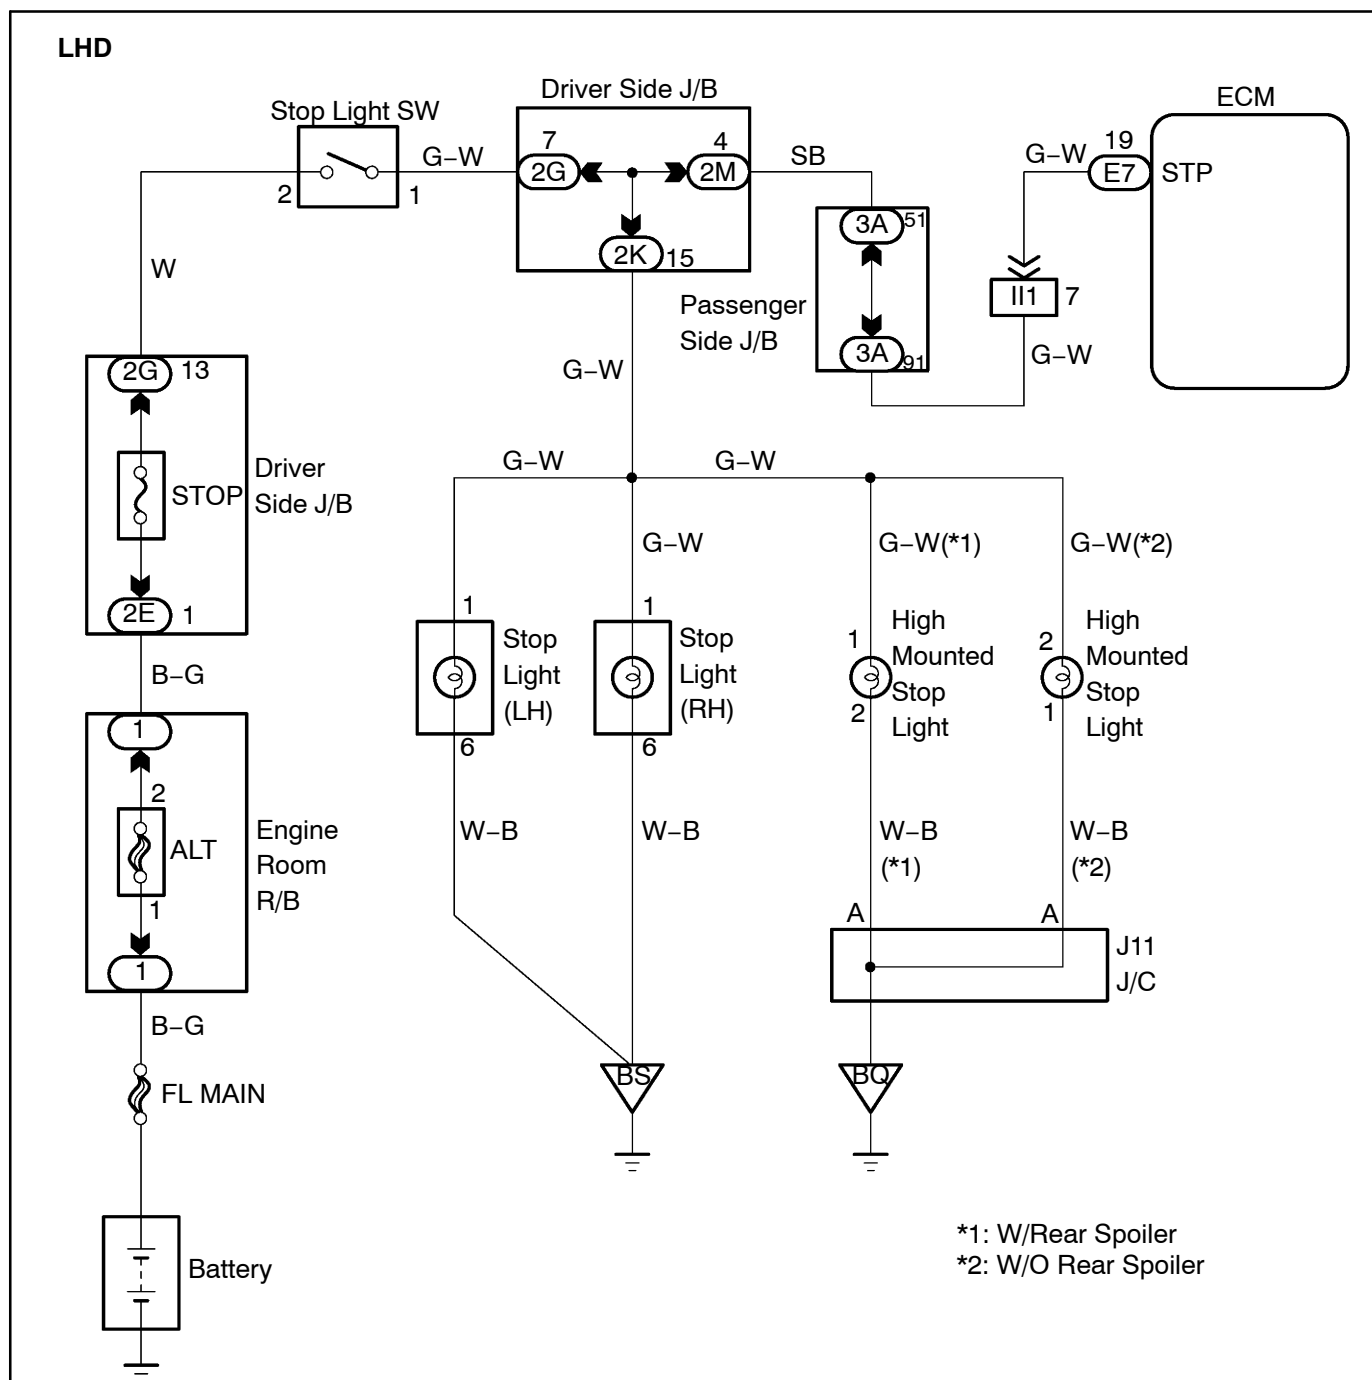



DTC**P1520/51****STOP LIGHT SWITCH CIRCUIT
MALFUNCTION**

This signal is used to detect that the brakes have been applied. The STP signal voltage is the same as the one supplied to the stop lights.

The STP signal is used mainly to control the fuel cut-off engine speed (The fuel cut-off engine speed is reduced slightly when the vehicle is braking.).

DTC No.	DTC Detecting Condition	Trouble Area
P1520/51	Stop light switch does not turn off when repeating driving at 30 km or more and 10 time or more after depressing brake (2 trip detection logic)	<ul style="list-style-type: none"> • Short in stop light switch signal circuit • Stop light switch • ECM

WIRING DIAGRAM

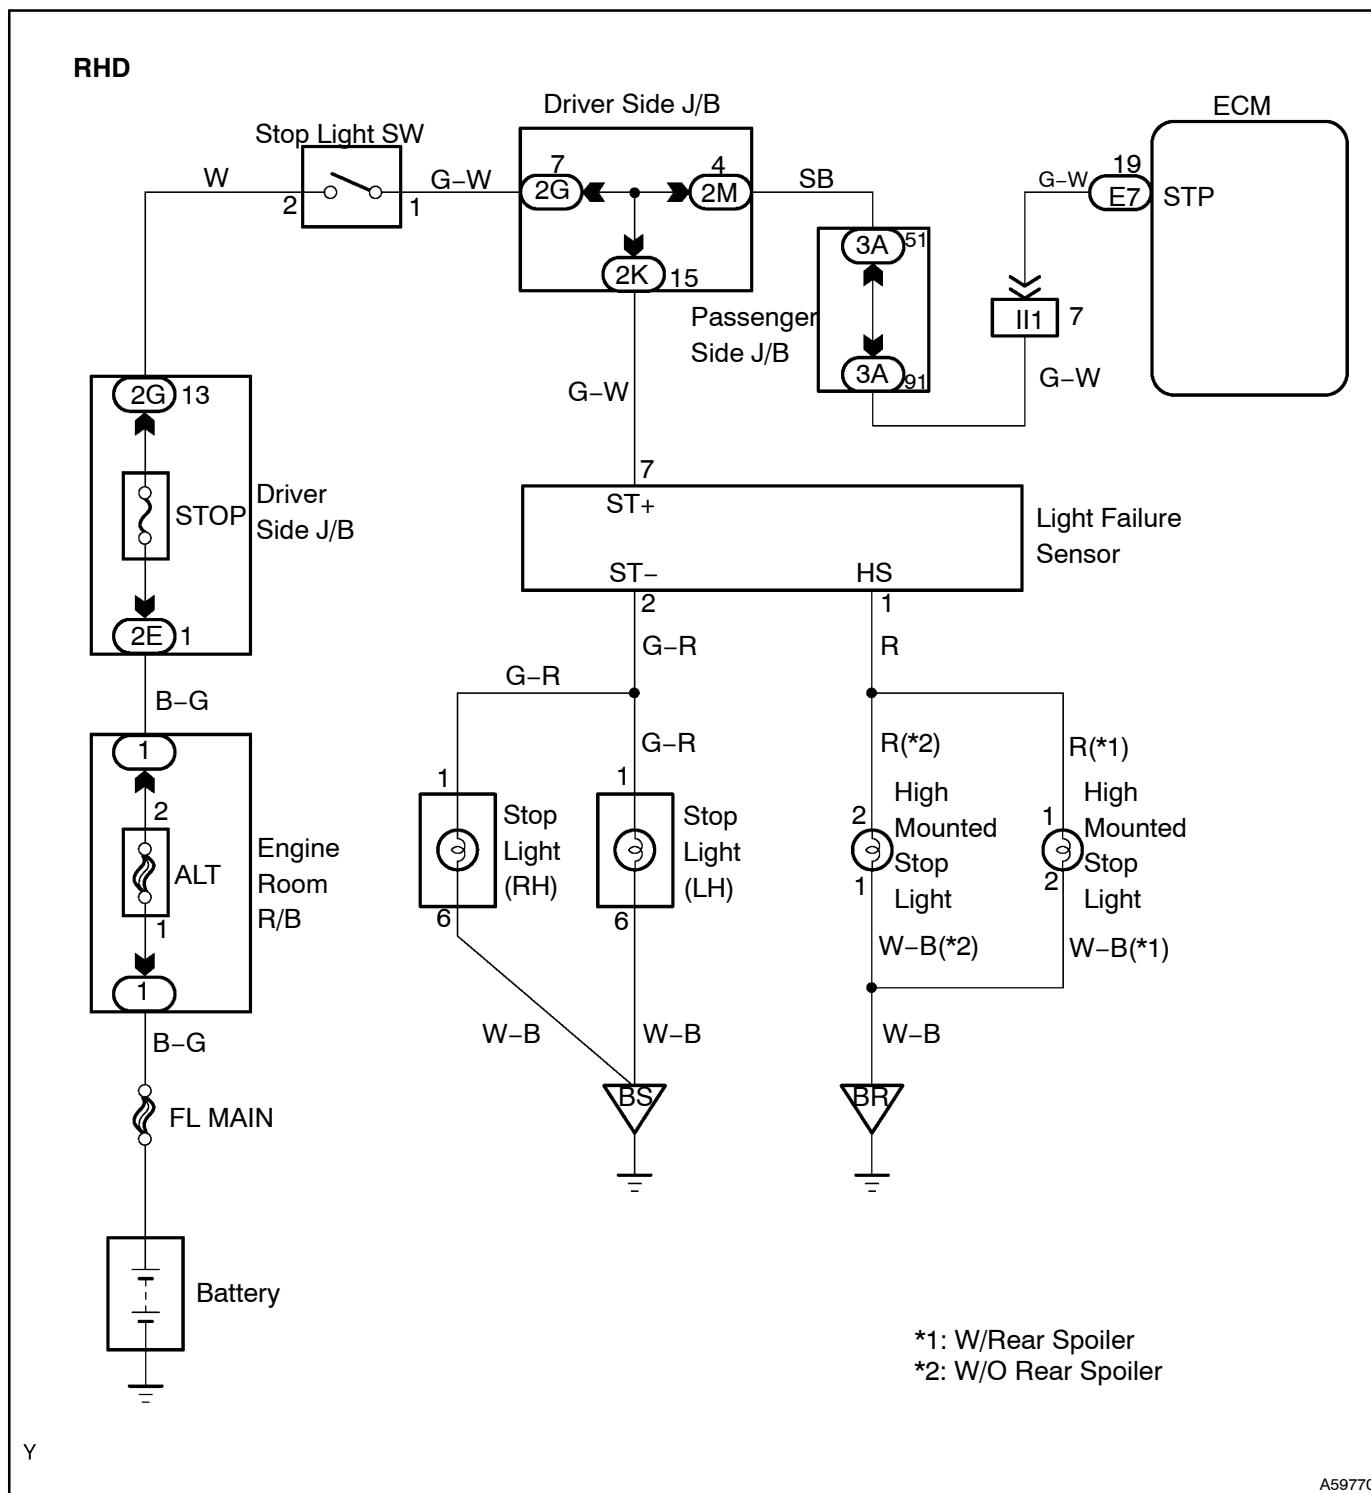

INSPECTION PROCEDURE

HINT:

Read freeze frame data using the hand-held tester, as freeze frame data records the engine conditions when the malfunction is detected. When troubleshooting, it is useful for determining whether the vehicle was running or stopped, the engine was warmed up or not, the air-fuel ratio was lean or rich, etc. at the time of the malfunction.

1 CHECK OPERATION OF STOP LIGHT

Check if the stop lights go on and off normally when the brake pedal is operated and released.

NG

REPAIR OR REPLACE STOP LAMP SWITCH CIRCUIT

OK

2 READ VALUE OF HAND-HELD TESTER

- (a) Connect the hand-held tester to the DLC3.
- (b) Turn the ignition switch ON and push the hand-held tester main switch ON.
- (c) Read the STP signal on the hand-held tester.


Result:

Brake Pedal	STP Signal
Depressed	ON
Released	OFF

OK

CHECK FOR INTERMITTENT PROBLEMS

NG

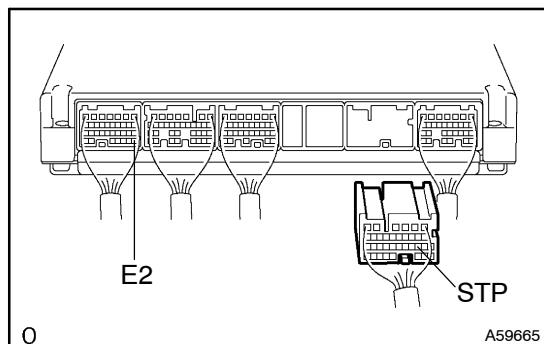
3 CHECK WIRE HARNESS OR CONNECTOR(ECM-STOP LIGHT SWITCH)

- (a) Disconnect the ECM E7 connector.
- (b) Disconnect the stop light switch connector.
- (c) Check for open between the terminals STP of the ECM connector and 1 of the stop light switch connector.

Resistance: 1 Ω or less

- (d) Check for short between the terminals STP of the ECM connector and E2 of the ECM connector.

Resistance: 1 M Ω or more

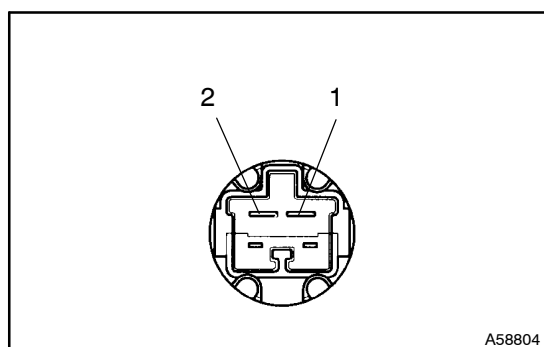

NG

REPAIR OR REPLACE WIRE HARNESS OR CONNECTOR

OK

CHECK AND REPLACE ECM