


VALVE CLEARANCE (2AZ-FE)

ADJUSTMENT


140IG-01

1. REMOVE FRONT WHEEL RH
2. REMOVE FRONT FENDER APRON SEAL RH
3. REMOVE ENGINE COVER SUB-ASSY NO.1
4. REMOVE IGNITION COIL ASSY
5. DISCONNECT VENTILATION HOSE
6. DISCONNECT VENTILATION HOSE NO.2
7. DISCONNECT ENGINE WIRE

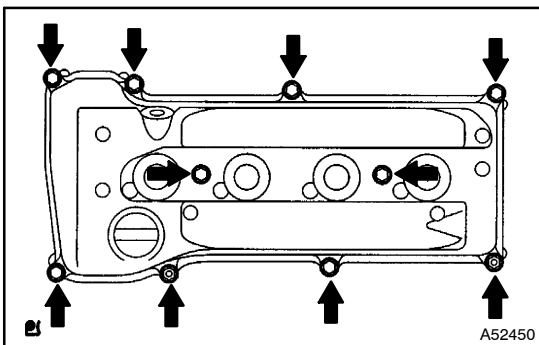

8. REMOVE CYLINDER HEAD COVER SUB-ASSY

- (a) Remove the bolt and disconnect the engine wire harness clamp.
- (b) Remove the 8 bolts, 2 nuts, cylinder head cover and gasket.

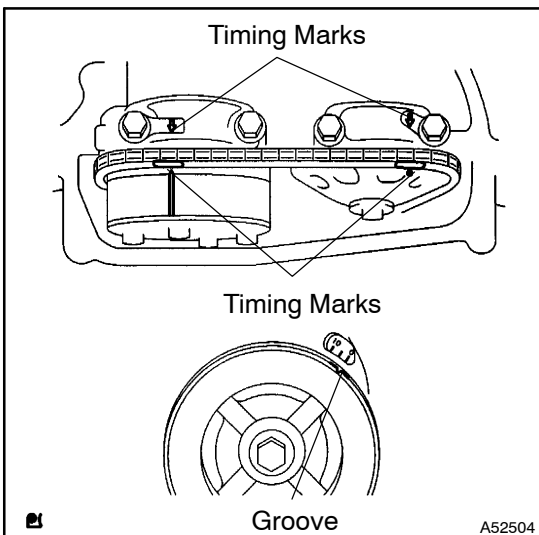


9. SET NO.1 CYLINDER TO TDC/COMPRESSION

- (a) Turn the crankshaft pulley, and align its groove with the timing mark "0" of the timing chain cover.
- (b) Check that the timing marks of the camshaft timing sprockets are aligned with the timing marks of the No.1 bearing cap as shown in the illustration.

10. INSPECT VALVE CLEARANCE**HINT:**

Inspect and adjust the valve clearance when the engine is cold.

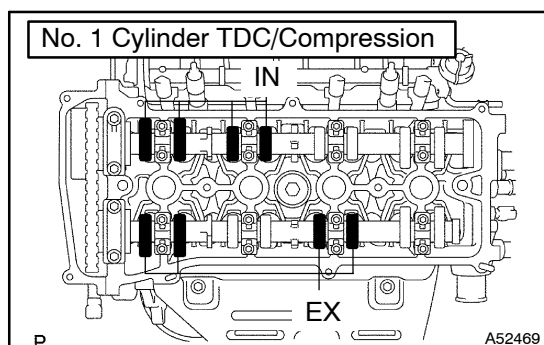


- (a) Check only the valve indicated.
 - (1) Using a feeler gauge, measure the clearance between the valve lifter and camshaft.
 - (2) Record the out-of specification valve clearance measurements. They will be used later to determine the required replacement adjusting shim.

Valve clearance (Cold):

Intake 0.19 – 0.29 mm (0.0075 – 0.0114 in.)

Exhaust 0.30 – 0.40 mm (0.0118 – 0.0157 in.)

- (b) Turn the crankshaft clockwise 1 revolution (360°) and set No.4 cylinder to TDC/compression.

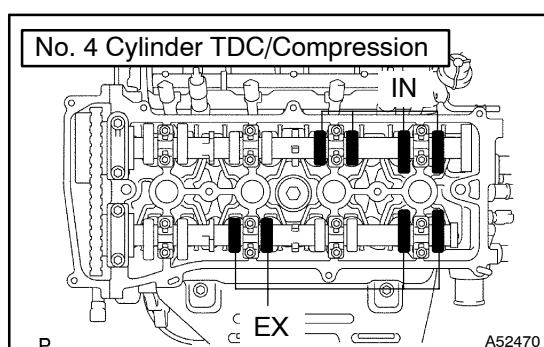


- (c) Check only the valve indicated.
 - (1) Using a feeler gauge, measure the clearance between the valve lifter and camshaft.
 - (2) Record the out-of specification valve clearance measurements. They will be used later to determine the required replacement adjusting shim.

Valve clearance (Cold):


Intake 0.19 – 0.29 mm (0.0075 – 0.0114 in.)

Exhaust 0.30 – 0.40 mm (0.0118 – 0.0157 in.)

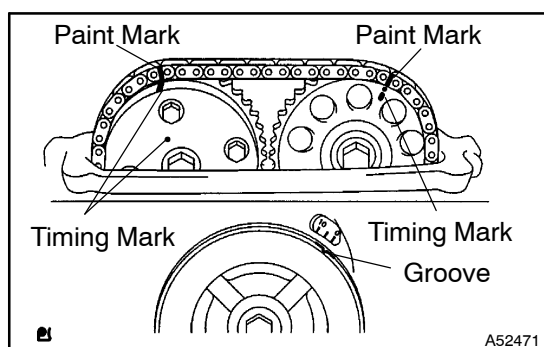**11. ADJUST VALVE CLEARANCE****NOTICE:**

Be sure not to turn the crankshaft without the chain tensioner.


- (a) Turn the crankshaft clockwise 1 revolution (360°) and set the No.1 cylinder to the TDC/compression.
- (b) Place matchmarks on the timing chain and camshaft timing gear.
- (c) Remove the 2 bolts and chain tensioner.

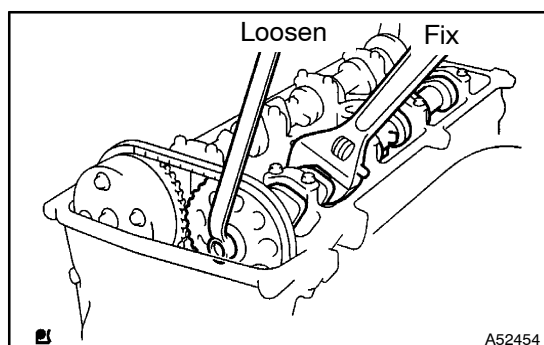


- (d) Fix the camshaft with a spanner and so on, then loosen the camshaft timing gear set bolt.

NOTICE:


Be careful not to damage the valve lifter.

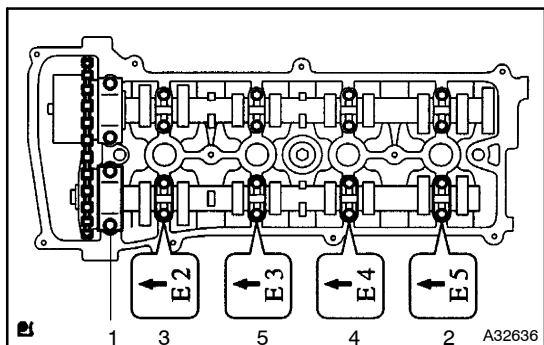


- (e) Loosen the camshaft bearing cap bolts on No.2 camshaft in the sequence shown in the illustration in several passes, and remove the caps.

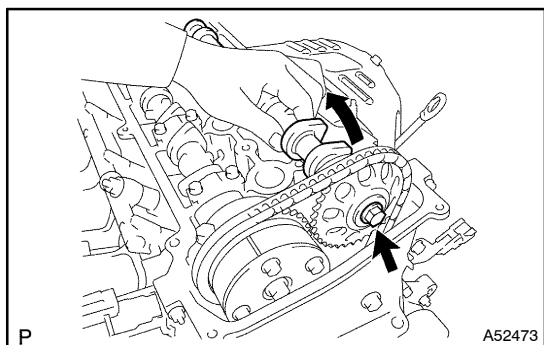


- (f) Raising the camshaft, remove the set bolt.
 (g) Remove the timing chain sprocket from the camshaft with timing chain.
 (h) Remove the timing chain sprocket from the timing chain.

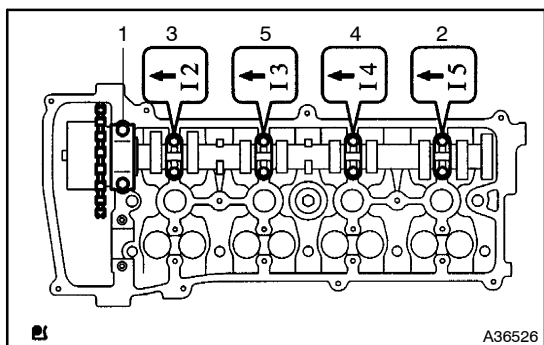

- (i) Loosen the camshaft bearing cap bolts on camshaft in the sequence shown in the illustration in several passes, and remove the caps.
 (j) Remove the intake camshaft.

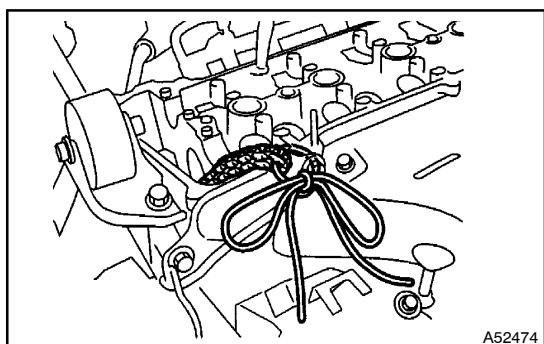

- (k) Tie the timing chain with a string.
NOTICE:
Be careful not to drop anything inside the timing chain cover.
 (l) Remove the valve lifers.

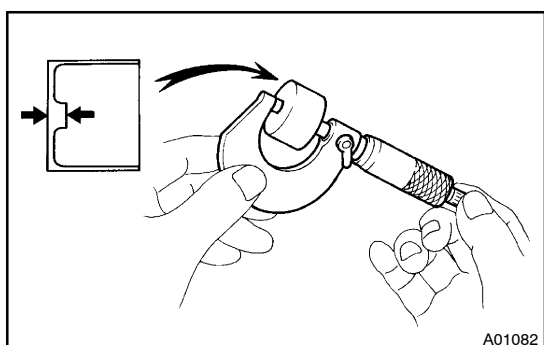

- (m) Using a micrometer, measure the thickness of the removed lifter.

- (n) Calculate the thickness of a new lifter so that the valve clearance comes within the specified value.

A	Thickness of new lifter
B	Thickness of used lifter
C	Measured valve clearance


Valve clearance:

Intake $A = B + (C - 0.24 \text{ mm (0.0094 in.)})$


Exhaust: $A = B + (C - 0.35 \text{ mm (0.0138 in.)})$

HINT:

- Select a new lifter with a thickness as close as possible to the calculated values.
- Lifter are available in 35 sizes in increments of 0.020 mm (0.0008 in.), from 5.060 mm (0.1992 in.) to 5.740 mm (0.2260 in.).

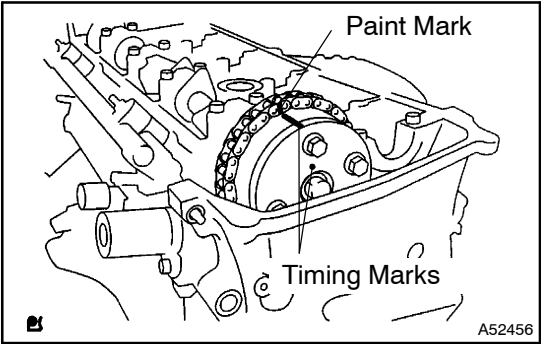

- (o) Install the timing chain on the camshaft timing gear, with the painted links aligned with the timing marks on the camshaft timing sprockets.

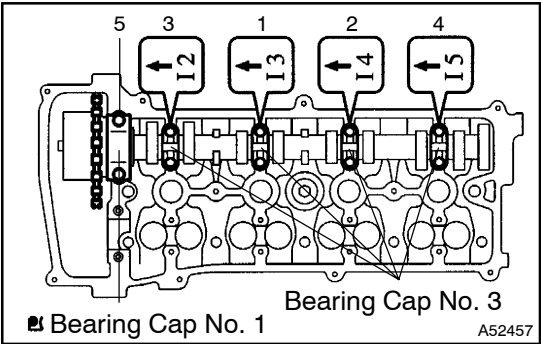


- (p) Examine the front marks and numbers and tighten the bolts in the order shown in the illustration.


Torque:

Bearing cap No. 1 30 N·m (301 kgf·cm, 22 ft·lbf)


Bearing cap No. 3 9.0 N·m (92 kgf·cm, 80 in·lbf)

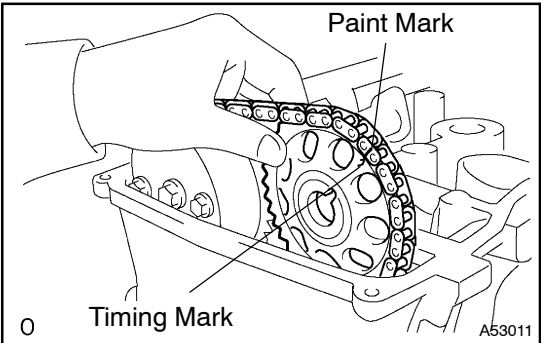

- (q) Put the camshaft No.2 on the cylinder head with the painted links of chain aligned with the timing mark on the camshaft timing sprockets.

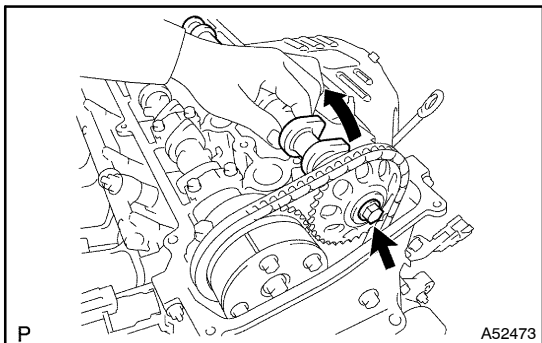

- (r) Raising the camshaft, tighten the set bolt temporarily.

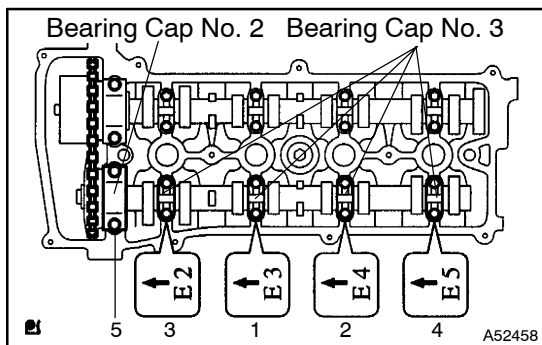


- (s) Examine the from marks and numbers and tighten the bolts in the sequence shown in the illustration.

Torque:

Bearing cap No. 2 30 N·m (301 kgf·cm, 22 ft·lbf)

Bearing cap No. 3 9.0 N·m (92 kgf·cm, 80 in·lbf)

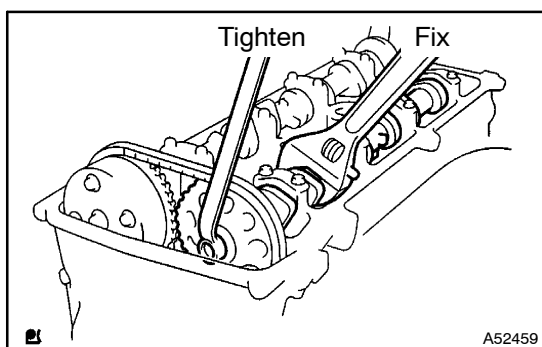


- (t) Fix the camshaft with a spanner and so on, then tighten the camshaft timing gear set bolt.


Torque: 54 N·m (551 kgf·cm, 40 ft·lbf)

NOTICE:


Be careful not to damage the valve lifter.

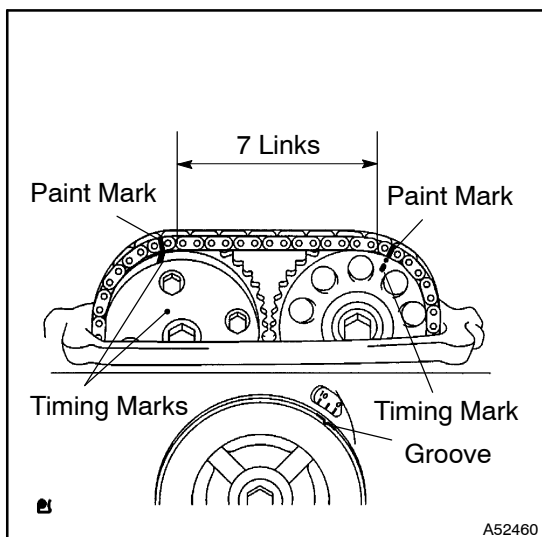

- (u) As shown in the illustration, check the matchmarks on the timing chain and camshaft timing sprockets and the alignment of the pulley groove with timing mark of the chain cover.

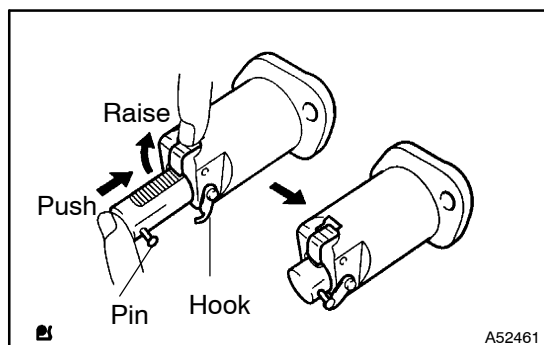

- (v) Install chain tensioner.
- (1) Release the ratchet pawl, fully push in the plunger and apply the hook to the pin so that the plunger cannot spring out.

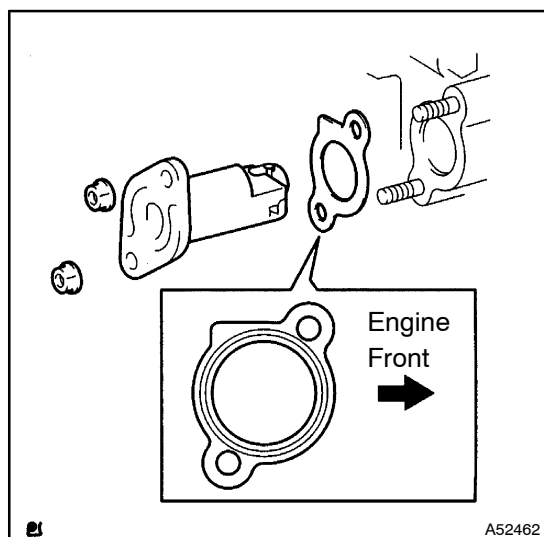


- (2) Install a new gasket and chain tensioner with the 2 nuts.


Torque: 9.0 N·m (92 kgf·cm, 80 in·lbf)

NOTICE:

When installing the tensioner, set the hook again if the hook releases the plunger.

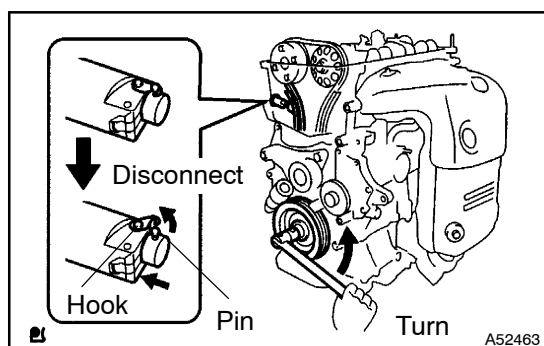


- (3) Turn the crankshaft counterclockwise, and disconnect the plunger knock pin from the hook.

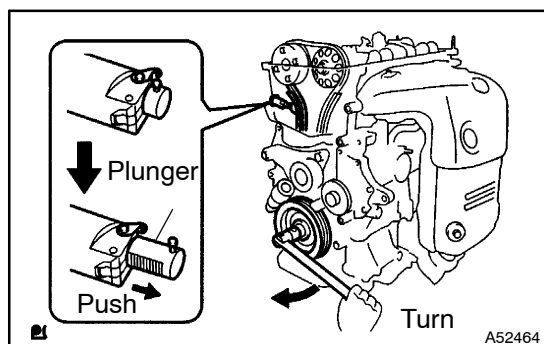

- (4) Turn the crankshaft clockwise, and check that the slipper is pushed by the plunger.

12. INSTALL CYLINDER HEAD COVER SUB-ASSY

- (a) Remove any old packing (FIPG) material.

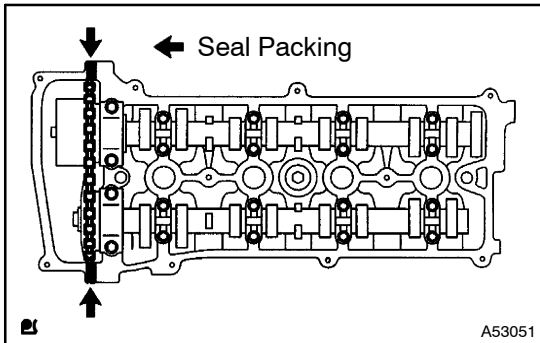


- (b) Apply seal packing to 2 locations as shown in the illustration.

Seal packing: Part No. 08826-00080 or equivalent

NOTICE:

- Remove any oil the contact surface.
- Install the cylinder head cover within 5 minutes after applying seal packing.
- Do not put into engine oil 2 hours after installing.

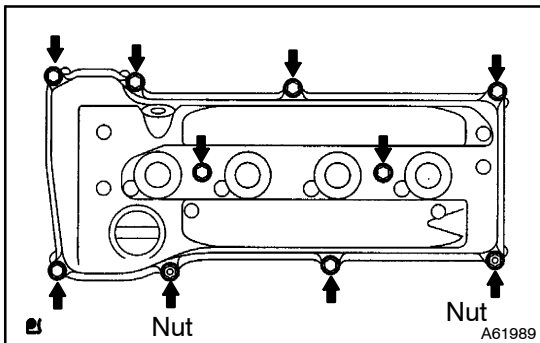

- (c) Install the cylinder head cover with the 8 bolts and 2 nuts.
Torque: 11 N·m (110 kgf·cm, 8 ft·lbf)

13. INSTALL IGNITION COIL ASSY

Torque: 9.0 N·m (92 kgf·cm, 80 in·lbf)

14. INSTALL FRONT WHEEL RH

Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)

15. INSPECT OIL LEAK