

DTCB1181/18OPEN IN D SQUIB (2ND STEP) CIRCUIT

CIRCUIT DESCRIPTION

The D squib (2nd step) circuit consists of the airbag sensor assy center, spiral cable sub-assy and horn button assy.  
It causes the SRS to deploy when the SRS deployment conditions are satisfied.  
DTC B1181/18 is recorded when an open is detected in the D squib (2nd step) circuit.


DTC No.	DTC Detecting Condition	Trouble Area
B1181/18	<ul style="list-style-type: none"><li>• Open circuit in D+ wire harness or D- wire harness of squib</li><li>• D squib (2nd step) malfunction</li><li>• Spiral cable sub-assy malfunction</li><li>• Airbag sensor assy center malfunction</li></ul>	<ul style="list-style-type: none"><li>• Horn button assy (D squib, 2nd step)</li><li>• Spiral cable sub-assy</li><li>• Airbag sensor assy center</li><li>• Instrument panel wire</li></ul>

WIRING DIAGRAM

See page 05-932.

INSPECTION PROCEDURE

1CHECK D SQUIB CIRCUIT (AIRBAG SENSOR ASSY CENTER - HORN BUTTON ASSY)

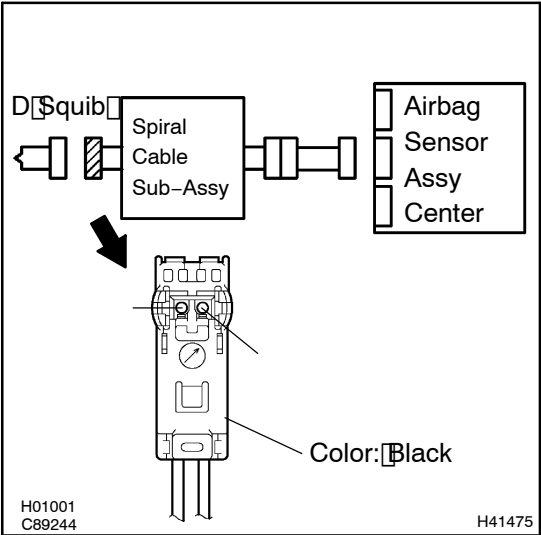


- (a) Disconnect the negative (-) terminal cable from the battery, and wait at least for 90 seconds.
  - (b) Disconnect the connectors between the airbag sensor assy center and the horn button assy.
  - (c) For the black connector (on the spiral cable sub-assy side) between the horn button assy and the spiral cable sub-assy, measure the resistance between D2+ and D2-.
- OK:**  
**Resistance: Below 1 Ω**

NGGo to step 4

OK

## 2 CHECK AIR BAG SENSOR ASSY CENTER

SST 09843-18040

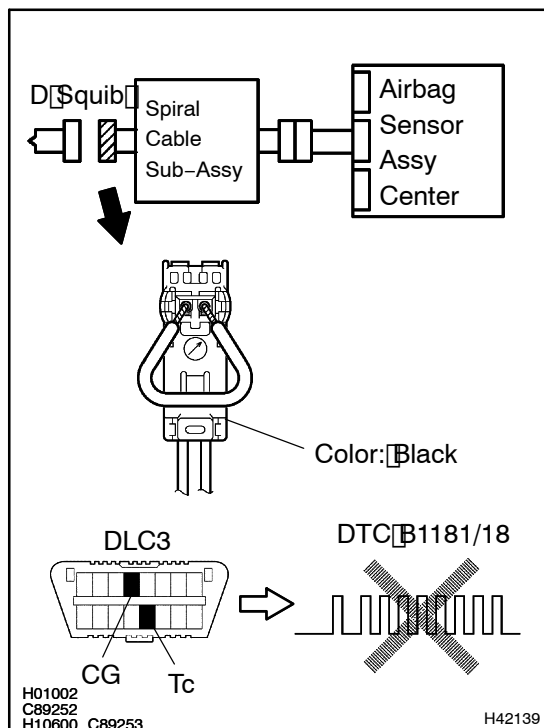

- Connect the connector to the airbag sensor assy center.
- Using a service wire, connect D2+ and D2- of the black connector (on the spiral cable sub-assy side) between the horn button assy and the spiral cable sub-assy.
- Connect the negative (-) terminal cable to the battery, and wait at least for 2 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Clear the DTC stored in memory (See page 05-758).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page 05-758).


**OK:****DTC B1181/18 is not output.****HINT:**

Codes other than code B1181/18 may be output at this time, but they are not relevant to this check.

**NG****REPLACE AIR BAG SENSOR ASSY CENTER****OK**

### 3 CHECK DISQUIB

SST 09843-18040

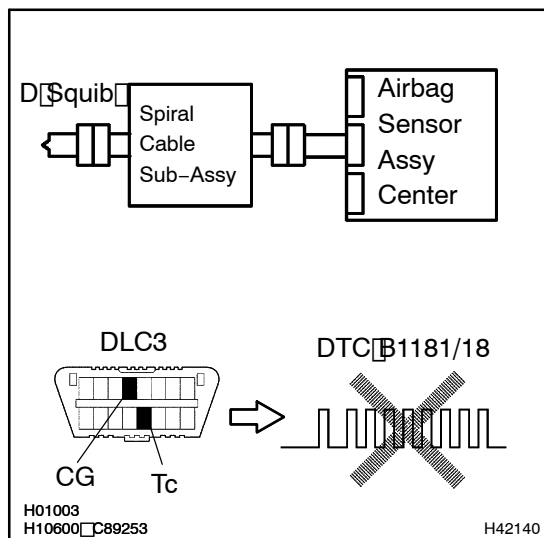


- Turn the ignition switch to LOCK.
- Disconnect the negative (-) terminal cable from the battery, and wait at least for 90 seconds.
- Connect the horn button Assy connectors.
- Connect the negative (-) terminal cable to the battery, and wait at least for 2 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Clear the DTC stored in memory (See page 05-758).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page 05-758).

**OK:****DTC B1181/18 is not output.****HINT:**

Codes other than code B1181/18 may be output at this time, but they are not relevant to this check.

**NG****REPLACE HORN BUTTON ASSY****OK****USE SIMULATION METHOD TO CHECK**

#### 4 CHECK WIRE HARNESS(AIRBAG SENSOR ASSY CENTER - SPIRAL CABLE SUB-ASSY)

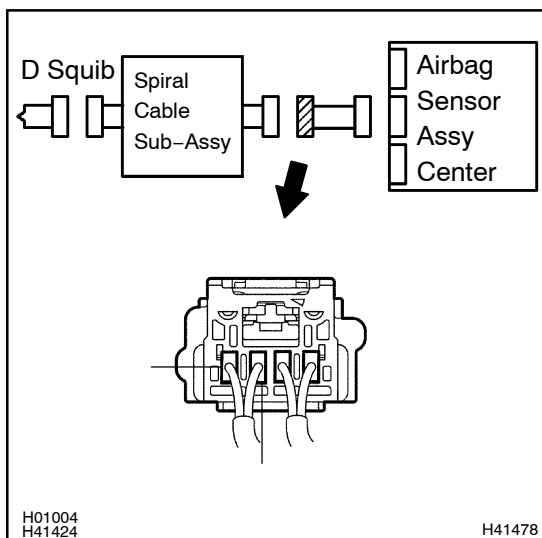

- (a) Disconnect the connector of the instrument panel wire.
- (b) For the connector (on the spiral cable sub-assy side) between the airbag sensor assy center and the spiral cable sub-assy, measure the resistance between D2+ and D2-.

**OK:**


**Resistance: Below 1  $\Omega$**

**NG**

**REPAIR OR REPLACE WIRE HARNESS(AIRBAG SENSOR ASSY CENTER - SPIRAL CABLE SUB-ASSY)**

**OK**

#### 5 CHECK SPIRAL CABLE SUB-ASSY

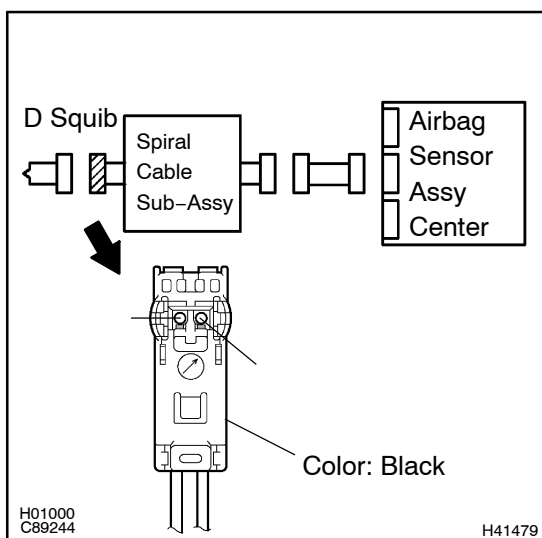

- (a) For the black connector (on the spiral cable sub-assy side) between the horn button assy and the spiral cable sub-assy, measure the resistance between D2+ and D2-.

**OK:**

**Resistance: Below 1  $\Omega$**

**NG**

**REPLACE SPIRAL CABLE SUB-ASSY**

**OK**

**USE SIMULATION METHOD TO CHECK**