


DIAGNOSIS CIRCUIT

CIRCUIT DESCRIPTION


This circuit operates when conducting the DTC check.

WIRING DIAGRAM

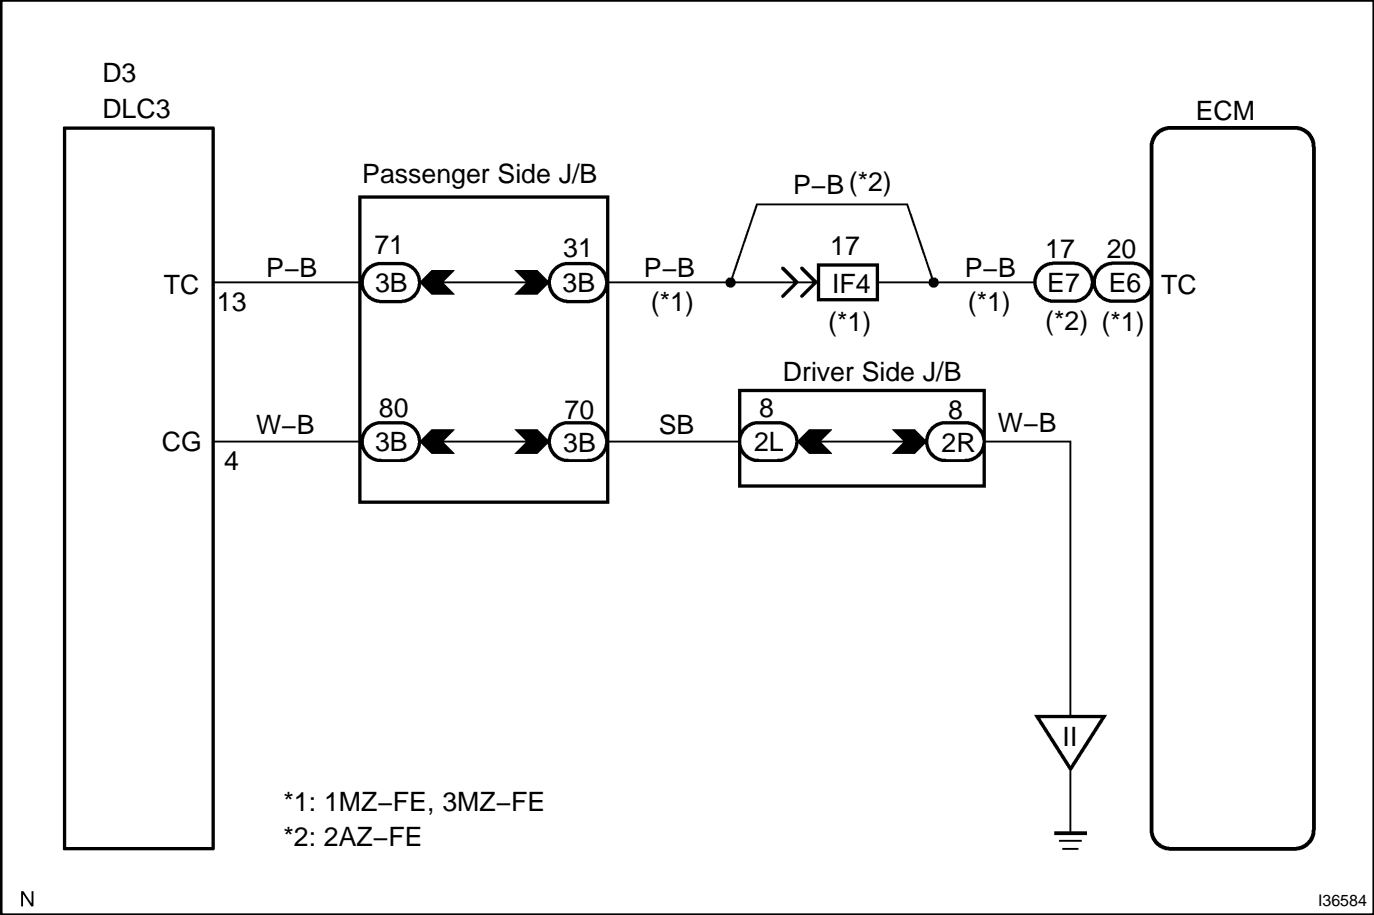

## INSPECTION PROCEDURE

### 1 INSPECT DLC3 TERMINAL VOLTAGE

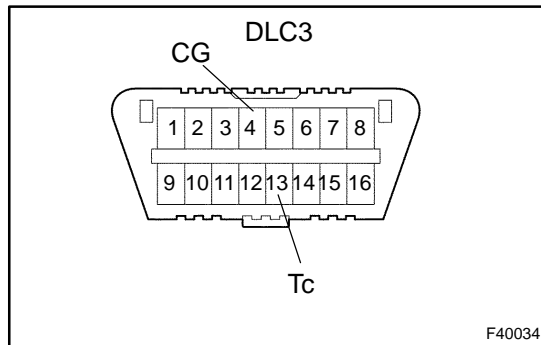

- (a) Turn the ignition switch to ON.
- (b) Measure the voltage between terminal 13 (Tc) and 4 (CG) of DLC3.

**OK:**

**Voltage: 10 – 16 V**

**OK**

**PROCEED TO NEXT CIRCUIT INSPECTION  
SHOWN IN PROBLEM SYMPTOMS TABLE  
(See page 05-2218)**

**NG**

### 2 CHECK HARNESS AND CONNECTOR

- (a) Check for open and short circuit in the harness and the connector between ECM and DLC3 (See page 01-32).
- (b) Check for open and short circuit in the harness and the connector between DLC3 and body ground (See page 01-32).

**NG**

**REPAIR OR REPLACE HARNESS OR  
CONNECTOR**

**OK**

**PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE  
(See page 05-2218)**