


# BRAKE PEDAL SUPPORT ASSY ADJUSTMENT

320DA-01

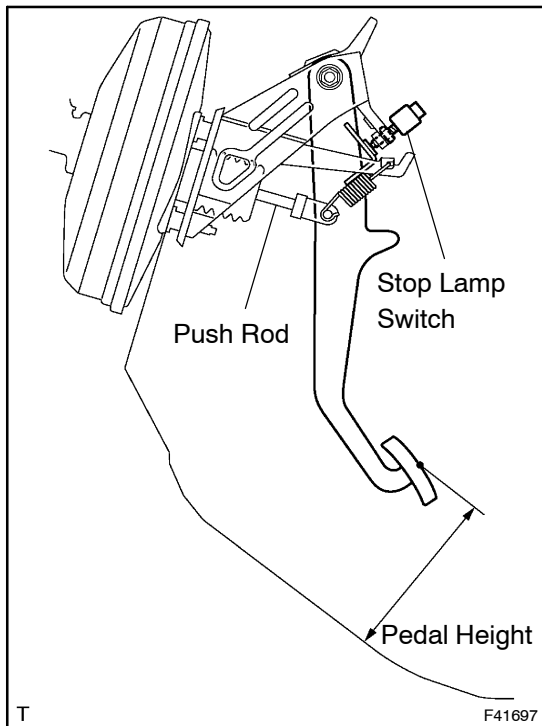

## 1. CHECK AND ADJUST BRAKE PEDAL HEIGHT

- (a) Inspect brake pedal height.

**Pedal height from asphalt sheet:**


**144.1 – 154.1 mm (5.673 – 6.067 in.)**

- (b) Adjust brake pedal height.

- (1) Remove the instrument panel finish panel sub-assy lower.
- (2) Disconnect the connector from the stop lamp switch.
- (3) Loosen the stop lamp switch lock nut and remove the stop lamp switch.
- (4) Loosen the clevis lock nut.
- (5) Adjust the pedal height by turning the pedal push rod.
- (6) Tighten the push rod lock nut.

**Torque: 26 N·m (265 kgf·cm, 19 ft·lbf)**

- (7) Install the stop lamp switch.
- (8) Connect the connector to the stop lamp switch.
- (9) Push the brake pedal in 5 – 10 mm (0.20 – 0.39 in.), turn the stop lamp switch to lock the nut in the position where the stop lamp goes off.
- (10) After installation, push the brake pedal in 5 – 10 mm (0.20 – 0.39 in.), check that stop lamp lights up.
- (11) Install the instrument panel finish panel sub-assy lower.

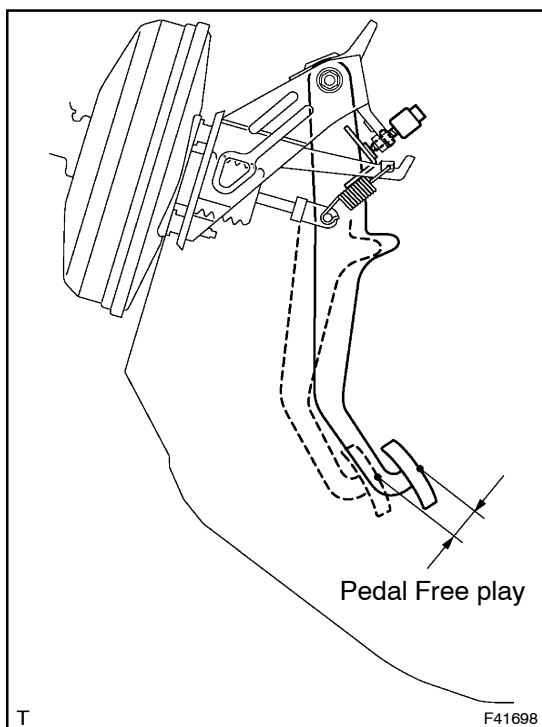

## 2. CHECK PEDAL FREE PLAY

- Stop the engine and depress the brake pedal several times until there is no more vacuum left in the booster.
- Push in the pedal until the beginning of the resistance is felt. Measure the distance, as shown.


**Pedal free play: 1 – 6 mm (0.04 – 0.24 in.)**

If incorrect, check the stop lamp switch clearance.

If the clearance is OK, then troubleshoot the brake system.

**Stop lamp switch clearance:**

**0.5 – 2.5 mm (0.020 – 0.098 in.)**

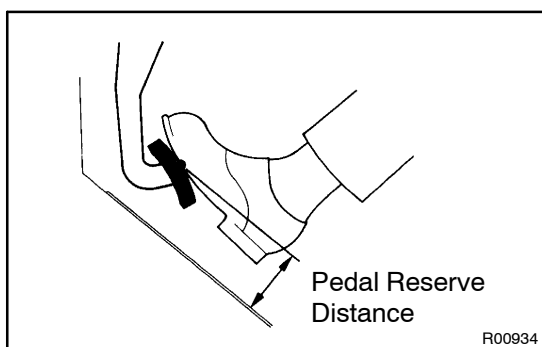

## 3. CHECK PEDAL RESERVE DISTANCE

- Release the parking brake pedal.  
With engine running, depress the pedal and measure the pedal reserve distance, as shown.

**LHD:**

**Pedal reserve distance from asphalt sheet at 490 N (50 kgf, 110.2 lbf): More than 63 mm (2.48 in.)**

**RHD:**

**Pedal reserve distance from asphalt sheet at 490 N (50 kgf, 110.2 lbf): More than 70 mm (2.76 in.)**

If incorrect, troubleshoot the brake system.