




## INSPECTION PROCEDURE

## 1 INSPECT ECM

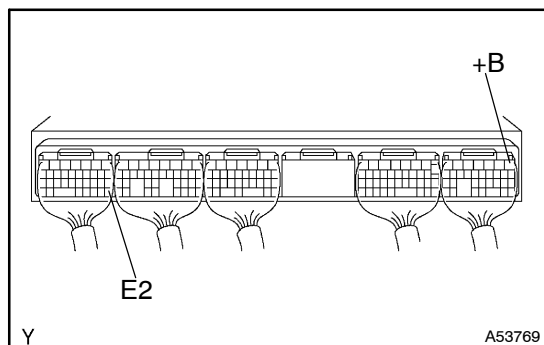

- (a) Turn the ignition switch ON.
- (b) Measure the voltage between terminals +B and E2 of the ECM connectors.


**Voltage: 9 - 14 V**

**OK**

**PROCEED TO NEXT CIRCUIT INSPECTION SHOWN ON PROBLEM SYMPTOMS TABLE**

**NG**

## 2 CHECK HARNESS AND CONNECTOR(E1, E2 - BODY EARTH)

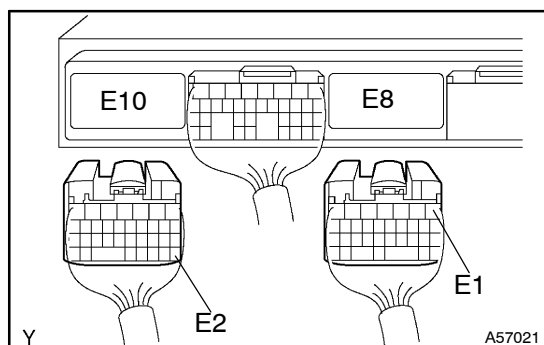

- (a) Disconnect the ECM E10 and E8 connector.
- (b) Check for open between the terminals E1 and E2 of the ECM connector and Body ground.


**Resistance: 1  $\Omega$  or less**

**NG**

**REPAIR OR REPLACE HARNESS AND CONNECTOR**

**OK**

## 3 INSPECT ECM

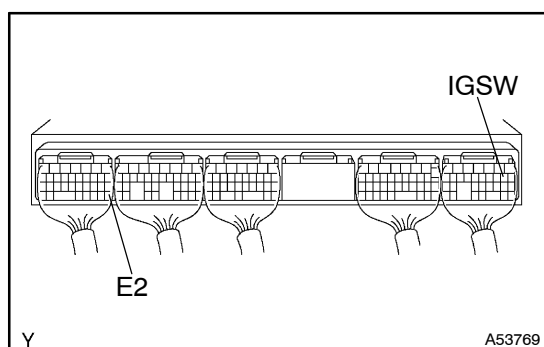


- (a) Turn the ignition switch ON.
- (b) Measure the voltage between terminal IGSW and E2 of the ECM connector.

**Voltage: 9 - 14 V**


**OK**

**Go to step 6**

**NG**

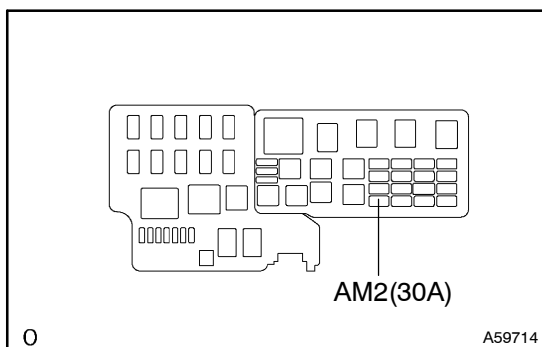
**4 CHECK FUSE(AM2)**

- (a) Remove the AM2 fuse from the engine room J/B.  
 (b) Check the continuity of the AM2 fuse.

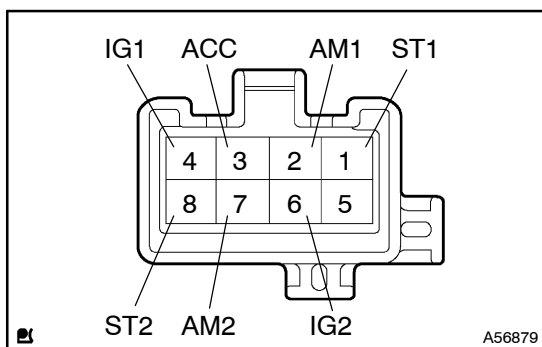**NG****CHECK FOR SHORT IN ALL HARNESS AND COMPONENTS CONNECTED AM2 FUSE****OK****5 CHECK IGNITION OR STARTER SWITCH ASSY**

- (a) Check continuity between the connector terminals shown in the chart below.

Switch	Terminal No.	Resistance
LOCK	All Terminal to Terminal	1MΩ or more
ACC	2⇔3	1Ω or less
ON	2⇔3⇔4 6⇔7	1Ω or less
START	1⇔2⇔4 6⇔7⇔8	1Ω or less

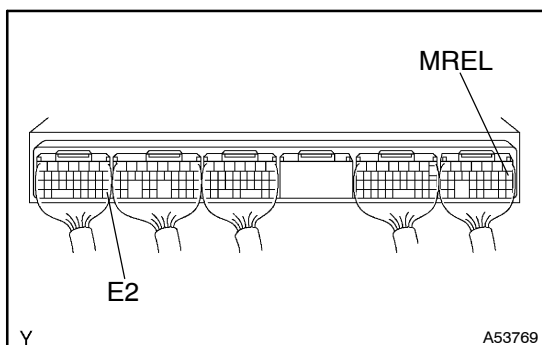**NG****REPLACE IGNITION OR STARTER SWITCH ASSY****OK****REPAIR OR REPLACE HARNESS AND CONNECTOR****6 INSPECT ECM**

- (a) Turn the ignition switch ON.  
 (b) Measure the voltage between terminal MREL and E2 of the ECM connector.

**Voltage: 9 - 14 V****NG****CHECK AND REPLACE ECM****OK****7 CHECK FUSE(E.F.I.)**

NG

CHECK FOR SHORT IN ALL HARNESS AND COMPONENTS CONNECTED EFI FUSE

OK

8 CHECK E.F.I ECU RELAY (See page 10-14)

NG

REPLACE E.F.I ECU RELAY

OK

9 CHECK HARNESS AND CONNECTOR (MREL - E2)

NG

REPAIR OR REPLACE HARNESS AND CONNECTOR

OK

REPAIR OR REPLACE HARNESS AND CONNECTOR