


ON-VEHICLE INSPECTION

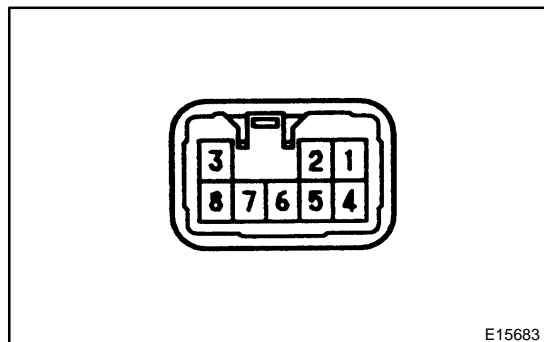

1. INSPECT TURN SIGNAL FLASHER CIRCUIT

- (a) Measure voltage between terminal as shown in the chart below.

Tester connection	Condition	Specified condition
7 – Ground	Constant	Continuity
1 – Ground	Turn igniton switch ON	Battery positive voltage
1 – Ground	Turn igniton switch OFF	No voltage
4 – Ground	Constant	Battery positive voltage

- (b) Connect the connector to turn signal flasher and inspect the wire harness side connector from the back side as shown in the chart below.

Tester connection	Condition	Specified condition
2 – Ground	Hazard switch OFF → ON	0V → 10 – 14 V (60 to 120 time per minutes)
2 – Ground	Turn signal switch (right turn) OFF → ON	0V → 10 – 14 V (60 to 120 time per minutes)
3 – Ground	Hazard switch OFF → ON	0V → 10 – 14 V (60 to 120 time per minutes)
3 – Ground	Turn signal switch (left turn) OFF → ON	0V → 10 – 14 V (60 to 120 time per minutes)
5 – Ground	Turn signal switch (left turn) OFF → ON	10 – 14 V → 0 V
6 – Ground	Turn signal switch (right turn) OFF → ON	10 – 14 V → 0 V
8 – Ground	Hazard switch OFF → ON	10 – 14 V → 0 V