

DTC B0102/11 SHORT IN D SQUIB CIRCUIT (TO GROUND)

CIRCUIT DESCRIPTION

The D squib circuit consists of the Airbag sensor Assy center, Spiral cable sub-assy and Horn button Assy. It causes the SRS to deploy when the SRS deployment conditions are satisfied.

DTC B0102/11 is recorded when a ground short is detected in the D squib circuit.


DTC No.	DTC Detecting Condition	Trouble Area
B0102/11	<ul style="list-style-type: none"> • Short circuit in D squib wire harness (to ground) • D squib malfunction • Spiral cable sub-assy malfunction • Airbag sensor Assy center malfunction 	<ul style="list-style-type: none"> • Horn button Assy (D squib) • Spiral cable sub-assy • Airbag sensor Assy center • Instrument panel wire

WIRING DIAGRAM

See page 05-771.

INSPECTION PROCEDURE

1 CHECK D SQUIB CIRCUIT (AIRBAG SENSOR ASSY CENTER - HORN BUTTON ASSY)

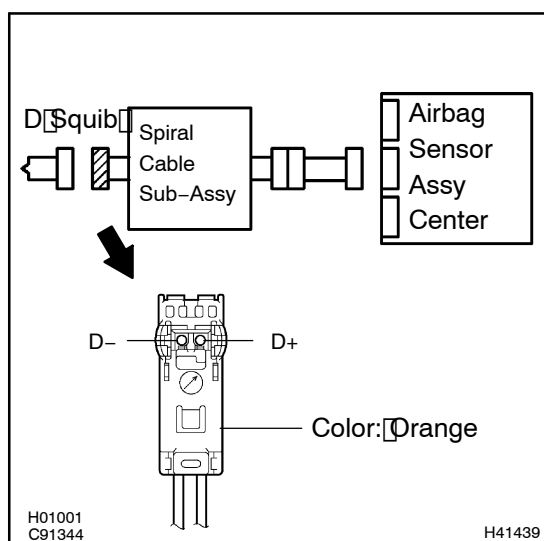

- Disconnect the negative (-) terminal cable from the battery, and wait at least for 90 seconds.
- Disconnect the connectors between the Airbag sensor Assy center and the Horn button Assy.
- For the orange connector (on the spiral cable sub-assy side) between the Horn button Assy and the spiral cable sub-assy, measure the resistance between D+ and body ground.

OK:

Resistance: 1 MΩ or Higher


NG

Go to step 5

OK

2 CHECK AIR BAG SENSOR ASSY CENTER

SST 09843-18040

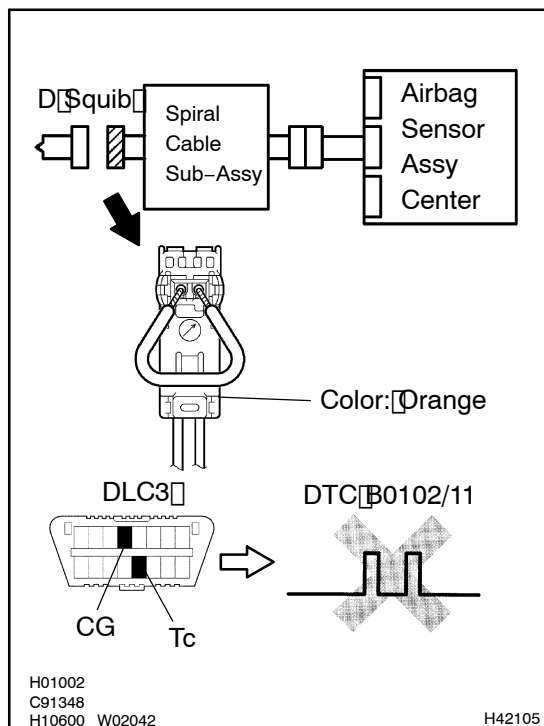

- Connect the connector to the airbag sensor assy center.
- Using a service wire, connect D+ and D- of the orange connector (on the spiral cable sub-assy side) between the horn button assy and the spiral cable sub-assy.
- Connect the negative (-) terminal cable to the battery, and wait at least for 2 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Clear the DTC stored in memory (See page 05-758).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page 05-758).


OK:**DTC B0102/11 is not output.****HINT:**

Codes other than code B0102/11 may be output at this time, but they are not relevant to this check.

NG**REPLACE AIR BAG SENSOR ASSY CENTER****OK**

3 CHECK DISQUIB

SST 09843-18040

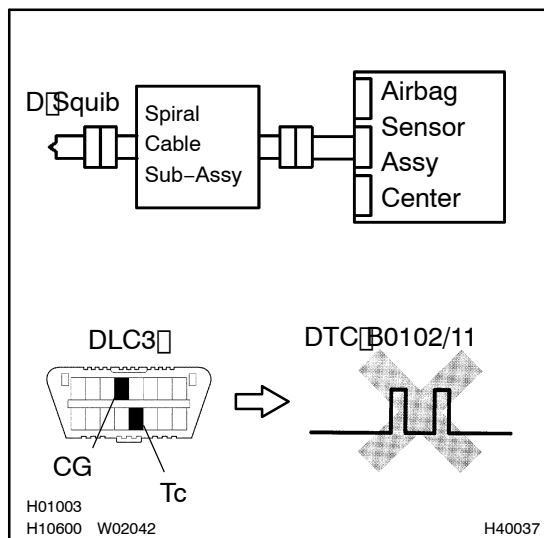

- Turn the Ignition switch to LOCK.
- Disconnect the negative (-) terminal cable from the battery, and wait at least for 90 seconds.
- Connect the horn button assy connectors.
- Connect the negative (-) terminal cable to the battery, and wait at least for 2 seconds.
- Turn the Ignition switch to ON, and wait at least for 20 seconds.
- Clear the DTC stored in memory (See page 05-758).
- Turn the Ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the Ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page 05-758).

OK:**DTC B0102/11 is not output.****HINT:**


Codes other than code B0102/11 may be output at this time, but they are not relevant to this check.

NG**REPLACE HORN BUTTON ASSY****OK**

4 USE SIMULATION METHOD TO CHECK

NG**Go to step 1****OK****REPLACE ALL SRS COMPONENTS INCLUDING THE WIRE HARNESS**

5 CHECK WIRE HARNESS(AIRBAG SENSOR ASSY CENTER - SPIRAL CABLE SUB-ASSY)

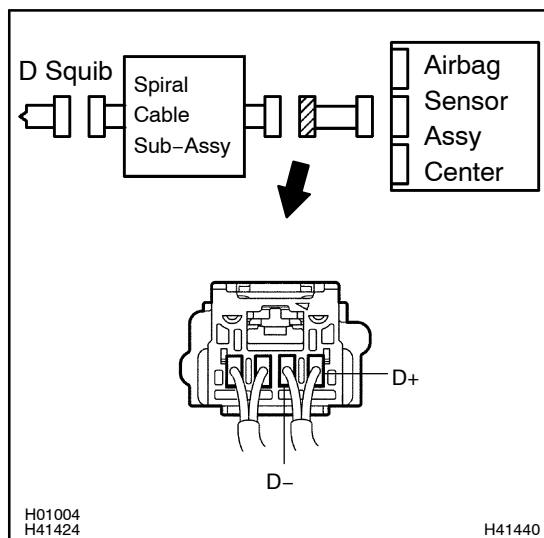

- (a) Disconnect the connectors of the instrument panel wire.
- (b) For the connector (on the spiral cable sub-assy side) between the airbag sensor assy center and the spiral cable sub-assy, measure the resistance between D+ and body ground.

OK:


Resistance: 1 MΩ or Higher

NG

REPAIR OR REPLACE WIRE HARNESS(AIRBAG SENSOR ASSY CENTER - SPIRAL CABLE SUB-ASSY)

OK

6 CHECK SPIRAL CABLE SUB-ASSY

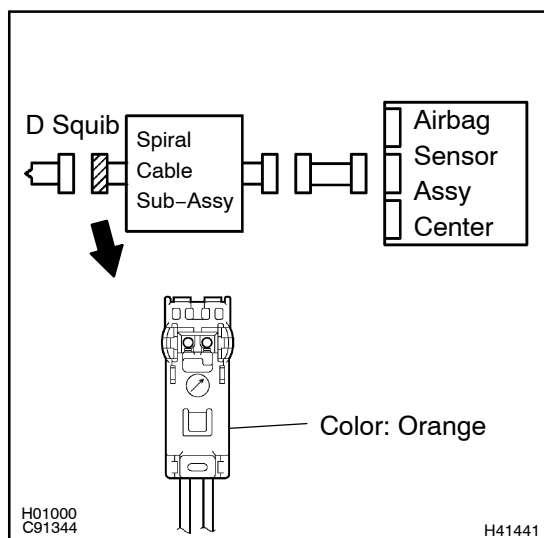

- (a) For the orange connector (on the spiral cable sub-assy side) between the horn button assy and the spiral cable sub-assy, measure the resistance between D+ and body ground.

OK:

Resistance: 1 MΩ or Higher

NG

REPLACE SPIRAL CABLE SUB-ASSY

OK

7 USE SIMULATION METHOD TO CHECK

NG

Go to step 1

OK

REPLACE ALL SRS COMPONENTS INCLUDING THE WIRE HARNESS