


ON-VEHICLE INSPECTION

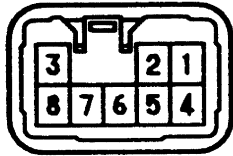

E15683

1. INSPECT TURN SIGNAL FLASHER CIRCUIT

- (a) Measure voltage between terminals as shown in the chart below.

Tester connection	Condition	Specified condition
7 - Ground	Constant	Continuity
1 - Ground	Turn ignition switch ON	Battery positive voltage
1 - Ground	Turn ignition switch OFF	No voltage
4 - Ground	Constant	Battery positive voltage

- (b) Connect the connector to turn signal flasher and inspect the wire harness side connector from the back side as shown in the chart.

Tester connection	Condition	Specified condition
2 - Ground	Hazard switch OFF → ON	0 V → 10 - 14 V (60 to 120 time per minutes)
2 - Ground	Turn signal switch (right turn) OFF → ON	0 V → 10 - 14 V (60 to 120 time per minutes)
3 - Ground	Hazard switch OFF → ON	0 V → 10 - 14 V (60 to 120 time per minutes)
3 - Ground	Turn signal switch (left turn) OFF → ON	0 V → 10 - 14 V (60 to 120 time per minutes)
5 - Ground	Turn signal switch (left turn) OFF → ON	10 - 14 V → 0 V
6 - Ground	Turn signal switch (right turn) OFF → ON	10 - 14 V → 0 V
8 - Ground	Hazard switch OFF → ON	10 - 14 V → 0 V