

RADIO BROADCAST CANNOT BE RECEIVED (BAD RECEPTION)

INSPECTION PROCEDURE

1 CHECK IF RADIO AUTO-SEARCH FUNCTIONS PROPERLY

- (a) Check if the radio auto-search functions properly.
- (1) Perform the auto-search of the radio and check that it functions normally.
- Standard: The radio auto-search functions properly.**

OK

CHECK AND REPLACE RADIO RECEIVER ASSY

NG

2 CHECK OPTIONAL COMPONENT

- (a) Check optional component (Sun shade film, telephone antenna etc.).
- (1) Check whether or not any optional component is installed, such as the sunshade film and the telephone antenna, is installed.
- Standard: Optional component is installed.**

OK

EFFECT FROM OPTIONAL COMPONENT

NG

3 CHECK ANTENNA FOR NOISE PRODUCTION

- (a) Noise Check with Antenna
- (1) With the ignition switch in ACC, turn on the radio and choose the AM mode.
- (2) Place a tip of a screwdriver or the antenna of the antenna assembly w/ holder and check that the noise heard from the speaker.
- Standard: Noise occurs.**

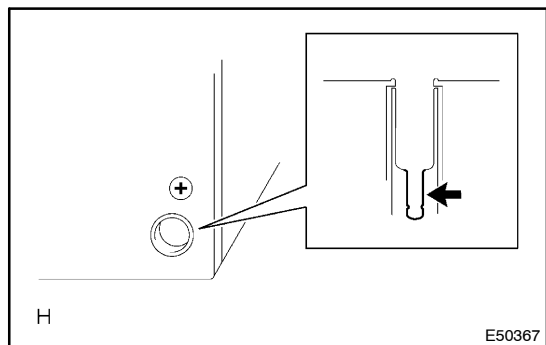
OK

CHECK AND REPLACE RADIO RECEIVER ASSY

NG

4 INSPECT RADIO RECEIVER ASSY

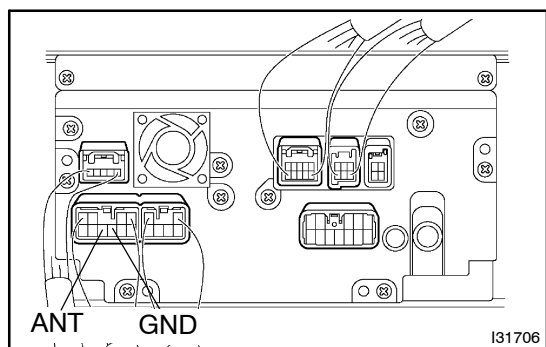
- (a) Preparation for Check
 - (1) Remove the antenna plug of the radio receiver assembly.
- (b) Noise Check
 - (1) With the radio receiver assembly connector connected, turn the ignition switch to ACC.
 - (2) Turn on the radio and choose the AM mode.
 - (3) Place a flat-head screwdriver or a metal such as a thin wire on the antenna jack of the radio receiver assembly and check that the noise heard from the speaker.

Standard: Noise occurs.**NG****CHECK AND REPLACE RADIO RECEIVER ASSY****OK****5 INSPECT RADIO RECEIVER ASSY(ANT)**

- (a) Remove the radio receiver assy with connectors with still connected.
- (b) Check voltage.
 - (1) Measure voltage between terminals ANT and GND of radio receiver assy at each conditions, as shown in the chart.

Standard:

Terminal	Condition	Voltage (v)
ANT ↔ GND	Constant	10 - 14 V

NG**CHECK AND REPLACE RADIO RECEIVER ASSY****OK****REPLACE W/HOLDER ANTENNA ASSY**