


| | | |
|-----|----|--------------------------------------|
| DTC | 21 | SOLAR SENSOR CIRCUIT(PASSENGER SIDE) |
|-----|----|--------------------------------------|


CIRCUIT DESCRIPTION

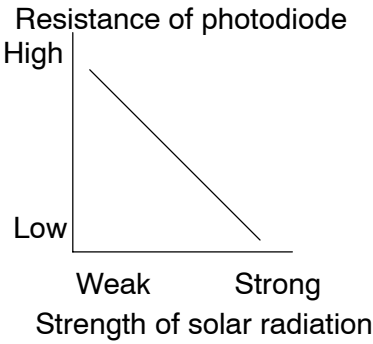

A photo diode in the solar sensor detects solar radiation and sends signals to the A/C amplifier.


| DTC No. | Detection Item | Trouble Area |
|---------|--|--|
| 21 | Open or short in solar sensor circuit. (Please note that display of DTC 21 is not abnormal when the sensor is not receiving solar radiation.) | <ul style="list-style-type: none">• Solar sensor• Harness or connector between solar sensor and A/C amplifier• A/C amplifier |

WIRING DIAGRAM

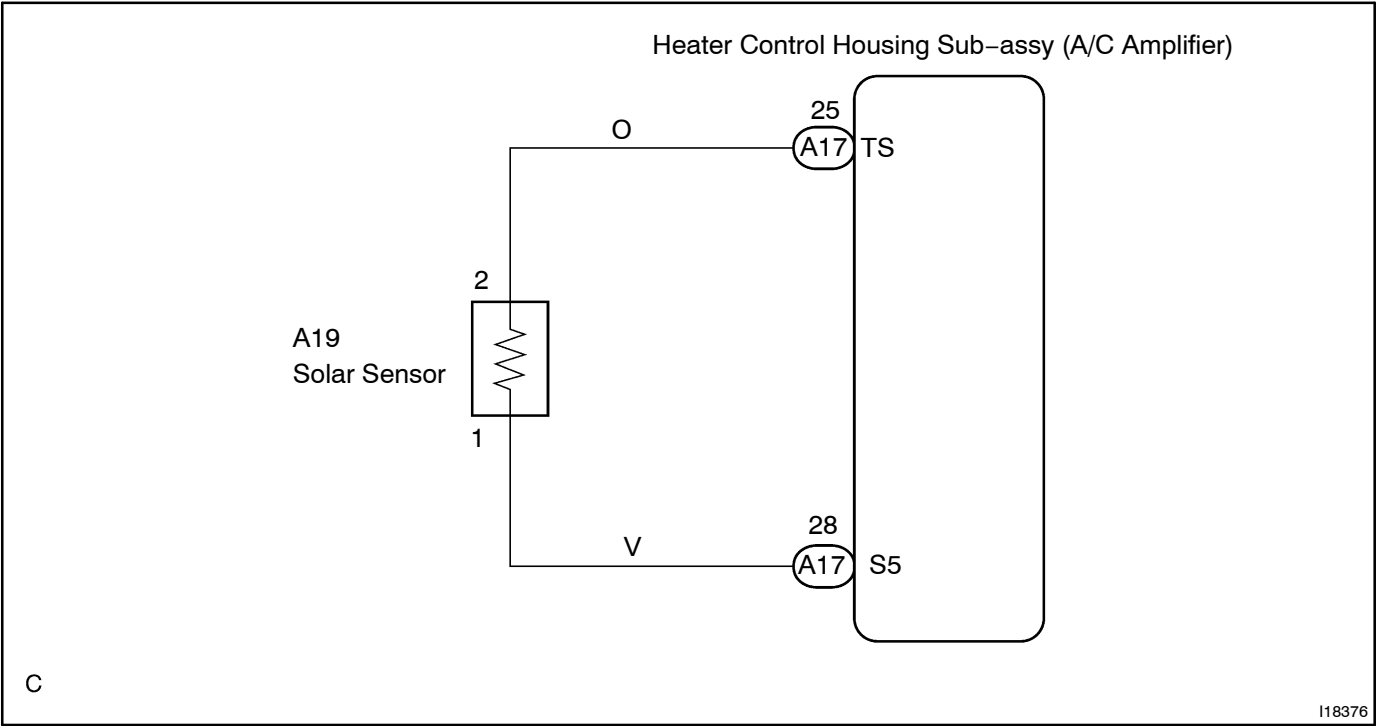

INSPECTION PROCEDURE

1 INSPECT HEATER CONTROL HOUSING SUB-ASSY(TS, S5)

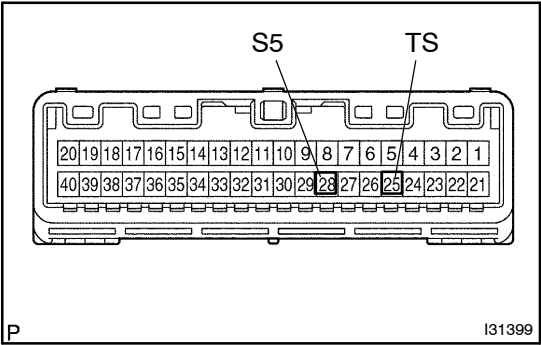

- (a) Remove A/C amplifier with connectors still connected.
- (b) Turn ignition switch ON.
- (c) Measure voltage between terminals S5 and TS of A/C amplifier connector when the solar sensor is subject to an electric light, and when the sensor is covered by a cloth.

Voltage:

Sensor subject to electric light: 0.8 - 3.3 V

Sensor is covered by a cloth: Below 0.8 V

HINT:


As the inspection light is moved away from the sensor, the voltage increases.

| | |
|---|--|
| A | NG |
| B | OK (when checking from the PROBLEM SYMPTOM TABLE) |
| C | OK (Checking from the DTC) |

B PROCEED TO NEXT CIRCUIT INSPECTION SHOWN ON PROBLEM SYMPTOM TABLE

C CHECK AND REPLACE HEATER CONTROL HOUSING SUB-ASSY

A

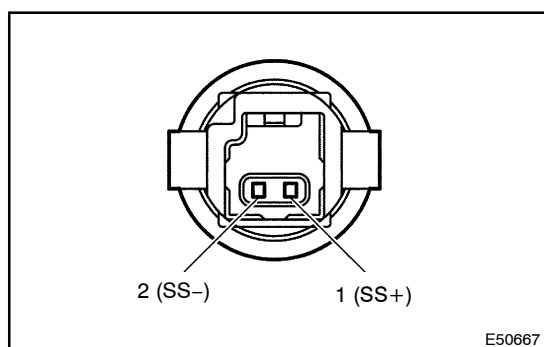2 INSPECT COOLER (SOLAR SENSOR) THERMISTOR

- (a) Remove cooler (solar sensor) thermistor.
- (b) Cover sensor with a cloth.
- (c) Measure resistance between terminals 1 and 2 of solar sensor connector.

Resistance: $\infty \Omega$ (No continuity)

HINT:

Connect the positive (+) lead from ohmmeter to terminal 1 and negative (-) lead to terminal 2 of the solar sensor.

- (d) Remove the cloth from the cooler (solar sensor) thermistor and subject the sensor to electric light.
- (e) Measure resistance between terminals 1 and 2 of solar sensor.

Resistance: Approx. 10 k Ω (Continuity)

HINT:

Connect the positive (+) lead from ohmmeter to terminal 1 and negative (-) lead to terminal 2 of the solar sensor.

NG

REPLACE COOLER (SOLAR SENSOR) THERMISTOR

OK

3 CHECK HARNESS AND CONNECTOR(BETWEEN COOLER (SOLAR SENSOR) THERMISTOR AND HEATER CONTROL HOUSING SUB-ASSY)

NG

REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

CHECK AND REPLACE HEATER CONTROL HOUSING SUB-ASSY