


INSPECTION

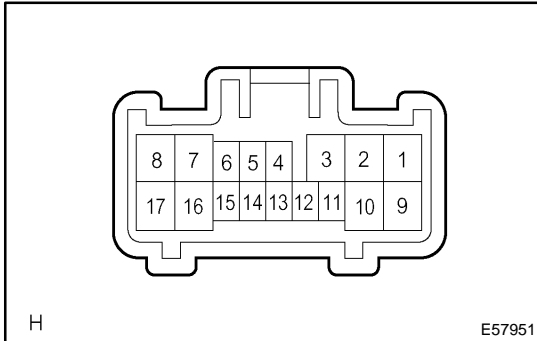

1. HEADLAMP DIMMER SWITCH ASSY

(a) Inspect light control switch continuity.

- (1) Check that there is continuity between terminals at each switch position as shown in the chart.

Switch operation	Tester connection	Specified condition
OFF	–	No continuity
TAIL	14 – 16	Continuity
HEAD	13 – 16 – 14	Continuity

(b) Inspect headlamp dimmer switch continuity.

- (1) Check that there is continuity between terminals at each switch position as shown in the chart.

Switch operation	Tester connection	Specified condition
FLASH	7 – 8 – 16	Continuity
LOW BEAM	16 – 17	Continuity
HI BEAM	7 – 16	Continuity

(c) Inspect turn signal switch continuity.


- (1) Check that there is continuity between terminals at each switch position as shown in the chart.

Switch operation	Tester connection	Specified condition
Right turn	2 – 3	Continuity
Neutral	–	No continuity
Left turn	1 – 2	Continuity

(d) Inspect front fog light switch continuity.

- (1) Check that there is continuity between terminals at each switch position as shown in the chart.

Switch operation	Tester connection	Specified condition
OFF	–	No continuity
ON	10 – 11	Continuity

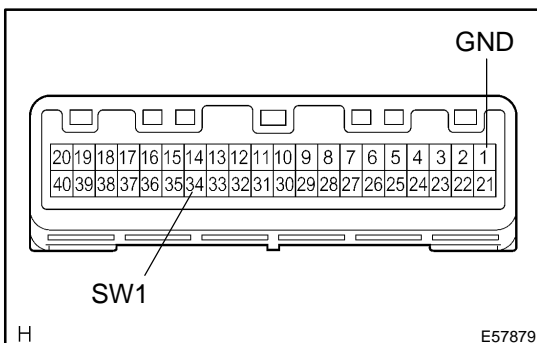


2. HEATER CONTROL HOUSING SUB-ASSY

(a) Auto A/C:

Inspect hazard warning signal switch.

Switch operation	Tester connection	Specified condition
OFF	1 – 34	No continuity
ON	1 – 34	Continuity

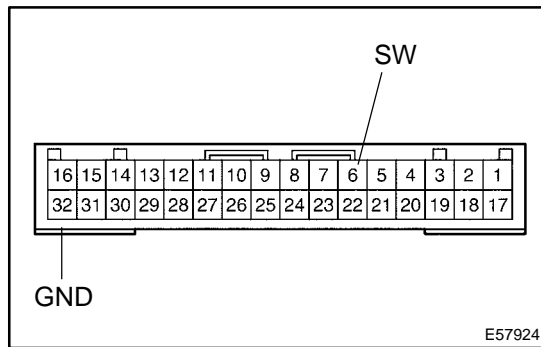


- (b) Manual A/C:
Inspect hazard warning signal switch.

Switch operation	Tester connection	Specified condition
OFF	6 – 32	No continuity
ON	6 – 32	Continuity


3. BACK UP LAMP SWITCH ASSY

- (a) Inspect back-up lamp switch continuity.
(1) Check that there is continuity between terminals upon switch operation.
Standard:
OFF (When ball is not pressed): No continuity
ON (When ball is pressed): Continuity

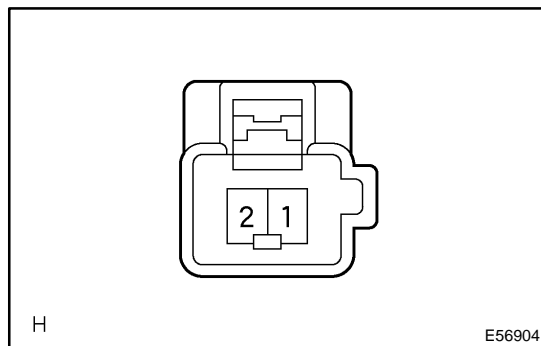

4. LUGGAGE COMPARTMENT DOOR LOCK ASSY


- (a) Inspect luggage compartment door courtesy lamp switch continuity.
(1) Check that there is continuity between terminal 2 and body ground when switch is operated.
Standard:
ON (When shaft is pressed): No continuity
OFF (When shaft is not pressed): Continuity

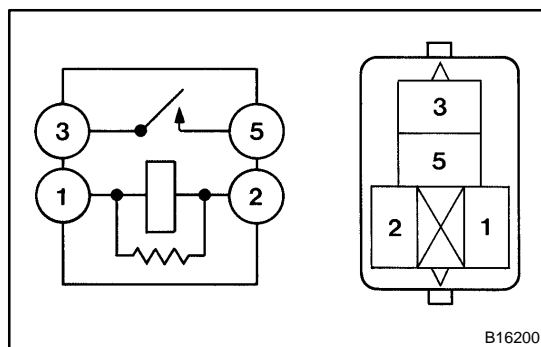

5. FOG LAMP RELAY


- (a) Inspect relay continuity.

Condition	Tester connection	Specified condition
Constant	1 – 2	Continuity
Apply B+ between terminals 1 and 2.	3 – 5	Continuity

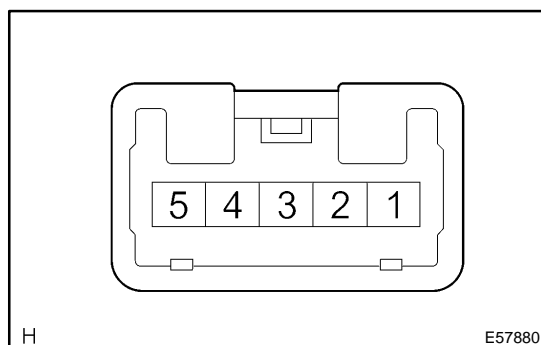

6. ROOF CONSOLE BOX ASSY

- (a) Inspect map lamp continuity.
(1) Check that there is continuity between terminal 1 and 5 when switch is operated.
Standard:
ON: Continuity
OFF: No continuity

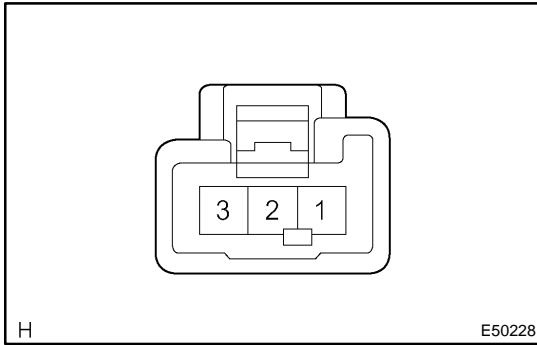

7. ROOM LAMP ASSY NO.1

- (a) Inspect room lamp assy No. 1 continuity.
 (1) Check that there is continuity between terminals at each switch position as shown in the chart.

Standard:

Switch operation	Tester connection	Specified condition
OFF	–	No continuity
DOOR	1 – 2	Continuity
*1 ON	2 – 3	Continuity
*2 ON	1 – 3	Continuity

*1: TMMK Made

*2: TMC Made

8. GLOVE BOX LAMP ASSY

- (a) Inspect glove box lamp assy continuity.
 (1) Check that there is continuity between terminals when switch is operated.

Standard:

ON (When shaft is pressed): No continuity

OFF (When shaft is not pressed): Continuity


9. LUGGAGE COMPARTMENT LAMP ASSY NO.1

- (a) Inspect luggage compartment lamp assy No. 1.
 (b) Check that there is continuity between terminals when switch is operated.

Standard:

ON: Continuity


OFF No continuity

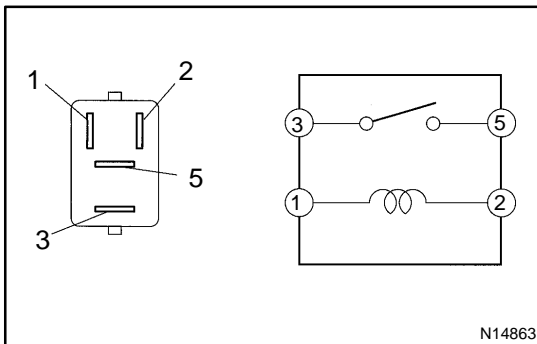

10. TAIL LAMP RELAY

- (a) Inspect relay continuity.


Condition	Tester connection	Specified condition
Constant	1 – 2	Continuity
Apply B+ between terminal 1 and 2	3 – 5	Continuity

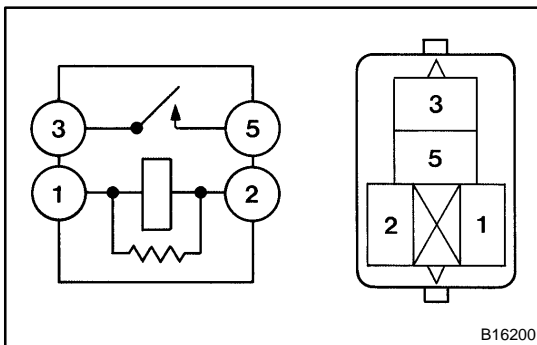

11. DAY TIME RUNNING LIGHT RELAY NO.2

- (a) Inspect relay continuity.

Condition	Tester connection	Specified condition
Constant	1 – 2	Continuity
Apply B+ between terminal 1 and 2	3 – 5	Continuity

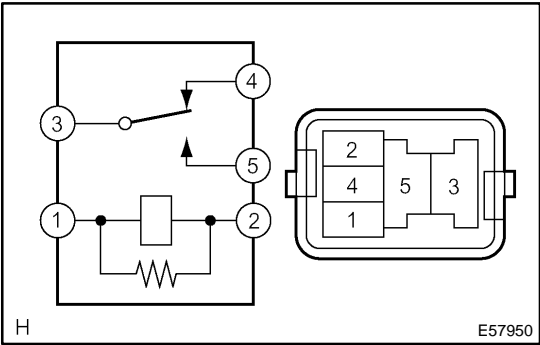

12. RUNNING LIGHT RELAY

(a) Inspect relay continuity.

Condition	Tester connection	Specified condition
Constant	1 – 3, 2 – 4	Continuity
Apply B+ between terminal 1 and 3	4 – 5	Continuity