


Introduction

FS-GR3E is a receiver adopting AFHDS (automatic frequency hopping digital system). It has 3 channels and can output PWM signal.

Receiver Overview

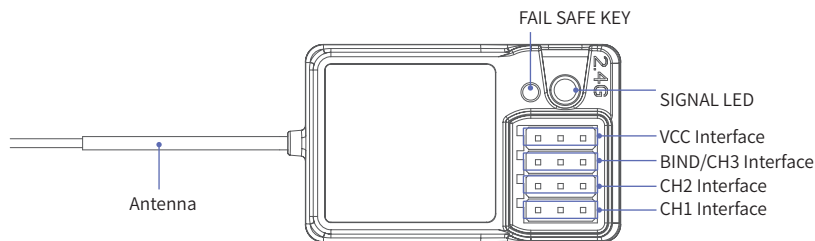

Interface/Key introduction

CH 1 ~ CH2 Interface: Connects servos, power supply or other components.

BIND/CH3 Interface: Used to connect the binding cable during binding, and to connect servos, power supply or other components when not binding.

VCC Interface: Used to connect power supply.

SENS(-BUS) Interface: For connecting i-BUS sensors.

FAIL SAFE KEY: Used to set failsafe.


Product Specifications

- Product Model: FS-GR3E
- Number of PWM Channels: 3
- Compatible Models: Cars or boats
- Compatible Transmitters: FS-GT2E, FS-GT2F or FS-GT2G
- Data Output: PWM
- Frequency Range: 2.4055 -2.475 GHz
- Bandwidth: 500KHz
- Number of Bands: 140
- Maximum Power: < 20dBm (e.i.r.p.) (EU)
- Receiver Sensitivity: -105dBm
- RF Protocol : AFHDS
- Modulation Type: GFSK
- Resolution: 1024
- ANT length: 26mm
- Input Power: :4.5-6.5V/DC
- Display: LED Indicator
- Online Update: None
- Faisafe: Yes(for channel 2)
- Dimensions: 37.6X22.3X13 mm
- Weight: 5g
- Certification: CE, FCC

Binding

Follow the steps below to bind.

1. Put the transmitter into binding state.
2. Plug the binding cable into the BIND/CH3 interface of the receiver,
3. Connect the receiver battery to VCC port of the receiver, refer to the left diagram. At the same time, the receiver SIGNAL LED flashes quickly, indicating that it has entered the binding state.
4. The receiver SIGNAL LED is solid on, indicating the binding is successful.
5. Power off both the transmitter and the receiver, and unplug the binding cable from the receiver.
6. Repower both the transmitter and the receiver.
7. Check to make sure the transmitter and receiver functions are working correctly, repeat steps 1 to 6 (binding process) if any problems arise.

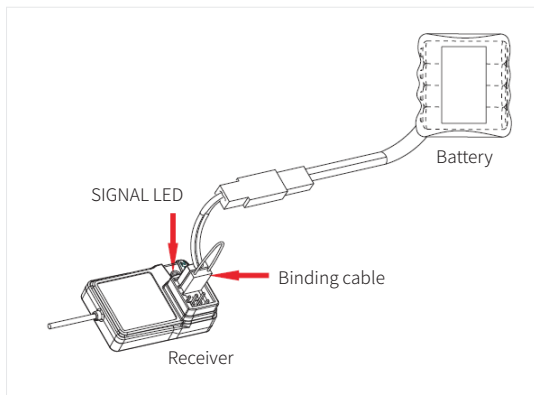

Failsafe

The receiver supports failsafe setting. The fail-safe function is used when the receiver loses signal and is out-of-control. The receiver performs channel output according to the set fail-safe value to protect the safety of the model and personnel. This function is only for throttle channel.

Follow the following to set.

When the transmitter and receiver are in normal communication, pull/push the throttle trigger to the desired position, then hold the trigger, at the same time, press the FAIL SAFE KEY of the receiver. The receiver SIGNAL LED will be flashing and stop after 3 seconds around, which means setting finished.

Then follow the following to verify whether the setting is as your desired.

The transmitter and receiver are in normal communication, then power off the transmitter, the throttle channel will automatically output the value according to the failsafe setting.

Attention:

- Make sure the product is installed and calibrated correctly, failure to do so may result in serious injury.
- Make sure the receiver's battery is disconnected before turning off the transmitter, failure to do so can result out of control. Unreasonable setting of the Failsafe may cause accidents.
- Make sure the receiver is mounted away from motors, electronic speed controllers or any device that emits excessive electrical noise.
- Keep the receiver's antenna at least 1cm away from conductive materials such as carbon or metal.
- Do not power on the receiver during the setup process to prevent loss of control.

Certifications

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

EU DoC Declaration

Hereby, [ShenZhen FLYSKY Technology Co., Ltd.] declares that the Radio Equipment [FS-GR3E] is in compliance with RED 2014/53/EU. The full text of the EU DoC is available at the following internet address: www.flyskytech.com/info_detail/10.html

RF Exposure Compliance

The distance between user and products should be no less than 20cm.

Environmentally friendly disposal

Old electrical appliances must not be disposed of together with the residual waste, but have to be disposed of separately. The disposal at the communal collecting point via private persons is for free. The owner of old appliances is responsible to bring the appliances to these collecting points or to similar collection points. With this little personal effort, you contribute to recycle valuable raw materials and the treatment of toxic substances.



微信公众号



Bilibili



Website



Facebook

Manufacturer: ShenZhen FLYSKY Technology Co., Ltd.

Address: 16F, Huafeng Building, No. 6006 Shennan Road, Futian District, Shenzhen, Guangdong, China

Figures and illustrations in this manual are provided for reference only and may differ from actual product appearance. Product design and specifications may be changed without notice.

<http://www.flysky-cn.com>

Copyright ©2024 Flysky Technology Co., Ltd.