
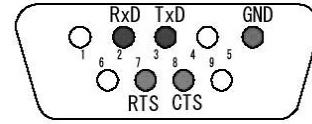


1. Outline

In case no comments in particular as for the contents of this papers, the descriptions are effective for RX-V4600.

1.1 Connection

5 wire system

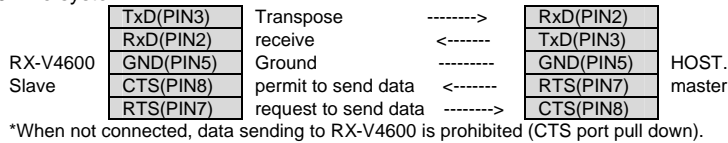

1.2 RS-232C Settings

* Full duplex, start-stop synchronization communication

Baud rate : 9600bps

Data bits : 8

Parity : No

Stop bit : 1bit

Handshaking : Hardware

*RTS port of VRX-V4600 outputs low level while the AC plug is disconnected.


If RTS output stays low even when the AC plug is connected, there might be some trouble.

1.3 Data block timeout

It takes RX-V4600 maximum 500msec to send one data block. If a complete data block is not received within 500msec, please cancel the transaction. There might be some trouble.

2. Start transactions


2.1 Starting Communication



Ready command is the very first command to be sent to RX-V4600 at the start of the communication. TOUT0 - 2 in Ready Command sets timeout of the communication.

RX-V4600 sends Configuration command (Model ID, software version, and setting data) to the host in reply to the Ready command.

RX-V4600 will send a Configuration command within 1 sec. after receiving a Ready command from the host. If not, please send a Ready command again (max 5 times). If RX-V4600 won't send any Configuration commands after fifth retry, please cancel the transaction because there might be some problems.

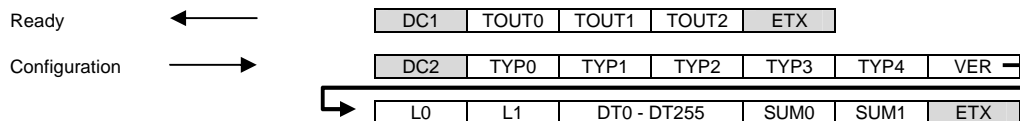

*TYPx : Model ID = "R0190" (RX-V4600)

*VER : Software Version

*SUM : the sum of all data except for the header and footer

function name	function	data (ASCII)	range (HEX)
TOUT0 - 2	communication timeout	0 - 9, A - F	0 - 0xFFFF

*timeout between the header and the footer

*timeout=0 means no timeout

function name	function	data (ASCII)	range (HEX)
TYP0 - 4	model ID	0 - 9, A - F	voluntary
VER	software version	A - Z	voluntary
L0 - 1	data length	0 - 9, A - F	1 - 0xFF
DT0 - 255	data	0 - 9, A - F	0 - 0xFF
SUM0	upper 4 bit of SUM	0 - 9, A - F	0 - 0xFF
SUM1	lower 4 bit of SUM	0 - 9, A - F	0 - 0xFF

*Data Structure of Configuration command


data	When the power is OFF, only DT0,1,...,9 are sent to the Host.		
DT0	Fixed	Baud Rate	Don't care ('@')
DT1	Fixed	Receive Buffer	Don't care ('E')
DT2	Fixed	Receive Buffer	Don't care ('0')
DT3	Fixed	Command Timeout	Don't care ('1')
DT4	Fixed	Command Timeout	Don't care ('9')
DT5	Fixed	Command Timeout	Don't care ('0')
DT6	Fixed	Handshaking	Don't care ('0')
DT7	0 / 1	System	0: OK / 1: Busy
DT8	0 / 1	Power	0: OFF / 1: ON
DT9	0 - C	Input	0: PHONO / 1: CD / 2: TUNER / 3: CD-R / 4: MD-TAPE / 5: DVD / 6: D-TV-LD / 7: CBL-SAT / 9: VCR1 / A: VCR2-DVR / C: V-AUX
DT10	0 / 1	6ch input	0: OFF / 1: ON
DT11	0 - 6	Audio Select	0: AUTO / 3: COAX/OPT / 4: ANALOG / 5: ANALOG ONLY / 7: i.Link / 8: HDMI
DT12	0 / 1	Audio Mute	0: OFF / 1: ON
DT13	0 - C	Zone2 Input	0: PHONO / 1: CD / 2: TUNER / 3: CD-R / 4: MD-TAPE / 5: DVD / 6: D-TV-LD / 7: CBL-SAT / 9: VCR1 / A: VCR2-DVR / C: V-AUX
DT14	0 / 1	Zone2 Mute	0: OFF / 1: ON
DT15	0 - F	Master Volume	Upper 4 bit
DT16	0 - F	Master Volume	Lower 4 bit
DT17	0 - F	Zone2 Volume	Upper 4 bit
DT18	0 - F	Zone2 Volume	Lower 4 bit
DT19	0 - F	Program	Upper 4 bit
DT20	0 - F	Program	Lower 4 bit
DT21	0 / 1	Effect	0: OFF / 1: ON
DT22	0 - 6	EX/ES key status	0: OFF / 1: MATRIX ON / 2: DISCRETE ON / 3: AUTO / 4: EX / 5: PL2 Movie / 6: PL2 Music / 1: SHORT / 2: OFF
DT23	0 - 2	OSD*	0: 120 / 2: 90 / 3: 60 / 4: 30 / 5: OFF
DT24	0 - 3	Sleep	0: Page A / 1: Page B / 2: Page C / 3: Page D / 4: PageE
DT25	0 - 4	Tuner Page	0: No.1 / 1: No.2 / 2: No.3 / 3: No.4 / 4: No.5 / 5: No.6 / 6: No.7 / 7: No.8
DT26	0 - 7	Tuner No.	Upper 4 bit
DT27	0 - 2	Night mode	Upper 4 bit
DT28	0 - 2	Night mode parameter	0: OFF / 1: ON
DT29	0 / 1	Speaker relay A	0: OFF / 1: ON
DT30	0 / 1	Speaker relay B	0: OFF / 1: ON
DT31	0 - B	Playback	0: 6ch input / 1: Analog / 2: PCM / 3: DD*(except 2.0) / 4: DD(2.0) / 5: DD.Karaoke / 6: DD.EX / 7: DTS / 8: DTS-ES / 9: Other DIGITAL / A: DTS Analog Mute / B: DTS ES Discrete
DT32	0 - B	Fs	0: Analog / 1: 32kHz / 2: 44.1kHz / 3: 48kHz / 4: 64kHz / 5: 88.2kHz / 6: 96kHz / 7: Unknown / B: DTS 96/24
DT33	0 - 2	EX/ES playback	0: OFF / 1: MATRIX ON / 2: DISCRETE ON
DT34	0 / 1	THR / Bypass	0: Normal / 1: Bypass
DT35	0 / 1	RED dts	0: Release / 1: Wait
DT36	0 / 1	Head Phone	0: OFF / 1: ON
DT37	0 / 1	TUNER BAND	0: FM / 1: AM
DT38	0 / 1	TUNER TUNED	0: NOT TUNED / 1: TUNED
DT39	0 / 1	DC1 Control Out	0: LOW / 1: HIGH
DT40	0-2	Decoder Mode	0: AUTO / 1: dts
DT41		Don't Care	
DT42	0-2	DC1 TRG Ctrl.	0: Zone1 / 1: Zone2 / 2: Zone1&2
DT43	0 / 1	dts 96/24	0: OFF / 1: ON
DT44	0-2	DC2 TRG Ctrl.	0: Zone1 / 1: Zone2 / 2: Zone1&2
DT45	0 / 1	DC2 Trigger	0: LOW / 1: HIGH
DT46	0 / 1	SP B set	0: Zone1 / 1: Zone2
DT47	0 / 1	Zone 2 Amp	0: OFF / 1: ON
DT48		Front R	Upper 4bit
DT49			Lower 4bit
DT50		Front L	Upper 4bit
DT51			Lower 4bit
DT52		Center	Upper 4bit
DT53			Lower 4bit
DT54		Surround R	Upper 4bit
DT55			Lower 4bit
DT56		Suaround L	Upper 4bit
DT57			Lower 4bit
DT58		Surround Back	Upper 4bit
DT59		R	Lower 4bit
DT60		Surround Back	Upper 4bit
DT61		L	Lower 4bit
DT62		Presence R	Upper 4bit
DT63			Lower 4bit
DT64		Presence L	Upper 4bit
DT65			Lower 4bit
DT66		SWFR 1	Upper 4bit

DT67				Lower 4bit
DT68	0-2	Night Mode Parameter		Lower 4bit
DT69		Don't Care		
DT70		Don't Care		
DT71		Don't Care		
DT72		Don't Care		
DT73		Don't Care		
DT74		LFE Lvl. SP		Upper 4bit
DT75				Lower 4bit
DT76		LFE Lvl. HP		Upper 4bit
DT77				Lower 4bit
DT78		Audio Delay		Upper 4bit
DT79				Lower 4bit
DT80		Don't Care		
DT81		Don't Care		
DT82		Don't Care		
DT83	0 / 1	Decoder Mode Set		0: AUTO / 1: LAST
DT84	0 / 1	Input mode set		0: AUTO / 1: LAST
DT85	0-4	Dimmer		0: -4 / 1: -3 / 2: -2 / 3: -1 / 4: 0
DT86		Don't care		
DT87	0-A	OSD(GUI) position		Upper 4bit
DT88	0-A			Lower 4bit
DT89		Glaz back		0: OFF / 1: AUTO
DT90	0/1	Video conversion		0: OFF / 1: ON
DT91	0-2	D. Range	SP	0: MAX / 1: STD / 2: MIN
DT92	0-2		HP	0: MAX / 1: STD / 2: MIN
DT93	0 / 1	Zone 2 vol. Out		0: VAR / 1: FIX
DT94	0 / 1	Zone 3 Vol. Out		0: VAR / 1: FIX
DT95	0 / 1	Memory guard		0: OFF / 1: ON
DT96	0-2	SP set	Center	0: Large / 1: Small / 2: None
DT97	0 / 1		Main	0: Large / 1: Small
DT98	0-2		Rear L/R	0: Large / 1: Small / 2: None
DT99	0-4		S.BACK	0: Large x 2 / 1: Large x 1 / 2: Small x 2 / 3: Small x 1 / 4: None
DT100		Don't care		
DT101			Front	0: Yes / 1: None
DT102			LFE/BASS	0: SWFR / 1: Main / 2: Both
DT103		SW Config		Upper 4bit
DT104				Lower 4bit
DT105		Test mode		0: OFF / 1: Dolby
DT106		Don't care		
DT107	0-F	Wall Paper		0:Type1 / 1:Type2 / 2: Type3 / E: Gray / F: NONE
DT108	0 / 1	i.Link Auto Assign		0: OFF / 1: ON
DT109	0-3	i.Link Auto Play		0: A<>P / 1: A>P / 2: A<P / 3:OFF
DT110	0-2	HDMI Select		0: IN1 / 1: IN2 / 2: None
DT111	0 / 1	HDMI Support Audio		0: V4600 / 1: Other
DT112		Don't care		
DT113		Don't care		
DT114	0-3	Language		0:English / 1:Japanese / 2: French / 3: German
DT115		Don't care		
DT116		Don't care		
DT117		Don't care		
DT118		Don't care		
DT119		Don't care		
DT120		Don't care		
DT121	0/1	Advanced Setup		00:OFF / 01:ON
DT122	0/1	Remote Control ID		00:ID1 / 01:ID2
DT123	0/1	Fan Control Mode		00:Auto / 01:Cont
DT124	0/1	Speaker Impedance		00:8 ohm / 01:6 ohm
DT125	0/1	Tuner Setup		00:AM10/FM100 / 01:AM9/FM50
DT126	0/1	Pure Direct		00:OFF / 01:ON
DT127	0 - C	Z3 Input		
DT128	0/1	Z3 Mute		
DT129	0 - F	Z3 Volume		Upper 4bit
DT130	0 - F			Lower 4bit
DT131		Don't care		
DT132	0-C	MULTI_CH SELECT		00:6CH / 01:8CH TUNER / 02: 8CH CD / 04: 8CH CD-R / 05: 8CH DVD / 06: DTV / 07: 8CH CBL/SAT / 09: 8CH VCR1 / 0A: VCR2/DVR / 0C: VAUX
DT133		Don't care		
DT134		Don't care		
DT135	0-8	SP SET CROSSOVER		00: 40Hz / 01: 60Hz / 02: 80Hz / 03: 90Hz / 04: 100Hz / 05: 110Hz / 06: 120Hz / 07: 160Hz / 08: 200Hz
DT136		Don't care		
DT137	0 / 1	PB/SB SELECT		00: PR / 01: SB
DT138	0 / 1	Tone Control		00: Bypass / 01: ON

*DD = Dolby Digital

*OSD = On Screen Display

3. Control Command



*RX-V4600 can receive control commands only while the power is on.
(Except Power commands and System commands*)

*Please do not send any control commands while the system status is in wait. No commands are permitted until RX-V4600 reports OK


*RX-V4600 will send a Report Command** within 1 sec of receiving the Control Command. If no Report Command is received, resend control command (max 5 times) If RX-V4600 doesn't send a Report Command after fifth retry, cancel the transaction because there might be some troubles.

*'SW' switches the type of the control command. When the 'SW' is set to '0', you can control RX-V4600 remotely via RS-232C.

*RX-V4600 will only send one report command for each type of control. The Report Command will report only the final status of all settings in a strings of commands (may not report all steps in a status, only final status).
For example, if a user set the input selector on the unit to D-TV/LD just after the host sends command to change input to CD, RX-V4600 may report only the final status that the input was changed to D-TV/LD by the system operation.

*System command, **Report command --> described in later

- Command Switch (changing the type of control command)

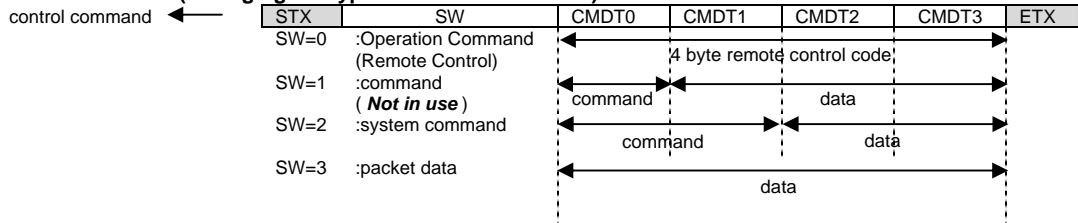

function name	function	data (ASCII)	range (HEX)
SW	command switch	0 - 9	0 - 9
CMTD0 - 3	command & data	0 - 9, A - F	variable


* 'SW' switches the command type of the Control Command.

SW=0 : 4 byte command for remote control code
SW=1 : 1 byte command 0 - F (HEX expression in ASCII)
SW=2 : 2 byte command 10 - FF (HEX expression in ASCII)
SW=3 : 4 byte packet data

* RX-V4600 uses following three types of Control Command.

- Operation Commands for remote control (SW = 0)
- System Commands for system setting (SW = 2)
- packet data for test data transmission (SW = 3)

3.1 System Command (SW = '2')



System Command can be made by setting the 'SW' byte in the Control Command to '2'. With System command you can control RX-V4600's system settings (Report Command Enable / Disable, Report Command delay, etc)

With a System Command you can also ...

- set absolute master volume value.
- send text strings to the On Screen Display (OSD).
- request RX-V4600 text data regarding tuner freq., master volume, input name, zone2 input name.

(from RX-V4600)

	Command			data			Report Command		
SW	CMDT0	CMDT1		CMDT2	CMDT3		Type	RCMD1,2	RDAT1,2
2	0	0	report command enable	0	0	enable	0	00	00(OK)
				0	1	disable	0	00	00(OK)
2	0	1	time between two report commands	0	0	real time	0	00	00(OK)
			(Report Command Delay)	0	1	50ms	0	00	00(OK)
				0	2	100ms	0	00	00(OK)
				0	3	150ms	0	00	00(OK)
				0	4	200ms	0	00	00(OK)
				0	5	250ms	0	00	00(OK)
				0	6	300ms	0	00	00(OK)
				0	7	350ms	0	00	00(OK)
				0	8	400ms	0	00	00(OK)
2	1	0	OSD message start command	0	0	start	0	00	00(OK)
2	2	0	Tuning frequency text request	0	0		Refer to the following section		
			Main volume value text request	0	1				
			Zone2 volume value text request	0	2				
			Input name text request	0	3				
			Zone2 input name text request	0	4				
			Zone 3 volume value text request	0	5				
			Zone3 input name text request	0	6				
2	2	F	Firmware version text request	0	0		0	00	
2	3	0	Master volume direct setting	X	X		0	26	
2	3	1	Zone 2 volume direct setting	X	X		0	27	
2	3	2	Main L/R balance	X	X		0	50	
2	3	3	Main level	0	0	Normal	0	3D	
2	3	4	Zone 3 volume direct setting	X	X			A2	
2	3	8	Master Volume Mute					A5	
2	4	0	LEVEL Front R	X	X		0	40	
2	4	1	Front L	X	X		0	41	
2	4	2	CENTER	X	X		0	42	
2	4	3	Surround R	X	X		0	43	
2	4	4	Surround L	X	X		0	44	
2	4	5	Presence R	X	X		0	45	
2	4	6	Presence L	X	X		0	46	
2	4	7	SUR BACK R	X	X		0	47	
2	4	8	SUR BACK L	X	X		0	48	
2	4	9	SWFR 1	X	X		0	49	
2	4	A	SWFR 2	X	X		0	4A	
2	5	1	LFE SP	X	X		0	51	
2	5	2	LFE HP	X	X		0	52	
2	5	3	Audio Delay	X	X		0	53	
2	5	3	SP Delay Center	X	X		0	54	
2	5	4	SP Delay Rear CT	X	X		0	55	
2	5	8	Wall Paper	0	0	Type1	0	58	
				0	1	Type2			
				0	2	Type3			
				0	3	Gray			
				0	4	NONE			
2	6	0	Audio Select	0	0	Auto	0	60	
				0	1	Last			
2	6	1	Dimmer	X	X		0	61	
2	6	2	OSD(GUI) Shift	X	X		0	62	
2	6	3	Gray Back	0	0	Off	0	63	
				0	1	Auto	0	63	
2	6	4	Dynamic Range SP	0	0	Max	0	64	
				0	1	STD			
				0	2	Min			
2	6	5	Dynamic Range HP	0	0	Max	0	65	
				0	1	STD			

				0	2	Min			
2	6	6	Zone 2 Volume Output	0	0	Var.	0	66	
				0	1	Fix			
2	6	7	Zone 2 Mode	0	0	Mode 1	0	67	
				0	1	Mode 2	0	67	
2	6	8	Memory Guard	0	0	Off	0	68	
				0	1	On			
2	6	9	Video Conversion	0	0	Off	0	69	
				0	1	On			
2	6	A	Component OSD	0	0	Off	0	6A	
				0	1	On	0	6A	
2	6	B	Zone 3 Vol output	0	0	Var.	0	6B	
				0	1	Fix			
2	6	F	Language	0	0	English	0	6F	
				0	1	Japanese			
				0	2	French			
				0	3	German			
2	7	0	SP Center	0	0	Large	0	70	
				0	1	Small			
				0	2	None			
2	7	1	Front	0	0	Large	0	71	
				0	1	Small			
2	7	2	Rear L/R	0	0	Large	0	72	
				0	1	Small			
				0	2	None			
2	7	3	Surround Back	0	0	Large x2	0	73	
				0	1	Large x1			
				0	2	Small x2			
				0	3	Small x1			
				0	4	None			
2	7	4	Presence	0	0	Yes	0	74	
				0	1	None			
2	7	5	LFE/Bass	0	0	SWFR	0	75	
				0	1	Main			
				0	2	Both			
2	7	6	SUBWOOFER CONFIG	0	X	Normal	0	76	
				1	X	L Rev.			
				0	2	None	0	76	
	7	7	SUBWOOFER 2	0	0	L-R	0	77	
				0	1	F-R	0	77	
				0	2	None	0	77	
2	7	8	6CH Center to	0	0	Center	0	78	
					1	Main	0	78	
2	7	9	6CH SWFR to	0	0	SWFR	0	79	
2	7	A	6CH Surround to	0	0	Surround	0	7A	
					1	Main	0	7A	
2	7	B	Multi CH select	0	0	6CH	0	7B	
				0	1	8CH CD			
				0	2	8CH CD			
				0	3	8CH CD-R			
				0	4	8CH MD/TAPE			
				0	5	8CH DVD			
				0	6	8CH DTV/LD			
				0	7	8CH CABLE			
				0	8	8CH MD/TAPE			
				0	9	8CH VCR1			
				0	A	8CH VCR2			
				0	B	8CH MD/TAPE			
				0	C	8CH V-AUX			
2	7	D	PR / SB select	0	0	Presence	0	7D	
				0	1	Sur.Back			
2	7	E	Subwoofer Cross Over	0	0	40 Hz	0	7E	
				0	1	60 Hz			
				0	2	80 Hz			
				0	3	90 Hz			
				0	4	100 Hz			
				0	5	110 Hz			
				0	6	120 Hz			
				0	7	160 Hz			

				0	8	200 Hz			
2	8	0	Test	0	0	Off	0	80	
					1	Dolby			
2	8	3	i.Link P & P	0	0	OFF	0	83	
					1	ON			
2	8	4	i.Link Auto Play	0	0	A<>P	0	84	
					1	A>P			
					2	A<P			
					3	OFF			
2	8	8							
2	8	9							
2	8	A	THX ASA	0	0	Narrow	0	8A	
					1	Middle			
					2	Wide			
2	8	B	Night Mode Parameter	0	0	OFF	0	8B	
				1	0	Cinema Level L			
				1	1	Cinema Level M			
				1	2	Cinema Level H			
				2	0	Music Level L			
				2	1	Music Level M			
				2	2	Music Level H			
2	8	E	HDMI Slect	0	0	IN1	0	8E	
					1	IN2			
2	8	F	HDMI Support Audio	0	0	V4600	0	8F	
					1	Other			
2	9	0	6CH Level MAIN R	X	X		0	90	
	9	1	MAIN L	X	X		0	91	
	9	2	CENTER	X	X		0	92	
	9	3	REAR R	X	X		0	93	
	9	4	REAR L	X	X		0	94	
	9	5	FRONT R	X	X		0	95	
	9	6	FRONT L	X	X		0	96	
	9	7	SUR BACK R	X	X		0	97	
	9	8	SUR BACK L	X	X		0	98	
	9	9	SWFR 1	X	X		0	99	
	9	A	SWFR 2	X	X		0	9A	
2	A	6	Tone Control	0	0	Bypass	0	A6	
				0	1	ON			
2	B	0	Advanced Setup *1	0	0	OFF	0	B0	
				0	1	ON			
2	B	1	Remote Control ID *2	0	0	ID1	0	B1	
				0	1	ID2			
2	B	2	Fan Control Mode *2	0	0	Auto	0	B2	
				0	1	Cont			
2	B	3	Speaker Impedance *2	0	0	8 ohm	0	B3	
				0	1	6 ohm			
2	B	4	Tuner Setup *2	0	0		0	B4	
				0	1				
2	B	5	Remote Control ID For Tuner *2	0	0	ID1	0	B5	
				0	1	ID2			

 : Not supported by RX-V4600 Series

*1: acceptable only in the status of Power OFF.

*2: acceptable only in the status of Advanced Setup ON.

***OSD message function**

OSD Message function can display a message of 16 characters to RX-V4600's OSD for a few seconds. The command sequence block will start by sending "start command" as mentioned above, followed by 4 bytes of packet data (SW:3) repeated four times. Then the message of sixteen characters(ASCII) will display and the command block finish automatically.

(ex.)Want to display " Test message !" characters to OSD.

1. Send the start command.

STX	2	1	0	0	0	ETX
-----	---	---	---	---	---	-----

2. Send SW:3 commands four times as follows.

STX	3	' '	'T'	'e'	's'	ETX
STX	3	't'	' '	'm'	'e'	ETX
STX	3	's'	's'	'a'	'g'	ETX
STX	3	'e'	' '	'!'	' '	ETX

3. The command block will be finished automatically.

The available characters to display the message are as follows.


""(SPACE)"!""#"%"&"(")"*""+""","-""."0""1""2""3""4""5""6""7""8""9"":""<""="">>""?"A""B""C""D""E""F""G""H""I""J""K""L""M""N""O""P""Q""R""S""T""U""V""W""X""Y""Z""[""]""_""a""b""c""d""e""f""g""h""i""j""k""l""m""n""o""p""q""r""s""t""u""v""w""x""y""z""

***Commands to get the display characters as text data(ASCII)**

This command can get certain of text data(ASCII) from the RX-V4600 to be used by Host device as follows.

- Tuner frequency characters : " 107.9 "(MHz)
- Master volume value characters : " -99.0dB" / " MUTE"
- Input name : " MY PC " (Even renamed by "SET MENU:INPUT RENAME")
- Zone2 input name : " PS 2 " (Even renamed by "SET MENU:INPUT RENAME")

The response protocol for the text request commands are as follows.




RCMD0,1	COMMAND	0 - 9, A - F	0...0xFF
DDAT 0 - 7	DATA	0 - 9, A - Z SP	ASCII char. Space char.

Report Command

	DC1	RCMD0	RCMD1	DDAT 0	DDAT 1	DDAT 2	DDAT 3	DDAT 4	DDAT 5	DDAT 6	DDAT 7	ETX
Tuner Frequency	DC1	0	0	SP	SP	x	x	x	x	x	x	ETX
Master Volume Value	DC1	0	1	SP	x	x	x	x	x	x	x	ETX
Input Name	DC1	0	3	x	x	x	x	x	x	x	x	ETX
Zone2 Input Name	DC1	0	4	x	x	x	x	x	x	x	x	ETX

3.2 Operation Command (SW = '0')



Operation Command supports all **direct codes** from the standard and extended IR code library for the RX-V4600. **No toggle codes** are supported.

Operation Command							Report Command	
SW	CMDT0	CMDT1	CMDT2	CMDT3	function	setting	Type	RCMD1,2
0	7	A	1	A	master volume	Up	0	26
	7	A	1	B		Down		
	7	E	A	2	Audio Mute	ON		23
						ON(-20db)		
	7	E	A	3		OFF		
	7	A	1	4	Input	PHONO		21
	7	A	1	5		CD		
	7	A	1	6		TUNER		
	7	A	1	9		CD-R		
	7	A	C	9		MD/TAPE		
	7	A	C	1		DVD		
	7	A	5	4		D-TV/LD		
	7	A	C	0		CABLE (CBL/SAT)		
	7	A	C	A		SAT		
	7	A	0	F		VCR1		
	7	A	1	3		VCR2/DVR		
	7	A	C	8		VCR3		
	7	A	5	5		V-AUX		
	7	E	8	0	Pure Direct	ON		81
	7	E	8	1	Pure Direct Multi	ON		
	7	E	8	2		OFF		
	7	E	A	4	6ch input	ON		21
	7	E	A	5		OFF		
	7	E	A	6	Audio Select	AUTO		22
	7	E	A	7		D.D. RF		
	7	E	A	9		COAX/OPT		
	7	E	A	A		ANALOG		
	7	E	7	B		i.Link		
	7	E	D	A		HDMI		
	7	E	D	B	Decoder Mode	Auto		
	7	E	A	8		DTS		
	7	E	3	B		AAC		
	7	A	D	A	Zone 2 Volume	UP		27
	7	A	D	B		DOWN		
	7	E	A	0	Zone2 mute	ON		25
	7	E	A	1		OFF		
	7	A	D	0	Zone2 Input	PHONO		24
	7	A	D	1		CD		
	7	A	D	2		TUNER		
	7	A	D	4		CD-R		
	7	A	C	F		MD/TAPE		
	7	A	C	D		DVD		
	7	A	D	9		D-TV/LD		
	7	A	C	C		CABLE (CBL/SAT)		
	7	A	C	B		SAT		
	7	A	D	6		VCR1		
	7	A	D	7		VCR2/DVR		
	7	A	C	E		VCR3		
	7	A	D	8		V-AUX		
	7	A	1	D	Power	ON		20
	7	A	1	E		OFF		
	7	E	7	E	Main(Zone1) Power	ON		
	7	E	7	F		OFF		
	7	E	B	A	Zone2 power	ON		
	7	E	B	B		OFF		
	7	A	E	D	Zone 3 Power	ON		27
	7	A	E	E		STANDBY		
	7	E	2	6	Zone 3 Mute	ON		91
	7	E	6	6		OFF		
	7	A	F	D	Zone 3 Vol.	UP		92
	7	A	F	E		DOWN		
	7	A	F	1	Zone 3 Input	PHONO		90
	7	A	F	2		CD		
	7	A	F	3		TUNER		
	7	A	F	5		CD-R		
	7	A	F	4		MD/TAPE		
	7	A	F	C		DVD		
	7	A	F	6		DTV/LD		
	7	A	F	7		CBL/SAT (cable)		
	7	A	F	8		SAT		
	7	A	F	9		VCR1		
	7	A	F	A		VCR2		
	7	A	F	B		DVR		
	7	A	F	0		V-AUX		
	7	E	B	0	On screen(QSD)	OFF		2B
	7	E	B	1		SHORT		
	7	E	B	2		FULL		
	7	E	B	3	Sleep	OFF		2C
	7	E	B	4		120		
	7	E	B	5		90		
	7	E	B	6		60		
	7	E	B	7		30		
	7	E	B	8	EX/ES	ON (MATRIX)		2D
	7	E	B	9		OFF		
	7	E	7	C		AUTO		

7	E	7	D		DISCRETE		
7	E		C		DOLBY EX		
7	E	D	D		PLIIX Movie		
7	E	D	E		PLIIX Music		
7	E	9	C	Night mode	OFF		82
7	E	9	B		Cinema		82
7	E	C	F		Music		
7	E	2	7	Effect	ON		28
7	E	E	0	Stereo			
7	E	E	1	DSP Program	Hall A		
7	E	E	2		Hall B		
7	E	E	3		Hall C		
7	E	E	4		Hall U.S.A.		
7	E	E	5		Hall E		
7	E	E	6		Live Concert (HALL2)		
7	E	E	7		Tokyo		
7	E	E	8		Freiburg		
7	E	E	9		Royaumont		
7	E	E	A		Village Gate		
7	E	E	B		Village Vanguard		
7	E	E	C		The Bottom Line (JAZZ)		
7	E	E	D		The Roxy Theatre (ROCK)		
7	E	E	E		Warehouse Loft		
7	E	E	F		Arena		
7	E	F	0		Disco		
7	E	F	1		Party		
7	E	F	2		Game		
7	E	F	F		Xch Stereo		
7	E	C	0		2CH Stereo		
7	E	F	3		Pop/Rock		
7	E	F	4		DJ		
7	E	F	5		Opera		
7	E	F	6		Pavillion		
7	E	F	7		Mono Movie		
7	E	F	8		Variety Sports		
7	E	F	9		Spectacle		
7	E	F	A		Sci-Fi		
7	E	F	B		Adventure		
7	E	F	C		General		
7	E	F	D		Normal		
7	E	F	E		Enhanced		
7	E	C	2		THX Cinema		
7	E	C	3		THX Music		
7	E	C	8		THX Game		
7	A	E	0	Tuner preset page	A	0	29
7	A	E	1		B		
7	A	E	2		C		
7	A	E	3		D		
7	A	E	4		E		
7	A	E	5	Tuner preset No.	1		2A
7	A	E	6		2		
7	A	E	7		3		
7	A	E	8		4		
7	A	E	9		5		
7	A	E	A		6		
7	A	E	B		7		
7	A	E	C		8		
7	E	B	C	Tuner band	FM		35
7	E	B	D		AM		
7	E	B	E	Auto tuning start	UP		15
7	E	B	F		DOWN		
7	E	A	B	speaker relay A	ON		2E
7	E	A	C		OFF		
7	E	A	D	speaker relay B	ON		2F
7	E	A	E		OFF		
7	E	2	B	Home preset memory	A		
7	E	2	C		B		
7	E	2	D		C		
7	E	2	E		D		
7	E	2	F		E		
7	E	2	0		F		
7	E	3	5	Home preset recall	A		
7	E	3	6		B		
7	E	3	7		C		31
7	E	3	8		D		
7	E	3	9		E		
7	E	3	A		F		
7	E	6	B	Volume preset memory	A		
7	E	6	C		B		
7	E	6	D		C		
7	E	6	E		D		
7	E	6	F		E		
7	E	6	0		F		
7	E	7	5	Volume preset recall	A		
7	E	7	6		B		
7	E	7	7		C		
7	E	7	8		D		
7	E	7	9		E		
7	E	7	A		F		
7	E	8	7	Z2 Vol. Memory	A		
7	E	8	8		B		
7	E	8	9		C		
7	E	8	A		D		
7	E	8	B		E		
7	E	8	C		F		
7	E	8	D	Z2 Vol. Recall	A		

7	E	8	F		B		
7	E	8	F		C		
7	E	9	0		D		
7	E	9	1		E		
7	E	9	2		F		
7	E	2	0	Z3 Vol. Memory	A		94
7	E	2	1		B		
7	E	2	2		C		
7	E	2	3		D		
7	E	2	4		E		
7	E	2	5		F		
7	E	6	0	Z3 Vol. Recall	A		93
7	E	6	1		B		
7	E	6	2		C		
7	E	6	3		D		
7	E	6	4		E		
7	E	6	5		F		
7	E	3	2	DC1 TRG Control	Zone 1		3A
7	E	3	3		Zone 2		
7	E	3	1		Zone 3		
7	E	3	4		Zone OR		
7	E	7	1	Zone 2 DC1 TRG	On		36
7	E	7	2		Off		
7	E	7	3	Zone 1 DC1 TRG	On		36
7	E	7	4		Off		
7	E	8	3	Zone 3 DC1 TRG	On		36
7	E	8	4		Off		
7	E	9	3	Dual Mono	Main		39
7	E	9	4		Sub		
7	E	9	5		All		
7	E	9	6	DC2 TRG Control	Zone 1		3B
7	E	9	7		Zone 2		
7	E	9	F		Zone 3		
7	E	9	8		Zone OR		
7	E	3	C	Zone 2 DC2 TRG	On		3C
7	E	3	D		Off		
7	E	3	E	Zone 1 DC2 TRG	On		3C
7	E	3	F		Off		
7	E	8	5	Zone 3 DC2 TRG	On		3C
7	E	8	6		Off		
7	E	2	8	SP B SET	Zone 1		3E
7	E	2	9		Zone 2		
7	E	9	9	Zone 2 Amp	On		3F (70/73/78)
7	E	9	A		Off		
7	A	A	0	GUI operation	Top		
7	A	D	E		Enter		
7	A	A	1		Exit		
7	A	9	D		Up		
7	A	9	C		Down		
7	A	9	E		Right(+)		
7	A	9	F		Left(-)		

4. Reset Command

Reset Command recalls factory preset data. Once the factory preset are recalled, all user controllable setting / parameter data will be deleted and replaced with original factory settings.

Please do not use this command unless you have been experiencing problems with the system or if you just want to clean up the system.



After the system is reset, please request the Configuration Command using Ready Command (see section 2) in order to get accurate feedback of status of RX-V4600 to your touch panel system.


Ready ←

DC3	DEL	DEL	DEL	ETX
-----	-----	-----	-----	-----

*recall factory preset of all data

5. Report Command

RX-V4600 will send Report Command in response to Control Commands from the host controller. From Report Command you can receive the current status of the RX-V4600.



There are three types of Report Command classified by their information type.

- System Status Report : RX-V4600 reports a System Status Report when the system status changed.
- Playback Status Report : RX-V4600 reports a Playback Status Report when the internal playback status changed.
- Operation Report : When the RX-V4600 is controlled by remote controller, front panel, RS-232C or by system controller, RX-V4600 sends a Operation Report, which includes the latest setting status of the controlled function.

*RX-V4600 reports a System State Report with system guard to inform its power status (power off) when a control command was sent to RX-V4600 while it's turned off.

*The guard status is included in the Report Command (GRD). If the control command the host sent was accepted by RX-V4600, the guard status in the Report Command is '0' (No Guard). On the contrary the guard status will be 'System Guard' or 'Setting Guard' when the command was guarded for some reason (e.g. If you send a 'Speaker A ON' command while you are using a headphone, the guard status will be 'System Guard' because the speaker controls are prohibited by system while a headphone is used.)

*If a status changed multiple times in a certain time, RX-V4600 report only one report command.



function name	function	data (ASCII)	range (HEX)
TYP	control type	0 - 9	0 - 9
GRD	guard status	0 - 9	0 - 9
RCMD0, 1	command	0 - 9, A - F	0 - 0xFF
RDATA0, 1	data	0 - 9, A - F	0 - 0xFF

<Control type> This indicates for which type of control the report command is.

TYP	control type
0	controlled by RS-232C
1	controlled by remote controller (I/R)
2	controlled by keys in the unit
3	controlled by system
4	controlled by encoder

<Guard status> This indicates guard status against all control command


GRD	Guard status*
0	no guard
1	system guard
2	setting guard

*see the following chart

*Factor of the guards and the contents informed in report commands when there are no guards

operation	no guard	system guard	setting guard
Power	Power status	---	---
Input	6ch input/ selected input	---	---
Input mode	selected Input mode	6ch Input is ON during Input Rename function doesn't have the designated Input mode	---
Zone2 Input	selected input	zone2 selector is not at "REMOTE"	---
Mute	mute status	---	---
Zone2 mute	mute status	---	---
master volume	volume value	---	---
Program	Program ID	6ch input is ON source is not 32kHz,44.1kHz or 48kHz	---
6.1/ES Key	status	6ch input is ON Program is OFF	---
Tuner page	page	Tuner function is not active	---
Tuner Preset No.	No.	Tuner function is not active	---
OSD	status	SET MENU is active Test tone is ON	Memory Guard is ON
Sleep	status	Test tone is ON	---
Home	selected Bank	---	---
Home volume	selected Bank	---	---
Speaker A/B	ON/OFF Status	Headphone Mode	---

5.1 System Status Reports



RCMD0, 1	Report Item	RDAT0, 1	Status
00	system	00	OK
		01	Busy
		02	Power Off


ready for accepting the control commands
start of the term prohibits sending commands
report against the command which cannot be accepted when the Power is Off

*RX-VX00 sends this report when the system is reset or the power turns off.
It can be used for observation of the system revival.

01	warning	00	over current
		01	DC Detect
		02	power trouble
		03	over heat

report of abnormal states
(Only when it's possible to report)

5.2 Playback Status Reports



RCMD0, 1	Report Item	RDAT0, 1	Status
10	Playback	00	6CH Input
		01	Analog
		02	PCM
		03	D.D.(except for 2/0)
		04	D.D.(2/0)
		05	D.D.karaoke
		06	D.D.EX
		07	DTS
		08	DTS. ES
		09	Other Digital
		0A	DTS Analog Mute
11	Fs	0B	DTS Discrete
		0C	Other than AAC 2/0
		0D	AAC 2/0
		00	Analog
		01	32kHz
		02	44.1kHz
		03	48kHz
		04	64kHz
		05	88.2kHz
		06	96kHz
		07	Unknown
12	EX/EX	08	128.0 kHz Unknown
		09	176.4 kHz Unknown
		0A	192.0 kHz Unknown
		0B	48kHz (96kHz)
		00	Off
		01	Matrix On
		02	Discrete ON
		00	Off
		01	On
		00	Release
		01	Wait
15	Tuner tuned	00	Not tuned
		01	Tuned
16	Dts 96/24	00	Off
		01	On

When audio code mode is other than 2/0
When audio code mode is 2/0

When waiting for decoding, etc.

DTS 96/24 signal (A/B)
Playback status

Fs when other than 32/44.1/48kHz

RED dts status*
After the signals of DTS CD/LD are stopped, the RED dts status keeps "Wait" for 30 sec., then turned to "Release"
While the RED dts is "Wait", this can be released by changing the Input Mode.

This report will be sent in case of signal changed.

DTS 96/24 decode
(A/B)

5.3 Operation Reports

		Report Item		Status			
STX	TYP	GRD	RCMD0	RCMD1	RDAT0	RDAT1	ETX
RCMD0, 1	Report Item	RDAT0, 1	Status	RCMD0, 1	Report Item	RDAT0, 1	Status
20	Power	00	ALL(Main/Zone2/3) OFF	28	Program	00	Hall A (HALL1)
		01	ALL(Main/Zone2/3) ON			01	Hall B
		02	MainON / Zone2 OFF / Zone3 OFF			02	Hall C
		03	MainOFF / Zone2 ON / Zone3 ON			04	Hall C
		04	MainON / Zone2 ON / Zone3 OFF			05	Hall E
		05	MainON / Zone2 OFF / Zone3 OFF			06	Live Concert
		06	MainOFF / Zone2 ON / Zone3 ON			08	Tokyo
		07	MainOFF / Zone2 OFF / Zone3 ON			09	Freiburg
21	Input	x,0	PHONO			0A	Royaumont
		x,1	CD			0C	Village Gate
		x,2	TUNER			0D	Village Vanguard
		x,3	CD-R			0E	The Bottom Line
		x,4	MD/TAPE			10	The Roxy Theater
		x,5	DVD			11	Warehouse Loft
		x,6	D-TV/LD			12	Arena
		x,7	CBL/SAT			14	Disco
		x,8	SAT			15	Party
		x,9	VCR1			16	Game
		x,A	VCR2/DVR			17	6/8CH Stereo
		x,B	VCR3/DVR			18	Pop/Rock
22	Audio Select	x,0	AUTO			19	DJ
		x,3	COAX/OPT			1C	Opera
		x,4	Analog			1D	Pavillion
		x,5	Analog Only			20	Mono Movie
		x,7	i.Link			21	Variety Sports
		x,8	HDMI			24	Spectacle
		0,x	Auto			25	Sci-Fi
		0,1	dtls			28	Adventure
23	Mute	00	OFF			29	General
		01	ON			2C	Normal
24	Zone2 Input	00	PHONO			2D	Enhanced
		01	CD			30	PLII Movie
		02	TUNER			31	PLII Music
		03	CD-R			32	Neo: 6 Movie
		04	MD/TAPE			33	Neo: 6 Music
		05	DVD			34	STREO A 2CH Streo
		06	D-TV/LD			35	STREO B 2CH Direct Streo
		07	CBL/SAT			36	THX A Cinema
		08	SAT			37	THX B Music
		09	VCR1			38	THX C Game
		0A	VCR2/DVR			80-B3	STRAIGHT
		0B	VCR3/DVR			80	STRAIGHT (HALL A)
25	Zone2 Mute	00	OFF			81	STRAIGHT (HALL B)
		01	ON			...	
						B3	STRAIGHT (NEO:6 MUSIC)
26	Master vol.	00	-∞	29	Tuner Page	00	A
		39	-80dB			01	B
		...				02	C
		C7	0dB			03	D
		...				04	E
		E8	16.5dB				
27	Zone 2 Vol.	00	-∞	2A	No.	00	1
		39	-80dB			01	2
		...				02	3
		C7	0dB			03	4
		...				04	5
		E8	16.5dB			05	6
						06	7
						07	8

2B	OSD	00	Full
		01	Short
		02	Off
2C	Sleep	00	120
		01	90
		02	60
		03	30
		04	Off
2D	EX/ES(Key)	00	Off
		01	Matrix On
		02	Discrete On
		03	Auto
		04	EX
		05	PL2 MOVIE
		06	PL2 MUSIC
2E	SP Relay A	00	Off
		01	On
2F	SP Relay B	00	Off
		01	On

RCMD0, 1	Report Item	RDAT0, 1	Status	RCMD0, 1	Report Item	RDAT0, 1	Status
30	Home	01	Preset A	36	DC1 Trigger	00	Off (Due to the delay
		02	B			01	On (Due to the delay
		03	C	37	Home Zone 2 Vol.	01	Preset A
		04	D			02	B
		05	E			03	C
		06	F			04	D
31	Home	01	Memory A			05	E
		02	B			06	F
		03	C	38	Home Zone 2 Vol.	01	A
		04	D			02	B
		05	E			03	C
		06	F			04	D
32	Home Vol.	01	Preset A			05	E
		02	B			06	F
		03	C	39	Dual Mono	00	Main
		04	D			01	Sub
		05	E			02	All
		06	F	3A	DC1 Trigger CTRL	00	ALL ZONE OR
33	Home Vol.	01	Memory A			01	ZONE1
		02	B			02	ZONE2
		03	C			03	ZONE3
		04	D	3B	DC2 Trigger CTRL	00	ALL ZONE OR
		05	E			01	ZONE1
		06	F			02	ZONE2
34	Headphone	00	Off			03	ZONE3
		01	On	3C	DC2 Trigger OUTPUT	00	Off (Due to the delay
35	FM/AM	00	FM			01	On (Due to the delay
		01	AM	3D	MAIN LEVEL	00	Normal
						01	-10dB
3E	SP B SET	00	MAIN	3F	ZONE2 Amp	00	OFF(External)
		01	ZONE B			01	ON(Internal)

RCMD0, 1	Report Item	RDATA, 1	Status	RCMD0, 1	Report Item	RDATA, 1	Status
40	LEVEL MAIN R	14 15 ... 3C	-10dB +10dB	46	LEVEL SUR BACK L	14 15 ... 3C	-10dB +10dB
41	LEVEL MAIN L	14 ... 3C	-10dB +10dB	47	LEVEL FRONT R	14 15 ... 3C	-10dB +10dB
42	LEVEL CENTER	14 15 ... 3C	-10dB +10dB	48	LEVEL FRONT L	14 15 ... 3C	-10dB +10dB
43	LEVEL REAR R	14 15 ... 3C	-10dB +10dB	49	LEVEL SWFR 1	00 01 ... 28	-20dB -19.5dB 0dB
44	LEVEL REAR L	14 15 ... 3C	-10dB +10dB	4A	LEVEL SWFR	00 01 ... 2	-20dB -19.5dB 0dB
45	LEVEL SUR BACK R	14 15 ... 3C	-10dB +10dB				

RCMD0, 1	Report Item	RDATA, 1	Status	RCMD0, 1	Report Item	RDATA, 1	Status
50	Main L/R Balance	00 ... 14 ... 28	Lch Max Mid Rch Max	54	SP Delay Center	00 01 ... 0A	0ms 0.5ms 5ms
51	LFE Level SP	00 01 ... 14	-20dB -19dB 0dB	55	SP Delay Rear CT	00 01 ... 3C	0ms 0.5ms 30ms
52	LFE Level HP	00 01 ... 14	-20dB -19dB 0dB	58	Wall Paper	00 FE FF	YES Gray NONE
53	Audio Delay	00 01 ... F0	0ms 240ms	5F	Decoder Mode	00 01	Auto Last

RCMD0, 1	Report Item	RDATA, 1	Status	RCMD0, 1	Report Item	RDATA, 1	Status
60	Input Mode	00 01	Auto Last	63	Gray Back	00 01	Off Auto
61	Dimmer	00 01 02 03 04	-4 -3 -2 -1 0	64	Dynamic Range SP	00 01 02	Max. Std. Min.
62	OSD (GUI) Position	X0 ... XA 0X ... AX	Horizontal -5 +5 Vertical -5 +5	65	Dynamic Range HP	00 01 02	Max. Std. Min.
				66	Zone 2 Vol. out	00 01	Var. Fix
				67	Zone 2 Mode	00 01	Mode 1 Mode 2
				68	MEM Guard	00 01	Off On
				69	Video Conv.	00 01	Off On
				6A	COMP OSD	00 01	Off On
				6B	Zone 3 Vol. out	00 01	Var. Fix
				6F	Language	00 01 02 03	English Japanese French German

RCMD0, 1	Report Item	RDAT0, 1	Status	RCMD0, 1	Report Item	RDAT0, 1	Status
70	Center SP	00 01 02	Large Small None	76	SW 1	00 01 02	L-R F-R NONE
71	Main	00 01	Large Small	7B	MULTI CH SELECT	00	6CH
72	Rear LR SP	00 01 02	Large Small None			02	8CH CD
						03	8CH CD-R
						04	8CH MD/TAPE
73	SUR BACK	00 01 02 03 04	Large x2 Large x1 Small x2 Small x1 None			05	8CH DVD
						06	8CH DTV/LD
						07	8CH CABLE
						09	8CH VCR1
						0A	8CH VCR2
		0C	8CH V-AUX				
74	Front	00 01	Yes None	7D	PR/SB SELECT	00 01	PR SB
75	LFE Bass Out	00 01 02	SWFR Main Both	7E	SW CROSS OVER	00	40 Hz
76	SW Config	0X 1X	Normal L Rev. (Reverse)2.00			01	60 Hz
						02	80 Hz
						03	90 Hz
						04	100 Hz
						05	110 Hz
						06	120 Hz
						07	160 Hz
						08	200 Hz

RCMD0, 1	Report Item	RDAT0, 1	Status	RCMD0, 1	Report Item	RDAT0, 1	Status	
80	Test	00 01 02	Off Dolby DSP	8A	THX ASA	00 01 02	Narrow Middle Wide	
83	i.Link P & P	00 01	OFF ON	8B	NIGHT MODE PARAMETER	00 10 11 12 20 21 22	OFF CINEMA LEVEL LOW MIDDLE HIGH MUSIC LEVEL LOW MIDDLE HIGH	
84	i.Link Auto Play	00 01 02 03	A<>P A>P A<P OFF					
			8C			Pure Direct	00 01 02	OFF ON(2ch) ON(Multi)
			8E			HDMI select	00 01	IN1 IN2
			8F	HDMI Support Audio	00 01	V4600 Other		

RCMD0, 1	Report Item	RDATA0, 1	Status	RCMD0, 1	Report Item	RDATA0, 1	Status	
A0	Zone 3 Input	00		A6	Tone Control	00	Bypass(Default)	
		01	CD			01	ON	
		02	TUNER					
		03	CD-R					
		04	TAPE/MD					
		05	DVD					
		06	DTV/LD					
		07	CABLE					
		08						
		09	VCR1					
		0A	VCR2					
		0B						
		0C						
A1	Zone 3 Mute	00	OFF					
		01	ON					
A2	Zone 3 Volume	00	Mute					
		27	-80dB					
		...						
		C7	0dB					
		...						
		E8	16.5dB					
A3	Zone 3 Volume Memory	01	Load A					
		02	B					
		03	C					
		04	D					
		05	E					
		06	F					
A4	Zone 3 Volume Memory	01	Save A					
		02	B					
		03	C					
		04	D					
		05	E					
		06	F					
A5	Mute	00	Mute					
		01	-20dB					

RCMD0, 1	Report Item	RDATA0, 1	Status
B0	Advanced Setup	00	OFF
		01	ON
B1	Remote Control ID	00	ID1
		01	ID2
B2	Fan Control Mode	00	Auto
		01	Cont
B3	Speaker Impedance	00	8 ohm
		01	6ohm
B4	Tuner Setup	00	AM10/FM100
		01	AM9/FM50
B5	Remote ID	00	ID1
		01	ID2

Attention

*When the Input is changed, RX-V4600 sends Operation Report for Input (RCMD0,1="21") and Input mode(RCMD0,1="22").


*When the Home bank is changed, RX-V4600 sends Operation Report for Home bank (RCMD0,1="30") and Configuration Command.

*When a headphone is plugged into the headphone jack and Speaker Relay turned off, RX-V4600 send the Operation Report for Speaker Relay A and B (RCMD0,1="2E","2F", RDAT="00(OFF)"). RX-V4600 sends the Operation Command for Speaker Relay A and B when the headphone is removed also.

*Each time the source from the Inputs or playback status (ex. 6.1/ES, RED dts etc.) of the system changes, RX-V4600 send a Playback Status report.

*Each time the busy status of the system changes, RX-V4600 send the System Status report.

5.4 Display Text Data Report



RCMD0,1	ITEM	DDAT0,1	DDAT2 -7
00	Tuner Frequency	SP	6digits <Upper Lower>

(example)
AM 1710kHz = 'SP' 'SP' '1' '7' '1' '0'
FM 108.5MHz = 'SP' 'SP' '1' '0' '8' '.' '5' '0'

RCMD0,1	ITEM	DDAT 0	DDAT1 –7
01	Master Volume	SP	7digits <Upper Lower>

(example)
-99dB = 'SP' '-' '9' '9' '.' '0' 'd' 'B'

RCMD0,1	ITEM	DDAT0	DDAT1 –7
02	Zone2 Volume	SP	7digits <Upper Lower>

RCMD0,1	ITEM	DDAT0-7
03	Input name SP	8letters <Right Left>

(example)
D-TV/LD = 'SP' 'D' '-' 'T' 'V' '/' 'L' 'D'

RCMD0, 1	ITEM	DDATO -7
04	Zone 2 Input name	8letters <Right Left>

RCMD0,1	ITEM	DDAT0-2	DDAT3-7
05	Zone3 Volume	SP	5digits <Upper Lower>

RCMD0, 1	ITEM	DDATO -7
06	Zone 3	8letters
	Input name	<Right Left>

RCMD0,1	ITEM	DDAT0-3	DDAT4-7
F0	Remote Code	SP	4digits <Upper Lower>

(example)

'SP"SP"SP"SP' 7' 'A' '0' '0'

FUNCTION	ITEM	DATA (ADCII)	RANGE
RCMD0,1	Command	0-9, A-F	0...0xFF
DDAT	Data	0-9, A-Z	ASCII
0-7		SP, other ASCII	Space, dots

Example of RX-V4600 Control Procedure

- [1] Connection Start procedure (AC Plug / RS-232C cable connection)

When the AC plug / RS-232C cable are not connected, RX-V4600 cannot send any data to host. If the host doesn't receive a configuration command after sending Ready command 5 times, host should disable the RS-232C communication of the host and send alert to the graphic user interface (GUI).

- [2] AC plug / RS-232C connection check sequence after the connection has been confirmed in the procedure [1].

If the host doesn't receive a Report Command within 500ms of sending a command, the host should resend the command. If no Report Command is received after sending 5 times, check AC plug/RS-232 cable (see [1]).

When the RS-232C cable is disconnected, the commands generated inside RX-V4600 are stored in the sending buffer. If the stored commands exceed the bufer memory size (buffer overflow), RX-V4600 stops reporting any commands. In this case, reconnecting AC plug or Connection Start procedure [1] will be needed in order to enable the command report.



- [3] AC plug connection detection (after [1],[2])

When the AC connection is reset, RX-V4600 send Configuration Command to the host. Host can feedback the status of RX-V4600 to its GUI.

- [4] Getting the status of the RX-V4600 when the host boot up

At first, host should send Ready command and receive the Configuration Command from RX-V4600 (see [1]). Once the connection is confirmed, host can send Control Commands to the host. While the RX-V4600 is turned off, RX-V4600 only accept System Command and Power ON command.

[1] : AC Plug / RS-232C connection check (Start transaction)

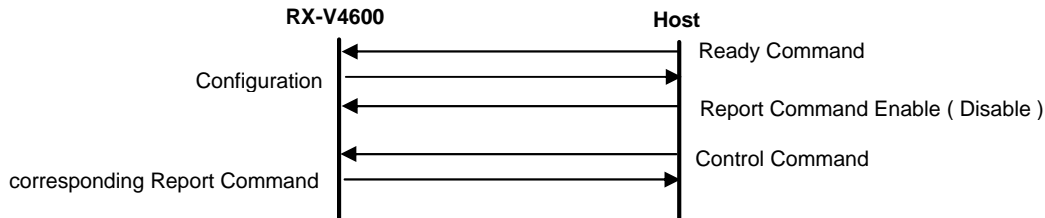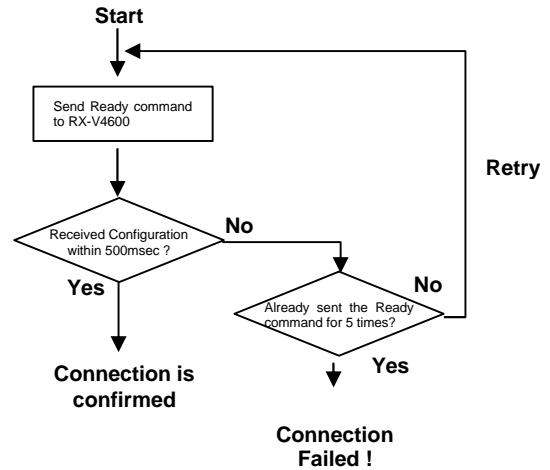

- [5] Error transactions after [4]

While sending control command, if RX-V4600 didn't send any corresponding Report Commands regardless of re-trying for 5 times, host should clear its send buffer and then check AC plug / RS-232C connection sequence (see [1]). When the RX-V4600 responded, the host can feedback the RX-V4600 status to its GUI then return to the normal communication sequence. If not, the host should cancel the communication and report the alert to its GUI.

Appendix

* ASCII Chart

	0	1	2	3	4	5	6	7
0	NUL	DLE	SP	0	@	P	`	p
1	SOH	DC1	!	1	A	Q	a	q
2	STX	DC2	"	2	B	R	b	r
3	ETX	DC3	#	3	C	S	c	s
4	EOT	DC4	\$	4	D	T	d	t
5	ENQ	NAK	%	5	E	U	e	u
6	ACK	SYN	&	6	F	V	f	v
7	BEL	ETB	'	7	G	W	g	w
8	BS	CAN	(8	H	X	h	x
9	HT	EM)	9	I	Y	i	y
A	LF	SUB	*	:	J	Z	j	z
B	VT	EXC	+	;	K	[k	{
C	FF	FS	,	<	L	¥	l	
D	CR	GS	-	=	M]	m	}
E	SO	RS	.	>	N	^	n	...
F	SI	US	/	?	O	_	o	DEL

* the column number = the first hexadecimal digit
the row number = the second hexadecimal digit

* The characters in the gray sells are available in the RS-232C communications.