


MaxAir Zone Setup

The example configuration will have two zones, one for the Central Heating and a second for the Hot Water. If we were setting up a HVAC system then there would only be a single zone.

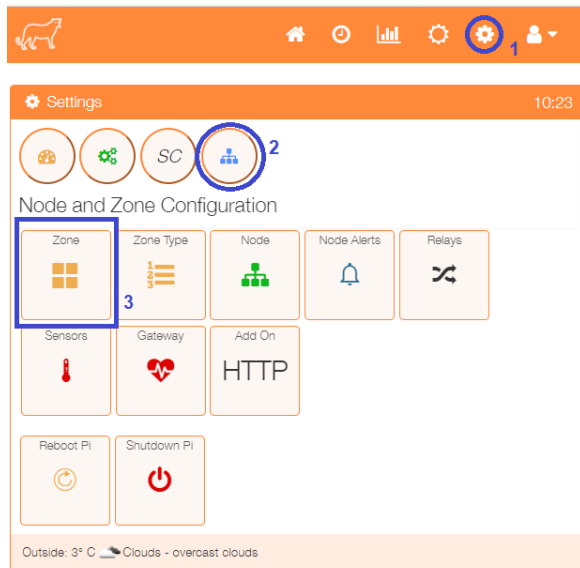

Select the Zone menu item from the Settings/Node and Zone Configuration menu to display a list of any currently configured sensors.

Click on the 'Add Zone' button to configure the first zone.

Zone Settings


Hysteresis (Minimum delay between power off and on)

Maximum operating time

Maximum Zone temperature.

Close

Add Zone

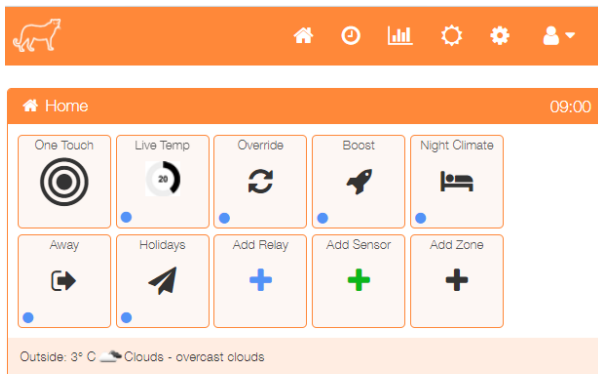

An alternative method to go directly to the Add Zone dialogue, is from the Home screen click on the 'One Touch' button then select the 'Add Zone' menu item.

There are currently five types of zone, Heating, Water, Immersion, Lamp and HVAC. The configuration of the Add Zone dialogue will depend on the type of zone selected. Immersion type zones will disable 'System Controller' selection, HVAC type zones will enable a 'Minimum Temperature' field, while Lamp type zones will disable all temperature sensor related selections, together with the 'System Controller' selection, as these parameters do not apply to these zone types.

The example below shows a typical Heating zone configuration. A similar configuration would be used for the hot water zone. Once the parameters have been entered, click on the 'Submit' button.

☒ **Enable Zone** Enable this Zone if you want this Zone to be controlled

Index Number In the List of Zones where you want to place this Zone on the home screen

Zone Name Zone display name

Zone Type Zone type i.e. Heating, Hot Water or Electrical Immersion

Default Temperature Default temperature this Zone, used when no scheduled temperature is active.

Maximum Temperature Maximum temperature this Zone can reach before Zone heating will shut-off for safety

Temperature Setpoint Deadband Check link for [Deadband](#)

Temperature Sensor Node ID for the Sensor

Zone Controller ID Select Zone Controller Type and Number



Boost Button ID Boost console if you have any

Boost Button's Child ID Boost button number if you have any

System Controller

Outside: 3° C Clouds - overcast clouds

Repeat the process to add any other zones.

Re-selecting the Zone menu item from the Settings/Node and Zone Configuration menu will display the updated list of currently configured zones.

This dialogue can be used to Add/Delete/Edit the zone configurations.

Zone Settings

Hysteresis (Minimum delay between power off and on)

Maximum operating time

Maximum Zone temperature.

<div>Central Heating</div>	Max 25° - Sensor: 21 - GPIO: 53-13
<div>Hot Water</div>	Max 42° - Sensor: 28 - GPIO: 53-15

Close

Add Zone