



TOPLIS

USER MANUAL

TopSky plugin for Portugal vACC

Version 3.1

17 Apr 2025

 TOPLIS User Manual	CONTENTS	0.0 P2
---	----------	----------------------

Contents

1	Introduction	7
1.1	Disclaimer	8
1.2	Foreword	9
2	Systems	10
2.1	A-CDM	11
2.1.1	Operation	11
2.1.1.1	A-CDM Timeline	11
2.1.1.2	Examples	12
2.1.1.3	Commands	13
2.1.2	A-CDM field descriptions	14
2.2	Coordination	17
2.2.1	PEL/COPN	17
2.2.2	XFL/COPX	18
2.2.3	HOP	18
2.2.4	ROF	20
2.2.5	RTI/TIP	20
2.2.6	Coordinating more than one value	22
2.2.7	Data stored in the flight strip annotation boxes	22
2.3	Datalink	24
2.3.1	Departure Clearance (DCL)	25
2.3.1.1	Departure Clearance Request (RCD)	25
2.3.1.2	Flight System Message (FSM)	26
2.3.1.3	Departure Clearance Message (CLD)	26
2.3.1.4	Departure Clearance Readback (CDA)	26
2.3.1.5	Flight System Message (FSM)	26
2.3.1.6	Abnormal operations	27
2.3.2	Controller-Pilot Data Link Communications (CPDLC)	27
2.3.2.1	Allowed message types	27
2.3.2.2	Non-supported message types	27
2.3.2.3	Uplink clearance sequence	28
2.3.2.4	Downlink request sequence	29
2.3.2.5	Free Text Messages	30
2.3.2.6	Abnormal operations	30

 TOPLIS User Manual	CONTENTS	0.0 P3
---	----------	------------------

2.4	Flight Plan Conflict Probe	33
2.4.1	MTCD (Medium Term Conflict Detection)	33
2.4.2	SAP (Segregated Area Probe)	34
2.5	Monitoring Aids	36
2.5.1	CLAM (Cleared Level Adherence Monitoring)	36
2.5.2	RAM (Route Adherence Monitoring)	36
2.6	Safety Nets	37
2.6.1	AIW (Airspace Infringement Warning)	37
2.6.2	APW (Area Proximity Warning)	37
2.6.3	MSAW (Minimum Safe Altitude Warning)	37
2.6.4	STCA (Short Term Conflict Alert)	38
2.7	Sector States	39
2.8	Label field descriptions	42
3	User Interface	64
3.1	Main Window	65
3.2	Global Menu	66
3.2.1	Setup Menu	66
3.2.1.1	Unit Settings submenu	67
3.2.1.2	CFL submenu	70
3.2.1.3	Flight Leg submenu	70
3.2.1.4	RR Main submenu	71
3.2.2	AMS menu	71
3.2.2.1	NAT submenu	71
3.2.3	FData menu	71
3.2.4	Tools menu	72
3.2.4.1	Flight Plan Lists submenu	72
3.2.4.2	CPDLC submenu	73
3.2.5	MET menu	73
3.2.6	[0]	74
3.2.7	Info menu	74
3.2.8	MSG menu	74
3.2.8.1	Text notes submenu	75
3.2.9	[x] [x]	75
3.2.10	STS menu	76
3.2.10.1	Plugin Status submenu	76
3.2.10.2	Supervisory submenu	77
3.2.11	RRxxx/Off	77
3.2.12	Mxxx-yyy	77
3.2.13	S000-999	77
3.3	Aircraft Position Symbol	78
3.3.1	History dots	78
3.3.2	Prediction Line	78
3.3.3	Track filtering	79
3.4	Track Labels	80
3.4.1	Standard Track Label	80
3.4.2	Reduced Track Label	81
3.4.3	Extended Track Label	81

 TOPLIS User Manual	CONTENTS	0.0 P4
---	----------	----------------------

3.4.4	Minimized Track Label	82
3.4.5	Uncoupled Track Label	83
3.4.6	Line 0 Construction	83
3.4.7	Label Interaction	85
3.4.7.1	Line 0	85
3.4.7.2	Line 1	86
3.4.7.3	Line 2	86
3.4.7.4	Line 3	87
3.4.7.5	Line 4	87
3.4.7.6	Extended Label	87
3.4.7.7	Uncoupled Label	88
3.4.8	Label Compaction	88
3.5	Track Label Menus	90
3.5.1	Callsign Menu	90
3.5.2	Transfer menu	93
3.5.3	Transfer Confirmation Window	94
3.5.4	Request On Frequency message	94
3.5.5	Hold/Susp Menu	95
3.5.6	Manual Transfer Menu	96
3.5.7	VCI Menu	96
3.5.8	CPDLC Free Text Menu	97
3.5.9	Prediction Line Menu	97
3.5.10	Sequence Number Menu	98
3.5.11	Waypoint Menu	98
3.5.12	AFL Menu	101
3.5.13	CFL Menu	102
3.5.14	RFL Menu	104
3.5.15	AHDG Menu	105
3.5.16	AHDG Vector	106
3.5.17	Handover Proposal (HOP)	107
3.5.18	Request Tactical Instructions (RTI) / Tactical Instructions Proposal (TIP) . . .	107
3.5.19	ARC Menu	109
3.5.20	ASP Menu	110
3.5.21	SSR Code Menu	112
3.5.22	Combined Transfer Menu	112
3.5.23	Aerodrome Menu	113
3.5.24	CPDLC Emergency Acknowledgement Menu	113
3.5.25	CPDLC Pilot Late Acknowledgement Menu	114
3.5.26	Time Menu	114
3.5.27	Departure Sequence Menu	115
3.6	Aircraft Lists	116
3.6.1	Departure List	116
3.6.2	Sector List	117
3.6.3	Load Factor List	120
3.6.4	Resectorisation List	120
3.6.5	ETWR List	121
3.6.6	Uncontrolled Lists	122
3.6.7	Lost List	123

 TOPLIS User Manual	CONTENTS	0.0 P5
---	----------	----------------------

3.6.8	Traffic Management Lists	125
3.6.9	Holding List	126
3.6.10	Unsupported Lists	128
3.7	Windows	129
3.7.1	Radar Menu	130
3.7.2	QDM Vector	131
3.7.3	Multi-QDM vector	132
3.7.4	Scale Marker	132
3.7.5	Minimum Separation Tool	132
3.7.6	View Window	134
3.7.7	Zoom Window	134
3.7.8	Maps Windows	134
3.7.9	Track Control Window	135
3.7.10	Altitude Filtering Window	136
3.7.11	CJI Filtering Window	137
	3.7.11.1 Primary Track Filtering	138
	3.7.11.2 Uncontrolled Flight Filtering	138
3.7.12	SSR Code Filtering Window	138
3.7.13	Quick Look	139
	3.7.13.1 Individual Quick Look	139
3.7.14	Level Band Highlight	139
3.7.15	Oceanic Level highlight	139
3.7.16	Clock Window	139
3.7.17	Brightness Control Window	140
3.7.18	CPDLC Setting Window	140
3.7.19	Raw Video Control Window	142
3.7.20	Airspace Management Window	142
	3.7.20.1 Area display	145
	3.7.20.2 Area label	146
3.7.21	NAT List Window	147
3.7.22	Flight Plan Selection Window	147
3.7.23	Flight Plan Window	148
3.7.24	Complete Route Window	152
3.7.25	Create APL Window	152
3.7.26	Stack Manager Window	153
3.7.27	CARD	155
3.7.28	SAP Window	157
3.7.29	Vertical Aid Window	158
3.7.30	Message In Window	159
3.7.31	Message Out Window	160
3.7.32	Shortcut Window	162
3.7.33	Microphone Check Menu	162
3.7.34	CPDLC Current Message Window	163
3.7.35	Manual Reply Window	164
3.7.36	CPDLC History Message Window	165
3.7.37	Cursor Lat/Long Window	165
3.7.38	Find Track	165
3.7.39	Weather Messages Window	165

 TOPLIS User Manual	CONTENTS	0.0 P6
---	----------	------------------

3.7.40	Upper Winds Window	167
3.7.41	Airfield Data Window	168
3.7.42	General Information Window	168
3.7.43	Miscellaneous Information Window	169
3.7.44	NOTAM List Window	170
3.7.45	Small QNH/TL Window	171
3.7.46	LFUNC Frequency Plan Window	172
3.7.47	Notepad Window	172
3.7.48	Personal Queue Window	173
3.7.49	ATC / Primary Frequency Messages Window	173
3.7.50	NAT Track Messages Window	174
3.7.51	Safety Nets Status Window	174
3.7.52	Divergence Detection Status Window	176
3.7.53	MTCN Status Window	176
3.7.54	FPCA Status Window	177
3.7.55	Runway in Use Window	178
3.7.56	Runway Approach Line Window	179
3.7.57	Operations Rate Window	180
3.7.58	Predicted Traffic Window	181
3.7.59	Air Traffic Flow Management Window	181
3.7.60	Current Operational Load Window	183
3.7.61	Operational Load Forecast Window	183
3.7.62	Pre-Departure Clearance Window	184
3.7.63	Departure Coordination Window	185
3.7.64	Departure Clearance Window	186
3.7.65	Oceanic Time Restriction Window	188
3.8	Flight Leg	189
3.9	Keyboard Shortcuts	190
3.10	Color Values	191
4	Known issues	202
4.1	GitHub Repository	203
4.2	Airport and area hotspots block screen panning	204
4.3	ROF/RTI/TIP message availability limited	205
4.4	Problems opening the Radar Menu	206
A	Figures	207
B	Tables	211
C	Bibliography	213
	Bibliography	214

 TOPLIS User Manual	INTRODUCTION	1.0 P7
--	---------------------	----------------------

Chapter 1

Introduction

 TOPLIS User Manual	INTRODUCTION DISCLAIMER	1.1 P8
---	---------------------------------------	----------------------

1.1 Disclaimer

Although - as its name suggests - the TopSky plugin is based on TOPLIS and the TopSky ATM system, it is in no way affiliated with or endorsed by Thales Group or NAV Portugal. Similarities between plugin features and the real system are not entirely coincidental, but the plugin can not be used as a real world training aid.

 TOPLIS User Manual	INTRODUCTION FOREWORD	1.2 P9
---	-------------------------------------	----------------------

1.2 Foreword

EuroScope, a controller client developed by Gergely Csernák for the VATSIM network, was first released for public use in September 2007. One of the biggest changes in version 3.1 was the possibility for the user community to customize the program to an even higher degree than was possible before by writing their own plugins that can be used to alter the way information is presented and even create completely new functionality into the program. This allowed creating very detailed simulations of all kinds of ATC systems without making the main program overly complex. Version 3.2 expands on these possibilities, making it possible to create even better plugins.

The base TopSky plugin is developed by Juha Holopainen. The TopSky plugin (a.k.a. The Plugin Formerly Known As “EUROCAT 2000 E”) started out as a very small project to create a couple of customized aircraft tag items, but as more information about the real system and the possibilities with the plugin development became available, it slowly grew to include an almost complete set of tag items, tag menus, graphical elements on the radar display and some additional functionality.[4]

The A-CDM plugin is developed by Roger Puig. CDM is an Euroscope plugin based on the real life CDM tool that allows us to improve the departure flows at airports.[5]

 TOPLIS User Manual	SYSTEMS	2.0 P10
--	----------------	-----------------------

Chapter 2

Systems

 TOPLIS User Manual	SYSTEMS A-CDM	2.1 P11
---	-----------------------------	-----------------------

2.1 A-CDM

Airport CDM (A-CDM) aims to improve the efficiency and resilience of airport operations by optimising the use of resources and improving the predictability of air traffic.

It also allows the exchange of more accurate departure information, particularly target take-off times, with the European ATFCM network, leading to improved en-route and sectoral planning.[1]

2.1.1 Operation

The A-CDM plugin operates in a Master-Slave topology, in which the "CDM Master" will calculate the required data and distribute it to the slaved CDM positions. Due to this, it is mandatory that the "Master" ATC is the one at the lowest position, such as Delivery.

Warning	IF THERE IS NO ACTIVE "CDM MASTER" A-CDM WILL NOT BE OPERATIONAL
Warning	IF MORE THAN ONE POSITION ASSIGNS ITSELF AS "CDM MASTER" A-CDM WILL NOT BE OPERATIONAL

At the end of a session or controller swap, the "CDM MASTER" ATC should return himself to "CDM SLAVE" before the next controller takes over.

2.1.1.1 A-CDM Timeline

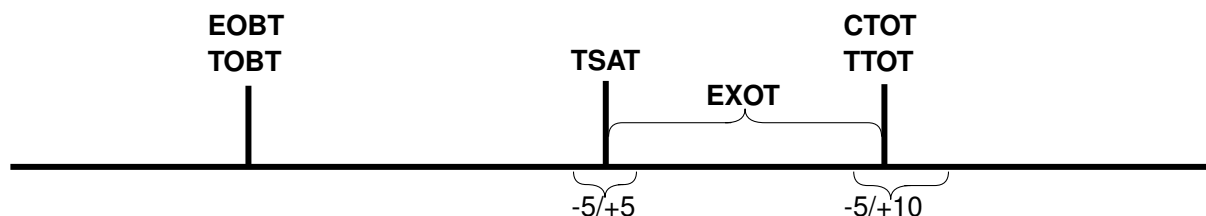



Figure 2.1: A-CDM timeline with delaying TSAT example

Each departure follows a timeline of events from the moment a Flight Plan is submitted until the flight is airborne. These events are called "Milestones".

The A-CDM calculation begins at Target Off Block Time (TOBT). TOBT is the time the aircraft is ready for startup, or push and start. This is typically the time at which the pilots reports "fully ready", or requests pushback or startup. In an optimal scenario this would match with the flight plan Estimated Off Block Time (EOBT, sometimes called ETD in other sources).

A-CDM will calculate a Target Take Off Time (TTOT) based on the TOBT, current departure rate, known traffic and Flow Restrictions. Each TTOT is separated from other TTOTs by the amount of time required to achieve the maximum defined departure rate. During moments of high traffic that, without a regulation, would exceed the airport departure rate capacity, the system will delay the TTOT in order to meet the required departure rate.

Different Stands have different Estimated Taxi Out Time (EXOT). A stand closer to the runway will have a shorter EXOT than another further away. The system adds EXOT to TOBT, to obtain TTOT.

 TOPLIS User Manual	SYSTEMS A-CDM	2.1 P12
--	-----------------------------	-----------------------

Target Start-up Time (TSAT) is the time at which a flight may push back and start up.

If there is no delay, TSAT will be the same as TOBT.

If there is a delay, TSAT will be the difference from TTOT - EXOT.

A TSAT has a validity window of -5 to +5 minutes, within which start-up approval may be issued.

A TSAT within the validity window will be colored in color1, or if outside the validity window color2. Additionally, it will be colored in color5 the minute it expires, as an attention getter.

If a flight misses its TSAT, a new one must be assigned by right clicking the TSAT value in order to set TOBT to present time and restart the CDM calculation for the concerned flight.

During times of extraordinary demand, a Calculated Take-Off Time (CTOT) may be issued for a certain flight. The A-CDM operation remains the same, with the exception that it will try to match TTOT to CTOT. A CTOT has a validity window of -5 to +10 minutes of CTOT, during which Take Off clearance must be issued.

During some events, a manually created list of callsign and CTOT pairs may be created. These are Event CTOT, or ECTOT. ECTOT on their own do not contribute to A-CDM calculations, unless manually added as a CTOT to the flight.

Once A-CDM is made aware of the assignment of a CTOT to a flight, it will keep the same CTOT locked until a Ready Message (REA) is sent, even if the external source of the CTOT is updated with an improvement.

2.1.1.2 Examples

The system first attempts to calculate a departure with no delay, by adding EXOT to TOBT it obtains TTOT. For example, TAP123 reports "fully ready" at 12:00 (TOBT 12:00), sitting on a stand with 15 minutes of taxi time (EXOT 15 minute), the system predicts TAP123 will be able to take off at 12:15 (TTOT 12:15). Because there is no conflict, TSAT is equal to TOBT (TSAT 12:00)

A second flight, RYR456, reports "fully ready" at the very next minute (TOBT 12:01), but is on a stand very close to the runway with a shorter taxi time (EXOT 5 minutes, for example), the system predicts RYR456 will be able to take off at 12:06 (TTOT 12:06). Because there is no conflict, TSAT is equal to TOBT (TSAT 12:01).

Notice how RYR456 was ready for push and start after TAP123, yet, because of the very short taxi time, it will take off much sooner than TAP123.

A third flight, IBE789, also reports "fully ready" at 12:01 (TOBT 12:01), sitting on a stand with 15 minutes of taxi time (EXOT 15 minute), the system predicts IBE789 will be able to take off at 12:16 (TTOT 12:16).

However, this TTOT is too close to TAP123 (TTOT 12:15) and must be delayed for separation.

The system calculates that according to the current departure rate, IBE789 must take off at 12:18 (TTOT 12:18). By subtracting the 15 minutes Estimated Taxi Out Time from the Target Take Off Time, the system obtains IBE789's Target Startup Time of 12:03 (TTOT - EXOT = TSAT, 12:18 - 15 = 12:03). This is a very small delay, in fact so small that it falls within the TSAT window. IBE789 TSAT is 12:03, and because the TSAT window is +/- 5 minutes (11:58 - 12:08). IBE789 may be pushed back at anytime within this window.

A fourth flight, EJU321, is departing to the same destination as IBE789. This destination has limited capacity and can only accept arrivals in 15 minute intervals. The system will take care of this limitation, no intervention should be required.

 TOPLIS User Manual	SYSTEMS A-CDM	2.1 P13
---	-----------------------------	-----------------------

EJU321 reports "fully ready" at 12:01 (TOBT 12:01), sitting on a stand with 15 minutes of taxi time (EXOT 15 minute), the system predicts EJU321 will be able to take off at 12:16 (TTOT 12:16). Because of the restriction at destination, the earliest time that EJU321 can take off, while remaining separated of IBE789, is 12:33 (IBE789's TTOT, 12:18, + 15 minutes required separation at destination).

The system assigns a Calculated Take Off Time of 12:33 to EJU321 (CTOT 12:33). By subtracting the taxi time from this (EXOT 15 minutes), the system obtains TSAT 12:18 (CTOT - EXOT = TSAT, 12:33 - 15 = 12:18).

EJU321 must wait on the stand until the TSAT window (12:13 - 12:23) before being able to pushb and start.

2.1.1.3 Commands

Interaction with core A-CDM systems is done with classic command line inputs:

<code>.cdm reload</code>	Reloads all CDM configs
<code>.cdm refresh</code>	Forces a data refresh phase
<code>.cdm ctot</code>	Refreshes CTOT data
<code>.cdm save</code>	Saves data to <code>savedData.txt</code>
<code>.cdm load</code>	Loads <code>savedData.txt</code>
<code>.cdm master "airport"</code>	Become the master of the selected airport.
<code>.cdm slave "airport"</code>	Turn back to slave of the selected airport.
<code>.cdm refreshtime "seconds"</code>	Change refresh rate time in seconds (Default 30, MAX 99).
<code>.cdm customdelay "airport"/"runway" "time_start"</code>	Shifts all TSATs for selected airport and runway to start at the <code>time_start</code> . Wait some seconds to update after applied. (Ex. <code>.cdm customdelay LPPT/02 1100</code> All TSATs from LPPT runway 02 will start at 1100). To remove use <code>.cdm customdelay LPPT/02 9999</code> .
<code>.cdm lvo</code>	Toggle LVO on or off
<code>.cdm realmode</code>	Toggle realmode on or off
<code>.cdm remarks</code>	Toggle set TSAT to Euroscope scratchpad on or off
<code>.cdm rates</code>	Updates rates values from <code>rate.txt</code>
<code>.cdm flow</code>	Forces an update on ECFMP flow restrictions data, otherwise updated every 5 minutes.
<code>.cdm help</code>	Show all available commands

Table 2.1: A-CDM commands


 TOPLIS User Manual	SYSTEMS A-CDM	2.1 P14
---	-------------------------	-------------------

2.1.2 A-CDM field descriptions

Data field	Description	Comments	Color
A	Alert	Flashes A if the aircraft is waiting for an action	color5
ASAT	Actual Start-Up Approval Time	Automatically records time of Start-Up Approval when inputting a Start-Up, Push-back, Taxi or DEPA Ground Status	color12
ASRT	Actual Start-Up Request Time	Used to record time of Ready or Start-Up Request	color10
CTOT	Calculated Take Off Time	Flow restrictions create CTOTs to planes affected with published MDIs from ECFMP	color11 If REA message has been sent: color2 If Manual or Event CTOT: color4 If Manual or Event CTOT, and Flow/CAD CTOT: color7
Delta CTOT	Countdown to CTOT		color11 If REA message has been sent: color2 If Manual or Event CTOT: color4 If Manual or Event CTOT, and Flow/CAD CTOT: color7
ECTOT	Event Calculated Take Off Time	Similar to <i>CTOT</i> , but originating from a manually compiled list of callsign and CTOT pairs. Needs to be manually added to <i>CTOT</i> to have an effect on A-CDM calculations.	color11

 TOPLIS User Manual	SYSTEMS A-CDM	2.1 P15
---	-------------------------	-------------------

Data field	Description	Comments	Color
E	State	Depending on aircraft timing: P: EOBT more than 35 minutes in the future C: EOBT is less than 35min and TSAT not expired I: TSAT expired	color1
EOBT	Estimated Off Block Time	Same time as Flight Plan ETD or EOBT	color8 If a new EOBT is submitted by the pilot, and EOBT is different than TOBT: color4
Flow Message	ECFMP Flow Message	Description of the restriction impacting the flight	color8
FSTS	Flight Plan Status	REA if Ready message has been sent PRIO to give priority for improvement SUSP if flight plan has been suspended Empty otherwise	REA: color5 PRIO: color1 SUSP: color7
Ready	Ready State Flag	Used to signal Ready state. Setting Ready also records time of Ready or Start-Up Request	Ready: color1 Not Ready: color7
TOBT	Target Off Block Time	On receipt of a new Flight Plan, TOBT is set to the same time as EOBT. If the Flight Plan is updated with a new EOBT, TOBT will not change automatically. If required, TOBT may be manually updated using the Edit TOBT function	From TOBT-35 to TOBT-5 color2 From TOBT-5 to TOBT+5: color1

 TOPLIS User Manual	SYSTEMS A-CDM	2.1 P16
---	-------------------------	-------------------

Data field	Description	Comments	Color
TSAC	Target Start-Up Approval Communicated Time	Used to note down TSAT communicated to the flight	If TSAC within 5 minutes of TSAT: color1 If TSAT changed by more than 5 minutes: color4
TSAT	Target Startup Time / Delay	TTOT - EXOT. Ammount of delay may be displayed right of the slash, as the difference between TOBT and TSAT.	From EOBT-35 to TSAT-5: color2 From TSAT-5 to TSAT+5: color1 From TSAT+5 to TSAT+6: color5 After TSAT+6: color2
TTOT	Target Take Off Time		color9 If TTOT is locked due to a CDT restriction: color2
Delta TTOT	Countdown to TTOT		color9 If TTOT is locked due to a CDT restriction: color2

Table 2.2: A-CDM field descriptions

 TOPLIS User Manual	<div style="text-align: center;"> SYSTEMS </div> <div style="text-align: center;"> COORDINATION </div>	<div style="text-align: center;"> 2.2 </div> <div style="text-align: center;"> P17 </div>
---	--	---

2.2 Coordination

TopSky provides various ways to coordinate information between controllers.

The example track labels do not represent any specific setup and are only meant to highlight the items specific to each function. In the examples, aircraft ABC123 is assumed by “transferring controller” and the next sector is referred to as “accepting controller”. For reference, the example labels would look like these before any coordination (coordination point TROIA, entry/exit level FL180):

Transferring controller:

```

ABC123  IDA
100      ▲   TROIA
180
  
```

Accepting controller:

```

ABC123  IDT
100      ▲   TROIA
180
  
```

Some of the coordination functions (ROF, RTI and TIP) require very specific conditions to exist to be able to send the necessary messages between the controllers. TopSky attempts to check for this and either disables the function (grey text in the menu button) or creates a warning message if the conditions are lost during a coordination, but in some cases the coordination messages can get lost. In this case try the coordination again or manually coordinate.

2.2.1 PEL/COPN

A coordination is displayed by coloring the proposed values **Proposition In** or **Proposition Out**, depending on whether the coordination was sent or received, in the track label and the flight lists. Additionally, a message is displayed in the *Message In Window* for received coordinations and in the *Message Out Window* for coordinations sent by you.

To send a PEL (Planned Entry Level) coordination, left-click on the PEL value in the track label or a flight list. This opens a menu to select a value. To send a COPN (Entry Point) coordination, left-click on the COPN value in the track label or a flight list. This opens the *Waypoint Menu*. Select “Probe”. This opens a menu to select the desired point. The response of the coordination can be a counter-proposal as well, in which case the color of the values remain **Proposition In**.

An example track label, showing both the PEL and COPN being coordinated:

```

ABC123  IDT
100      ▲   TROIA
180
  
```

To answer an incoming coordination, left-click on a proposed value or the corresponding message in the *Message In Window*. This opens a menu where you can select the response (Accept, Refuse or Change). After the response, the track label and lists display depend on the answer:

 TOPLIS User Manual	<div style="text-align: center;"> SYSTEMS </div> <div style="text-align: center;"> COORDINATION </div>	<div style="text-align: center;"> 2.2 </div> <div style="text-align: center;"> P18 </div>
---	--	---

Accept: Accepted values, sector state color

Refuse: Original values, sector state color (EuroScope bug, should be **Warning**)

Change: New proposed values in **Proposition Out**

2.2.2 XFL/COPX

A coordination is displayed by coloring the proposed values **Proposition In** or **Proposition Out**, depending on whether the coordination was sent or received, in the track label and the flight lists. Additionally, a message is displayed in the *Message In Window* for received coordinations and in the *Message Out Window* for coordinations sent by you.

To send an XFL (Exit Flight Level) coordination, left-click on the XFL value in the track label or a flight list. This opens a menu to select a value. To send a COPX (Exit Point) coordination, left-click on the COPX value in the track label or a flight list. This opens the *Waypoint Menu*. Select "Probe". This opens a menu to select the desired point. The response of the coordination can be a counter-proposal as well, in which case the color of the values remain **Proposition In**.

An example track label, showing both the XFL and COPX being coordinated:



To answer an incoming coordination, left-click on a proposed value or the corresponding message in the *Message In Window*. This opens a menu where you can select the response (Accept, Refuse or Change). After the response, the track label and lists display depend on the answer:

Accept: Accepted values, sector state color

Refuse: Original values, sector state color (EuroScope bug, should be **Warning**)

Change: New proposed values in **Proposition Out**

2.2.3 HOP

The purpose of the HOP (Hand-Over Proposal) message is for the transferring controller to propose the flight for hand-over to the accepting controller, and/or to propose non-standard transfer conditions which require the approval of the accepting controller.

To send a HOP without any transfer conditions, select the *Handover Proposal (HOP)* option in the *Callsign Menu*.

To send a HOP with a transfer condition (assigned heading, direct-to point or assigned speed):

1. open the AHDG or ASP menu and select the "HOP" option (found in the "More" folder)
 - See *Handover Proposal (HOP)* for indications

 TOPLIS User Manual	<div style="text-align: center;"> SYSTEMS </div> <div style="text-align: center;"> COORDINATION </div>	<div style="text-align: center;"> 2.2 </div> <div style="text-align: center;"> P19 </div>
--	--	---

2. select the desired value (to select a direct-to point, select the “Point” option in the AHDG menu and then left-click on the point on the radar screen)

The example labels below show a HOP with an assigned heading proposal:

Transferring controller:

- SI item and any proposed values in **Proposition Out** color
- Message in Message Out Window

```

ABC123  IDA
100      ▲   TROIA
180
H360
  
```

Accepting controller:

- Callsign item and any proposed values in **Proposition In** color
- Message in Message In Window

```

ABC123  IDT
100      ▲   TROIA
180
H360
  
```

The transferring controller should monitor both the track label and the *Message In Window* as there are three ways for the accepting controller to answer a HOP. In order of preference, they are:

- From the *Callsign Menu*, select “ROF”. This sends a ROF message to the transferring controller.
 - See *Request On Frequency message* for indications
- Left-click on the AHDG, ASP or COPN item. This opens the *Combined Transfer Menu*. In it, select “Accept”. This sends an Accept message to the transferring controller.
 - The labels on both controllers’ screens return to normal sector state coloring
 - A message is put into the Message In Window for the transferring controller
 - A message is put into the Message Out Window for the accepting controller
- From the *Callsign Menu*, select “Assume”. This assumes the aircraft (with the other two answers the aircraft remains assumed by the transferring controller)
 - The labels on both controllers’ screens return to normal sector state coloring

Note

If a HOP is sent to a controller not using the TopSky plugin, it will only be displayed on your label. To the accepting controller it will look like a normal transfer. Any proposed values will be shown also on the accepting controller’s label but they will not be colored as proposals.

If a HOP is sent to a manually selected controller and is answered by either “Accept” or “ROF”, the next controller is reset to the automatically calculated one. The correct controller needs to be manually selected again before transferring the aircraft.

 TOPLIS User Manual	SYSTEMS COORDINATION	2.2 P20
---	------------------------------------	-----------------------

2.2.4 ROF


The ROF (Request on Frequency) message is sent by the accepting controller to the transferring controller when a flight establishes radio contact but the label has not yet been transferred to the downstream sector. The upstream sector should then transfer the label. The message may also be used as a reply to HOP to signify the acceptance of the flight under the proposed conditions.

Warning	ROF should not be used to request an early handover of a flight. ROF is a coordination tool that is context dependent, using it outside the prescribed scenarios or in other unintended ways will cause unnecessary confusion.
----------------	--

To send a ROF message, select the “ROF” option in the *Callsign Menu* of the aircraft in question. The example labels below show the indications when the message is sent:


Transferring controller:

- ROF text in **Proposition In** color
- Message in Message In Window

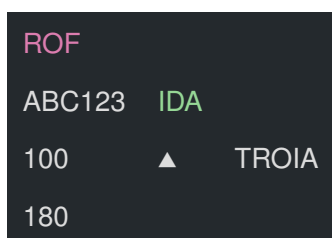

Accepting controller:

- ROF text in **Proposition Out** color
- Message in Message Out Window

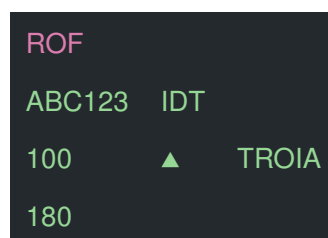

The indications are removed when a “Transfer” or “HOP” is performed.

Note	If a ROF is sent to a controller not using the TopSky plugin or the message fails to go through, an error message will be put into the Personal Queue Window. The message counter in the Global Menu will be highlighted in Global Menu Highlight color if the window is not open.
-------------	---

2.2.5 RTI/TIP

These messages are used to request/propose the transfer of a flight on an assigned heading, speed or rate of climb/descent. RTI (Request Tactical Instructions) is a request initiated by the accepting controller and TIP (Tactical Instructions Proposal) a proposal initiated by the transferring controller.

In the examples below the RTI message is used. For the TIP message, the indications and actions are the same, only the roles are reversed – the transferring controller sends and the accepting controller answers the message, so the message will appear in the other Message Window.

To send the RTI message:

1. open the AHDG, ASP or ARC menu and select the “RTI” option (found in the “More” folder)


 TOPLIS User Manual	SYSTEMS COORDINATION	2.2 P21
---	------------------------------------	-----------------------

- select the desired value in the list (“Point” option in the AHDG menu is not available)

When the message is sent, the following indications are shown:


Transferring controller:

- Proposed value in **Negotiation In** color
- Message in Message In Window

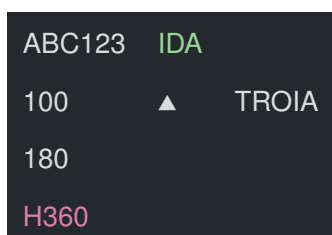

Accepting controller:


- Proposed value in **Negotiation Out** color
- Message in Message Out Window

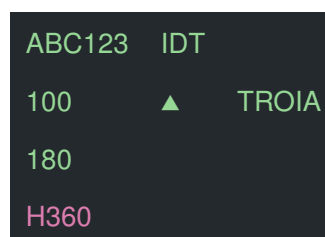

To answer the message, left-click on the proposed value. This opens the *AHDG Menu*, *ASP Menu* or *ARC Menu* in a mode where you can either accept or reject the proposal. When clicking on “Ack”, the menu closes and the following indications are displayed:


Transferring controller:

- Relevant label field value in **Reminder** color (until the accepted value is set)
- Message in Message Out Window

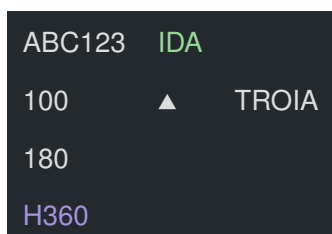

Accepting controller:

- Relevant label field value in **Reminder** color (until the accepted value is set)
- Message in Message In Window

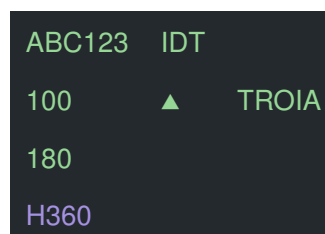

When the accepted value has been set, the label field returns to the sector state color. When replying to an RTI message, the menu also includes an “Accept” option which, in addition to accepting the coordination, also immediately sets the value. While the coordinated value is being shown in the label field, it is possible to display the currently set value temporarily by hovering the mouse cursor over the label and keeping the <ALT> key pressed.

On the other hand, if “Reject” is chosen, the menu closes the indications are as follows:

 TOPLIS User Manual	<div style="text-align: center;"> SYSTEMS COORDINATION </div>	<div style="text-align: center;"> 2.2 P22 </div>
---	--	---

Transferring controller:

- Rejected value in **Warning** color
- Message in Message Out Window

```

ABC123  IDA
100      ▲   TROIA
180
H360
  
```

Accepting controller:

- Rejected value in **Warning** color
- Message in Message In Window

```

ABC123  IDT
100      ▲   TROIA
180
H360
  
```

A rejected coordination value will be removed from the label after 60 seconds or by right-clicking the value.

Note

If an RTI or TIP is sent to a controller not using the TopSky plugin or the message fails to go through, an error message will be put into the Personal Queue Window. The message counter in the Global Menu will be highlighted if the window is not open.

2.2.6 Coordinating more than one value

It is possible to coordinate more than one value, either before or after the previous proposal has been answered. However, if more than one proposal is active, clicking on “Ack” or “Reject” to one will send the same answer to all of them. Therefore, it is recommended to wait for an answer until sending another proposal unless the intention of the proposal is to get “all or nothing”.

For example, if you send an RTI with AHDG 360 (as in the above example) and then send another with ASP 300 (either immediately or after the first coordination is answered), the label field on line 0 will only show the ASP proposal. When opening the Tactical Transfer menu, all the proposals and accepted values are shown. If more than one proposal is active, clicking on “Accept” or “Reject” will send the same answer to all of them. Therefore, it is recommended to wait for an answer until sending another proposal unless the intention of the proposal is to get “all or nothing”.

2.2.7 Data stored in the flight strip annotation boxes

TopSky stores some data in the flight strip annotation boxes (the group of nine boxes in three columns on the right side of the strip). This enables you to send this data to the next controller, or any other controller by manually pushing the strip. In addition, TopSky automatically pushes the strip when a handoff proposal (HOP) is sent.

TopSky needs to be able to use three of the nine boxes for its functions. They are the boxes marked with X's in the picture below. Do not manually edit those boxes or use them to store any other data. The other boxes, marked by minus signs, are currently not used by TopSky in any way.

 TOPLIS User Manual	SYSTEMS COORDINATION	2.2 P23
---	------------------------------------	-----------------------

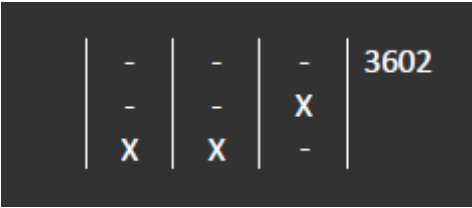


Figure 2.2: Unusable flight strip boxes

 TOPLIS User Manual	SYSTEMS DATALINK	2.3 P24
---	--------------------------------	-----------------------

2.3 Datalink

TopSky uses *Hoppie's ACARS network*. A separate password (logon code) is needed, and it can be requested from that site.

TopSky supports Departure Clearance (DCL) and Controller-Pilot Data Link Communications (CPDLC).

To start using the data link functions, first connect to the VATSIM network. Then connect to the Hoppie network:

- Open the *CPDLC Setting Window*
- Enter/check the login callsign
- Enter/check your personal logon code
- Select whether to provide CPDLC or DCL services or both
- Left-click on the “Connect” button

The “Connect” button will change to “Online” with a green background. Wait at least 10 seconds to see if the connection is successful. Error messages regarding the connection will be shown in the *Personal Queue Window*.

Warning	Attempting to connect with a CPDLC login callsign that is already in use will not fail instantly, and may take up to 10 seconds for the error message to be added to the <i>Personal Queue Window</i>
----------------	---

The Hoppie logon code expires after 120 days of inactivity. If that happens, the connection will fail and a new logon code has to be requested.

If the connection is lost, an error message dialog will be displayed in the center of the radar screen. Note that if multiple EuroScope instances are used, the proxy instances will not be able to access the CPDLC message windows or change the network connection status.

TopSky may sometimes fail to parse the message contents correctly. The longer the message, the more likely it is that the parsing will fail. When in doubt, open the message in the *CPDLC Current Message Window*.

The example track labels do not represent any specific setup and are only meant to highlight the items specific to each function. In the examples, aircraft ABC123 is assumed by you, the next controller is “IDA”, the aircraft is climbing through FL100, and its cleared level is FL180. This is the label before any messages arrive:



 TOPLIS User Manual	SYSTEMS DATALINK	2.3 P25
--	--------------------------------	-----------------------

When the aircraft requests to start a CPDLC connection, it sends a “REQUEST LOGON” message. The message is displayed in the *CPDLC Current Message Window* and the Callsign field gets blinking square brackets around it (not on proxy ES instances). TopSky automatically denies requests for aircraft not entering your sector. To approve the request, use the “Start CPDLC” button in the *Callsign Menu*. To deny the request, left-click on the message in the *CPDLC Current Message Window* and select “UNABLE”. It is also possible to accept if necessary, but the *Callsign Menu* is the primary way to do it.

When the request has been accepted, the Callsign field will get steady square brackets around it. This indicates that the aircraft is CPDLC connected and available to exchange CPDLC messages with.



To terminate the CPDLC connection of an aircraft, use the “End CPDLC” button in the *Callsign Menu*.

Note	While it is possible to answer any message in the <i>CPDLC Current Message Window</i> using the “Manual Reply” option, the track label menus should always be used to answer correctly recognized messages, as using the manual reply method will not update the track label values.
-------------	--

2.3.1 Departure Clearance (DCL)

ARINC-623 DCL is a service used in Europe and many other parts of the World. It is a direct ATC-to-pilot data link communication over the ACARS network.

The departure clearance functionality is built into the Departure List. A received clearance request is displayed in the list, and a clearance can be sent by opening the *Pre-Departure Clearance Window* via left clicking the RWY or SID fields of the Departure List.

A DCL follows a chronological sequence of events that must be completed in order to communicate a clearance.

2.3.1.1 Departure Clearance Request (RCD)

The aircraft sends a clearance request message (RCD). The message is also shown in the *CPDLC Current Message Window*:

REQUEST PREDEP CLEARANCE ABC123 A320 TO ESSA AT LPPT STAND 221 ATIS
PAPA

 TOPLIS User Manual	SYSTEMS DATALINK	2.3 P26
---	--------------------------------	-----------------------

2.3.1.2 Flight System Message (FSM)

If the request is correctly formatted, TopSky may automatically reply with a Departure Clearance Message (CLD) message if all the conditions in *DCL/PDC setup* are met. If not all conditions are met, TopSky will automatically send a flight system message (FSM) as a reply. Its content depends on whether all the requirements for a DCL are met (flight plan found, departure airport offers data link clearances, etc.). If so, the following reply message is sent to the aircraft:

DEPART MESSAGE STATUS FSM 1312 221113 LPPT ABC123 RCD RECEIVED
REQUEST BEING PROCESSED STANDBY

The Clearance Flag tag item will show a “R” text in **Warning** color. If the request contained remarks text after the ATIS indicator, “R” alternates with “•”.

If a clearance is not sent before the timeout occurs, the data link clearance request is automatically rejected and a message is sent to the aircraft to revert to voice procedures.

RCD REJECTED REVERT TO VOICE PROCEDURES

2.3.1.3 Departure Clearance Message (CLD)

The clearance is sent using the *Departure Clearance Window*, opened by left clicking the RWY or SID fields of the Departure List.

The clearance is sent using the “Send MSG” button. “R/T” rejects the data link clearance request and sends a message to the aircraft to revert to voice procedures.

LPPT PDC 001 CLD 1314 221113 LPPT PDC 001 ABC123 CLRD TO ESSA OFF 02
VIA IXIDA5N SQUAWK 3251 QNH 1012

Once the clearance is sent, the Clearance Flag item will change to “S”.

If there is still no answer from the aircraft when the timeout occurs, the data link clearance is automatically rejected and a message is sent to the aircraft informing it that the received clearance has been cancelled.

ACK NOT RECEIVED CLEARANCE CANCELLED REVERT TO VOICE PROCEDURES

2.3.1.4 Departure Clearance Readback (CDA)

A clearance can be answered to with either “WILCO” to accept it or “UNABLE” to reject it.

2.3.1.5 Flight System Message (FSM)

Once a reply is received, the Clearance Flag item changes to a filled box (for WILCO) or to “F” (for UNABLE). A message is automatically sent to the aircraft.

ATC REQUEST STATUS FSM 1317 221113 LPPT ABC123 CDA RECEIVED
CLEARANCE CONFIRMED

If an UNABLE reply is received, clearance must then be negotiated and delivered by voice. A message is automatically sent to the aircraft.

CONTACT ATC BY VOICE REFUSE NOT SUPPORTED BY DATALINK

 TOPLIS User Manual	SYSTEMS DATALINK	2.3 P27
--	--------------------------------	-----------------------

2.3.1.6 Abnormal operations

Most failure cases result from the message not being correctly formatted, and TopSky failing to recognize it correctly. Regardless of whether TopSky recognizes the message as belonging to a departure clearance sequence, it will be put into the *CPDLC Current Message Window*. In case the system fails, revert to voice communications.

2.3.2 Controller-Pilot Data Link Communications (CPDLC)

CPDLC is a means of communication between controller and pilot, using data link for ATC communications, and with the extra advantage of displaying data on the track labels and flight lists as well.

As the messages take significant amount of time to get through (receiving a reply to a clearance can take anything from seconds to a couple of minutes), using CPDLC should be limited to situations that are not time-critical. For this reason, it is mostly used in upper airspace area control sectors.

The messages are grouped to dialogues, with an opening message and subsequent replies. Some messages do not need a reply, while for others a specific reply is expected. The available replies are set automatically, so only the correct type of reply can be sent.

2.3.2.1 Allowed message types

TopSky supports for the following message types:

Uplink	Downlink
Level clearance	Level request
Heading clearance	Heading request
Direct-to clearance	Direct-to request
Speed clearance	Speed request
Squawk code assignment	MAYDAY/PAN/SQ7500
Squawk ident instruction	Position report
Voice contact instruction	Free text
Free text	

Table 2.9: Supported CPDLC message types

2.3.2.2 Non-supported message types

TopSky does not support the following downlink message types. They will be automatically closed and a reply sent informing that the system does not support the message type:

- Any requests containing “When can we expect”, “At pilots discretion” or “Own separation”
- Level requests for a cruise climb, block level, or any level request tied to a position or time


 TOPLIS User Manual	SYSTEMS DATALINK	2.3 P28
---	--------------------------------	-----------------------

- Lateral requests for an offset, weather deviation or ground track
- Speed requests to maintain a speed range
- Voice contact requests
- Requests for a procedure name and/or type


Note that a non-allowed message type can be classified as “free text” by TopSky if the message parser doesn’t recognize it as a non-allowed type. In this case the automatic reply will not be sent and it is recommended to use the "MESSAGE NOT SUPPORTED BY THIS ATS UNIT" message from the *Free Text Messages* set, and archiving the dialogue.

2.3.2.3 Uplink clearance sequence


In this example a level clearance is used. The clearance is sent using the *CFL Menu*. To send the clearance using CPDLC, check that the “CPDLC” option is selected. Depending on the aircraft’s altitude, by default it may be selected or deselected. Send the clearance by selecting a level value. In this case FL200 was selected, and the CPDLC message “CLIMB TO FL200” was sent to the aircraft. The uplinked value is shown in brackets and in **CPDLC UM Clearance**

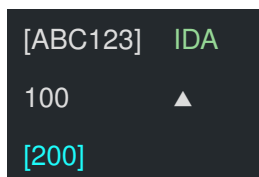

The aircraft has responded with “STANDBY”. The uplinked value changes to **CPDLC Standby** color, and a warning is inserted on line 0 of the label. The warning can be acknowledged by left-clicking on it:

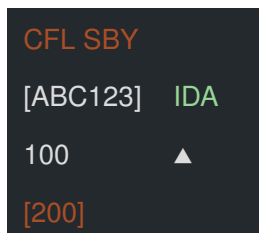

The aircraft then eventually answers with “WILCO”. The CFL value is updated accordingly and the label field colors return to normal:

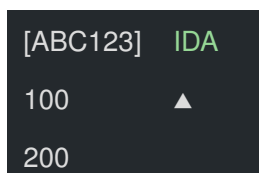

If the aircraft answers with “UNABLE”, a warning is inserted in line 0 of the label:

 TOPLIS User Manual	SYSTEMS DATALINK	2.3 P29
---	--------------------------------	-----------------------



The “+” after the level indicates that there is a reason in the answer message, for example “DUE TO PERFORMANCE”. The reason given is only accessible from the *CPDLC Current Message Window*.


Left-clicking on the warning acknowledges it and the original CFL value is again shown in the label:



2.3.2.4 Downlink request sequence

This example shows a level request.

The aircraft has sent a level request for FL200. The value is shown in the RFL field in brackets and in **CPDLC DM Request** color:

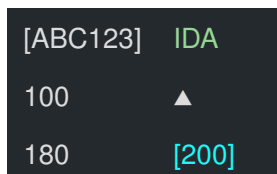

The responses to a level request are sent using the *RFL Menu* or *CFL Menu*. The *RFL Menu* offers the possibilities to respond with “STANDBY” or “UNABLE”, the *CFL Menu* with a level clearance (to the requested level or some other level). In this case the sequence then changes to an uplink clearance – see above for details.

If a free text CPDLC message is received from the aircraft, “CPDLC MSG” will be inserted above the label in **CPDLC DM Request** color:



Left-clicking on the warning will clear it and close all related dialogues. Right-clicking will open the *CPDLC Current Message Window*.

 TOPLIS User Manual	SYSTEMS DATALINK	2.3 P30
---	--------------------------------	-----------------------

2.3.2.5 Free Text Messages

A set of premade free text messages is included for use in the *CPDLC Free Text Menu* and is accessible via the *Callsign Menu* or *CPDLC Current Message Window*:


ATC Message Element	Purpose	Pilot Response
MESSAGE NOT SUPPORTED BY THIS ATS UNIT	Uncaught unsupported messages	NIL
SERVICE TERMINATED FREQ CHG APPROVED	Release to Unicom	ROGER
CONTACT ME VIA VOICE	Raise a flight on the frequency	ROGER
REQUEST AGAIN WITH NEXT ATC UNIT	Defer requests onto the next sector	NIL
IDENTIFICATION TERMINATED DUE SURVEILLANCE COVERAGE	Terminate surveillance service	ROGER
REPORT BY VOICE TOP OF DESCENT	Planning purposes	NIL
REPORT BY VOICE AT WHAT TIME ABLE FOR HIGHER EVEN FLIGHT LEVEL	Planning purposes	NIL
REPORT BY VOICE AT WHAT TIME ABLE FOR HIGHER ODD FLIGHT LEVEL	Planning purposes	NIL
STOP SENDING CPDLC REQUESTS	Impose CPDLC Silence	NIL
RESUME NORMAL CPDLC OPERATIONS	Revoke CPDLC Silence	NIL

Table 2.10: CPDLC Free Text Messages

2.3.2.6 Abnormal operations

As with DCL messages, the most likely failure scenario is TopSky misinterpreting the contents of a received message, which can be verified on the *CPDLC Current Message Window*. Some other failure scenarios are presented below.

If TopSky has temporarily lost contact with the CPDLC server, “CPDLC FAIL” will be inserted in line 0 of the labels of all CPDLC connected aircraft in **CPDLC Failed** color.

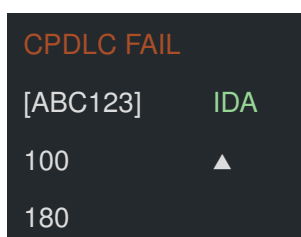


In case the server connection is not re-established within a certain time, the connection will be automatically closed and a warning message box will be presented. A new connection can be attempted at any time from the *CPDLC Setting Window*.

During temporary connection issues and also when the connection is automatically closed, the “AGCS” system label in the *General Information Window* will be displayed with **Warning** color until a connection is re-established.

If the CPDLC connection is terminated by the pilot, a “CPDLC P ABT” warning is inserted in line 0 of the label in **CPDLC Failed** color.

 TOPLIS User Manual	SYSTEMS DATALINK	2.3 P31
---	--------------------------------	-----------------------

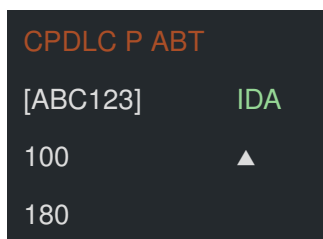

Left-clicking on the warning acknowledges it.

If an uplink clearance is not answered in time, a “<message type> P LATE” warning will be inserted in line 0 of the label in **CPDLC Pilot Late**



Left-clicking on it opens the *CPDLC Pilot Late Acknowledgement Menu* with options to either abort the clearance or manually mark it as answered with “WILCO”. Manually marking should be done only after a satisfactory readback is obtained by voice.


If sending an uplink clearance failed, a “<message type> ERR” warning will be inserted in line 0 of the label in **CPDLC Failed**



Left-clicking acknowledges the warning and aborts the clearance, displaying the previous value in the label.

If an uplink clearance is sent successfully but you are not the Current Data Unit in the aircraft's CPDLC system, a “<message type> NOT CDA” warning will be inserted in line 0 of the label in **CPDLC Failed**:

 TOPLIS User Manual	SYSTEMS DATALINK	2.3 P32
---	--------------------------------	-----------------------

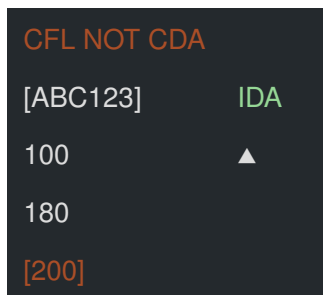

Left-clicking acknowledges the warning and aborts the clearance, displaying the previous value in the label.

 TOPLIS User Manual	SYSTEMS FLIGHT PLAN CONFLICT PROBE	2.4 P33
---	--	-----------------------

2.4 Flight Plan Conflict Probe

Warning	<p>The use of Safety Nets does not relieve the controller from manually identifying and correcting conflicts. Safety Nets are generally configured with conservative values in respect to minimum separations. Even so, the controller must be aware that it is impossible to configure Safety Nets to catch all possible conflict situations.</p>
----------------	--

2.4.1 MTCD (Medium Term Conflict Detection)

General

The MTCD system is a tool that enables the controller to predict possible future conflicts between aircraft. The look-ahead time (prediction time) is set to 20 minutes and the separation distance that triggers the alert (prediction distance) to 5 NM within the 3 NM separation area, and 7 NM within the 5 NM separation area. Additionally, 10 NM is used within LECM, GMMM and GCCC. No MTCD is available within LPPO.

In the lateral plane the system works by checking the aircraft's predicted route up to the defined prediction time and calculating if the separation with other aircraft will be less than the defined prediction distance.

In the vertical plane, TopSky predicts a climb or descent and accounts for buffer zones:

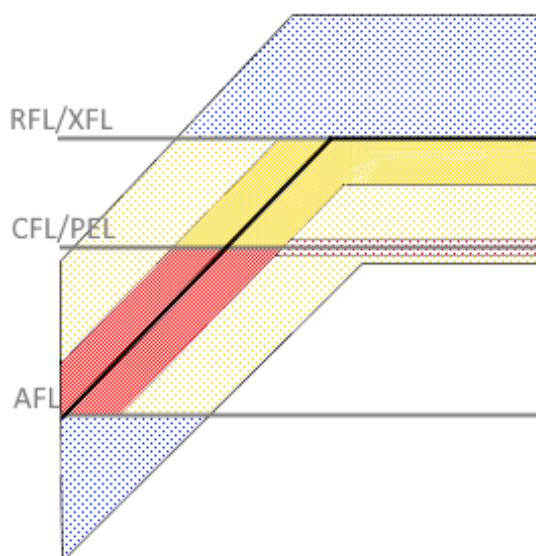


Figure 2.3: MTCD Vertical Path

- Conflicts (area with red shading)
 - detected within 4000ft around the predicted vertical path of the aircraft between AFL and CFL/PEL

 TOPLIS User Manual	<div style="text-align: center;"> SYSTEMS </div> FLIGHT PLAN CONFLICT PROBE	<div style="text-align: center;"> 2.4 </div> P34
---	---	--

- current clearances may lead to a loss of separation
- Conflict risks (area with yellow shading)
 - detected within 4000ft around the predicted vertical path of the aircraft between AFL and RFL/XFL
 - current clearances will not lead to a loss of separation, but modifying the clearance to the predicted path (CFL=RFL/XFL) will create a conflict
- Potential predicted conflicts (area with light red shading)
 - detected between tracks with equal CFL/PEL values, maintaining the same AFL, when the predicted path contains further climb/descent
 - current clearances result in a loss of separation if further climb/descent is not given
 - at least one of the tracks must be *Assumed*
- Potential risks of conflict (area with light yellow shading)
 - detected within 10000ft but within the minimum and maximum levels of the predicted vertical path
- Potential conflicts (area with light blue shading)
 - detected within 10000ft, outside of the minimum and maximum levels of the predicted vertical path

For the predictions to be accurate, it's very important to keep the CFL and the aircraft's route updated at all times. For aircraft that have an assigned heading or a RAM warning, the system assumes that it will continue on its present track and ground speed for a specified time and stops the prediction there. The system is always disabled for flight plan tracks with an assigned heading.

MTCD is not available for aircraft on the ground until their state is set to "DEPA", or aircraft below 8500ft.

Conflict and Risk display on the track label

If there is a conflict or potential predicted conflict for the aircraft within the set warning parameters, a "•" in **Urgency** color is shown 10 minutes to loss of separation with a 5nm, 7nm or 10nm separation minimum, depending on the sector.

The MTCD conflicts are also displayed in the *CARD*.

2.4.2 SAP (Segregated Area Probe)

General

Much like the MTCD system predicts future conflicts between aircraft, the SAP system predicts future intrusions into active areas. The system uses the same look-ahead time as the MTCD system. The future position predictions are done at one-minute intervals which means a very short intrusion into an active area may not be noticed by the system. The classification into risks and conflicts is the

 TOPLIS User Manual	SYSTEMS FLIGHT PLAN CONFLICT PROBE	2.4 P35
--	--	-----------------------

same as in MTCD: a conflict means that the current clearance will lead to the aircraft entering an active area, whereas a risk means that the current clearance will not lead to that but clearing the aircraft to its XFL or some other level beyond the current CFL may do so.

As with MTCD, keeping the CFL and the aircraft's route updated is important for the system's operation. For aircraft that have an assigned heading or a RAM warning, the prediction logic is the same as in the MTCD case. SAP is disabled for non-altitude reporting traffic that do not have a manually set AFL.

Conflict and Risk display on the track label

A conflict is shown by displaying the Military coordination indicator ("M"). Note that once the indicator is clicked and changes to inactive state, the system will not give further warnings for that aircraft as long as the indicator is in the inactive state. Click on the inactive indicator to re-arm the system once the aircraft has passed all the areas for which crossing clearance was given.

SAP conflicts are also shown in the *SAP Window*.

 TOPLIS User Manual	SYSTEMS MONITORING AIDS	2.5 P36
--	---------------------------------------	-----------------------

2.5 Monitoring Aids

Warning	<p>The use of Safety Nets does not relieve the controller from manually identifying and correcting conflicts. Safety Nets are generally configured with conservative values in respect to minimum separations. Even so, the controller must be aware that it is impossible to configure Safety Nets to catch all possible conflict situations.</p>
----------------	--

2.5.1 CLAM (Cleared Level Adherence Monitoring)

General

The CLAM system warns if an aircraft is not maintaining its cleared level and its vertical rate is not towards the cleared level. The alert is inhibited when the cleared level is lower than 100ft, and for aircraft in level flight, for 30 seconds after a new cleared level is set.

Alert Display

An alert is shown by displaying a “diverging” type aircraft position symbol and the text “L” in the *CLAM* track label field.

2.5.2 RAM (Route Adherence Monitoring)

General

The RAM system warns if an aircraft is deviating from its route by more than 1nm. The alert is inhibited 30nm from the departure and destination, and a larger cross-track error (5nm) is allowed near waypoints where the route makes a turn over 10° course change.

For aircraft on a direct-to clearance, the alert is given if the difference between the aircraft’s track and the direct track to the cleared point exceeds 5°. After a direct-to clearance is given, the alert is inhibited for 60 seconds or until the aircraft’s track is towards the point, whichever happens first.

Alert Display

An alert is shown by displaying a “diverging” type aircraft position symbol.

 TOPLIS User Manual	SYSTEMS SAFETY NETS	2.6 P37
---	-----------------------------------	-----------------------

2.6 Safety Nets

Warning	The use of Safety Nets does not relieve the controller from manually identifying and correcting conflicts. Safety Nets are generally configured with conservative values in respect to minimum separations. Even so, the controller must be aware that it is impossible to configure Safety Nets to catch all possible conflict situations.
----------------	---

2.6.1 AIW (Airspace Infringement Warning)

General

The AIW system warns if an uncontrolled aircraft is already inside or going to enter controlled airspace within a defined time. The system will only scan correlated radar tracks.

Alert display

An alert is shown by displaying the text “AIW” in the *AIW*. The AFL item is also colored **AIW intrusion** and a one-minute-along prediction line is displayed in **AIW intrusion** color regardless of the prediction line settings.

2.6.2 APW (Area Proximity Warning)

General

The APW system warns if an aircraft is inside or about to enter a Temporary Segregated Airspace without clearance. The position of the aircraft is only predicted in 30 second intervals for performance reasons so very short future intrusions may not be noticed by the system. The areas are defined in an external text file and activated in the *Airspace Management Window*.

Alert display

An alert is shown by displaying the text “APW” in the *APW*.

2.6.3 MSAW (Minimum Safe Altitude Warning)

General

Note	MSAW is currently not implemented
-------------	-----------------------------------

The MSAW system alerts when an aircraft is flying at an altitude below the minimum safe altitude. The minimum safe altitude data is read from an external file. There is an adjustable buffer value in the system that allows some altitude variation below the safe altitude to inhibit nuisance alerts for aircraft flying at the minimum safe altitude and not staying exactly at that altitude.

Alert display

An alert is shown by displaying the text “MSAW” in the *MSAW*.

 TOPLIS User Manual	<p style="text-align: center;">SYSTEMS</p> <p style="text-align: center;">SAFETY NETS</p>	<p style="text-align: center;">2.6</p> <p style="text-align: center;">P38</p>
---	--	--

2.6.4 STCA (Short Term Conflict Alert)

General

The STCA system is designed to alert the controller of a possible or actual loss of separation between aircraft. The alert is given between 60 seconds and 120 seconds before a loss of separation is predicted to happen, but it is dependent on the relative positions and movement of the aircraft. The alert will not be shown if both aircraft have STCA alerting inhibited (see the *Safety Nets Status Window*), are inside exclusion areas for parallel approaches, or when either aircraft is inside an active STCA inhibit area. LPPR, LPPT, LPCS, LPFR, LPMA and LPPS CTR are defined as STCA inhibit areas

In the vertical plane the STCA function will assume that an aircraft will level off at its cleared level. This will reduce the number of nuisance alerts caused by climbing and descending aircraft in busy airspace, but will delay the alert in case an aircraft continues through its cleared level. The alert will then be given only after the failure to level off is seen by the system.

Alert display

An alert is shown by coloring the *CALLSIGN* item background or the text itself in **Urgency** color. A one minute long prediction line is displayed in **Urgency** color regardless of the prediction line settings. The radar position symbol and history dots are displayed in **Urgency** color.

An aural alert can also be generated if the corresponding setting is enabled in the *Global Menu*.

Whenever at least one STCA alert is active, an STCA Alert List is automatically opened.



Figure 2.4: STCA Alert List

The list displays for each alert the callsign/FLTID/TSSR of each track, the minimum predicted horizontal separation between them, and a checkbox.

The alerts are sorted by minimum predicted horizontal separation. The list cannot be manually closed, it will close automatically when there are no more active alerts.

2.7 Sector States

Depending on a set of conditions and relationships, each Flight Plan is defined as being in a certain state relative to each airspace volume. This is the so called Sector State. As a given flight progresses along its route it will go through a series of different Sector States relative to a given airspace volume.

Track presentation coloring depends on the flight sector state:

State	Color	Condition
Initial (Unconcerned)	Unconcerned	Track will not enter the active sector
Free (Unconcerned)	Unconcerned	Track is not assumed or on-contact with anyone
Notified	Concerned	Track will enter the active sector (> 15 min)
Coordinated	Coordination	Track will enter the active sector (< 15 min)
Assumed	Assumed	Track is assumed
On Contact	Assumed	Track is on-contact with you. Flight is considered as Uncontrolled
Transfer Initiated	Assumed	Track is being transferred to the next controller. <i>CALLSIGN</i> and <i>SI</i> are colored in Redundant color
Redundant	Redundant	Track has been transferred to the next controller but is still inside the active sector
Informed	Informed 1	Track will not enter the active sector but is relevant to it

Sector States are used to control label construction, placement in lists, filtering, coloring, Safety Net parameters and availability. For example, a Flight Plan in the *On Contact* state will not trigger an APW warning until already being inside a TSA and will be shown in the *Uncontrolled Lists*. The same flight but in the *Assumed* state will trigger the APW warning when less than 3nm of a TSA and will not be shown in the *Uncontrolled Lists*.

Coordinated tracks that have not departed yet are displayed as *Notified*.

 TOPLIS User Manual	SYSTEMS SECTOR STATES	2.7 P40
---	-------------------------------------	-----------------------

Examples

Sector	LEM	NORL	CENL	SULL
Aircraft Position	✈ >15 minutes			
Sector State	-	<i>Notified</i>	<i>Notified</i>	<i>Notified</i>

Table 2.11: Flight Plan still faraway inside LEM crossing NORL, CENL and SULL

Sector	LEM	NORL	CENL	SULL
Aircraft Position	✈ <15 minutes			
Sector State	-	<i>Coordinated</i>	<i>Notified</i>	<i>Notified</i>

Table 2.12: Flight Plan entering NORL in less than 15 minutes

Sector	NORL	CENL	SULL
Aircraft Position	✈		
Sector State	<i>Assumed</i>	<i>Notified</i>	<i>Notified</i>


Table 2.13: Flight Plan assumed by NORL

Sector	NORL	CENL	SULL
Aircraft Position	✈		
Sector State	<i>Assumed</i>	<i>Coordinated</i>	<i>Notified</i>

Table 2.14: Flight Plan assumed by NORL and less than 15 minutes to CENL

Sector	NORL	CENL	SULL
Aircraft Position	✈		
Sector State	<i>Redundant</i>	<i>Assumed</i>	<i>Notified</i>

Table 2.15: Flight Plan transferred from NORL to CENL but still inside of NORL airspace

 TOPLIS User Manual	SYSTEMS SECTOR STATES	2.7 P41
---	---------------------------------	-------------------

Sector	NORL	CENL	SULL
Aircraft Position		✈	
Sector State	<i>Unconcerned</i>	<i>Assumed</i>	<i>Notified</i>

Table 2.16: Flight Plan assumed by CENL and has left NORL airspace

Sector	LEM	NORL	CENL	SULL
Aircraft Position	✈ >15 minutes			
Sector State	-	<i>Unconcerned</i>	<i>Unconcerned</i>	<i>Notified</i>

Table 2.17: Flight Plan in LEM and will only cross SULL

Sector	LEM	NORL	CENL	SULL
Aircraft Position				
Sector State	-	<i>Unconcerned</i>	<i>Unconcerned</i>	<i>Unconcerned</i>

Table 2.18: Flight Plan does not enter any sector

 TOPLIS User Manual	<div style="text-align: center;"> SYSTEMS </div> LABEL FIELD DESCRIPTIONS	<div style="text-align: center;"> 2.8 </div> P42
---	---	--

2.8 Label field descriptions

Data field	Description	Comments	Color
Frequency dot	Frequency	“•”, set from <i>Callsign Menu</i> Used to highlight a flight operating in a frequency other than the Sector Primary	Assumed
Mark dot	Mark	“•”, set from <i>Callsign Menu</i> Used to highlight a particular flight	Information
+	Field 18/ FMF indicator	“+” if “STS/” found in FPL remarks field or when FMF is not empty	
+	Time restriction indicator in OCM	“+” if time restriction information is present in OCM or has been manually entered	Non-acknowledged OCM with changed restriction: Information
*	Unit	“*” if label units are different from the system units	Warning
A	Manual alerts	“A” if Manual alert(s) active	Warning
a	Attitude indicator	Climbing: up arrow Descending: down arrow Level flight or unknown: blank	
A1000	A1000 warning	“1000” when one of the conditions in the color column are met	Non-mode S track coupled on A1000: Urgency ASSR A1000 and FPL does not indicate mode S FLTID capability: Warning
ACF	Approach clearance	Approach clearance type: Approach: “CA” Visual approach: “VA” CAT II approach: “CAT2” CAT III approach: “CAT3”	If toggled on: ACF Via CFL
ADEP	Departure aerodrome	ICAO code, 4 characters	

 TOPLIS User Manual	SYSTEMS LABEL FIELD DESCRIPTIONS	2.8 P43
---	--	-------------------

Data field	Description	Comments	Color
ADES	Destination aerodrome	ICAO code, 4 characters	If highlighted: Warning
AFL	Actual Flight Level	FL's 3 digits Altitudes "A"+ 2 digits Heights "E"+ 2 digits, in hundreds of feet	AIW: AIW intrusion Manually set value: Warning Coasted track: Warning If highlighted: Warning Mark All: CARD Mark All S-Highlight: Suite Highlight

 TOPLIS User Manual	SYSTEMS LABEL FIELD DESCRIPTIONS	2.8 P44
---	--	-----------------------

Data field	Description	Comments	Color
AHDG	Assigned heading	<p>List:</p> <ul style="list-style-type: none"> - Assigned heading (“H” + 3 digits) - “H” (maintain present heading) - “LLZ” (localizer clearance) - Direct-to point name <p>Unselected label:</p> <ul style="list-style-type: none"> - Assigned heading - “H” - “LLZ” - Direct-to point name <p>Selected label:</p> <ul style="list-style-type: none"> - Assigned heading - “H” - “LLZ” - Direct-to point name <p>Direct-to point shown only if set using the AHDG menu or vector and not equal to COPX point.</p> <p>If a heading clearance or request is in progress via CPDLC, displays “[heading]”, followed by “+” if the request or answer contains a reason(i.e. DUE TO something).</p> <p>DEP list: Does not display the brackets for CPDLC status.</p>	<p>If value assigned and HOP:</p> <p>Sent: Proposition Out</p> <p>Received: Proposition In</p> <p>Tactical coordination:</p> <p>Sent: Negotiation In</p> <p>Received: Negotiation Out</p> <p>Rejected: Warning</p> <p>Value accepted but not set: Reminder</p> <p>CPDLC:</p> <p>Uplink message sent: CPDLC UM Clearance</p> <p>Downlink message received: CPDLC DM Request</p> <p>Controller timeout expired: CPDLC Controller Late</p> <p>CPDLC warning raised: Color of the warning</p>
AIW	AIW alert (see also ALRT)	“AIW”	AIW intrusion
ALRT	Alert message	“MSAW”, “APW”, “AIW”, “L” (CLAM), “RAM” or “D” (DUPE) (in this priority order)	<p>MSAW and APW: Warning</p> <p>AIW: AIW intrusion</p>

 TOPLIS User Manual	<div>SYSTEMS</div> <div>LABEL FIELD DESCRIPTIONS</div>	<div>2.8</div> <div>P45</div>
---	--	-------------------------------


Data field	Description	Comments	Color
ALT1	Alternate aerodrome 1	ICAO code, 4 characters	
ALT2	Alternate aerodrome 2	Second alternate can be set by inserting "ALT2/XXXX" into the FPL remarks field	
AN	Area navigation	"P" if RNAV1 capable "R" if RNAV5 capable	
APM	APM alert (see also ALRT)	"MSAW"	Warning
APW	APW alert (see also ALRT)	"APW"	Warning
ARC	Assigned vertical rate	<p>"R" + 2 digits, in 100's of ft/min</p> <p>(followed by "+" or "-" when applicable for a minimum or maximum rate clearance)</p>	<p>If value assigned and HOP: Sent: Proposition Out Received: Proposition In</p> <p>Tactical coordination: Sent: Negotiation In Received: Negotiation Out Rejected: Warning Value accepted but not set: Reminder</p>
ARWY	Arrival runway	Arrival runway identifier	If manually assigned: Rwy Locked
ASI	Assuming sector		

 TOPLIS User Manual	SYSTEMS LABEL FIELD DESCRIPTIONS	2.8 P46
---	--	-----------------------

Data field	Description	Comments	Color
ASP	Assigned speed	<p>Mach “M”+ 2 digits</p> <p>“HS” for high speed clearance</p> <p>Speed 2 digits, in 10’s of knots</p> <p>(followed by “+” or “-” when applicable for a minimum or maximum rate clearance)</p> <p>If a speed clearance or request is in progress via CPDLC, displays “[speed]”, followed by “+” if the request or answer contains a reason.</p>	<p>If value assigned and HOP: Sent: Proposition Out Received: Proposition In</p> <p>Tactical coordination: Sent: Negotiation In Received: Negotiation Out Rejected: Warning Value accepted but not set: Reminder</p> <p>CPDLC: Uplink message sent: CPDLC UM Clearance Downlink message received: CPDLC DM Request Controller timeout expired: CPDLC Controller Late CPDLC warning raised: Color of the warning</p>
ASSR	Assigned mode 3/A code	<p>4 digits or “A”+ 4 digits. If a SQUAWK SSR message is in progress via CPDLC, displays the code in brackets, followed by “+” if the answer contains a reason. DEP list:</p> <p>Does not display the brackets for CPDLC status.</p>	<p>If different than TSSR: Information</p> <p>CPDLC: Uplink message sent: CPDLC UM Clearance CPDLC warning raised: Color of the warning</p>
ATD	Actual Time of Departure	UTC time in “HHMM” format	
ATIS	ATIS designator		
ATYP	Aircraft type	Type with max 4 characters	If highlighted: Warning
ATYP/W	Aircraft type / Wake Turbulence Category	Type with max 4 characters + “/” + WTC (“L”, “M”, “H”, “J” or “?”)	If highlighted: Warning
C	Inbound clearance	“C” if ADES needs inbound clearance	Active state: Information

 TOPLIS User Manual	<div style="text-align: center;"> SYSTEMS </div> <div style="text-align: center;"> LABEL FIELD DESCRIPTIONS </div>	<div style="text-align: center;"> 2.8 </div> <div style="text-align: center;"> P47 </div>
---	---	---

Data field	Description	Comments	Color
CALLSIGN	Callsign	<p>If label is minimized, prefixed by “<”.</p> <p>If number of aircraft is more than one, suffixed by “+”.</p> <p>If correlated to a primary track or to a secondary track with no ASSR code and a non-discrete TSSR code, suffixed by “**”.</p> <p>If the flight is CPDLC connected, the callsign is displayed in brackets.</p>	<p>Priority order:</p> <p>STCA alert: Urgency</p> <p>HOP received: Proposition In</p> <p>Transfer in: Assumed</p> <p>HOP sent: Assumed</p> <p>Transfer out: Redundant</p> <p>Level band highlight AFL: Urgency</p> <p>Level band highlight XFL: Warning</p>
CFL	Cleared Flight Level	<p>See AFL field for number format.</p> <p>Unselected label: Not shown if equal to AFL</p> <p>If a level clearance is in progress via CPDLC, displays “[level]”, followed by “+” if the answer contains a reason (i.e. DUE TO something).</p> <p>DEP list: Does not display the brackets for CPDLC status.</p>	<p>DEP list:</p> <p>For CTR, if CFL>PEL, for others if CFL>XFL: Warning</p> <p>CPDLC:</p> <p>Uplink message sent: CPDLC UM Clearance</p> <p>CPDLC warning raised: Color of the warning</p>

 TOPLIS User Manual	<div style="text-align: center;"> SYSTEMS </div> <div style="text-align: center;"> LABEL FIELD DESCRIPTIONS </div>	<div style="text-align: center;"> 2.8 </div> <div style="text-align: center;"> P48 </div>
---	--	---


Data field	Description	Comments	Color
CFL/PEL	Cleared Flight Level or Planned Entry Level	<p>PEL is shown for flights in “coordinated” and “ongoing coordination” states, CFL otherwise.</p> <p>See AFL field for number format.</p> <p>Unselected label: PEL: Not shown if equal to AFL and no ongoing coordination. CFL: Not shown if equal to AFL</p> <p>If a level clearance is in progress via CPDLC, displays “[level]”, followed by “+” if the answer contains a reason (i.e. DUE TO something).</p>	<p>PEL: Coordination sent: Proposition Out Coordination received: Proposition In Change just before ETN: Info Coord Coordination refused: Warning</p> <p>CFL: CPDLC: Uplink message sent: CPDLC UM Clearance Downlink message received: CPDLC DM Request CPDLC warning raised: Color of the warning</p>
CLAM	CLAM indicator (see also ALRT)	“L”	Warning
CLR	Clearance received flag	<p>If clearance not received: "□"</p> <p>If clearance received: "■"</p>	
CLR/DCL/CMT	Combined clearance received flag and DCL dialogue status	<p>Clearance received flag set: "■"</p> <p>State of the datalink clearance dialogue:</p> <ul style="list-style-type: none"> - “R” (request received) - “S” (clearance sent) - “F” (failed) <p>Clearance flag not set: "□"</p> <p>(“R” alternates with “•” if remark text present in the RCD)</p>	If “R” or “•”: Warning
CMT	CMT Text indicator	“•” if received RCD contains remark text	

 TOPLIS User Manual	<div style="text-align: center;"> SYSTEMS </div> <div style="text-align: center;"> LABEL FIELD DESCRIPTIONS </div>	<div style="text-align: center;"> 2.8 </div> <div style="text-align: center;"> P49 </div>
---	---	--

Data field	Description	Comments	Color
CODE	FPL mode S hex code	"/" + aircraft's mode S hex code if found in the FPL remarks	
COM	Communication type	"r" if voice receive only "t" if text only	Warning
COMP_CS	ICAO RTF call- sign	The decoded ICAO RTF callsign "???" if not in database	
COORD	Coordination message	ROF message sent/received: - "ROF"	Sent: Proposition Out Received: Proposition In (until assumed by the down- stream position)
COPN	Entry point		Coordination sent: Proposition Out Coordination received: Proposition In Coordination refused: Warning
COPX	Exit point	DEP list: If logged in as CTR and flight not inside active sector, dis- plays COPN (with holding): A holding clearance is dis- played if there is no co- ordination. It shows the holding point name + " H" or for lat/lon point holdings, "POS H". For a TSA Hold clearance, the area name is shown.	Coordination sent: Proposition Out Coordination received: Proposition In Coordination refused: Warning

 TOPLIS User Manual	<div>SYSTEMS</div> <div>LABEL FIELD DESCRIPTIONS</div>	<div>2.8</div> <div>P50</div>
---	--	-------------------------------

Data field	Description	Comments	Color
COPN/COPX	Entry point or Exit point	<p>COPN is shown for flights in “coordinated” and “on-going coordination” states, COPX in “assumed”, “transfer initiated” and “redundant” phases. (with holding):</p> <p>A holding clearance is displayed if there is no coordination. It shows the holding point name + “ H” or for lat/lon point holdings, “POS H”. For a TSA Hold clearance, the area name is shown.</p>	<p>Coordination sent: Proposition Out</p> <p>Coordination received: Proposition In</p> <p>Coordination refused: Warning</p>
CPDLC_E	CPDLC Emergency	CPDLC emergency messages: “SQ7500”, “[MAYDAY]”, or “[PAN]”	Urgency

 TOPLIS User Manual	<div style="text-align: center;"> SYSTEMS </div> <div style="text-align: center;"> LABEL FIELD DESCRIPTIONS </div>	<div style="text-align: center;"> 2.8 </div> <div style="text-align: center;"> P51 </div>
---	--	---

Data field	Description	Comments	Color
CPDLC_W	CPDLC Warning	CPDLC warning messages: <ul style="list-style-type: none"> - "CPDLC FAIL" network failure - "CPDLC P ABT" pilot logoff - "<type> ERR" message failure - "<type> NOT CDA" NOT CURRENT DATA AUTHORITY response - "<type> P LATE" pilot timeout - "<type> SBY" STANDBY response - "<type> UNA" UNABLE response - "CPDLC MSG" unidentified downlink <type> is the type of message: <ul style="list-style-type: none"> - "AHDG" heading clearance - "CFL" level clearance - "COF" communication transfer - "DCT" direct-to clearance - "SQI" SQUAWK IDENT message - "SSR" SQUAWK SSR message - "VCI" communication transfer 	"CPDLC FAIL", "CPDLC P ABT", "ERR" or "NOT CDA": <div style="background-color: black; color: red; padding: 2px;">CPDLC Failed</div> "P LATE": <div style="background-color: black; color: red; padding: 2px;">CPDLC Pilot Late</div> "SBY": <div style="background-color: black; color: red; padding: 2px;">CPDLC Standby</div> "UNA": <div style="background-color: black; color: red; padding: 2px;">CPDLC Unable</div> "CPDLC MSG": <div style="background-color: black; color: cyan; padding: 2px;">CPDLC DM Request</div>
CRC	Computed vertical rate	2 digits, in 100's of ft/min Value preceded by "C" for climbing, "D" for descending	
CTO	Clearance time on OAN	"HHMM"	Major difference between estimated time at point and CTO: <div style="background-color: black; color: red; padding: 2px;">Urgency</div> Minor difference between estimated time at point and CTO: <div style="background-color: black; color: yellow; padding: 2px;">Warning</div> Non-acknowledged OCM with changed CTO: <div style="background-color: black; color: green; padding: 2px;">Information</div>

 TOPLIS User Manual	<div>SYSTEMS</div> <div>LABEL FIELD DESCRIPTIONS</div>	<div>2.8</div> <div>P52</div>
---	--	-------------------------------

Data field	Description	Comments	Color
DGS	Downloaded ground speed	Ground speed as downloaded from the aircraft via mode S DAPs. Format as in GS field.	
DHDG	Downloaded heading	Magnetic heading as downloaded from the aircraft via mode S DAPs. “H” + 3 digits.	
DIAS	Downloaded indicated airspeed	Indicated airspeed as downloaded from the aircraft via mode S DAPs. An estimated value is displayed if upper wind/temp data is available.	
DMACH	Downloaded Mach number	Mach number as downloaded from the aircraft via mode S DAPs. An estimated value is displayed if upper wind/temp data is available.	
DRC	Downloaded rate of climb/descent	Rate of climb/descent as downloaded from the aircraft via mode S DAPs. Not available on VATSIM (computed rate displayed instead, see CRC).	
DRWY	Departure runway	Departure runway identifier	If manually assigned: Rwy Locked Clearance flag not set: Proposition In Clearance flag set: Information
DSFL	Downloaded selected flight level	Selected flight level as downloaded from the aircraft via mode S DAPs. Not available on VATSIM.	
DSQ	Departure sequence number		

 TOPLIS User Manual	<div style="text-align: center;"> SYSTEMS </div> <div style="text-align: center;"> LABEL FIELD DESCRIPTIONS </div>	<div style="text-align: center;"> 2.8 </div> <div style="text-align: center;"> P53 </div>
---	--	---

Data field	Description	Comments	Color
DUPE	DUPE indicator (see also ALRT)	“D”	Warning
EAT	Expected Approach Time	Manually entered time in “HHMM” format	
EET	Estimated Elapsed Time	“HHMM”	
EMRG	Emergency	“HI” for squawk 7500 “CF” for squawk 7600, “EM” for squawk 7700	Urgency
EQUIP	FPL equipment field	(COM/NAV): COM/NAV equipment (SUR): “/” + surveillance equipment If the FPL equipment is in the FAA format, a rough conversion to the ICAO format is made	
EST/DEP/ABT	Manual departure	Clearance flag not set: “EST” Clearance flag set: “DEP” Departed: “ABT”	
ETA	Estimated Time of Arrival	UTC time in “HHMM” format or “HOLD” if flight in holding state	
ETD	Estimated Time of Departure	UTC time in “HHMM” format	
ETD/ATD	Estimated Time of Departure or Actual Time of Departure	Not departed: - ETD Departed: - ATD “HHMM”, both times taken from the FPL data	
ETN	Estimated time over COPN or sector entry time if no COPN	UTC time in “HHMM” format (sector entry): always entry time	

 TOPLIS User Manual	SYSTEMS LABEL FIELD DESCRIPTIONS	2.8 P54
---	--	-----------------------

Data field	Description	Comments	Color
ETOHP	Estimated time over holding point or holding start time	UTC time in “HHMM” format	
ETX	Estimated time over COPX or sector exit time if no COPX	UTC time in “HHMM” format (sector exit): always exit time	
F	No fix warning	“F” if IFR flight is not routing via one of specified fixes to its destination	Information
FCOPN	FIR point COPN point	FIR entry coordination point	Information
FCOPX	FIR point COPX point	FIR exit coordination point For inbound and domestic flights, displays ADES.	If different from OCM entry point: Information
FETN	Estimated time over FCOPN		
FETX	Estimated time over FCOPX		
FF	Feeder fix		
FIELD15	Speed Level Route	The flight plan field 15 data (TAS, RFL and route). Max 360 characters	
FIELD18	Other information	The flight plan field 18 data (remarks). Max 540 characters	
FLTADD	Mode S transponder address	Mode S transponder hex address	
FLTID	Aircraft identification	Callsign as received via mode S	
FLTID/TSSR	Aircraft identification or transponder code	FLTID if available, otherwise TSSR	If highlighted: Warning

 TOPLIS User Manual	SYSTEMS LABEL FIELD DESCRIPTIONS	2.8 P55
---	--	-----------------------

Data field	Description	Comments	Color
FMF	Flight Message Field	User entered text, stored only locally	
FText	Free text		
GS	Ground Speed	"N"+3 digits, in knots	If highlighted: Warning
HOLD	Hold/XHold	Holding clearance state at point related to the traffic management list	Warning
HPT	Holding point	Holding point name or for lat/lon point holdings, "POS". For a TSA Hold clearance, the area name is shown.	
I	Flight information	"I" if OP_TEXT has data	
Label	Label hidden flag	"■" if label displayed, "□" if label hidden	
M	Military coordination	"M" if military coordination is required	Active state: Warning
MALRT	Manual alerts	Displays alerts entered via the <i>Callsign Menu</i>	Warning
MTCD	MTCD indicator	"•" if aircraft has an MTCD problem	Urgency (Conflict Ack if all conflicts acknowledged)
MFX	Metering fix	AMAN metering fix name	
MFX_FF	Metering fix or feeder fix	AMAN metering fix or feeder fix name	
MNR	Oceanic cruising speed	Cleared cruising speed from the last received OCM	Non-acknowledged OCM with changed MNR: Information
MSAW	MSAW alert (see also ALRT)	"MSAW"	Warning

 TOPLIS User Manual	SYSTEMS LABEL FIELD DESCRIPTIONS	2.8 P56
---	--	-----------------------

Data field	Description	Comments	Color
N/ATYP	Number of aircraft / Aircraft type	Unselected label: Number range 2 - 99 Selected label or List: Number range 1 - 99 Number can be set by prefixing the aircraft type in the FPL by "X/" where X is the number (max 99)	If highlighted: Warning
NAT	North Atlantic Track name	Cleared NAT name from the last received OCM ("#" for a random route)	Non-acknowledged OCM with changed NAT: Information
NBT	Not Before Time	Time restriction at OAN	Non-acknowledged: Warning
NLT	Not Later than Time	Time restriction at OAN	Non-acknowledged: Warning
NPT	Next route point	When a DCT request or clearance via CPDLC is in progress: Displays the point name followed by "+" if the request contains a reason (i.e. DUE TO something) Otherwise: Next point on the route	CPDLC: Uplink message sent: CPDLC UM Clearance Downlink message received: CPDLC DM Request Controller timeout expired: CPDLC Controller Late CPDLC warning raised: color of the warning
NRAC	Number of aircraft	Number from 2 to 99 Extended label: "n" if 1 Other label or (List): blank if 1 Number can be set by prefixing the aircraft type in the FPL by "X/" where X is the number (max 99).	
NSSR	SSR warning	Displays ASSR if different from TSSR (always displayed for flight plan tracks or when SQUAWK SSR)	CPDLC: Uplink message sent: CPDLC UM Clearance CPDLC warning raised: color of the warning

 TOPLIS User Manual	<div style="text-align: center;"> SYSTEMS </div> <div style="text-align: center;"> LABEL FIELD DESCRIPTIONS </div>	<div style="text-align: center;"> 2.8 </div> <div style="text-align: center;"> P57 </div>
---	--	---


Data field	Description	Comments	Color
O	Oceanic alert	“O” if Oceanic Clearance Message is not acknowledged	Warning
OAN	Cleared Oceanic Control Area entry point	Cleared entry point from the last received OCM	Non-acknowledged with changed OCM: Information
OCM	Oceanic Clearance Message		
OFL	Oceanic cruising Flight Level	Cleared oceanic flight level from the last received OCM	Non-acknowledged with changed OFL: Information
OP_TEXT	Flight information message	User entered text	
OP_TEXT2	OP_TEXT2 message	User entered text, stored in the scratchpad	
P	No P-RNAV/RNAV1 capability	“P” if aircraft equipment is not indicating P-RNAV/RNAV1 capability and destination has arrival procedures requiring it	Not equipped: Information Unknown: Unknown
PEL	Planned Entry Level	See AFL field for number format.	Coordination sent: Proposition Out Coordination received: Proposition In Change just before ETN: Info Coord Coordination refused: Warning
PFREQ	Pilot monitored frequency	Displays your primary frequency when transfer of communications was done via CPDLC using the MONITOR option	CPDLC DM Request

 TOPLIS User Manual	<div style="text-align: center;"> SYSTEMS </div> <div style="text-align: center;"> LABEL FIELD DESCRIPTIONS </div>	<div style="text-align: center;"> 2.8 </div> <div style="text-align: center;"> P58 </div>
---	---	--

Data field	Description	Comments	Color
PRFL	RFL requested by pilot via CPDLC	Displays “[requested level]”, followed by “+” if the request contains a reason (i.e. DUE TO something)	CPDLC: Downlink message received: CPDLC DM Request Controller timeout expired: CPDLC Controller Late CPDLC warning raised: Color of the warning
PSSR	Previous mode 3/A code	If not known, shows ASSR if available. Format as ASSR field.	
R	No B-RNAV/RNAV5 capability	“R” if aircraft equipment is not indicating B-RNAV/RNAV5 capability	Not equipped: Urgency Exempted: Information Unknown: Unknown
RAM	RAM indicator (see also ALRT)	“RAM”	Warning
RFL	Requested Flight Level	See AFL field for format List: If an RFL request is in progress via CPDLC, displays “[requested level]”, followed by “+” if the request contains a reason (i.e. DUE TO something). DEP list does not display the brackets for CPDLC status.	(List) and (DEP list): CPDLC: Downlink message received: CPDLC DM Request Controller timeout expired: CPDLC Controller Late CPDLC warning raised: color of the warning

 TOPLIS User Manual	<div style="text-align: center;"> SYSTEMS </div> <div style="text-align: center;"> LABEL FIELD DESCRIPTIONS </div>	<div style="text-align: center;"> 2.8 </div> <div style="text-align: center;"> P59 </div>
---	---	--

Data field	Description	Comments	Color
ROUTE	Flight plan route	DEP list - part 1 shows first 15 characters, part 2 characters 16-30 If departing from defined airports: - first 30/45 characters (2 or 3 parts) If arriving at a clearance flag airport: - last 30/45 characters (2 or 3 parts) Else: - first 30/45 characters (2 or 3 parts)	
RT	EAT given indicator	EAT not given to pilot: "□" EAT given to pilot: "■" (local flag only, not sent to other controllers)	
S	Mode S mismatch indicator	"S" if downloaded callsign is different than coupled flight plan callsign	Warning

 TOPLIS User Manual	<div>SYSTEMS</div> <div>LABEL FIELD DESCRIPTIONS</div>	<div>2.8</div> <div>P60</div>
---	--	-------------------------------

Data field	Description	Comments	Color
SI	Sector Indicator	<p>Assumed track: Next sector identifier or frequency.</p> <p>Displayed in brackets if a communications transfer is in progress via CPDLC, followed by “+” if the answer contains a reason. The frequency display is forced on during a transfer via CPDLC.</p> <p>Other tracks: Tracking controller identifier or frequency.</p> <p>List: Frequency display is not possible</p> <p>DEP list: Does not display the brackets for CPDLC status.</p> <p>Current: Displays always the current tracking controller id</p> <p>Previous: Displays the current tracking controller id unless it is you or the track is in redundant state</p> <p>Next: Displays the next controller id when assumed, or current when in redundant state</p>	<p>Priority order:</p> <p>HOP sent: Proposition Out</p> <p>Out Transfer initiated: Redundant</p> <p>Next unit coordination received: Proposition In</p> <p>Manually changed next sector: Warning</p> <p>Normal next sector: Coordination</p> <p>CPDLC: Communications transfer message sent: CPDLC UM Clearance</p> <p>If a CPDLC warning has been raised: Color of the warning</p>
SID	Assigned or planned SID	SID identifier	New assignment: Sid Star Allocation
SQ	Arrival sequence number (manually set)	A number from 1 to 50	

 TOPLIS User Manual	SYSTEMS LABEL FIELD DESCRIPTIONS	2.8 P61
---	--	-------------------

Data field	Description	Comments	Color
SQ_AMAN	Arrival sequence number (provided by AMAN)	A number from 1 to 99	
STAFF	Scheduled Time of Arrival at feeder fix	AMAN calculated time to pass the feeder fix	
STAR	Assigned or planned STAR	STAR identifier	New assignment: Sid Star Allocation
STATE	Current system state	Notified: NOTI Coordinated: COOR On-going coordination: ONGC Assumed: ASSU Transfer initiated: TRAN Redundant: REDU Terminated: TERM Free: FREE On-contact: ONCT	
STS	Ground state	EuroScope default ground state	
TAS	Flight Plan TAS	TAS from flight plan, either: "K" + 4 digits, km/h "N" + 4 digits, knots "M" + 3 digits, 1/100's of Ma	
TEXT2	OP-TEXT2 message	If more than 10 characters, then shows first 9 + ">"	
TRACK	Ground track	"T" + the aircraft's current ground track in degrees magnetic	
TOM	Time of Metering	AMAN calculated time to pass the metering fix	
TOM_STAFF	Time of Metering or Scheduled Time of Arrival at feeder fix	AMAN calculated time to pass the metering fix or feeder fix	

 TOPLIS User Manual	<div style="text-align: center;"> SYSTEMS </div> <div style="text-align: center;"> LABEL FIELD DESCRIPTIONS </div>	<div style="text-align: center;"> 2.8 </div> <div style="text-align: center;"> P62 </div>
---	--	---

Data field	Description	Comments	Color
TSSR	Aircraft transponder mode 3/A code	4 digits or "A" + 4 digits	
TTL_TTG	Time To Lose/Gain at metering fix		
TTLTTG_FF	Time To Lose/Gain at feeder fix		
TTLTTG_MFX_FF	Time To Lose/Gain at metering fix or feeder fix		
V	Flight rules	"V" if VFR "Y" if first IFR and later VFR "Z" if first VFR and later IFR	
W	No RVSM capability	"W" if aircraft equipment is not indicating RVSM capability	Not equipped: Urgency Exempt: Information Unknown: Unknown
WTC and /WTC	Wake turbulence category	"J" for Super "H" for Heavy "M" for Medium "L" for Light (in /WTC all prefixed with a "/") Unselected label: Only displayed if not medium unless the field is highlighted	If highlighted: Warning
WTG and /WTG	Wake turbulence group	ICAO or RECAT-EU wake turbulence group (in /WTG prefixed with a "/")	If highlighted: Warning

 TOPLIS User Manual	<div>SYSTEMS</div> <div>LABEL FIELD DESCRIPTIONS</div>	<div>2.8</div> <div>P63</div>
---	--	-------------------------------

Data field	Description	Comments	Color
XFL	Exit Flight Level	<p>See AFL field for number format.</p> <p>Unselected label: Not shown if equal to CFL/PEL and no ongoing co-ordination.</p> <p>DEP list: If logged in as CTR and flight not inside active sector, displays PEL. Otherwise displays XFL.</p>	<p>Coordination sent: Proposition Out</p> <p>Coordination received: Proposition In</p> <p>Coordination refused: Warning</p>
Y	No 8.33kHz capability	“Y” if aircraft equipment is not indicating 8.33kHz capability	<p>Not equipped: Urgency</p> <p>Exempt: Information</p> <p>Unknown: Unknown</p>

Table 2.19: Label Field descriptions

 TOPLIS User Manual	USER INTERFACE	3.0 P64
--	-----------------------	-------------------

Chapter 3

User Interface

 TOPLIS User Manual	<div>USER INTERFACE</div> <div>MAIN WINDOW</div>	<div>3.1</div> <div>P65</div>
---	--	-------------------------------

3.1 Main Window



Figure 3.1: Main Window on initialization

TopSky should load with some preplaced windows similar to the above configuration

Note

Screen resolutions other than 1920x1080 will yield different results. Larger resolutions will bring preplaced windows towards the left and middle, while smaller resolutions may potentially place windows outside the screen. It is recommended for users experiencing difficulties related to their screen size to experiment and create custom settings in the TopSkySettingsLocal file containing revised window placements adjusted for their own screen. Refer to TopSky_Developer_Guide_Settings.xlsx for available settings

On initialization TopSky will load the *Global Menu* on top, *Sector List* and *Departure List* on the top left, *Message In Window* and *Message Out Window* on the top center right, *NOTAM List Window* on center, *CARD* and *SAP Window* on bottom right, plus legacy weather and controller lists on top right as well.

3.2 Global Menu



Figure 3.2: Global Menu

The Global Menu is located on the top edge of the radar screen. It displays the current UTC time (left-clicking opens the *Clock Window*) and contains a number of submenus which are explained below.

3.2.1 Setup Menu



Figure 3.3: Setup Menu

Setup Menu allows for various adjustments. Each position will load its defined settings based on the active Primary Frequency.
Most used options are CPDLC Setting for CPDLC operations and Default Settings to reset options. Personal settings can be defined in `TopSky_Developer_Guide_Settings.xlsx` (see the Developer Guide).

Weather Map	Not installed.
Unit Settings >	Opens the <i>Unit Settings submenu</i>
Default Setting	Resets all settings to their default values (keeps login callsign specific ones if they are active at the time). When clicked, a confirmation window will open, asking to confirm the reset.
Local Settings >	Opens the <i>Local Settings submenu</i>
Brightness Control >	Opens the <i>Brightness Control Window</i>

 TOPLIS User Manual	USER INTERFACE GLOBAL MENU	3.2 P67
---	--	-----------------------

Sign In. . .	Loads personal settings (done automatically at startup).
Sign Out. . .	Clears any personal settings and resets all settings to their default values.
AMID	Not implemented.
CFL	Opens the <i>CFL submenu</i>
Flight Leg	Opens the <i>Flight Leg submenu</i>
FPASD	Toggles on/off the display of flight plan tracks
CPDLC Setting. . .	Opens the <i>CPDLC Setting Window</i>
RR Main >	Opens the RR Main submenu

3.2.1.1 Unit Settings submenu

This submenu can be used to change the units used in TopSky. Any changes to the settings are session specific only, so they will be lost when exiting EuroScope.

Altitude	Selects the units used for altitudes and vertical rates <ul style="list-style-type: none"> • Nautical (feet, feet per minute) • Metric (meters, meters per second)
Flight level	Selects the units for flight levels – only applicable with metric altitudes <ul style="list-style-type: none"> • Nautical (hundreds of feet) • Metric (meters)
Distance	Selects the units used for distances <ul style="list-style-type: none"> • Nautical (nautical miles) • Metric (kilometers)
Speed	Selects the units used for speeds <ul style="list-style-type: none"> • Nautical (knots) • Metric (kilometers per hour)

Local Settings submenu

This submenu allows changing some of TopSky's settings. Any changes to the settings are session specific only, so they will be lost when exiting EuroScope.

 TOPLIS User Manual	USER INTERFACE GLOBAL MENU	3.2 P68
---	--	-----------------------

Vertical reference

Selects the pressure reference to be used at or below the transition altitude:

- QNH Altitude above mean sea level
- QFE Height above the aerodrome elevation

(set/check it in the adjacent box)

Used equipment codes

Selects whether to use or disregard the equipment codes found in the flight plans:

- All Use all codes in both ICAO and FAA formats
- ICAO Use all codes when specified in ICAO format
- FAA Use codes when specified in FAA format
- None Disregard all codes

Selects specific capabilities to be taken into account:

- R RNAV capability
- PBN PBN string from FPL remarks
- W RVSM capability
- Y 8.33 kHz capability
- AltRptg Transponder altitude reporting capability
- Mode S Transponder mode S capability
- EHS Mode S enhanced surveillance capability
- FLTID Mode S flight ID downlink capability

When taking into account a specific capability is deselected, all aircraft are assumed to have it. This inhibits track label alerts and also affects safety net processing.


ASSR codes

Selects the transponder code source:

- Plugin Plugin data file (reverts to ESE if no codes found)

 TOPLIS User Manual	USER INTERFACE GLOBAL MENU	3.2 P69
---	--------------------------------------	-------------------

	<ul style="list-style-type: none"> • ESE ESE file • Range Fixed code range
Groundspeed	<p>Selects whether to use pilot client reported ground speed or a plugin calculated value. Normally the reported value should be used as it is more accurate and stable, but some clients report wrong values. If that causes problems, you can try selecting TopSky calculated value instead</p>
Transfer confirmation	<p>Selects when to display the Transfer Confirmation Window:</p> <ul style="list-style-type: none"> • On Always when CFL is not equal to XFL • NotRFL When CFL is not equal to XFL unless XFL = RFL • Off Never, any CFL value is OK
CFL menu default value	<p>Selects the default value for the CFL menu when it is opened:</p> <ul style="list-style-type: none"> • Auto CTR: RFL if not yet reached, otherwise as below <p>Other: The XFL value, or current CFL value -1000ft with no XFL</p> • CFL The current CFL value • RFL The RFL value
FPCP inhibit	<p>FPCP calculations start when tracks are within this time from entering active sector</p>
STCA alert	<p>Selects which aircraft display the STCA alert:</p> <ul style="list-style-type: none"> • All All aircraft • Own+Co Only <i>Assumed</i> and <i>Coordinated</i> aircraft • Own Only <i>Assumed</i> aircraft
STCA alert sound	<p>Selects which STCA alerts trigger the alert sound:</p> <ul style="list-style-type: none"> • All All alerts • Own+Co Only alerts for <i>Assumed</i> or <i>Coordinated</i> aircraft

 TOPLIS User Manual	USER INTERFACE GLOBAL MENU	3.2 P70
---	--------------------------------------	-------------------


APW alert	Own Only alerts with <i>Assumed</i> aircraft Selects which aircraft display the APW alert:
	<ul style="list-style-type: none"> • All All aircraft • Own+Co Only <i>Assumed</i> and <i>Coordinated</i> aircraft • Own Only <i>Assumed</i> aircraft
APW alert sound	Selects which STCA alerts trigger the alert sound: <ul style="list-style-type: none"> • All All alerts • Own+Co Only alerts for <i>Assumed</i> and <i>Coordinated</i> aircraft • Own Only alerts for <i>Assumed</i> aircraft • Off No alert sound
METAR source	Selects the METAR data source for TopSky windows that display METAR data
FPASD filter	Allows filtering of displayed FPASD tracks based on sector state <ul style="list-style-type: none"> • Coord Display tracks at least in the <i>Coordinated</i> state • Conc Display tracks at least in the <i>Notified</i> state • None Display all tracks

3.2.1.2 CFL submenu

Reduced	The reduced length CFL menu is used
Extended	The extended length CFL menu is used

3.2.1.3 Flight Leg submenu

Assumed	Automatically displays Flight Leg when track is assumed
---------	---

 TOPLIS User Manual	USER INTERFACE GLOBAL MENU	3.2 P71
---	--	-----------------------

Potential Predicted	Displays potential predicted conflicts on flight leg
---------------------	--

Potential Risk	Displays potential risks of conflicts on flight leg
----------------	---

3.2.1.4 RR Main submenu

Rings On/Off	Toggles the range rings on/off
Point	Sets the rings centerpoint.
Separation	Sets the separation between adjacent rings
Number	Sets the number of rings drawn
Highlight	Toggles highlight (drawn with solid line) of specified rings
Step	Sets interval of highlighted rings

The rings centerpoint can be set either by clicking on the radar screen or entering the desired point in the text field. Fixes, VORs, NDBs and airports from the active sector file can be used as well as coordinates in the flight plan format (DD[N/S]DDD[E/W] or DDMM[N/S]DDMM[E/W], e.g. 60N025E or 0811S00300W). Entering an empty text string resets the rings to be shown at the radar screen centerpoint.

3.2.2 AMS menu

TSA...	Opens the <i>Airspace Management Window</i> .
NAT	Opens the <i>NAT submenu</i> .

3.2.2.1 NAT submenu

Eastbound Map	Toggles display of eastbound tracks map.
Westbound Map	Toggles display of westbound tracks map.
NAT List...	Opens the <i>NAT List Window</i> .

Opening the NAT submenu triggers downloading the NAT Track Message which is then updated hourly. The tracks extracted from the messages can be displayed on the radar screen. Any named waypoints in the tracks that cannot be found in the active sector file are just skipped so the displayed tracks may not be accurate.

3.2.3 FData menu

Opens the *Flight Plan Selection Window* and *Flight Plan Window*.

 TOPLIS User Manual	USER INTERFACE GLOBAL MENU	3.2 P72
---	--------------------------------------	-------------------

3.2.4 Tools menu

Flight Plan Lists >	Opens the <i>Flight Plan Lists submenu</i>
CARD. . .	Opens the <i>CARD</i>
SAP. . .	Opens the <i>SAP Window</i>
Message In. . .	Opens the <i>Message In Window</i>
Message Out. . .	Opens the <i>Message Out Window</i>
Shortcut. . .	Opens the <i>Shortcut Window</i>
CPDLC >	Opens the CPDLC submenu

3.2.4.1 Flight Plan Lists submenu

List options bar	Toggles the display of list options on the <i>Global Menu</i>
Sector List. . .	Opens the <i>Sector List</i>
Informed	Toggles the display of <i>Informed</i> aircraft
Concerned	Toggles the display of <i>Notified</i> and <i>Coordinated</i> aircraft
Redundant	Toggles the display of <i>Redundant</i> aircraft
Load Factor List. . .	Opens the <i>Load Factor List</i>
ETWR List. . .	Opens the <i>ETWR List</i>
<adep>	ETWR List departure airports filter
Uncont. List 1. . .	Opens the <i>Uncontrolled Lists</i>
<filter>	Uncontrolled 1 List state filter
<units>	Uncontrolled 1 List units filter
Uncont. List 2. . .	Opens the <i>Uncontrolled Lists</i>
<filter>	Uncontrolled 2 List state filter
<units>	Uncontrolled 2 List units filter
Lost List. . .	Opens the <i>Lost List</i>
Resectorisation List. . .	Opens the <i>Resectorisation List</i>
<lfunc>	Resectorisation List LFUNC filter
Traffic Mgmt. List 1. . .	Opens the <i>Traffic Management Lists</i>

 TOPLIS User Manual	USER INTERFACE GLOBAL MENU	3.2 P73
---	--	-----------------------

<state>	Traffic Management List 1 flight plan state filter
<ades>	Traffic Management List 1 destination airports filter
<via>	Traffic Management List 1 route points filter
Traffic Mgmt. List 2 . . .	Opens the <i>Traffic Management Lists</i>
<state>	Traffic Management List 2 flight plan state filter
<ades>	Traffic Management List 2 destination airports filter
<via>	Traffic Management List 2 route points filter

When enabled, the list options bar displays “Info Conc Redu Filter Filter” on the right edge of the *Global Menu*. The first three toggle the respective settings for the *Sector List* and are colored with the appropriate color when enabled, and the last two are displayed in **Redundant** color when the corresponding *Uncontrolled Lists* are somehow filtered. Clicking on them opens the *Flight Plan Lists submenu* to change the filtering options.

Left-clicking <filter> cycles through “ALL” (no filtering), “ON-CONTACT” (only tracks *On Contact* with anyone), “ON-CONTACT-PPOS” (only tracks *On Contact* with you) and “FREE” (only tracks in the *Free* state).

Left-clicking <units> opens a text entry box to enter a comma-separated list of aerodrome ICAO codes to filter the list. When entered, the list will display a flight only if one of the entered codes is its departure or destination, or the code is found in *OP TEXT2*.

Left-clicking <lfunc>, <adep>, <ades> and <via> open text entry boxes to enter comma-separated lists for controlled ID’s, ICAO codes and point names respectively to filter the affected lists.

Left-clicking <state> toggles between “ALL” (no filtering), “SIMUL+TERM” (not started flight plans filtered), “NOTST+SIMUL” (terminated flight plans filtered) and “SIMUL” (not started and terminated flight plans filtered).

3.2.4.2 CPDLC submenu

- Microphone Check	Opens the <i>Microphone Check Menu</i>
- Current Messages. . .	Opens the <i>CPDLC Current Message Window</i>
- History Messages. . .	Opens the <i>CPDLC History Message Window</i>

3.2.5 MET menu

- Messages. . .	Opens the <i>Weather Messages Window</i>
-----------------	--

 TOPLIS User Manual	USER INTERFACE GLOBAL MENU	3.2 P74
---	--	-----------------------

- Upper Winds. . . Opens the *Upper Winds Window*
- Airfield Data. . . Opens the *Airfield Data Window*

3.2.6 [0]

Shows the number of received SIGMET messages. The number is limited to 99, and is shown on **Global Menu Highlight** background when not zero and the *Weather Messages Window* is not open. Left-clicking the number will open the *Weather Messages Window* with the SIGMET option selected.


3.2.7 Info menu

- General Information. . . Opens the *General Information Window*
- MISC Information. . . Opens the *Miscellaneous Information Window*
- NOTAM. . . Opens the *NOTAM List Window*
- Small QNH/TL. . . Opens the *Small QNH/TL Window*
- LFUNC Frequency Plan. . . Opens the *LFUNC Frequency Plan Window*
- Airport labels Toggles airport labels selection
- Fix labels Toggles fix labels selection
- NDB labels Toggles NDB labels selection
- VOR labels Toggles VOR labels selection

When holding <ALT>, text labels will be displayed for airports, fixes, NDBs and VORs when the mouse cursor is placed over them. When one or more of the categories in the Info menu is selected, only those categories will display the labels. The “Label” buttons open submenus to select what information is shown on the corresponding labels. All the information is from the active sector file.

3.2.8 MSG menu

- Notepad. . . Opens the *Notepad Window*
- Personal Queue. . . Opens the *Personal Queue Window*
- ATC Messages. . . Opens the *ATC / Primary Frequency Messages Window*
- Prim Freq Messages. . . Opens the *ATC / Primary Frequency Messages Window*
- Text notes > Opens the Text notes submenu

 TOPLIS User Manual	USER INTERFACE GLOBAL MENU	3.2 P75
---	--	-----------------------

It is possible to insert text notes on the radar screen to act as reminders. They will stay fixed at the geographical coordinates they are inserted to, the coordinates defining the center point of the note.

When creating a note, a text entry field opens to enter the note text. When the [Enter] key is pressed, the note will be created at the current mouse cursor position.

The notes can be deleted one by one or all of them at the same time. When deleting one by one, the notes are boxed to display their click areas. Clicking on one will delete the note. Pressing the [Esc] key or selecting the “Delete...” menu item again will abort the operation.

3.2.8.1 Text notes submenu

Create. . .	Creates a new text note
Delete. . .	Deletes a single text note
Delete all	Deletes all text notes

3.2.9 [x] [x]

Shows x as the number of high priority messages on the left, and low priority messages on the right.

High priority messages are critical failures in TopSky code. Low priority messages are warnings about invalid data in TopSky data files

Open the *Personal Queue Window* to view the messages or see *Plugin Status submenu* for more detailed information on the problem(s). The number is limited to 99, and is shown on **Global Menu Highlight** background when not zero and the window is not open.

Left-clicking the number opens the *Personal Queue Window*.

 TOPLIS User Manual	USER INTERFACE GLOBAL MENU	3.2 P76
---	--	-----------------------

3.2.10 STS menu

Plugin Status >	Opens the <i>Plugin Status submenu</i>
Safety Nets Status...	Opens the <i>Safety Nets Status Window</i>
Divergence Detection Status...	Opens the <i>Divergence Detection Status Window</i>
MTCD Status...	Opens the <i>MTCD Status Window</i>
FPCA Status...	Opens the <i>FPCA Status Window</i>
CPDLC Default Status	Toggles the CPDLC Default Status On/Off
Runway In Use	Opens the <i>Aerodrome Menu</i>
RWY line display...	Opens the <i>Aerodrome Menu</i>
Supervisory >	Opens the <i>Supervisory submenu</i>
Flow Management...	Opens the <i>Air Traffic Flow Management Window</i>
Current Operational Load...	Opens the <i>Current Operational Load Window</i>
Operational Load Forecast...	Opens the <i>Operational Load Forecast Window</i>

3.2.10.1 Plugin Status submenu

Shows the version of TopSky as well as some information on the loaded data files. Each data file reports its state with one of the following indicators:

- OK File contains usable information and no faults
- NO DATA File not found or contains no usable information
- BAD DATA File contains invalid data (in **Warning** color)

Depending on the file, there are one to three of the following buttons available:

- Reload Reloads the data file
- View Displays the data in the file on the radar display
- Save (Areas) Saves a snapshot of the current area activation data
- Save set (Maps & MapsL) Saves a list of currently active radar screen specific maps
- Load set (Maps & MapsL) Loads a saved list of active screen specific maps

Left-clicking the Save button will save the currently set manual activation periods as well as the information if an area with automatic schedules is set to manual mode. The information is saved

 TOPLIS User Manual	USER INTERFACE GLOBAL MENU	3.2 P77
---	--	-----------------------

to the `TopSkyAreasManualAct.txt` file in the same folder as `TopSky.dll`. If the file already exists, TopSky will ask for confirmation as the save operation will overwrite any existing data.

Depending on the maps data file setup, the display state of some or all of the maps may be specific to each radar screen. The Save set and Load set functions can be used to transfer the display state of these maps from one radar screen to another.

Right-clicking the Reload button for Settings & SettingsL has a special purpose. It opens a text entry box to type in a callsign whose settings should be loaded instead of the real login callsign. When entered, the callsign will be displayed next to the “Reload” button, and whenever a VATSIM callsign change is detected, an information popup is displayed to remind that TopSky settings are still forced to the manually entered callsign. This feature can be used for example to use settings for different positions on different EuroScope instances when providing top-down services, or to use settings for a specific position when logged in with an observer/staff/supervisor callsign. Clearing the entered callsign reverts to using the settings based on the actual login callsign.

3.2.10.2 Supervisory submenu

- Operations Rate... Opens the *Operations Rate Window*
- Predicted Traffic... Opens the *Predicted Traffic Window*

3.2.11 RRxxx/Off

Opens the *RR Main submenu*. If the rings are selected on,

“xxx” displays the distance between consecutive rings, otherwise “Off”.

3.2.12 Mxxx-yyy

Displays the status of the altitude filters for the Main Radar Window. If enabled and Quick Look is not toggled on, the color of the text is Global Menu Highlight. “xxx” displays the Lower filter value and “yyy” the Upper filter value, in hundreds of feet.

Left-clicking the item opens the *Altitude Filtering Window*.

3.2.13 S000-999

Displays the status of the altitude filters for the Secondary Radar Window (not implemented, shows static values)

3.3 Aircraft Position Symbol

The position symbol is drawn at the latest known position of the aircraft. The color of the symbol is the flight sector color for an unselected track and **Track Highlight** for a selected one.



Figure 3.4: Track Symbology

If a surveillance track does not receive position updates in over 30 seconds it becomes a Coasted track, position is no longer reliable.

If a Coasted track does not receive position updates for long enough, or it has originated outside of surveillance coverage, it becomes a FPASD track. FPASD tracks are not based on surveillance data but estimated based on Flight Plan data.

Except for the FPASD and Coasted tracks, a divergence alert will be drawn in case of a RAM or CLAM alert. This is a circle drawn around the symbol. Tracks with SPI active will not display this symbol.

3.3.1 History dots

The history dots show the previous positions of the track. The number of displayed dots can be changed via the *Track Control Window*. The color of the dots is the flight sector color for an unselected track and **Track Highlight** for a selected one. History dots are not displayed for flight plan tracks.

3.3.2 Prediction Line

The prediction line draws the predicted ground track of the aircraft, based on its current track and ground speed. It is a two-color line, starting with **Track Default** at the position symbol and then alternating with **Track Highlight**, with every segment representing one minute of flying time.

The default lenght of the prediction line is 2 minutes, and can be changed for all tracks via the *Track Control Window*, or for a single track via the *Prediction Line Menu*. Prediction lines are not displayed for flight plan tracks.



Figure 3.5: Selected track with 5 history dots and a 3-minute prediction line

 TOPLIS User Manual	USER INTERFACE AIRCRAFT POSITION SYMBOL	3.3 P79
---	---	-----------------------

3.3.3 Track filtering

For all the filters, it is only possible to filter out *Unconcerned* tracks. Aircraft with transponder codes 7500, 7600 and 7700 and tracks with an active STCA, MSAW, APW or DUPE alert are also excluded from filtering. If a filter is active, the filter title in the Radar Menu will be shown in **Selected** color.

All filters, with the exception of the CJI filter, remove all components of the tracks, nothing remains visible. The CJI filter leaves the track position symbol and history dots visible.

The filters can be overridden using the Quick Look (all filters), Quick Look Up/Down (altitude filter only) and Individual Quick Look (CJI filter only) functions.

For more details regarding filtering functions, see:

- *Altitude Filtering Window*
- *CJI Filtering Window*
- *SSR Code Filtering Window*

 TOPLIS User Manual	USER INTERFACE TRACK LABELS	3.4 P80
---	---	-----------------------

3.4 Track Labels

There are four types of track labels that can be displayed: Standard, Reduced, Extended and Uncoupled.

In addition, each label except the extended one has an unselected and a selected state, the selected state being shown when the mouse cursor is over the label.

The unselected Standard and Reduced labels can be minimized to display only some of their contents. When a label is minimized, the Callsign item is prefixed with a "<" to serve as a reminder.

3.4.1 Standard Track Label

The Standard label is shown for aircraft that are in or will enter the active sector.

Unselected Track

Line 0 *COM * V MSAW APM APW AIW CLAM DUPE O W Y R P M Mark dot Frequency dot A + C I S
EMRG COORD NSSR CPDLC E CPDLC W TEXT2 SQAMAN TTLTTGMFXFF*

Line 1 *MTCD CALLSIGN PFREQ SI N/ATYP WTC TSSR*

Line 2 *AFL a CFL/PEL ACF GS NPT ADES RFL*

Line 3 *XFL TRACK AHDG ASP ARC COPN/COPX FCOPX OFL O+*

Line 4 *DSFL DHDG DIAS DRC DMACH*



RCH614 H
240 N421 NAPES

Figure 3.6: Unselected Standard Track

Selected Track

Line 0 *COM * V MSAW APM APW AIW CLAM DUPE O W Y R P M Mark dot Frequency dot A + C I S
EMRG COORD NSSR CPDLC E CPDLC W TEXT2 SQAMAN TTLTTGMFXFF*


Line 1 *MTCD CALLSIGN PFREQ SI N/ATYP WTC TSSR*

Line 2 *AFL a CFL/PEL ACF GS NPT ADES RFL*

Line 3 *XFL TRACK AHDG ASP ARC COPN/COPX FCOPX OFL O+*

Line 4 *DSFL DHDG DIAS DRC DMACH*

Line 5 *OP TEXT*



RCH614 SI C17 H 6760
240 240 N421 OSLEP CYQX 240
240 T257 AHDG ASP ARC MINTA MIN OFL
DSFL H258 30 00 M70

Figure 3.7: Selected Standard Track

 TOPLIS User Manual	USER INTERFACE TRACK LABELS	3.4 P81
---	---	-----------------------

3.4.2 Reduced Track Label

The Reduced label is shown for uncontrolled, unconcerned and notified tracks.

Unselected Track

Line 0 *V MSAW APM APW AIW CLAM DUPE O COM W Mark dot S EMRG SQAMAN TTLTTGMFXFF*

Line 1 *MTCD CALLSIGN SI N/ATYP WTC TSSR*

Line 2 *AFL a GS NPT ADES*

Line 3 *TRACK FCOPX OFL O+*

Line 4 *DSFL DHDG DIAS DRC DMACH*



Figure 3.8: Unselected Reduced Track

Selected Track

Line 0 ** V MSAW APM APW AIW CLAM DUPE O COM W Mark dot Y R P M A + C I S EMRG NSSR
CPDLC E TEXT2 SQAMAN TTLTTGMFXFF*

Line 1 *MTCD CALLSIGN SI N/ATYP WTC TSSR*

Line 2 *AFL a CFL GS NPT ADES RFL*

Line 3 *TRACK AHDG ASP FCOPX OFL O+*

Line 4 *DSFL DHDG DIAS DRC DMACH*

Line 5 *OP TEXT*



Figure 3.9: Selected Reduced Track

3.4.3 Extended Track Label

The Extended label can be opened from the Standard or Reduced label by right clicking on the *CALLSIGN* item, and stays open as long as the cursor is within the label area.

Line 0 *COM * V MSAW APM APW AIW CLAM DUPE O W Y R P M Mark dot Frequency dot A + C I S
EMRG RI COORD NSSR CPDLC E CPDLC W TEXT2 SQAMAN TTLTTGMFXFF*

Line 1 *MTCD CALLSIGN PFREQ SI N/ATYP WTC* *TSSR ASSR PSSR*

 TOPLIS User Manual	USER INTERFACE TRACK LABELS	3.4 P82
---	---	-----------------------

Line 2 *AFL a CFL/PEL ACF GS NPT ADES RFL* *FLTID FLTADD CODE*

Line 3 *XFL TRACK AHDG ASP ARC COPN/COPX FCOPX OFL O+ STATE ASI*

Line 4 *DSFL DHDG DIAS DRC DMACH*

Line 5 *COMP CS*

Line 6 *MFxFF*

Line 7 *TOMSTAFF*

Line 8 *ADEP ETD/ATD ADES EET*

Line 9 *FIELD15*

Line 10 *FILED18*

Line 11 *MALRT*

Line 12 *OP TEXT*

Line 13 *OP TEXT2*

Line 14 *FMF*

Line 15 *OCM*

Line 16 *OP TEXT2*

```

EXS14LM SI n B738 M                6745 6745 6745
370 370 N471 TAKAV GCRR 370        EXS14LM 407182 /407182
370 T195 AHDG ASP ARC COPX FCOPX OFL ASSU DEML
DSFL H195 27 00 M82
CHANNE
EGSS ATD GCRR EET
N0420F350 NUGBO M183 SILVA Q41 SAM M195 LORKU
UN866 QPR UM30 ERWAN/N0455F360 DCT BALDA/N04
54F370 DCT ABUPI DCT TAKAV DCT VEDOD UN857 TE
RTO
PBN/A1B1D10152 NAV/RNP2 DOF/210818 REG/GJZBF
EET/LFFF0029 LECM0117 LPPC0142 GMMM0235 GCCC0
330 SEL/AFBG CODE/407182 OPR/EXS RVR/200 RMK/
EXS
OP TEXT
OP_TEXT2

```

Figure 3.10: Extended Track

3.4.4 Minimized Track Label

The Minimized label is toggled by Shift+Right clicking the *Label field descriptions* label item.

Line 0 *COM * V MSAW APM APW AIW DUPE W M EMRG COORD CPDLC E*

Line 1 *MTCD < CALLSIGN*

Line 2 *AFL a*

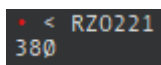


Figure 3.11: Minimized Track

 TOPLIS User Manual	USER INTERFACE TRACK LABELS	3.4 P83
---	---	-----------------------

3.4.5 Uncoupled Track Label

The Uncoupled label is shown for radar tracks that aren't correlated with a flight plan.

Unselected Track

Line 0 *AIW DUPE EMRG*

Line 1 *FLTID* or *TSSR*

Line 2 *AFL a GS*

Line 3 *DSFL DHDG DIAS DRC DMACH*



Figure 3.12: Unselected Uncoupled Track

Note

FLTID is displayed on line 1 only if a valid Mode-S Aircraft Identification is received. Otherwise, *TSSR* is displayed instead

Selected Track

Line 0 *AIW DUPE EMRG*

Line 1 *FLTID TSSR*

Line 2 *AFL a GS*

Line 3 *DSFL DHDG DIAS DRC DMACH*

Note

FLTID is displayed on line 1 only if a valid Mode-S Aircraft Identification is received. Otherwise, only *TSSR* is displayed

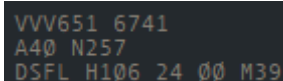


Figure 3.13: Selected Uncoupled Track

3.4.6 Line 0 Construction

Line 0 is constructed solely of indicators and warnings. Line 0 is only displayed when at least one of these indicators is active.

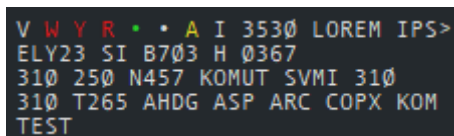



Figure 3.14: Example label with several line 0 alerts

 TOPLIS User Manual	USER INTERFACE TRACK LABELS	3.4 P84
---	---------------------------------------	-------------------

Example Indication	Description	Label item
/t	Communication Type Indicator	COM
V	Y, Y or Z Flight Rules, same color as Track Label	V
MSAW	Approach Path Monitor or Minimum Safe Altitude Warning	MSAW
APW	Area Proximity Warning	APW
AIW	Area Intrusion Warning	AIW
L	Cleared Level Adherence Monitoring	CLAM
DUPE	Duplicate SSR code	DUPE
O	Oceanic Alert	O
W	RVSM Not Equipped	W
W	RVSM Exempt	W
W	RVSM Unknown	W
Y	8.33 Not Equipped	Y
Y	8.33 Exempt	Y
Y	8.33 Unknown	Y
R	RNAV5 Not Equipped	R
R	RNAV5 Unknown	R
P	RNAV1 Not Equipped	P
M	Military Coordination Required flag	M
•	Mark dot	Mark dot
•	Frequency dot, same color as Track Label	Frequency dot
A	Manual alert(s) active	A
+	STS/ found in FPL remarks field, same color as Track Label	+
I	OP_TEXT has data, same color as Track Label	I
F	No Fix warning	F
S	Mode S Callsign is different from coupled Flight Plan Callsign	S

 TOPLIS User Manual	<div>USER INTERFACE</div> <div>TRACK LABELS</div>	<div>3.4</div> <div>P85</div>
---	---	-------------------------------

EM	“HI” for A7500, “CF” for A7600, “EM” for A7700	EMRG
ROF	ROF if a Request On Frequency message is received	COORD
A1000	A1000 incompatibility	A1000
3223	Displays ASSR if different from TSSR, same color as Track Label	NSSR
[MAYDAY]	CPDLC Emergency Downlink	CPDLC E
CPDLC P LATE	CPDLC Warning messages	CPDLC W
TEXT2	User entered text visible to everyone, same color as Track Label	OP TEXT2
01	AMAN number in sequence	SQAMAN
G01	AMAN TTL Time To Loose TTG Time To Gain MFX_FF Feeder Fix	TTLTTGMFXFF

Table 3.16: Line 0 Indications

3.4.7 Label Interaction

Label items may be interacted with either with a left, right or shift and right click.

3.4.7.1 Line 0

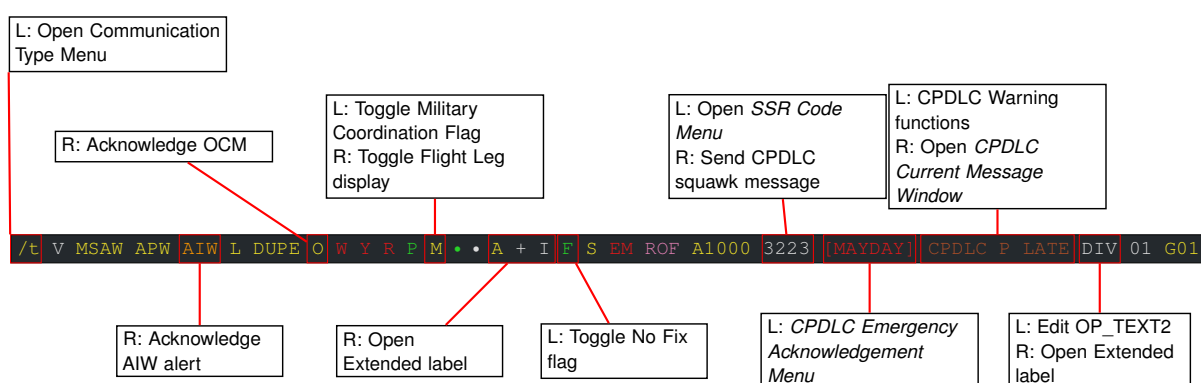


Figure 3.15: Line 0 label Interaction

 TOPLIS User Manual	USER INTERFACE TRACK LABELS	3.4 P86
---	---	-----------------------

3.4.7.2 Line 1

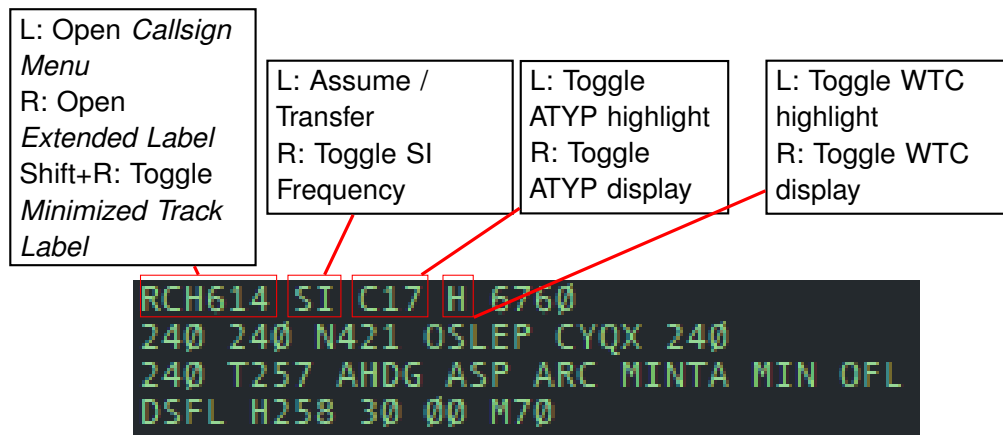


Figure 3.16: Line 1 label Interaction

Note	Not shown in the above example: When <i>PFREQ</i> is displayed R: Acknowledge <i>PFREQ</i> warning When <i>MTCD</i> is displayed R: Toggle Flight Leg display
-------------	---

3.4.7.3 Line 2

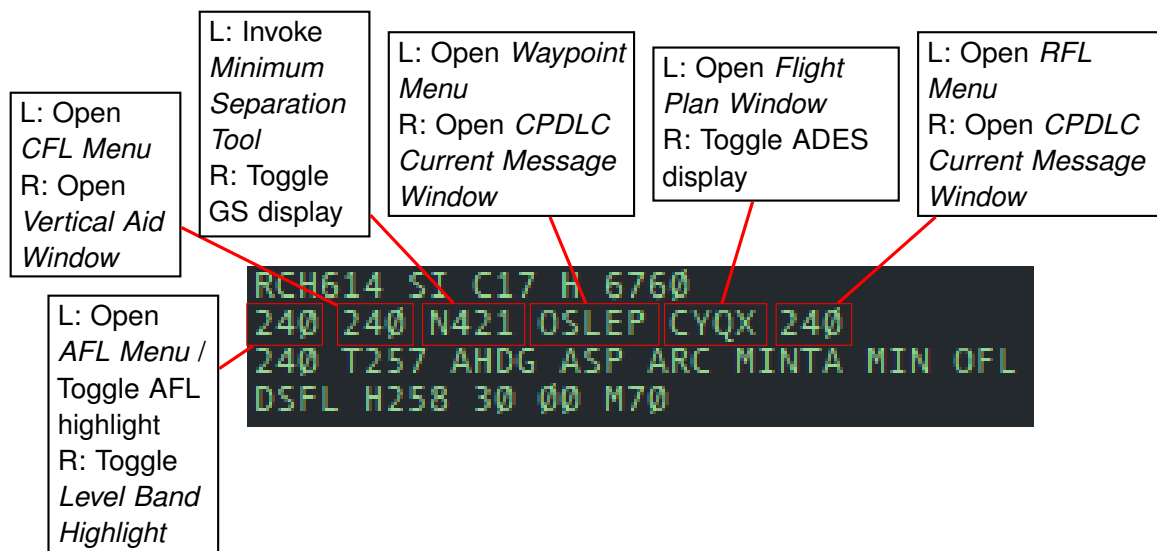


Figure 3.17: Line 2 label Interaction

Note	Not shown in the above example: When <i>a</i> is displayed R: Invoke <i>Minimum Separation Tool</i> with <i>VSEP</i> When <i>ACF</i> is displayed L: Toggle <i>Label field descriptions</i> field color R: Clear approach clearance
-------------	--

 TOPLIS User Manual	USER INTERFACE TRACK LABELS	3.4 P87
---	---	-----------------------

3.4.7.4 Line 3

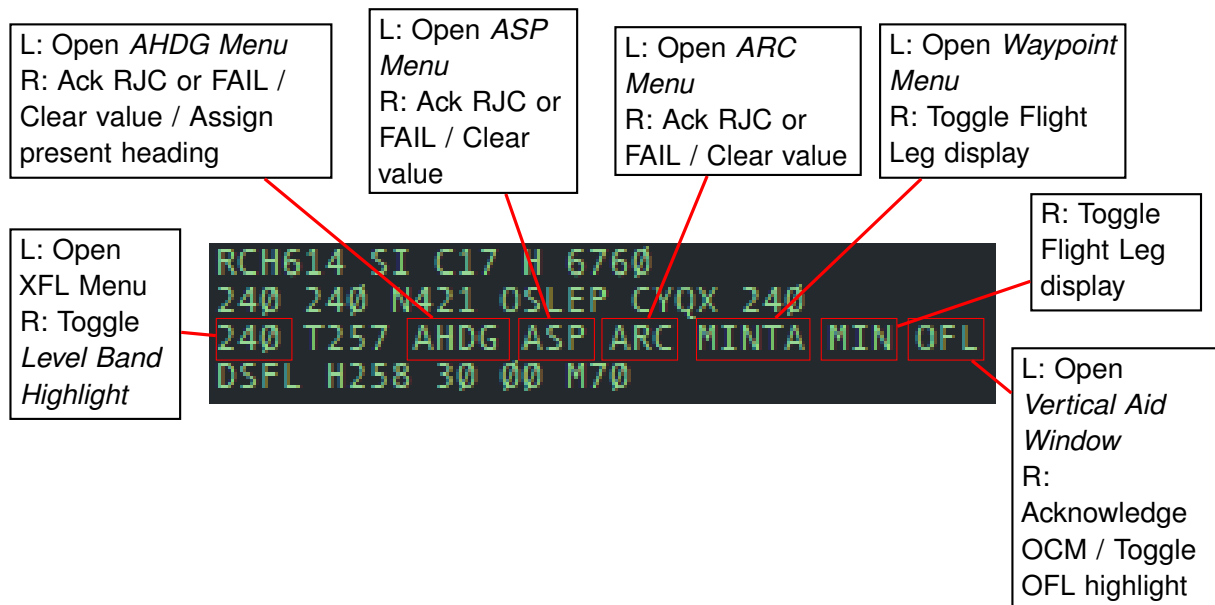


Figure 3.18: Line 3 label Interaction

Note	Not shown in the above example: When <i>O+</i> is displayed R: Open <i>Oceanic Time Restriction Window</i>
-------------	---

3.4.7.5 Line 4



Figure 3.19: Line 4 label Interaction

3.4.7.6 Extended Label

The Extended label is constructed of extra elements when compared to a Standard Selected label, some of which are interactable. These extra elements that are interactable are detailed below. The remaining elements function the same as in the Standard Selected label.

 TOPLIS User Manual	USER INTERFACE TRACK LABELS	3.4 P88
---	---	-----------------------

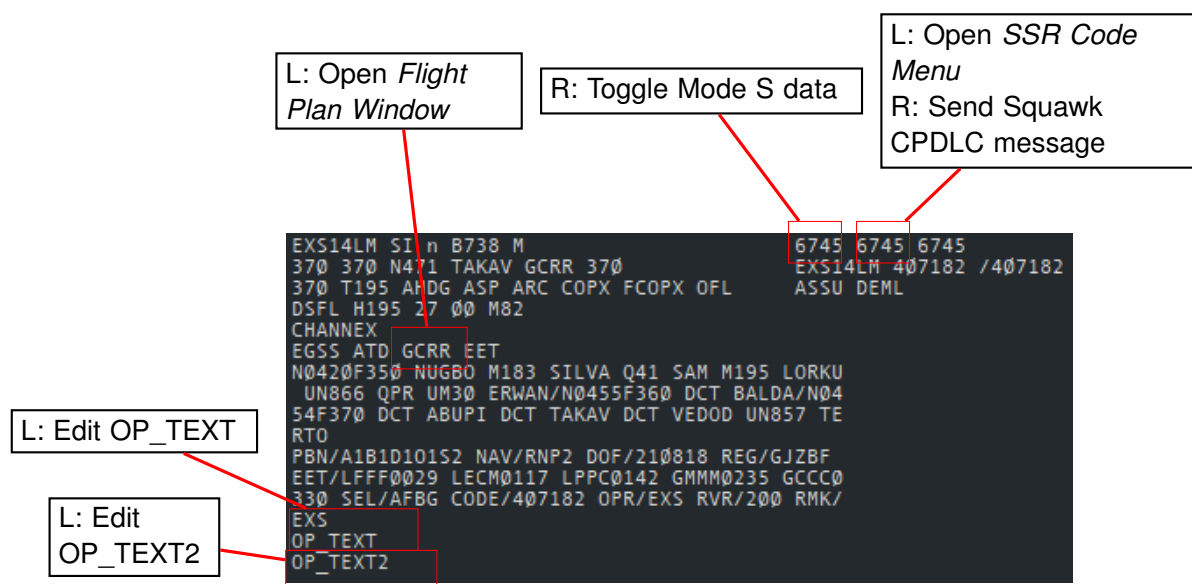


Figure 3.20: Extended Label Interaction

3.4.7.7 Uncoupled Label

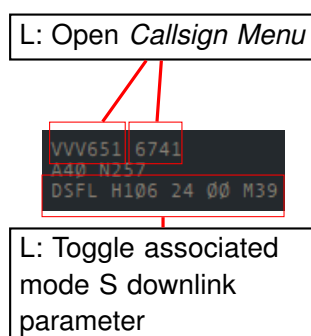


Figure 3.21: Uncoupled Label Interaction

3.4.8 Label Compaction

Label fields may be automatically suppressed in certain conditions. This is called Label Compaction. Label Compaction only occurs in unselected labels. When a field is suppressed, the remaining fields to the right will move left to the suppressed field position. If all fields in a line are suppressed, the next line is moved up to the suppressed line position. Values being coordinated are exempted from Label Compaction.

The following Label Compaction rules are in place:

- If a field is empty it is suppressed
- If AFL is the same as CFL, CFL is suppressed
- If AFL is the same as CFL and XFL, CFL and XFL are suppressed

 TOPLIS User Manual	USER INTERFACE TRACK LABELS	3.4 P89
--	---	-----------------------

- If AFL is the same as CFL, but different from XFL, only CFL is suppressed
- If AFL is different from CFL, and CFL is the same as XFL, XFL is suppressed
- If AFL is different from CFL, and CFL is different from XFL, no field is suppressed
- If FCOPX is the same as NPT, NPT is suppressed

 TOPLIS User Manual	USER INTERFACE TRACK LABEL MENUS	3.5 P90
---	--	-----------------------

3.5 Track Label Menus

These menus are opened from track label fields or flight lists. Except for the confirmation windows, they are closed automatically when a menu option is chosen or the mouse cursor leaves the menu area. The mouse wheel can be used to scroll the selection lists in the menus.

Many of the menus have a default item or value, displayed with inverse video. The menu usually opens so that the default value is located under the mouse cursor for easy selection. Some menus contain items that open folders within the menu. They show a filled triangle before the item name (upright if the folder is closed, inverted if the folder is open). The “More” folder is opened automatically when the mouse cursor is placed over it or if the default item is in the “More” folder, other folders must be left-clicked to open.

3.5.1 Callsign Menu

Items in the callsign menu that are currently not available (for example “Assume” for a track that is not free or being transferred in) are hidden to make the menu as small as possible, so the example images below do not show all the possible items. In the other menus the unavailable items are displayed with **Arm** color.

Controlled Track



Figure 3.22: Callsign Menu

Assume	Assumes track
Refuse	Refuses the incoming transfer
Transfer	Initiates a transfer to the next sector

 TOPLIS User Manual	USER INTERFACE TRACK LABEL MENUS	3.5 P91
---	--	-------------------

ROF	Sends a <i>Request On Frequency</i> message
(X)Freq	Toggles the <i>Frequency dot</i>
(X)Highlight	Toggles the Callsign highlight
(X)S-Highlight	Toggles the Callsign+AFL fields highlight
Vector	Opens the <i>Prediction Line Menu</i>
QDM	Starts a <i>QDM Vector</i> from this track
(X)Hold	“Hold” opens the <i>Hold/Susp Menu</i> , “XHold” cancels a given holding clearance
▼ More	Shows additional less frequently used options
Man Trf	Opens the <i>Manual Transfer Menu</i>
HOP	Initiates a <i>Handover Proposal (HOP)</i>
(X)Mark	Toggles the <i>Mark dot</i>
FPL	Opens the <i>Flight Plan Window</i>
Start/End CPDLC	Starts/Ends CPDLC connection with the aircraft
VCI	Opens the <i>VCI Menu</i>
Squawk Ident	Sends a “SQUAWK IDENT” CPDLC message to the aircraft
CPDLC Free Text	Opens the <i>CPDLC Free Text Menu</i>
Free	Releases track
(X)Inbound Est	Toggles the “Inbound Est” manual alert
(X)Irregular	Toggles the “Irregular” manual alert
(X)Missed App	Toggles the “Missed App” manual alert
(X)Weather	Toggles the “Weather” manual alert
On Contact	Sets track <i>On Contact</i> ¹
(X)Couple	Uncorrelates/correlates the flight plan

Besides the manual alerts, none of the selectable toggle options in this menu will be transmitted to other controllers, but the “Mark”, “Freq” and highlight selections will be seen in your other EuroScope instances. A holding clearance is broadcast to all controllers in range when given, and additionally transmitted to the next controller when transferring the track. To correlate a flight plan, first click on the “Couple” item, and then click on the radar position symbol of the desired radar track.

¹ Clicking “On Contact” for a track with “Y” or “Z” flight rules will also automatically change the flight rules in the VATSIM flight plan to VFR in order to make it uncontrolled. The displayed flight rules are not affected.

 TOPLIS User Manual	USER INTERFACE TRACK LABEL MENUS	3.5 P92
---	--	-----------------------


Uncontrolled Track



Figure 3.23: Uncontrolled Track Callsign Menu

On Contact	Sets track <i>On Contact</i>
Assume	Assumes track ¹
Vector	Opens the <i>Prediction Line Menu</i>
QDM	Starts a <i>QDM Vector</i> from this track
(X)Highlight	Toggles the Callsign highlight
(X)S-Highlight	Toggles the Callsign+AFL fields highlight
▼ More	Shows additional less frequently used options
(X)Hold	“Hold” opens the <i>Hold/Susp Menu</i> , “XHold” cancels a given holding clearance
(X)Mark	Toggles the Mark indicator
(X)Freq	Toggles the Freq indicator
Free	Releases track
FPL	Opens the <i>Flight Plan Window</i>
(X)Couple	Uncorrelates/correlates the flight plan

¹Clicking “Assume” for a track with “Y” or “Z” flight rules will also automatically change the flight rules in the VATSIM flight plan to IFR in order to make it controlled. The displayed flight rules are not affected.

 TOPLIS User Manual	USER INTERFACE TRACK LABEL MENUS	3.5 P93
---	--	-----------------------

Uncorrelated Track

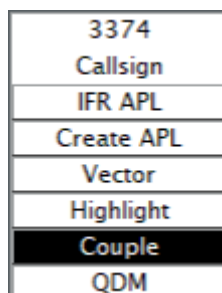


Figure 3.24: Uncorrelated Track Callsign Menu

IFR APL	Opens the <i>Create APL Window</i> (with FRUL=I and S-Highlight on)
Create APL	Opens the <i>Create APL Window</i>
Vector	Opens the <i>Prediction Line Menu</i>
(X)Highlight	Toggles the TSSR/FLTID highlight
Couple	Correlates the radar track with the next clicked “Callsign” field
QDM	Starts a <i>QDM Vector</i> from this track

3.5.2 Transfer menu

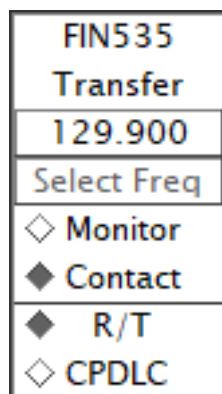


Figure 3.25: Transfer Menu

For CPDLC connected aircraft, the menu contains options related to the transfer. Left clicking on the frequency button initiates the transfer (and sends the CPDLC message if selected).

“Monitor” / “Contact” select which of the two CPDLC message types will be sent.

“R/T” / “CPDLC” select whether the transfer instruction is given via radio or as a CPDLC message.

 TOPLIS User Manual	USER INTERFACE TRACK LABEL MENUS	3.5 P94
---	--	-----------------------

3.5.3 Transfer Confirmation Window

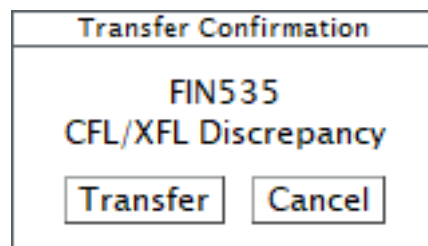


Figure 3.26: Transfer Confirmation Window

If an aircraft has a defined XFL value and hasn't been cleared to it (CFL is not equal to XFL), attempting to transfer the aircraft will open a Transfer Confirmation Window in the middle of the radar screen. While the window is open it will block all other attempts to click on items elsewhere on the radar screen. Either click on "Transfer" to transfer the aircraft regardless of the situation, or "Cancel" to cancel the transfer.

3.5.4 Request On Frequency message

See *ROF*. For the message to succeed, you must be seen as the next controller for the tracking controller. When sent, the text "ROF" is displayed in the track label on the tracking controller's screen.

Warning	<p>The "ROF" message is a feature specific to this plugin. It is an experimental feature and is not guaranteed to work all the time. When you send the message, check that it's sent properly.</p> <ol style="list-style-type: none"> 1. A successfully sent message will be displayed in the <i>Message Out Window</i> 2. If there is an error or the message fails to go through, a message will be put into the <i>Personal Queue Window</i>
----------------	---

 TOPLIS User Manual	USER INTERFACE TRACK LABEL MENUS	3.5 P95
---	--	-----------------------

3.5.5 Hold/Susp Menu



Figure 3.27: Hold Menu

The Hold/Susp menu allows you to enter a holding clearance, adding the aircraft to the *Holding List*. It displays for selection the points in the aircraft's route that are ahead of its current position.

Left-clicking the empty box below the waypoint list opens a text entry box to enter any holding point name.

Left-clicking "Here" enters the present position coordinates as the holding point.

The "Suspend" folder contains a list of all currently active TSA areas. Left-clicking on one sets the aircraft to a TSA Hold. A TSA Hold clearance will exclude the aircraft from all APW and SAP processing.

 TOPLIS User Manual	USER INTERFACE TRACK LABEL MENUS	3.5 P96
---	--	-----------------------

3.5.6 Manual Transfer Menu



Figure 3.28: Manual Transfer Menu

The Manual Transfer menu allows transferring the aircraft to any controller. In the SCHEDULED list are the controllers that are in the current sector sequence sorted in the order the aircraft is planned to enter the controllers' sectors, with the next controller being the default item.

When opened, the "More" list displays all the other controllers for selection. Click on a controller ID to start the transfer. For CPDLC connected aircraft, clicking on a controller ID opens the *Transfer menu*

3.5.7 VCI Menu



Figure 3.29: VCI Menu

Available only for CPDLC-connected aircraft and when more than one frequency has been set up by the controller, the VCI menu allows sending a CPDLC "contact" or "monitor" message without initiating a transfer.

The first button displays the primary frequency, left-clicking it will send the message with that frequency.

 TOPLIS User Manual	USER INTERFACE TRACK LABEL MENUS	3.5 P97
---	--	-----------------------

Left-clicking the “Select Freq” button will open a text entry box to enter any other frequency. If a valid frequency (set up as XMT TXT in EuroScope’s Voice communication setup dialog) is entered, the message will be sent with that frequency.

“Monitor” and “Contact” are used to select the type of message to be sent.

3.5.8 CPDLC Free Text Menu

See *Free Text Messages*. Left-clicking on a message sends it.

The menu closes when a message is sent or the cursor leaves the menu area.

3.5.9 Prediction Line Menu



Figure 3.30: Prediction Line Menu

The Prediction Line menu allows displaying a PRL with a specific length for each aircraft even if the PRL selection is off in the Radar Menu.

The default value is the set PRL value if available, otherwise the PRL length value from the Track Control Window. Changing the PRL length value in the *Track Control Window* or changing the PRL setting in the *Radar Menu* will delete all manually set PRL lengths.

3.5.10 Sequence Number Menu



Figure 3.31: Sequence Number Menu

This menu is used to set an arrival sequence number. Values from 1 to 50 are available.

Warning

The sequence number will not be transmitted to other controllers except the next controller (during transfer) unless the flight strip is manually sent.

3.5.11 Waypoint Menu



Figure 3.32: Waypoint Menu

 TOPLIS User Manual	USER INTERFACE TRACK LABEL MENUS	3.5 P99
---	--	-----------------------

This menu gives access to functions related to the route of the aircraft. It is used to assign direct-to clearances, holding clearances, and to coordinate the sector entry/exit point.

Left-clicking on a point in the list sets a direct-to clearance to that point. Any point name can be manually entered in the box at the bottom of the menu.

Warning	Note that no coordination is performed. If coordination is necessary, right-click any point name to open the EuroScope “COPN/COPX point” popup list or use the “Probe” button instead.
----------------	--

When the aircraft is CPDLC-connected and the coordination is an exit coordination, the menu offers a choice between “R/T” and “CPDLC”. The chosen option decides how a clearance is communicated to the aircraft.

“Probe” opens the EuroScope “COPN point” or “COPX point” popup list and draws the Flight Leg for the flight. Moving the mouse cursor over the points in the popup can be used to probe the effects of possible route changes. Allow up to 5 seconds after each point change for FPCP to update. The popup is also used to start point coordinations.

For “HOP” see *AHDG Menu*.

Left-clicking “Hold” opens the *Hold/Susp Menu*. If a holding clearance already exists, the button will read “XHold” and clicking it will remove the clearance.



Figure 3.33: Waypoint Menu in Coordination

When an entry or exit coordination has been received, the menu options are:

Accept	Accepts the coordination
Reject	Rejects the coordination
Probe	Opens EuroScope popup to counter-propose another point

With “CPDLC” selected, when “Accept” is clicked, in addition to the coordination being accepted, a “PROCEED DIRECT TO <point>” CPDLC message is sent to the aircraft.



Figure 3.34: CPDLC Waypoint Menu

When a direct-to downlink request has been received, the menu can be used to answer it.

Point name	Sends a “PROCEED DIRECT TO <point>” CPDLC message
SBY	Sends a “STANDBY” CPDLC message
UNABLE	Sends an “UNABLE” CPDLC message

The “R/T” / “CPDLC” selection is fixed to “CPDLC”.

Warning	Clicking the point name will set the direct-to clearance without coordination
----------------	---

When there is no request in process and the aircraft has a direct-to point set, the menu can be used to send the clearance via CPDLC. In this case the menu opens like this except without the “SBY” and “UNABLE” buttons. Clicking the point name will send the “PROCEED DIRECT TO <point>” CPDLC message.

 TOPLIS User Manual	USER INTERFACE TRACK LABEL MENUS	3.5 P101
---	--	------------------------

3.5.12 AFL Menu

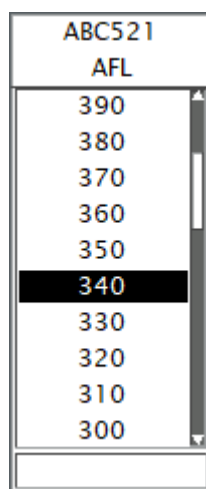


Figure 3.35: AFL Menu

This menu can be used to set the AFL value for aircraft that don't have an altitude reporting transponder.

The default value is the previously set manual AFL value if set, otherwise the CFL value.

There are two ways to set the AFL using this menu:

- Clicking a level value in the list
- Clicking the text entry box below the level list and entering the value there

The accepted manual level entry formats for the AFL, CFL and RFL menus are as follows ("n" is a number):

"Annn" or "nnn"

Altitude in hundreds of feet

"Ennn"

Height in hundreds of feet above aerodrome elevation

Regardless of whether the entered value is an altitude or height, it will be converted to altitude in feet and the result is then rounded to the nearest 100 feet.

 TOPLIS User Manual	USER INTERFACE TRACK LABEL MENUS	3.5 P102
---	--	------------------------

3.5.13 CFL Menu



Figure 3.36: CFL Menu

The CFL menu is available only when the aircraft is assumed. The default value is by default the XFL, but it can be changed to the current CFL or the RFL in the *Local Settings submenu*. Altitudes up to the transition altitude are prefixed with “A”, QFE heights are prefixed with “E”. Selectable values are from 500ft to FL650 with 500ft intervals up to the transition altitude, then 1000ft intervals up to FL410 and 2000ft intervals above it.

The aircraft’s RFL is displayed above the level list with format “R<RFL>”. Left-clicking it sets the CFL equal to RFL.

“VA”, “CA”, “CAT2” and “CAT3” set the corresponding approach clearances.

“Probe” toggles a CFL probe function and displays the Flight Leg. Moving the mouse cursor over the levels in the list will show the MTCD/SAP effects of setting that value as the CFL (allow a couple of seconds for the FPCP to update the calculations).

There are four ways to set the CFL using this menu:

- Clicking the RFL value;
- Clicking a level value in the list;
- Clicking one of the approach clearance items;
- Clicking the text entry box at the bottom of the menu and entering the value there.

 TOPLIS User Manual	<div style="text-align: center;"> USER INTERFACE </div> <div style="text-align: center;"> TRACK LABEL MENUS </div>	<div style="text-align: center;"> 3.5 </div> <div style="text-align: center;"> P103 </div>
---	--	---

ABC521
 CFL
 R340

150
 140
 130
 120
 110

100

 090
 080
 070
 060

☐ R/T
☒ CPDLC
 CA
 VA
 Probe
 CAT2
 CAT3

Figure 3.37: CPDLC CFL Menu

For CPDLC connected aircraft, the menu contains “R/T” and “CPDLC” options to select whether a level clearance is to be sent via radio or as a CPDLC message.

When a level request downlink has been received, the “R/T” option is deselected and cannot be selected. The request must be replied to using CPDLC. A clearance to the requested or some other level is given using this menu. The “STANDBY” and “UNABLE” responses are sent from the RFL menu.

When a level clearance uplink is waiting for reply, the “CPDLC” option is deselected and cannot be selected. If a new level clearance must be sent before there is an answer to the uplink, it must be given using R/T (doing so also closes the open uplink message).

 TOPLIS User Manual	USER INTERFACE TRACK LABEL MENUS	3.5 P104
---	--	------------------------

3.5.14 RFL Menu



Figure 3.38: RFL Menu

The RFL menu allows setting the requested flight level. The operation is similar to the AFL and CFL menus. The function for the "-->" button is not implemented.



Figure 3.39: RFL Menu during ongoing downlinked request

For CPDLC connected aircraft, if a level request has been received from the aircraft, there are also "SBY" and "UNABLE" buttons to send those messages as a reply. For clearing the aircraft to the requested or some other level, the CFL menu must be used.

 TOPLIS User Manual	USER INTERFACE TRACK LABEL MENUS	3.5 P105
---	--	------------------------

3.5.15 AHDG Menu



Figure 3.40: AHDG Menu

This menu includes items to set or clear an assigned heading or a direct route and to send a HOP. The initially highlighted heading value will be the closest one to the assigned heading if the aircraft has one, otherwise the closest one to the aircraft ground track, or the departure runway heading if the menu is opened from the *Departure List*. Clicking on a heading value will set it as the assigned heading. The assigned heading can also be set by typing it into the entry box or by using the AHDG vector.

"LLZ" enters a localizer clearance.

The "More" folder contains the following additional options:

- "Point" lets you pick a direct-to point from the radar screen. Left-click on any point to set it as the direct-to point (VORs, NDBs and waypoints, in that priority order). Pressing the [Esc] key or clicking on any clickable data field will abort the operation;
- "HOP", "RTI" and "TIP" are coordination functions (see *Handover Proposal (HOP)*, *Request Tactical Instructions (RTI)* / *Tactical Instructions Proposal (TIP)*). To use them, first click on the function's button and then select the desired value from the list (for HOP also "Point" is available);
- "Clear" removes an assigned heading or a direct route. For CPDLC connected aircraft, it sends the "RESUME OWN NAVIGATION" CPDLC message if the "CPDLC" option is selected.



Figure 3.41: CPDLC AHDG Menu

For CPDLC connected aircraft, the menu contains additional buttons:

“R/T” and “CPDLC” select whether a heading/direct-to clearance is to be sent using R/T or as a CPDLC message.

- When a heading request downlink has been received, the “R/T” option is deselected and cannot be selected. The request must be replied to using CPDLC.
- When a heading/direct-to clearance uplink has been sent, the “CPDLC” option is deselected and cannot be selected. If a new heading/direct-to clearance must be sent before there is an answer to the uplink, it must be given via radio (doing so also closes the open uplink message).

“SBY” and “UNABLE” send the corresponding answers to a downlink heading request message.

Warning	Clicking a point on the radar screen will set the direct-to clearance without coordination
----------------	--

3.5.16 AHDG Vector

The AHDG vector is a way of setting an assigned heading for an aircraft. To use the vector, left-click on the radar position symbol of the aircraft. This will start drawing the vector. When you're satisfied with the heading value, left-click again to set it. Right-clicking will abort drawing the vector.

When the cursor is over a known point (VOR, NDB or waypoint), the name of that point is displayed instead of the heading value, and left-clicking will set a direct-to clearance to that point. To temporarily disable the known points functionality, keep the <ALT> key pressed while using the vector.

 TOPLIS User Manual	USER INTERFACE TRACK LABEL MENUS	3.5 P107
---	--	------------------------

3.5.17 Handover Proposal (HOP)

See *HOP*. For the receiving controller a HOP is identified by coloring the *CALLSIGN* field with **Proposition In** color in the label. For the sending controller the *CALLSIGN* field remains **Assumed** color and the *SI* field is shown in **Proposition In** color. Additionally, if there are proposed parameters they are also colored **Proposition In** in both controllers' labels.

There are three ways to answer a HOP and all of them involve accepting all proposed parameters. If one or more parameters are not acceptable, coordination must be done to find acceptable parameters or to revert to standard ones. The available ways, in order of preference, to accept the proposed parameters are:

Callsign Menu -> "ROF" Sends a Request On Frequency message

Combined Transfer Menu -> Sends an Accept message
"Accept"

Callsign Menu -> "Assume" Assumes the track

If the parameters are unacceptable to the receiving controller, the sending controller has the possibility to modify or clear them using the appropriate menus, or to cancel the whole HOP by assuming the track.

Warning	A HOP will only be shown correctly for controllers using this plugin. To other controllers it will be shown as a normal transfer without any special coloring of any data fields. This combined with the three possible ways to answer the HOP require the sending controller to pay special attention to the track to see what the result is.
----------------	--

Warning	If a HOP is sent to a manually selected controller, the next controller selection will be reset to the automatically calculated controller when an "ROF" or "Accept" answer is received. The correct controller must then be manually selected again for the transfer.
----------------	--

3.5.18 Request Tactical Instructions (RTI) / Tactical Instructions Proposal (TIP)

Certain tactical data (AHDG, ASP and ARC) can be coordinated using the *RTI/TIP* functions. Their only difference is that RTI is used for requesting the parameters when the aircraft is inbound to your sector and your sector is the next in the sector sequence, and TIP for proposing the parameters to the next sector when the aircraft is assumed. Contrary to the *Handover Proposal (HOP)* function, these coordinations can be refused using the system, and they do not offer the aircraft for transfer.


 TOPLIS User Manual	<div style="text-align: center;"> USER INTERFACE </div> <div style="text-align: center;"> TRACK LABEL MENUS </div>	<div style="text-align: center;"> 3.5 </div> <div style="text-align: center;"> P108 </div>
---	--	--



Figure 3.42: TIP Menu during ongoing AHDG coordination

To answer the RTI/TIP, open the *AHDG Menu*. For TIP, the menu contains just two options, “Ack” (accept proposal) and “Reject” (reject proposal). For RTI, an additional “Accept” option is available. Like “Ack”, it accepts the proposal, but it also sets the value. For CPDLC connected flights, the “R/T” and “CPDLC” options are used to determine whether the clearance is to be sent as a CPDLC message or using RTF.

<div style="background-color: red; color: white; padding: 2px; font-weight: bold;">Warning</div>	<p>It is possible to have received more than one type (AHDG/ASP/ARC) of RTI/TIP. When answering one of them, the same answer will be sent to all the others as well. When selecting the “Accept” option, only that type’s value will be set (for example when AHDG and ASP RTI have been received and selecting “Accept” from the AHDG menu, both RTIs will be accepted but only the AHDG value will be set accordingly, and ASP value will have to be set separately)</p>
<div style="background-color: red; color: white; padding: 2px; font-weight: bold;">Warning</div>	<p>The “RTI” and “TIP” messages are features specific to this plugin. They are experimental features not guaranteed to work all the time. When you send these messages, check that they are sent properly.</p> <ul style="list-style-type: none"> A successfully sent message will be displayed in the <i>Message Out Window</i> and the requested parameter being shown above the track label If there is an error or the message fails to go through, a message will be put into the <i>Personal Queue Window</i>.

 TOPLIS User Manual	USER INTERFACE TRACK LABEL MENUS	3.5 P109
---	--	------------------------

3.5.19 ARC Menu

ABC521
ARC
ft/mn
- 50 +
- 45 +
- 40 +
- 35 +
- 30 +
- 25 +
- 20 +
- 15 +
- 10 +
- 05 +
▼ More
HOP
RTI
TIP
Clear

Figure 3.43: ARC Menu

The ARC menu allows assigning a rate of climb or descent to the flight plan. Values are displayed in 100's of ft/min.

Left-clicking on a value assigns it. Clicking the “-” or “+” next to a value sets the clearance as a maximum or minimum rate respectively. Clicking the value itself will set the clearance as an exact rate.

For “HOP”, “RTI” and “TIP” see the *AHDG Menu*.

An assigned rate can be cleared by selecting the “Clear” item.

Warning	<p>The exact and maximum rate clearances are a feature specific to this plugin (the additional information is stored in the flight strip). To controllers not using TopSky, all assigned rate clearances will only show the rate value.</p> <p>Assigned rate clearances given by controllers not using TopSky will be displayed as minimum rate clearances.</p>
----------------	---

3.5.20 ASP Menu



Figure 3.44:
ASP Menu



Figure 3.45:
ASP Menu
Mach option

The ASP menu allows setting an assigned speed or Mach number. The default value will depend on the assigned one if set (assigned+20kts for departures, assigned or slightly less for arrivals), otherwise it will be either a pre-defined value or the current DMACH if available. The menu will initially open in IAS mode if the aircraft's CFL is below FL285, and in Mach mode if above it. The selectable values range from 100 to 400 knots and from M0.50 to M1.00.

Left-click the units button to toggle between IAS and Mach.

The “HS” option will set a clearance for “high speed”, displayed as “HS” in the ASP label field.

The “+” and “-” options can be used to specify the clearance as a minimum/maximum speed.

For “HOP”, “RTI” and “TIP” see the *AHDG Menu*.

The “Resume” item clears an assigned value. For CPDLC connected aircraft, it sends the “RESUME NORMAL SPEED” CPDLC message if the “CPDLC” option is selected.

 TOPLIS User Manual	<div>USER INTERFACE</div> <div>TRACK LABEL MENUS</div>	<div>3.5</div> <div>P111</div>
---	--	--------------------------------

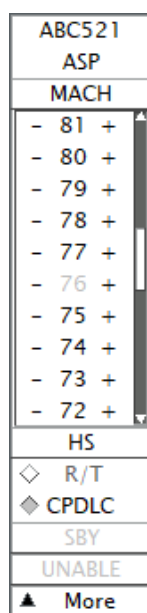


Figure 3.46: CPDLC ASP Menu

For CPDLC connected aircraft, the menu contains additional buttons:

R/T” and “CPDLC” select whether a speed clearance is to be sent via radio or as a CPDLC message.

- When a speed request downlink has been received, the “R/T” option is deselected and cannot be selected. The request must be replied to using CPDLC.
- When a speed clearance uplink has been sent, the “CPDLC” option is selected and cannot be deselected. If a new speed clearance must be sent before there is an answer to the uplink, it must be given via radio (doing so also closes the open uplink message).

SBY” and “UNABLE” send the corresponding answers to a downlink speed request.

<div>Warning</div>	<p>The minimum, maximum and high speed clearances are a feature specific to this plugin (the additional information is stored in the flight strip). To controllers not using TopSky, all assigned speed clearances will only show the speed value (999 for the high speed clearance). Assigned speed clearances given by controllers not using TopSky will be displayed as exact speed clearances.</p>
--------------------	--

 TOPLIS User Manual	USER INTERFACE TRACK LABEL MENUS	3.5 P112
---	--	------------------------

3.5.21 SSR Code Menu

ABC521		
SSR		
Get SSR		
3374		
1	2	3
4	5	6
7	8	9
C	0	Ok

Figure 3.47: ASSR Menu

The SSR Code menu allows assigning an SSR code to the flight plan. To enter a new code, type it by left-clicking the numbers. “C” clears the entered value and “Ok” assigns the code if it’s a valid one. To get an automatically assigned code, left-click the “Get SSR” button.

When the SSR Code menu is opened to start the *Find Track* function, the top row of the menu will read “Find” and the “Get SSR” button will not be present. Enter a code and click “Ok” to start the function.

3.5.22 Combined Transfer Menu

FIN535	
CTM	
none	
none	
none	
Accept	

Figure 3.48: Combined Transfer Menu

The Combined Transfer menu displays the proposed transfer parameters for a *HOP*. It is opened by clicking on the *AHDG*, *ASP* or *COPN/COPX* items in the track label or flight list, or the list row displaying the HOP message in the *Message In Window*.

From top to bottom, the displayed values are the direct-to point, speed/Mach value, and the assigned heading value. If one or more of them are not proposed, the value will be replaced by the string “none” (the image above shows the menu for a HOP without any proposed parameters). Clicking on “Accept” will send a message to the upstream controller that the proposed parameters, if any, are all acceptable.

 TOPLIS User Manual	USER INTERFACE TRACK LABEL MENUS	3.5 P113
---	--	------------------------

3.5.23 Aerodrome Menu



Figure 3.49: Aerodrome Menu

The Aerodrome menu is used to select the aerodrome(s) for aerodrome related windows and functions. The list contains all aerodromes with runways defined in the active sector file. To select an aerodrome, left-click on it or type its identifier into the text entry box below the list.

Selection of more than one aerodrome is possible when the menu was opened from the *Weather Messages Window*. In this case the “All” button is available and clicking on it will select all the aerodromes in the list.

Clicking on “Ok” will confirm the selection(s) and close the menu.

3.5.24 CPDLC Emergency Acknowledgement Menu



Figure 3.50: CPDLC Emergency Acknowledgement Menu

When a CPDLC emergency message has been received, this menu is used to respond to it (if applicable), and then acknowledge the situation. When a reply is required, the menu button will read “ROGER”. Left-clicking on it will send the “ROGER” CPDLC message and close the menu. When opening the menu again (or when a reply was not required), the button reads “Ack”. Left-clicking on it will acknowledge the emergency.

The menu is closed when the “ROGER”/“Ack” button is clicked or the cursor leaves the menu area.

 TOPLIS User Manual	USER INTERFACE TRACK LABEL MENUS	3.5 P114
---	--	------------------------

3.5.25 CPDLC Pilot Late Acknowledgement Menu

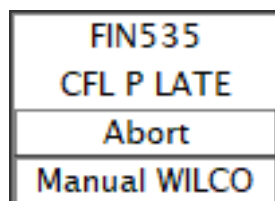


Figure 3.51: CPDLC Pilot Late Acknowledgement Menu

When there is no answer to a CPDLC uplink clearance, this menu can be used to resolve the situation. “Abort” discards the uplink and “Manual WILCO” simulates reception of a WILCO message.

3.5.26 Time Menu

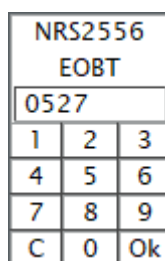


Figure 3.52: Time Menu

The Time menu is used to set/change the time value for ATD, CTOT, EAT, EOBT, ETD, NBT and NLT fields. Default values are:

ATD	Current time
CTOT	current field value if available, current time otherwise
EAT	current field value if available, current time otherwise
EOBT	Current time
ETD	Current field value
NBT	Current field value if available, current time otherwise
NLT	current field value if available, current time otherwise

“C” clears the value, “Ok” sets the time.

 TOPLIS User Manual	USER INTERFACE TRACK LABEL MENUS	3.5 P115
---	--	------------------------

3.5.27 Departure Sequence Menu



Figure 3.53: Departure Sequence Menu

The DSQ menu is used to select a specific departure sequence number to a flight. The list includes the possible numbers, and the current number is highlighted. Left-clicking on a number sets it, “Clear” removes the flight from the departure sequence.

Note

The departure sequence number is only stored locally, it is not sent to other controllers or even to other EuroScope instances.

 TOPLIS User Manual	USER INTERFACE AIRCRAFT LISTS	3.6 P116
---	--	--------------------

3.6 Aircraft Lists

3.6.1 Departure List

The Departure List contains all departures still on the ground of the controlled aerodromes.

Item	Left Mouse	Right Mouse
<i>CALLSIGN</i>	Open <i>Callsign Menu</i>	Toggle Flight Leg display
<i>FSTS</i>		Network Status Options
<i>EOBT</i>	Edit EOBT	EOBT Options
<i>TOBT*</i>	Edit TOBT	TOBT Options
<i>TSAT</i>	Ready TOBT	
<i>TSAC</i>	Add TSAT to TSAC	Edit TSAC
<i>ASRT</i>	Toggle ASRT	
<i>ASAT</i>		
<i>TTOT</i>		TTOT Options
<i>Delta TTOT</i>		
<i>CTOT</i>		CTOT Options
<i>Delta CTOT</i>		
<i>ECTOT</i>	Add ECTOT to CTOT	ECTOT Options
<i>Flow Message</i>	Get FM as text	
<i>Ready</i>	Toggle Ready	
<i>ATYP</i>		
<i>WTC</i>		
<i>V</i>		
Departure stand		
QNH	Edit OP TEXT	Edit OP TEXT
<i>ADEP</i>	Open <i>Flight Plan Window</i>	Toggle Flight Leg display
<i>ADES</i>	Open <i>Flight Plan Window</i>	Toggle Flight Leg display
<i>DRWY</i>	Open <i>Departure Clearance Window</i>	Open <i>Pre-Departure Clearance Window</i>

 TOPLIS User Manual	USER INTERFACE AIRCRAFT LISTS	3.6 P117
---	--	--------------------

Item	Left Mouse	Right Mouse
<i>SID</i>	Open <i>Departure Clearance Window</i>	Open <i>Pre-Departure Clearance Window</i>
<i>ASSR</i>	Open <i>SSR Code Menu</i>	Open <i>SSR Code Menu</i>
<i>CFL</i>	Open <i>CFL Menu</i>	Open <i>CFL Menu</i>
<i>RFL</i>	Open <i>RFL Menu</i>	Open <i>RFL Menu</i>
<i>CLR</i>	Toggle Clearance Acknowledged flag	
Ground state	Open Ground State Menu	Open Ground State Menu
<i>OP TEXT2</i>	Edit OP TEXT2	Edit OP TEXT2

Table 3.23: Departure List Construction

*EOBT is displayed instead of TOBT in non-CDM airports.

3.6.2 Sector List

Global Menu Tools -> Flight Plan Lists -> Sector List...


The Sector List contains all departed controlled aircraft in the following states:

- Informed¹
- Concerned^{1,2}
- Coordinated
- Transfer to me initiated
- Assumed
- Transfer from me initiated
- Redundant¹

Item	Left Mouse	Right Mouse
*	Toggle units	
<i>CALLSIGN</i>	Open <i>Callsign Menu</i>	Open Extended Label

¹If corresponding selection made in the Global menu


²The display of concerned aircraft is limited to those entering the sector within 60 minutes

 TOPLIS User Manual	USER INTERFACE AIRCRAFT LISTS	3.6 P118
---	--	--------------------

Item	Left Mouse	Right Mouse
<i>ETN</i>		
<i>PEL</i>	Open PEL Menu	Open <i>Vertical Aid Window</i>
<i>COPN</i>	Open <i>Waypoint Menu</i>	Toggle Flight Leg display
<i>NRAC</i>		
<i>ATYP</i>	Toggle ATYP highlight	
<i>WTC</i>	Toggle WTC highlight	
<i>V</i>		
<i>CFL</i>	Open <i>CFL Menu</i>	Open <i>Vertical Aid Window</i>
<i>ACF</i>	Toggle ACF field color	Clear approach clearance
<i>AHDG</i>	Open <i>AHDG Menu</i>	Ack RJC or FAIL / Clear value / Assign present heading
<i>ASP</i>	Open <i>ASP Menu</i>	Ack RJC or FAIL / Clear value
<i>TAS</i>		
<i>ETX</i>		
<i>XFL</i>	Open XFL Menu	Open <i>Vertical Aid Window</i>
<i>COPX</i>	Open <i>Waypoint Menu</i>	Toggle Flight Leg display
<i>RFL</i>	Open <i>RFL Menu</i>	Open <i>CPDLC Current Message Window</i>
<i>PSSR</i>		Find PSSR
<i>ASSR</i>	Open <i>SSR Code Menu</i>	Send CPDLC Squawk message
<i>NSSR</i>	Open <i>SSR Code Menu</i>	Send CPDLC Squawk message
<i>AN</i>		
<i>ADEP</i>		

 TOPLIS User Manual	USER INTERFACE AIRCRAFT LISTS	3.6 P119
---	--	--------------------

Item	Left Mouse	Right Mouse
<i>SID</i>	Open SID list	Acknowledge SID allocation
<i>DRWY</i>	Open Runway list	
<i>FCOPX</i>		Toggle Flight Leg display
<i>ETX</i>		
<i>FText</i>	Edit <i>FText</i>	
<i>ADES</i>	Open <i>Flight Plan Window</i>	
<i>MFxFF</i>		
<i>TOMSTAFF</i>		
<i>TTLTTGMFxFF</i>		
<i>SI</i>	Assume / Transfer	Toggle SI frequency
<i>ETA</i>		
<i>STAR</i>	Open STAR list	Acknowledge STAR allocation
<i>ARWY</i>	Open Runway list	
<i>SQAMAN</i>		
Gate	Open Stand menu	
<i>OP TEXT</i>	Edit <i>OP TEXT</i>	
<i>OP TEXT2</i>	Edit <i>OP TEXT2</i>	
<i>MNR</i>		
<i>OFL</i>	Open <i>Vertical Aid Window</i>	Acknowledge OCM / Toggle OFL highlight
<i>NAT</i>		
<i>OAN</i>		
<i>CTO</i>		
<i>O+</i>		Open <i>Oceanic Time Restriction Window</i>

 TOPLIS User Manual	USER INTERFACE AIRCRAFT LISTS	3.6 P120
---	--	--------------------

Item	Left Mouse	Right Mouse
<i>NBT</i>	<i>Open Time Menu</i>	Acknowledge / clear OCM NBT
<i>NLT</i>	<i>Open Time Menu</i>	Acknowledge / clear OCM NLT
<i>C</i>	Toggle Check indicator	

Table 3.24: Sector List Construction

3.6.3 Load Factor List

Global Menu Tools -> Flight Plan Lists -> Load Factor List. . .


The Load Factor List contains all departed controlled aircraft in the concerned state and all non-departed controlled aircraft in the concerned and coordinated states expected to enter the sector within 4 hours.

Item	Left Mouse	Right Mouse
<i>CALLSIGN</i>	<i>Open Callsign Menu</i>	
<i>NRAC</i>		
<i>V</i>		
<i>ETN</i>		
<i>PEL</i>	Open PEL Menu	Open <i>Vertical Aid Window</i>
<i>COPN</i>	Open <i>Waypoint Menu</i>	Toggle Flight Leg display
<i>ADEP</i>		
<i>ADES</i>	Open <i>Flight Plan Window</i>	
<i>RFL</i>	Open <i>RFL Menu</i>	Open <i>CPDLC Current Message Window</i>
<i>PSSR</i>		Find PSSR
<i>ASSR</i>	Open <i>SSR Code Menu</i>	Send CPDLC Squawk message
<i>C</i>	Toggle Check indicator	

Table 3.25: Load Factor List Construction

3.6.4 Resectorisation List

Global Menu Tools -> Flight Plan Lists -> Resectorisation List. . .

 TOPLIS User Manual	USER INTERFACE AIRCRAFT LISTS	3.6 P121
---	---	------------------------

The Resectorisation List contains all flights assumed or on-contact with specified LFUNCs.

Item	Left Mouse	Right Mouse
<i>CALLSIGN</i>	Open <i>Callsign Menu</i>	
<i>SI</i>	Assume / Transfer	Toggle SI frequency
<i>C</i>	Toggle Check indicator	


Table 3.26: Resectorisation List Construction

3.6.5 ETWR List

Global Menu Tools -> Flight Plan Lists -> ETWR List...

The ETWR List contains notified and coordinated flights departing from specified airports

Item	Left Mouse	Right Mouse
*	Toggle units	
<i>CALLSIGN</i>	Open <i>Callsign Menu</i>	
<i>FETN</i>		
<i>FCOPN</i>		Toggle Flight Leg display
<i>ETN</i>		
<i>PEL</i>	Open PEL Menu	Open <i>Vertical Aid Window</i>
<i>COPN</i>	Open <i>Waypoint Menu</i>	Toggle Flight Leg display
<i>SID</i>	Open SID list	Acknowledge SID allocation
<i>DRWY</i>	Open runway list	
<i>FText</i>	Edit <i>FText</i>	
<i>NRAC</i>		
<i>ATYP</i>		
<i>WTC</i>		
<i>V</i>		
<i>XFL</i>	Open COPX Alt popup	Open <i>Vertical Aid Window</i>

 TOPLIS User Manual	USER INTERFACE AIRCRAFT LISTS	3.6 P122
---	--	--------------------

Item	Left Mouse	Right Mouse
<i>COPX</i>	Open <i>Waypoint Menu</i>	Toggle Flight Leg display
<i>FCOPX</i>		Toggle Flight Leg display
<i>RFL</i>	Open <i>RFL Menu</i>	Open <i>CPDLC Current Message Window</i>
<i>ASSR</i>	Open <i>SSR Code Menu</i>	Send <i>CPDLC Squawk</i> message
<i>ADEP</i>		
<i>ADES</i>	Open <i>Flight Plan Window</i>	
<i>SI</i>	Assume / Transfer	Toggle <i>SI</i> frequency
<i>AN</i>		
<i>C</i>	Toggle Check indicator	

Table 3.27: ETWR List Construction


3.6.6 Uncontrolled Lists

Global Menu Tools -> Flight Plan Lists -> Uncontrolled List 1/2. . .

The Uncontrolled List contains all or a subset of Uncontrolled (VFR flights not in ASSUMED state) aircraft, depending on whether filters are set up.

Up to 2 lists can be displayed. Each list may be configured with different filtering options.

Item	Left Mouse	Right Mouse
<i>CALLSIGN</i>	Open <i>Callsign Menu</i>	Open Extended Label
<i>ASSR</i>	Open <i>SSR Code Menu</i>	Send <i>CPDLC Squawk</i> message
<i>NRAC</i>		
<i>ATYP</i>		
<i>ADEP</i>		
<i>ETD</i>	Open <i>Time Menu</i>	
<i>ATD</i>	Open <i>Time Menu</i>	Reset <i>ATD</i> to <i>ETD</i>
<i>ADES</i>	Open <i>Flight Plan Window</i>	
<i>FF</i>		


 TOPLIS User Manual	USER INTERFACE AIRCRAFT LISTS	3.6 P123
---	--	--------------------

Item	Left Mouse	Right Mouse
STAFF		
TTLTTGFF		
ALT1	Open <i>Flight Plan Window</i>	
EET	Open <i>Flight Plan Window</i>	
ETA		
FCOPN		Toggle Flight Leg display
PEL	Open PEL menu	Open <i>Vertical Aid Window</i>
FETN		
FCOPX		Toggle Flight Leg display
FETX		
SI ¹		
OP TEXT	Edit <i>OP TEXT</i>	
OP TEXT2	Edit <i>OP TEXT2</i>	
FText	Edit <i>FText</i>	
C	Toggle Check indicator	

Table 3.28: Uncontrolled List Construction

3.6.7 Lost List

Global Menu Tools -> Flight Plan Lists -> Lost List. . .




Lost List : (1) 0/0										
View All FLTs										
C/S	Lost	POS	AFL	CFL	ACF	ASSR	FPASD	No	ATYP	C
ABC521	1111	650922N0262354E	304	180		3374		1	B748	

Figure 3.54: Lost List

The list includes assumed flights that have previously been correlated to a radar track but radar contact has been lost. The list opens automatically whenever a flight is added into it, and will be closed automatically when empty. If manually opened, the list cannot be manually closed until it is empty.

¹Labeled as LFUNC

 TOPLIS User Manual	USER INTERFACE AIRCRAFT LISTS	3.6 P124
---	---	------------------------

Item	Type	Left Mouse	Right Mouse
C/S	mandatory	Open <i>Callsign Menu</i>	
Lost (time)	optional		
POS (lost position)	optional		
AFL (last received)	optional		
CFL	optional	Open <i>CFL Menu</i>	Open <i>Vertical Aid Window</i>
ACF	optional	Toggle field text color	Cancel approach clearance
ASSR	optional	Open <i>SSR Code Menu</i>	
FPASD	optional	Toggle FPASD track (when globally off)	
No	optional		
ATYP	optional		
C	optional		

Table 3.29: Lost List Construction

“View” opens the View menu:

Header	Toggle visibility of the list header line
Default	Sets field visibility to default (all optional fields off)
<field>	Toggles field visibility

Filtering the flights entered in the list can be specified in the filtering menu:

All FLT's	All lost flights will be entered
ADES Filter	Flights lost within a specified distance from their destinations will not be entered into the list

The rows are sorted based on “Lost” time in descending order.

When a flight is added into the Lost List, its FPASD selection is initially set to “on” regardless of the FPASD setting in the *Global Menu*.

3.6.8 Traffic Management Lists

Global Menu Tools -> Flight Plan Lists -> Traffic Management List 1/2. . .

The Traffic Management List contains all Uncontrolled and Controlled flights at least in Coordinated State with specified destinations, and routing via specified points. The ETO over the point (or ETA if no point specified) must be within 40 minutes, and the destination must be specified to include uncontrolled flights in the list.


Up to 2 lists can be displayed. Each list may be configured with different filtering options.

Item	Left Mouse	Right Mouse
<i>COPN</i>	Open <i>Waypoint Menu</i>	Toggle Flight Leg display
<i>PEL</i>	Open PEL Menu	
<i>SI</i>	Open SI List	Toggle SI frequency
<i>CALLSIGN</i>	Open <i>Callsign Menu</i>	Open Extended Label
<i>ASSR</i>	Open <i>SSR Code Menu</i>	Send CPDLC Squawk message
<i>AFL</i>	Open <i>AFL Menu</i>	
<i>a</i>		
<i>CFL</i>	Open <i>CFL Menu</i>	
<i>ATYP</i>		
<i>WTC</i>		
<i>TAS</i>		
<i>RFL</i>	Open <i>RFL Menu</i>	Open <i>CPDLC Current Message Window</i>
<i>ETOHP</i> ¹		
<i>EAT</i>	Open <i>Time Menu</i>	
<i>STAR</i>	Open STAR list	
<i>ARWY</i>	Open Runway list	
<i>HPT</i>	Open <i>Waypoint Menu</i>	

Table 3.32: Traffic Management List Construction

¹Labeled as ETO

3.6.9 Holding List



View	ETO/HPT
LBL C/S	ASSR AFL CFL HPT ETO XFL COPI EAT RT PEL FX STA TTLT6
IBK124	5233 326 270 RIBVU 1128 100 NEPIX 1240 NEPIX 1154 L15
DLH2871	2156 378 340 GODOB 1131 100 NEPIX NEPIX 1221 L35
F1N245P	6047 340 340 RIBVU 1136 100 NEPIX NEPIX 1225 L37

Figure 3.55: Holding List

The Holding List contains aircraft that have been given a holding clearance (by default the aircraft need to be at least in the coordinated sector state). The list is automatically displayed whenever there is at least one aircraft in the list. Left-clicking the button at the top right corner collapses the list to display only the title bar.

It is possible to set up point-specific lists using the plugin settings file, in which case the generic list includes aircraft that are in a TSA hold, present position hold or holding at a point for which there is no specific list defined. For point-specific lists, the list title text begins with the point name.

“View” opens the View menu

Header	Toggle visibility of the list header line
Default	Sets field visibility to default (all optional fields off)
<field>	Toggles field visibility

Left-clicking adjusts only the current list, right-clicking sets the same value to all holding lists.

The list sorting option is displayed next to the "View" label. Clicking on it opens a menu to select between the following sorting options:

EAT/HPT	Expected Approach Time -> Holding point name -> Callsign
ETO/HPT	ETO at the holding point -> Holding point name -> Callsign
HPT/CFL/AFL	Holding point name -> CFL -> AFL -> Callsign
FX/STA	Feeder fix name -> Scheduled time at feeder fix -> Callsign

For point-specific holding lists, the sorting options are “EAT”, “ETO”, “CFL/AFL” and “FX/STA”.

The ETO column initially displays the estimated time over the holding fix. Once the aircraft enters the holding, the displayed time is fixed to the holding start time. For present position holds and holding points whose positions are unknown, the time when the holding clearance was given is displayed.


 TOPLIS User Manual	USER INTERFACE AIRCRAFT LISTS	3.6 P127
---	--	--------------------

Item	Type	Left Mouse	Right Mouse
Lbl	optional	Hide/display track label	
C/S	mandatory	Open <i>Callsign Menu</i>	
ASSR	optional	Open <i>SSR Code Menu</i>	
AFL	mandatory	Open <i>AFL Menu</i>	
(attitude indicator)	mandatory		
CFL	mandatory	Open <i>CFL Menu</i>	Open <i>Vertical Aid Window</i>
HPT	optional	Open <i>Stack Manager Window</i>	
ETO	optional		
XFL	optional	Open COPX Alt popup	
COPX	optional	Open <i>Waypoint Menu</i>	Toggle route draw
EAT	optional	Open <i>Time Menu</i>	
RT (EAT given indicator)	optional	Toggle EAT given indicator	
PEL	optional	Open COPX Alt popup	
FX	optional		
STA	optional		
TTLTTG	optional		

Table 3.35: Holding List Construction

If a track label has been hidden, it will be automatically unhidden if the aircraft is cleared to leave the holding or an incoming coordination message for the flight is received.

The expected approach time, if entered, is broadcast to other controllers as well. By default, 10 minutes after it a warning message will be entered into the tracking controller's *Personal Queue Window* if the holding has not been terminated. The EAT is not used for any predictions. The EAT given indicator is not transmitted to other controllers.

 TOPLIS User Manual	USER INTERFACE AIRCRAFT LISTS	3.6 P128
---	---	------------------------

3.6.10 Unsupported Lists

EuroScope's default Sector Inbound, Sector Exit, Arrival, Startup, Taxi Out, Take-Off, ADC Sector, Taxi In, Flight Plan, and Conflict lists are not supported and should not be used.

 TOPLIS User Manual	USER INTERFACE WINDOWS	3.7 P129
---	--------------------------------------	------------------------

3.7 Windows

TopSky includes a number of windows that are discussed in this chapter. All windows have the following common features:

- Dragging the title bar using the left mouse button will move the window
- Dragging the box in the bottom right corner with the left mouse button will resize the window
- Left-clicking the top right corner will close the window
- Left-clicking the title bar will position the window on the top of other windows
- Right-clicking the title bar will position the window below other windows

While resizing the windows always starts from the bottom right corner, it is also possible to resize the window to the direction of the top and/or left edges. To do this, continue dragging the bottom right corner until the cursor goes past the top or left edge. As all windows have a defined minimum size, nothing will seem to happen once you reach the minimum size until the cursor crosses the opposite edge, but then the resize operation will continue normally.

Some windows contain scrollbars to select values or change the items that are displayed:

- Dragging a scroll bar slider using the left mouse button will move the slider
- Left-clicking on the scrollbar background area outside the slider will move the slider by a predefined amount (in list windows, the view will be scrolled by the number of visible items)
- Right-clicking on the scrollbar background area outside the slider will position the slider to the clicked position
- Left-clicking on the arrow at the end of the slider will scroll the list by one line
- The mouse wheel can be used to scroll some scrollbars (most of the ones that have defined steps for scrolling, i.e. those with the arrows at the ends)

Other window-specific mouse function areas are explained below. All functions use the left mouse button unless otherwise specified. For each window, the way(s) to open it are listed below the chapter title.

 TOPLIS User Manual	USER INTERFACE WINDOWS	3.7 P130
---	--------------------------------------	------------------------

3.7.1 Radar Menu

<ALT> + Right-click anywhere on the radar screen background

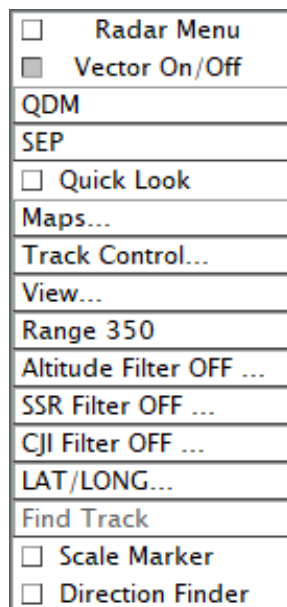


Figure 3.56: Radar Menu

Radar Menu	Locks/unlocks the menu display
Vector On/Off	Toggles all prediction lines on/off
QDM	Starts a new <i>QDM Vector</i>
SEP	Starts a new <i>Minimum Separation Tool</i>
Quick Look	Toggles function to bypass all filters and show all track labels
Maps...	Opens the <i>Maps Windows</i>
Track Control...	Opens the <i>Track Control Window</i>
View...	Opens the <i>View Window</i>
Range XXX	Opens the <i>Zoom Window</i> (XXX = distance: center -> right edge)
Altitude Filter X...	Opens the <i>Altitude Filtering Window</i> , displays the filter status
SSR Filter X...	Opens the <i>SSR Code Filtering Window</i> , displays the filter status

 TOPLIS User Manual	USER INTERFACE WINDOWS	3.7 P131
---	--------------------------------------	------------------------

CJI Filter X. . .	Opens the <i>CJI Filtering Window</i> , displays the filter status
LAT/LONG. . .	Opens the <i>Cursor Lat/Long Window</i>
Find Track	Opens the <i>SSR Code Menu</i> for the <i>Find Track</i> function
Scale Marker	Toggles the Scale Marker on/off

When unlocked, the Radar Menu closes when a selection is made or the cursor leaves the menu area.

3.7.2 QDM Vector

To draw a new QDM vector:

- Left-click on the “QDM” *Radar Menu* item, or;
- Left-click on the “QDM” *Callsign Menu* item, or;
- Use the keyboard shortcut key combination for a new QDM vector.

Then, left-click on the desired start point (radar track or fixed position), and then left-click on the desired end point (radar track or fixed position).

The start point is automatically set to the radar position symbol of the track when starting the vector from the callsign menu

The vector’s data label is located at the end of the line. Its position relative to the line end can be adjusted by middle-clicking the line end or the label itself. The available click spots for a radar track are the radar track position symbol and all its label items that have a TopSky plugin left-click mouse function.

The line end positions will attach to defined points more easily than for a random position (there is a small click area centered on the defined points). The defined points have the following priority order:

- Radar track position symbols
- VORs in the active sector file
- NDBs in the active sector file
- Fixes in the active sector file
- Airports in the active sector file

Right-clicking will abort drawing the vector.

To remove a QDM vector:

- Right-click on either end point or the midpoint of the line or the label

 TOPLIS User Manual	USER INTERFACE WINDOWS	3.7 P132
---	--------------------------------------	------------------------

To adjust a QDM vector:

- Left-click on either end point. The selected end of the line will attach to the mouse cursor.
- Left-click on the new desired end point (radar track or fixed position)

3.7.3 Multi-QDM vector

When the start point of a QDM vector is a fixed point and the end point a track, the system automatically starts another QDM vector from the same start point. If it is attached to another track, the vectors are grouped together as a multi-QDM, and another vector is again automatically started from the same start point. This happens until the right mouse button is clicked to abort drawing a new vector (or the maximum number of QDM vectors is reached).

The advantage of the multi-QDM vectors is that when hovering over a track label of one of the tracks, a relative distance indication is added to the labels of all other vectors belonging to the same multi-QDM group, showing in parentheses the difference in the distance value compared to the selected track.

3.7.4 Scale Marker

Radar Menu -> Scale Marker



Figure 3.57: Scale Marker

Displays a range scale in the bottom right corner of the radar screen.

3.7.5 Minimum Separation Tool

The minimum separation tool displays the predicted minimum lateral separation between two radar tracks within the next 30 minutes, assuming both of them maintain their present ground tracks and speeds. Lines are drawn from the tracks' present positions to the positions where the tracks are predicted to be at the time of the minimum separation.

To draw minimum separation lines between two radar tracks:

- Left-click on the "SEP" menu item
- Left-click on the first radar track
- Left-click on the second radar track

Right-clicking will abort drawing the lines. The available click spots for a radar track are the radar track position symbol and all its label items that have a mouse function.

The minimum separation distance is by default displayed near the end of one of those lines. If the tracks are not converging, the lines will be drawn with an offline-defined length, and the label will display "DIV".

 TOPLIS User Manual	<div style="text-align: center;"> USER INTERFACE </div> <div style="text-align: center;"> WINDOWS </div>	<div style="text-align: center;"> 3.7 </div> <div style="text-align: center;"> P133 </div>
---	---	---

7 sets of lines can be simultaneously drawn. When at least one set is drawn, a SEP List Window is opened:




Figure 3.58: SEP List

The window lists the tracks, the minimum predicted separation, the time to the minimum separation, the line color and a locked/unlocked indicator for each set of lines. To remove the minimum separation lines:

- Left-click on the colored box for that set of lines in the SEP List Window
- Right-click on a line's end point
- Close the SEP List Window (this removes all minimum separation lines)

The lines will be automatically removed if one of the tracks is no longer available, or for unlocked lines, if the tracks start to diverge. If the tracks are diverging at the time the lines are created, they will be automatically locked.

To lock/unlock a set of lines:

- Left-click on the box right of the color indicator for that set of lines to toggle the locked/unlocked status. For a locked set of lines, the box will be filled.

To display vertical separation information on the lines, right-click on the colored box. Right-clicking on the colored box for a set of lines cycles through:

"V"	Vertical separation display enabled
"v"	Vertical separation display enabled without the vertical separation labels
blank	Vertical separation display disabled

When vertical separation display is enabled, on both lines two points are displayed, the first showing the point where the tracks' vertical separation is calculated to become smaller than an offline-defined value, and the second the point after that where it is calculated to become greater. The calculation is done using the tracks' current vertical speeds.

- The vertical separation labels, when displayed, are similar to the minimum separation label but prefixed with "V".
- If one or both points are beyond the minimum separation point, their calculation is extended forward up to an offline-defined time value.

 TOPLIS User Manual	USER INTERFACE WINDOWS	3.7 P134
---	--------------------------------------	------------------------

- If a point is already passed or beyond the maximum displayed time, it will not be drawn.
- If the end point is beyond the maximum displayed time, a line will be drawn using **SEP Vert** color from the CPA to the end point or the maximum displayed time whichever is earlier.
- If the tracks are not predicted to be separated by less than the defined value within the prediction time, “V=” is displayed left of the minimum separation label.

3.7.6 View Window

Radar Menu -> View...

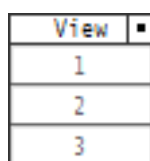


Figure 3.59: View Window

The View Window lists the available views. To select a view, left-click on it. The radar screen will be refreshed to show the required area. The first three views, labeled “1”, “2” and “3” are views that can be defined on the fly. To define a view for one of them, set the screen area as desired and then right-click on the number. The number will then change to **Foreground** color to indicate that it has a view defined for it. An already defined view (“1”, “2” or “3”) can be redefined to show a different screen area just by defining it again with a right-click.

3.7.7 Zoom Window

Radar Menu -> Range XXX

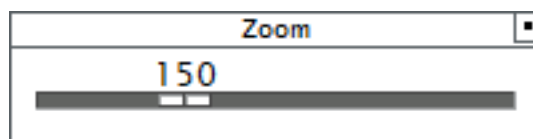


Figure 3.60: Zoom Window

The Zoom Window displays and enables to change the radar screen range.

3.7.8 Maps Windows

Radar Menu -> Maps...

 TOPLIS User Manual	USER INTERFACE WINDOWS	3.7 P135
---	--------------------------------------	------------------------

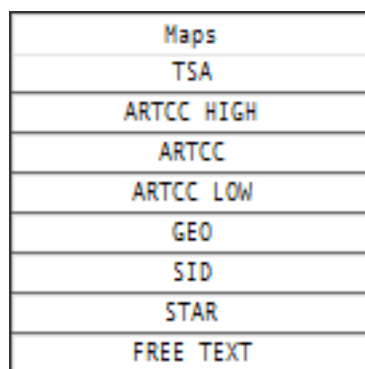


Figure 3.61: Maps Windows

The Maps Window closes when the mouse cursor leaves the window area. If this is not desired, there is a hidden click spot in the top right corner of the menu (where the “close” button would be). Left-clicking in that area will disable the automatic closure of the menu and display the close button, which is then used to close the menu.

The Maps Window enables the display of predefined maps on the radar screen, some of which may be set up with automatic activation rules. The maps are arranged to folders. Clicking on a folder name shows the maps in that folder below the folder list.

The map names are displayed with the following colors (automatic options only available for maps with that capability):

sid_35	Not displayed
ppor_gnss_35	Automatic (not displayed)
ppor_17_d	Displayed

Left-clicking on a map name will change the state of a map one step
not displayed → automatic (if applicable) → displayed

Right-clicking in the other direction. Left or right double-clicking on any map name will change the states of all maps in that folder.

3.7.9 Track Control Window

Radar Menu -> Track Control...

The Track Control Window is used to set track and track label related options. Note that the “Vector” selection must be on (see Radar Menu/Shortcut Window) to see the prediction lines. The Track Control Window closes when the mouse cursor leaves the window area. The selections are specific to the radar screen they are made on, but whenever the plugin settings are reloaded either automatically (sign in/out, login callsign change when signed in) or manually the selections on all radar screens will revert to the default values.

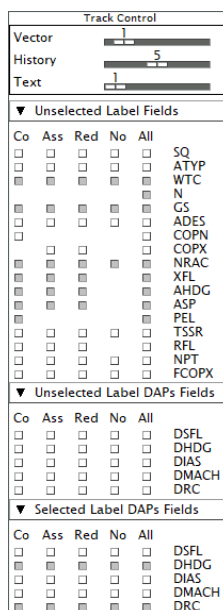


Figure 3.62: Track Control Window

Vector	Sets the length of the prediction line in minutes
History	Sets the number of history dots
Text	Changes the track label text size
X Label Fields	Opens/closes the corresponding Label Fields section

The Label Fields sections allow controlling the visibility of certain track label fields in the unselected label, and for DAP items, also in the selected label. The visibility can be set depending on the state of the fight plan (*Coordinated, Assumed, Redundant or Notified/Unconcerned*).

The “All” buttons toggle all the state buttons for that field on/off.

Regardless of the settings here, the necessary label fields will be displayed in certain cases (for example in case of a COPX coordination request, the COPX field will be displayed).

3.7.10 Altitude Filtering Window

Global Menu -> “Mxxx-yyy” item

Radar Menu -> Altitude Filter [ON/OFF]...

The Altitude Filtering Window is used to filter the displayed track labels based on the aircrafts’ altitudes. It closes when the mouse cursor leaves the window area.

 TOPLIS User Manual	<div style="text-align: center;"> USER INTERFACE </div> <div style="text-align: center;"> WINDOWS </div>	<div style="text-align: center;"> 3.7 </div> <div style="text-align: center;"> P137 </div>
---	---	---



Figure 3.63: Altitude Filtering Window

To set the filtering limits, values from -1200ft to FL660 are available with 100ft steps up to 5000ft, then with 500ft steps up to FL660. Select the level and click on the filter on/off button to activate the limit. There are separate on/off buttons for the upper and lower limits, and it is possible to activate either one or both of them. Values at or below the transition altitude are considered to be altitudes (for example with a transition altitude of 5000ft, “050” means 5000ft and “055” means FL55).

3.7.11 CJI Filtering Window

Radar Menu -> CJI Filter [ON/OFF]...



Figure 3.64: CJI Filtering Window

The CJI Filtering Window is used to filter the displayed track labels based on controller ID's. The window shows the currently online controllers. To filter a controller's tracks, click on the controller ID in the list. A filtered ID will be shown in inverse video.

The “Uncoup labels” button controls filtering for uncoupled labels (this function is available also in *Shortcut Window*).

Clicking “All” filters all controllers, “None” clears all controller ID filters.

 TOPLIS User Manual	<div style="text-align: center;"> USER INTERFACE </div> <div style="text-align: center;"> WINDOWS </div>	<div style="text-align: center;"> 3.7 </div> <div style="text-align: center;"> P138 </div>
---	--	--

The CJI Filtering Window closes when the mouse cursor leaves the window area.

3.7.11.1 Primary Track Filtering

Shortcut Window -> “Prim Tracks” button

When enabled, primary track filtering filters out all primary tracks.

3.7.11.2 Uncontrolled Flight Filtering

Shortcut Window -> “Uncont Flights” button

When enabled, uncontrolled flight filtering filters out all uncontrolled flights not “On-contact” with you.

3.7.12 SSR Code Filtering Window

Radar Menu -> SSR Filter [ON/OFF]...

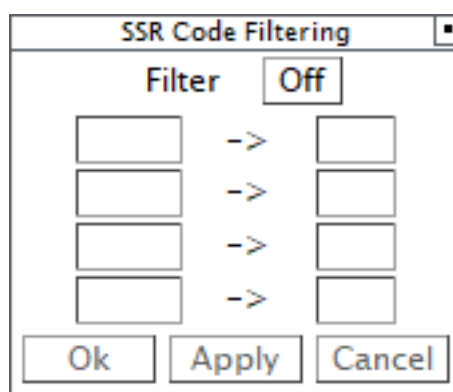


Figure 3.65: SSR Code Filtering Window

The SSR Code Filtering Window is used to filter the displayed track labels based on the aircrafts' SSR codes. Four different codes or code ranges can be set. The boxes on the left side of the window are the code range start boxes. The input syntax is a valid SSR code to be filtered. If filtering a range of codes is needed, enter the last two digits of the last code in the range to the box on the right. Entering an empty string will clear the box. For example, to filter codes 1400-1427, enter “1400” into one of the four boxes on the left and then “27” into the box next to it. Set the filter on by clicking on the filter on/off button.

All changes to the window must be applied using the buttons in the bottom of the window to take effect.

Ok	Applies the changes, closes the window
Apply	Applies the changes
Cancel	Cancels any changes, closes the window

 TOPLIS User Manual	USER INTERFACE WINDOWS	3.7 P139
---	--------------------------------------	------------------------

3.7.13 Quick Look

Radar Menu - > “Quick Look” button
Shortcut Window -> “Quick Look” button
Keyboard Shortcuts

The Quick Look function can be used to override all filters. It is a toggle function and will stay active until toggled off.

3.7.13.1 Individual Quick Look

Middle-click aircraft position symbol

The Individual Quick Look function can be used to override the CJI filter for a specific track and to display labels for uncoupled primary tracks which are normally automatically hidden. It is a toggle function, middle-clicking again will hide the labels again.

3.7.14 Level Band Highlight

Right click AFL or XFL track label item

While active, this function highlights the callsigns of the referenced flight and the callsigns of all other flights within the level band of the referenced flight. The prediction line is forced on for these flights.

All other flights will be filtered out to display just their track position symbols and history dots unless they have an active STCA, APW, MSAW or AIW warning or are squawking 7500, 7600 or 7700. Tracks without a valid AFL will be filtered out.

3.7.15 Oceanic Level highlight

Right click OFL track label item

While active, this function highlights the callsigns of the referenced flight and the callsigns of all other flights having the same OAN and OFL. The prediction line is forced on for these flights.

All other flights will be filtered out to display just their track position symbols and history dots unless they have an active STCA, APW, MSAW or AIW warning or are squawking 7500, 7600 or 7700.

3.7.16 Clock Window

Global Menu -> Time item




Figure 3.66: Clock Window

The Clock Window displays the current UTC time in HHMM format.

 TOPLIS User Manual	<div> <div>USER INTERFACE</div> <div>WINDOWS</div> </div>	<div> <div>3.7</div> <div>P140</div> </div>
---	---	---

3.7.17 Brightness Control Window

Global Menu Setup -> Brightness Control...

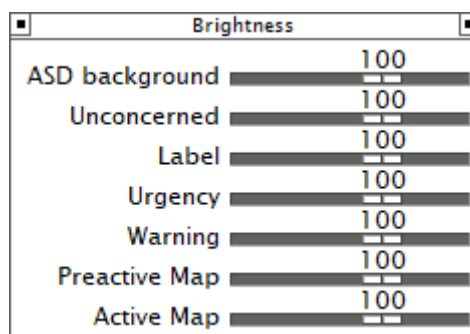


Figure 3.67: Brightness Control Window

The Brightness Control Window allows setting the brightness for some screen colors. The “Label” slider controls Concerned, Coordination, Proposition, Assumed and Redundant colors.

3.7.18 CPDLC Setting Window

Global Menu Setup -> CPDLC Setting...

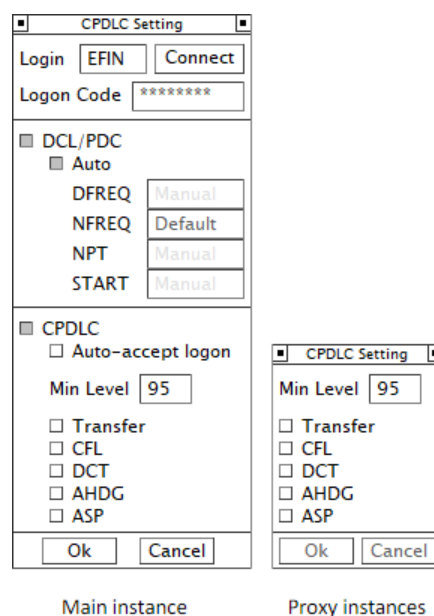


Figure 3.68: CPDLC Setting Window

The CPDLC Setting Window is used to begin/end the connection to the CPDLC network, and change some CPDLC related settings. It is split into three sections:

 TOPLIS User Manual	USER INTERFACE WINDOWS	3.7 P141
---	--------------------------------------	------------------------

Connection setup

Login	Four-character callsign used for the CPDLC connection
“Connect”/“Online”	Left-click to Connect/disconnect the plugin to/from the CPDLC network
Logon	Code Your personal password to the Hoppie network

Once a connection has been established, the “Connect” button background color changes to **Information** and the button text changes to “Online”.

Note	It is possible to have the Logon Code pre-filled by creating a text file named <code>TopSkyCPDLChoppieCode.txt</code> in the same folder as the plugin dll (<code>TopSky.dll</code>). The file should contain only the logon code, nothing else. As the file contains your personal logon code, do not share it.
-------------	--

If the VATSIM callsign is known when the window is opened, the CPDLC login callsign is pre-selected based on it. If necessary, the CPDLC login can be changed.

DCL/PDC setup

DCL/PDC	Datalink clearance service on/off
Auto	Automatic sending of datalink clearances on/off

Note	The DFREQ, NFREQ, NPT and START options have no effect, as they are not used in the CLD message.
-------------	--

When the “Auto” option is enabled, a datalink clearance will be automatically sent when a request is received if all the following conditions are met:

- The received clearance request must not contain any remarks text;
- A suitable clearance format is available for the aircraft;
- The aircraft is not assumed by another controller;
- The aircraft has a departure runway assigned;
- The aircraft has a cleared altitude manually assigned;
- The aircraft has a transponder code assigned.

 TOPLIS User Manual	USER INTERFACE WINDOWS	3.7 P142
---	--------------------------------------	------------------------

CPDLC setup

CPDLC	CPDLC service on/off
Auto-accept logon	Automatically accepts valid logon requests from tracks above FL100

The following items are the only ones visible also in proxy EuroScope instances, and are used to determine whether sending a clearance via CPDLC is the default setting in some of the plugin menus. For this to happen:

- The aircraft must be above FL100;
- The selection button for the menu in question must be on;
- The CPDLC Default Status (in *Global Menu->STS menu*) must be “ON”.

When making changes to any items other than the connection setup part and the “DCL/PDC” and “CPDLC” selections, the “Ok” and “Cancel” buttons become active. Left-click on “Ok” to apply the changes or “Cancel” to abort.

3.7.19 Raw Video Control Window

Global Menu Setup -> Raw Video Control...

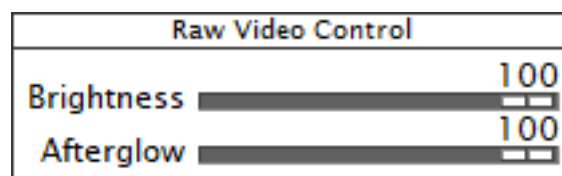


Figure 3.69: Raw Video Control Window

The Raw Video Control Window closes when the mouse cursor leaves the window area.

The Raw Video Control Window controls the brightness (in general) and afterglow (how fast the radar returns fade) of the raw video radar data.

3.7.20 Airspace Management Window

Global Menu AMS -> TSA...

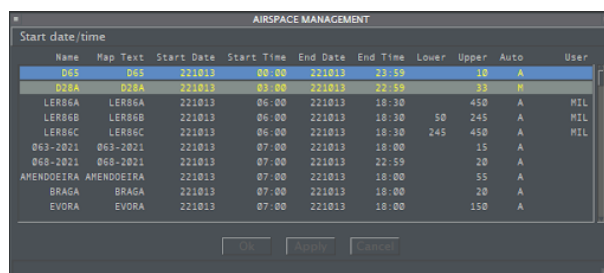


Figure 3.70: Airspace Management Window

This window is used to control the activation of the areas for the APW and SAP functionality. Each area can have start/end times and/or an end time defined for its activation, or it can be activated without any time limits, making it active until deactivated manually. The areas can also have lower and/or upper altitude limits. An area can have activation rules defined in the area data file. Such areas will be automatically activated based on schedule data, NOTAM or AUP contents as long as their “Auto” option is selected (“A” in the “Auto” column). The “Auto” option cannot be selected for areas with no activation rules.

An area’s activation status can be inactive, pre-active or active. A pre-active area is an area that will become active within 30 minutes and is shown in **Selected Period** text on a **TSA Preactive** background. An active area is shown with **Selected Period** text on a **TSA Active** background. The APW system will not alert for a pre-active area, but the SAP system will.

When the cursor is over the window area, the bottom message area displays automatic map activation options depending on the setup. Each one is colored **Arm** if selected off, **Warning** if on but no data available, and **Foreground** if on and data available. When the remote option is active, changes to area parameters are not allowed. AUP and NOTAM activation can be selected on/off but the data may be overridden depending on how the remote data source has been set up

The mouse click areas of the Airspace Management Window:

Sorting option text (e.g. “Start date/time”)	Opens a pop-up menu to select a sorting option for the list
Other fields	Left-click to edit field (when edit function active), right-click to open an area pop-up menu
“Ok” button	Applies the changes, closes the window
“Apply” button	Applies the changes
“Cancel” button	Cancels the changes
“AUP” label	Toggles area activation based on AUP data
“NOTAM” label	Toggles area activation based on NOTAM data
“Remote” label	Toggles area activation based on a remote source

 TOPLIS User Manual	USER INTERFACE WINDOWS	3.7 P144
---	--------------------------------------	------------------------

“Master” label Toggles saving/uploading area activation data

The sorting pop-up menu contains the following items:

Start Date/Time	Sorts based on the Start Date/Time, earliest first
Name	Sorts alphabetically based on the Name field
Map Text	Sorts alphabetically based on the Map Text field

The area pop-up menu contains the following items:

Activate	Clears any activation times and activates the area
Deactivate	Clears any activation times and deactivates the area
Auto	If an activation schedule is found in the area data file, sets the area to be activated automatically
Edit	Allows to change the area parameters
Full Edit	Not implemented
Copy	Not implemented
Delete	Clears any activation times, returns label and altitude limits to their default values and deactivates the area

With the area pop-up menu opened, the area text row background changes to “Flight Highlight” color.

With the “Edit” function activated, the following mouse click areas are available for the edited area:

Map Text	Set/change/delete the area label text
Start Date	Set/change/delete the start date
Start Time	Set/change/delete the start time
End Date	Set/change/delete the end date
End Time	Set/change/delete the end time
Lower	Set/change/delete the lower altitude limit
Upper	Set/change/delete the upper altitude limit
User	Set/change/delete a user defined text

Dates are shown in the format “yymmdd” and times in “hh:mm” and they must be entered in the same format. Entering an empty string for a date will clear it and the related time value and vice versa. When entering a time or date value to an empty field, the other value is automatically set to

 TOPLIS User Manual	USER INTERFACE WINDOWS	3.7 P145
---	--------------------------------------	------------------------

the current time/date value. Entering an empty string to the Map Text, Lower or Upper fields will reset the value to the default one from the data file.

Altitudes are shown in hundreds of feet if at or below the transition altitude, otherwise in flight levels.

After any selection from the pop-up menu other than “Edit”, “Ok”, “Apply” or “Cancel” must be selected to apply or cancel the selection.

3.7.20.1 Area display

Preactive and active areas are displayed on the radar screen. A preactive area border is drawn in **Preactive Map**. An active area border is drawn in **Active Map Type 4** border and, for areas with high operational impact, filled in a transparent **Active RD Infill Map**.

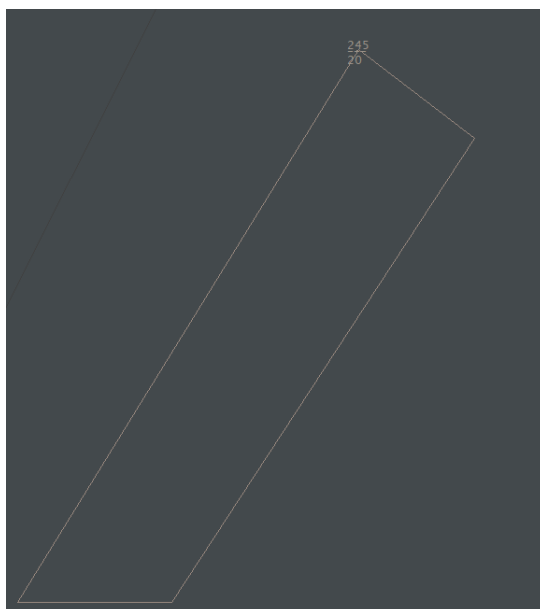


Figure 3.71: Preactive Area

 TOPLIS User Manual	USER INTERFACE WINDOWS	3.7 P146
---	----------------------------------	--------------------

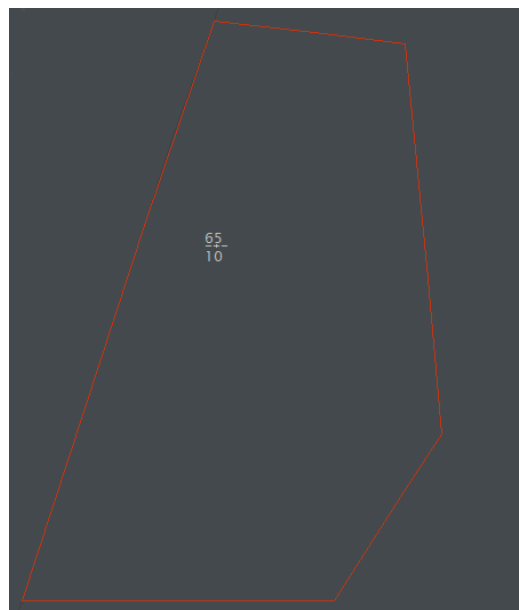


Figure 3.72: Active Area

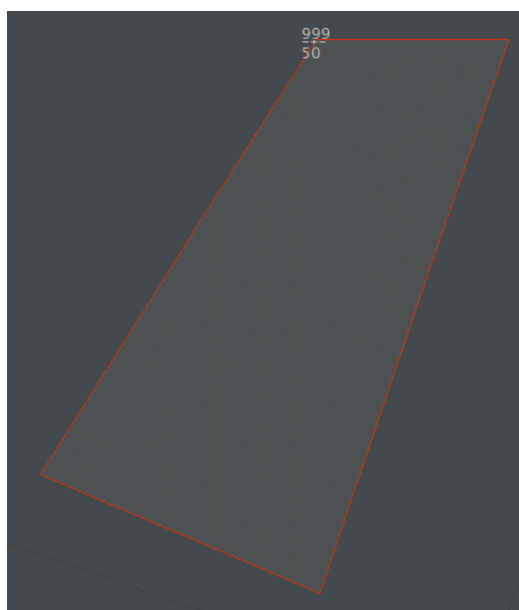


Figure 3.73: Active High Operational Impact Area

3.7.20.2 Area label

An area may display a predefined reduced text label, showing information about the area. By holding the left mouse button down on MAPTEXT or UPPER/LOWER, a full area label will be displayed, showing:

NAME
MAPTEXT
UPPER USERTXT

 TOPLIS User Manual	<div style="text-align: center;"> USER INTERFACE </div> <div style="text-align: center;"> WINDOWS </div>	<div style="text-align: center;"> 3.7 </div> <div style="text-align: center;"> P147 </div>
---	---	---

—— START TIME - END TIME
LOWER

The reduced label can be configured to display any combination of these fields. In the reduced label, a lower limit of “000” will not be displayed.

If an area has more than one activation period defined, is currently active, and the next activation period is pre-active, the levels, times and user text for the next activation period are shown below the current activation period in the label.

3.7.21 NAT List Window

Global Menu AMS -> NAT -> NAT List. . .

NAT List									
West	THI 259	Validity 16	from 1130	to 1900					
East	THI 259	Validity 16	from 0100	to 0800					
A	PIKIL	57/20	58/30	58/40	57/50	HOIST			
B	RESNO	56/20	57/30	57/40	56/50	JANJO			
C	VENER	5530/20	5630/30	5630/40	5530/50	KODIK			
D	DOGAL	55/20	56/30	56/40	55/50	LOMSI			
E	NEBIN	5430/20	5530/30	5530/40	5430/50	MELDI			
F	MALOT	54/20	55/30	55/40	54/50	NEEKO			
G	LIMRI	53/20	54/30	54/40	53/50	RIKAL			
R	JOOPI	49/50	51/40	53/30	55/20	RESNO	NETKI		
S	NICSO	48/50	50/40	52/30	54/20	DOGAL	BEXET		
T	PORTI	47/50	49/40	51/30	53/20	MALOT	GISTI		
U	RELIC	4630/50	4830/40	5030/30	5230/20	TOBOR	RILED		
V	SUPRY	46/50	48/40	50/30	52/20	LIMRI	XETBO		
W	RAFIN	45/50	47/40	49/30	51/20	DINIM	ELSOX		
X	JAROM	44/50	46/40	48/30	50/20	SOMAX	ATSUR		
Y	DOVEY	42/60	43/50	45/40	47/30	BEDRA	NASBA		
Z	MUNEY	41/60	42/50	44/40	46/30	48/20	OMOKO	GUNSO	

Figure 3.74: Flight Plan Selection Window

The NAT List Window displays information from the downloaded NAT track messages

3.7.22 Flight Plan Selection Window

Global Menu FlightData/FData -> Flight Plan Selection...

Flight Plan Selection

Callsign

RPL
N

ASSR

ADEP

Ok
Cancel

Figure 3.75: Flight Plan Selection Window

The Flight Plan Selection window is used to search for flight plans based on any combination of callsign, assigned transponder code and departure airport. All flight plans that are a match with all

 TOPLIS User Manual	<div style="text-align: center;"> USER INTERFACE </div> <div style="text-align: center;"> WINDOWS </div>	<div style="text-align: center;"> 3.7 </div> <div style="text-align: center;"> P148 </div>
---	--	--

given information will be listed in the *Flight Plan Window*. and can be viewed using its “Prev” and “Next” buttons.

Clicking “Ok” will do the search and open the Flight Plan Window if it was closed, “Cancel” will clear the fields as well as any previously created flight plan list for the Flight Plan Window.

3.7.23 Flight Plan Window

Global Menu FData -> Flight Plan Window. . .

Flight Plan Selection Window -> Create a list of one or more flight plans

Callsign Menu -> FPL. . .

“Open FPL Window” label function

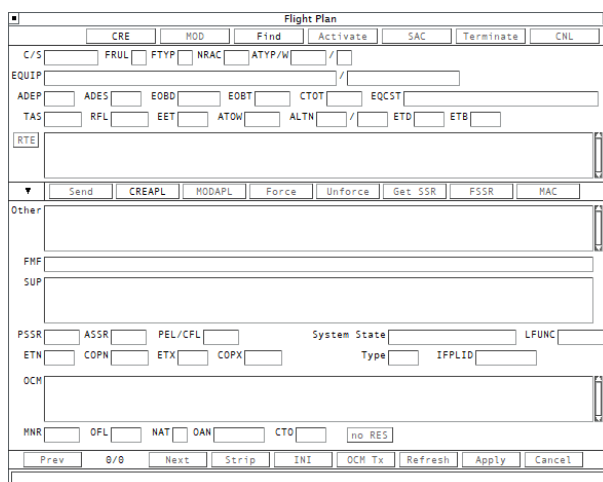


Figure 3.76: Flight Plan Window

The Flight Plan Window displays flight plan data as well as some system data related to the flight plan. It also allows creating new flight plans and modifying existing ones. The data in the window is not refreshed automatically; the time when the data was fetched is displayed in the top left corner.

The data fields show the following information:

C/S	Callsign of the aircraft
FRUL	Flight rules (I, V, Y or Z)
FTYP	Flight type (not available)
NRAC	Number of aircraft
ATYP/W	Aircraft type and wake turbulence category
EQUIP	Equipment list - For flight plans with FAA equipment codes, a rough conversion to ICAO is shown in parentheses

 TOPLIS User Manual	USER INTERFACE WINDOWS	3.7 P149
---	--------------------------------------	------------------------

ADEP	Departure aerodrome
ADES	Destination aerodrome
EOBD	Estimated Off-Block Date
EOBT	Estimated Off-Block Time
CTOT	Calculated Take-Off Time
EQCST	EQCST Displays aircraft equipment status for certain equipment (W, Y, U, R, P and S) - “EQ” equipped, “NO” not equipped, “UN” unknown.
TAS	True Air Speed
RFL	Requested Flight Level
EET	Estimated Elapsed Time
ATOW	Actual Take-Off Weight (not available)
ALTN	Alternate aerodrome(s)
ETD	Estimated Time of Departure
ETB	Estimated time to Boundary (of your sector)
RTE	Route

With the window in extended mode, the following additional information is shown:

Other	Flight plan remarks field
FMF	Flight Message field
SUP	Supplementary information (endurance, PIC name)

The following system information regarding the flight plan is shown unless the initial plan is displayed:

PSSR	Previous SSR code
ASSR	Assigned SSR code
PEL/CFL	Planned Entry Level or Cleared Flight Level, depending on the flight's state
System State	System state of flight plan
LFUNC	Controller who is currently tracking the aircraft
ETN	Estimated time to COPN
COPN	Entry coordination point

 TOPLIS User Manual	USER INTERFACE WINDOWS	3.7 P150
---	--------------------------------------	------------------------

ETX	Estimated time to COPX
COPX	Exit coordination point
Type	Type of flight plan (APL or FPL)
IFPLID	Eurocontrol unique FPL_ID for the flight plan (not available)
0/0	Number of the displayed FPL in the list / total number of flight plans in the list

For oceanic setups, the following information from the latest received OCM is also available:

OCM	Oceanic Clearance Message
MNR	Oceanic cruising speed
OFL	Oceanic cruising Flight Level
NAT	North Atlantic Track name (or “#” for random route)
OAN	Oceanic Control Area entry point
CTO	Clearance time on OAN
“RES”/“no RES”	Time restriction indicator in OCM

The following buttons are available:

CRE	Create a new full flight plan (FPL) Editable fields will be highlighted If a flight plan is being displayed, all data fields keep their values so a new flight plan can be created using an existing one as a base. If not, default values will be set to FRUL, NRAC, EQUIP and Other fields “Apply” creates the FPL, “Cancel” aborts the operation
MOD	Modify the currently displayed FPL Available fields will be highlighted “Apply” modifies the FPL, “Cancel” aborts the operation
Find	Find a flight plan Enter Callsign to find the flight plan, “Cancel” aborts the operation
Activate	Not implemented
SAC	Enter a slot time

 TOPLIS User Manual	USER INTERFACE WINDOWS	3.7 P151
---	--------------------------------------	------------------------

Enter the time to the ETD field, “Cancel” aborts the operation

Terminate	Not implemented
CNL	Not implemented
RTE	Opens the <i>Complete Route Window</i>
Up/down triangle	Toggle FPL Window extended mode on/off
Send	Not implemented
CREAPL	Create a new abbreviated flight plan (APL) Editable fields will be highlighted
MODAPL	Modify the currently displayed APL Editable fields will be highlighted “Apply” modifies the APL, “Cancel” aborts the operation
Force	Force this aircraft to be included in the MTCD and SAP processing regardless of its sector state or any inhibition settings in the <i>MTCD Status Window</i> “Apply” creates the APL, “Cancel” aborts the operation
Unforce	Cancel the forced inclusion of this aircraft in the MTCD and SAP processing
Get SSR	Assigns a new SSR code for the flight
FSSR	Not implemented
MAC	Not implemented
Prev	Selects the previous flight plan in the list (see Flight Plan Selection Window)
Next	Selects the next flight plan in the list (see Flight Plan Selection Window)
Strip	Not implemented
INI	View the initial flight plan <i>Complete Route Window</i> is closed if it was opened Flight plan refresh time and system information will not be shown “CRE” starts to create a new flight plan based on the displayed initial flight plan, “Refresh” or “Cancel” shows the current flight plan again
OCM Tx	Not implemented

 TOPLIS User Manual	USER INTERFACE WINDOWS	3.7 P152
---	--------------------------------------	------------------------


Refresh	Refreshes the displayed information
Apply	Apply changes that were made
	Any errors will be displayed in the bottom row of the window
Cancel	Cancel any changes and quit the current operation

In TopSky the only difference between an APL and an FPL is that an APL can only contain the Callsign. If it contains any other information (controller-assigned values such as ASSR, CFL, etc. are not taken into account), it will be considered to be an FPL.

For the accepted CFL entry formats, see *AFL Menu*.

3.7.24 Complete Route Window

Flight Plan Window -> “RTE” button

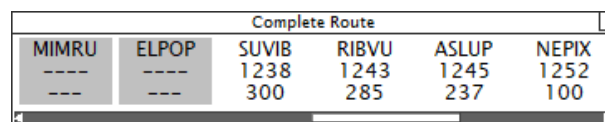


MIMRU	ELPOP	SUVIB	RIBVU	ASLUP	NEPIX
---	---	1238	1243	1245	1252
---	---	300	285	237	100

Figure 3.77: Complete Route Window

Displays the expanded route of the FPL currently shown in the *Flight Plan Window*. Already passed points are shown with **Overflown** color background. Points still ahead show the estimated time over the point and the calculated flight level below the point name.

3.7.25 Create APL Window

Callsign Menu (uncorrelated track only) -> “Create APL” item

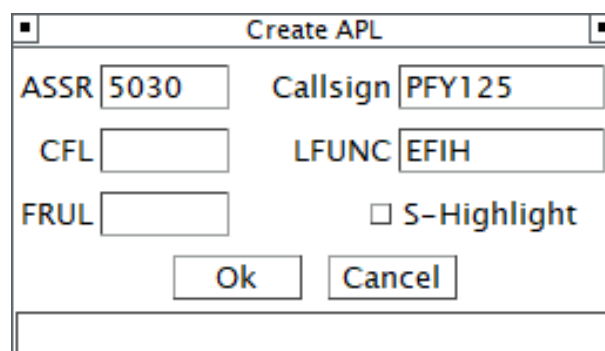

ASSR	5030	Callsign	PFY125
CFL		LFUNC	EFIH
FRUL		<input type="checkbox"/> S-Highlight	
Ok		Cancel	

Figure 3.78: Create APL Window

 TOPLIS User Manual	<div style="text-align: center;">USER INTERFACE</div> <div style="text-align: center;">WINDOWS</div>	<div style="text-align: center;">3.7</div> <div style="text-align: center;">P153</div>
---	--	--

The bottom area of the window will show status and error messages.

Enter all the available information (the only required field is the callsign) and click “Ok” to create the APL. “Cancel” will clear all the fields.

If the SSR field is left empty, a code will be automatically assigned from a dedicated APL code range. If no codes are available, an error message will be shown and a code must be manually entered.

For the accepted CFL entry formats, see *AFL Menu*.

Left-clicking on the FRUL field toggles the flight rules between “I” (IFR) and “V” (VFR). When the APL is successfully created, it is automatically assumed.

3.7.26 Stack Manager Window

Holding List... -> “HPT” item

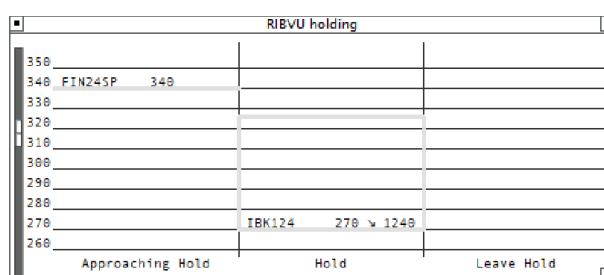


Figure 3.79: Stack Manager Window

The Stack Manager Windows gives a quick look into the vertical positions of aircraft that have been given a holding clearance to the holding fix associated with the window in question.

The window is split into three columns:

Approaching Hold:	Aircraft approaching the holding area (more than 5 minutes flying time away from the holding fix)
Hold:	Aircraft in the holding area
Leave Hold:	Aircraft cleared to leave the holding

The window displays the aircraft at their cleared flight levels. For each aircraft the label contains:

- Callsign;
- CFL;
- Attitude indicator (“#” in **Warning** color for aircraft without altitude information);

 TOPLIS User Manual	USER INTERFACE WINDOWS	3.7 P154
---	--------------------------------------	------------------------

- EAT.

If there are more than one aircraft with the same *CFL*, only one callsign will be shown. A “+” symbol in **SMW Overlap Box** color after the *CFL* value indicates that there are more flights to be displayed. Clicking on the symbol will display a window with all the callsigns with that *CFL*.

For each aircraft an altitude box will be drawn that extends from *AFL* to *CFL*. Normally the color of the box is **SMW Level Band**, but in the Hold and Leave Hold columns if it is closer than 300ft or overlaps any other aircraft’s box, the color will be **SMW Overlap**. For an aircraft with a CLAM alert, the box will be in **SMW Overshoot** color. A flight level reserved for an overflight is shown in **SMW Overflight** color. The altitude box of aircraft in the Leave Hold column extends into the Hold column as well.

Warning	If two Hold volumes overlap (such as PILIM and ABUSU), each Stack Manager Window will show only it's own traffic, the adjacent interfering traffic will not be displayed
----------------	--

Aircraft will be automatically removed from the Leave Hold column after 10 minutes, but they can also be manually removed by right-clicking the callsign.

Any number of Stack Manager Windows can be opened to monitor multiple holdings at the same time. For *CFL* at or below the transition altitude, the aircraft label is placed on the numerical value of the *CFL*, but the altitude box is always based on flight levels.

The mouse click areas of the Stack Manager Window:

Slider or view background area	Drag to adjust the lowest shown FL
Aircraft callsigns	Open <i>Callsign Menu</i> ¹
CFL	Open <i>CFL Menu</i> ²
EATs	Open <i>Time Menu</i>
+ symbol	Open window to view all callsigns with that <i>CFL</i>
FL numbers	Toggle overflight status for that level

¹Right-clicking a callsign in the Leave Hold column immediately removes the aircraft from display.

²When opened from a Stack Manager Window, the default value in the CFL menu is the current CFL regardless of the setting in the *Local Settings submenu*.

 TOPLIS User Manual	USER INTERFACE WINDOWS	3.7 P155
---	--------------------------------------	------------------------

3.7.27 CARD

Global Menu Tools -> CARD..

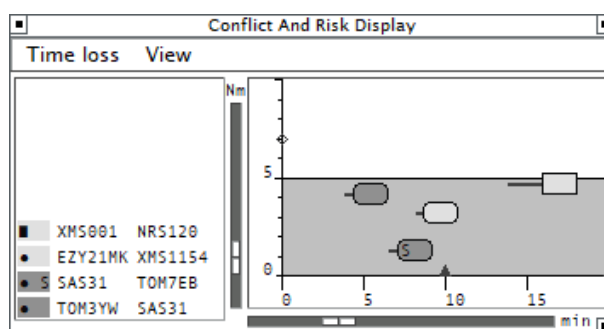


Figure 3.80: CARD

See *MTCD (Medium Term Conflict Detection)*. The CARD window presents the MTCD conflicts and conflict risks. It also allows setting some of the related parameters. It is divided into two parts:

On the left is the list area which includes all the detected conflicts and shows the concerned aircrafts' callsigns. The conflict label background is in **Urgency** color for a conflict or potential predicted conflict, **Warning** for a risk or potential risk of conflict and **Conflict Ack** for an acknowledged conflict. An acknowledged conflict will be automatically de-acknowledged if the predicted minimum separation decreases by 1nm.

On the right is the graphical display area that gives an overview to the severity and timeframe for each conflict. On the vertical (distance) axis the conflicts are placed to the predicted minimum separation and on the horizontal (time) axis the label is placed so that the left edge of the conflict number is at the time of closest point of approach. A line in **CARD Time Vector** color, extending to the left from the label, marks the time when the separation will decrease below the prediction distance. For fast closure rates the time from prediction distance to CPA may be too short to display the line. The conflict labels have the same mouse functions as the ones in the list area. If the label position would be outside the maximum time displayed in the window, the label is positioned at the maximum displayed time. The area below 5nm distance is drawn in **CARD Min Sep** color.

The mouse click areas of the CARD window:

Sorting option	Opens a pop-up menu to select the sorting option Time loss (time to start of conflict) Time min dist (time to minimum separation) Min dist (minimum separation)
"View" menu label	Toggle the View menu.
Vertical slider	Drag to adjust the distance scale
Horizontal slider	Drag to adjust the time scale

 TOPLIS User Manual	USER INTERFACE WINDOWS	3.7 P156
---	--------------------------------------	------------------------

Diamond on vertical axis	Drag to adjust prediction distance
Diamond on horizontal axis	Drag to adjust prediction time
Triangle on horizontal axis	Drag to adjust warning time
Conflict labels	Left-click to open Mark/ACK menu Middle-click to display SEP (minimum separation lines) Right-click to remove SEP
Conflict callsigns	Middle-click to open Vertical Aid Window

From the “View” menu it is possible to toggle various MTCD related options:

List	Toggles display of the list area
Graphic	Toggles display of the graphical area
Risk	Toggles display of MTCD risks of conflict
Downstream Predicted	Toggles display of conflicts starting in next sector
Potential Predicted	Toggles display of MTCD potential predicted conflicts
Potential Risk	Toggles display of MTCD potential risks of conflict
PLC	Toggles display of PLC conflicts (starts later than the triangle displayed on the time axis)
MTCD Ind	Toggles the display of the <i>MTCD</i> Mark on the track label
Notif	Toggles whether tracks in the <i>Notified</i> state are considered for MTCD
Unco	Toggles whether <i>Unconcerned</i> tracks are considered for MTCD
Future	Toggles future conflicts (starting later than the currently visible time period)

From the “Mark/ACK” menu it is possible to toggle conflict-specific options:

Mark All	Toggles marking the <i>CALLSIGN</i> and <i>AFL</i> 's of the concerned tracks with CARD Mark All color
Mark Own	Toggles marking the Callsigns of the concerned tracks with CARD Mark Own color

 TOPLIS User Manual	USER INTERFACE WINDOWS	3.7 P157
---	--------------------------------------	------------------------

ACK Toggles acknowledgement status

Address Not implemented

3.7.28 SAP Window

Global Menu Tools -> SAP...




Figure 3.81: SAP Window

See *SAP (Segregated Area Probe)*. The SAP window lists the aircraft that have SAP risks or conflicts. The list shows the following information about each conflict:

C/S	Aircraft callsign
ASSR	Assigned SSR code
AREA	Name of the area
USER	User text of the area
TIME	Entry time into the area (current time if already inside)
CFL	Cleared Flight Level
ACK	Conflict acknowledgement status (military coordination indicator)

For active areas the area name is displayed in **TSA Active** color and for pre-active areas in **TSA Preactive**.

The mouse click areas of the SAP window:

“View” menu label	Toggle the View menu o Header Toggle display of list header row
“Font” menu label	not implemented
Sorting option	Opens a pop-up menu to select the sorting option: o Time (entry time) o Area (area name)
C/S	Left-click opens <i>Callsign Menu</i>
ASSR	Left-click opens <i>SSR Code Menu</i>

 TOPLIS User Manual	<div>USER INTERFACE</div> <div>WINDOWS</div>	<div>3.7</div> <div>P158</div>
---	--	--------------------------------

CFL	Left-click opens <i>CFL Menu</i> Right-click opens <i>Vertical Aid Window</i>
ACK	Left-click toggles military coordination indicator

3.7.29 Vertical Aid Window

Global Menu Tools -> Vertical Aid Window...

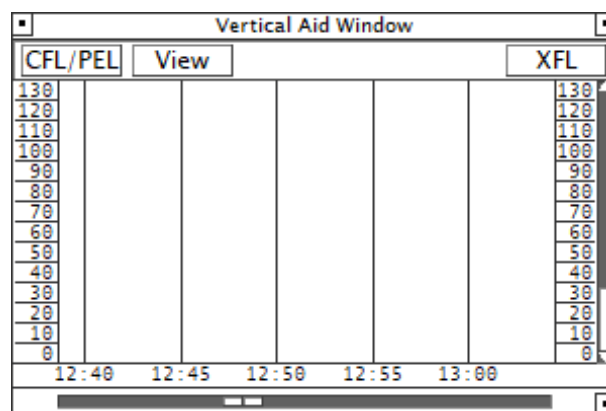


Figure 3.82: Vertical Aid Window

The Vertical Aid Window shows the predicted vertical trajectory of the selected aircraft in **VAW Profile** color, starting from its current position (marked with a dot in **VAW Track Position** color), and its MTCD and SAP conflicts. The background color of the path area is by default the **Inactive Sector** color, but for the time the aircraft is predicted to be inside your sector the color will be the **Active Sector** color with **VAW Sector Limits** color edges.

MTCD conflicts are displayed as boxes horizontally from the start to the end of the conflict and vertically from the lowest to the highest level of the conflicting track during that period. The callsign of the conflicting track is displayed in the top left corner of the box. The different types of conflicts are shown as follows:

Conflict	Filled box in Urgency color (Conflict Ack if acknowledged)
Risk	Filled box in Warning color (Conflict Ack if acknowledged)
Other	Unfilled box in Potential color (Conflict Ack if acknowledged)

SAP conflicts, if selected to be displayed, are displayed as unfilled boxes in **Warning** color, covering the area horizontally from the start to the end of the conflict and vertically from the bottom to the top of the area. The area name is shown at the top left corner of the box.

 TOPLIS User Manual	USER INTERFACE WINDOWS	3.7 P159
---	--------------------------------------	------------------------

The mouse click areas of the Vertical Aid Window:

CFL/PEL	Opens the PEL or <i>CFL Menu</i> depending on sector state
View	Toggles the View menu
XFL	Opens the XFL menu

From the “View” menu it is possible to toggle various MTCD related options:

Risk	Toggles display of MTCD risks
Notif	Toggles whether <i>Notified</i> tracks are shown
Unco	Toggles whether <i>Unconcerned</i> tracks are shown
SAP	Toggles whether SAP conflicts are shown

For assumed flights, the CFL value is displayed as a **Warning** color horizontal line across the screen if different from XFL.

3.7.30 Message In Window

Global Menu Tools -> Message In...




Figure 3.83: Message In Window

The Message In Window shows received coordination messages, sorted by time, with the newest ones at the top of the list. For the ones requiring an answer, it is possible to send it either from this window, the aircraft track label or any aircraft list where the relevant items are displayed. The messages will be automatically removed from the list when the track becomes *Unconcerned*, or for some messages, also based on a specific event.

The available message types are:

- “From <SI> for <Callsign> COF”
 - Displayed when the track is being transferred to you
 - Removed when the transfer is complete or cancelled
- “From <SI> for <Callsign> ROF”
 - Displayed when the next controller has sent a *ROF* message
 - Left-clicking on the line manually removed
 - Removed when a transfer is started
- “From <SI> for <Callsign> HOP [HDG xxx] [DCT xxxxx] [SP xxx]”

 TOPLIS User Manual	USER INTERFACE WINDOWS	3.7 P160
---	--------------------------------------	------------------------

- Displayed when there is a *HOP* in progress
- Left-clicking on the line opens the *Combined Transfer Menu*
- Removed when the transfer is complete or cancelled
- “From <SI> for <Callsign> RTI [HDG xxx] [SP xxx] [ARC xx]”
 - Displayed when an *RTI/TIP* message has been received
- “From <SI> for <Callsign> TIP [HDG xxx] [SP xxx] [ARC xx]”
 - Displayed when a *RTI/TIP* message has been received
 - Removed when the track becomes *Assumed*
- “From <SI> for <Callsign> accept HOP/RTI/TIP”
 - Displayed when an Accept message has been received to HOP, RTI or TIP
 - Left-clicking on the line manually removes it
- “From <SI> for <Callsign> reject RTI/TIP [by timeout/by system]”
 - Displayed when a reject message has been received to RTI or TIP
 - Left-clicking on the line manually removes it
- “From <SI> for <Callsign> RAP/RRV [level] [DCT xxx]”
 - Displayed when an entry coordination has been received
 - Left-clicking on a value opens the EuroScope default menu to answer
 - Removed when the track becomes *Assumed*
- “From <SI> for <Callsign> CDN [level] [DCT xxx]”
 - Displayed when an exit coordination has been received
 - Left-clicking on a value opens the EuroScope default menu to answer an active coordination
- “From <SI> for <Callsign> COD <ASSR>”
 - Displayed when a previous controller assigns a new SSR code for a track
 - Left-clicking on the line manually removes it

3.7.31 Message Out Window

Global Menu Tools -> Message Out...




Figure 3.84: Message Out Window

 TOPLIS User Manual	USER INTERFACE WINDOWS	3.7 P161
---	--------------------------------------	------------------------

The Message Out Window shows the coordination messages you have sent, sorted by time, with the newest ones at the top of the list. The messages will be automatically removed when the track becomes Unconcerned. To manually remove a line, left-click on it.

The available message types are:

- “To <SI> for <Callsign> COF”
 - Displayed when you transfer a track
- “To <SI> for <Callsign> ROF”
 - Displayed when you have sent a *ROF* message
- “To <SI> for <Callsign> HOP [HDG xxx] [DCT xxxxx] [SP xxx]”
 - Displayed when you have sent a *HOP*
- “To <SI> for <Callsign> RTI [HDG xxx] [SP xxx] [ARC xx]”
 - Displayed when you have sent an *RTI/TIP* message
- “To <SI> for <Callsign> TIP [HDG xxx] [SP xxx] [ARC xx]”
 - Displayed when you have sent a *RTI/TIP* message
- “To <SI> for <Callsign> accept HOP/RTI/TIP”
 - Displayed when you have sent an Accept message to HOP, RTI or TIP
- “To <SI> for <Callsign> reject RTI/TIP [by timeout/by system]”
 - Displayed when you have sent a Reject message to RTI or TIP. “Rejected by timeout” will be sent automatically if the coordinatio is not answered within a specified time.
- “To <SI> for <Callsign> CDN [level] [DCT xxxxx]”
 - Displayed when you have sent an entry coordination
- “To <SI> for <Callsign> RAP/RRV [level] [DCT xxxxx]”
 - Displayed when you have sent an exit coordination
- “To <SI> for <Callsign> COD <ASSR>”
 - Displayed when you have assigned a new SSR code and there is a next controller online for the track

 TOPLIS User Manual	USER INTERFACE WINDOWS	3.7 P162
---	--------------------------------------	------------------------

3.7.32 Shortcut Window

Global Menu Tools -> Shortcut. . .

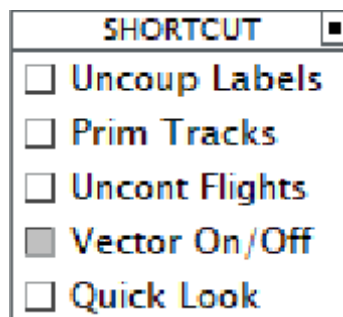


Figure 3.85: Shortcut Window

The Shortcut Window gives access to the following functions:

Uncoup Labels	Toggles uncoupled labels filtering on/off
Prim Tracks	Toggles <i>Primary Track Filtering</i> on/off
Uncont Flights	Toggles <i>Uncontrolled Flight Filtering</i> on/off
Vector On/Off	Toggles all prediction lines on/off
Quick Look	Toggles function to bypass all filters and show all track labels

For each of them, when the box is filled, the filter or function is active.

3.7.33 Microphone Check Menu

Global Menu Tools -> CPDLC -> Microphone Check

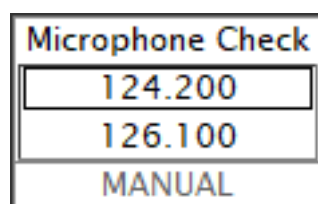



Figure 3.86: Microphone Check Menu

The Microphone Check menu is used to send a “CHECK STUCK MICROPHONE <frequency>” CPDLC message to all CPDLC connected aircraft when a stuck mic is suspected. The menu lists all frequencies selected for XMT TXT in EuroScope. Left-clicking on one sends the messages. Manual frequency entry is not available.

The menu closes when a frequency is selected or the cursor leaves the menu area.

3.7.34 CPDLC Current Message Window

Global Menu Tools -> CPDLC -> Current Messages...

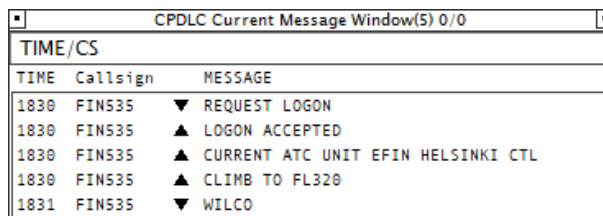

TIME/CS		
TIME	Callsign	MESSAGE
1830	FIN535	▼ REQUEST LOGON
1830	FIN535	▲ LOGON ACCEPTED
1830	FIN535	▲ CURRENT ATC UNIT EFIN HELSINKI CTL
1830	FIN535	▲ CLIMB TO FL320
1831	FIN535	▼ WILCO

Figure 3.87: CPDLC Current Message Window

The *CPDLC Current Message Window* displays all sent and received CPDLC messages that have not been archived. Each line corresponds to one message, and contains the time the message was sent/received, the callsign of the aircraft, a filled triangle (pointing upward for uplink messages, downward for downlink messages) and the message text. If the message is too long to fit in the window, “...” is used to mark that there is more text in the message. Right-clicking on the message will open a small window that displays the entire message. The window will close automatically when the mouse cursor leaves its area.

The messages (for uplink clearances, also the responses) are color coded to display their status:

- **Urgency** CPDLC emergency messages that have not been replied to
- **CPDLC Failed** Failed uplink messages
- **CPDLC Controller Late** Timed out downlink requests
- **CPDLC Pilot Late** Timed out uplink clearances
- **CPDLC DM Request** Downlink requests waiting for controller reply
- **CPDLC UM Clearance** Uplink clearances waiting for reply
- **CPDLC Unable** Uplink clearances replied to with “UNABLE”
- **CPDLC Standby** Uplink clearances replied to with “STANDBY”
- **CPDLC Discarded** Discarded messages
- **Foreground** Other messages

Left-clicking on the current sorting option opens a popup to select the sorting order:

TIME/CS	Messages sorted according to send/receive time (default option)
---------	---

 TOPLIS User Manual	USER INTERFACE WINDOWS	3.7 P164
---	--------------------------------------	------------------------

DIALOG/CS	Messages grouped to dialogues, dialogues sorted by time of first message
CS/DIALOG	Messages sorted by callsign, messages with same callsign sorted by time

Left-clicking on a message opens a popup to select some actions for the message:

Archive	Closes the message dialogue if open, archives all messages in that dialogue
Discard	Closes the message dialogue and discards all the messages in it

If the message is “REQUEST LOGON”:

ACCEPT	Accepts the logon request
UNABLE	Denies the logon request

For other messages:

Manual	Reply Opens <i>Manual Reply Window</i>
--------	--

Dialogues are archived automatically 60 seconds after they are closed. The manual “Archive” function may be used to archive them earlier if necessary, or if the automatic archiving fails for any reason.

Always reply to downlink requests using the relevant menu as it ensures correct formatting and type of message, and keeps the track label indications correct. The reply options here should only be used when a menu cannot be used, for example when the downlink was not parsed correctly and the request is therefore not shown on the track label.

3.7.35 Manual Reply Window

This window is used to send a manually composed reply to a CPDLC message (max 99 characters). Left-click on the area below the “Message text” label to enter the message and select one of the “Expected reply” options. Then left-click on “Send” to send the message.

The window closes automatically when the message is sent or the mouse cursor leaves the window area.

Warning	When replying to a downlink request using the Manual Reply Window, the track label is not updated accordingly. If the downlink had been recognized as a request, the request information is removed from the label, and if the reply is a clearance, it is not shown on the label, and the label values are not updated. Always use the label menus to answer a recognized downlink
----------------	---

 TOPLIS User Manual	<div style="text-align: center;"> USER INTERFACE </div> <div style="text-align: center;"> WINDOWS </div>	<div style="text-align: center;"> 3.7 </div> <div style="text-align: center;"> P165 </div>
---	--	--

3.7.36 CPDLC History Message Window

Global Menu Tools -> CPDLC -> History Messages...

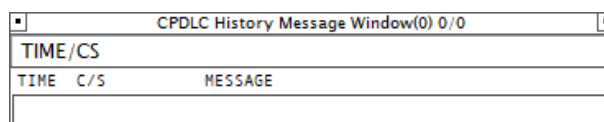


Figure 3.88: CPDLC History Message Window

The CPDLC History Message Window contains CPDLC messages that have been archived from the *CPDLC Current Message Window*.

3.7.37 Cursor Lat/Long Window

Radar Menu -> LAT/LONG...




Figure 3.89: Cursor Lat/Long Window

Displays the latitude and longitude values of the cursor position.

3.7.38 Find Track

Radar Menu -> Find Track

The Find Track function highlights for a specified time all labels matching the specified TSSR, ASSR or PSSR with Temp Track Highlight color.

3.7.39 Weather Messages Window

Global Menu MET -> Messages...

 TOPLIS User Manual	<h2 style="text-align: center;">USER INTERFACE</h2> <h3 style="text-align: center;">WINDOWS</h3>	<h2 style="text-align: center;">3.7</h2> <p style="text-align: center;">P166</p>
---	--	--

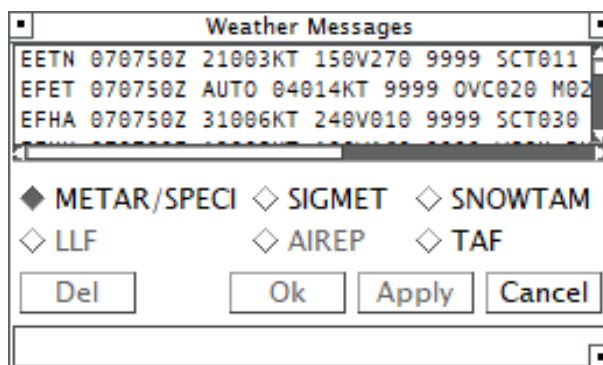


Figure 3.90: Weather Messages Window

The Weather Messages Window displays weather related messages. By default, METAR/SPECI messages are shown. To view other types of messages, left-click on the desired option button (the “SNOWTAM”, “LLF” and “AIREP” options are not available).

By default, with the “METAR/SPECI” option button chosen, this window displays the METARs you have requested to TopSky. Whenever a new METAR is received from the server it is added to the list (an old METAR is removed when a newer one is received from the same station). New METARs and TAFs are displayed in **Warning** color until the mouse cursor is positioned on them (for the decoded METAR, this applies only for the first row).

In addition, the window can display SIGMETs and TAFs. The SIGMETs are retrieved when the “SIGMET” button is selected for the first time. Selecting the “TAF” option will open the *Aerodrome Menu* where the desired stations must be selected. Messages are automatically updated at 15 minute intervals - the status bar at the bottom displays the remaining time to the next automatic update when the mouse cursor is over the window area.

The messages are sorted alphabetically by the station identifier in the list.

The messages can be viewed in three modes (decoded only available for METARs):

- List (the default mode, showing one message per line)
- Single (showing only a single message)
- Single decoded (showing a single METAR in a decoded format)

To view a single message:

- Left-click on a METAR/SIGMET/TAF in the list
- Left-click on a decoded METAR

To view a single METAR in the decoded format:

- Right-click on a METAR in the list

- Right-click on a single METAR

To return to the list view:

- Left-click on a single METAR/SIGMET/SNOWTAM/TAF
- Right-click on a decoded METAR

To remove a METAR/SIGMET/TAF from the window:

- Display the METAR/SIGMET/TAF in the single or decoded mode
- Left-click on the “Del” button
- Left-click “Yes” in the confirmation window that opens (“No” cancels the operation)

3.7.40 Upper Winds Window

Global Menu MET -> Upper Winds. . .

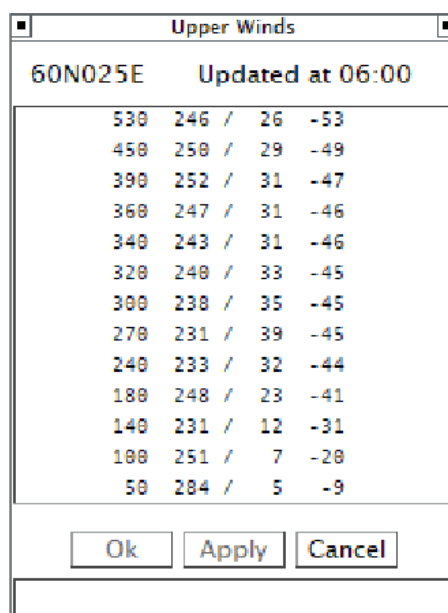


Figure 3.91: Upper Winds Window

The window displays upper winds and temperatures from a range of levels at a user specified position. To enter the point, click on the “–N–E” item and enter the position. Acceptable entries are locations defined in the active sector file and lat/lon positions in whole degrees (either in the flight plan format or ARINC424 shorthand, i.e. “60N025E” or “6025E”).

The “Updated at HH:MM” displays the timestamp of the data downloaded by the plugin (the data itself is the forecast for 6 hours after that time). If no time is shown, then no data is available.

3.7.41 Airfield Data Window

Global Menu MET -> Airfield Data

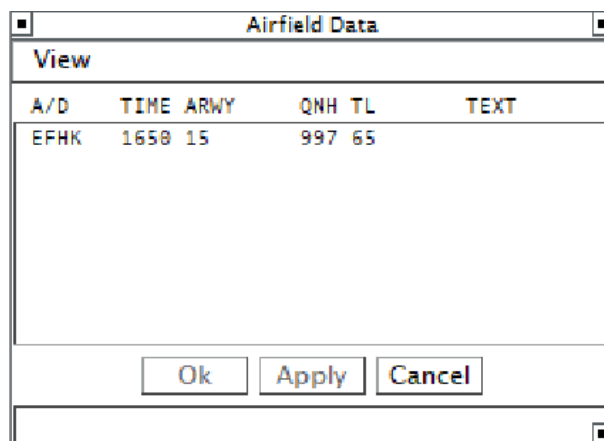


Figure 3.92: Airfield Data Window

The window displays the QNH values, transition levels and other information for those airports that have a METAR displayed in the *Weather Messages Window*. The transition level tables are defined in a data file, and if a table can't be found for an airport in the list, a transition level will not be shown.

The following information is displayed:

A/D	Aerodrome ICAO code
TIME	METAR timestamp
ARWY	Arrival runway (first one if more than one active)
QNH	QNH value
TL	Transition level
TEXT	Other active arrival runways (if more than one)

TIME, ARWY and TEXT display can be toggled from the "View" menu.

3.7.42 General Information Window

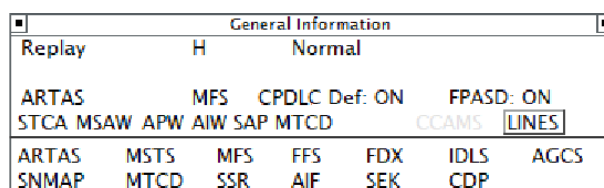


Figure 3.93: General Information Window

 TOPLIS User Manual	USER INTERFACE WINDOWS	3.7 P169
---	--------------------------------------	------------------------

The General Information Window displays basic information on the system state. The following functionality is implemented in TopSky:

mode	“Free”, “Operational”, “Proxy”, “Replay” or “Training” depending on the connection method
role	Own controller ID (between the mode and the “Normal” item)
QNH	Shows the local QNH value (below the “Normal” item when available)
CPDLC [ON OFF]	Def: Displays the state of the CPDLC Default setting
FPASD: [ON OFF]	Displays the state of the FPASD setting
Alert functions	Status of the alert functions. The function name is shown in Warning color if selected off or there’s a fault in the data file.
CCAMS	Displayed if plugin is selected as the SSR code source <ul style="list-style-type: none"> • Urgency color if the SSR data file contains no codes • Warning color if simulated traffic is not downloaded or ESE file or fixed range selected as the code source
IDLs	Plugin set up to send DCL. Warning color if datalink comms are failed.
AGCS	Warning color if Hoppie datalink comms are failed
MTCD	Warning color if prediction time is set to zero
SEK	Displayed if plugin is receiving AMAN data. Warning color if data loading has failed.

3.7.43 Miscellaneous Information Window

Global Menu -> Info -> MISC Information...

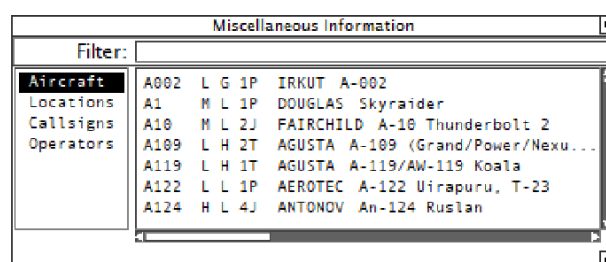


Figure 3.94: Document Viewer Window

 TOPLIS User Manual	USER INTERFACE WINDOWS	3.7 P170
---	--------------------------------------	------------------------

The Miscellaneous Information Window is used to browse and search for information in specific data files

- Aircraft - Information about aircraft types
 - Type designator
 - Wake turbulence category
 - Description (Amphibian, Gyrocopter, Helicopter, Landplane, Seaplane, Tiltrotor)
 - Engine count and type (Electric, Jet, Piston, Rocket, Turboprop/turboshaft)
 - Manufacturer and model
- Locations - Information about aerodromes
 - Location indicator
 - Location name
 - (State/Territory)
- Callsigns - Information about aircraft operators
 - Three-letter designator
 - Telephony designator
 - (Aircraft operating agency and notifying state)
- Operators - Information about aircraft operators
 - Three-letter designator
 - Aircraft operating agency and notifying state
 - (Telephony designator)
- NAT TrkM - Downloaded NAT Track Message (for oceanic setups)

The information can be filtered using the “Filter” box. The list will only display lines containing the entered text string (case insensitive).

3.7.44 NOTAM List Window

Global Menu -> Info -> NOTAM...

 TOPLIS User Manual	USER INTERFACE WINDOWS	3.7 P171
---	--------------------------------------	------------------------

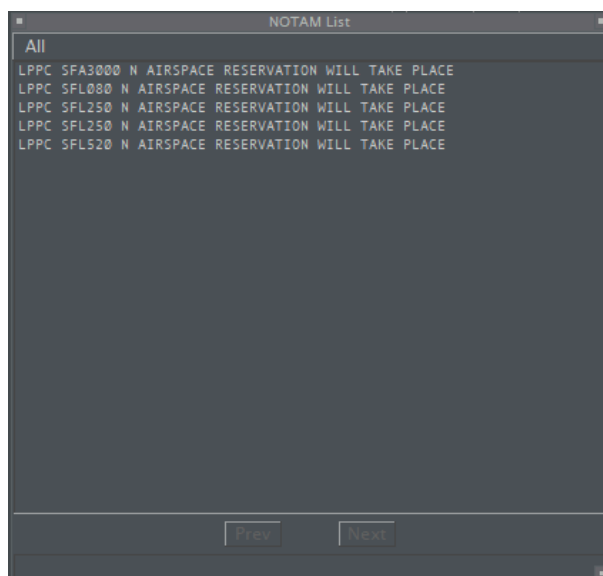


Figure 3.95: NOTAM List Window

The NOTAM List Window displays a list of received NOTAMs. The NOTAMs are retrieved when the window is first opened and the list will take a couple of seconds to populate. The NOTAMs are automatically updated every two hours. Each NOTAM shows the following information:

- Location ID (ICAO designator)
- Serial number
- Type (“N” = new, “R” = replaces earlier NOTAM, “C” = cancels earlier NOTAM)
- Abbreviated form of the NOTAM message contents

To see the actual NOTAM contents, left-click on a NOTAM line. To return back to the NOTAM list, left-click on the single NOTAM.

By default, the window displays all received NOTAMs. Left-clicking on the “All” label opens a menu where the displayed NOTAMs can be filtered by their validity periods. The other available options are “Today” and “Tomorrow”.

The NOTAM List is automatically displayed at startup in order to fetch the current FUA. It may be closed after loading.

3.7.45 Small QNH/TL Window

Global Menu -> Info -> Small QNH/TL...




Figure 3.96: Aerodrome Window

 TOPLIS User Manual	USER INTERFACE WINDOWS	3.7 P172
---	--------------------------------------	------------------------

Displays the QNH and transition level for one pre-defined aerodrome. If an aerodrome code has not been defined in the settings file, the code will be taken from the login callsign for APP logins and below. For CTR callsigns the window will automatically display data for LPPT.

3.7.46 LFUNC Frequency Plan Window

Global Menu -> Info -> LFUNC Frequency Plan...

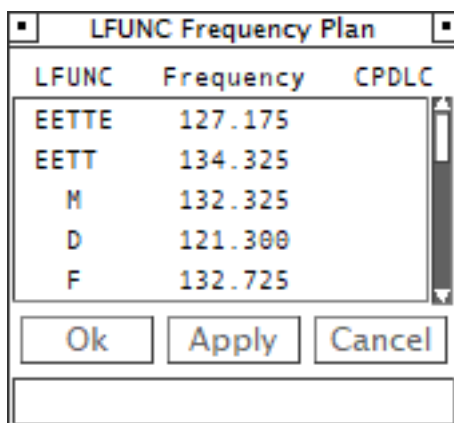


Figure 3.97: LFUNC Frequency Plan Window

The LFUNC Frequency Plan Window displays the currently online position-identified controllers and their primary frequencies as well as their CPDLC logon callsigns where applicable. The CPDLC information is not displayed on proxy instances or when there are no CPDLC stations online.

3.7.47 Notepad Window

Global Menu MSG -> Notepad...

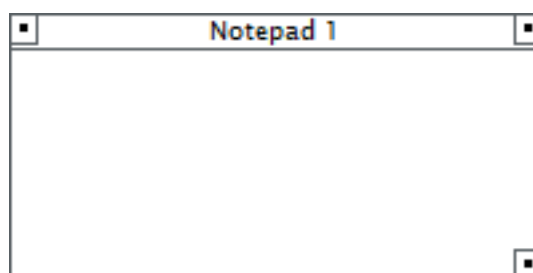


Figure 3.98: Notepad Window

The Notepad Windows can be used to display any user entered text. Multiple Notepad Windows can be opened simultaneously. To enter new text or edit the existing one, click on the window area. The text will be automatically wrapped, and if necessary, the “|” character can be used to force a line break. If the window is not large enough to fit all the entered text, it will display “. . .” in the end to indicate that there is more information.

 TOPLIS User Manual	USER INTERFACE WINDOWS	3.7 P173
---	--------------------------------------	------------------------

3.7.48 Personal Queue Window

Global Menu MSG -> Personal Queue...

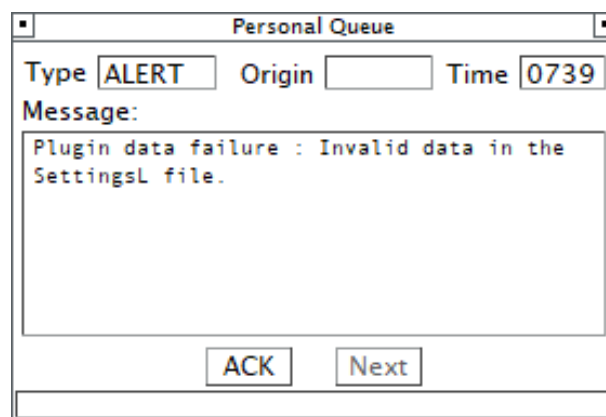


Figure 3.99: Personal Queue Window

The Personal Queue Window displays warning messages related to TopSky's operation: high priority messages informing about potential critical failures in TopSky code, and low priority messages informing about faults in TopSky's external data files or timeout alerts for coordination messages.

The window currently only displays "ALERT" type messages, and the origin for them is always empty. The time field displays the UTC time when the currently viewed message was created.

The high priority messages are always displayed first. Only when there are no more high priority messages in the list, are the low priority ones shown. To acknowledge a message, click on the "ACK" button. This removes the message from the list and displays the next one. The "Next" button moves the currently viewed message to the back of the list and displays the next message of the same priority.

3.7.49 ATC / Primary Frequency Messages Window

Global Menu MSG -> ATC Messages...

Global Menu MSG -> Prim Freq Messages...

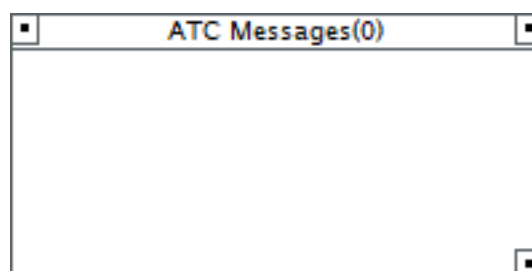


Figure 3.100: ATC / Primary Frequency Messages Window

 TOPLIS User Manual	USER INTERFACE WINDOWS	3.7 P174
---	--------------------------------------	------------------------

These windows display up to 99 last messages transmitted on the relevant text channel (“ATC” or the primary frequency). Each message line displays a time stamp, the sender callsign (blank if you) and the message itself.

New incoming messages are displayed in **Warning** color until left-clicked to mark them as read. Left-double-clicking on any message will mark all messages in the window read. The windows do not resize automatically to show all the messages in them, but the number in the title bar shows the total number of messages in the window. If the window is not wide enough to fit a complete message, it will display “...” in the end to indicate that there is more information. Holding a mouse button down on a message will display the entire message.

3.7.50 NAT Track Messages Window

Global Menu MSG -> NAT Track Messages...

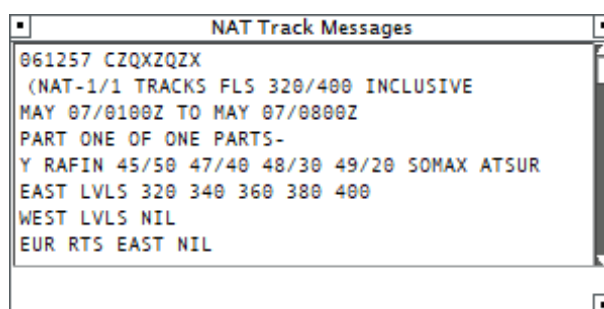


Figure 3.101: NAT Track Messages Window

The NAT Track Messages Window displays the downloaded track messages. The messages are downloaded when the window is opened the first time and then updated hourly. The tracks extracted from the messages can be displayed on the radar screen – they are placed to a “NAT” folder in the *Maps Windows*. Any named waypoints in the tracks that cannot be found in the active sector file are just skipped so the displayed tracks may not be accurate. The track letter is added to the name of the first and last waypoints in parentheses, so a missing track letter is a sure sign of at least some waypoints missing.

3.7.51 Safety Nets Status Window

Global Menu STS -> Safety Nets Status...

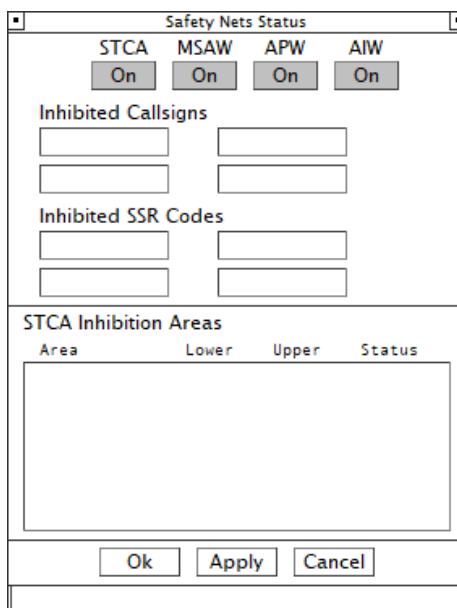


Figure 3.102: Safety Nets Status Window

Allows setting the status for the *STCA* (*Short Term Conflict Alert*), *MSAW* (*Minimum Safe Altitude Warning*), *APW* (*Area Proximity Warning*) and *AIW* (*Airspace Infringement Warning*) systems. The “On/Off” buttons control the corresponding system’s status.

Below them, there are four entry boxes for callsigns to exclude specific callsigns from all the safety nets. The “*” wildcard can be used to match multiple callsigns. It causes all the callsigns that match up to the “*” to be a match (i.e. “ABC*” will match all callsigns that start with “ABC”, but “*ABC” will match all callsigns as any characters after the “*” will be ignored).

Below the callsign fields, there are four SSR code boxes that can be used to exclude specific SSR codes from all the safety nets. The entered values must be 1-4 octal digits, and the system will match the number of digits entered (i.e. “2000” will match only code 2000, whereas “20” will match all codes in the range 2000-2077).

If there are STCA inhibition areas defined in the area data file, they will be listed in the area in the bottom part of the window. The area vertical limits (displayed in 100’s of feet or meters+“m” depending on system units) can be edited by clicking on the values, and the area activation can be toggled by clicking on the area status.

All changes to the window must be applied using the buttons in the bottom of the window to take effect.

Ok	Applies the changes if any, closes the window
Apply	Applies the changes
Cancel	Cancels the changes

3.7.52 Divergence Detection Status Window

Global Menu STS -> Divergence Detection Status...

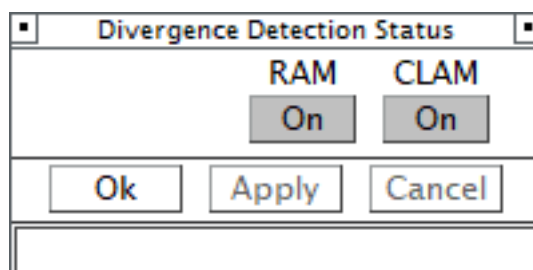


Figure 3.103: Divergence Detection Status Window

Allows setting the status for the *RAM* (*Route Adherence Monitoring*) and *CLAM* (*Cleared Level Adherence Monitoring*) alerting. The “On/Off” buttons control the corresponding system’s status. All changes must be applied using the buttons below to take effect.

Ok	Applies the changes if any, closes the window
Apply	Applies the changes
Cancel	Cancels the changes

3.7.53 MTCD Status Window

Global Menu STS -> MTCD Status...

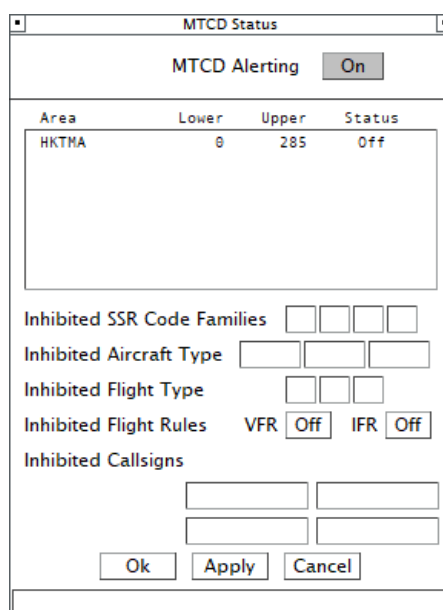


Figure 3.104: MTCD Status Window

 TOPLIS User Manual	USER INTERFACE WINDOWS	3.7 P177
---	--------------------------------------	------------------------

Allows setting the status for the *MTCD (Medium Term Conflict Detection)* system. The “On/Off” button controls the system’s status.

MTCD inhibition areas will be listed in the area below the “On/Off” button. The area activation can be toggled by clicking on the area status.

The rest of the inhibition settings affect both *MTCD (Medium Term Conflict Detection)* and *SAP (Segregated Area Probe)* systems:

Below the inhibit areas, there are four SSR code boxes that can be used to exclude specific SSR codes from MTCD/SAP processing. The entered values must be 1-2 octal digits, and the system will match the number of digits entered (i.e. “2” will match codes 2000-2777, whereas “20” will match codes 2000-2077).

Below the SSR codes, there are four ATYP boxes to exclude specific aircraft types. The entered text strings must be exact ICAO aircraft type designators (no partial matches or wildcards).

The flight type inhibit is not available due to network restrictions.

VFR or IFR flights can be excluded by selecting the respective “Inhibited Flight Rules” button to “On”.

Finally, there are four entry boxes to exclude specific callsigns. The “*” wildcard can be used to match multiple callsigns. It causes all the callsigns that match up to the “*” to be a match (i.e. “ABC*” will match all callsigns that start with “ABC”, but “*ABC” will match all callsigns as any characters after the “*” will be ignored).

All changes to the window must be applied using the buttons in the bottom of the window to take effect.

Ok	Applies the changes, closes the window
Apply	Applies the changes
Cancel	Cancels the changes

3.7.54 FPCA Status Window

Global Menu STS -> FPCA Status...

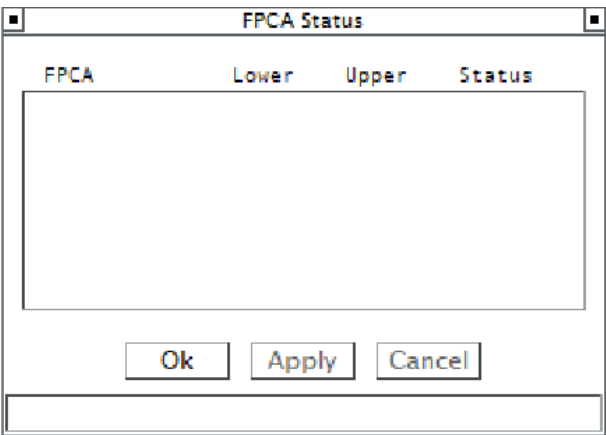


Figure 3.105: Runway in Use Window

The FPCA Status Window displays and allows setting the status for the flight plan conflict areas defined in the area data file.

The area activation can be toggled by clicking on the area status.

All changes to the window must be applied using the buttons in the bottom of the window to take effect.

- | | |
|--------|--|
| Ok | Applies the changes, closes the window |
| Apply | Applies the changes |
| Cancel | Cancels the changes |

3.7.55 Runway in Use Window

Global Menu STS -> Runway In Use... (opens the *Aerodrome Menu* for airport selection)

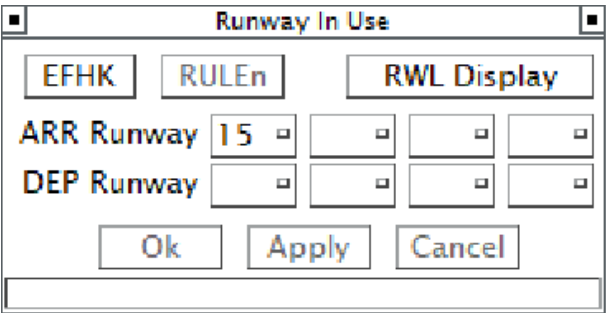


Figure 3.106: Runway in Use Window

The Runway In Use Window displays the arrival and departure runway allocation at the selected aerodrome. Left-clicking on the airport ICAO code opens the *Aerodrome Menu* to select another aerodrome. The runway selections are read-only in this window.

The “RWL Display” button opens the *Runway Approach Line Window* for this aerodrome.

3.7.56 Runway Approach Line Window

Global Menu STS -> RWY line display... (opens the *Aerodrome Menu* for airport selection)

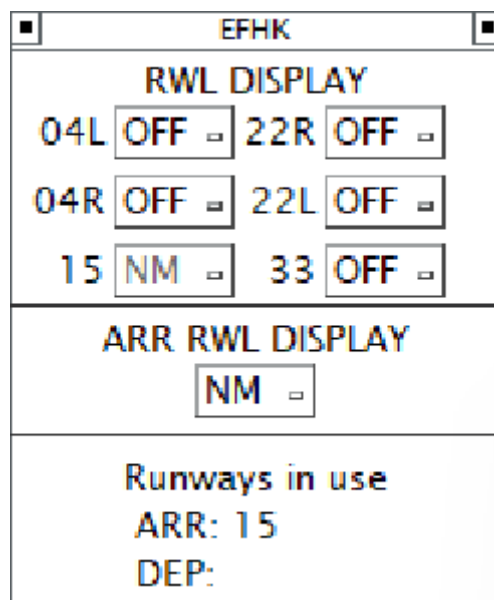


Figure 3.107: Runway Approach Line Window

The window will open below the mouse cursor, or will be repositioned there if already open.

The window contains selection buttons to toggle the display of the approach lines for the airport's runways, and a listing of the currently active runways. The "ARR RWL DISPLAY" option toggles the automatic display of all approach lines for runways that are selected active for arrival. The setting is global for all airports.

The options, and their default settings for the approach lines are as follows:

OFF	No line drawn
NM	16nm line, 5 markers at 2nm intervals
NME	30nm line, 5 markers at 2nm intervals, then 4 markers at 5nm intervals
Km	30km line, 5 markers at 2km intervals, then 4 markers at 5km intervals

The color of the line is different depending on whether the runway is active for arrivals or not.

3.7.57 Operations Rate Window

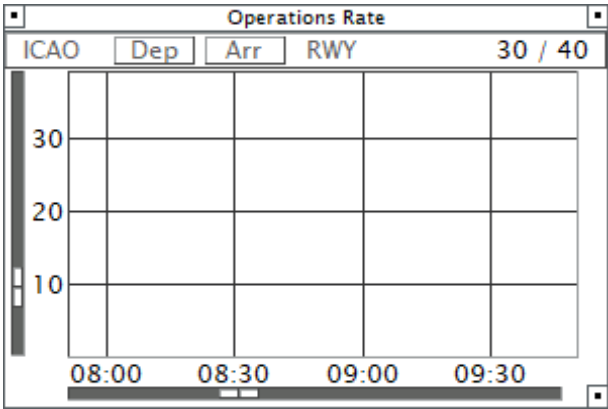


Figure 3.108: Runway in Use Window

The Operations Rate Window displays the predicted hourly operations rate at a specified airport. The data is displayed in 5-minute steps and shown up to 5 hours into the future. The arrival prediction is based on aircraft tracks as calculated by EuroScope. The departures are predicted to depart immediately if their ground status is set to “DEPA”, earliest in 5 minutes if “TAXI” and earliest in 10 minutes if “PUSH”, with a maximum departure rate of one aircraft per minute.

A number of these windows can be opened to simultaneously view multiple combinations of airport, departure/arrival state and runway(s).

In the area below the title bar, on the left is the ICAO identifier of the airport whose traffic is being monitored (a gray label “ICAO” is shown if no airport is selected yet).

The “Dep” and “Arr” buttons control whether departures and/or arrivals should be shown on the display (button background is shown in **Selected** color if selected on).

The “RWY” label allows entering one or more runway identifiers to filter traffic based on the assigned runway.

The numbers on the right side are the caution and warning limits. The rates are color coded so that a rate at or below the caution limit will be shown in **COL Under Threshold** color, a rate above that but at or below the warning limit in **COL Above Threshold** and a rate above that in **Urgency**. When both arrivals and departures are selected for display, the departures are shown with a hatched color.

ICAO	Enter airport identifier
Dep	Toggle departures on/off
Arr	Toggle arrivals on/off
RWY	Enter runways
XX / XX	Enter caution and warning limits

Sliders

Change the rate number and time scales

3.7.58 Predicted Traffic Window

Global Menu STS -> Supervisory -> Predicted Traffic...

The Predicted Traffic Window shows the number of aircraft that are predicted to be inside a specified controller's airspace. The data is displayed in 5-minute steps and shown up to 5 hours into the future. The prediction is based on the sector ownership and the aircraft tracks are as calculated by EuroScope.


A number of these windows can be opened to simultaneously view multiple controllers' situation. In the area below the title bar, the left side shows the controller ID whose traffic is being monitored (a gray label "ID" is shown if no controller ID is selected yet). Left-click on the text to enter a new ID. If the monitored ID is your own, the data area background will be in "Active Sector" color, otherwise in **Inactive Sector**.

The numbers on the right side are the caution and warning limits. To change them, left-click on them and re-enter in the same format (warning can't be lower than caution, numbers must be separated by a forward slash). The traffic numbers are color coded so that a number at or below the caution limit will be shown in **COL Under Threshold** color, a number above that but at or below the warning limit in **COL Above Threshold** and a number above that in **Urgency**.

The two sliders change the traffic number and time scales.

3.7.59 Air Traffic Flow Management Window

Global Menu STS -> Flow Management. . .

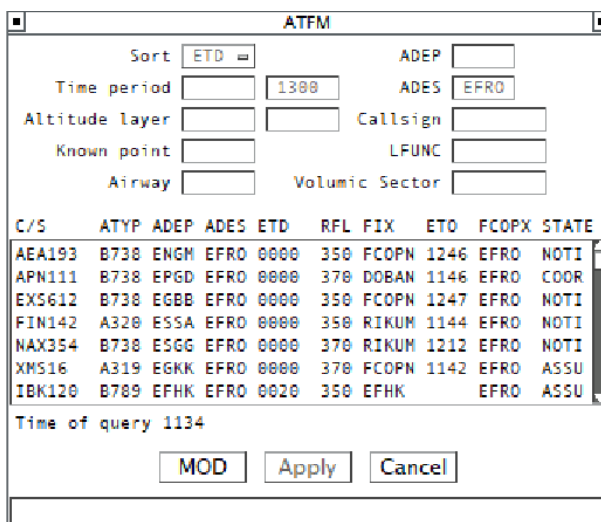

C/S	ATYP	ADEP	ADES	ETD	RFL	FIX	ETO	FCOPX	STATE
AEA193	B738	ENGM	EFRO	0000	350	FCOPN	1246	EFRO	NOTI
APN111	B738	EPGD	EFRO	0000	370	DOBAN	1146	EFRO	COOR
EXS612	B738	EGBB	EFRO	0000	350	FCOPN	1247	EFRO	NOTI
FIN142	A320	ESSA	EFRO	0000	350	RIKUM	1144	EFRO	NOTI
NAX354	B738	ESGG	EFRO	0000	370	RIKUM	1212	EFRO	NOTI
XMS16	A319	EGKK	EFRO	0000	370	FCOPN	1142	EFRO	ASSU
IBK120	B789	EFHK	EFRO	0020	350	EFHK		EFRO	ASSU

Figure 3.109: Air Traffic Flow Management Window

 TOPLIS User Manual	USER INTERFACE WINDOWS	3.7 P182
---	--------------------------------------	------------------------

The Air Traffic Flow Management Window can be used to list the aircraft flying in the AoR within a specified time period. The following options are available to sort and filter the results (the end of the time period is the only mandatory item):

Sort	The list sorting parameter, click to toggle between ETD and C/S.
Time period	The start and end of the specified time period
Altitude layer	The lower and upper limits for the RFL value
Known point	A point in the filed route
Airway	An airway in the filed route
ADEP	Departure airport (starting with the entered string)
ADES	Destination airport (starting with the entered string)
Callsign	Callsign (starting with the entered string)
LFUNC	Predicted to enter airspace of this position ID
Volumic Sector	Not implemented

For entry into the list, an aircraft must meet all specified filtering criteria. The list displays the following information about each aircraft:

C/S	Callsign
ATYP	Aircraft type
ADEP	Departure airport
ADES	Destination airport
ETD	Estimated Time of Departure
RFL	Requested Flight Level
FIX	The “Known point” if specified, otherwise the FIR entry coordination point
ETO	Estimated time over the fix
FCOPX	FIR exit coordination point
STATE	Flight plan system state

The buttons in the window:

MOD	Makes the entry boxes and sorting option selectable, clears the list data.
-----	--

 TOPLIS User Manual	USER INTERFACE WINDOWS	3.7 P183
---	--------------------------------------	------------------------

Apply	Calculates the data. Available only when MOD has been selected and at least the end of the time period has been entered. If the start of the time period is left empty, the current time is used.
Cancel	Clears all entries and list data

3.7.60 Current Operational Load Window

Global Menu STS -> Current Operational Load. . .

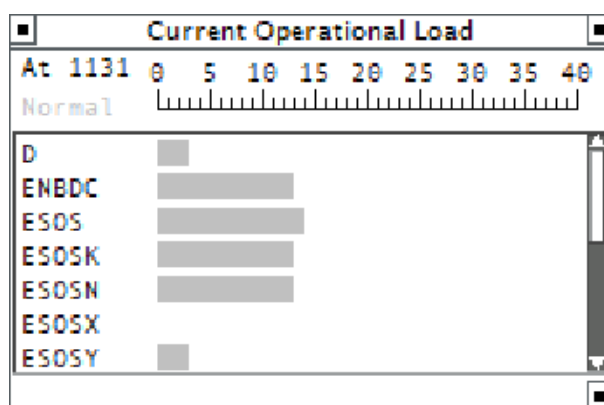


Figure 3.110: Current Operational Load Window

The Current Operational Load Window displays the number of aircraft currently assumed by or flying in the airspace of the displayed controllers. The display is refreshed at 60 second intervals. The bars displaying the number of aircraft are shown with **COL Under Threshold** color up to a defined number (20 by default), and with **COL Above Threshold** above it. The state is displayed as **Normal Load** unless at least one controller has more than the alert number of aircraft, in which case it is displayed as **Warning**.

3.7.61 Operational Load Forecast Window

Global Menu STS -> Operational Load Forecast. . .



Figure 3.111: Operational Load Forecast Window

The Operational Load Forecast Window displays the predicted number of aircraft entering the airspace of the displayed controllers within a specified time period.

MOD	Makes the start and end of time period boxes selectable for entry.
Apply	Calculates the data. Available only when MOD has been selected and at least the end of the time period has been entered. If the start of the time period is left empty, the current time is used.
Cancel	Clears all entries and data.

3.7.62 Pre-Departure Clearance Window

“Open DCL Window/PDC Window” label function

DEP CLEARANCE	
FIN633	
RWY	21
SID	RENV13A
AHDG	
CFL	350
ASSR	A1352
Ok	
Cancel	

Figure 3.112: Pre-Departure Clearance Window

The Pre-Departure Clearance Window is used to adjust clearance data and toggle the clearance flag. The following data fields are displayed for review:

RWY	Departure runway (left-click to open RWY setup popup list)
SID	Assigned SID (left-click to open SID setup popup list)
AHDG	Assigned heading (left-click to open <i>AHDG Menu</i>)
CFL	Cleared level (left-click to open <i>CFL Menu</i>)
ASSR	Assigned transponder code (left-click to open <i>SSR Code Menu</i>)

The RWY field text is displayed in **Proposition In** color if the clearance has not yet been issued and the selected runway is not active for departure. The CFL level background is displayed in **Warning** color for DEL/GND/TWR/APP controllers when it is above XFL, and for CTR controllers when it is above PEL.

Ok	Sets the clearance flag, closes the window
Cancel	Clears the clearance flag, closes the window

The “Ok” button is active when at least “RWY”, “CFL” and “ASSR” contain data. The window closes automatically if the aircraft is assumed by another controller.

3.7.63 Departure Coordination Window

“Toggle EST/DEP/ABT” label function (when clearance flag not set and ground state not “DEPA”)

 TOPLIS User Manual	USER INTERFACE WINDOWS	3.7 P186
---	--------------------------------------	------------------------

DEP COORD	
NRS2556	
21	
ENTC	
IBSAN T95	
GITEV EXUTI ...	
CFL	A40
ASSR	5362
ATOW	
EOBT	1255
Ok	
Cancel	


Figure 3.113: Departure Coordination Window

The Departure Coordination Window can be used to set the clearance flag. The window displays the aircraft callsign, departure runway, destination and beginning of the route and allows setting the *CFL*, *ASSR* and *EOBT* values.

CFL	Opens the <i>CFL Menu</i>
ASSR	Opens the <i>SSR Code Menu</i>
ATOW	Not implemented
EOBT	Opens the <i>Time Menu</i>
Ok	Applies any changes, sets the clearance flag and closes the window
Cancel	Disregards any changes, closes the window

3.7.64 Departure Clearance Window

“Open DCL Window/PDC Window” tag function

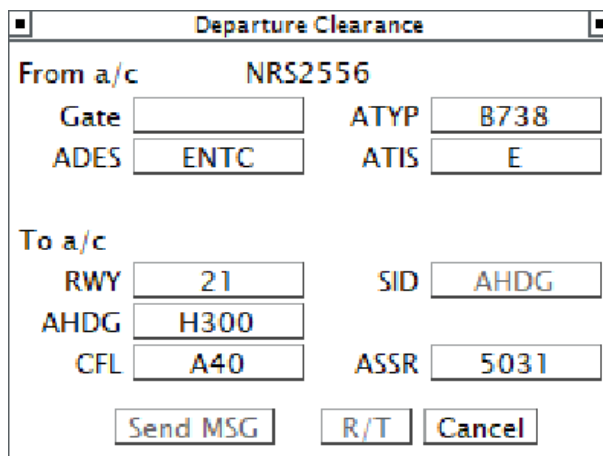

Departure Clearance

From a/c NR52556

Gate ATYP

ADES ATIS

To a/c

RWY SID

AHDG

CFL ASSR

Figure 3.114: Departure Clearance Window

The Departure Clearance Window is used to issue datalink clearances.

The top part of the window ("From a/c") displays the aircraft callsign and information received from the aircraft in the clearance request message:

Gate	Stand designator
ATYP	Aircraft type
ADES	Destination
ATIS	ATIS designator
RCD-RMK	Remarks text (only displayed if not empty)

The bottom part is used to compose and send a reply:

RWY *	Departure runway (left-click to open RWY setup popup list)
SID	SID designator (left-click to open SID setup popup list)
AHDG	Assigned heading (left-click to open <i>AHDG Menu</i>)
CFL *	Cleared level (left-click to open <i>CFL Menu</i>)
ASSR *	Assigned transponder code (left-click to open <i>SSR Code Menu</i>)

The buttons are as follows:

Send	MSG Sends the clearance message, closes the window
R/T	Sends a "REVERT TO VOICE" message, aborts the datalink clearance process
Cancel	Closes the window

 TOPLIS User Manual	USER INTERFACE WINDOWS	3.7 P188
---	--------------------------------------	------------------------

The “Send MSG” button is available when a clearance can be sent – a defined format is available, all required fields have been filled (all fields marked with “*” above, when present, are required fields) and another controller is not tracking the aircraft (so it’s possible to set the clearance flag).

3.7.65 Oceanic Time Restriction Window

“Open Oceanic Time Restriction Window” label function










Figure 3.115: Oceanic Time Restriction Window

The Oceanic Time Restriction Window displays the time restriction(s) contained in the OCM. The window closes when the cursor leaves the window area.

 TOPLIS User Manual	USER INTERFACE FLIGHT LEG	3.8 P189
---	---	------------------------

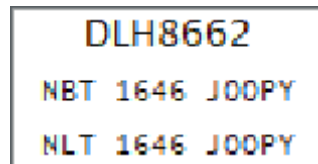3.8 Flight Leg

The Flight Leg displays the aircraft's planned track in one-minute steps. Each one-minute-long part of the path is colored according to the results of the *MTCD* (*Medium Term Conflict Detection*) and *SAP* (*Segregated Area Probe*) processing. The following colors are possible:




	MTCD conflict or potential predicted conflict, SAP conflict
	MTCD risk, SAP risk
	MTCD potential risk
	MTCD acknowledged conflict
	MTCD and/or SAP processing available, no conflicts or risks detected
	No MTCD or SAP processing available for this part of the Flight Leg

If the aircraft has an assigned heading or is not following its route, the predictions only go up to 10 minutes and assume the aircraft continues on its present ground track. In this case the predicted track is shown as a dashed line when the flight leg is displayed.

The Flight Leg is displayed by clicking on various track label and list items depending on the setup and is either automatically removed from display when the mouse cursor leaves the label area or must be manually toggled off, depending on the function that was used to display it.

The Flight Leg line is one pixel thick, except when it is showing only SAP conflicts (opened from the SAP Window) or showing also MTCD information (any conflicting aircraft legs). In that case the FLEG for the referenced flight is three pixels thick and the possible other FLEGs one pixel thick.

The label that's shown on each route point includes the following predefined fields:

	Estimated Time Over the point
	Top of Climb
	Top of Descent

 TOPLIS User Manual	USER INTERFACE KEYBOARD SHORTCUTS	3.9 P190
---	---	------------------------

3.9 Keyboard Shortcuts

Some TopSky functions can be accessed using a keyboard shortcut. The available shortcuts and their keys are:















<ALT+F>	Open <i>Flight Plan Window</i> for the selected flight
<ALT+E>	Open <i>Flight Plan Selection Window</i>
<ALT+Q>	Start new <i>QDM Vector</i>
<ALT+U>	Toggle <i>Quick Look</i> on/off
<ALT+S>	Start a new <i>Minimum Separation Tool</i>
<ALT+C>	Reposition cursor at the center of the radar screen
<ALT+T>	Start <i>Find Track</i> function
<ALT+Z>	Toggle <i>Zoom Window</i>
<ALT+R>	Toggle <i>CARD</i>
<ALT+I>	Toggle <i>Message In Window</i>
<ALT+O>	Toggle <i>Message Out Window</i>
<ALT+M>	Toggle <i>Airspace Management Window</i>
<ALT+A>	Toggle <i>Create APL Window</i>
<ALT+N>	Open new <i>Notepad Window</i>
<ALT+D>	Toggle <i>Airfield Data Window</i>


Table 3.88: keyboard Shortcuts


“Selected flight” means that the mouse cursor is over that flight’s track label.

 TOPLIS User Manual	USER INTERFACE COLOR VALUES	3.10 P191
---	---------------------------------------	---------------------















3.10 Color Values


Color name	Color	Usage
<i>Aircraft colors</i>		
ACF Via CFL		Labels
Assumed		Labels, Tracks
CARD Mark All		Labels
CARD Mark Own		Labels
Concerned		Labels, Tracks
Coordination		Labels, Tracks
Freq Indicator		Labels
Info Coord		Labels
Information		Labels, Windows
Informed 1		Labels, Tracks
Informed 2		Labels, Tracks
Informed 3		Labels, Tracks
Negotiation In		Labels
Negotiation Out		Labels
Oceanic Level Highlight		Labels

















 TOPLIS User Manual	USER INTERFACE COLOR VALUES	3.10 P192
---	---------------------------------------	---------------------


Color name	Color	Usage
Proposition Accepted		Labels
Proposition In		Labels
Proposition Out		Labels
Redundant		Labels, Tracks
Reminder		Labels
Rwy Locked		Labels
Sid Star Allocation		Labels
Sid Star No Allocation		Labels
Suite Highlight		Labels
Temp Track Highlight		Labels (Find Track function)
Track Default		Tracks
Track Highlight		Tracks
Unconcerned		Labels, Tracks
Unknown		Labels
Urgency		Labels, STCA callsign background on plugin windows/lists, Windows
VFR		Labels, Tracks
















 TOPLIS User Manual	USER INTERFACE COLOR VALUES	3.10 P193
---	---------------------------------------	---------------------


Color name	Color	Usage
Warning		Labels, Windows
<i>CPDLC colors</i>		
CPDLC Controller Late		Labels, Windows
CPDLC Discarded		Windows
CPDLC DM Request		Labels, Windows
CPDLC Failed		Labels, Windows
CPDLC Pilot Late		Labels, Windows
CPDLC Standby		Labels, Windows
CPDLC UM Clearance		Labels, Windows
CPDLC Unable		Labels, Windows
CPDLC Urgency		Labels, Windows
<i>Aircraft related items on the radar screen</i>		
AIW intrusion		AIW alert related items
Conflict Ack FL		Part of flight leg with acknowledged conflict
Flight Leg		Part of flight leg without MTCD and SAP coverage
Heading Vector		Heading vector

 TOPLIS User Manual	USER INTERFACE COLOR VALUES	3.10 P194
---	---------------------------------------	---------------------

Color name	Color	Usage
Information FL		Part of flight leg with no MTCD or SAP problems
MQDM		MQDM vector
Potential FL		Part of flight leg with MTCD potential risk
QDM		QDM vector
SEP Tool 1		Minimum separation tool 1
SEP Tool 2		Minimum separation tool 2
SEP Tool 3		Minimum separation tool 3
SEP Tool 4		Minimum separation tool 4
SEP Tool 5		Minimum separation tool 5
SEP Tool 6		Minimum separation tool 6
SEP Tool 7		Minimum separation tool 7
SEP Vert		Extensions of minimum separation tools
System Calculated TOC		TOC symbol on flight leg
System Calculated TOD		TOD symbol on flight leg
Urgency FL		Part of flight leg with MTCD or SAP conflict
Warning FL		Part of flight leg with MTCD or SAP risk

















 TOPLIS User Manual	USER INTERFACE COLOR VALUES	3.10 P195
---	---------------------------------------	---------------------

Color name	Color	Usage
<i>Map colors</i>		
Active Map		Active TSA map border
Active Map Type 1		TSA map border/fill
Active Map Type 2		TSA map border/fill
Active Map Type 3		TSA map border/fill
Active Map Type 4		TSA map border/fill
Active Map Type 5		TSA map border/fill
Active Map Type 6		TSA map border/fill
Active Map Type 7		TSA map border/fill
Active Map Type 8		TSA map border/fill
Active Map Type 9		TSA map border/fill
Active Map Type 10		TSA map border/fill
Active Map Type 11		TSA map border/fill
Active Map Type 12		TSA map border/fill
Active Map Type 13		TSA map border/fill
Active Map Type 14		TSA map border/fill

















 TOPLIS User Manual	USER INTERFACE COLOR VALUES	3.10 P196
---	---------------------------------------	---------------------


Color name	Color	Usage
Active Map Type 15		TSA map border/fill
Active Map Type 16		TSA map border/fill
Active Map Type 17		TSA map border/fill
Active Map Type 18		TSA map border/fill
Active Map Type 19		TSA map border/fill
Active Map Type 20		TSA map border/fill
Active RD Infill Map		Active R or D map fill
Active RD Map		Active R or D map border
Active Text Map		Active TSA map text
Auto Map Label		Auto-generated maps
Auto Map Symbol		Auto-generated maps
East NAT Map		Auto-generated maps, maps
Map 1		Maps
Map 2		Maps
Map 3		Maps
Map 4		Maps

















 TOPLIS User Manual	USER INTERFACE COLOR VALUES	3.10 P197
---	---------------------------------------	---------------------

Color name	Color	Usage
Map Hotspot		Map hotspots
Map Border		Maps
Map Info		Range rings, range marker
Map Land		Maps
Map Symbol		Maps
Preactive Map		Pre-active map border
Preactive Text Map		Pre-active map text
Predisplay Map		Pre-display map border
Rwy App Line Inuse		Runway approach line for runways in use
Rwy App Line Not Inuse		Runway approach line for runways not in use
TSA Border Highlight		Highlighted TSA map border
Weather Map		Weather radar data
West NAT Map		Auto-generated maps, maps
Window and menu colors		
Active Sector		Predicted Traffic Window and VAW active sector background
Arm		Inactive window texts

















 TOPLIS User Manual	USER INTERFACE COLOR VALUES	3.10 P198
---	---------------------------------------	---------------------


Color name	Color	Usage
Background		Background
Border		Various lines in windows
BottomShadow		3D effects in windows
CARD Min Sep		CARD minimum separation area
CARD Reminder		CARD warning time triangle
CARD Symbol Fg		CARD conflict numbers
CARD Time Vector		CARD time vectors
COL Above Threshold		COL flight bars above warning threshold
COL Above Threshold		COL flight bars under warning threshold
Conflict Ack		Acknowledged conflicts in CARD/VAW
Field Highlight		Selected field
Flight Highlight		Selected item
Foreground		Window titles, menu items, active texts, close/min/resize boxes
Global Menu Highlight		Highlighted items in the Global Menu
Inactive Sector		CARD, Predicted Traffic Window, SMW and VAW background
LatLong Info		Coordinate value in Lat/Long Window

 TOPLIS User Manual	USER INTERFACE COLOR VALUES	3.10 P199
---	---------------------------------------	---------------------

Color name	Color	Usage
Normal Load		Normal load color
Overflown		Overflown points in Complete Route Window
Overload		Overload color
Potential		Potential conflicts in CARD/VAW
Select		Selected radio buttons and selection boxes
Selected		Active filters in Radar menu
Selected Period		Active areas text in area window
SMW Highlight		AFL-CFL boxes in SMW (mouse-over)
SMW Level Band		AFL-CFL boxes in SMW
SMW Overflight		Overflight lines in SMW
SMW Overlap		Overlapping AFL-CFL boxes in SMW
SMW Overlap Box		Multiple same CFL's box in SMW
SMW Overshoot		Level bust AFL-CFL boxes in SMW
TopShadow		3D effects in windows
Trough		Slider area background
TSA Active		Active areas background in area window

 TOPLIS User Manual	USER INTERFACE COLOR VALUES	3.10 P200
---	---------------------------------------	---------------------

Color name	Color	Usage
TSA Preactive		Pre-active areas background in area window
VAW Profile		Selected aircraft profile in VAW
VAW Sector Limits		Sector boundaries in VAW
VAW Track Position		Selected aircraft position in VAW
WM Active Fg		Active window title text
WM Bg		Window title bar background
WM Border		Window border line
WM Fg		Window texts
WM Frame		Window frame when dragging
Other colors		
Standard Line RDF		Direction Finder position circle or direction line
Text Notes		Text notes
A-CDM colors		
color1		
color2		
color3		

 TOPLIS User Manual	USER INTERFACE COLOR VALUES	3.10 P201
---	---------------------------------------	---------------------











Color name	Color	Usage
color4		
color5		
color6		
color7		
color8		
color9		
color10		
color11		
color12		

Table 3.89: Color Names

 TOPLIS User Manual	KNOWN ISSUES	4.0 P202
--	---------------------	--------------------


Chapter 4

Known issues

 TOPLIS User Manual	KNOWN ISSUES GITHUB REPOSITORY	4.1 P203
---	--	--------------------


4.1 GitHub Repository

TOPLIS is maintained in the *topsky/ppc GitHub repository*. An up to date list of known issues can be checked on the *issues page*, aswell as reporting new ones.

 TOPLIS User Manual	KNOWN ISSUES AIRPORT AND AREA HOTSPOTS BLOCK SCREEN PANNING	4.2 P204
--	---	------------------------


4.2 Airport and area hotspots block screen panning

If you happen to drag one of the airport or area hotspot symbols when trying to move the screen, the screen will not move.

 TOPLIS User Manual	KNOWN ISSUES ROF/RTI/TIP MESSAGE AVAILABILITY LIMITED	4.3 P205
---	---	------------------------

4.3 ROF/RTI/TIP message availability limited

As there is no real plugin-to-plugin communication available, the availability and success of sending the ROF, RTI and TIP messages is somewhat limited.

 TOPLIS User Manual	KNOWN ISSUES PROBLEMS OPENING THE RADAR MENU	.0 P206
---	--	-----------------------

4.4 Problems opening the Radar Menu

The default method of opening the Radar Menu (<ALT>+right-click) may not always work on Mac hardware. It's possible to adjust TopSky settings to try another combination, but the easiest way is to insert the following line to the TopSkySettingsLocal.txt file:

```
Shortcut\RadarMenu\Combo=0x00
```

The Radar Menu is then opened by right-clicking anywhere on the Global Menu.

Appendix A

Figures

List of Figures

2.1	A-CDM timeline with delaying TSAT example	11
2.2	Unusable flight strip boxes	23
2.3	MTCD Vertical Path	33
2.4	STCA Alert List	38
3.1	Main Window on initialization	65
3.2	Global Menu	66
3.3	Setup Menu	66
3.4	Track Symbology	78
3.5	Selected track with 5 history dots and a 3-minute prediction line	78
3.6	Unselected Standard Track	80
3.7	Selected Standard Track	80
3.8	Unselected Reduced Track	81
3.9	Selected Reduced Track	81
3.10	Extended Track	82
3.11	Minimized Track	82
3.12	Unselected Uncoupled Track	83
3.13	Selected Uncoupled Track	83
3.14	Example label with several line 0 alerts	83
3.15	Line 0 label Interaction	85

 TOPLIS User Manual	<p style="text-align: center;">FIGURES</p> <p style="text-align: center;">LIST OF FIGURES</p>	<p style="text-align: center;">A.0</p> <p style="text-align: center;">P208</p>
--	--	---


3.16	Line 1 label Interaction	86
3.17	Line 2 label Interaction	86
3.18	Line 3 label Interaction	87
3.19	Line 4 label Interaction	87
3.20	Extended Label Interaction	88
3.21	Uncoupled Label Interaction	88
3.22	Callsign Menu	90
3.23	Uncontrolled Track Callsign Menu	92
3.24	Uncorrelated Track Callsign Menu	93
3.25	Transfer Menu	93
3.26	Transfer Confirmation Window	94
3.27	Hold Menu	95
3.28	Manual Transfer Menu	96
3.29	VCI Menu	96
3.30	Prediction Line Menu	97
3.31	Sequence Number Menu	98
3.32	Waypoint Menu	98
3.33	Waypoint Menu in Coordination	99
3.34	CPDLC Waypoint Menu	100
3.35	AFL Menu	101
3.36	CFL Menu	102
3.37	CPDLC CFL Menu	103
3.38	RFL Menu	104
3.39	RFL Menu during ongoing downlinked request	104
3.40	AHDG Menu	105
3.41	CPDLC AHDG Menu	106
3.42	TIP Menu during ongoing AHDG coordination	108
3.43	ARC Menu	109
3.44	ASP Menu	110
3.45	ASP Menu Mach option	110
3.46	CPDLC ASP Menu	111
3.47	ASSR Menu	112
3.48	Combined Transfer Menu	112
3.49	Aerodrome Menu	113
3.50	CPDLC Emergency Acknowledgement Menu	113
3.51	CPDLC Pilot Late Acknowledgement Menu	114
3.52	Time Menu	114
3.53	Departure Sequence Menu	115
3.54	Lost List	123
3.55	Holding List	126
3.56	Radar Menu	130
3.57	Scale Marker	132
3.58	SEP List	133
3.59	View Window	134
3.60	Zoom Window	134
3.61	Maps Windows	135
3.62	Track Control Window	136
3.63	Altitude Filtering Window	137

 TOPLIS User Manual	<p style="text-align: center;">FIGURES</p> <p style="text-align: center;">LIST OF FIGURES</p>	<p style="text-align: center;">A.0</p> <p style="text-align: center;">P209</p>
--	--	---

3.64	CJI Filtering Window	137
3.65	SSR Code Filtering Window	138
3.66	Clock Window	139
3.67	Brightness Control Window	140
3.68	CPDLC Setting Window	140
3.69	Raw Video Control Window	142
3.70	Airspace Management Window	143
3.71	Preactive Area	145
3.72	Active Area	146
3.73	Active High Operational Impact Area	146
3.74	Flight Plan Selection Window	147
3.75	Flight Plan Selection Window	147
3.76	Flight Plan Window	148
3.77	Complete Route Window	152
3.78	Create APL Window	152
3.79	Stack Manager Window	153
3.80	CARD	155
3.81	SAP Window	157
3.82	Vertical Aid Window	158
3.83	Message In Window	159
3.84	Message Out Window	160
3.85	Shortcut Window	162
3.86	Microphone Check Menu	162
3.87	CPDLC Current Message Window	163
3.88	CPDLC History Message Window	165
3.89	Cursor Lat/Long Window	165
3.90	Weather Messages Window	166
3.91	Upper Winds Window	167
3.92	Airfield Data Window	168
3.93	General Information Window	168
3.94	Document Viewer Window	169
3.95	NOTAM List Window	171
3.96	Aerodrome Window	171
3.97	LFUNC Frequency Plan Window	172
3.98	Notepad Window	172
3.99	Personal Queue Window	173
3.100	ATC / Primary Frequency Messages Window	173
3.101	NAT Track Messages Window	174
3.102	Safety Nets Status Window	175
3.103	Divergence Detection Status Window	176
3.104	MTCD Status Window	176
3.105	Runway in Use Window	178
3.106	Runway in Use Window	178
3.107	Runway Approach Line Window	179
3.108	Runway in Use Window	180
3.109	Air Traffic Flow Management Window	181
3.110	Current Operational Load Window	183
3.111	Operational Load Forecast Window	184

 TOPLIS User Manual	<p style="text-align: center;">FIGURES</p> <p style="text-align: center;">LIST OF FIGURES</p>	<p style="text-align: center;">A.0</p> <p style="text-align: center;">P210</p>
---	--	---

3.112Pre-Departure Clearance Window	185
3.113Departure Coordination Window	186
3.114Departure Clearance Window	187
3.115Oceanic Time Restriction Window	188

 TOPLIS User Manual	TABLES	B.0 P211
--	---------------	------------------------

Appendix B

Tables

List of Tables

2.1	A-CDM commands	13
2.2	A-CDM field descriptions	16
2.9	Supported CPDLC message types	27
2.10	CPDLC Free Text Messages	30
2.11	Flight Plan still faraway inside LEM crossing NORL, CENL and SULL	40
2.12	Flight Plan entering NORL in less than 15 minutes	40
2.13	Flight Plan assumed by NORL	40
2.14	Flight Plan assumed by NORL and less than 15 minutes to CENL	40
2.15	Flight Plan transferred from NORL to CENL but still inside of NORL airspace	40
2.16	Flight Plan assumed by CENL and has left NORL airspace	41
2.17	Flight Plan in LEM and will only cross SULL	41
2.18	Flight Plan does not enter any sector	41
2.19	Label Field descriptions	63
3.16	Line 0 Indications	85
3.23	Departure List Construction	117
3.24	Sector List Construction	120
3.25	Load Factor List Construction	120
3.26	Resectorisation List Construction	121
3.27	ETWR List Construction	122
3.28	Uncontrolled List Construction	123


 TOPLIS User Manual	<p>TABLES</p> <p>LIST OF TABLES</p>	<p>B.0</p> <p>P212</p>
---	--	-------------------------------

3.29	Lost List Construction	124
3.32	Traffic Management List Construction	125
3.35	Holding List Construction	127
3.88	keyboard Shortcuts	190
3.89	Color Names	201

 TOPLIS User Manual	BIBLIOGRAPHY	C.0 P213
--	---------------------	--------------------

Appendix C

Bibliography

 TOPLIS User Manual	BIBLIOGRAPHY BIBLIOGRAPHY	C.0 P214
---	-------------------------------------	--------------------

Bibliography

- [1] EUROCONTROL. *A-CDM Airport collaborative decision-making*. URL: <https://www.eurocontrol.int/concept/airport-collaborative-decision-making>.
- [2] Juha Holopainen. *TopSky plugin for EuroScope - Coordination*. 2022. URL: <https://forum.vatsim-scandinavia.org/d/45-topsky-plugin-25-beta-11>.
- [3] Juha Holopainen. *TopSky plugin for EuroScope - Data Link Functions*. 2022. URL: <https://forum.vatsim-scandinavia.org/d/45-topsky-plugin-25-beta-11>.
- [4] Juha Holopainen. *TopSky plugin for EuroScope - General*. 2022. URL: <https://forum.vatsim-scandinavia.org/d/45-topsky-plugin-25-beta-11>.
- [5] Roger Puig. *CDM GitHub*. URL: <https://github.com/rpuig2001/CDM>.
- [6] *TopSky plugin for Portugal vACC*. URL: <https://github.com/pinatacolada/topskylppc#disclamer>.