

This document describes the firmware update procedure for MSCF-16.

The latest firmware file can be found at

http://mesytec.com/downloads/firmware_updates/MSCF16/

Requirements

- Lattice Programming Cables
- Lattice Diamond Programmer
- The latest MSCF-16 CPLD firmware file
- USB Cable Type A → B
- Atmel Flip Programmer
- The latest MSCF-16 CPU firmware file
- These steps are for Windows

Table of Contents

CPLD Firmware Update

[Download Lattice Diamond Programmer](#)

[Connection of Cables](#)

[Start the Lattice Diamond Programmer](#)

[Programming](#)

[Project saving](#)

CPU Firmware Update

[Download Atmel Flip Programmer](#)

[Connection and configuration](#)

[Programming](#)

Download Lattice Diamond Programmer

- Download the “Lattice Diamond Programmer” from the following link.
<http://www.latticesemi.com/en/Products/DesignSoftwareAndIP/FPGAandLDS/LatticeDiamond.aspx>
- In order to download the software, it is necessary to register on the Lattice homepage.
- Scroll down to the table and chose the “**Programmer Standalone**”.
- Be sure to download the 32 bit or 64 bit version depending on the operating system version you are using.
- After the download is complete, unzip the zip-file.
- Start the “**Programmer.exe**” and follow the setup assistant.



Connection of Cables

- Connect the “**Lattice Programming Cable**” with the USB-Cable to your PC.
- The USB driver is automatically installed by Windows. Wait until the installation is complete.
- Connect the coloured cables to the mesytec adapter plate.
- And connect the adapter plate to the MSCF-16
- Be sure to observe polarity.
- Power on the MSCF-16.




Start the Lattice Diamond Programmer


- Start the programmer from the start menu.
- Click on “**Detect Cable**” and after detection click “**OK**”.

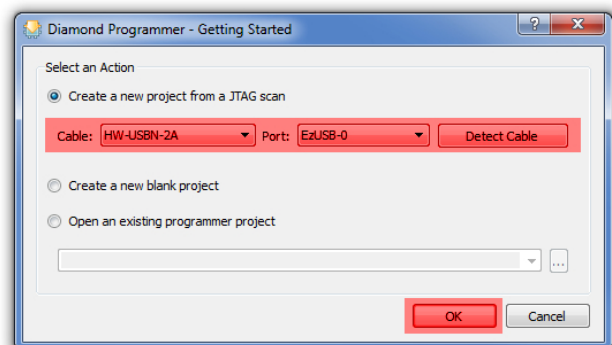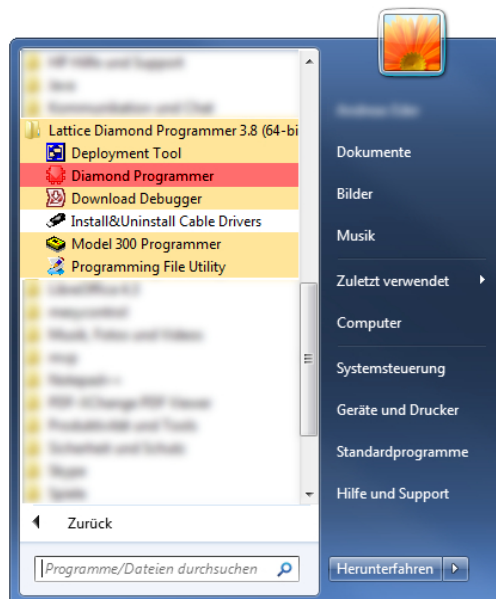

- The Lattice Diamond Programmer scan automatically the Lattice Component.

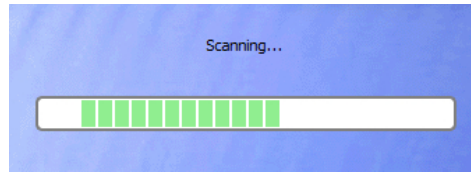


- In the green coloured area you can see the scanned Lattice Component.
- Click on the red coloured button to add the “.jed file.”

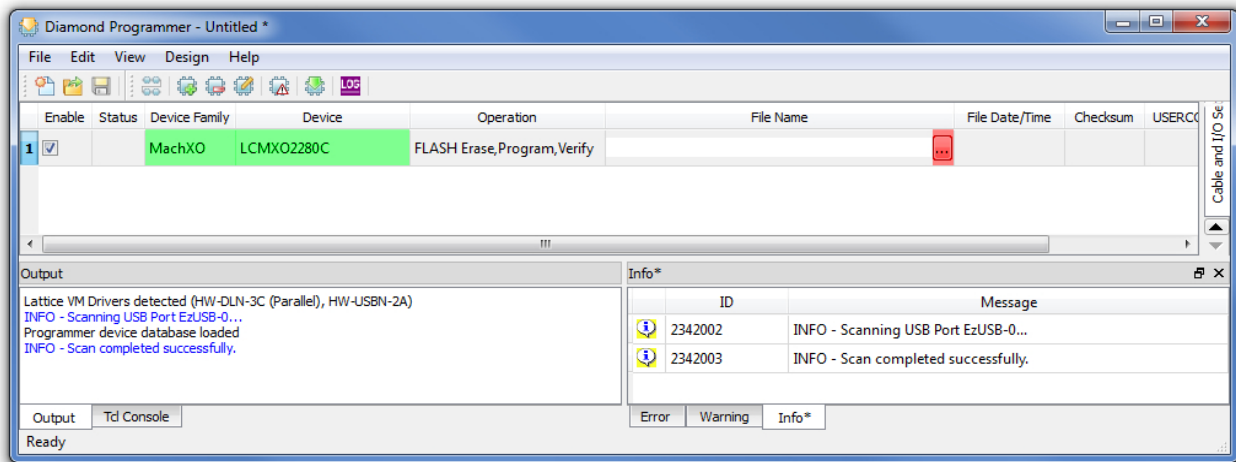


Programming


- In the green coloured area you can see the loaded firmware file.
- Click on the red coloured button to program the Lattice Component.

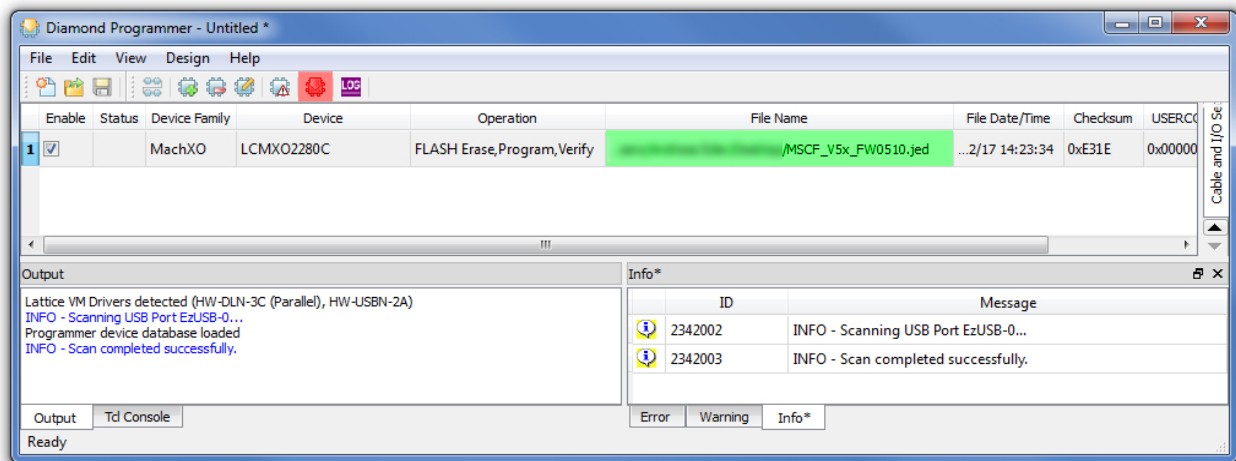

- The Lattice Diamond Programmer is programming the Component.

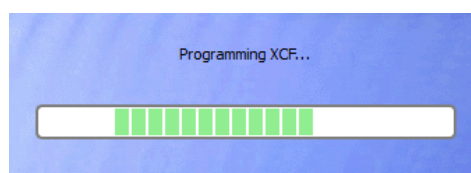


- In the "Status" column appears the Info "PASS" and is highlighted in green.
- At the bottom of the Output window, you can also see that the programming was successful.

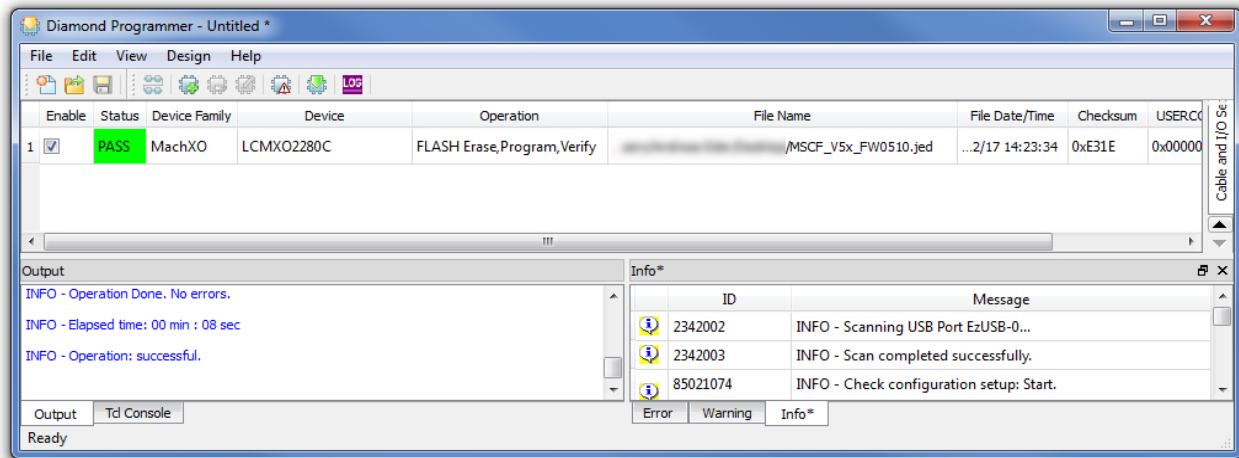

The MSCF-16 CPLD Firmware is now updated

Project saving

- All settings can be stored to update other MSCF-16 at a later time.

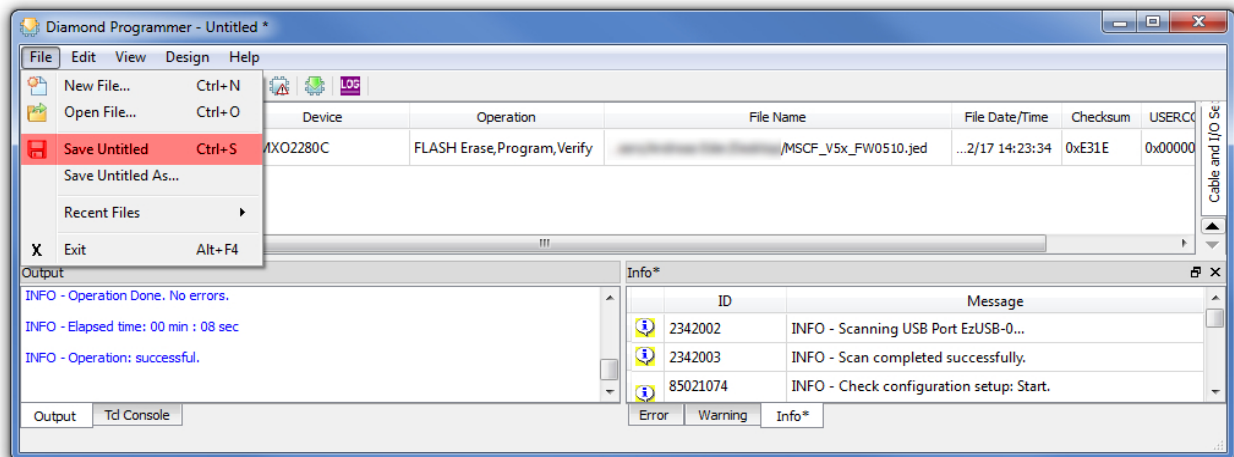


Download Atmel Flip Programmer


- Download the “Atmel Flip Programmer” from the following link.
<http://www.atmel.com/tools/flip.aspx>
- To download the software, it is not necessary to register.
- After the download is completed, click on the “**Flip Installer.exe**” and follow the setup assistant.

Connection and configuration of the Atmel Flip Programmer


- Connect the MSCF-16 with the USB Cable Type A → B to your computer.
- The USB driver is automatically installed by Windows. Wait until the installation is complete.
- Plug the jumper onto the 2-pin connector.

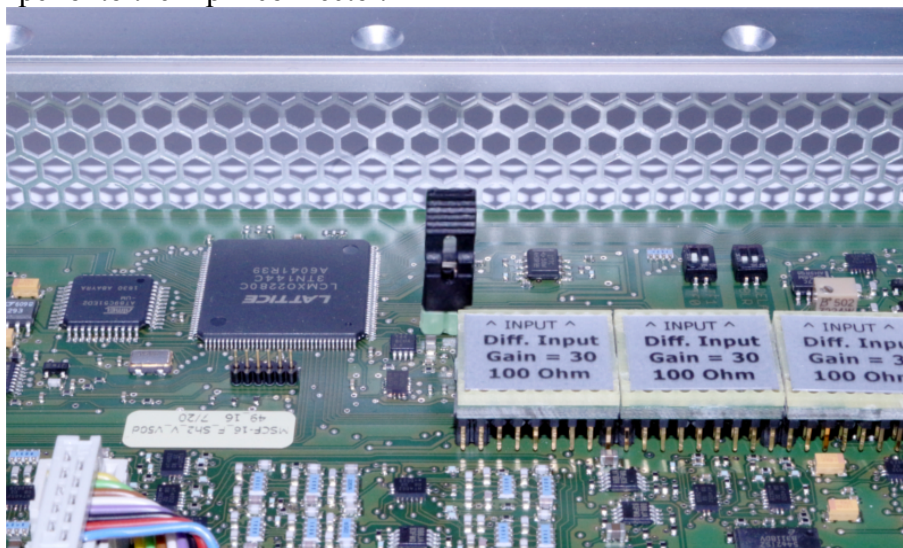


- Start the Atmel Flip Programmer.
- Click on the red coloured button on the upper left, choose the **AT89C51ED2** Device, click “OK”

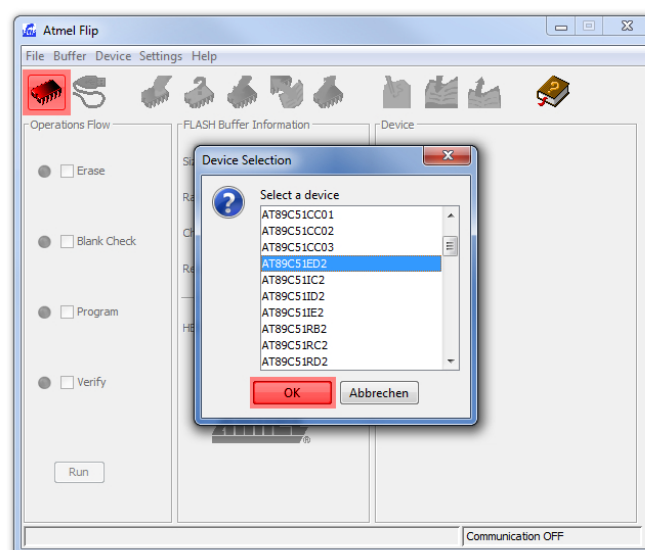


- Load the .hex file.

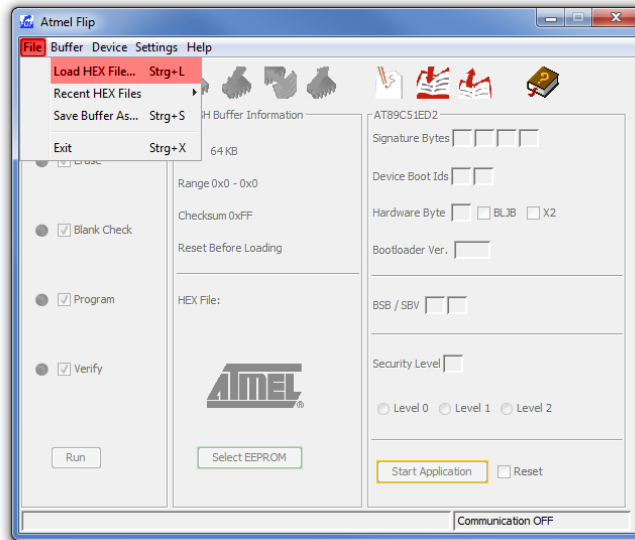

- Click on the usb cable button and open the RS232 connection.

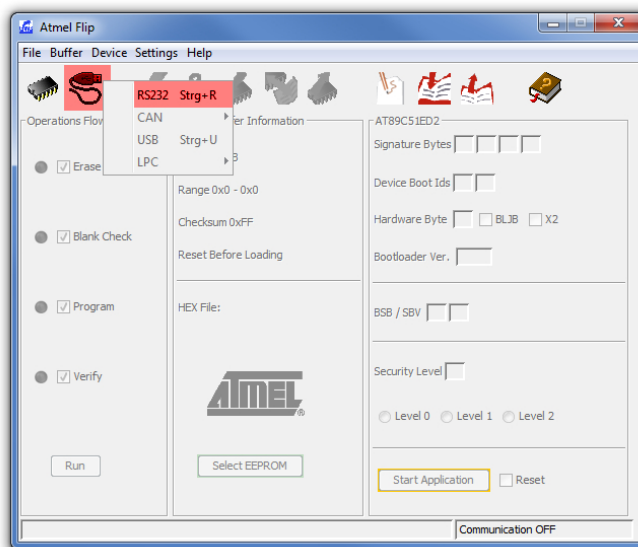


- Choose your **Com Port**, select **Baudrate 9600** and click **Connect**.

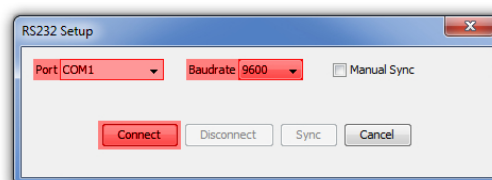


Programming

- Check the green areas again to make sure that all settings have been accepted.
- If the settings correct, click on the “Run” button.

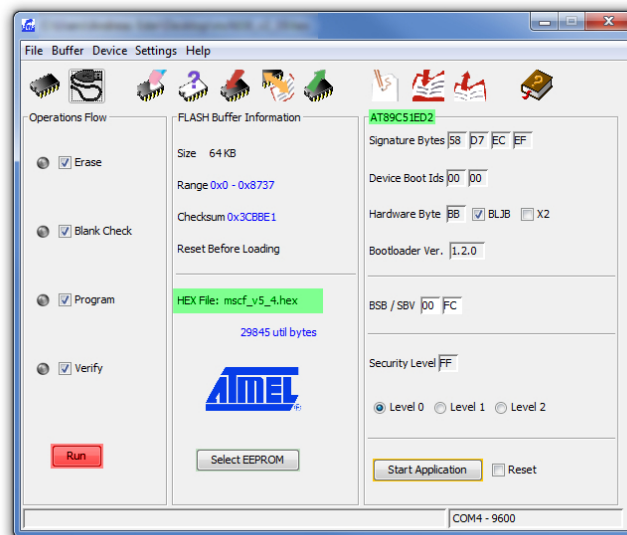

- If all the lamps light up green, programming is complete.

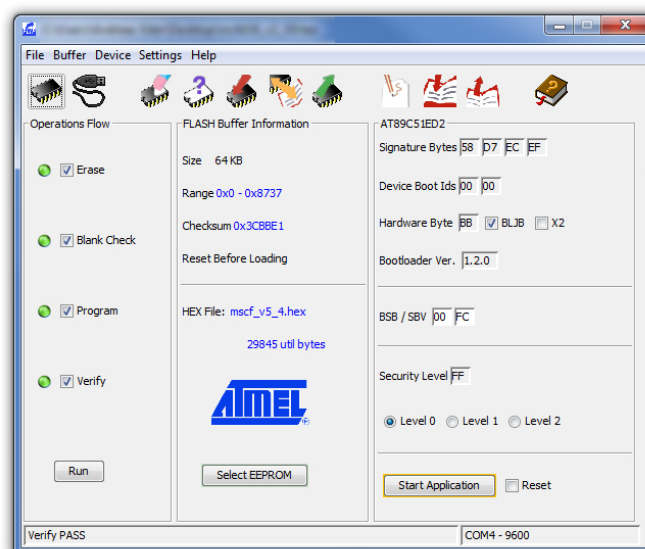

The MSCF-16 CPU Firmware is now updated
Do not forget to remove the jumper from the 2-pin connector