



# **Virtual Phone Guide**

**Palm OS® Developer Suite**

Written by Brian Maas

Technical assistance from Yann Cheri, Bertrand Aygon, Sylvain Balerin, and Eric Fabre.

Copyright © 2003, PalmSource, Inc. and its affiliates. All rights reserved. This technical documentation contains confidential and proprietary information of PalmSource, Inc. ("PalmSource"), and is provided to the licensee ("you") under the terms of a Nondisclosure Agreement, Product Development Kit license, Software Development Kit license or similar agreement between you and PalmSource. You must use commercially reasonable efforts to maintain the confidentiality of this technical documentation. You may print and copy this technical documentation solely for the permitted uses specified in your agreement with PalmSource. In addition, you may make up to two (2) copies of this technical documentation for archival and backup purposes. All copies of this technical documentation remain the property of PalmSource, and you agree to return or destroy them at PalmSource's written request. Except for the foregoing or as authorized in your agreement with PalmSource, you may not copy or distribute any part of this technical documentation in any form or by any means without express written consent from PalmSource, Inc., and you may not modify this technical documentation or make any derivative work of it (such as a translation, localization, transformation or adaptation) without express written consent from PalmSource.

PalmSource, Inc. reserves the right to revise this technical documentation from time to time, and is not obligated to notify you of any revisions.

THIS TECHNICAL DOCUMENTATION IS PROVIDED ON AN "AS IS" BASIS. NEITHER PALMSOURCE NOR ITS SUPPLIERS MAKES, AND EACH OF THEM EXPRESSLY EXCLUDES AND DISCLAIMS TO THE FULL EXTENT ALLOWED BY APPLICABLE LAW, ANY REPRESENTATIONS OR WARRANTIES REGARDING THIS TECHNICAL DOCUMENTATION, WHETHER EXPRESS, IMPLIED OR STATUTORY, INCLUDING WITHOUT LIMITATION ANY WARRANTIES IMPLIED BY ANY COURSE OF DEALING OR COURSE OF PERFORMANCE AND ANY WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, NONINFRINGEMENT, ACCURACY, AND SATISFACTORY QUALITY. PALMSOURCE AND ITS SUPPLIERS MAKE NO REPRESENTATIONS OR WARRANTIES THAT THIS TECHNICAL DOCUMENTATION IS FREE OF ERRORS OR IS SUITABLE FOR YOUR USE. TO THE FULL EXTENT ALLOWED BY APPLICABLE LAW, PALMSOURCE, INC. ALSO EXCLUDES FOR ITSELF AND ITS SUPPLIERS ANY LIABILITY, WHETHER BASED IN CONTRACT OR TORT (INCLUDING NEGLIGENCE), FOR DIRECT, INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, EXEMPLARY OR PUNITIVE DAMAGES OF ANY KIND ARISING OUT OF OR IN ANY WAY RELATED TO THIS TECHNICAL DOCUMENTATION, INCLUDING WITHOUT LIMITATION DAMAGES FOR LOST REVENUE OR PROFITS, LOST BUSINESS, LOST GOODWILL, LOST INFORMATION OR DATA, BUSINESS INTERRUPTION, SERVICES STOPPAGE, IMPAIRMENT OF OTHER GOODS, COSTS OF PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES, OR OTHER FINANCIAL LOSS, EVEN IF PALMSOURCE, INC. OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR IF SUCH DAMAGES COULD HAVE BEEN REASONABLY FORESEEN.

PalmSource, the PalmSource logo, BeOS, Graffiti, HandFAX, HandMAIL, HandPHONE, HandSTAMP, HandWEB, HotSync, the HotSync logo, iMessenger, MultiMail, MyPalm, Palm, the Palm logo, the Palm trade dress, Palm Computing, Palm OS, Palm Powered, PalmConnect, PalmGear, PalmGlove, PalmModem, Palm Pack, PalmPak, PalmPix, PalmPower, PalmPrint, Palm.Net, Palm Reader, Palm Talk, Simply Palm and ThinAir are trademarks of PalmSource, Inc. or its affiliates. All other product and brand names may be trademarks or registered trademarks of their respective owners.

IF THIS TECHNICAL DOCUMENTATION IS PROVIDED ON A COMPACT DISC, THE SOFTWARE AND OTHER DOCUMENTATION ON THE COMPACT DISC ARE SUBJECT TO THE LICENSE AGREEMENTS ACCOMPANYING THE SOFTWARE AND OTHER DOCUMENTATION.

*Virtual Phone Guide*

Document Number 3128-002

June 23, 2004

For the latest version of this document, visit

<http://www.palmos.com/dev/support/docs/>.

PalmSource, Inc.

1240 Crossman Avenue

Sunnyvale, CA 94089

USA

[www.palmsource.com](http://www.palmsource.com)

# Table of Contents

---

<b>About This Book</b>	<b>v</b>
What This Book Contains . . . . .	.v
Related Information. . . . .	.v
Additional Resources . . . . .	vi
 <b>1 Introducing Virtual Phone</b>	 <b>1</b>
What Virtual Phone Can Do for You. . . . .	.1
About Virtual Phone . . . . .	.2
What Virtual Phone Does . . . . .	.2
What Virtual Phone Does Not Do. . . . .	.2
Virtual Phone Background Information . . . . .	.2
Virtual Phone Overview . . . . .	.3
Configuration Files . . . . .	.3
SMS Message Files . . . . .	.4
AT Command Log Files . . . . .	.4
Phone Book Files . . . . .	.4
Configuration Files Summary . . . . .	.5
 <b>2 Getting Started</b>	 <b>7</b>
Configuring Palm OS Simulator . . . . .	.7
Configuring the Phone Preferences . . . . .	.9
 <b>3 Using Virtual Phone</b>	 <b>13</b>
Virtual Phone Window . . . . .	13
File Menu . . . . .	14
Edit Menu. . . . .	14
View Menu . . . . .	14
Tools Menu . . . . .	15
Service Configuration Dialog Box. . . . .	16
General Tab . . . . .	17
Phone Settings. . . . .	18
Power . . . . .	18
Sound . . . . .	19
Network Tab . . . . .	19

---

Networks . . . . .	20
Network Parameters . . . . .	24
Phone Books Tab . . . . .	26
Phone Books . . . . .	27
Security Tab . . . . .	28
SIM . . . . .	29
SMS Tab . . . . .	31
SIM Tab . . . . .	34
Speech Tab . . . . .	35
Response Preferences Dialog Box . . . . .	39
Connection Setup Dialog Box . . . . .	45
Fixing Connection Problems . . . . .	46
Speech Calls Dialog Box . . . . .	46
Short Message Dialog Box . . . . .	49
Encode/Decode an SMS Tab . . . . .	50
SMS Center . . . . .	50
SMS Storage Tab . . . . .	51
Messages . . . . .	52
Sent SMS History Tab . . . . .	53
Messages . . . . .	54

## **A Log and Database Files 65**

Configuration Files . . . . .	56
Application Configuration File - VAppCfg.db. . . . .	56
VAppCfg.db . . . . .	57
Available Network File - AvailableNwk.db . . . . .	60
AvailableNwk.db . . . . .	60
Phone Book Databases . . . . .	61
Phone Book Database Organization . . . . .	61
SMS Files . . . . .	61
SmsStore.db File . . . . .	63
SmsStoreSend.db File. . . . .	64
Log File . . . . .	64
VAppATLog.log . . . . .	64

## **Index 65**

# About This Book

---

Virtual Phone is a development tool that can help you test Palm OS® applications that communicate with a mobile telephone. Virtual Phone is a part of the Palm OS Cobalt SDK.

*Virtual Phone Guide* will help you understand how to use Virtual Phone with Palm OS Simulator to test your telephony applications. This introduction discusses what materials are included in this document and what conventions are used.

## What This Book Contains

- [Chapter 1, “Introducing Virtual Phone,”](#) on page 1  
This chapter introduces you to Virtual Phone concepts and provides you with an overview of Virtual Phone.
- [Chapter 2, “Getting Started,”](#) on page 7  
This chapter helps you setup Virtual Phone and configure it to work with Palm OS Simulator.
- [Chapter 3, “Using Virtual Phone,”](#) on page 13  
This chapter describes how to use Virtual Phone to test Palm™ applications which are written to communicate with mobile telephones.
- [Appendix A, “Log and Database Files,”](#) on page 55  
This appendix describes the log files and databases that are used with Virtual Phone.

## Related Information

- *Exploring Palm OS: Telephony and SMS*  
Wherever appropriate, *Virtual Phone Guide* makes reference to functions and constants described in *Exploring Palm OS: Telephony and SMS*. You can use this information to relate the Telephony Manager services to the Virtual Phone services.
- *Palm OS Simulator Guide*  
You can learn about Palm OS Simulator in this manual.

## Additional Resources

- Documentation

PalmSource publishes its latest versions of this and other documents for Palm OS developers at

<http://www.palmos.com/dev/support/docs/>

- Training

PalmSource and its partners host training classes for Palm OS developers. For topics and schedules, check

<http://www.palmos.com/dev/training>

- Knowledge Base

The Knowledge Base is a fast, web-based database of technical information. Search for frequently asked questions (FAQs), sample code, white papers, and the development documentation at

<http://www.palmos.com/dev/support/kb/>

# Introducing Virtual Phone

---

Virtual Phone is a tool which simulates a mobile phone. Virtual Phone can help you develop and test applications which use the Telephony Manager API. Virtual Phone recognizes Telephony Manager AT commands and responds exactly the same as a mobile phone. Virtual Phone is also capable of simulating events like incoming voice calls and SMS messages.

## What Virtual Phone Can Do for You

- Virtual Phone provides developers with a fast and simple tool for implementing, debugging, and testing a telephony application during the initial development stages.
- Virtual Phone reduces debugging and testing time for telephony applications which can be a lengthy process when using a real cellular phone.
- Virtual Phone eliminates delays due to slow phone device answer time and delays in wireless connections.
- Virtual Phone eliminates costs associated with establishing a real connection in order to test an outgoing or incoming SMS message. These costs are prohibitive.
- Virtual Phone provides an intermediate solution before final testing with a real phone.

## About Virtual Phone

Virtual Phone is not intended to test the different phone drivers that can be used to communicate with telephones. It is designed to test applications which communicate with a mobile telephone. Virtual Phone is based upon the functioning of a standard GSM default phone driver. This implies that any functions not supported by a standard GSM phone driver are not supported by Virtual Phone.

### What Virtual Phone Does

Virtual Phone supports all the services offered by the Telephony Manager.

Virtual Phone considers the state of the telephone when performing some operations. For example, a reduced set of operations can be performed on Virtual Phone if the **Security State** is not set to **Ready**.

### What Virtual Phone Does Not Do

Virtual Phone does not simulate automatic changes in the state of the telephone such as fluctuations in the network level or progressive drain of the battery. These state parameters can be manually changed in the configuration panel.

## Virtual Phone Background Information

Virtual Phone simulates a standard mobile telephone working under a Global System for Mobile Communications (GSM) Network.

When working with Virtual Phone, you should understand the following background information:

- Telecommunication standards

The European Telecommunication Standards Institute (ETSI) has established the European Telecommunication Standards (ETS) which contains a series of attention (AT) commands recognized by a mobile phone. It is assumed that you are aware of these standards. For information on these standards, see *GSM Technical Specification 07.07 Reference TS/SMG-040707Q* and *GSM Technical Specification 07.05: SMS AT Commands*.



- **Telephony Manager**

The Palm OS<sup>®</sup> provides the Telephony Manager, which programmers can use to write applications that interact with telephony services. For information about the Telephony Manager, see the Telephony Manager chapter in *Exploring Palm OS: Telephony and SMS*.

- **Palm OS Simulator**

You can use Palm OS Simulator to test your applications. For information on Palm OS Simulator, see *Palm OS Simulator Guide*.

Virtual Phone communicates with Palm OS Simulator and processes AT commands issued by applications running under the Palm OS. Processing includes analyzing AT commands sent from the Palm OS Simulator to the Virtual Phone, forwarding commands to the appropriate Service (Network, Security, etc.) and generating both AT command replies and unsolicited events (for example, RING . . .). Virtual Phone logs and saves exchanged AT commands and configuration data.

## Virtual Phone Overview

Virtual Phone requires several ASCII format text files, which use the standard INI file format. Virtual Phone will create these files if they do not already exist.

There are two configuration files, two SMS message files and one AT command log file. Virtual Phone also uses the eleven ETSI standard phone book files.

### Configuration Files

The configuration files, `VPAppCfg.db` and `AvailableNwk.db`, store configuration and network data:

- The configuration file `VPAppCfg.db` stores configuration data relevant to Virtual Phone's Configuration, Information, Speech Call, Network, Phone Book, Security, Communication and Short Message Services (SMS) settings.
- The configuration file `AvailableNwk.db` stores the list of networks, their IDs, and names.

## SMS Message Files

Two SMS files, `SmsStore.db` and `SmsSentStore.db`, store SMS messages. `SmsStore` contains SMS messages that Virtual Phone has received or sent; `SmsSentStore` contains messages that Virtual Phone has sent to the network.

## AT Command Log Files

AT commands are stored in the `VPAppATLog.log` file. This log file is created to save all the AT commands exchanged between Virtual Phone and Palm OS Simulator. To save the contents of the log file, you should rename it after quitting Virtual Phone. The next time you use Virtual Phone, it will overwrite the `VPAppATLog.log` file. This file is locked and inaccessible during Virtual Phone execution.

The file `VPMainLog.txt` is used for logging the results of the AT commands. Note that this file is updated only when **View > Disable Log** is unchecked and when the Virtual Phone main log window is full.

## Phone Book Files

Virtual Phone supports the ETSI standard phone book files.

---

**NOTE:** Virtual Phone uses the `PhbLD.db`, `PhbMC.db`, and `PhbRC.db` files, but does not update them using call features. You can modify the content of these files using any text editor.

---

- `PhbDC.db` - Mobile Equipment (ME) dialed calls list
- `PhbEN.db` - SIM or ME emergency number
- `PhbFD.db` - Fixed phone book
- `PhbLD.db` - Last dialed list
- `PhbMC.db` - ME missed calls list (received calls that were unanswered)
- `PhbME.db` - Phone phone book
- `PhbMT.db` - Combined ME and SIM phone book
- `PhbON.db` - SIM or ME own numbers (MSISDNs) list

- PhbRC.db - ME received calls list
- PhbSM.db - SIM phone book
- PhbTA.db - Terminal Adapter (TA) phone book

The phone book files all have the same format, which consists of an index number, name, and phone number.

### Configuration Files Summary

All configuration files, phone book files, and log files are created in the directory where Virtual Phone is executed. As a result, only one version of Virtual Phone can be executed from the same directory.

You will need to use an editor (for example, Notepad) when you edit the files AvailableNwk.db and the eleven phone book files.

We strongly recommend that you keep a back-up copy of these files for security and recovery reasons.

We do not recommend editing the VPAppCfg.db file directly, but you may access configuration variables without using Virtual Phone's developer interface. For data elements displayed on Virtual Phone's screens, this book describes the corresponding elements in the appropriate database file. This information is provided in order to help you control Virtual Phone's behavior, which is directly controlled by these files.

---

**WARNING!** Virtual Phone creates databases in the directory that it is running and writes and reads from them constantly. For this reason, you cannot simultaneously run two instances of Virtual Phone from the same directory. This will cause conflicts during file access.

---

## Introducing Virtual Phone

*Virtual Phone Overview*

---

# Getting Started

---

Before using Virtual Phone, you need to configure Palm OS® Simulator to work with Virtual Phone. This chapter describes how to get started.

<a href="#">Configuring Palm OS Simulator</a> . . . . .	7
<a href="#">Configuring the Phone Preferences</a> . . . . .	9

## Configuring Palm OS Simulator

Palm OS Simulator is a tool that you can use to test Palm OS applications. Palm OS Simulator includes all of the Palm OS Cobalt system code, compiled to run on Windows.

The Palm OS Simulator main window looks like the display that runs on a Palm Powered™ device. However, as a Windows-based application, Palm OS Simulator supports many standard Windows-based user interaction techniques. You can use your mouse to perform actions that you perform with the stylus on handheld devices, and you can use menus to access Palm OS Simulator functions.


In order to configure Palm OS Simulator to work with Virtual Phone, right-click the Palm OS Simulator window to display the pop-up menu. Then select **Settings > Communication > Communication Ports**, as shown in [Figure 2.1](#) on page 8.

## Getting Started

### Configuring Palm OS Simulator


---

**Figure 2.1** Configuring Palm OS Simulator

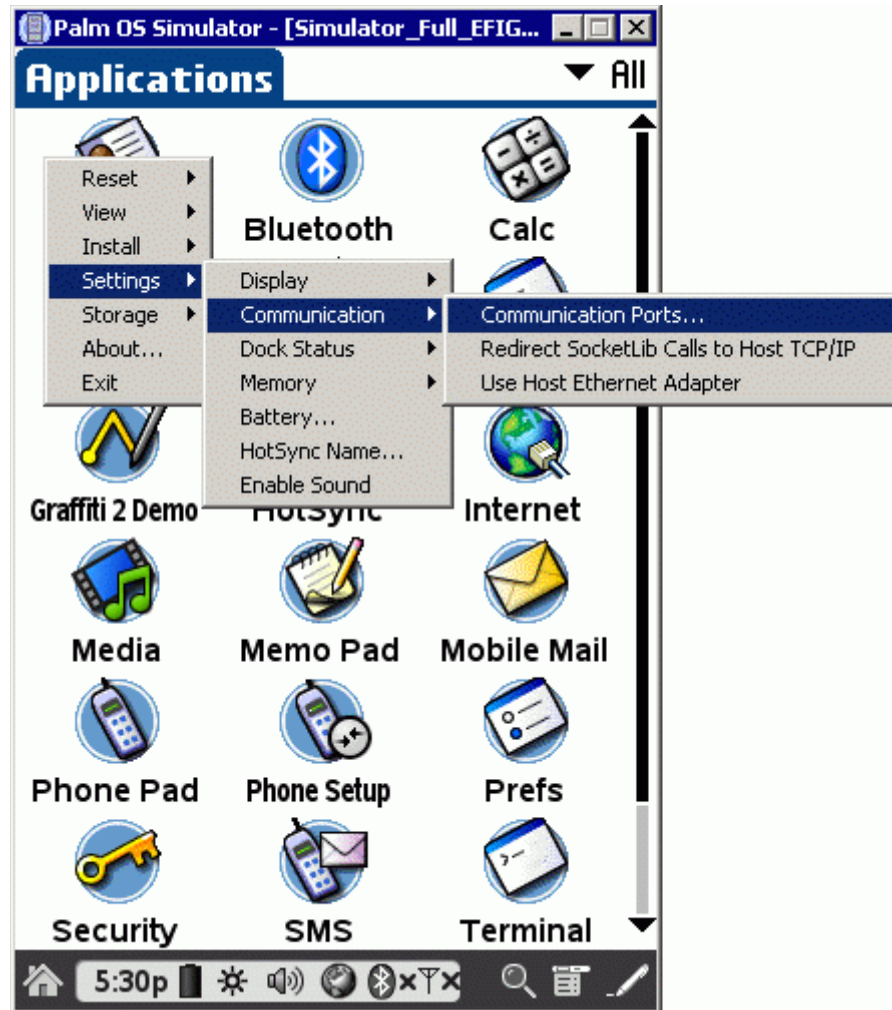

When you select **Settings > Communication > Communication Ports**, the Communication Ports dialog box opens, as shown in [Figure 2.2](#) on page 9.

**Figure 2.2 Palm OS Simulator Communication Ports dialog box**

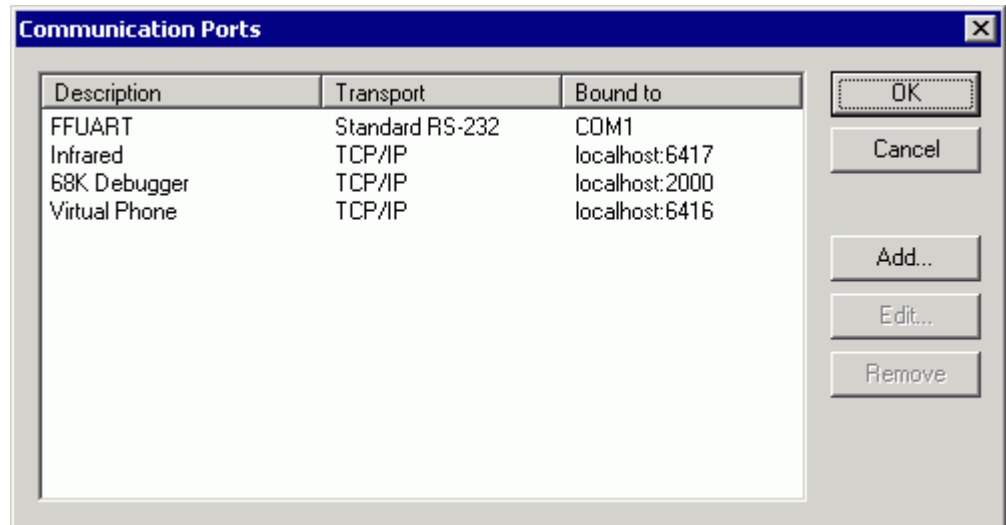

Use the Communication Ports dialog box to configure Palm OS Simulator's communication parameters. These parameters must correspond to Virtual Phone's parameters in order to establish communication between the two applications (see "[Tools Menu](#)" on page 15 and "[Connection Setup Dialog Box](#)" on page 45 for more information).

Virtual Phone works best if you select **TCP/IP** as the Transport and enter `localhost:6416` as the "Bound to" port. See "[Connection Setup Dialog Box](#)" on page 45 for more information about setting the Virtual Phone port number.

## Configuring the Phone Preferences

To verify that the Palm OS Simulator is configured to communicate with a GSM Phone, first open Virtual Phone and click the **On** button in Virtual Phone's toolbar.


Next, tap the **Phone Setup** application on Palm OS Simulator, shown in [Figure 2.3](#).

## Getting Started

### *Configuring the Phone Preferences*

---


**Figure 2.3** Tap the Phone Setup application

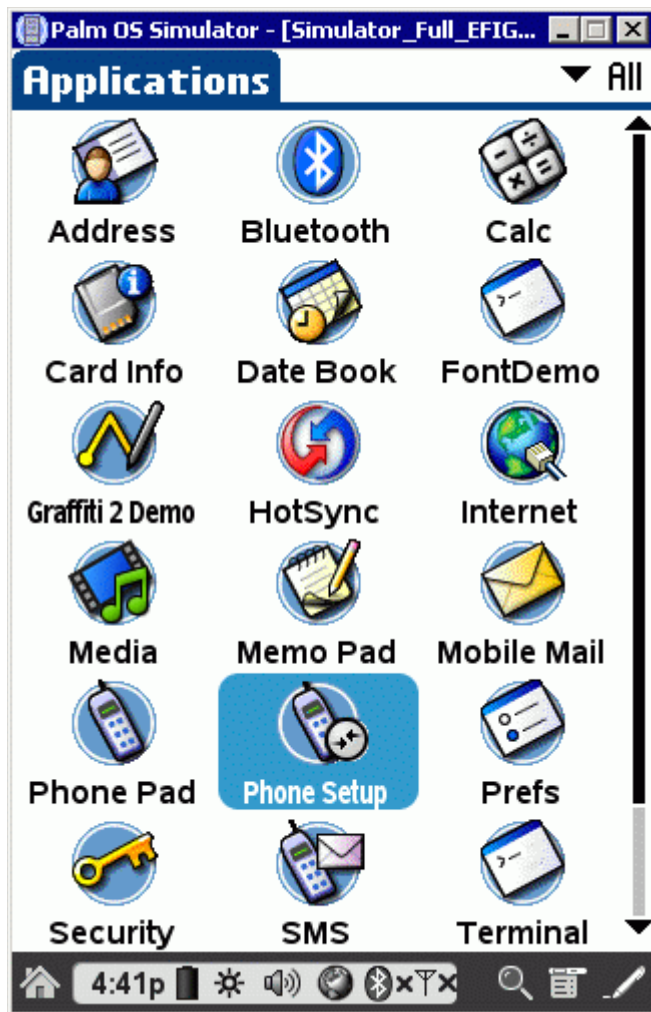

The Phone Setup application opens, as shown in [Figure 2.4](#).



**Figure 2.4** Phone Setup application

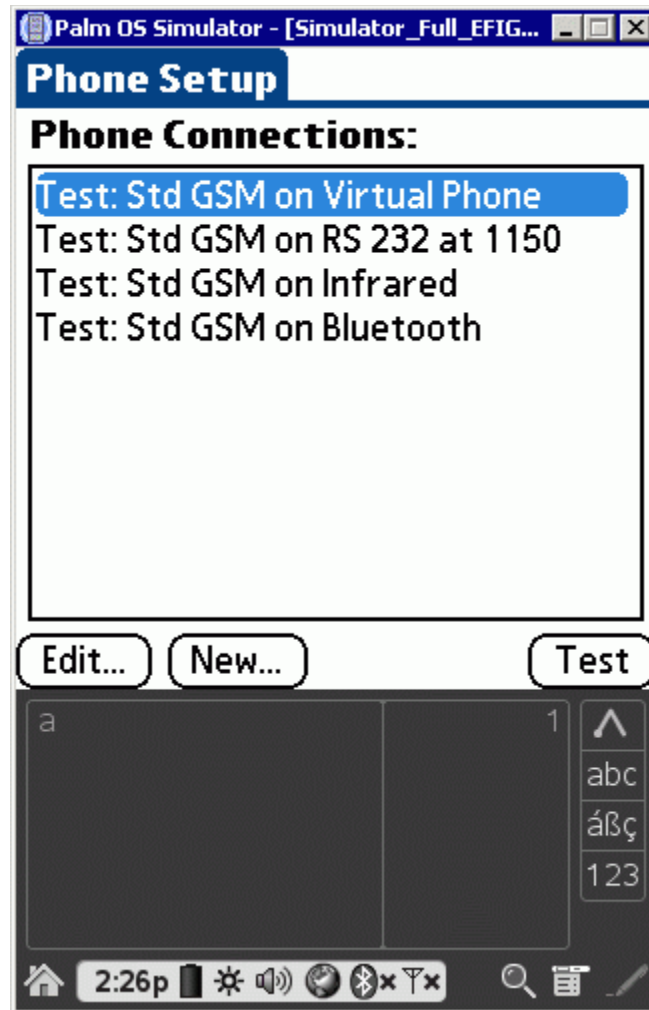

Select **Test: Std GSM on Virtual Phone** to connect Palm OS Simulator with Virtual Phone. Tap **Test** to test the connection.


You should see a **Test Result** dialog similar to the one shown in [Figure 2.5](#).

## Getting Started

### *Configuring the Phone Preferences*

---

**Figure 2.5** Phone connection Test Result dialog

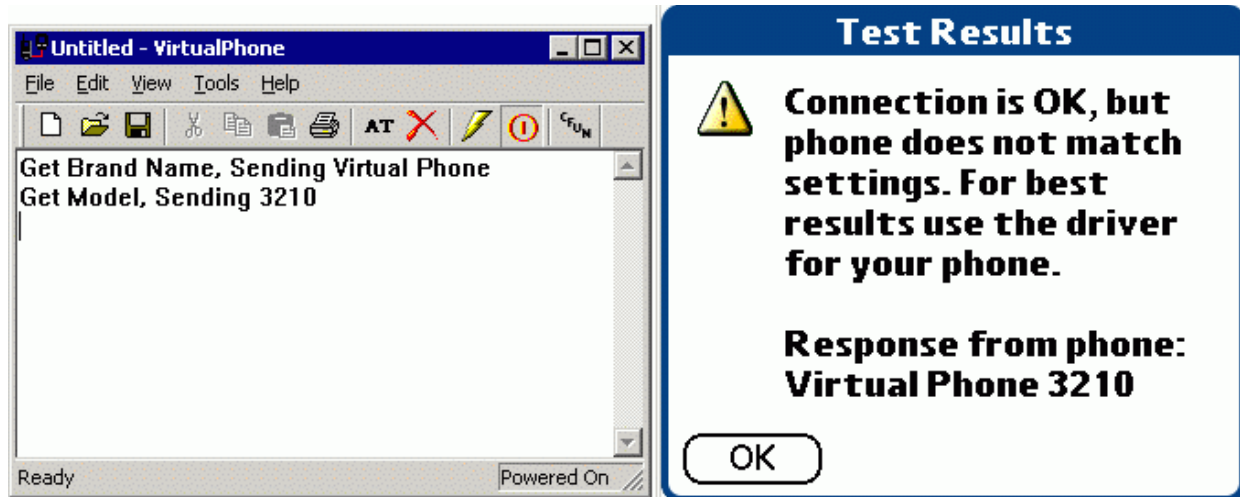

# Using Virtual Phone

---

Virtual Phone is a standard Windows NT/2000 application. This application displays a log of AT Commands that correspond to the Telephony Manager functions which were called by the application executing in Palm OS® Simulator.

Every time a Palm OS application calls a Telephony Manager function, the Telephony Manager issues one or more AT commands which are then sent to Virtual Phone. When Virtual Phone receives these AT commands it responds exactly like a real phone.

This chapter explains how you can use the Virtual Phone user interface to test your telephony applications.

- [“Virtual Phone Window”](#)
- [“Service Configuration Dialog Box”](#) on page 16
- [“Response Preferences Dialog Box”](#) on page 39
- [“Connection Setup Dialog Box”](#) on page 45
- [“Speech Calls Dialog Box”](#) on page 46
- [“Short Message Dialog Box”](#) on page 49

## Virtual Phone Window


The Virtual Phone window, as shown in [Figure 3.1](#), displays the text equivalent of the original Telephony Manager function, while the actual AT commands or traces are stored in the file `VPAppATLog.log`.

## Using Virtual Phone

### *Virtual Phone Window*

---

**Figure 3.1 Virtual Phone Window**

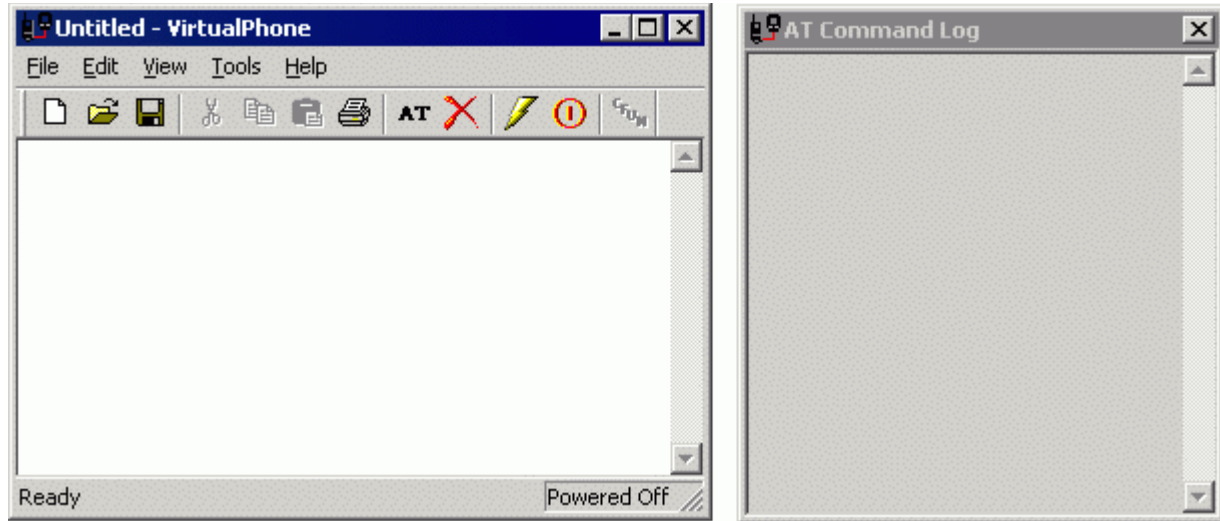

This window displays the Telephony Manager functions that are called and the results of the calls.

### **File Menu**

Select **File** to print the contents the Virtual Phone window or to save the contents to a file.

### **Edit Menu**

Select **Edit** to manipulate the contents of the Virtual Phone window (**Cut**, **Copy**, **Paste**, etc.). Select **Edit > Clear Log Windows** to delete the text in the log windows.

### **View Menu**

Select **View** to change the characteristics of the Virtual Phone window.

- **Toolbar**

Select to display the command icons in the toolbar.

- **Status Bar**


Select to show the status bar at the bottom of the window.

- **AT Command Log**  
Select to open the AT Command Log window.
- **Disable Log**  
Select to disable logging.

## Tools Menu

The **Tools** menu, shown in [Figure 3.2](#), provides access to several services.

**Figure 3.2 Virtual Phone Tools Menu**

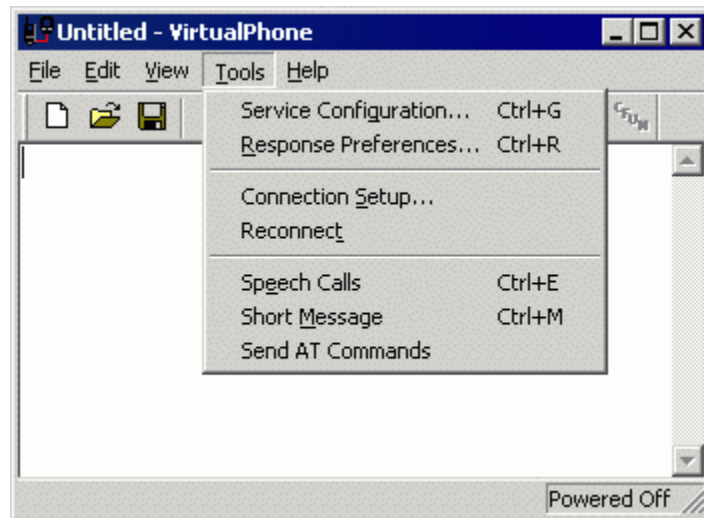

- **Service Configuration**  
Select to open the Service Configuration dialog box to establish and display the basic services of Virtual Phone. See "[Service Configuration Dialog Box](#)" on page 16 for more information.
- **Responses Preferences**  
Select to define the Virtual Phone services, error numbers, and messages. See "[Response Preferences Dialog Box](#)" on page 39 for more information.

## Using Virtual Phone

### *Service Configuration Dialog Box*

---

- **Connection Setup**

Select to specify the configuration of communication parameters. See “[Connection Setup Dialog Box](#)” on page 45 for more information.

- **Reconnect**

Select to connect Virtual Phone to Palm OS Simulator using the current configuration.

- **Speech Calls**

Select to display voice call information. See “[Speech Calls Dialog Box](#)” on page 46 for more information.

- **Short Message**

Select to open the Short Message dialog box. Use the Short Message dialog box to manage sent and received SMS messages, and to create SMS messages with all configurable options established in the GSM standard. See “[Short Message Dialog Box](#)” on page 49 for more information.

To view the SMS settings, open the SMS tab of the **Service Configuration** dialog box. See “[SMS Tab](#)” on page 31 for information on the SMS tab of the Service Configuration dialog box.

- **Send AT Commands**

Select to open a dialog box where you can enter AT unsolicited results that you want to send.

## Service Configuration Dialog Box

Use the Service Configuration dialog box to set most of the features of Virtual Phone. To open the Service Configuration dialog box, select **Tools > Service Configuration**. The Service Configuration dialog box displays a notebook control with the following tabs:


- [General Tab](#)
- [Network Tab](#)
- [Phone Books Tab](#)
- [Security Tab](#)
- [SMS Tab](#)

- [SIM Tab](#)
- [Speech Tab](#)

## General Tab

The **General Tab**, shown in [Figure 3.3](#), provides access to basic Virtual Phone configuration parameters.

**Figure 3.3** Service Configuration's General Tab

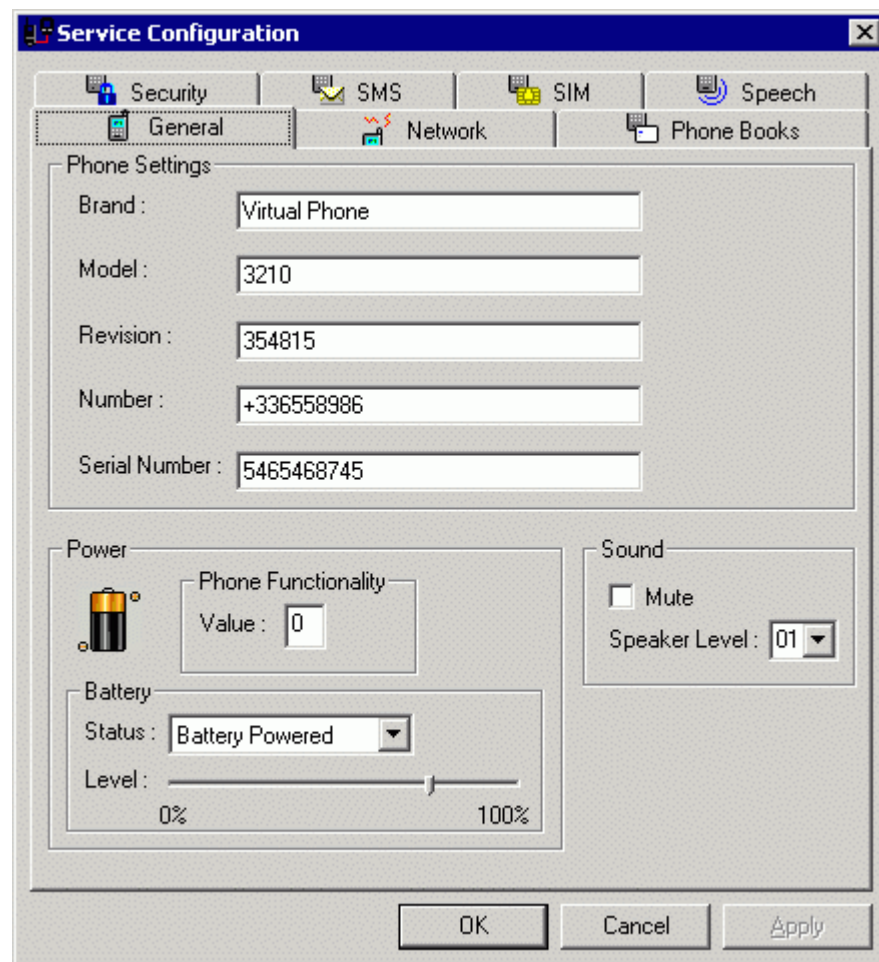

Virtual Phone stores these values in the `VPAppcfg.db` file, in the `INF` section. See the Information, Power, and Configuration Services in *Exploring Palm OS: Telephony and SMS* for further details.

## Using Virtual Phone

### Service Configuration Dialog Box

---

#### Phone Settings

Enter the information for the phone you want to emulate.

- **Brand**

Enter any name (limited to 30 alphanumeric characters). Use the function `TelInfGetInformation` to access this information. See `VPAppCfg.db` file, INF section, variable name `Brand` and the `TelInfGetInformation` function in *Exploring Palm OS: Telephony and SMS*.

- **Model**

Enter any model number (limited to 30 alphanumeric characters). Use the function `TelInfGetInformation` to access this information. See `VPAppCfg.db` file, INF section, variable name `Model` and the `TelInfGetInformation` function in *Exploring Palm OS: Telephony and SMS*.

- **Revision**

Enter the revision number (limited to 30 alphanumeric characters). Use the function `TelInfGetInformation` to access this information. See `VPAppCfg.db` file, INF section, variable name `Revision` and the `TelInfGetInformation` function in *Exploring Palm OS: Telephony and SMS*.

- **Number**

Enter the Phone Number (limited to 30 alphanumeric characters) of the “virtual” mobile phone. See `VPAppCfg.db` file, CFG section, variable name `Smscenter` and the `TelCgfGetPhoneNumber` function in *Exploring Palm OS: Telephony and SMS*.

- **Serial Number**

Enter the serial number of the phone you are emulating.

#### Power

Enter the power information for the phone you are emulating.

- **Phone Functionality Value**

Enter a number indicating the phone functionality status as defined in ETSI standard (see `AT+CFUN` command).



- **Battery Status**

Enter the battery conditions you are testing.

- **Battery Powered**

Select to indicate that the battery is present and that the Battery Level setting should be taken into consideration.

- **Battery Not Powered**

Select to indicate that the battery is present but its power level is zero.

- **No Battery**

Select to indicate that no battery is present.

See `VPAppCfg.db` file, POW section, variable name `Stat`, and see `TelPowGetBatteryStatus` in *Exploring Palm OS: Telephony and SMS*.

- **Battery Level**

Select the battery range from 0% (for no power) to 100% (for full power). See `VPAppCfg.db` file, POW section, variable name `Level`. See `TelPowGetPowerLevel` in *Exploring Palm OS: Telephony and SMS*.

## **Sound**

Enter the sound information for the phone you are emulating.

- **Mute**

Select to indicate whether the telephone is muted.

- **Speaker Level**

Select to indicate the speaker volume on a scale of 1 to 10, with 1 being soft and 10 being loud.

## **Network Tab**

Use the **Network Tab**, shown in [Figure 3.4](#), to set properties to simulate network-oriented services, including authorized networks, forbidden networks, current network, signal strength, and search mode.

**Figure 3.4** Service Configuration's Network Tab

The screenshot shows the 'Service Configuration' dialog box with the 'Network' tab selected. The 'Current List' is set to 'Available Networks'. Below this is a table of available networks:

SimId	Id	Short Name	Name
1	20201	C-OTE	COSMOTE
2	20205	PAN	PANAFON
3	20210	TLSTET	TELESTET
4	20404	LIBTEL	LIBERTEL

Below the table, the 'State' is set to 'Available' and the 'ME Reg State' is set to '0 - Not Registered, ME Not sear'. The 'Network Parameters' section includes 'Search Mode' (Manual selected), 'Status' (0 - selected), 'Location' (Cell Id: 004D, Area Code: 00C3), and 'Network Registration Notification' (State: 2 - Network Reg. & Location Info). A 'Signal Strength' checkbox is checked, and the value is 15. A 'Send Notif.' button is present. At the bottom are 'OK', 'Cancel', and 'Apply' buttons.

Virtual phone stores these values in the `VPAppcfg.db` file in the `NWK` section. See the Telephony Network section in *Exploring Palm OS: Telephony and SMS* for further details.


### Networks

Specify the networks for your phone.

- **Current List**

Select a list of network from either the **Available Networks** list or the **Preferred Networks** list. Select **Modify List** to display the Network List Management dialog box, as shown in [Figure 3.5](#).

Figure 3.5 Network List Management Dialog Box

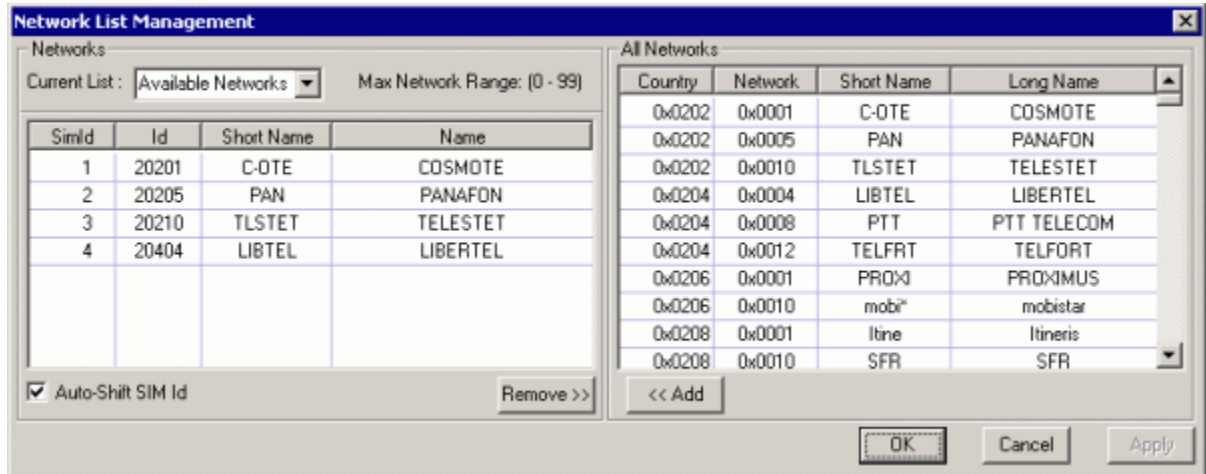

A network is defined by its **SimId**, **Id**, **Short Name** and **Name**. Virtual Phone stores these values in the AvailableNwk.db file. See AvailableNwk.db file, in the NWK section, variable name Num. See TelNwkGetNetworks in *Exploring Palm OS: Telephony and SMS*.

– **SimId**

The order number of the operator in the SIM available/preferred operator list.

– **Id**

This is a hexadecimal value five digits long. The first three digits represent the country code; the next two digits represent the network name. The normal numeric format is the GSM Location Area Identification number, which consists of a three-digit (BCD) country code plus a two-digit (BCD) network code.

See the AvailableNwk.db or PreferredNwk.db file, in the NWK section, variable name Id. See TelNwkGetNetworks in *Exploring Palm OS: Telephony and SMS*.

## Using Virtual Phone

### Service Configuration Dialog Box

---

- **Short Name**

An abbreviation of the **Name** with a maximum 8 alphanumeric characters. See the `AvailableNwk.db` or `PreferredNwk.db` file, in the NWK section, variable name `Sname`.

- **Name**

The normal maximum value for name is 16 alphanumeric characters. Some operators restrict this value to 6 or 8 characters, while some networks allow more than 16 characters for the long name. See the `AvailableNwk.db` or `PreferredNwk.db` file, in the NWK section, variable name `Lname`. See `TelNwkGetNetworks` in *Exploring Palm OS: Telephony and SMS*.

See `TelNwkGetNetworks` in *Exploring Palm OS: Telephony and SMS*.

- **State**

Select the state of the network that is selected in the table. There are four options:

- **Unknown**

Select this value if the network unknown (`Stat=0`).

- **Available**

Select this value if the selected network is available (`Stat=1`).

- **Current**

Select this value if the highlighted network is currently selected (`Stat=2`).

- **Forbidden**

Select this value if the network is unavailable for security reasons (`Stat=3`).

See the `AvailableNwk.db` or `PreferredNwk.db` file, in the NWK section, variable name `Stat`. See `TelNwkSelectNetwork` in the Telephony Manager chapter in *Exploring Palm OS: Telephony and SMS*.

- **ME Reg State**

Select the ME (Mobile Equipment, that is the GSM phone) network registration status.

- **1 - Registered**

Select this value if the highlighted network is registered to a provider (RegStat=1).

- **2 - Not Registered, ME Not searching**

Select this value if the network is not registered (RegStat=2).

- **3 - Registration Denied**

Select this value if the network is secured and registration is rejected (RegStat=3).

- **4 - Unknown**

Select this value if the network is not recognized by Virtual Phone (RegStat=4).

- **5 - Registered, Roaming**


Select this value if the network is registered as roaming (RegStat=5).

See VAppCfg.db file, in the NWK section, variable name RegStat. See TelNwkGetNetworkName in *Exploring Palm OS: Telephony and SMS*.

---

**NOTE:** There is only one `Current` network. If a network is set to `Current`, then the state of the former current is set to `Unknown`. Furthermore, you will not be able to save the settings of the Network Service if there is no current network. If you try to save the Network Serve settings when there is no current network, you will see this message:

---

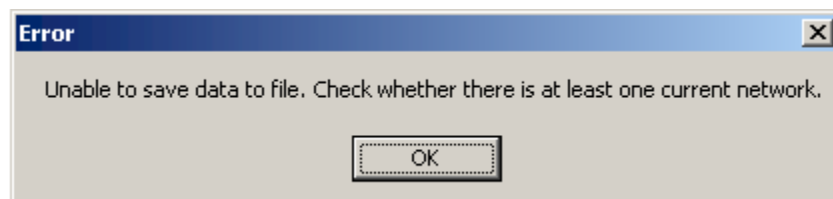

The list of available networks is stored in the file `AvailableNwk.db` and is accessible as an ASCII text file.

## Using Virtual Phone

### Service Configuration Dialog Box

---

#### Network Parameters

Set the parameters for the network you are emulating.

- **Search Mode**

Select how you want Virtual Phone to select a network.

- **Manual**

Select this value if you want Virtual Phone to manually select a network

- **Auto**

Select this value if you want Virtual Phone to automatically select a network.

See `VPAppCfg.db` file, in the NWK section, variable name `SearchMd`. See `TelNwkGetSearchMode` in *Exploring Palm OS: Telephony and SMS*. See `kTelNwkManualSearch` in *Exploring Palm OS: Telephony and SMS*.

- **Status**

Set the status for this network.

- **0 - Full**

- **1 - Limited**

- **2 - Normal**

- **Location**

Set the location information for the current cell and its area code.

- **Cell Id**

Enter the value of the current Cell. This value is a two-byte cell ID in hexadecimal format. See `VPAppCfg.db` file, in the NWK section, variable name `CellId`. See `TelNwkGetLocation` in *Exploring Palm OS: Telephony and SMS*.

- **Area Code**

Enter the value of the Cell's area code. This value is a two-byte location area code in hexadecimal format. See `VAppCfg.db` file, in the NWK section, variable name `AreaCd`. See `TelNwkGetLocation` in *Exploring Palm OS: Telephony and SMS*.

- **Network Registration Notification State**

Set the network registration notification state.

- **0 - None**

Select this value to disable the network registration unsolicited results code.

- **1 - Network Reg.**

Select this value to enable the network registration unsolicited results code.

- **2 - Network Reg. & Location Info**

Select this value to enable the network registration and location information unsolicited results code.

- **Send Notif. button**

Click to send a network registration notification. Note that if you modify the Cell ID or Area Code information, you should click **Apply** before clicking **Send Notif.**

- **Signal Strength**

Set the signal level you want to test.

- **Not detectable**

If checked, Virtual Phone will issue a 99 for Signal Strength. As specified in the GSM Technical Specification. See `VAppCfg.db` file, in the NWK section, variable name `SigLev`. See `TelNwkGetSignalLevel` in *Exploring Palm OS: Telephony and SMS*.


- **Entry field**

Enter a numeric value between 0 and 31, with 0 being no signal and 31 being the maximum signal strength. See `VAppCfg.db` file, in the NWK section, variable name `SigLev`. See `TelNwkGetSignalLevel` in *Exploring Palm OS: Telephony and SMS*.

## Phone Books Tab

Use the Phone Books tab, shown in [Figure 3.6](#), to display the list of all the stored phone book names and their associated phone numbers.

**Figure 3.6** Service Configuration's Phone Books Tab

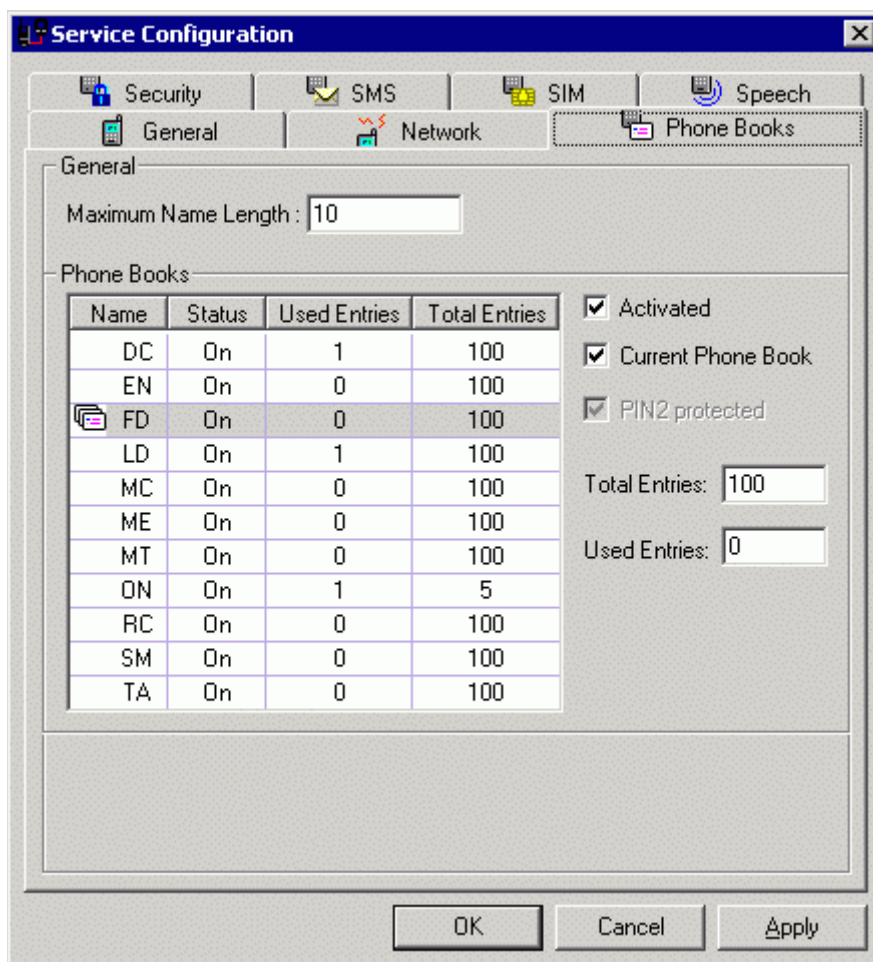



- **Maximum Name Length**

Enter the maximum length of a name associated to a phone number. A maximum of 30 characters is permitted for the name length.

See the `VPAppCfg.db` file in the PHB section, variable name `MaxNameLen`. See `TelPhbGetEntryMaxSizes` in *Exploring Palm OS: Telephony and SMS*.

## **Phone Books**

Display information about the stored phone books.

- **Activated**

Check to indicate that the phone book is present.

- **Current Phone Book**

The currently selected Phone Book is stored in the `VPAppCfg.db` file in the PHB section, variable name `Selbook`. See `VPAppCfg.db` file in the PHB section, variable name `Selbook` for the currently selected phone book. See `TelPhbGetSelectedPhonebook` in *Exploring Palm OS: Telephony and SMS*.

- **PIN2 protected**

As defined in the ETSI standard, the FD phonebook can be protected. Check to indicate that the FD phonebook is protected.

- **Total Entries**

Enter the maximum number of entries allowed in the phone book.

- **Used Entries**

Enter the number of entries used in the phonebook.

For all of the above see `TelPhbGetAvailablePhonebooks` in *Exploring Palm OS: Telephony and SMS*.

## Using Virtual Phone

### Service Configuration Dialog Box

---

## Security Tab

Use the **Security Tab**, shown in [Figure 3.7](#), to simulate a mobile phone's security system.

**Figure 3.7** Service Configuration's Security Tab

The screenshot shows the 'Service Configuration' dialog box with the 'Security' tab selected. The dialog has a title bar with a close button. Below the title bar are five tabs: 'General', 'Network', 'Phone Books', 'Security' (selected), and 'SMS'. The 'Security' tab is divided into three main sections: 'SIM', 'Phone', and 'Security Status'. The 'SIM' section contains fields for 'PIN Code 1' (0000), 'PIN Code 2' (0000), 'PUK Code 1' (00000000), and 'PUK Code 2' (00000000). It also has a 'Facility Lock' checkbox labeled 'Lock SIM Card' which is checked. The 'Phone' section contains fields for 'Phone Code' (0000) and 'Phone to First SIM Code' (0000). It has two 'Facility Lock' checkboxes: 'Lock Phone to SIM card' (unchecked) and 'Lock Phone to first inserted SIM card' (unchecked). The 'Security Status' section has a 'Ready' radio button (selected) and six other radio buttons: 'PIN1 expected', 'PIN2 expected', 'Phone to SIM expected', 'PUK1 expected', 'PUK2 expected', and 'Phone to First SIM expected'. At the bottom are 'OK', 'Cancel', and 'Apply' buttons.

The values entered and displayed here are stored in the `VPAppCfg.db` file in the `STY` section.

You can change the values of these codes using Telephony Manager functions or directly in this dialog box. To change an authentication code, see `TelStyChangeAuthenticationCode` in *Exploring Palm OS: Telephony and SMS*.

## **SIM**

Enter the security information for the SIM card.

- **PIN Code 1**

Enter the primary Personal Identification Number (PIN), between 4-digits and 8-digits long. See `VPAppCfg.db` file in the STY section, variable name `PIN1`. See `TelStyEnterAuthenticationCode` in *Exploring Palm OS: Telephony and SMS*.

- **Lock SIM Card**

Check to activate PIN1 security.

- **PIN Code 2**

Enter the secondary Personal Identification Number between, 4-digits and 8-digits long. See `VPAppCfg.db` file in the STY section, variable name `PIN2`. See `TelStyEnterAuthenticationCode` in *Exploring Palm OS: Telephony and SMS*.

- **PUK Code 1**

Enter the primary Personal Universal Key (PUK). This value is a mandatory 8-digits long. See `VPAppCfg.db` file in the STY section, variable name `PUK`. See `TelStyEnterAuthenticationCode` in *Exploring Palm OS: Telephony and SMS*.

- **PUK Code 2**

Enter the secondary Personal Universal Key (PUK). This value is a mandatory 8-digits long. See `VPAppCfg.db` file in the STY section, variable name `PUK2`. See `TelStyEnterAuthenticationCode` in *Exploring Palm OS: Telephony and SMS*.

- **Phone Code**

Enter the Phone to Subscriber Identification Module (SIM) code, between 4-digits and 8-digits long. See `VPAppCfg.db` file in the STY section, variable name `Phone`. See `TelStyChangeAuthenticationCode` in *Exploring Palm OS: Telephony and SMS*.

- **Lock Phone SIM Card**

Check to activate the Phone Code.

## Using Virtual Phone

### Service Configuration Dialog Box

---

- **Phone to First SIM Code**

Enter the Phone to first SIM card password.

- **Lock Phone to first inserted SIM Card**

Check to activate the Phone to First SIM Code.

- **Security State**

Enter the security state of the phone. See `VPAppCfg.db` file in the `STY` section, variable name `State`. See `TelStyGetAuthenticationState` in *Exploring Palm OS: Telephony and SMS*.

- **Ready**

Select this value if Virtual Phone is ready to receive AT commands. `State=0`.

In this state, Virtual Phone answers “Ready” to any `+CPIN?` command, and does not apply PIN Security before answering other AT commands.

See `VPAppCfg.db` file in the `STY` section, variable name `State`. See `kTelStyReady` in *Exploring Palm OS: Telephony and SMS*.

- **PIN1**

Select this value to indicate that Virtual Phone should expect a primary Personal Identification Number (PIN). `State=1`. See `VPAppCfg.db` file in the `STY` section, variable name `State`. See `kTelStyPin1CodeId` in *Exploring Palm OS: Telephony and SMS*.

- **PUK1**

Select this value to indicate that Virtual Phone should expect the primary Personal Universal Key (PUK). `State=3`. See `VPAppCfg.db` file in the `STY` section, variable name `State`. See `kTelStyPuk1CodeId` in *Exploring Palm OS: Telephony and SMS*.

- **Phone to SIM expected**

Select this value to indicate that Virtual Phone should expect the Phone to Subscriber Identification Module (SIM) code. `State=5`. See `VPAppCfg.db` file in the `STY` section, variable name `State`. See `kTelStyPhoneToSimCodeId` in *Exploring Palm OS: Telephony and SMS*.

– **PIN2**

Select this value to indicate that Virtual Phone should expect a secondary Personal Identification Number (PIN). State=2. See VPAppCfg.db file in the STY section, variable name State. See kTelStyPin2CodeId in *Exploring Palm OS: Telephony and SMS*.

– **PUK2**

Select this value to indicate that Virtual Phone should expect the secondary Personal Universal Key (PUK). State=4. See VPAppCfg.db file in the STY section, variable name State. See kTelStyPuk2CodeId in *Exploring Palm OS: Telephony and SMS*.

– **Phone to First SIM expected**

Select this value to indicate that Virtual Phone should expect the Phone to First SIM Key (PH-FSIM PIN).

## **SMS Tab**

Use the **SMS Tab** to set SMS features.

## Using Virtual Phone

### Service Configuration Dialog Box

---

**Figure 3.8** Service Configuration's SMS Tab

The screenshot shows the 'Service Configuration' dialog box with the 'SMS' tab selected. The dialog has a title bar with a close button. Below the title bar are several tabs: 'General', 'Network', 'Phone Books', 'Security', 'SMS' (selected), 'SIM', and 'Speech'. The 'SMS' tab contains the following fields and options:

- Phone Features:**
  - Call Center :
  - Max SMS Index :
- New Message Indications:**
  - Mode :
- Indication Mode according to SMS type:**
  - SMS Deliver :
  - SMS Status Report :

At the bottom of the dialog are three buttons: 'OK', 'Cancel', and 'Apply'.

The values entered and displayed here are stored in the `VPAppCfg.db` file in the SMS section (except for **Call Center** which is stored in the CFG section) and in the SMS (Short Message Services) files, `SmsStore.db` and `SmsStoreSend.db`.

- **Call Center**

Enter the phone's service center. See `VPAppCfg.db` file in the CFG section, variable name `SmsCenter`. See `TelCfgSetSmsCenter` in *Exploring Palm OS: Telephony and SMS*.

- **Max SMS Index**

Enter the maximum number of messages to display and store (maximum 500). See the `VPAppCfg.db` file in the SMS section, variable name `MaxEntries`. See `TelSmsGetMessageCount` in *Exploring Palm OS: Telephony and SMS*.

- **New Message Indications**

Select the mode for new messages:

- **0 - Always buffer unsolicited result codes**
- **1 - Discard unsolicited results when link is reserved**
- **2 - Buffer unsolicited results when link is reserved**
- **3 - Forward unsolicited result codes directly**

- **Indication Mode according to SMS type**

Select the **SMS Deliver** setting:

- **0 - No indications are routed**
- **1 - Memory location is routed**
- **2 - PDU is routed**

Select the **SMS Status Report** setting:

- **0 - No indications are routed**
- **1 - Memory location is routed**
- **2 - PDU is routed**

## Using Virtual Phone


### Service Configuration Dialog Box

---

## SIM Tab

Use the SIM tab to set SIM properties for the phone you are emulating.

**Figure 3.9 Service Configuration's SIM Tab**

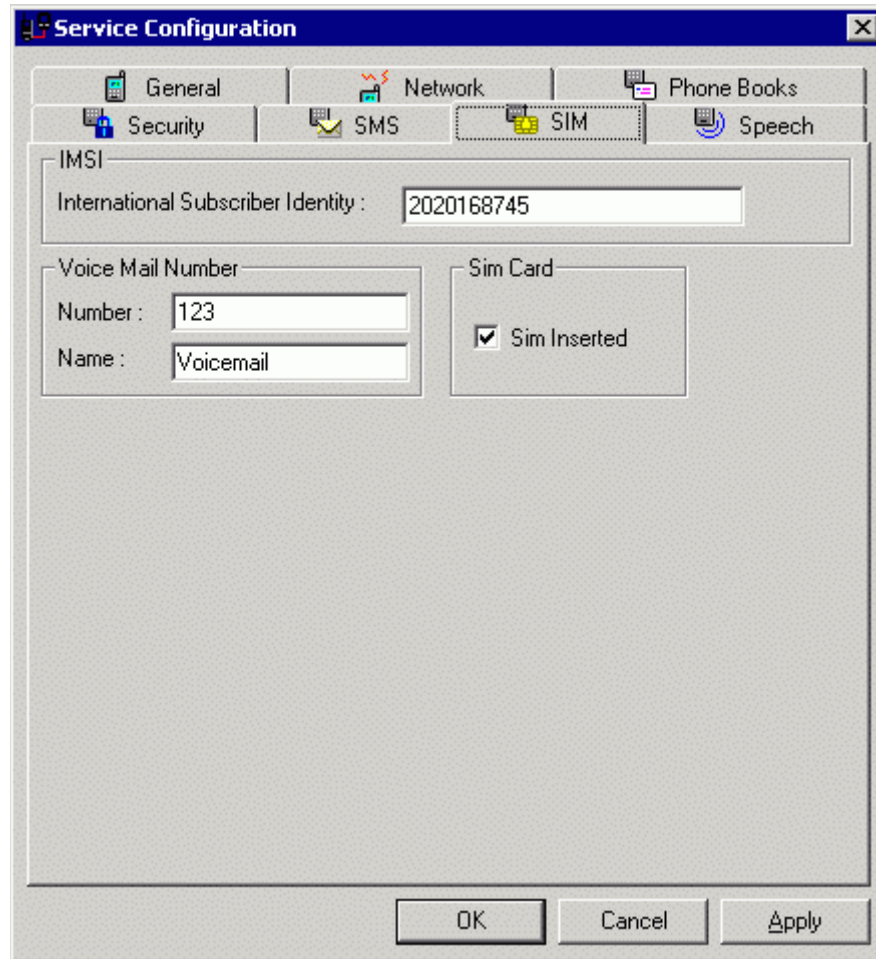

- **IMSI - International Subscriber Identity**

Enter the international mobile subscriber identity number corresponding to the SIM card.

- **Voice Mail Number**

Enter the voice mail number for the SIM card.



- **Voice Mail Name**

Enter the voice mail name for the SIM card.


- **Sim Card - Sim Inserted**

Select this setting to indicate whether the SIM card is in use for the emulation.

## Speech Tab

Use the Speech tab to set properties for speech calls.

**Figure 3.10 Service Configuration's Speech Tab**

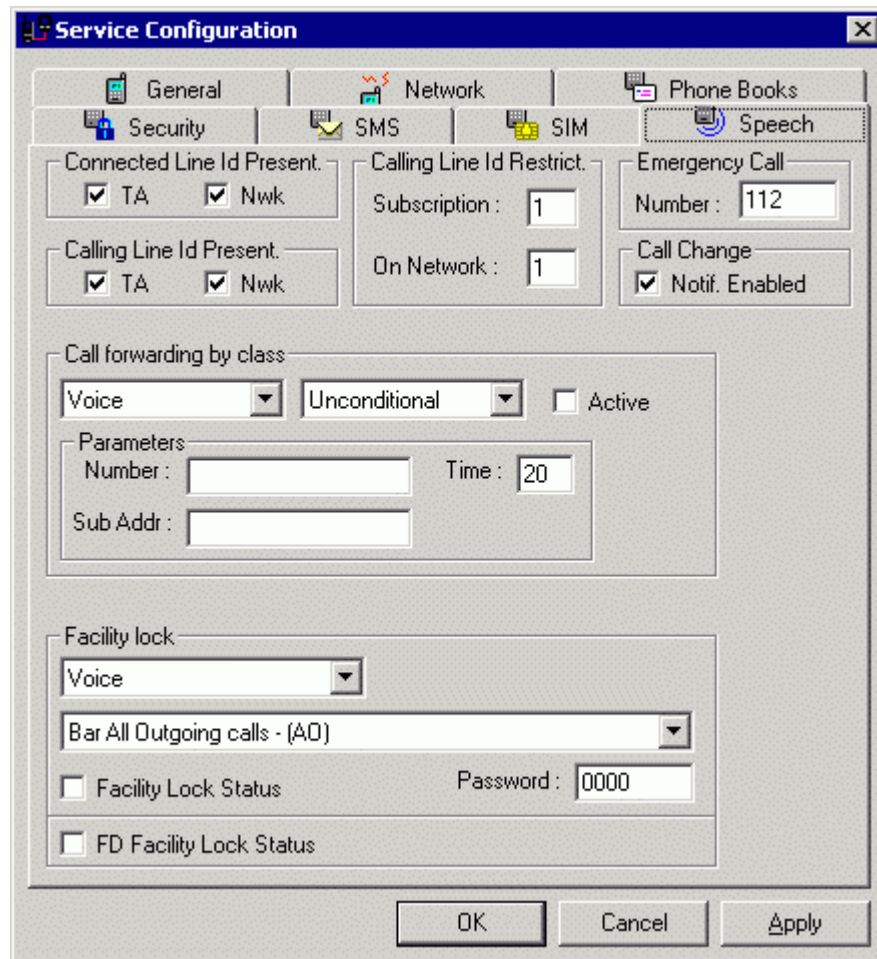

## Using Virtual Phone

### *Service Configuration Dialog Box*

---

- **Connected Line Identification Presentation**
  - **TA**

Check to show the result code presentation status in the Terminal Adapter (TA) phone book.
  - **Nwk**

Check to show the subscriber connected line identification presentation service status in the network phone book.
- **Calling Line Identification Presentation**
  - **TA**

Check to show the result code presentation status in the Terminal Adapter (TA) phone book.
  - **Nwk**

Check to show the subscriber connected line identification presentation service status in the network phone book.
- **Calling Line Identification Restriction**
  - **Subscription**

Set according to the subscription of the calling line identification restriction service.
  - **On Network**

Set to the subscriber calling line identification restriction service status in the network.
- **Emergency Call Number**

Set to the emergency mobile phone number.
- **Call Change**

Check **Notif. Enabled** to enable the sending of +CCCN notifications.
- **Call forwarding by class**

Select the call type that you want forwarded:

  - **Voice**

Select this option to forward incoming voice calls.

- **Data**  
Select this option to forward incoming data calls.
- **Fax**  
Select this option to forward incoming fax calls.
- **Sms**  
Select this option to forward incoming SMS messages.
- **Data Circuit Sync**  
Select this option to forward incoming synchronous data service calls.
- **Data Circuit Async**  
Select this option to forward incoming asynchronous data service calls.
- **Dedicated Packet Access**  
Select this option to forward incoming dedicated packet access service calls.
- **Dedicated PAD Access**  
Select this option to forward incoming dedicated PAD access service calls.
- **Call forwarding by class**  
Select the reason for call forwarding:
  - **Unconditional**  
Select this option to forward always.
  - **Busy**  
Select this option to forward when the line is busy.
  - **No Reply**  
Select this option to forward when there is no reply.
  - **Not Reachable**  
Select this option to forward when the line is not reachable.
  - **All Call Fwd**  
Select this option for all call forwarding. (See GSM 2.30[19].)

## Using Virtual Phone

### *Service Configuration Dialog Box*

---

- **Cond. Call Fwd**

Select this option for conditional call forwarding. (See GSM 2.30[19]).

- **Active**

Check to indicate that call forwarding is active.

- **Number**

Enter the phone number of the forwarding address.

- **Time**

Enter the time in seconds to wait before call is forwarded. Note that this setting applies only when **Call forwarding by class** is set to **No Reply**.

- **Sub Addr**

Enter the call forwarding subaddress.

- **Facility lock**

Select the class of information. Call barring facilities are based on GSM supplementary services (refer GSM 02.88 [6]). The interaction of these with other commands is based on other GSM supplementary services as described in the GSM standard.

See the selection descriptions in the **Call forwarding by class** section above.

Select the facility from the list:

- **Bar All Outgoing calls - (AO)**
- **Bar Outgoing International calls - (OI)**
- **Bar Outgoing international calls eXcept to home country - (OX)**
- **Bar All Incoming Calls - (AI)**

- **Facility Lock Status**

Select this value to indicate whether the facility lock is active.

- **Password**

Enter the facility lock password.


- **FD Facility Lock Status**

Select this value to indicates whether the FD facility lock is active.

## Response Preferences Dialog Box

To open the Response Preferences dialog box, select **Tools > Response Preferences**. Use this screen to select an error which will systematically be returned by a service.

**Figure 3.11 Response Preferences Dialog Box**

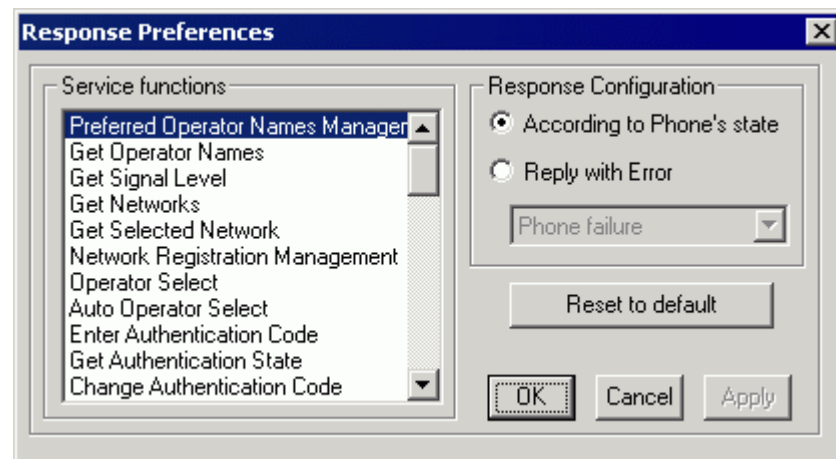

The following list associates a Virtual Phone service to a Telephony Manager function as supported by a standard GSM phone driver.

**Table 3.1 Virtual Phone Services and Telephony Manager Functions**

Services	Associated Functions
Accept Call	TelSpcAcceptCall
Add Entry	TelPhbAddEntry
Auto Operator Select	TelNwkSetSearchMode
Call Number	TelSpcCallNumber

**Table 3.1 Virtual Phone Services and Telephony Manager Functions (*continued*)**

<b>Services</b>	<b>Associated Functions</b>
Change Authentication Code	TelStyChangeAuthenticationCode
Close Line and Reject Call	TelSpcCloseLine or TelSpcRejectCall
Delete Entry	TelPhbDeleteEntry
Delete Message	TelSmsDeleteMessage
Enter Authentication Code	TelStyEnterAuthentication
Get Authentication State	TelStyGetAuthenticationState
Get Available Storage	TelSmsGetAvailableStorage
Get Available Phone Books	TelPhbGetAvailablePhonebook
Get Battery State	TelPowGetBatteryStatus
Get Brand Number	TelInfGetInformation
Get Call State	TelGetCallState
Get Entries	TelPhbGetEntries
Get Entry Max Sizes	TelPhbGetEntryMaxSizes
Get Location	TelNwkGetLocation
Get Model Number	TelInfGetInformation
Get Networks	TelNwkGetNetworks
Get Phone Number	TelCgfGetPhoneNumber
Get Revision	TelInfGetInformation
Get Selected Phone Book	TelPhbGetSelectedPhonebook

**Table 3.1 Virtual Phone Services and Telephony Manager Functions (*continued*)**

<b>Services</b>	<b>Associated Functions</b>
Change Authentication Code	TelStyChangeAuthenticationCode
Close Line and Reject Call	TelSpcCloseLine or TelSpcRejectCall
Delete Entry	TelPhbDeleteEntry
Delete Message	TelSmsDeleteMessage
Enter Authentication Code	TelStyEnterAuthentication
Get Authentication State	TelStyGetAuthenticationState
Get Available Storage	TelSmsGetAvailableStorage
Get Available Phone Books	TelPhbGetAvailablePhonebook
Get Battery State	TelPowGetBatteryStatus
Get Brand Number	TelInfGetInformation
Get Call State	TelGetCallState
Get Entries	TelPhbGetEntries
Get Entry Max Sizes	TelPhbGetEntryMaxSizes
Get Location	TelNwkGetLocation
Get Model Number	TelInfGetInformation
Get Networks	TelNwkGetNetworks
Get Phone Number	TelCgfGetPhoneNumber
Get Revision	TelInfGetInformation
Get Selected Phone Book	TelPhbGetSelectedPhonebook

**Table 3.1 Virtual Phone Services and Telephony Manager Functions (*continued*)**

<b>Services</b>	<b>Associated Functions</b>
Get Selected Network	TelNwkGetSelectedNetwork
Get Selected Storage	TelSmsGetSelectedStorage
Get Signal Level	TelNwkGetSignalLevel
Get Sms Center	TelCgfGetSmsCenter
Hold Line	TelSpcHoldLine
Mute	TelSndMute
Operator Select	TelNwkSelectNetwork
Read Message	TelSmsReadMessage
Read Messages	TelSmsReadMessages
Select Phone Book	TelPhbSelectPhonebook
Select Storage	TelSmsSelectStorage
Send Burst DTMF	TelSpcSendBurstDTMF
Send Short Message	TelSmsSendMessage
Set Sms Center	TelCgfSetSmsCenter

- **Response Configuration**

- **According to Phone's State**

- Select this option to return a value according to the current state of Virtual Phone.

- **Reply with Error**

- Use this option to return the selected error message.



**Table 3.2 GSM Errors**

<b>GSM Error Number</b>	<b>Error</b>	<b>Telephony Constant</b>
0	Phone failure	telErrCommandFailed
1	No connection to phone	telErrPhoneComm
2	Phone-adapter link reserved	telErrPhoneComm
3	Operation not allowed	telErrCommandFailed
4	Operation not supported	telErrFeatureNotSupported
5	PH-SIM PIN required	telErrPhoneToSIMPINRequired
10	SIM not inserted	telErrNoSIMInserted
11	SIM PIN required	telErrPINRequired
12	SIM PUK required	telErrPUKRequired
13	SIM failure	telErrSIMFailure
14	SIM busy	telErrSIMBusy
15	SIM wrong	telErrSIMWrong
16	Incorrect password	telErrPassword
17	SIM PIN2 required	telErrPIN2Required

**Table 3.2 GSM Errors (*continued*)**

<b>GSM Error Number</b>	<b>Error</b>	<b>Telephony Constant</b>
18	SIM PUK2 required	telErrPUK2Required
20	Memory full	telErrPhoneMemAllocation
21	Invalid index	telErrInvalidIndex
22	Not found	telErrEntryNotFound
23	Memory failure	telErrPhoneMemFailure
24	Text string too long	telErrInvalidString
25	Invalid characters in text string	telErrInvalidString
26	Dial string too long	telErrInvalidDial
27	Invalid characters in dial string	telErrInvalidDial
30	No network service	telerrNonetwork
31	Network time-out	telErrNetworkTimeOut
100	Unknown	telErrUnknown


Click **Reset to Default** to load the default value, which is **Reply according to Virtual Phone's state** for all of the service functions.

## Connection Setup Dialog Box

Use the **Connection Setup** dialog box to select and modify the communication parameters. To open the Connection Setup dialog box, select **Tools > Connection Setup**. The values assigned in this window must match the values assigned in Palm OS Simulator (see “[Configuring Palm OS Simulator](#)” on page 7).

The values entered and displayed here are stored in the `VAppCfg.db` file in the `TDP` and `Serial` sections.

**Figure 3.12 Connection Setup Dialog Box**

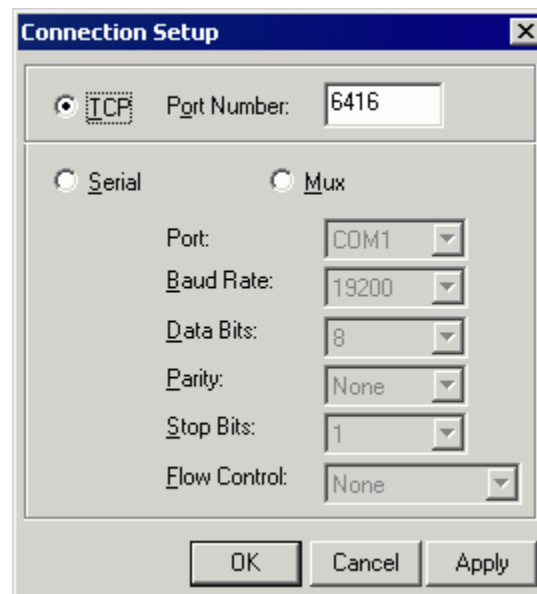

- **TCP Port Number**

If you select TCP, you must provide a Port Number. This number must match the number assigned to Palm OS Simulator. See “[Configuring Palm OS Simulator](#)” on page 7 for more information. See the `VAppCfg.db` file, in the TCP section, variable name `Port`.

- **Serial**

Select **Serial** to change the parameters which configure serial communication. Virtual Phone’s defaults are the same as

## Using Virtual Phone

### *Speech Calls Dialog Box*

---

Palm OS Simulator's defaults. It is best to keep these default values.

See the VAppCfg.db file in the `Serial` section. The variable names are `Port`, `BaudRate`, `StopBit`, `Parity`, `FlowCtl` and `DataBit`.

---

**IMPORTANT:** To use a serial connection between Palm OS Simulator and Virtual Phone, you must use a null modem cable.


---

## Fixing Connection Problems

Virtual Phone may not be able to establish a connection for several reasons. For example, the specified serial port in the **Connection Dialog Box** may already be in use.

If a connection cannot be established, Virtual Phone displays a message box similar to [Figure 3.13](#).

**Figure 3.13 Connection Error Message Dialog Box**

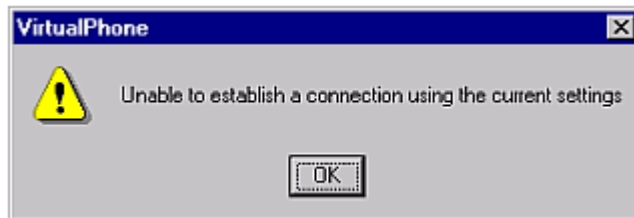


You can then either close the application that is preventing the connection and click the reconnect icon, or you can use the **Tools > Reconnect** menu. As an alternative, you can go back to the Connection Setup dialog box and change the connection settings.

## Speech Calls Dialog Box

Use the **Speech Calls Dialog Box** to display current voice communication and their parameters, and to simulate incoming voice calls. To open the Speech Calls dialog box, select **Tools > Speech Calls**.

Figure 3.14 Speech Calls Dialog Box

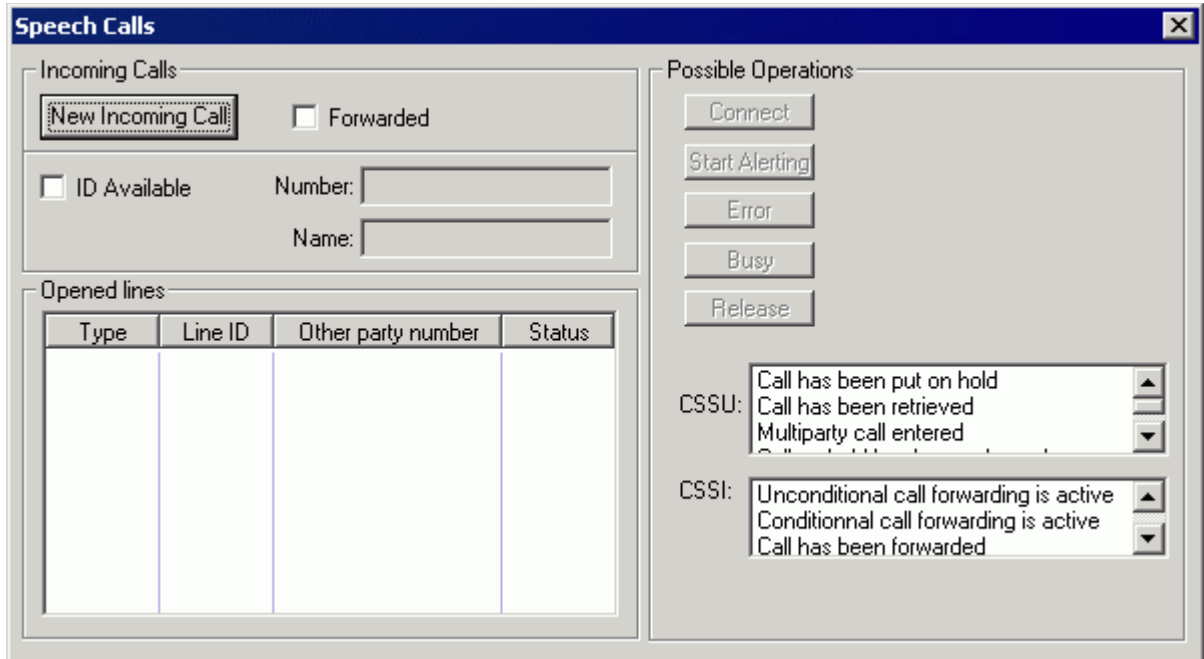

- **Incoming Calls**

- **New Incoming Call**

- When selected Virtual Phone simulates an incoming voice call.

- **ID Available**

- If checked and a value is entered in the associated edit field, this value will appear in the **Other party number** column of the **Open lines** list and will be sent to Palm OS Simulator. The Id of a caller is not sent unless the **ID Available** check box is checked.

- **Possible Operations**

- This is relevant to an open line.

- **Connect**

- Establish a connection and accept the **Outgoing** or **Incoming** call. See `TelSpcAcceptCall` in *Exploring Palm OS: Telephony and SMS*. See `sysTelSpcLaunchCmdCallConnect` notification in *Exploring Palm OS: Telephony and SMS*.

## Using Virtual Phone

### *Speech Calls Dialog Box*

---

- **Release**

Release the line and hang-up the phone. See `TelSpcCloseLine` in *Exploring Palm OS: Telephony and SMS*. See `SysTelSpcLaunchCmdCallReleased` notification in *Exploring Palm OS: Telephony and SMS*.

- **Busy**

Respond to the Outgoing call with a busy signal. See `TelSpcRejectLine` in *Exploring Palm OS: Telephony and SMS*. See `sysTelSpcLaunchCmdCallBusy` notification in *Exploring Palm OS: Telephony and SMS*.

---

**NOTE:** Virtual Phone does support Conference calls and Reports.

---

- **Check Supplementary Service Notifications**

To receive a supplementary service notification, first send Virtual Phone this command: `AT+CSSN=1,1`

Then, select the appropriate CSSU or CSSI notification you want to receive.

- **CSSU**

Select the unsolicited result (CSSU) notification:

- Call has been put on hold
- Call has been retrieved
- Multiparty call entered
- Call on hold has been released
- Forward check SS message received

– CSSI

Select the immediate result (CSSI) notification:

- Unconditional call forwarding is active
- Conditional call forwarding is active
- Call has been forwarded
- Call is waiting
- Outgoing calls are barred
- Incoming calls are barred
- CLIR suppression is rejected

## Short Message Dialog Box

Use the **Short Message Dialog Box** to create SMS messages, to view stored SMS messages, and to view a history of sent SMS messages.

**Figure 3.15 Short Message Dialog Box**

**Short Message**

Encode/Decode a SMS | SMS Storage | Sent SMS History

PDU :

Direction : Incoming SMS (SC to MS)

**SMS Center**

☐ SMS Center is configured in MS Address : +336534985

Message Type Indicator (MTI)	Deliver
More Messages to Send (MMS)	No More Messages
Reply Path (RP)	No
User Data Header Indicator (UDHI)	No Header
Status Report Indication (SRI)	No Status Report
Originating Address (OA)	
Type Of Numbering (TON)	National number
Numbering Plan Indication (NPI)	ISDN/telephone
Address	+336558986

## Using Virtual Phone

### Short Message Dialog Box

---

The Short Message dialog box has three tabs:

- “[Encode/Decode an SMS Tab](#)” on page 50
- “[SMS Storage Tab](#)” on page 51
- “[Sent SMS History Tab](#)” on page 53

## Encode/Decode an SMS Tab

Use the **Encode/Decode an SMS** tab, shown in [Figure 3.15](#), to create a new SMS delivery message, which is an SMS message received by Virtual Phone from the GSM network. The message is stored in the first available location in the `SmsStore.db` file. To open the Short Message dialog box, select **Tools > Short Message**.

- **PDU**

Enter the PDU (Protocol Data Unit) for this message.

- **Direction**

Select whether this is an incoming message or an outgoing message.

**Incoming SMS (SC to MS)** - Select if this is an incoming message.

**Outgoing SMS (MS to SC)** - Select if this is an outgoing message.

- **Decode**

Click to decode this message.

## SMS Center

- **Center is configured in MS**

Check to indicate that the SMS Center is configured in the MS (Mobile Station).

- **Address**

Enter the address of the SMS Center. This option is available when the **SMS Center is configured in MS** checkbox is not selected.



- **TON**

Select the “Type of Numbering (TON)” phone number format:

- **Unknown - Address octet 129 ISDN**
- **International - Address octet 145 ISDN**
- **National - Address octet 161 ISDN**

- **Message Parameters**

Enter the other message data in the scrollable table.

- **Create PDU button**

Click to create a PDU.

- **Receive PDU button**

Click to receive a PDU.

With the default Virtual Phone configuration, you can create a standard SMS message by clicking **Receive PDU**. Virtual Phone creates a Class 1 SMS text message with the text “Hello world!”

## **SMS Storage Tab**

Use the **SMS Storage** tab, shown in [Figure 3.16](#), to view information about stored SMS messages.

## Using Virtual Phone

### Short Message Dialog Box

---

**Figure 3.16 Short Message's SMS Storage Tab**



#### Messages

- **Id**  
The identification number of the message.
- **Type**  
The message type.
- **Multi Part**  
The SMS is composed of several parts.
- **Status**  
Indicates the status of the message: received unread, received read, stored unsent, or stored sent.
- **Message Text**  
Content of the SMS message.
- **Refresh button**  
Click to refresh the messages table.

- **Send to network button**

When the SMS message is stored in Virtual Phone but not yet sent, click to send the message to the network.


- **Delete button**

Click to delete a selected message.

## Sent SMS History Tab

Use the **Sent SMS History** tab, shown in [Figure 3.17](#), to view information about SMS messages that have been sent.

**Figure 3.17** Short Message's Sent SMS History Tab

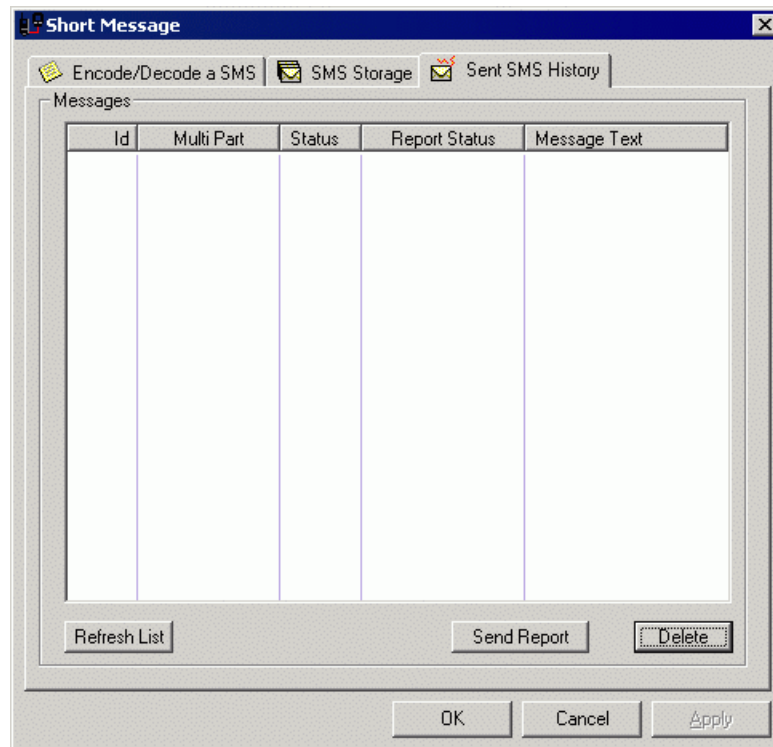

#### **Messages**

- **Id**  
The identification number of the message.
- **Multi Part**  
The SMS is composed of several parts.
- **Status**  
Indicates the status of the message: received unread, received read, stored unsent, or stored sent.
- **Report Status**  
The SMS contains a status report request.
- **Message Text**  
Content of the SMS message.
- **Refresh List button**  
Click to refresh the messages table.
- **Send Report button**  
Click to send an SMS status report for the selected SMS message (if applicable).
- **Delete button**  
Click to delete a selected message.

# Log and Database Files

---

This appendix covers the files that Virtual Phone uses:

- [“Configuration Files”](#) on page 56
  - VAppCfg.db
  - AvailableNwk.db
- [“Phone Book Databases”](#) on page 61
  - PhbDC.db
  - PhbEn.db
  - PhbFD.db
  - PhbLD.db
  - PhbMC.db
  - PhbME.db
  - PhbOn.db
  - PhbRC.db
  - PhbSM.db
  - PhbTA.db
- [“SMS Files”](#) on page 61
  - SmsStore.db
  - SmsStoreSent.db
- [“Log File”](#) on page 64
  - VAppATLog.log

## Configuration Files

If the two configuration files are not found in the current directory upon execution, Virtual Phone generates them with the default values. These files, their structure, and their records are described below.

### Application Configuration File - VAppCfg.db

The configuration file, `VAppCfg.db`, stores data relevant to Virtual Phone's Services and their configuration. The file is divided into 12 sections, listed in [Table A.1](#).

**Table A.1 VAppCfg.dlg File Sections**

Section Name	Corresponding Services
CFG	Configuration
INF	Phone Information
SPC	Speech Call
POW	Power
NWK	Network
PHB	Phone Book
STY	Security
SMS	Short Message
TCP	TCP
Serial	Serial
ReadThread	Active connection (either TCP or Serial)
Disp	Error Reply Parameters

The following list contains the Service Name and all the variable names associated to the service and the variable default value.

**VPAppCfg.db**

[CFG]

Configuration Service

SmsCenter=+336534985

SMS Center Number

PhNum=+336558986

Virtual Phone's number

[INF]

Information Service

Brand=Virtual Phone Win

Virtual Phone's Brand Name

Model=3210

Virtual Phone's Model

Revision=354815

Virtual Phone's Revision number

[SPC]

Speech Call Service

EmcNum=112

The emergency call number

[POW]

Power Service

Level=75

Battery power level

Status=0

Battery status

[NWK]

Network Service

SigLev=15

Signal Level

CellId=AD

Cell Id

AreaCd=BC

Area Code

## Log and Database Files

### *Configuration Files*

---

SearchMd=1  
    Search mode

RegStat=1  
    Registration state

[PHB]  
    Phone Book Service

NumBooks=4  
    Number of phone books (Max=4)

SelBook=0  
    Selected phone book

MaxEntries=100  
    Maximum number of entry slots

MaxNameLen=10  
    Maximum name length

[STY]  
    Security Service

State=0  
    security state

Pin=0000  
    Pin Code

Pin2=0000  
    PIN2 Code

Puk=0000  
    PUK Code

Puk2=0000  
    PUK2 Code

Phone=0000  
    Phone Code

[SMS]  
    Short Message Service

MaxEntries=100  
    Maximum number of message slots

RecSent=0  
    Receive sent messages



```
NDelId=2
    Next delivery message id
NSubId=2
    Next submit message id
[TCP]
    TCP Connection
Port=6416
    Port number
[Serial]
    Serial Connection
Port=COM2
    Port to open
BaudRate=19200
    Baud rate
StopBit=1
    Number of stop bits
Parity=None
    Parity
FlowCtl=None
    Flow control
DataBit=8
    Data bit
[ReadThread]
    Connection to use
ConType=1
    Serial/TCP
[Disp]
    Reply Parameters
FR0Id=1
    Response type: According to VP state/Error
FE0Id=0
    Error number
    FR2Id=1
    FE2Id=0
    ...
```

## Available Network File - AvailableNwk.db

The Available Network file, `AvailableNwk.db`, lists the networks available to Virtual Phone. You can modify, add and delete networks using an ASCII text editor (for example, `Notepad`). Remember to change the `Num` key so that it corresponds to the number of networks that you want Virtual Phone to take into account.

The Section Numbers must be consecutive.

### **AvailableNwk.db**

[NWK]

`Num=1`

The number of available networks.

[1]

Section Number

`Id=5001`

The network's Id

`LName=Virtual Phone 1`

The network's long name

`SName=VPCom 1`

The network's short name

`Stat=2`

The network's state

[2]

`Id=5051`

`LName=Virtual Phone 2`

`SName=VPCom 2`

`Stat=2`

## Phone Book Databases

You can use the Service Configuration's Phone Books tab to modify Virtual Phone phone book databases. See "[Phone Books Tab](#)" on page 26 for more information.

You can also modify phone books manually using an ASCII text editor. The Last Dialed Phone Book automatically contains the last dialed phone number and any changes to this file will be overridden by Virtual Phone when it dials a number.

See "[Phone Book Files](#)" on page 4 for a list of all of the phone books supported.

### Phone Book Database Organization

Phone book databases are organized as follows:

```
[1]
    Index of entry
Name=  John
    Name
Tel=+33662685921
    Phone Number

[3]
Name=  David
Tel=+49656654654

[4]
Name=  Marc
Tel=045687654
```

## SMS Files

The SMS (Short Message Services) files, `SmsStore.db` and `SmsStoreSend.db`, are generated by Virtual Phone. They both have the same basic structure and contain all the SMS exchanged between Virtual Phone and the Palm OS Simulator. The difference between the two files are the Delivery and Submit specific data elements.

## Log and Database Files

### *SMS Files*

---

The values associated to a data elements are valid for version 1.0 of Virtual Phone.

The basic structure is:

[1]

Message Identifier

State=0

Represents the state of the message in Virtual Phone and should not be modified.

0 = Received unread message (i.e. new message)

1 = Received and read message

2 = Stored unsent message (only applicable to SMS)

3 = Stored sent message (only applicable to SMS)

4 = All messages (only applicable to +CMGL command)

5 = All messages (only applicable to +CMGL command)

Do not change a Received message to a Sent message or visa versa. Never use states 4 and 5.

DataSize=8

The length of the Message Text

Data=656461717364617A4D

The Message Text, in hexadecimal followed by a check sum.

DCS=5

Data Coding Scheme. Values are:

8 Bits Encoding = 0

Default GSM Encoding = 5

PCount=0

Multi Part Options: Count

PCurr=0

Multi Part Options: Current

PId=0

Multi Part Options: Part Id

DtTimAbs=1

If DtTimAbs = 1 (absolute time) the date and time are absolute. If DtTimAbs = 0 the date and time are relative.

DtTim=3063866010

The date and time are in palm format

Add=+33658214566

The address of the SMS message

ProtocolId=0

Protocol ID. Values are:

Default Protocol = 0

Fax Protocol = 1

X400 Protocol = 2

Paging Protocol = 3

Email Protocol = 4

Ermes Protocol = 5

Voice Protocol = 6

ReplyPath=0

Reply Path. Values are: 1 = true or 0= false

SCeneter=+33668547854

Service Center number

### **SmsStore.db File**

The following description is valid for the SmsStore.db file and are specific to SMS Delivery.

MsgIdentifier=1

Delivery Message Identifier

OthToRcv=0

Other To Receive: values1 = true or 0= false

RepDelivInd=0

Report Delivery Indicator: Currently not supported

## Log and Database Files

### *Log File*

---

#### **SmsStoreSend.db File**

The following description is valid for the `SmsStoreSend.db` file and are specific to SMS Submit.

SubId:

Submit message identifier

DlvReq:

Network Delivery Request

DupReq:

Reject Duplicate Request

## Log File

The log file, `VPAppATLog.log`, is generated by Virtual Phone. It contains all the exchanged AT commands and responses between Virtual Phone and Palm OS Simulator.

The following is an example of what the log may look like.

#### **VPAppATLog.log**

---

```
AT
OK
AT+CPMS=?
+CPMS: ( "SM" )
OK
AT+CPMS="SM"
+CPMS: 1,100
OK
AT+CPMS?
+CPMS: "SM",1,100,"SM",1,100,"SM",1,100
```

---

# Index

---

## A

- area code 25
- AT commands 3, 13
- Available Networks 25
- AvailableNwk.db
  - configuration file 3, 55
  - editing 5
  - entries 60
  - network list management 21

## B

- battery status 18
- books
  - see related information v
- brand 18
- busy operation 48

## C

- cell id 24
- communication settings 3
- configuration settings 3
- connect operation 47

## D

- date 45

## E

- ETS (European Telecommunication Standards) 2
- ETSI (European Telecommunication Standards Institute) 2

## G

- GSM (Global System for Mobile Communications) 2

## I

- incoming calls 47
- information settings 3

## L

- last dialed phone book 61
- location 24
- log file 64

## M

- manuals
  - telephony and SMS v
  - telephony manager APIs v
- ME (Mobile Equipment) 23

## N

- network settings 3
- network tab 19
- number, phone 18

## O

- outgoing call response 48

## P

- Palm OS 3
- Palm OS Simulator 3
- PhbFD.db 55
- PhbLD.db 55
- PhbME.db 55
- PhbSM.db 55
- phone book databases 55, 61
- phone book settings 3
- phone books 27
- phone books tab 26
- phone model 18
- phone number 18
- phone revision 18
- phone setup application 10
- PIN 29
- PIN (Personal Identification Number) 29
- PIN1 30
- PIN2 31
- PUK 29
- PUK (Personal Universal Key) 29
- PUK1 30
- PUK2 31

---

## R

- reg state 23
- registration roaming 23
- registration state 23
- related information v
  - telephony manager v
- release operation 48
- revision, phone 18

## S

- search mode 24
- security settings 3
- security tab 28
- short message services (SMS) settings 3
- SIM 31
- SIM (Subscriber Identification Module) 30
- SMS 31, 50
- SMS (Short Message Services) 61
- SMS Files 61
- SMS files 61
- SMS message 1
- SMS settings 3
- SmsSentStore.db 4
- SmsStore.db
  - entries 61
  - messages 50

- overview 4

- SMS files 55

- SmsStoreSend.db 32, 61

- SmsStoreSent.db 55

- sound 19

- speech call settings 3

- state 22

- stored phone books 27

## T

- telephony drivers 2

- Telephony Manager

- Palm OS use 13

- telephony manager

- definition 3

## V

- Virtual Phone 1

- VAppATLog.log

- entries 64

- log file 55

- overview 4

- VAppCfg.db

- configuration file 3, 55

- entries 57

- phone settings 18