



# Testing with Palm OS® 5.3 Simulator

Palm OS® 5.3

## CONTRIBUTORS

Written by Brian Maas

Engineering contributions by Patrick Porlan, Luc Yriarte, David Fedor, Ezekiel Sanborn de Asis, Derek Johnson, Thierry Escande, Herve Fayolle, and Regis Nicolas.

Copyright © 1996 - 2003, PalmSource, Inc. and its affiliates. All rights reserved. This documentation may be printed and copied solely for use in developing products for Palm OS® software. In addition, two (2) copies of this documentation may be made for archival and backup purposes. Except for the foregoing, no part of this documentation may be reproduced or transmitted in any form or by any means or used to make any derivative work (such as translation, transformation or adaptation) without express written consent from PalmSource, Inc.

PalmSource, Inc. reserves the right to revise this documentation and to make changes in content from time to time without obligation on the part of PalmSource, Inc. to provide notification of such revision or changes.

PALMSOURCE, INC. AND ITS SUPPLIERS MAKE NO REPRESENTATIONS OR WARRANTIES THAT THE DOCUMENTATION IS FREE OF ERRORS OR THAT THE DOCUMENTATION IS SUITABLE FOR YOUR USE. THE DOCUMENTATION IS PROVIDED ON AN "AS IS" BASIS. PALMSOURCE, INC. AND ITS SUPPLIERS MAKE NO WARRANTIES, TERMS OR CONDITIONS, EXPRESS OR IMPLIED, EITHER IN FACT OR BY OPERATION OF LAW, STATUTORY OR OTHERWISE, INCLUDING WARRANTIES, TERMS, OR CONDITIONS OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND SATISFACTORY QUALITY. TO THE FULL EXTENT ALLOWED BY LAW, PALMSOURCE, INC. ALSO EXCLUDES FOR ITSELF AND ITS SUPPLIERS ANY LIABILITY, WHETHER BASED IN CONTRACT OR TORT (INCLUDING NEGLIGENCE), FOR DIRECT, INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY KIND, OR FOR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THIS DOCUMENTATION, EVEN IF PALMSOURCE, INC. OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

PalmSource, the PalmSource logo, AnyDay, EventClub, Graffiti, HandFAX, HandMAIL, HandSTAMP, HandWEB, HotSync, the HotSync logo, iMessenger, MultiMail, MyPalm, Palm, the Palm logo, the Palm trade dress, Palm Computing, Palm OS, Palm Powered, PalmConnect, PalmGear, PalmGlove, PalmModem, PalmPak, PalmPix, PalmPoint, PalmPower, PalmPrint, Palm.Net, Simply Palm, ThinAir, and WeSync are trademarks of PalmSource, Inc. or its affiliates. All other product and brand names may be trademarks or registered trademarks of their respective owners.

IF THIS DOCUMENTATION IS PROVIDED ON A COMPACT DISC, THE OTHER SOFTWARE AND DOCUMENTATION ON THE COMPACT DISC ARE SUBJECT TO THE LICENSE AGREEMENT ACCOMPANYING THE COMPACT DISC.

*Testing with Palm OS 5.3 Simulator*

Document Number 3102-003

December 11, 2003

For the latest version of this document, visit

<http://www.palmos.com/dev/support/docs/>.

PalmSource, Inc.

1240 Crossman Avenue

Sunnyvale, CA 94089

USA

[www.palmsource.com](http://www.palmsource.com)

# Table of Contents

---

<b>About This Document</b>	<b>vii</b>
What This Volume Contains . . . . .	vii
Additional Resources . . . . .	vii
 <b>1 Introducing Palm OS Simulator</b>	 <b>1</b>
What Is Palm OS Simulator? . . . . .	1
Palm OS Applications . . . . .	2
Palm OS System Code . . . . .	2
Palm Application Compatibility Environment . . . . .	3
Device Abstraction Layer . . . . .	3
How Does Palm OS Simulator Compare to Palm Simulator for Macintosh? . . . . .	4
Prerequisites . . . . .	4
 <b>2 Using Palm OS Simulator</b>	 <b>5</b>
Installing Palm OS Simulator . . . . .	5
Starting Palm OS Simulator . . . . .	6
Specifying Command Line Arguments . . . . .	7
Using the Initialization File . . . . .	14
Loading ROM Images . . . . .	15
Running Palm OS Simulator . . . . .	16
Palm OS Simulator Display . . . . .	16
Displaying Menu Items . . . . .	16
Entering Data . . . . .	17
Installing Applications . . . . .	17
Using AutoRun, AutoLoad, and AutoRunAndQuit . . . . .	17
Using AppCreator to Start an Application . . . . .	18
Starting Simulator with a Storage Snapshot File . . . . .	18
Using Communication Functions . . . . .	18
Performing a HotSync Operation . . . . .	19
Using External Debug Tools with Palm OS Simulator . . . . .	20
Using Gremlins . . . . .	23
Applications and Panels. . . . .	24
First Application . . . . .	25

---

Random Seed . . . . .	25
Events . . . . .	25
Control . . . . .	25
Using the Host Control API . . . . .	26

### **3 Palm OS Simulator User Interface Reference 27**

Menu Reference Summary . . . . .	27
Displaying the Palm OS Simulator Menu Items . . . . .	28
Reset Menu . . . . .	28
Soft . . . . .	28
Hard . . . . .	28
View Menu . . . . .	28
Databases . . . . .	29
Heaps . . . . .	30
Events . . . . .	31
Install Menu . . . . .	31
Gremlins Menu . . . . .	32
Settings Menu . . . . .	34
Display>Color Depth . . . . .	34
Display>Allowed Screen Depths . . . . .	34
Display>Allow Direct Screen Access . . . . .	35
Display>Magnification . . . . .	35
Display>Always on Top . . . . .	35
Display>Resolution . . . . .	35
Memory>RAM Size . . . . .	35
Memory>Dynamic Heap Size . . . . .	36
Memory>Storage Is Write-Protected . . . . .	36
Memory>PACE Extended Checks . . . . .	36
Communication>Communication Ports . . . . .	37
Communication>Redirect NetLib Calls to Host TCP/IP . . . . .	37
Battery . . . . .	37
Enable Sound . . . . .	39
Storage Menu . . . . .	40
Load . . . . .	40
Save . . . . .	40

---

About Menu . . . . .	41
Exit Menu . . . . .	41
Keyboard Equivalents Reference . . . . .	42
Hardware Buttons . . . . .	42
Additional Keyboard Functions . . . . .	42
<b>Index</b>	<b>45</b>



# About This Document

---

*Testing with Palm OS® Simulator* provides conceptual, guidance, and reference information for developers who want to use Palm OS Simulator to test their applications.

This document is specific to the Palm OS 5.3 simulator.

## What This Volume Contains

This volume has the following organization:

- [Chapter 1, “Introducing Palm OS Simulator,”](#) on page 1 describes general concepts that will help you understand how to use Palm OS Simulator.
- [Chapter 2, “Using Palm OS Simulator,”](#) on page 5 provides task information describing how to use Palm OS Simulator functions.
- [Chapter 3, “Palm OS Simulator User Interface Reference,”](#) on page 27 documents the Palm OS Simulator menu commands and cross references relevant task information.

## Additional Resources

- Documentation  
PalmSource publishes its latest versions of this and other documents for Palm OS developers at  
<http://www.palmos.com/dev/support/docs/>
- Training  
PalmSource and its partners host training classes for Palm OS developers. For topics and schedules, check  
<http://www.palmos.com/dev/training>
- Knowledge Base  
The Knowledge Base is a fast, web-based database of technical information. Search for frequently asked questions

## About This Document

### *Additional Resources*

---

(FAQs), sample code, white papers, and the development documentation at

<http://www.palmos.com/dev/support/kb/>



# Introducing Palm OS Simulator

---

This chapter provides conceptual information that will help you learn about Palm OS® Simulator.

This chapter contains the following sections:

- [“What Is Palm OS Simulator?”](#) on page 1
- [“How Does Palm OS Simulator Compare to Palm Simulator for Macintosh?”](#) on page 4
- [“Prerequisites”](#) on page 4

## What Is Palm OS Simulator?

Palm OS Simulator is Palm OS recompiled for a desktop machine processor. Palm OS Simulator combines the following into a single execution environment:


- Palm OS applications
- Palm Application Compatibility Environment (PACE)
- Palm OS system code
- An implementation of the Device Abstraction Layer (DAL)

## Introducing Palm OS Simulator

*What Is Palm OS Simulator?*

---

**Figure 1.1 Palm OS Simulator Components**

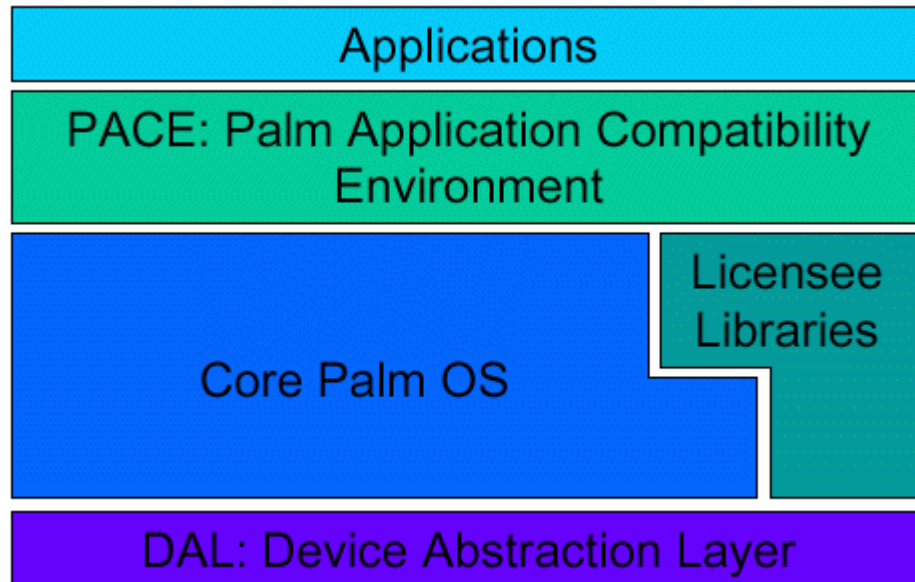

### Palm OS Applications

Palm OS Simulator includes all of the built-in Palm OS applications, such as Address Book, Date Book, Memo Pad, and To Do List. The built-in Palm OS applications are included in the Simulator ROM file.

You can add other Palm OS applications to a Simulator session as well. For more information, see “[Installing Applications](#)” on page 17.

### Palm OS System Code

Palm OS Simulator includes all of the Palm OS 5 system code, compiled to run on Windows.

### Palm OS Runtime Services

Palm OS Simulator implements the Palm OS 5 runtime services by using desktop system library files (DLLs). These DLLs are located in the Palm OS Simulator directory, and are loaded when the code that they contain needs to be executed.

### Communication Stacks

Palm OS Simulator uses the communication stacks for NetLib and Telephony components. Palm OS Simulator can optionally redirect NetLib calls to the host machine TCP/IP stack.

### Palm Application Compatibility Environment

When you use Simulator to test your existing 68K application, the application is run in the Palm Application Compatibility Environment (PACE). PACE provides a 68K application environment that is equivalent to Palm OS 4.1.

PACE handles the data translation required for a 68K application to run on Palm OS 5. For example, 68K applications read and write data in big-endian mode, but Palm OS 5 views data in little-endian mode. When a 68K application calls a Palm OS function, PACE handles the translation of the parameters, objects, and structure layouts so that existing applications do not have to be updated to handle the change of endianness. PACE creates “shadow structures” for the 68K application’s data that allow the 68K application to run under Palm OS 5.

### Device Abstraction Layer

The Device Abstraction Layer (DAL) is responsible for insulating Palm OS from the underlying system and hardware. By running Palm OS on top of the DAL for the desktop machine, Palm OS Simulator recreates the Palm OS program execution environment in the desktop machine.

Applications that run in this environment see the same functionality provided by the Palm OS managers, libraries, and applications as on a Palm Powered handheld.

Because Palm OS Simulator runs on a desktop machine, it can be integrated with the desktop tools for Palm OS development. This integration allows full source level debugging of the code that is targeted for Palm Powered handhelds.

# How Does Palm OS Simulator Compare to Palm Simulator for Macintosh?

Palm OS Simulator has significant advantages over the Macintosh simulator in use with Palm OS 4.0:

- All of the applications and shared libraries that can be loaded onto a handheld can be loaded in Palm OS Simulator at the same time. This allows analyzing the interactions between the applications, shared libraries, and Palm OS with a much better accuracy than before.
- Palm OS Simulator supports multi-threading.
- Palm OS Simulator runs exactly the same Palm OS code that runs on a Palm Powered handheld. The only difference between Palm OS running on a handheld and Palm OS Simulator is the DAL.
- The Macintosh simulator required that components be statically linked together. Because Palm OS Simulator does not have this requirement, the simulation reproduces accurately the Palm OS runtime architecture on top of the desktop machine system.

## Prerequisites

Palm OS Simulator runs on Windows NT 4 x86, Windows 2000, Windows XP, Windows 98, and Windows ME.

Palm OS Simulator is flexible enough to be used with most C/C++ development chains, with or without an associated integrated development environment (IDEs such as Visual C++).

# Using Palm OS Simulator

---

This chapter provides guidance and reference information that will help you use Palm OS® Simulator.

- [“Installing Palm OS Simulator”](#) on page 5
- [“Starting Palm OS Simulator”](#) on page 6
- [“Specifying Command Line Arguments”](#) on page 7
- [“Using the Initialization File”](#) on page 14
- [“Loading ROM Images”](#) on page 15
- [“Running Palm OS Simulator”](#) on page 16
- [“Using Communication Functions”](#) on page 18
- [“Using External Debug Tools with Palm OS Simulator”](#) on page 20
- [“Using Gremlins”](#) on page 23
- [“Using the Host Control API”](#) on page 26

## Installing Palm OS Simulator

Palm OS Simulator consists of the following:

- The executable file: `PalmSim.EXE`
- A ROM file
- The DLLs required by the ROM file

The ROM file is specific to Palm OS Simulator; the ROM file is not the same as ROM files used with Palm OS Emulator. ARM-based PRCs and 68K-based PRCs are embedded in this ROM file.

However, ARM-based PRCs don't really contain code; rather, they reference external DLL files. As a result, there will be at least one DLL per ARM-based application or shared library.

## Using Palm OS Simulator

### *Starting Palm OS Simulator*

---

The DLLs required by the ROM file can be in the same directory as the executable file `PalmSim.EXE`, or in the subfolder for the locale-specific ROM file (such as `enUS` or `jpJP`).

To use tracing functions with Palm OS Simulator, you need to have the files `PalmTrace.DLL` and `Reporter.EXE` in a directory included in the `PATH` environment variable.


## Starting Palm OS Simulator

To start Palm OS Simulator, run `PalmSim.EXE`. The first time you start Palm OS Simulator, you are asked to select a ROM file.

You can also start Palm OS Simulator by dragging and dropping a Simulator ROM file onto the `PalmSim.EXE` icon. (Note again that the Simulator ROM file is not the same as the ROM files used for Palm OS Emulator. You should not drop an Emulator ROM file on the `PalmSim.EXE` icon.)

When Palm OS Simulator starts, the main window is displayed, as shown in [Figure 2.1](#).

**Figure 2.1** Palm OS Simulator's Main Window

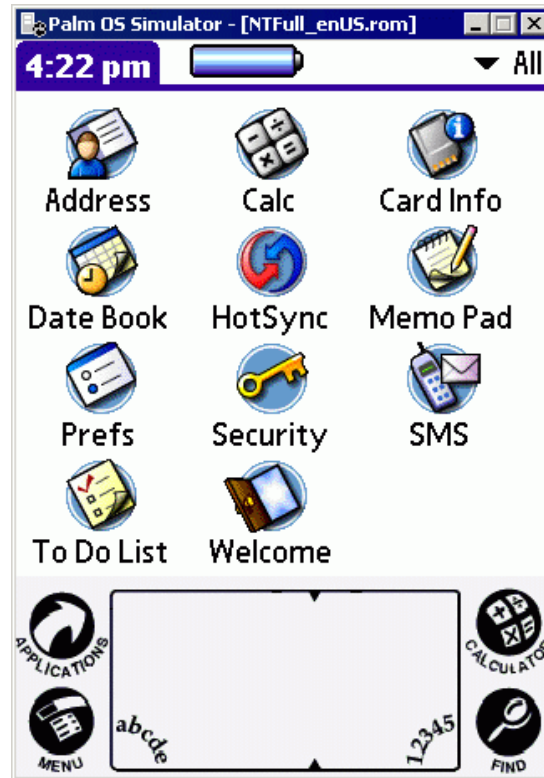

## Specifying Command Line Arguments

You can supply the session parameters for Palm OS Simulator as command line options. For example:

```
PalmSim.EXE -rom:NTFullDbg.rom
```

[Table 2.1](#) shows the options that you can specify with the command line version of Palm OS Simulator.

---

**NOTE:** The command line option are not case sensitive, but the values specified for the options might be (for example, the 4-character application creator ID for the `-appcreator` option).

---

**Table 2.1 Command Line Options**

Option Syntax	Parameter Values
<code>-rom:romname</code>	<p><i>romname</i> - The name of the ROM file.</p> <p>If you do not specify a value for this option when you first start Simulator, Simulator will open a dialog box asking for you to specify a ROM file. If you do not specify a value for this option on subsequent uses of Simulator, Simulator will load the ROM file name from the initialization file.</p>
<code>-ram:size</code>	<p><i>size</i> - An integer value indicating the amount of RAM to emulate during the session, specified in kilobytes. The default is 8192.</p> <p>For more information, see “<a href="#">Memory&gt;RAM Size</a>” on page 35.</p>
<code>-dyn:size</code>	<p><i>size</i> - An integer value indicating the amount of dynamic heap to emulate during the session, specified in kilobytes. The default is 512.</p> <p>For more information, see “<a href="#">Memory&gt;Dynamic Heap Size</a>” on page 36.</p>
<code>-sound: [on   <u>off</u>]</code>	<p>Activate or deactivate sound output. The default is <code>off</code>.</p> <p>For more information, see “<a href="#">Enable Sound</a>” on page 39.</p>



**Table 2.1 Command Line Options** *(continued)*

Option Syntax	Parameter Values
-storageprotection: [on  <u>off</u> ]	Activate or deactivates write protection for the storage memory. The default is off.  For more information, see <a href="#">“Memory&gt;Storage Is Write-Protected”</a> on page 36.
-storagesnapshotfile: <i>ssfname</i>	<i>ssfname</i> - The name of the storage snapshot file (SSF), indicating the saved storage snapshot that you want Simulator to load at startup or upon hard reset.  For more information, see <a href="#">“Storage Menu”</a> on page 40.
-appcreator: <i>xxxx</i>	<i>xxxx</i> - A four-character Creator ID indicating the application to start.  For more information, see <a href="#">Chapter 2, “Using AppCreator to Start an Application,”</a> on page 18.
-bitdepth: [1 2 4  <u>8</u>  16]	Screen bit depth. The default is 8.  For more information, see <a href="#">“Display&gt;Allowed Screen Depths”</a> on page 34.
-zoom: [1  <u>2</u>  3 4]	Magnification level. The default is 2.  For more information, see <a href="#">“Display&gt;Magnification”</a> on page 35.

**Table 2.1 Command Line Options** *(continued)*

Option Syntax	Parameter Values
<code>-alwaysontop: [on <u>off</u>]</code>	Indicates whether the Simulator window should stay in front of other windows on the desktop. The default is <code>off</code> .  For more information, see <a href="#">“Display&gt;Always on Top”</a> on page 35.
<code>-windoworiginx: <i>integer</i></code>	<i>integer</i> - Specifies Simulator’s horizontal distance from the left of the screen when the window is opened. The default is 0.
<code>-windoworiginy: <i>integer</i></code>	<i>integer</i> - Specifies Simulator’s vertical distance from the top of the screen when the window is opened. The default is 0.
<code>-cradleport: <i>COMx</i></code>	<i>COMx</i> - The communications port used to talk to the cradle.  For more information, see <a href="#">“Communication&gt;Communication Ports”</a> on page 37.
<code>-cradleporttype: <i>type</i></code>	<i>type</i> - The type of port used for communication with the cradle. The default is <code>Standard RS-232</code> .  For more information, see <a href="#">“Communication&gt;Communication Ports”</a> on page 37.

**Table 2.1 Command Line Options** (*continued*)

Option Syntax	Parameter Values
<code>-infraredport:[COMx None]</code>	<p><i>COMx</i> - The communications port used for infrared.</p> <p>For more information, see <a href="#">“Communication&gt;Communication Ports”</a> on page 37.</p>
<code>-infraredporttype:type</code>	<p><i>type</i> - The type of port used for infrared communication.</p> <p>For more information, see <a href="#">“Communication&gt;Communication Ports”</a> on page 37.</p>
<code>-68kdebuggerport:[host:port None]</code>	<p><i>host</i> - The name of the host used for the 68K debugger.</p> <p><i>port</i> - The port used for the 68K debugger.</p> <p><i>Example:</i></p> <pre>-68KDebuggerPort: localhost:2000</pre> <p>For more information, see <a href="#">“Communication&gt;Communication Ports”</a> on page 37.</p>
<code>-68kdebuggerporttype:type</code>	<p><i>type</i> - The type of port used for the 68K debugger. The default is TCPIP.</p> <p>For more information, see <a href="#">“Communication&gt;Communication Ports”</a> on page 37.</p>

**Table 2.1 Command Line Options** *(continued)*

Option Syntax	Parameter Values
<code>-additionalports:COMx</code>	<p><i>COMx</i> - Additional communications ports.</p> <p>For more information, see <a href="#">“Communication&gt;Communication Ports”</a> on page 37.</p>
<code>-usehostbatteryinfo:[on off]</code>	<p>Indicates whether the changes in the host machine should be indicated in the battery state of the handheld (for example, when you want to have the battery state of a laptop computer mapped to the Palm OS Simulator display). The default is <code>off</code>.</p> <p>For more information, see <a href="#">“Battery”</a> on page 37.</p>
<code>-redirectnetlibcalls:[on off]</code>	<p>Indicates whether you want to redirect NetLib calls to the host machine’s TCP/IP stack. The default is <code>off</code>.</p> <p>For more information, see <a href="#">“Communication&gt;Redirect NetLib Calls to Host TCP/IP”</a> on page 37.</p>
<code>-allowedscreendepths:mask</code>	<p><i>mask</i> - A number representing the screen depths you want to allow. The default is a mask representing all possible depths.</p> <p>For more information, see <a href="#">“Display&gt;Allowed Screen Depths”</a> on page 34.</p>

**Table 2.1 Command Line Options** (*continued*)

Option Syntax	Parameter Values
-extendedmemorychecks: [on   <u>off</u> ]	<p>Indicates whether PACE should do extended checks of applications' use of system memory. The default is <code>off</code>.</p> <p>For more information, see "<a href="#">Memory&gt;PACE Extended Checks</a>" on page 36.</p>
-directscreenaccess: [on   <u>off</u> ]	<p>Indicates whether the installed applications have access to the LCD screen buffer. The default is <code>off</code>.</p> <p>For more information, see "<a href="#">Display&gt;Allow Direct Screen Access</a>" on page 35.</p>
-screendensity: [ <u>108</u>   144]	<p>Sets the density of the display screen. The default is 108.</p> <p>For more information, see "<a href="#">Display&gt;Resolution</a>" on page 35.</p>
-screenwidth: [160   <u>240</u>   320]	<p>Sets the width of the display screen. The default is 240.</p> <p>For more information, see "<a href="#">Display&gt;Resolution</a>" on page 35.</p>

## Using Palm OS Simulator

### Using the Initialization File

---

**Table 2.1** Command Line Options (*continued*)

Option Syntax	Parameter Values
<code>-screenheight: [160 220 <u>240</u> 320 480]</code>	Sets the height of the display screen. The default is 240.  For more information, see <a href="#">“Display&gt;Resolution”</a> on page 35.
<code>-hassilkscreen: [on <u>off</u>]</code>	Indicates whether the display screen has a dynamic input area. The default is <code>off</code> .  For more information, see <a href="#">“Display&gt;Resolution”</a> on page 35.

## Using the Initialization File

The command line arguments can be set in the Simulator initialization file, `palmsim.ini`. Any options specified on the command line will override the initialization file settings.

When you exit Simulator, the session’s values are written to `palmsim.ini` for the next time you start Simulator.

---

**NOTE:** The initialization file options use an equals sign (=) to separate the option from the value, rather than the colon (:) used in the command line version. Also, boolean values in the initialization file are indicated using 0 and 1 rather than `off` and `on`.

---

### Listing 2.1 Sample `palmsim.ini` File

---

```
[Settings]
ROM=C:\Palm OS Simulator\Release\enUS\NTFull_enUS.rom
RAM=8192
DYN=1024
Sound=0
StorageProtection=0
Zoom=2
```

```
BitDepth=8
DebugThroughTCP=1
AlwaysOnTop=0
UseHostBatteryInfo=1
WindowOriginX=681
WindowOriginY=8
RedirectNetLibCalls=0
AllowedScreenDepths=32907
LastSilkScreen=
AppCreator=
CradlePort=
CradlePortType=Standard RS-232
InfraredPort=
InfraredPortType=
68KDebuggerPort=localhost:2000
68KDebuggerPortType=TCP/IP
AdditionalPorts=
TraceTarget=tcp:localhost:25998
GremlinsFromValue=0
GremlinsToValue=0
GremlinsSwitchAfter=0
GremlinsSwitchAfterValue=0
GremlinsStopAfter=0
GremlinsStopAfterValue=0
GremlinsSelectedApps=
GremlinsFirstApp=
GremlinsAllowScreenUpdates=1
GremlinsWindowOriginX=0
GremlinsWindowOriginY=0
LogErrorMessages=0
DirectScreenAccess=0
ExtendedMemoryChecks=1
LastStorageSnapshot=storage_snapshot.ssf
StorageSnapshotFile=mynsnapshot.ssf
ScreenDensity=108
ScreenWidth=240
ScreenHeight=240
HasSilkScreen=0
```

---

## Loading ROM Images

When you first run Palm OS Simulator, you can specify the ROM image filename using the `-rom` command line option. If you do not specify a value for this option, Simulator will open a dialog box asking for you to specify a ROM file.

## Using Palm OS Simulator

### *Running Palm OS Simulator*

---

When you restart Simulator, it will assume you want to use the ROM file that you specified when you first started Simulator.

To run Simulator with a different ROM file, you can do one of the following:

- Change the ROM option value in the `palmsim.ini` file.
- Specify a new value using the `-rom` command line option.
- Hold down the SHIFT key when you start Simulator. Then, Simulator will open a dialog box asking for you to specify a ROM file.
- Drag and drop a ROM file onto the `PalmSim.EXE` icon.

## Running Palm OS Simulator

This section provides an overview how to use Palm OS Simulator.


### Palm OS Simulator Display

The Palm OS Simulator display looks very much like a real Palm Powered handheld device. You can use your mouse to perform actions that you perform with the stylus on handheld devices, and you can use the menus to access Palm OS Simulator functions.

### Displaying Menu Items

Right-click (use mouse button 2) on the Palm OS Simulator screen display to access the menu items. The Palm OS Simulator menu displays, as shown in [Figure 2.2](#).

**Figure 2.2** The Palm OS Simulator Menu

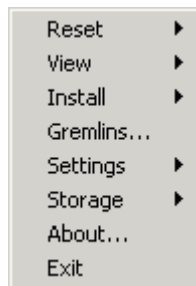



For more information about the Palm OS Simulator menu items, see “[Menu Reference Summary](#)” on page 27.

## Entering Data

Palm OS Simulator supports . You can draw using a mouse.

Palm OS Simulator also supports keyboard input. When a field is active, you can use the keyboard to enter text. You can also use keyboard equivalents for hardware buttons and other functions. For more information, see “[Keyboard Equivalents Reference](#)” on page 42.

## Installing Applications

To install Palm OS applications, you can either use the **Install** menu item or drag and drop files onto Simulator.

### Using the Install Menu Item

Use **Install>Database** to open the Install Database dialog box. You can install a single PRC, PDB, or PQA file, or you can use SHIFT-click to select multiple databases for installation. You will receive a warning message if Palm OS Simulator cannot use a PRC, PDB, or PQA file.

### Using Drag and Drop

Drag and drop PRC, PDB, and PQA files onto the Palm OS Simulator main window. You will receive a warning message if Palm OS Simulator cannot use a PRC, PDB, or PQA file.

## Using AutoRun, AutoLoad, and AutoRunAndQuit

Simulator also supports the AutoRun, AutoLoad and AutoRunAndQuit features that are available with Palm OS Emulator.

To use AutoRun:

- Create a subdirectory of the Simulator directory called AutoRun.

## Using Palm OS Simulator

### *Using Communication Functions*

---

- Place the PRC, PDB, and PQA files that you want to automatically run in the `AutoRun` directory.
- When you start Simulator, Simulator will automatically load the PRC, PDB, and PQA files.

To use `AutoLoad` or `AutoRunAndQuit`, follow the steps listed above using `AutoLoad` or `AutoRunAndQuit` as the directory name rather than `AutoRun`.

## Using AppCreator to Start an Application

To have Simulator switch to a specific application at startup, you can either set the `AppCreator` value to the application's creator ID in the `palmsim.ini` file, or you can specify the `-AppCreator` command line argument. See "[Specifying Command Line Arguments](#)" on page 7 for more information about command line arguments.

## Starting Simulator with a Storage Snapshot File

To have Simulator load a specific storage snapshot file at startup or upon hard reset, you can either:

- Set the `storagesnapshotfile` value in the `palmsim.ini` file
- Specify the `-StorageSnapshotFile` command line argument.

Note that the storage image size specified by the storage snapshot file must match the current storage size setting.

See "[Specifying Command Line Arguments](#)" on page 7 for more information about command line arguments. For more information about storage snapshot files, see "[Storage Menu](#)" on page 40.

## Using Communication Functions

Palm OS Simulator supports the following communication functions.

## Performing a HotSync Operation

You can perform a HotSync® operation through serial connection, through IrDA, and through TCP.

### HotSync Operation with Two Serial Ports

1. Connect the serial ports with a NULL serial cable.
2. Set the properties for the HotSync application to perform a local HotSync operation with one of the serial ports.
3. Using the Simulator menu **Settings > Communications > Communication ports**, set the cradle's port to Standard RS232 bound to the other serial communication port.

### HotSync Operation with One Serial Port

1. Select the Simulator menu **Settings>Communications> Redirect NetLib calls to TCP/IP** in order to redirect the NetLib calls to the host machine's TCP/IP stack.
2. Using the Simulator menu **Settings>Communications> Communication ports**, set the cradle's port to TCP/IP bound to localhost:9.
3. In the HotSync settings for the host computer, enable Network Hotsync.
4. In the HotSync application in the simulation session, set the following settings:
  - Tap **Modem**.
  - Select **Options>Modem Sync Prefs** and tap **Network**. Tap **OK** to save the changes.
  - Select **Options>LANSync Preferences** and tap **LANSync**. Tap **OK** to save the changes.
  - Select **Options>Primary PC Setup** and enter 127.0.0.1 as the Primary PC Address. Tap **OK** to save the changes.
  - Select **Options>Connection Setup** and select **Cradle/Cradle**. Tap **Done** to save the changes.
  - Tap **Select Service** to set your service preferences, and then tap **Done**.

# Using External Debug Tools with Palm OS Simulator


Palm OS Simulator can be used with a 68K debugger to examine the state of the 68K emulated applications.

Palm OS Simulator is a debug target, just as an actual device or Palm OS Emulator. You can use Palm Debugger, Metrowerks CodeWarrior Debugger, or any other debugger you are used to using with Palm OS Emulator.

For example, you can use Palm OS Simulator with Metrowerks CodeWarrior by following these steps:


- In Palm OS Simulator, select **Settings>Communication>Redirect NetLib Calls to Host TCP/IP**, as shown in [Figure 2.3](#), in order to redirect the NetLib calls to the host machine's TCP/IP stack.

**Figure 2.3 Redirect NetLib Calls to Host TCP/IP**

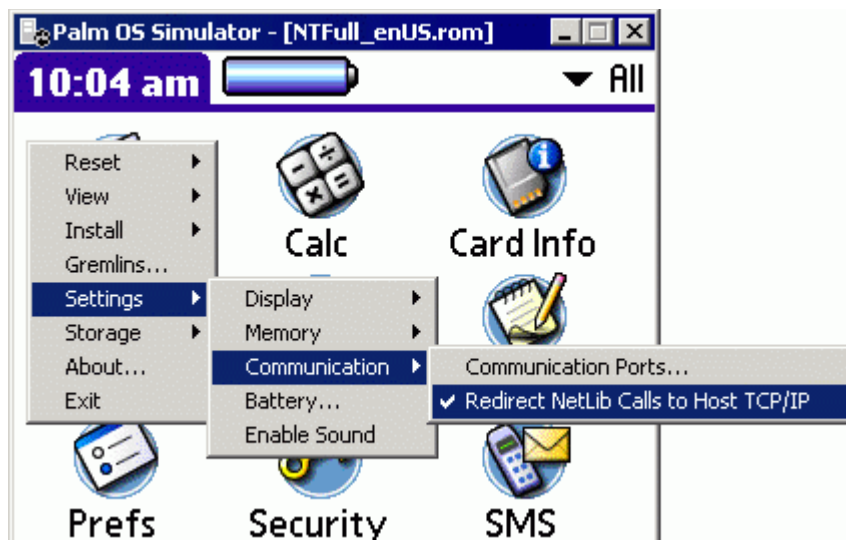

- Also in Palm OS Simulator, select **Settings>Communication>Communication ports** to bind the 68K debugger transport to localhost:2000, as shown in [Figure 2.4](#) on page 21.

**Figure 2.4** Setting the 68K Debugger Transport Values

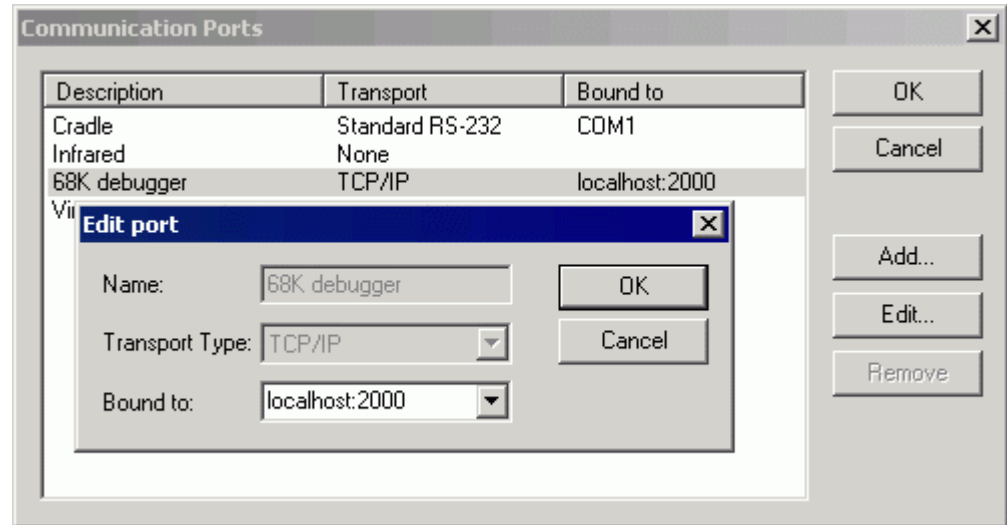


- In CodeWarrior, select **Edit>Preferences** to display the IDE Preferences dialog box, shown in [Figure 2.5](#) on page 22.

## Using Palm OS Simulator

### *Using External Debug Tools with Palm OS Simulator*


---

**Figure 2.5 IDE Preferences Dialog Box**

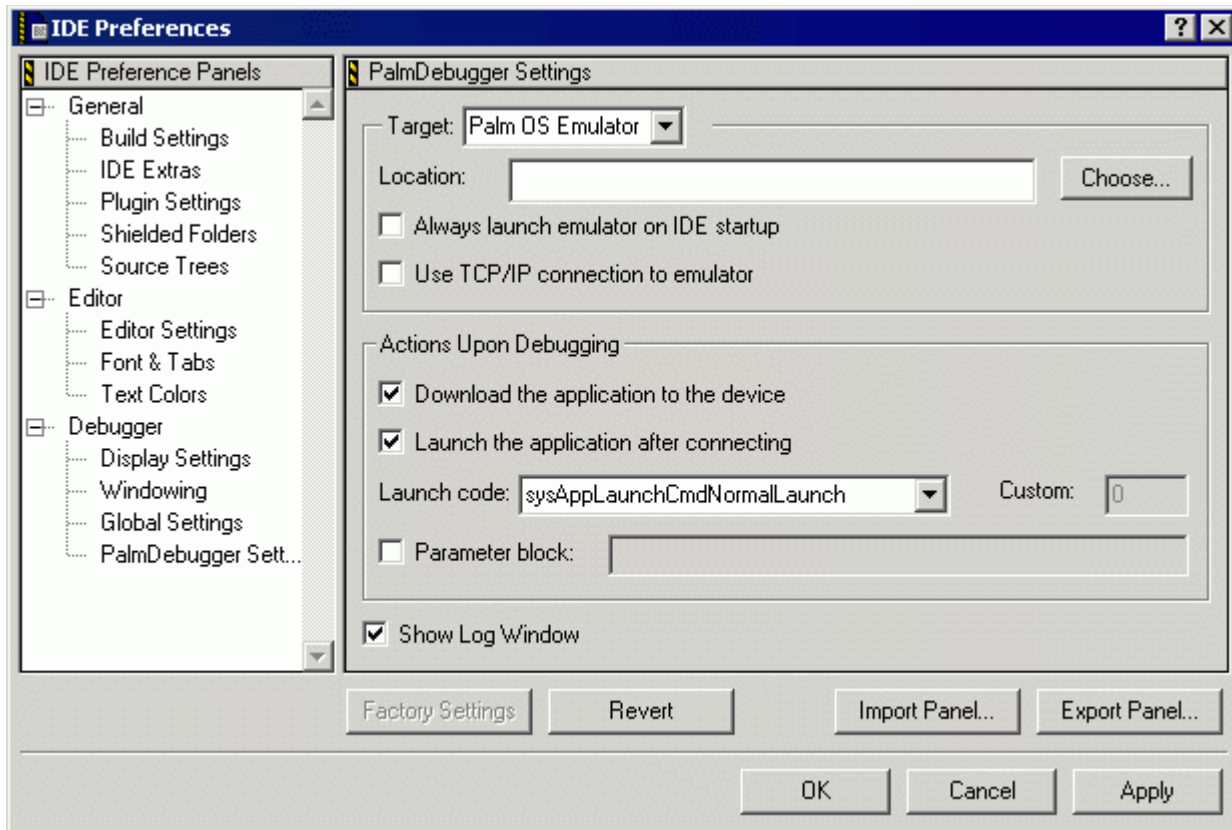

- Click **PalmDebugger Settings** in the IDE Preference Panels tree to display the PalmDebugger Settings panel.
- Set the Target selection to be Palm OS Emulator.
- Click **Choose** next to the Location entry field.
- Use the Choose File dialog box to select the `PalmSim.exe` executable.
- Select the setting **Use TCP/IP connection to emulator**.

Figure 2.6 Setting the CodeWarrior IDE Preferences

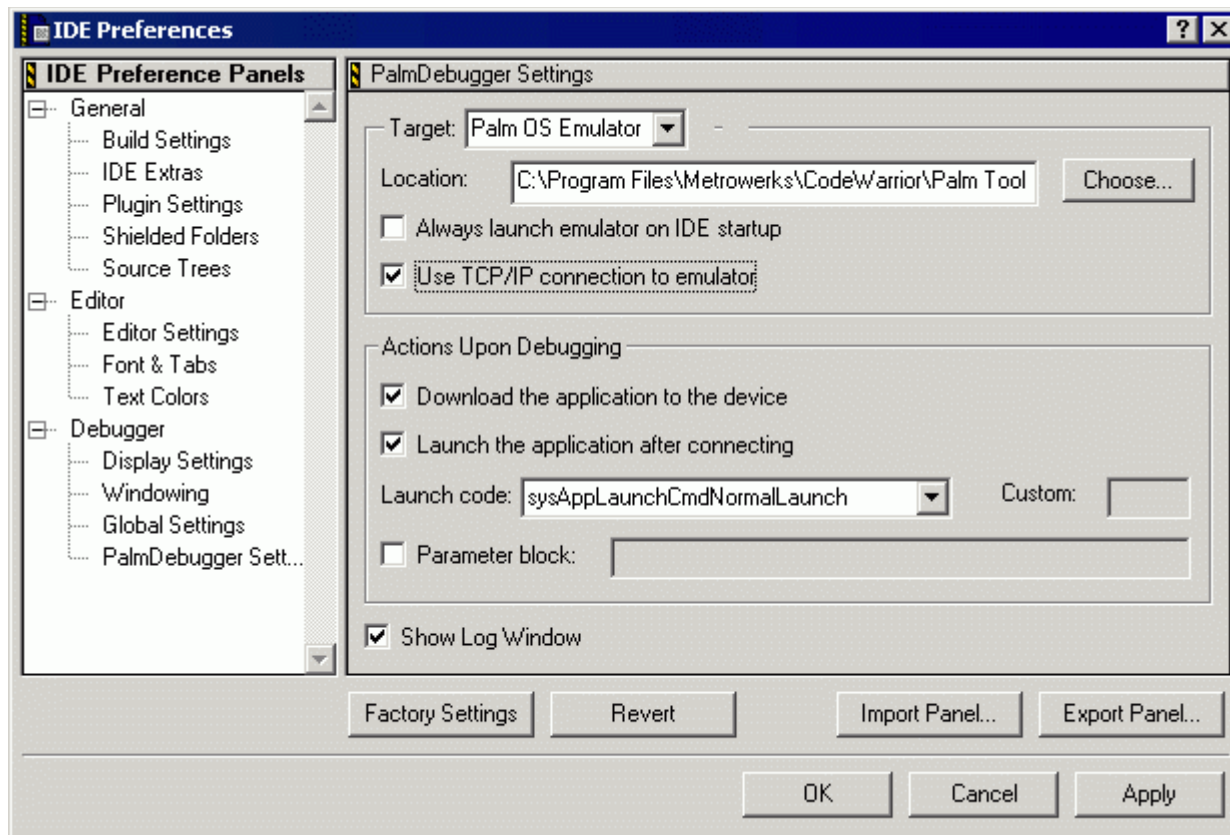

- Click **Apply** or **OK** to set your new values so that Palm OS Simulator will be used to run your application rather than Palm OS Emulator.

---

**NOTE:** Simulator supports Metrowerks CodeWarrior for Palm OS Version 7 and later.

---


## Using Gremlins

Palm OS Simulator's Gremlins testing is similar to the Gremlins testing provided by Palm OS Emulator.

To use Gremlins, use the **Gremlins** menu item to display the Gremlins dialog box, as shown in [Figure 2.7](#) on page 24. In this

dialog box, you specify the characteristics of the Gremlins you want to use to test your application.

**Figure 2.7 Gremlins Dialog Box**

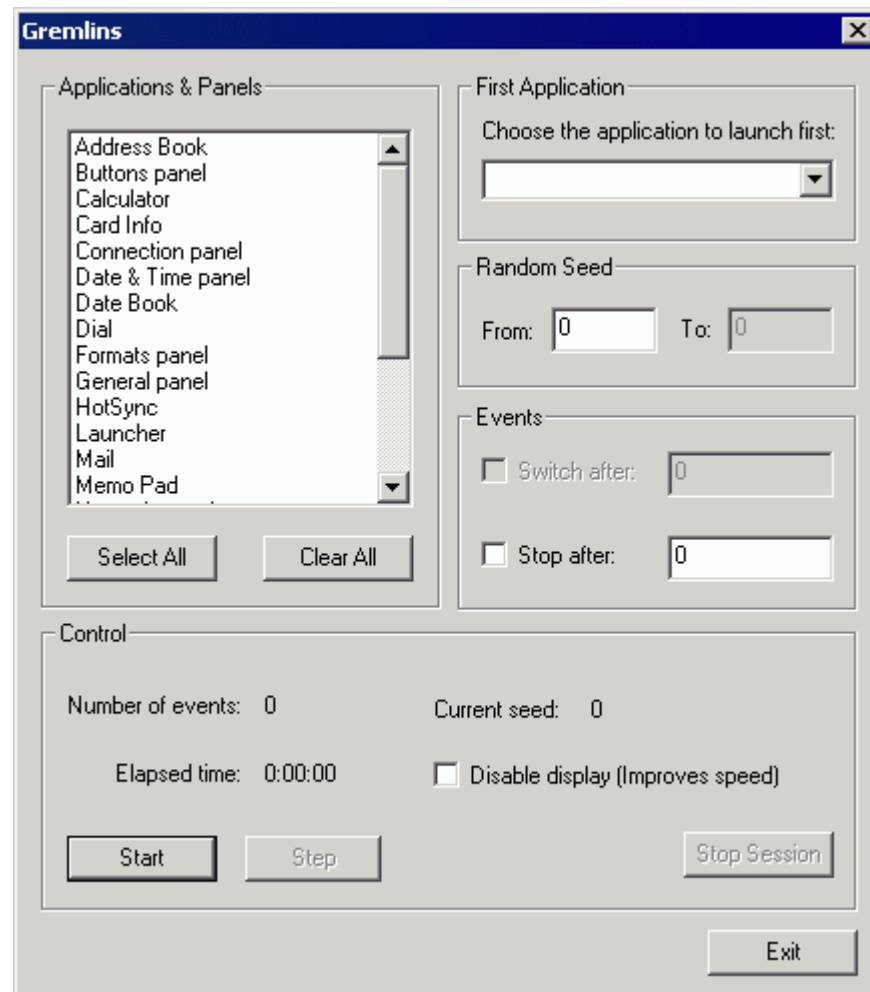

## Applications and Panels

Use this multiple selection list to select the set of applications and OS panels that the Gremlins are to run. You can select a single application or panel, a group of applications and panels, or all applications and panels.



## First Application

Use this drop-down list to select the first application the Gremlins are to run.

## Random Seed

Use the **From** entry field to set the seed for the Gremlin pseudo-random number generator.

---

**NOTE:** The **To** entry field is not yet supported.

---

## Events

Use the **Stop after** entry field to set the maximum number of events for each Gremlin. Simulator stops running each Gremlin after it posts this many events, or after it terminates with an error.

---

**NOTE:** The **Switch after** entry field is not yet supported.

---

## Control

This area allows you to start, step, and stop Gremlin testing. It also allows you to monitor Gremlin testing as it is happening.

## Using the Host Control API

A subset of the host control API, as recognized by Palm OS Emulator, is supported in Palm OS Simulator:

- Standard C Library wrapper selectors
- Remote Procedure Call (RPC)
- External tracing tool support and all selectors required by `HostFS.prc`.

To determine whether a specific host control function is supported, use the `HostIsSelectorImplemented` function.

For more information about the host control API, see *Using Palm OS Emulator*.

# Palm OS Simulator User Interface Reference

---

This chapter provides a reference for the Palm OS® Simulator user interface elements.

## Menu Reference Summary


The Palm OS Simulator menus include:

- “[Reset Menu](#)” on page 28
- “[View Menu](#)” on page 28
- “[Install Menu](#)” on page 31
- “[Gremlins Menu](#)” on page 32
- “[Settings Menu](#)” on page 34
- “[Storage Menu](#)” on page 40
- “[About Menu](#)” on page 41
- “[Exit Menu](#)” on page 41

## Displaying the Palm OS Simulator Menu Items

Right-click (use mouse button 2) on the Palm OS Simulator screen to display the menu items.

**Figure 3.1** Palm OS Simulator Menu Items

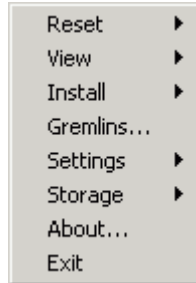

## Reset Menu

Use the **Reset** menu to perform a reset of the current simulation session.

### Soft

Performs a soft reset of the current simulation session. This is equivalent to pressing the reset button on the back of a handheld.

### Hard

Performs a hard reset of the current simulation session. A hard reset erases all data in the simulation session, restoring it to the equivalent of a new handheld.


## View Menu

Use the **View** menu to view information about the installed databases, the contents of the heap, or the user interface events.

## Databases

Opens the Databases dialog box, shown in [Figure 3.2](#) on page 29, which lists the databases included in the current simulator session.

**Figure 3.2 View>Databases Dialog Box**

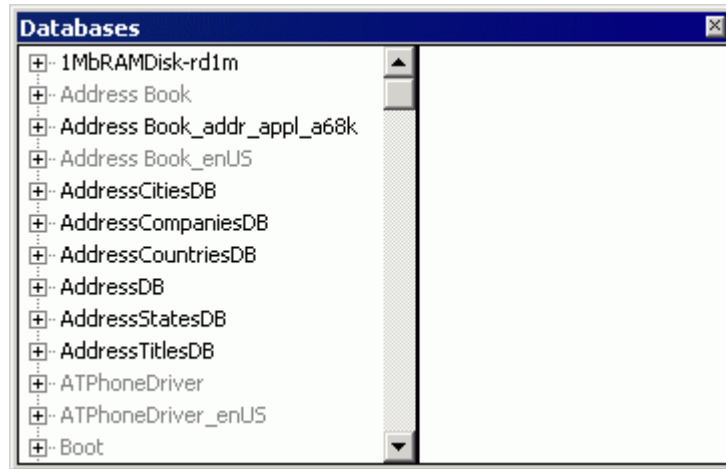

### Using the Databases Dialog Box

- Click on the plus sign icons to view the details of a database.
- Click on the minus sign icons to close the details view of a database.
- For databases that have contents, click on a record to view the record's contents in the right view pane.

**NOTE:** The dimmed databases in the Databases dialog box are the read-only databases.

### Heaps

Opens the Heaps dialog box, shown in [Figure 3.3](#) on page 30, which displays the contents of the heaps for the current simulator session.

**Figure 3.3 View>Heaps Dialog Box**

Heaps							
View							
Heap #	Type	Size	Handles	Free chunks	Movable chunks	Locked chunks	Largest free chunk
0	RAM (v5)	512 KB	200	9 chunks (...)	8 chunks (77...	102 chunks ...	489264 bytes
1	RAM (v5)	3583 KB	200	2 chunks (...)	181 chunks (...)	6 chunks (9...	3560352 bytes
2	ROM (v4)	1855 KB	0	1 chunks (...)	0 chunks (0 b...	1607 chunk...	32156 bytes
Chunk #	Ptr	MemHandle	Lock count	Size	Data Size	Owner	
1	0x00f00338	0x00f00018	1	32	20	0	
2	0x00f00358	0x00f0001c	1	40	32	0	
3	0x00f00380	0x00f00020	1	544	536	0	
4	0x00f005a0	0x00f00024	1	32	20	0	
5	0x00f005c0	0x00f00028	1	40	32	0	
6	0x00f005e8	0x00f0002c	1	752	744	0	
7	0x00f008d8	0x00f00030	1	32	20	0	
8	0x00f008f8	0x00f00034	1	40	32	0	
9	0x00f00920	0x00f00038	1	16	4	0	
10	0x00f00930	0x00f0003c	1	32	20	0	


### Using the Heaps Dialog Box

- Use the **View>Refresh** menu to refresh the heap information that is displayed.
- Use the **View>Lock** menu to keep the heap information from being updated.
- Use the **View>Unlock** menu to allow the heap information to be updated.
- When viewing the ROM heap, click on a chunk number to view the contents of a chunk in the bottom view pane.

## Events

Opens the Events dialog box, shown in [Figure 3.4](#), which displays the user interface events for the current simulator session.

**Figure 3.4 View>Events Dialog Box**

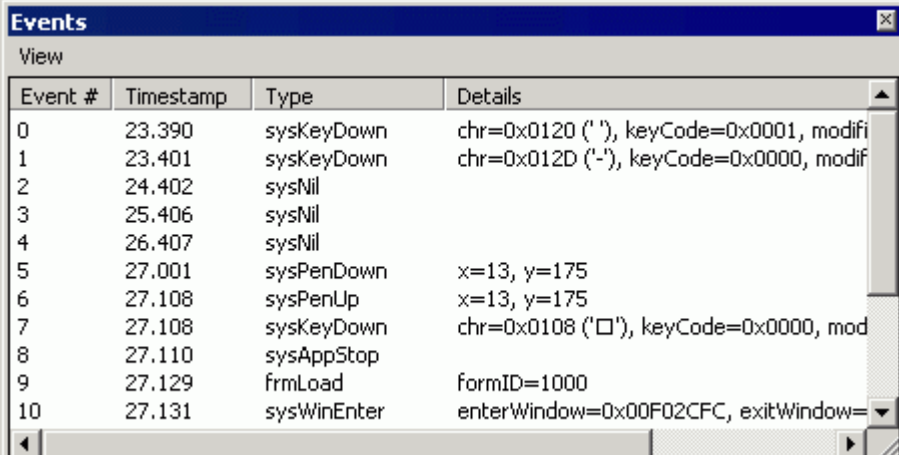

Event #	Timestamp	Type	Details
0	23.390	sysKeyDown	chr=0x0120 (' '), keyCode=0x0001, modifi
1	23.401	sysKeyDown	chr=0x012D ('-'), keyCode=0x0000, modif
2	24.402	sysNil	
3	25.406	sysNil	
4	26.407	sysNil	
5	27.001	sysPenDown	x=13, y=175
6	27.108	sysPenUp	x=13, y=175
7	27.108	sysKeyDown	chr=0x0108 ('□'), keyCode=0x0000, mod
8	27.110	sysAppStop	
9	27.129	frmLoad	formID=1000
10	27.131	sysWinEnter	enterWindow=0x00F02CFC, exitWindow=


### Using the Events Dialog Box

- Use the **View>Clear** menu to clear the events information that is displayed.
- Use the **View>Lock** menu to keep the events information from being updated.
- Use the **View>Unlock** menu to allow the events information to be updated.

## Install Menu

Use the **Install>Database** menu to install PRC, PDB, and PQA files. The **Install>Database** menu displays the Install Database dialog box, shown in [Figure 3.5](#).

**Figure 3.5 Install Database Dialog Box**

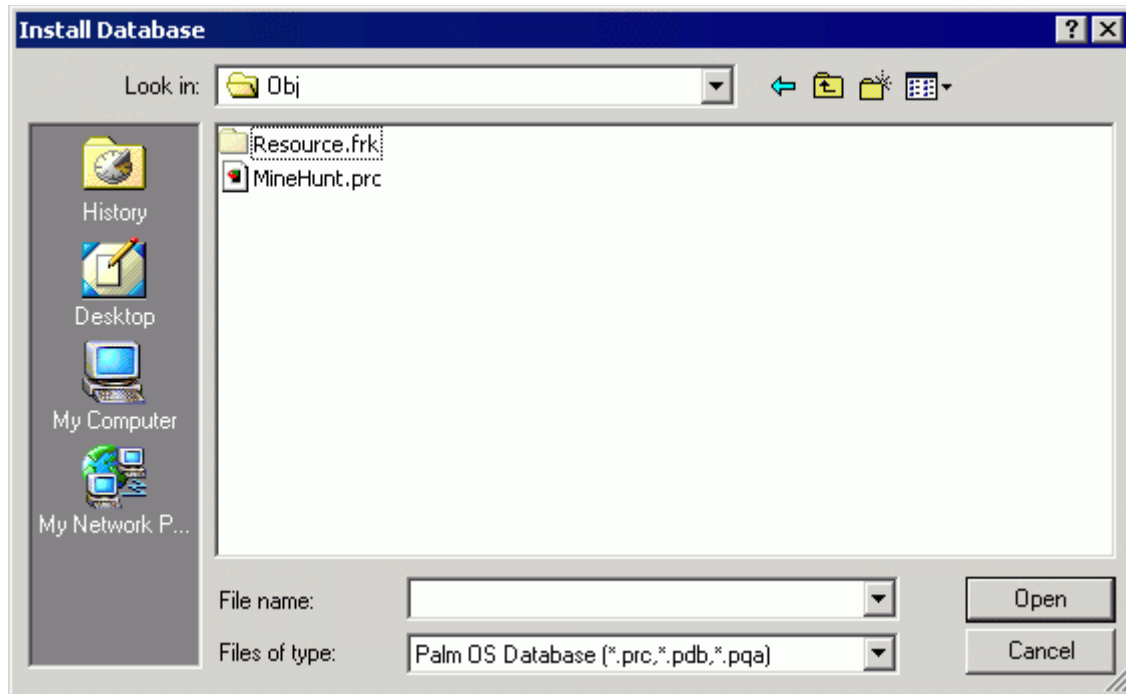

#### Using the Install Database Dialog Box


- To install a single database, select a PRC, PDB, or PQA file and click **Open**.
- To install multiple databases, use SHIFT-click to select multiple PRC, PDB, and PQA files and click **Open**.

## Gremlins Menu

Use the **Gremlins** menu to perform Gremlin testing. The **Gremlins** menu displays the Gremlins dialog box, as shown in [Figure 3.6](#).



**Figure 3.6 Gremlins Dialog Box**

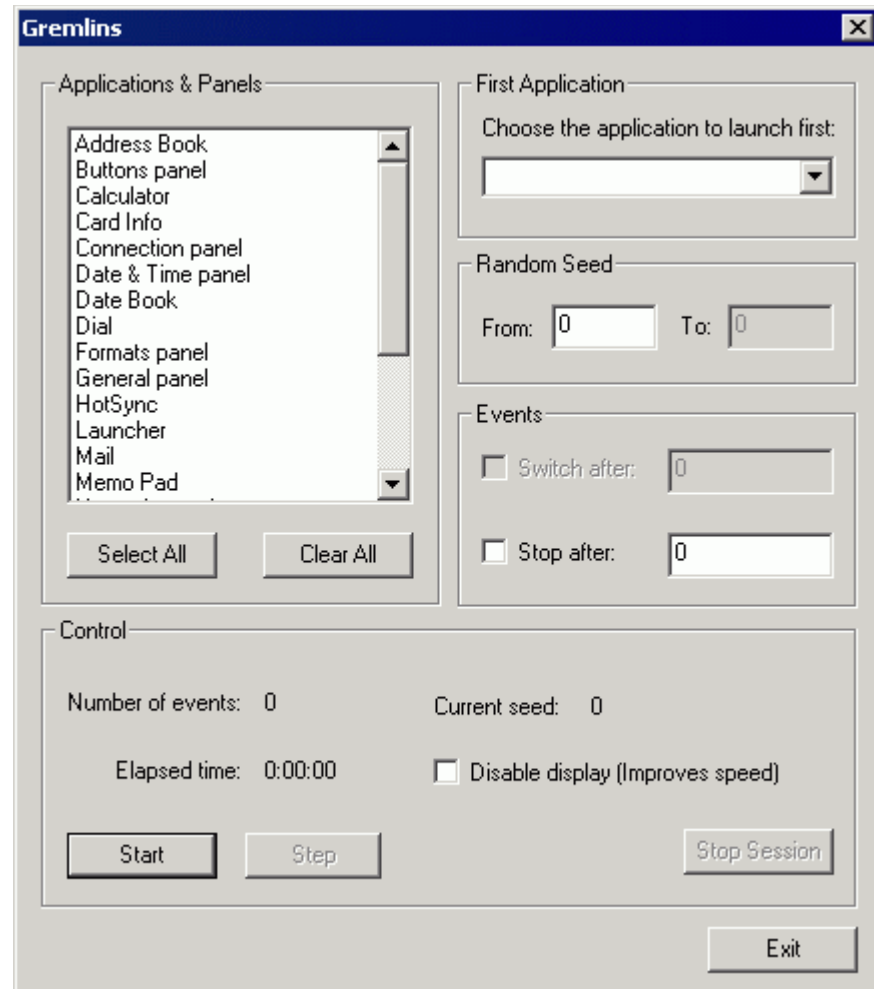

For more information on using Gremlins, see “[Using Gremlins](#)” on page 23.

## Settings Menu

Use the **Settings** menu to change the settings for the current simulation session.

### Display>Color Depth

Set the color depth for this simulation session:

- 2 colors
- 4 colors
- 16 colors
- 256 colors
- 65536 colors

---


**NOTE:** If you change the setting for **Color Depth**, Palm OS Simulator will perform a soft reset.

---

### Display>Allowed Screen Depths

Opens the Allowed Screen Depths dialog box, shown in [Figure 3.7](#), so that you can set the screen depths appropriate for this simulation session.

**Figure 3.7** Allowed Screen Depths Dialog Box

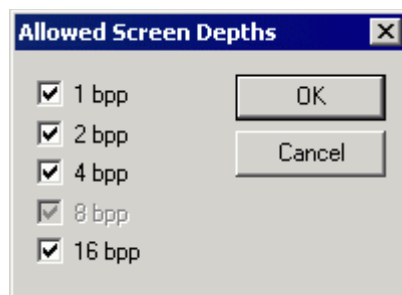

---

**NOTE:** If you change the setting for **Allowed Screen Depths**, Palm OS Simulator will perform a soft reset.

---

## **Display>Allow Direct Screen Access**

Indicates whether installed applications are allowed to have direct access to the LCD screen buffer.

## **Display>Magnification**

Sets the scaling size for the simulation session display:

- 1:1
- 2:1
- 3:1
- 4:1

## **Display>Always on Top**

Indicates whether the Simulator window should stay on top when you switch to other application windows.

## **Display>Resolution**

Sets the pixel resolution for the simulation session display.

- 160x160 - Select this setting for a low density display.
- 160x220 - Select this setting for a low density display with a dynamic input area.
- 240x240 - Select this setting for a one-and-one-half (1.5X) density screen.
- 240x320 - Select this setting for a one-and-one-half (1.5X) density screen with a dynamic input area.
- 320x320 - Select this setting for a double density screen.
- 320x480 - Select this setting for a double density screen with a dynamic input area.

## **Memory>RAM Size**

Sets the RAM size for this simulation session:

- 1 MB
- 2 MB

- 4 MB
- 8 MB
- 16 MB
- 32 MB
- 64 MB
- 128 MB

---

**NOTE:** If you change the value of the **RAM Size** setting, Palm OS Simulator will perform a hard reset.

---

### Memory>Dynamic Heap Size

Sets the dynamic heap size for this simulation session:

- 512 KB
- 1024 KB
- 2048 KB

---

**NOTE:** If you change the value of the **Dynamic Heap Size** setting, Palm OS Simulator will perform a hard reset.

---

### Memory>Storage Is Write-Protected

Indicates whether the storage is write-protected for this simulation session.

---

**NOTE:** If you change the setting for **Storage Is Write-Protected**, Palm OS Simulator will perform a soft reset.

---

### Memory>PACE Extended Checks

Indicates whether you want the extra memory testing provided with PACE's extended checking of memory access.

PACE (Palm Application Compatibility Environment) checks pointer values before passing them to API functions, and creates an alert for unexpected NULL pointer values.


Select this setting to keep PACE's standard behavior; clear this setting to relax PACE's checking of NULL pointers.

For more information about PACE, see "[Palm Application Compatibility Environment](#)" on page 3.

## **Communication>Communication Ports**

Displays the Communication Ports dialog box, shown in [Figure 3.8](#), so that you can change the communication port settings for the current simulation session.

**Figure 3.8 Communication Ports Dialog Box**

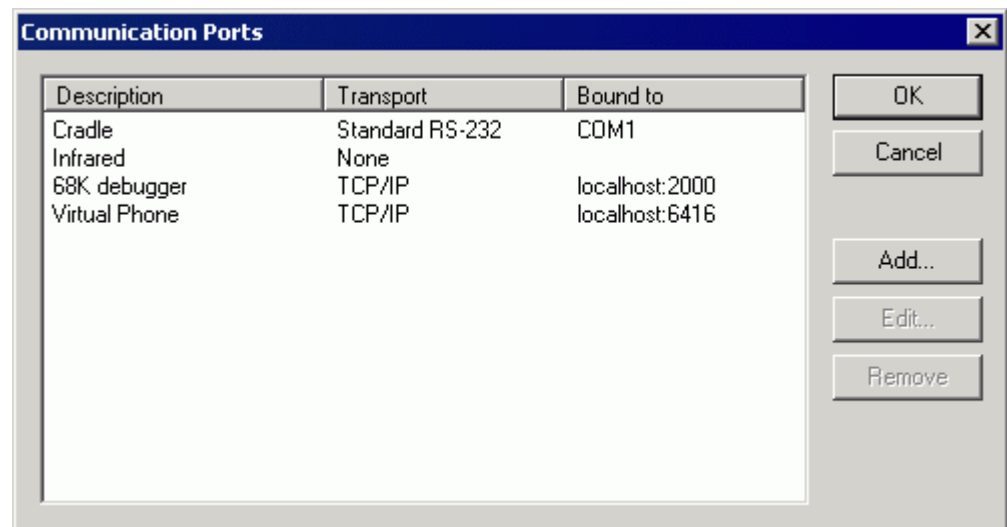


## **Communication>Redirect NetLib Calls to Host TCP/IP**

Indicates whether NetLib calls should be redirected to the host TCP/IP communication stack.

## **Battery**

Displays the Battery dialog box, shown in [Figure 3.9](#), so that you can change the simulated battery settings.

**Figure 3.9 Battery Dialog Box**

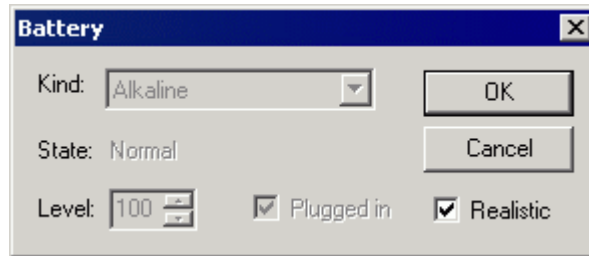

### Using the Battery Dialog Box

- Select the **Kind** of battery you want to simulate from the supported list:
  - Alkaline: a hydrous alkaline (non-rechargeable) battery
  - NiCad: a rechargeable nickel cadmium battery
  - LiIon: a rechargeable lithium ion battery
  - RechAlk: a rechargeable alkaline battery
  - NiMH: a rechargeable nickel metal hydride battery
  - LiIon1400: a rechargeable lithium ion battery with a capacity of 1400 mAh (milliamperes hours)
- The battery **State** is dependent on the **Level** selected:

State	Level
Normal	100 to 21
Low	20 to 11
Critical	10 to 6
Shutdown	5 to 0

- If the battery type is LiIon or LiIon1400 and the **Plugged in** setting is selected, then the simulated device will be in battery charging mode, as shown in [Figure 3.10](#) on page 39.

Figure 3.10 Battery Charging Mode



## Enable Sound

Select Enable Sound to enable sound simulation for this simulation session.

---

**NOTE:** If you change the value of the **Enable Sound** setting, Palm OS Simulator will perform a soft reset.

---


## Storage Menu

Use the **Storage** menu to load and save a storage snapshot file (SSF file).

### Load

Opens the Load Storage Heap Snapshot dialog box, shown in [Figure 3.11](#), so that you can load the storage heap with contents that were previously saved to a storage snapshot file (SSF file).

**Figure 3.11 Load Storage Heap Snapshot Dialog Box**

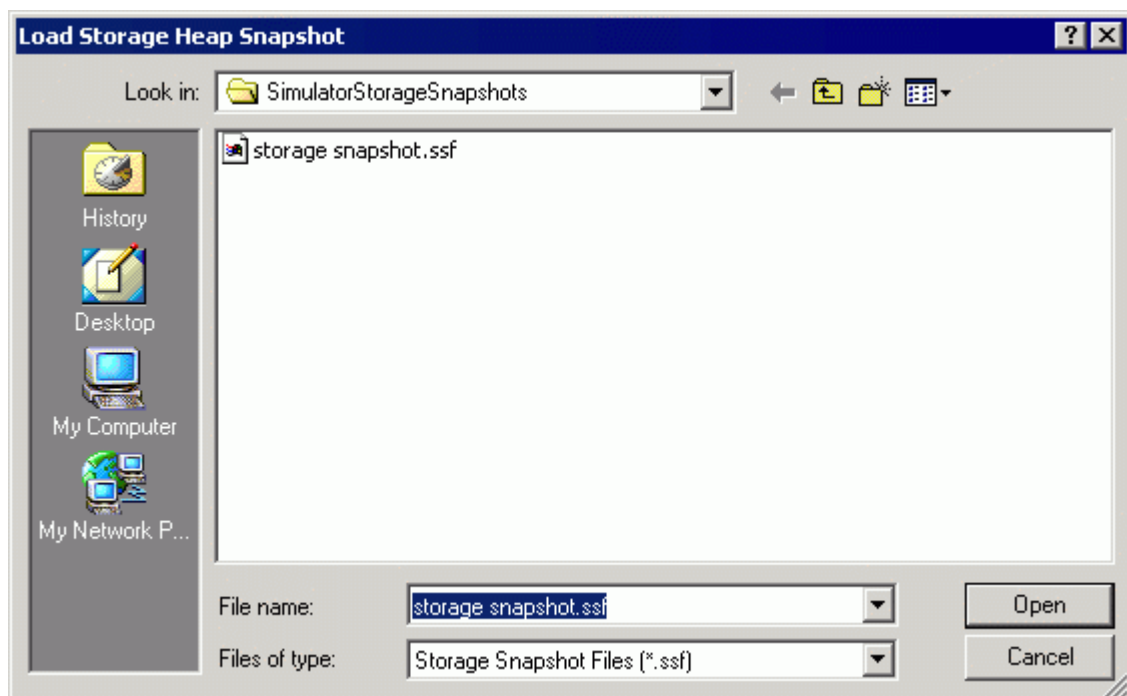


### Save

Opens the Save Storage Heap Snapshot dialog box, shown in [Figure 3.12](#), so that you can save the current contents of the storage heap to a storage snapshot file (SSF file).



Figure 3.12 Save Storage Heap Snapshot Dialog Box

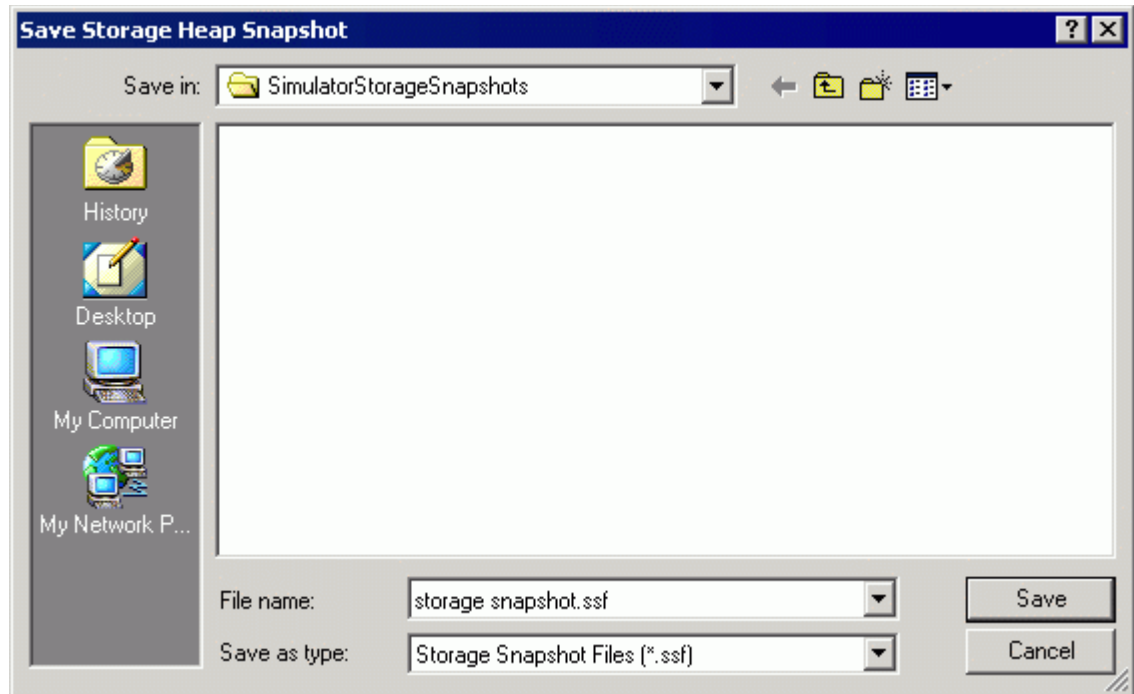

## About Menu

Use the **About** menu to get release information about Palm OS Simulator.

## Exit Menu

Use the **Exit** menu to exit Palm OS Simulator.

When you exit Simulator, the current option values are written to the file `palmsim.ini` for the next time you start Simulator. For more information on using `palmsim.ini`, see [Chapter 2, “Using the Initialization File,”](#) on page 14.

## Keyboard Equivalents Reference

Because it is more difficult to use the mouse in place of a handheld stylus, Palm OS Simulator provides keyboard equivalents for many functions.

### Hardware Buttons

The keyboard equivalents for handheld hardware buttons is similar to the key mapping recognized by Palm OS Emulator.

**Table 3.1 Keyboard Equivalents for Hardware Buttons**

Hardware Button	Keyboard Equivalent
Power (on/off)	ESC
Hardware button 1 (Date Book application)	F1
Hardware button 2 (Address Book application)	F2
Hardware button 3 (To Do List application)	F3
Hardware button 4 (Memo Pad application)	F4
Scroll up	PGUP
Scroll down	PGDN

### Additional Keyboard Functions

In addition to hardware button equivalents, Palm OS Simulator provides the following functions that can be invoked from the keyboard.

**Table 3.2 Palm OS Simulator Keyboard Functions**

<b>Function</b>	<b>Keyboard Equivalent</b>
Enter a shortcut character and a period.	PAUSE   ATTN
Display the pop-up menu.	CTRL + A
Enter the .	CTRL + C
Enter a confirmation character.	CTRL + D
Tap the Applications icon.	CTRL + E
Display the onscreen keyboard (Tap the “abc” in the ).	CTRL + F
Tap the Find icon.	CTRL + I
Tap the Calculator icon.	CTRL + K
Enter a linefeed character.	CTRL + M
Tab to the next field.	CTRL + N
Tab to the previous field.	CTRL + P
Perform a soft reset.	CTRL + R
Perform a hard reset.	CTRL + SHIFT + R
Power (on/off)	CTRL + S
Enter the 68K debugger.	CTRL + PAUSE



# Index

---

## A

- about menu 41
- alkaline battery 38
- allow direct screen access 35
- allowed screen depths dialog box 34
- always on top menu 35
- AppCreator 18
- AutoLoad 17
- automated testing 23
- AutoRun 17
- AutoRunAndQuit 17

## B

- battery dialog box 38
- battery menu 37
- battery settings 37

## C

- changing the heap size setting 36
- changing the RAM size setting 35
- CodeWarrior Debugger 20
- color depth menu 34
- command line arguments 7
- communication functions 18
- communication ports dialog box 37
- communication ports menu 37
- communication settings 37
- communication stacks 3
- communication>communication ports menu 37
- communication>redirect netlib calls to host TCP/IP menu 37
- critical battery state 38

## D

- DAL 3
- databases 29
- databases dialog box 29
- debugging 20, 43
- Device Abstraction Layer 3
- direct screen access 35
- display resolution menu 35
- display>allow direct screen access menu 35

- display>allowed screen depths menu 34
- display>always on top menu 35
- display>color depth menu 34
- display>magnification 35
- display>resolution 35
- drag and drop 17
- dynamic heap size menu 36

## E

- enable sound menu 39
- entering data 17
- entering the debug tool 43
- events 31
- events dialog box 31
- EXE file 6
- exit menu 41
- extended memory checks 36
- external debug tools 20

## F

- file
  - DLL 2
  - EXE 6
  - INI 14
  - PalmSim.exe 6
  - palmsim.ini 14
  - PDB 17
  - PQA 17
  - PRC 17
  - ROM 5, 8
  - SSF 9, 40
  - storage snapshot 9

## G

- gremlins 23
- gremlins dialog box 33
- gremlins menu 32

## H

- hard reset 28, 43
- hardware buttons 42
- heap size menu 36
- heaps 30

---

- heaps dialog box 30
- host control API 26
- host TCPIP 37
- HotSync operation 19

## I

- INI file 14
- initialization file 14
- install database dialog box 32
- install menu 31
- install>database menu 31
- installing applications 17
- installing databases 31
- installing Palm OS Simulator 5

## K

- keyboard equivalents 42
- keyboard functions 42
- kind of battery 38

## L

- liion battery 38
- liion1400 battery 38
- load menu 40
- load storage heap 40
- load storage heap snapshot dialog box 40
- loading StorageSnapshotFile 40
- low battery state 38

## M

- magnification 35
- main window 7
- memory dynamic heap size 36
- memory PACE extended checks 36
- memory RAM size 35
- memory storage write protected 36
- memory>dynamic heap size menu 36
- memory>PACE extended checks menu 36
- memory>RAM size menu 35
- memory>storage is write-protected menu 36
- menu items 16
- menus 27
  - about 41

- displaying 28
- exit 41
- gremlins 32
- reset 28
- settings 34
- storage 40
- view 28

- Metrowerks CodeWarrior Debugger 20

## N

- NetLib calls 37
- next field 43
- nicad battery 38
- nimh battery 38
- normal battery state 38

## O

- overview 1

## P

- PACE 3
- PACE extended checks 36
- Palm Application Compatibility Environment 3
- Palm Debugger 20
- Palm OS
  - applications 2
  - communication stacks 3
  - runtime services 2
- Palm OS Simulator
  - command line arguments 7
  - communication functions 18
  - components 2
  - debugging 20
  - display 16
  - entering data 17
  - gremlins 23
  - host control API 26
  - initialization file 14
  - installing 5
  - installing applications 17
  - main window 7
  - menu items 16
  - overview 1
  - performing a HotSync operation 19
  - prerequisites 4

---

- ROM images 15
  - running 16
  - starting 6
- Palm Simulator 4
- palmsim.ini 14
- PDB file 17
- performing a hard reset 28
- performing a soft reset 28
- power on 43
- PRC file 17
- previous field 43

## R

- RAM size menu 35
- rechalk battery 38
- redirect NetLib calls 37
- redirect netlib calls to host TCP/IP menu 37
- reset menu 28
  - reset>hard menu 28
  - reset>soft menu 28
- resolution menu 35
- ROM file 5, 8
- ROM images 15
- running Palm OS simulator 16
- runtime services 2

## S

- save menu 40
- save storage heap 40
- save storage heap snapshot dialog box 41
- saving StorageSnapshotFile 40
- scaling size 35
- screen access menu 35
- screen depths 34
- screen depths menu 34
- setting access to screen buffer 35
- setting display resolution 35
- setting the allowed screen depths 34
- setting the color depth 34
- setting the communication ports 37
- setting the scaling size 35
- setting the screen magnification 35

- settings menu 34
  - settings>battery menu 37
  - settings>communication menu 37
  - settings>display menu 34
  - settings>enable sound menu 39
  - settings>memory menu 35
- showing heap contents 30
- showing installed databases 29
- showing user interface events 31
- shutdown battery state 38
- soft reset 28, 43
- sound settings 39
- SSF file 9, 40
- starting Palm OS simulator 6
- stay on top 35
- storage heap contents 40
- storage is write-protected menu 36
- storage menu 40
- storage snapshot file 40
- storage write protected 36
- storage>load menu 40
- storage>save menu 40
- StorageSnapshotFile 18, 40

## T

- tabbing 43
- TCPIP communication 37
- testing 68K applications 3
- testing with extended checking 36
- testing with gremlins 23
- turning power on 43

## U

- user interface events 31
- using a mouse 17
- using AppCreator 18
- using AutoRun, AutoLoad, and AutoQuit 17
- using drag and drop 17
- using external debug tools 20
- using StorageSnapshotFile 18
- using the host control API 26
- using the initialization file 14

---

## **V**

view menu 28  
view>databases menu 29  
view>events menu 31  
view>heaps menu 30  
viewing databases 29

viewing events 31  
viewing heaps 30

## **W**

window size 35  
write protected storage 36