

Pico MZ-80K/A

User and Systems Manuals

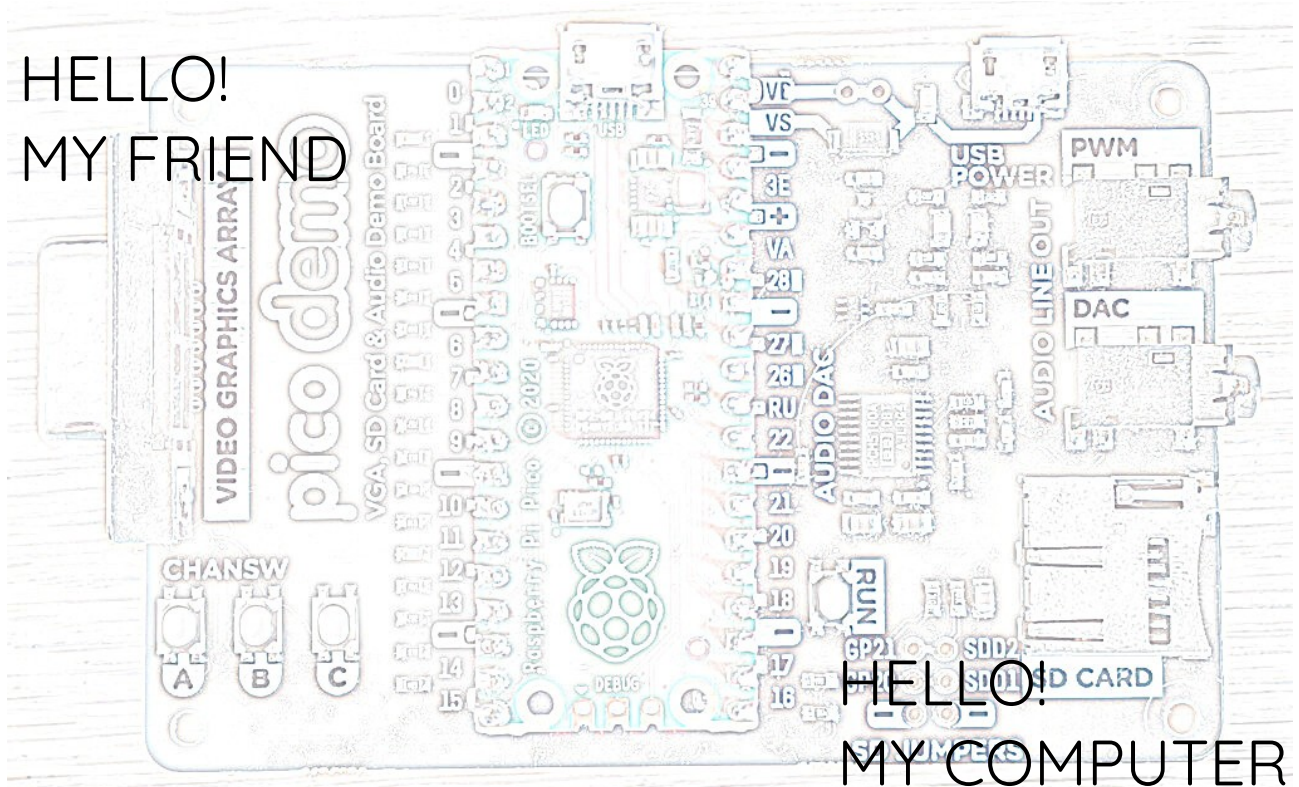


Table of Contents

Introduction.....	4
Getting started.....	5
Hardware requirements – Pimoroni VGA Demo Base.....	5
Hardware requirements – RC2014 RP2040 VGA Terminal Card.....	7
Hardware requirements – RC2014 Pi Pico VGA Terminal Card.....	8
Finding software for the Pico MZ-80K/A.....	9
Installing / re-installing the Pico MZ-80K/A firmware.....	10
Pimoroni VGA demo base.....	10
RC2014 RP2040 VGA Terminal Card.....	10
RC2014 Pi Pico VGA Terminal Card.....	10
First Boot – MZ-80K is the default configuration.....	11
First Boot – MZ-80A can be selected at power on.....	12
Keyboard layouts.....	13
The MZ-80K keyboard layout.....	13
Mapping the MZ-80K keyboard to a UK USB keyboard.....	13
Black MZ-80K keys.....	13
Yellow MZ-80K keys.....	14
Blue MZ-80K keys.....	15
The MZ-80A keyboard layout.....	16
MZ-80A CTRL keys.....	16
USB keyboard - Function keys.....	18
F1 to F3 – Cassette deck emulation.....	18
F4 – Emulator status area.....	18
F5 – Reverse video (MZ-80K only).....	18
F6 – UK/Japanese character graphics ROM (MZ-80K only).....	18
F9 – Keyboard scan mode (diag versions only).....	18
F10 – Reset button (MZ-80A only).....	19
F11 and F12 – Experimental fast memory dump file.....	19
Unused function keys.....	19
Cassette tape emulation.....	20
Loading files from a microSD card.....	20
Saving files to a microSD card.....	21
Using a terminal emulator with the Pico MZ-80K/A.....	22
MicroSD card support.....	23
Troubleshooting.....	24
Systems manual.....	25
Compiling the Pico MZ-80K/A Emulator.....	25
Pre-requisites for Raspberry Pi OS (Debian Bookworm).....	25
Pico MZ-80K/A software architecture.....	27
Overview.....	27
The MZ-80K memory map.....	28
The MZ-80A memory map.....	29
Memory dump files.....	30
Pico MZ-80K/A memory dump file format as of February 7th 2025.....	30
Header.....	30
Monitor workarea and user RAM.....	30
Video RAM.....	30

Z80 state.....30

8253 state.....30

Acknowledgements.....31

Introduction

The Sharp BASIC manual from 1979 introduces the user to the MZ-80K in this way.

Here's a new friend for you

The MZ-80K is ready to enjoy conversation with you. Through conversation, it will help you solve difficult calculation problems or become a partner to play a game with. More than that, it has unknown potentialities to be opened up with you. This is just like a journey into unknown space. Together with your new friend, let's make the journey now.

The Pico MZ-80K/A aims to faithfully re-create this iconic computer and the later MZ-80A model so that your conversation can carry on more than four decades after the journey began.

But first, you will need to understand a little more about how to set up the Pico MZ-80K/A, so that it can be your new friend.

Getting started


Hardware requirements – Pimoroni VGA Demo Base

The Pico MZ-80K/A can use the Pimoroni VGA Demo Base with a Raspberry Pico or Pico 2 microcontroller to re-create the hardware of a Sharp MZ-80K or Sharp MZ-80A. To run the emulator, you will need:

1. A Pimoroni VGA Demo Base.
2. A Raspberry Pico H or Pico2 H (or solder headers to a standard Pico or Pico 2).
3. A VGA cable to enable your VGA demo base to be plugged into a suitable monitor.
- 4¹. An OTG adaptor or cable to allow a USB keyboard to be plugged into the micro USB port on your Pico or Pico 2.
- 5². A power supply. This must be plugged into the micro USB port on your VGA demo base marked 'USB POWER'. An official Raspberry Pi 5V, 12.5W Micro USB Power Supply is suitable.

1 An alternative to using a separate keyboard and power supply is to connect the Pico's USB port to a computer's USB port. A terminal emulator, such as minicom, can then be used to provide input to the emulator using the computer's keyboard if a diagnostic (diag) version is used. See the section on using a terminal emulator with the Pico MZ-80K/A later on in this manual for more details.

2 As footnote 1. A separate power supply is not used if the Pico's USB port is connected to a computer.

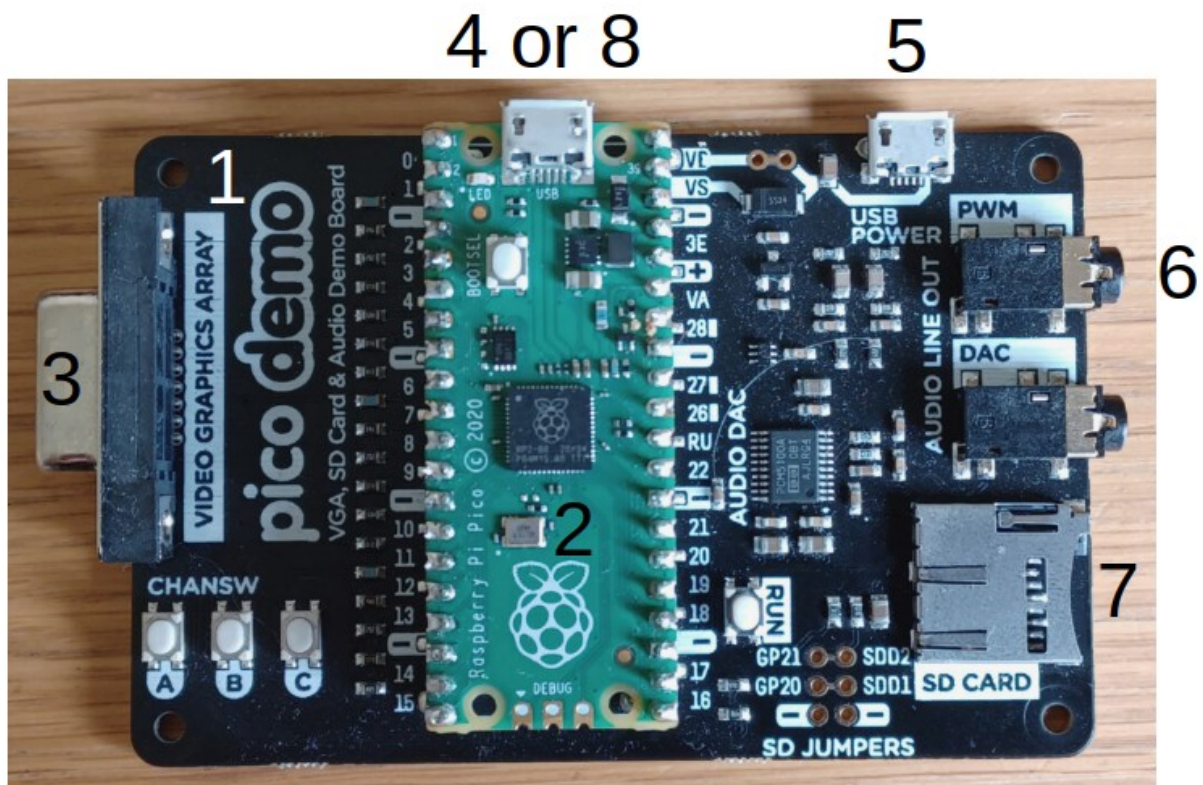

6. A speaker or speakers, connected to a 3.5mm stereo jack, and plugged into the PWM socket on the VGA demo base. The DAC socket is not currently supported.

7. A FAT32 formatted microSD card³, containing the Sharp MZ-80K and/or Sharp MZ-80A software you wish to run. These should be '.mzf', '.mzt' or '.m12' format files. Analogue .wav files are not currently supported by the emulator so must be converted before use.


8. A USB cable with a micro USB plug for the Pico, to enable the Pico MZ-80K/A firmware to be installed and re-installed from a computer.

³ See the section on microSD card support for known working / not working microSD cards.

Hardware requirements – RC2014 RP2040 VGA Terminal Card

The Pico MZ-80K/A can use the RC2014 RP2040 VGA Terminal Card installed on a RC2014 backplane to re-create the hardware of a Sharp MZ-80K or Sharp MZ-80A. To run the emulator, you will need:

1. A RC2014 backplane.
2. A RC2014 RP2040 VGA Terminal Card.
3. A VGA cable to enable your VGA demo base to be plugged into a suitable monitor.
4. A USB keyboard.
5. A 5v power supply for the RC2014 backplane.
6. For sound, a passive buzzer or speaker connected to GPIO23 and/or 24 on the expansion connector as the active buzzer on the card cannot be used.

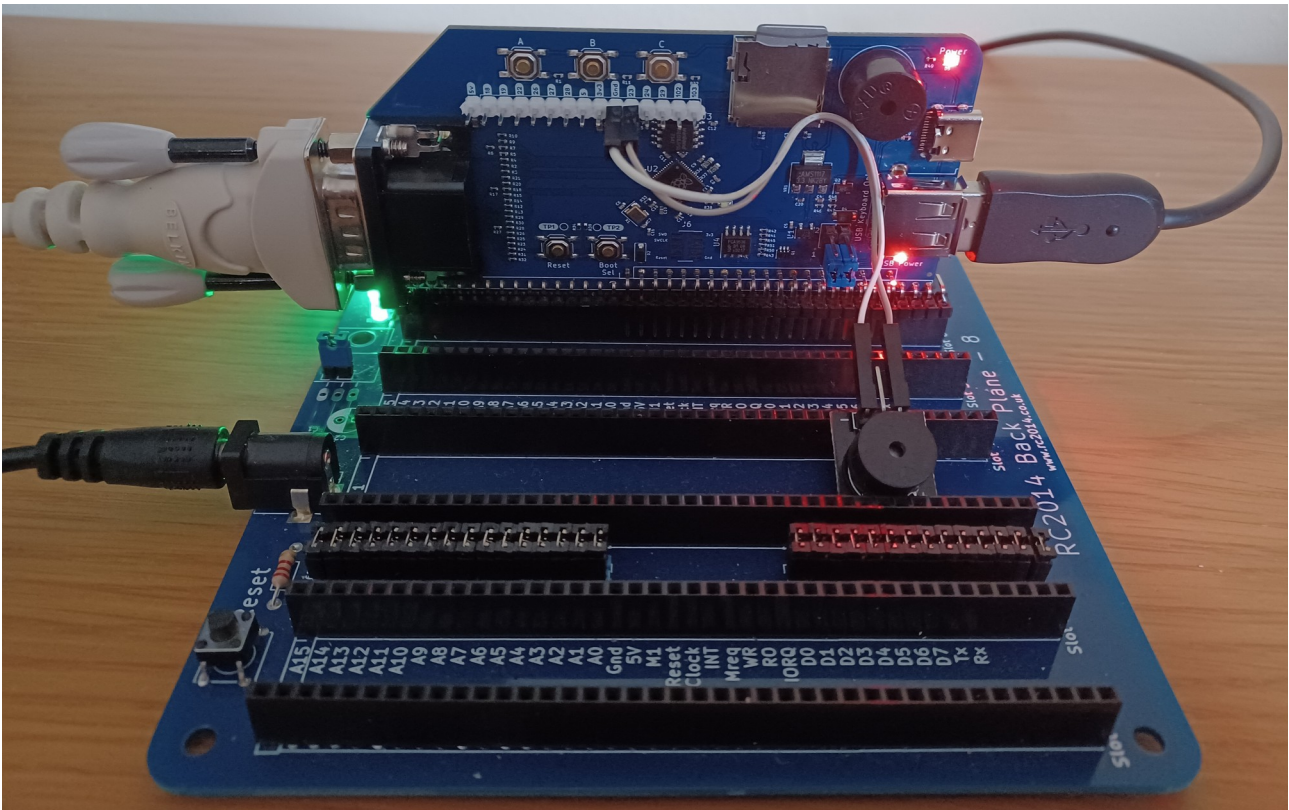

7. A FAT32 formatted microSD card⁴, containing the Sharp MZ-80K and/or MZ-80A software you wish to run. These should be '.mzf', '.mzt' or '.m12' format files.


8. A USB cable with a USB-C plug for the RC2014 RP2040 VGA Terminal Card, to enable the Pico MZ-80K/A firmware to be installed and re-installed from a computer. Note that the card cannot be powered using this port as the USB keyboard will not operate.

⁴ See the section on microSD card support for known working / not working microSD cards.

Hardware requirements – RC2014 Pi Pico VGA Terminal Card

The Pico MZ-80K can use the RC2014 Pi Pico VGA Terminal Card installed on a RC2014 backplane to re-create the hardware of a Sharp MZ-80K. To run the emulator, you will need:

1. A RC2014 backplane.
2. A RC2014 Pi Pico VGA Terminal Card plus a 3.3v capable microSD card breakout attached to the expansion connector.
3. A VGA cable to enable your VGA demo base to be plugged into a suitable monitor.
4. An OTG adaptor or cable to allow a USB keyboard to be plugged into the micro USB port on your Pico.
5. A 5v power supply for the RC2014 backplane.
6. For sound, a passive buzzer or speaker connected to GPIO18 and/or 19 on the expansion connector. Ground can be taken from the middle pin of the UART RX block, as the UART is not used by the emulator.

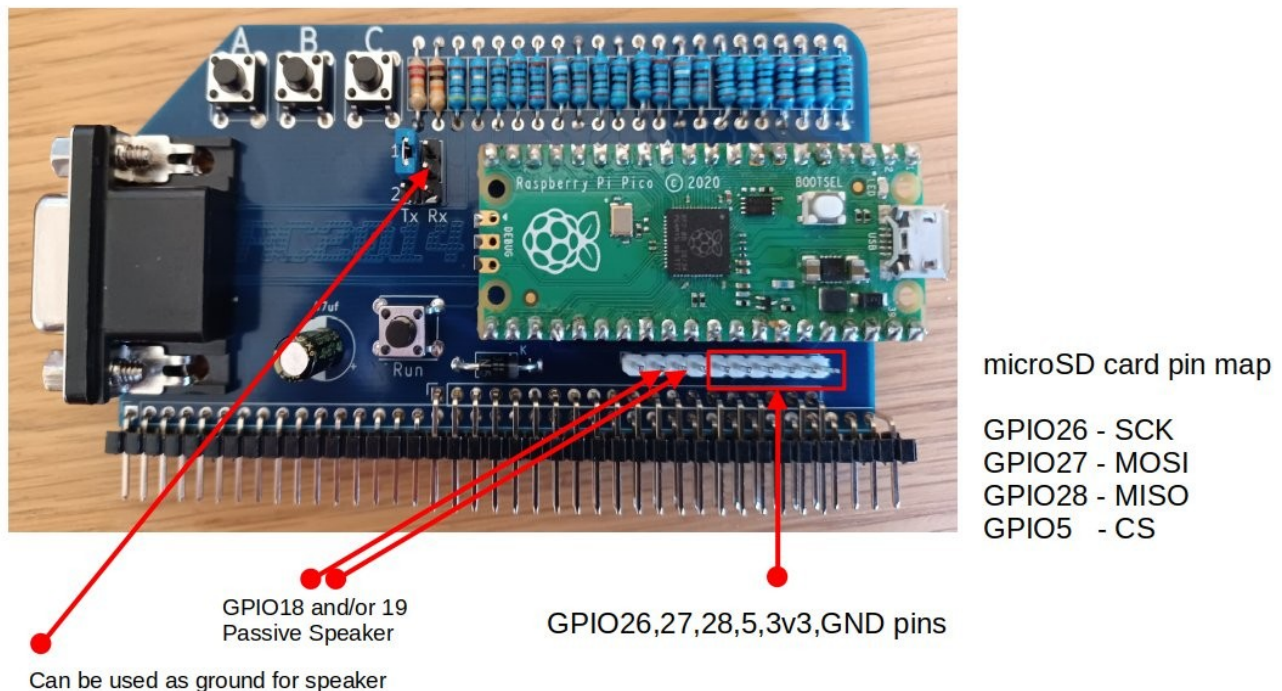

7. A FAT32 formatted microSD card⁵, containing the Sharp MZ-80K and/or MZ-80A software you wish to run. These should be '.mzf', '.mzt' or '.m12' format files.

8. A USB cable with a micro USB plug for the RC2014 Pi Pico VGA Terminal Card, to enable the Pico MZ-80K/A firmware to be installed and re-installed from a computer.

⁵ See the section on microSD card support for known working / not working microSD cards.

Finding software for the Pico MZ-80K/A

The Pico MZ-80K is capable of running software designed for the Sharp MZ-80K and the Sharp MZ-80A. The microSD card replaces the integrated cassette recorder found on the original machine, so digital copies of the software you wish to use are required.

Good sources of .mzf/.mzt/.m12 files include:

<https://sharpmz.no/original/>

<https://mz-archive.co.uk/>

<https://github.com/psychotimmy/sharpmz-80k>

As a minimum, a language interpreter (such as Sharp BASIC SP-5025 for the MZ-80K or Sharp BASIC SA-5510 for the MZ-80A) or Z80 development environment (such as Avalon ZEN) should be written to the microSD card. The Pico MZ-80K/A is of little use without such an interpreter or development environment.

A copy of the Sharp MZ-80K SP-5025 BASIC manual can be found at:

<https://archive.org/details/sharp-basic-manual-mz-80-k>

A copy of the Sharp MZ-80A Owners manual can be found at:

<https://sharpmz.no/original/mz-80a/download/mz80amanual.pdf>

Installing / re-installing the Pico MZ-80K/A firmware

The most recent release of the Pico MZ-80K/A firmware can be found at:

<https://github.com/psychotimmy/picomz-80k>

Pimoroni VGA demo base

To install, download one of `picomz-80ka-pimoroni.uf2` or `picomz-80ka-diag-pimoroni.uf2` if you are using a Raspberry Pico, or `pico2mz-80ka-pimoroni.uf2` or `pico2mz-80ka-diag-pimoroni.uf2` if you are using a Raspberry Pico 2⁶ and:

1. Push and hold the BOOTSEL button while connecting your Pico/Pico 2 with a USB cable to a computer. Release the BOOTSEL button once your Pico appears as a Mass Storage Device called RPI-RP2 (RP2350 if you are using a Pico 2).
2. Copy the .uf2 file onto the RPI-RP2 (RP2350) volume. Your Pico/Pico 2 will reboot.
3. Disconnect the USB cable and plug in the OTG adaptor and USB keyboard to the Pico/Pico 2. Apply power to the USB POWER port. Alternatively, use a terminal emulator from the computer the .uf2 file was copied from to provide keyboard input to the Pico MZ-80K/A.
4. You are now running the Pico MZ-80K emulator.

RC2014 RP2040 VGA Terminal Card

To install, download `picomz-80ka-rc2014.uf2` and:

1. Push and hold the BOOTSEL button while connecting your card with a USB cable to a computer. Release the BOOTSEL button once your card appears as a Mass Storage Device called RPI-RP2.
2. Copy the .uf2 file onto the RPI-RP2 volume. The card will reboot.
3. Disconnect the USB cable and plug in the USB keyboard. Apply power to the backplane.
4. You are now running the Pico MZ-80K/A emulator.

RC2014 Pi Pico VGA Terminal Card

To install, download `picomz-80ka-rc2014.uf2` and:

1. Push and hold the BOOTSEL button while connecting your Pico with a USB cable to a computer. Release the BOOTSEL button once your Pico appears as a Mass Storage Device called RPI-RP2.
2. Copy the .uf2 file onto the RPI-RP2 volume. Your Pico will reboot.

⁶ `picomz-80k-pimoroni.uf2` and `pico2mz-80k-pimoroni.uf2` require a physical UK USB keyboard to be plugged into the Pico/Pico 2. If you are going to be using a terminal emulator (such as minicom) from another computer to provide keyboard input, you will need to use `picomz-80k-diag-pimoroni.uf2` or `pico2mz-80k-diag-pimoroni` instead.

3. Disconnect the USB cable and plug in the OTG adaptor and USB keyboard to the Pico/Pico
2. Apply power to the USB POWER port. Alternatively, use a terminal emulator from the computer the .uf2 file was copied from to provide keyboard input to the Pico MZ-80K.
4. You are now running the Pico MZ-80K/A emulator.

First Boot – MZ-80K is the default configuration

If everything is working as expected, your VGA monitor should display:

```
** MONITOR SP-1002 **
```

```
*
```

Use the F1 key to cycle to a m/c code 'tape' to load (for example, the SP-5025 BASIC interpreter).

Type LOAD <return>

The 'tape' will take some time to load (although not quite as long as a real tape on a Sharp MZ-80K).

If you chose to load the SP-5025 BASIC interpreter, you should see the message:

```
* SHARP BASIC SP-5025
```

```
34680 BYTES
```

```
READY
```

```

```

First Boot – MZ-80A can be selected at power on

To boot the emulator as an MZ-80A, hold down the ‘A’ button on your carrier board for approximately a second while power is applied. If everything is working as expected, your VGA monitor should display (in green):

```
** MONITOR SA-1510 **
```

```
*
```

If you have a speaker connected to the board, a beep should also be heard.

Use the F1 key to cycle to a m/c code ‘tape’ to load (for example, the SA-5510 BASIC interpreter).

Type L<return>

The ‘tape’ will take some time to load (although not quite as long as a real tape on a Sharp MZ-80A).

If you chose to load the SA-5510 BASIC interpreter, you should see the message:

```
BASIC interpreter  SA-5510  
Copyright 1981 by Sharp Corp.
```

```
32492 Bytes
```

```
Ready
```

```

```

Keyboard layouts

The MZ-80K keyboard layout

The Sharp MZ-80K keyboard has 78 keys, arranged in five rows. There are 14 keys on the bottom row, and 16 keys on each of the other four.

The rightmost 5 keys on each row are blue and allow access to 75 of the Sharp's character graphics.

The remainder of the bottom row are yellow, and implement the space bar, carriage return, shift keys, break key, cursor movement and editing functions.

The first 11 keys on each of the other four rows (with the exception of the 11th key on the second row from the bottom – SML/CAP) implement alphanumeric and punctuation characters. By default, the alpha characters are upper case.

The shift key enables the character on the top of the key to be used – for example, shift Q returns >, and shift S the heart graphic.

The SML/CAP key allows lower case characters to be used on the alpha keys or if a symbol is printed on the lower right hand side of a key, that symbol. If the SML/CAP key is selected, the led to the right of the MZ-80K keyboard (usually green when power is on) is turned red. When deselected, the led returns to green.



Mapping the MZ-80K keyboard to a UK USB keyboard

Black MZ-80K keys

With Caps Lock off, the lower case alpha keys on a USB keyboard are mapped to the upper case alpha keys on the MZ-80K keyboard. Numeric keys are mapped to the numeric keys as expected.

With Caps Lock on (or shift <character> used), most of the alphanumeric keys on a USB keyboard are mapped to the shifted MZ-80K keys (for example, shift <1> maps to !, shift <Q> maps to > and shift <S> maps to the heart symbol).

The exceptions are:

- <shift> 3 – maps to £, rather than #
- <shift> 6 – maps to π , rather than ^
- <shift> 7 – maps to &, rather than ‘
- <shift> 8 – maps to *, rather than (
- <shift> 9 – maps to (, rather than)
- <shift> 0 – maps to), rather than π .

Where a punctuation symbol appears on the USB keyboard and there is a match on the Sharp MZ-80K keyboard, that key corresponds to the Sharp MZ-80K key. For example, ‘:’ maps to ‘:’ (<shift> O on the MZ-80K keyboard) and ‘@’ maps to ‘@’ (<shift> U>).

The SML/CAP key is mapped to the ‘~’ (tilde) key. When selected, the Pico’s green led is lit. This is equivalent to the Sharp MZ-80K’s power led turning red (from green). When the SML/CAP key is deselected, the Pico’s led is turned off.

Yellow MZ-80K keys

The yellow keys are mapped as follows:

Left hand shift key – mapped to either USB shift key. Because shifted characters are taken care of automatically, use <Ctrl> L if a program is expecting **only** a left hand shift key as input.

Right hand shift key – mapped to either USB shift key. Because shifted characters are taken care of automatically, use <Ctrl> R if a program is expecting **only** a right hand shift key as input.

CLR – mapped to the End key

HOME – mapped to the Home key

INST – mapped to the Insert key

DEL – mapped to the Delete and Backspace keys. <Ctrl> H will also work.

SPACE – mapped to the spacebar

Cursor up, down, left, right – mapped to the cursor up, down, left, right keys respectively

BREAK – mapped to the PgDn key

SHIFT BREAK – mapped to the PgUp key

CR – mapped to the carriage return key and the numeric keypad’s Enter key. <Ctrl> M will also work.

Blue MZ-80K keys

The blue graphics keys are mapped to Alt keys as shown in the table below.

Alt Q Top left blue key	Alt W	Alt E	Alt R	Alt T Top right blue key
Alt Y	Alt U	Alt I	Alt O	Alt P
Alt A	Alt S	Alt D	Alt F	Alt G
Alt H	Alt J	Alt K	Alt L	Alt M
Alt Z Bottom left blue key	Alt X	Alt C	Alt V	Alt B Bottom right blue key

In common with the black keys, <shift><Alt><key> selects the symbol on the top of the MZ-80K key. If SML/CAP is active (steady green led lit on Pico), the symbol on the bottom right of the MZ-80K key is selected instead.

The MZ-80A keyboard layout

The Sharp MZ-80A keyboard has 73 keys consisting of a main keyboard of five rows and a four row numeric keypad. This makes it close to, but not exactly the same as, modern UK USB keyboard layouts.

The MZ-80A keyboard has two operating modes:

1. **Standard mode.** This is selected at power on. The keyboard defaults to upper case – lower case letters can be selected by using a ‘shift’ key. The numeric keypad on a UK USB keyboard is in NUM LOCK mode by default.
2. **Graphics mode.** This is activated by pressing the ‘Esc’ key on a UK USB keyboard. The cursor changes shape and the keyboard allows many of the Sharp graphics characters to be accessed, either directly or through using a ‘shift’ key. To return to standard mode, press ‘Esc’ again.

If you are using a UK USB keyboard with the emulator, the standard mode mappings reflect the printed keyboard legends with the following exceptions:

‘Esc’ – mapped the Sharp GRPH key – toggles between standard mode and graphics mode.

<shift> 3 – mapped to the Sharp # key, rather than £.

End – mapped to the Sharp CLR key.

PgUp and PgDn – both mapped to the Sharp BREAK key.

Numeric keypad * - mapped to the Sharp 00 numeric keypad key.

Numeric keypad / - mapped to the up arrow (↑) character.

Numeric keypad <shift> / - mapped to the left arrow (←) character.

MZ-80A CTRL keys

If you are using a physical USB keyboard connected to the emulator, then the Ctrl key acts as the Sharp CTRL key.

If you are using a terminal emulator (diag mode), then the Alt key acts as the Sharp CTRL key.

The CTRL keys implemented are:

CTRL A – Shift lock (toggle)

CTRL D – Rolls up the display (MZ-80A display mode only)

CTRL E – Rolls down the display (MZ-80A display mode only)

CTRL Q – Cursor down

CTRL R – Cursor up

CTRL S – Cursor right

CTRL T – Cursor left

CTRL U – Cursor home

CTRL V – Cursor home and clear screen

CTRL Z – Prints the right arrow (→) character to the screen

CTRL @ (mapped to Ctrl ‘ or Alt ‘) - Reverse video (toggle)

CTRL [- Set the VRAM configuration to MZ-80K mode (Top left screen address fixed at 0xD000)

CTRL] - Set the VRAM configuration to MZ-80A mode (Top left screen address floats)

USB keyboard - Function keys

The USB function keys allow the following tasks to be accomplished on the MZ-80K and MZ-80A emulators.

F1 to F3 – Cassette deck emulation

F1 – Step ‘forwards’ through files on the microSD card ‘tape’.

F2 – Step ‘backwards’ through files on the microSD card ‘tape’.

When F1 or F2 are pressed, the next tape file that a LOAD command will use is displayed in the emulator status area.

F3 – Reset the tape counter in the emulator status area to 000.

Note: F3 does not affect the next tape file that a LOAD command will use.

F4 – Emulator status area

F4 – Clear the emulator status area.

Note: F4 does not affect the next tape file that a LOAD command will use.

F5 – Reverse video (MZ-80K only)

F5 – Toggles between normal and reverse video.

While this was not possible on a standard MZ-80K, a Sharp Users’ Club article presented the hardware modifications necessary to implement it.

On the MZ-80A reverse video is implemented as standard by selecting CTRL @ (ctrl ‘ on a UK USB keyboard or Alt ‘ if using a diag version).

F6 – UK/Japanese character graphics ROM (MZ-80K only)

F6 – Toggles between the UK (default) and Japanese character graphics ROM.

F9 – Keyboard scan mode (diag versions only)

F9 – Change the keyboard scan mode. Applies to diag versions only.

The default is 1, which is correct for most programs.

However, some programs (usually games written in machine code) require the scan mode to be set to 2 or 3 to ensure that all keypresses are reported correctly. If F9 is pressed, the keyboard scan mode (1,2 or 3) is displayed in the bottom right of the emulator status area.

This was not required on a standard MZ-80K/A. It is only necessary in this emulator to resolve the differences between the way USB keyboards handled through a terminal emulator and the MZ-80K/A keyboard matrix work.

F10 – Reset button (MZ-80A only)

To reset the emulator back to the monitor, press the F10 key. This emulates the physical reset button provided on the MZ-80A, which was not present on an unmodified MZ-80K.

F11 and F12 – Experimental fast memory dump file

F11 – Read a memory dump file (MZDUMP.MZF) from the microSD card.

This restores the state of user RAM, video RAM and the z80 to the point at which the memory dump was created.

F12 – Store the contents of user RAM, video RAM and the z80 state to a memory dump file (MZDUMP.MZF).

Note that the previous contents of this file are always overwritten by F12 as only a single memory dump file per microSD card is currently supported.

This feature is experimental and sometimes fails to work! Memory dump files created under version 2.0.0 and later of the emulator are not compatible with those created under versions 1.0.0 – 1.2.4 and vice-versa.

Unused function keys

F7, F8 and F10 are not used by the Pico MZ-80K.

F5, F6, F7 and F8 are not used by the Pico MZ-80A.

Cassette tape emulation

Loading files from a microSD card

The microSD card acts in much the same way as a cassette tape works on a real Sharp MZ-80K or MZ-80A.

Use the F1 key to position the tape read head at the start of a new file. This is the equivalent of using the fast forward key and tape counter on a real machine. Repeatedly pressing F1 will cycle forwards through all of the files on the microSD card before stopping at the last file.

Use the F2 key to position the tape read head at the tape file before the current one. Repeatedly pressing F2 will cycle backwards through the files on the microSD card until the first file is reached.

F3 resets the tape counter. It does not affect the currently selected tape file – use F1 or F2 to change the tape file selected.

The bottom five lines of the Pico MZ-80K/A's display are used to display 'tape' status. The name of the next file to be loaded is displayed (note that this is not necessarily the same name that the file has on the microSD card), along with the file type (one of m/c code, BASIC etc. data or unknown).

Files of type m/c code must be read directly from the monitor.

Files of type Sharp BASIC etc. must be read from the appropriate interpreter or development environment.

Files of type data are for use by the originating program. For example, the game "The Valley" allows your character to be saved and loaded from tape. These are stored in files of type data.

Use the LOAD command when in the monitor or BASIC (or the equivalent if you are using another interpreter or development environment) to transfer this file into the Pico MZ-80K/A's memory.

Unlike on a real Sharp MZ-80K or MZ-80A, using the LOAD command simulates you pressing the PLAY button on the cassette deck automatically, and stops once the end of the file is reached.

Loading files from the microSD card takes a little time as it is emulating a real tape. However, tapes are read slightly more quickly than on a real machine.

The F4 key will clear the 'tape' status display until the next time F1, F2, F3 or F9 is pressed.

Saving files to a microSD card

Use the SAVE command when in BASIC (or the equivalent if you are using another interpreter or development environment) to write the contents of the Pico MZ-80K/A's memory to the microSD card.

The name of the file saved to the microSD card is not necessarily the same as the name given to the SAVE command. This is because the permitted characters in a FAT32 file name are not equivalent to the ones permitted in Sharp MZ-80K or MZ-80A file names (and vice-versa).

Note that if a file on your microSD card already exists it will be overwritten without warning.

Using a terminal emulator with the Pico MZ-80K/A

A terminal emulator, such as minicom, may be used to provide power and keyboard input to the Pico MZ-80K/A instead of a USB keyboard and power supply if a Pimoroni VGA demo base is being used. If you choose to run the emulator in this way, the (diagnostics) pico(2)mz-80ka-diag-pimoroni.uf2 image **must** be used.

For example, using minicom 2.8 from a Raspberry Pi computer requires the following settings:

```
A - Serial Device      : /dev/ttyACM0
B - Lockfile Location  : /var/lock
C - Callin Program     :
D - Callout Program    :
E - Bps/Par/Bits       : 115200 8N1
F - Hardware Flow Control : Yes
G - Software Flow Control : No
H - RS485 Enable       : No
I - RS485 Rts On Send  : No
J - RS485 Rts After Send : No
K - RS485 Rx During Tx : No
L - RS485 Terminate Bus : No
M - RS485 Delay Rts Before: 0
N - RS485 Delay Rts After : 0

Change which setting? █
```

Ensure that the minicom window has keyboard focus before changing from HDMI input on the Raspberry Pi to VGA input from the Pico, otherwise the emulator will not see the keystrokes sent from minicom.

Information will be echoed back to the minicom window when a SHOW (printf) statement is executed by the emulator. For example:

```
pi@eeeyore: ~
Hello! My friend
Hello! My computer

8253 PIT initialised
Z80 processor initialised
USB keyboard connected
sd card mounted ok
VGA output started on second core

Setbit 1 portCbit 3
motor 0 sense 0
Setbit 1 portCbit 2
Setbit 1 portCbit 0
Tape body length for tape 0 is 14556
Successful preload of STARTREK.MZF
Tape body length for tape 1 is 2579
Successful preload of TAKEDO~1.MZF
Tape body length for tape 2 is 5146
Successful preload of MUSICT~1.MZF
Tape body length for tape 3 is 3648
Successful preload of SKIRUN~1.MZF
Tape body length for tape 4 is 3324
Successful preload of RACECH~1.MZF
```

MicroSD card support

The following microSD cards and formats are known to work in the emulator.

microSD card make / type	microSD card format and partition sizes
Transcend 16GB microSDHC, Class 10, UHS 1	FAT32, partition sizes up to and including the whole card
Kingston 32GB microSDHC, Class 10, UHS 1	FAT32, 2GB partition size

The following microSD cards and formats are known **not** to work in the emulator.

microSD card make / type	microSD card format and partition sizes
SanDisk Ultra 32GB microSDHC Class 10, A1, UHS 1	FAT32, all partition sizes

Troubleshooting

Symptom	Likely cause	Remedy
Pimoroni VGA Demo Base & RC2014 Pi Pico VGA card: Fast flashing green led (200ms) on the Pico or Pico 2; no output seen on the VGA display.	A USB keyboard (or terminal emulator) is not active.	Check connections and try again by pressing the RUN button.
Pimoroni VGA Demo Base & RC2014 Pi Pico VGA card: Slow flashing green led (1s) on the Pico or Pico 2; no output seen on the VGA display.	There is no microSD card present, or the microSD card cannot be read.	Review the manual section that discusses SD card support.
RC2014 RP2040 Terminal Card: Fast flashing white led (200ms); red USB power led not lit; no output seen on the VGA display.	A USB keyboard is not active.	Check connections and try again by pressing the RESET button on the card.
RC2014 RP2040 Terminal Card: Slow flashing white led (1s) on; no output seen on the VGA display.	There is no microSD card present, or the microSD card cannot be read.	Review the manual section that discusses SD card support.
‘tapes’ fail to load or save correctly.	The cassette tape deck emulation is out of synchronisation.	Press the ‘BREAK’ key (PgDn) or the shifted ‘BREAK’ key (PgUp) and try again. If this fails, restart the emulator by pressing the RUN or RESET button, depending on your hardware.
‘tapes’ fail to save correctly and the cassette tape deck emulation is not out of synchronisation.	The microSD card (or partition being used on the card) is full.	Remove the microSD card from the emulator and delete unwanted files. Reinsert the card and try again.
Keypresses are not recognised by the emulator in some programs.	Some machine code games read data from the keyboard without using the monitor subroutines provided for this purpose.	Use the F9 key to try again using keyboard mode 2 or 3. The mode that the keyboard is in is reported in the bottom right hand side of the emulator status area. Note that the F9 key only operates if a diag version is being used.

Systems manual

Compiling the Pico MZ-80K/A Emulator

Pre-requisites for Raspberry Pi OS (Debian Bookworm)

CMake (version 3.13 or later) and a gcc cross compiler.

```
sudo apt install cmake
```

```
sudo apt install gcc-arm-none-eabi libnewlib-arm-none-eabi build-essential
```

The Pico MZ-80K emulator relies on the latest stable release of the Raspberry Pico SDK. This and the Pico Extras repository must be available on your computer if you wish to compile the emulator.

Assuming that you are already in the subdirectory in which you wish to install the Pico SDK, Pico Extras and Pico MZ-80K/A repositories, issue the commands:

```
git clone --recursive https://github.com/raspberrypi/pico-sdk.git -b master
git clone https://github.com/raspberrypi/pico-extras.git -b master
```

Then clone **either** the current release of the Pico MZ-80K/A repository:

```
git clone https://github.com/psychotimmy/picomz-80k.git -b <current version>
```

or the latest stable version:

```
git clone https://github.com/psychotimmy/picomz-80k.git -b main
```

Ensure that the Pico SDK and Pico Extras subdirectories have been exported.

For example, if these libraries have been installed under /home/pi, use:

```
export PICO_SDK_PATH=/home/pi/pico-sdk
export PICO_EXTRAS_PATH=/home/pi/pico-extras
```

For a Pico build, issue the commands:

```
cd picomz-80k
mkdir build2040
cd build2040
cmake -DPICO_BOARD=vgaboard ..
make
```

For a Pico 2 build, issue the commands:

```
cd picomz-80k
mkdir build2350
cd build2350
cmake -DPICO_BOARD=vgaboard -DPICO_PLATFORM=rp2350 ..
make
```

There should now be a number of .uf2 files in the build directory for the emulator that can be installed.

picomz-80ka-pimoroni.uf2 or **pico2mza-80k-pimoroni.uf2** are for standard use. They assume a UK USB keyboard connected directly to the Pico or Pico 2 respectively, mounted on a Pimoroni VGA base.

picomz-80ka-diag-pimoroni.uf2 or **pico2mz-80ka-diag-pimoroni.uf2** can only be used through a terminal emulator (such as minicom) as diagnostic messages are output to the Pico's USB port.

picomz-80ka-rc2014.uf2 is for use with the RC2014 RP2040 VGA Terminal card or RC2014 Pi Pico VGA Terminal card mounted on an RC2014 backplane.

Pico MZ-80K/A software architecture

Overview

sharpmz.h Common header file for the emulator	sharpmz.c Main entry point for the emulator.
	sharpcorp.c The decoded SP-1002 and SA-1510 monitors and computer graphics ROMs (MZ-80K UK, MZ-80K2E Japanese and MZ-80A UK versions).
	8255.c A simplified Intel 8255 emulator, specifically for use in this emulator.
	8253.c A simplified Intel 8253 emulator, specifically for use in this emulator. The mechanism for producing sounds from the Pico's PWM is also included in this source file.
	keyboard.c + tusb_config.h Emulates the Sharp MZ-80K and MZ-80A keyboards on a UK USB keyboard or via a terminal emulator.
	cassette.c Emulates reading and writing Sharp MZ-80K and MZ-80A tapes (.mzf /.mzt / .m12 format) using the VGA board's microSD card.
	vgadisplay.c Provides a monochrome VGA representation of the Sharp MZ-80K and MZ-80A's display, plus emulator status information in the lower 40 scanlines.
	miscfuncs.c Miscellaneous functions used by the emulator.
Third party libraries zazu80 – a z80 instruction set emulator. Forked from https://github.com/superzazu/z80 fatfs – a file system for the Raspberry Pico microSD card. Version 0.15 w/ patch 1 forked from http://elm-chan.org/fsw/ff/00index_e.html sdcard – low level routines for the fatfs library. Forked from https://github.com/elehobica/pico_fatfs with changes made to support the pinout used by the Pimoroni VGA demo base sd card.	pca9536.c Driver software for the PCA9536D chip found on the RC2014 RP2040 VGA Terminal card. Only used by this board. Original source was the RC2014 picoterm firmware, https://github.com/RC2014Z80/picoterm
	Raspberry Pi libraries Pico SDK – Version 2.1.0 master branch or later, including TinyUSB. Pico Extras – Version 2.1.0 master branch or later.

The MZ-80K memory map

MZ-80K Addresses

Pico MZ-80K Emulator

0xF000 – 0xFFFF (61440 – 65535) FD ROM uses first 1024 bytes of this space when installed	FD ROM and unused addresses	Not implemented
0xE000 – 0xFFFF (57344 – 61439) Only addresses 0xE000 – 0xE008 used	Devices (8255, 8253, Sound)	Implemented by 8255.c and 8253.c
0xD000 – 0xDFFF (53248 – 57343) Only addresses 0xD000 – 0xD3FF populated with RAM	1kVideo RAM	Stored in mzvram[]
0x1200 – 0xCFFF (4608 – 53247)	User RAM	Stored in element 512 onwards of mzuserram[]
0x1000 – 0x11FF (4096 - 4607)	Monitor stack and workarea	Stored in elements 0 - 511 of mzuserram[]
0x0000 – 0x0FFF (0 - 4095)	Monitor ROM	Stored in mzmonitor[]

The MZ-80A memory map

MZ-80A Addresses

Pico MZ-80A Emulator

0xF000 – 0xFFFF (61440 – 65535) FD ROM uses first 2048 bytes of this space when installed	FD ROM and unused addresses	Not implemented
0xE000 – 0xEFFF (57344 – 61439) Addresses 0xE000 – 0xE008 as for MZ-80K.	Addresses 0xE800 – 0xEFFF reserved for user ROM option (not implemented) Devices (8255, 8253, Sound, Reverse Video, ‘A’ mode VRAM scrolling)	Implemented by 8255.c and 8253.c
0xD000 – 0xDFFF (53248 – 57343) Only addresses 0xD000 – 0xD7FF populated with RAM	2k Video RAM	Stored in mzvram[]
0x1200 – 0xCFFF (4608 – 53247)	User RAM Addresses 0xC000 – 0xCFFF can be used to swap the monitor ROM – in which case, 0x0000-0x0FFF is remapped as RAM from this address space.	Stored in element 512 onwards of mzuserram[]
0x1000 – 0x11FF (4096 - 4607)	Monitor stack and workarea	Stored in elements 0 - 511 of mzuserram[]
0x0000 – 0x0FFF (0 - 4095)	Monitor ROM	Stored in mzmonitor[]

Memory dump files

The Pico MZ-80K/A, through the F12 function key, supports storing the state of monitor stack and workarea, user RAM, video RAM, z80 and 8253 at the point in time when the key is pressed.

This state can be restored later by using the F11 function key.

The memory dump file is based on the .mzf format with extensions and omissions.

At the time of writing, this format is still subject to change, so **should not** be used as a permanent storage mechanism for your Pico MZ-80K/A programs.

Memory dump files from emulator version 2.0.0 and later cannot be used with earlier releases of the emulator. Memory dump files from emulator versions earlier than 2.0.0 cannot be used with emulator versions 2.0.0 and later.

Pico MZ-80K/A memory dump file format as of February 7th 2025.

Header

The first 128 bytes of the file. The first byte stores the value 0x20, to identify that this is a Pico MZ-80K format memory dump file. The next 12 bytes are used to store a file name (in the same way that a .mzf file does). These are:

```
0x4d 0x92 0xb3 0xb7 0x9d 0xbd 0x20 0x9c 0xa5 0xb3 0x9e 0x0d
M     m     o     r     y     <sp>  d     u     m     p     <cr>
```

The remainder of the header block is undefined and unused.

Monitor workarea and user RAM

The next 49,152 bytes. Populated with the contents of the monitor workarea and user RAM at the time the F12 key is pressed.

Video RAM

The next 2048 bytes (1024 bytes prior to release 2.0.0). Note that only the first 1024 bytes is valid on the MZ-80K. Populated with the contents of the video RAM at the time the F12 key is pressed.

Z80 state

The next 56 bytes. Populated with the contents of the mzcpcu global structure, used to maintain the state of the Z80 cpu.

8253 state

The final 12 bytes. Populated with the contents of the mzpitt global structure, used to maintain the state of the 8253 programmable interval timer (PIT).

Acknowledgements

As well as directly including the third party libraries detailed in the architectural overview of the Pico MZ-80K/A, some of the code was also inspired by other projects. These include:

[The KM-Z80 MZ-80K emulator](#) by Katsumi

[A MZ-80 series emulator for Raspberry Pi](#) by Nibbles Lab

[VHDL implementations of Sharp MZ series computers](#) by Philip Smart

[Picoterm](#) by RC2014

[The RC2040](#) by Extreme Electronics

... and, of course, the people who run and take part in [RetroChallenge](#). Much of the work completing the first version of this emulator was performed during the October 2024 event.

My own notes made during this time can be found at [retrocomputing ephemera](#).