

1. The following are the full code after page 13 in the book.

```
#include <FirebaseArduino.h>
#include <ESP8266WiFi.h>

// Set these to run example.
#define FIREBASE_HOST "example.firebaseio.com"
#define FIREBASE_AUTH "token_or_secret"
#define WIFI_SSID "your_ssid"
#define WIFI_PASSWORD "your_password"

//Global declaration and initialization of variables
const int LED1 = 4;      //D2 GPIO4
const int LED2 = 14;     //D5 GPIO14
const int LED3 = 15;     //D8 GPIO15
const int button = 16;   //D0 GPIO16
int temp = 0;           //initialize temporary variable

void setup() {
  Serial.begin(115200); // Communication at 115200 Bd with Serial
  Monitor

  //initialize digital pin as an input/output
  pinMode(LED1,OUTPUT);
  pinMode(LED2,OUTPUT);
  pinMode(LED3,OUTPUT);
  pinMode(button,INPUT);

  // connect to wifi.
  WiFi.begin(WIFI_SSID, WIFI_PASSWORD);
  Serial.print("connecting");
  while (WiFi.status() != WL_CONNECTED) {
    Serial.print(".");
    delay(500);
  }
  Serial.println();
  Serial.print("connected: ");
  Serial.println(WiFi.localIP());

  Firebase.begin(FIREBASE_HOST, FIREBASE_AUTH);
  delay(1000);
}

void loop() {

  // get value from firebase
  String led1_status=(Firebase.getString("/LED1/status"));
  //Serial.println(led1_status);
  String led2_status=(Firebase.getString("/LED2/status"));
  //Serial.println(led2_status);
  String led3_status=(Firebase.getString("/LED3/status"));
  //Serial.println(led3_status);
```

```

if(led1_status=="ON"){
    digitalWrite(LED1,HIGH);
}else{
    digitalWrite(LED1,LOW);
}
if(led2_status=="ON"){
    digitalWrite(LED2,HIGH);
}else{
    digitalWrite(LED2,LOW);
}
if(led3_status=="ON"){
    digitalWrite(LED3,HIGH);
}else{
    digitalWrite(LED3,LOW);
}

temp = digitalRead(button);
if(temp==HIGH){
    // set value of PushButton to HIGH
    Firebase.setString("/PushButton/status", "HIGH");
    Serial.println("HIGH");

    // handle error
    if (Firebase.failed()) {
        Serial.print("setting /BUTTON/status failed:");
        Serial.println(Firebase.error());
        return;
    }
}
else{
    // set value of PushButton to LOW
    Firebase.setString("/PushButton/status", "LOW");
    Serial.println("LOW");
    // handle error
    if (Firebase.failed()) {
        Serial.print("setting /BUTTON/status failed:");
        Serial.println(Firebase.error());
        return;
    }
}
}

```

Due to Firebase no longer accept FCM legacy starting early September 2019, the code listed in page 49 and beyond need to be amended to the following steps:

1. FCM Setup in NodeMCU

1. Launch your Arduino IDE. Click **File > Open > MyFirebase.ino**
2. Add **#include <WiFiClientSecure.h>**

```

#include <FirebaseArduino.h>
#include <ESP8266WiFi.h>
#include <WiFiClientSecure.h>

// Set these to run example.
#define FIREBASE_HOST "myfirebase4
#define FIREBASE_AUTH "feKveojNckz
#define WIFI_SSID "your_ssid"
#define WIFI_PASSWORD "your_passwo

```

3. After the setup() function, add the following sendDataToFirebase() function.

```

void sendDataToFirebase() { //new changes
    WiFiClientSecure client;
    String data = "{";
    data = data + "\"to\": \"" + reg + "\",";
    data = data + "\"notification\": {";
    data = data + "\"body\": \"Some pressed your doorbell.\",";
    data = data + "\"title\" : \"Info\" ";
    data = data + "} }";
    Serial.println("Send data...");
    if (client.connect("fcm.googleapis.com", 443)) {
        Serial.println("Connected to the server..");
        client.println("POST /fcm/send HTTP/1.1");
        client.println("Authorization: key=" + serve + "");
        client.println("Content-Type: application/json");
        client.println("Host: fcm.googleapis.com");
        client.print("Content-Length: ");
        client.println(data.length());
        client.print("\n");
        client.print(data);
    }
    Serial.println("Data sent...Reading response..");
    while (client.available()) {
        char c = client.read();
        Serial.print(c);
    }
    Serial.println("Finished!");
    client.flush();
    client.stop();
}

```

4. Call the `sendDataToFirebase()` function as below.

```
temp = digitalRead(button);
if(temp==HIGH) {
    // set value of PushButton to HIGH
    Firebase.setString("/PushButton/status", "HIGH");
    Serial.println("HIGH");

    //send notification
    sendDataToFirebase();

    // handle error
    if (Firebase.failed()) {
        Serial.print("setting /BUTTON/status failed:");
        Serial.println(Firebase.error());
        return;
    }
}
```

Settings

- General
- Cloud Messaging**
- Integrations
- Service accounts
- Data privacy
- Users and permissions

Project credentials


Key	Token
Server key	AAAA27QTFyY:APA91bGhCf-A73IryciBD18jEcapJculL-ERiULs3NKoR_pc r_EqXSE4IgNAuzOYXwL3UlyfVvDL8avbbsMZrP 5pB0kvjcz7fKy82nM4miiigpSNUZu17_
Legacy server key	AlzaSyBr4UXXjBf5VG6TJSe85bQNaRRFLM5I
Sender ID	

5. Go to your Firebase console.
6. Click on **Cloud Messaging**. Copy the **Server key**.
7. Add the **server key** to a string variable named **serve** in **MyFirebase.ino**.

```
#define WIFI_SSID "your_ssid"
#define WIFI_PASSWORD "your_password"

String serve = "AAAAQIugd3c:APA91bFrN5p2c68we00Uff7bbvuUcx7zThE
```

8. **Upload** your sketch to NodeMCU.
9. Launch your android app.
10. You should be able to receive a push notification whenever the push button at NodeMCU is pressed.

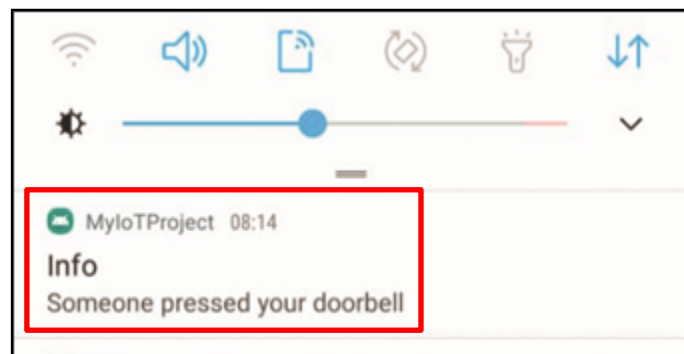

Congratulations! You have completed a simple and basic project of Internet of Things using the NodeMCU board, Android Studio, Firebase Database and have successfully control your IoT device via your android app.

Note: If after some time your project no longer can connect to Firebase and keeps getting Firebase error, you need to check the Firebase fingerprint as sometime Google will update the fingerprint. To find out the current valid fingerprint for your firebase project, you can use the website <https://www.grc.com/fingerprints.htm> and type in **<your_firebase_url>** (e.g: **myfirebase4iot.firebaseio.com**) and click the Fingerprint Site button to get the new fingerprint. Then go to "**Arduino/libraries/firebase-arduino-master/src/FirebaseHttpClient.h**" and change the line of `kFirebaseFingerprint[]="xxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxx"` to the new fingerprint.

You can download the relevant code for NodeMCU and android app from this github link: **[rafizahbrahman/Firebase_4_IoT](#)**

```

#include <FirebaseArduino.h>
#include <ESP8266WiFi.h>
#include <WiFiClientSecure.h>

// Set these to run example.
#define FIREBASE_HOST "yourfirebase.firebaseio.com"
#define FIREBASE_AUTH "feKveojNCxxxxxxxxxKUztS0kHJZ6103r3"
#define WIFI_SSID "your_ssid"
#define WIFI_PASSWORD "your_password"

String serve = "<server_key_here>"; //new changes

//Global declaration and initialization of variables
const int LED1 = 4;    //D2 GPIO4
const int LED2 = 14;   //D5 GPIO14
const int LED3 = 15;   //D8 GPIO15
const int button = 16; //D0 GPIO16
int temp = 0;          //initialize temporary variable

void setup() {
  Serial.begin(115200); // Communication at 115200 Bd with Serial Monitor

  //initialize digital pin as an input/output
  pinMode(LED1,OUTPUT);
  pinMode(LED2,OUTPUT);
  pinMode(LED3,OUTPUT);
  pinMode(button,INPUT);

  // connect to wifi.
  WiFi.begin(WIFI_SSID, WIFI_PASSWORD);
  Serial.print("connecting");
  while (WiFi.status() != WL_CONNECTED) {
    Serial.print(".");
    delay(500);
  }
  Serial.println();
  Serial.print("connected: ");
  Serial.println(WiFi.localIP());

  Firebase.begin(FIREBASE_HOST, FIREBASE_AUTH);
  delay(1000);
}

void sendDataToFirebase() { //new changes

```

```

WiFiClientSecure client;
String data = "{}";
data = data + "\"to\": \"/topics/SampleTopic\" \",\";
data = data + "\"notification\": {\";
data = data + "\"body\": \"Some pressed your doorbell.\",\";
data = data + "\"title\" : \"Info\" ";
data = data + "} }";
Serial.println("Send data...");
if (client.connect("fcm.googleapis.com", 443)) {
    Serial.println("Connected to the server..");
    client.println("POST /fcm/send HTTP/1.1");
    client.println("Authorization: key=" + serve + "");
    client.println("Content-Type: application/json");
    client.println("Host: fcm.googleapis.com");
    client.print("Content-Length: ");
    client.println(data.length());
    client.print("\n");
    client.print(data);
}
Serial.println("Data sent...Reading response..");
while (client.available()) {
    char c = client.read();
    Serial.print(c);
}
Serial.println("Finished!");
client.flush();
client.stop();
}

void loop() {

    // get value from firebase
    String led1_status=(Firebase.getString("/LED1/status"));
    //Serial.println(led1_status);
    String led2_status=(Firebase.getString("/LED2/status"));
    //Serial.println(led2_status);
    String led3_status=(Firebase.getString("/LED3/status"));
    //Serial.println(led3_status);

    if(led1_status=="ON"){
        digitalWrite(LED1,HIGH);
    }else{
        digitalWrite(LED1,LOW);
    }
    if(led2_status=="ON"){
        digitalWrite(LED2,HIGH);

```

```

    }else{
        digitalWrite(LED2,LOW);
    }
    if(led3_status=="ON"){
        digitalWrite(LED3,HIGH);
    }else{
        digitalWrite(LED3,LOW);
    }

    temp = digitalRead(button);
    if(temp==HIGH){
        // set value of PushButton to HIGH
        Firebase.setString("/PushButton/status", "HIGH");
        Serial.println("HIGH");

        //send notification
        sendDataToFirebase();

        // handle error
        if (Firebase.failed()) {
            Serial.print("setting /BUTTON/status failed:");
            Serial.println(Firebase.error());
            return;
        }
    }
    else{
        // set value of PushButton to LOW
        Firebase.setString("/PushButton/status", "LOW");
        Serial.println("LOW");
        // handle error
        if (Firebase.failed()) {
            Serial.print("setting /BUTTON/status failed:");
            Serial.println(Firebase.error());
            return;
        }
    }
}

```