
SIMBAD PROGRAM

FOREWORD

THE SIMBAD NUMERICAL MODEL CAN BE USED TO SIMULATE THE BEHAVIOR OF A MOORED SHIP, USING THE CUMMINS EQUATION (TIME SIMULATION) AND TAKING INTO ACCOUNT THE FOLLOWING ELEMENTS:

- **RANDOM WAVE FORCES (FIRST ORDER AND DRIFT FORCES)**
 - **GUSTY WIND FORCES (GENERATION OF WIND SPEEDS ACCORDING TO A WIND SPECTRUM)**
 - **CURRENT FORCES (VARIABLE AS A FUNCTION OF CURRENT VELOCITY)**
 - **FORCES INDUCED BY A PASSING SHIP**
 - **LINEAR OR NON-LINEAR MOORING CHARACTERISTICS FOR MOORING LINES AND FENDERS, AS WELL AS RIGID CONNECTION TYPE MOORING SYSTEM**
-

NOTICE

Any software and information, including technical and engineering data, figures, tables, designs, drawings, details, procedures and specification, presented herein or elsewhere are for general information only. While every effort has been made to insure its accuracy, any software and information should not be used or relied upon for any specific application without independent competent professional examination and verification of its accuracy, suitability and applicability, by a qualified professional engineer (e.g. qualified engineer in the field of hydraulics or hydrodynamics).

This product (any software and information) is provided “as it is”, without warranty of any kind. Anyone making use of this material (any software and information) does so at his own risk and assumes any and all liability resulting from such use. The entire risk as to quality or usability of the material contained within is with the reader and user. In no event, will the author(s) be held liable for any direct or indirect damages including lost profits, lost savings, loss of business information or other incidental or consequential damages arising from the use of or inability to use any software and information contained within.

THE INPUT DATA ARE READ FROM THE FOLLOWING FILES:

1. FILES PROVIDED BY THE PRE-PROCESSING PROGRAM (SEE DOCUMENTATION):

- **“HOUL_IRR.TXT”, FOR MAIN CHARACTERISTICS OF SHIP (LENGTH, DRAUGHT, POSITION OF CENTRE OF GRAVITY, MASSES AND INERTIA, HYDROSTATICS, “INFINITY” ADDED MASSES...)**
- **“RAD_IRF.TXT”, FOR THE RADIATION DAMPING IMPULSE RESPONSE FUNCTIONS**
- **“WAVE_FOR.TXT” AND “DRIFT_FOR.TXT” RESPECTIVELY FOR THE WAVE EXCITATION AND DRIFT FORCES TIME SERIES**
- **“WIND_VEL.TXT” FOR THE WIND SPEED TIME SERIES**

2. FILES SPECIFIC FOR THE SIMBAD NUMERICAL MODEL:


UNLIKE THE PREVIOUS FILES, THE NAMES OF THE FOLLOWING FILES CAN BE CHANGED AT THE BEGINNING OF EACH RUN, IF NECESSARY:

- **“VENT.DAT”, FOR THE WIND CHARACTERISTICS (OTHER THAN DIRECTION AND VELOCITY)**
- **“COURANT.DAT”, FOR THE CURRENT CHARACTERISTICS**
- **“AMAR.DAT” FOR THE MOORING SYSTEM**
- **“POINT.DAT” FOR A PARTICULAR POINT ABOARD THE SHIP**
- **“CHENAL.DAT” FOR PASSING SHIP INDUCED FORCES**

THESE FILES ARE DESCRIBED IN DETAILS HEREAFTER.

RELATIVE DIRECTIONS OF ENVIRONMENTAL CONDITIONS:

THE RELATIVE DIRECTION HAS BEEN DEFINED IN THE SHIP AXIS SYSTEM IN WHICH WAVES PROPAGATING, WIND BLOWING OR CURRENT FLOWING IN THE DIRECTION OF THE POSITIVE X_2 -AXIS IS DEFINED AS 0° AND WAVES PROPAGATING, WIND BLOWING OR CURRENT FLOWING IN THE POSITIVE Y_2 -AXIS AS 90°

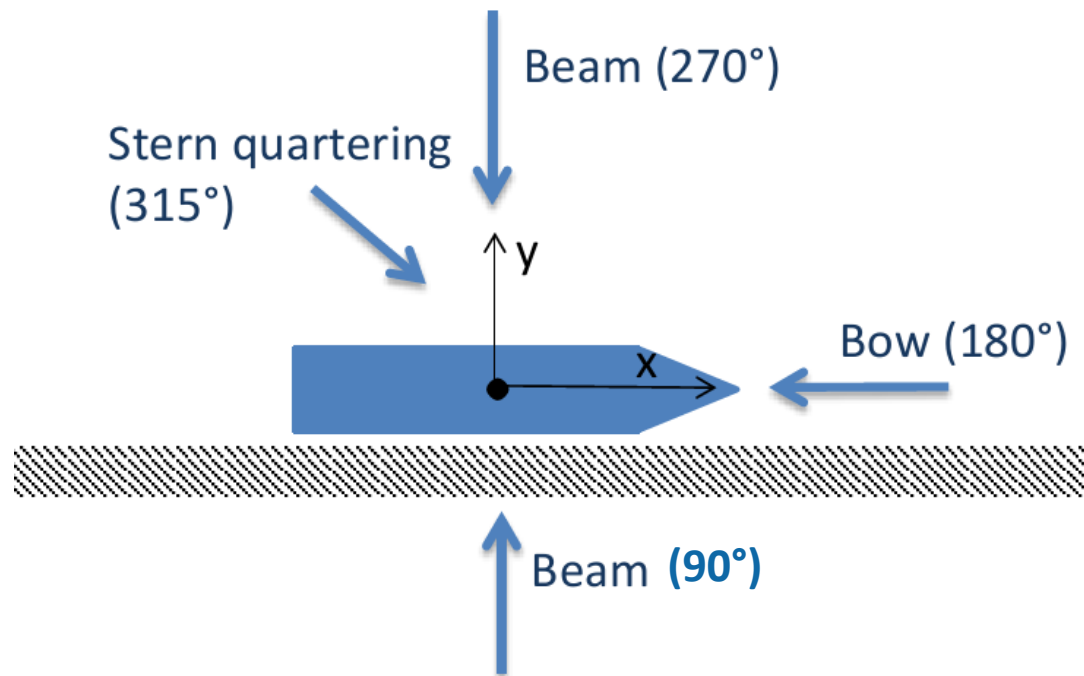

RUNNING THE SIMBAD PROGRAM: NAMES OF INPUT FILES AT BEGINNING OF EACH RUN

USED FILES :

1 Houl_irr.txt
2 VENT.DAT
3 wind_vel.txt
4 COURANT.DAT
5 AMAR.DAT
6 POINT.DAT
7 CHENAL.DAT

NAME OF FILE NOT TO BE CHANGED

INPUT FILE NAME THAT CAN BE CHANGED (FILE NAME:12 CHARACTERS MAX. WITH EXTENSION)

NAME OF FILE NOT TO BE CHANGED

INPUT FILE NAMES THAT CAN BE CHANGED (FILE NAME:12 CHARACTERS MAX. WITH EXTENSION)

RUNNING THE SIMBAD PROGRAM:

INPUT FILE “WIND_VEL.TXT” PROVIDES THE WIND VELOCITY TIME SERIES

210.0000 } **RELATIVE WIND DIRECTION**

0.00	10.22
2.00	13.02
4.00	16.32
6.00	18.22
8.00	20.16
10.00	19.90
12.00	19.19
14.00	23.30
16.00	18.96
18.00	19.95
20.00	22.05
22.00	16.86
24.00	18.02
26.00	13.48
28.00	15.77
30.00	20.65
32.00	18.27
34.00	18.07
36.00	19.52
38.00	16.74
40.00	18.35
42.00	16.90
44.00	15.13
46.00	20.91
48.00	17.20
50.00	20.08
52.00	20.88
54.00	17.19
56.00	17.49
58.00	16.30
60.00	19.09
62.00	22.00
64.00	17.98
66.00	13.65

WIND SPEED TIME SERIES (TIME IN S VS. WIND SPEED IN M/S). IT IS MANDATORY TO END WITH A NEGATIVE TIME VALUE. THE NUMBER OF TIME STEPS IS LIMITED TO 28800. IF THE SIMULATION TIME IS GREATER THAN THE DURATION OF THE TIME SERIES, THE SERIES IS REPEATED CYCLICALLY. THE DURATION OF TIME SERIES SHALL BE LESS THAN (OR EQUAL TO) THE TOTAL SIMULATION TIME.

RUNNING THE SIMBAD PROGRAM:

INPUT FILE “WIND_VEL.TXT” PROVIDES THE WIND VELOCITY TIME SERIES (FOLLOWING)

-
-
1968.00 17.69
1970.00 17.34
1972.00 21.37
1974.00 16.50
1976.00 19.60
1978.00 18.94
1980.00 15.30
1982.00 13.70
1984.00 10.65
1986.00 11.59
1988.00 16.70
1990.00 11.93
1992.00 10.10
1994.00 11.96
1996.00 10.55
-1

0

WIND SPEED TIME SERIES (TIME IN S VS. WIND SPEED IN M/S). IT IS MANDATORY TO END WITH A NEGATIVE TIME VALUE. THE NUMBER OF TIME STEPS IS LIMITED TO 28800. IF THE SIMULATION TIME IS GREATER THAN THE DURATION OF THE TIME SERIES, THE SERIES IS REPEATED CYCLICALLY. THE DURATION OF TIME SERIES SHALL BE LESS THAN (OR EQUAL TO) THE TOTAL SIMULATION TIME.

123.0000
0.0000000E+00 0.0000000E+00
10000.00 0.0000000E+00
-1 0

WHEN THERE IS NO WIND, SUCH AN INPUT FILE WITH A NIL SPEED IS REQUIRED

RUNNING THE SIMBAD PROGRAM: INPUT FILE "VENT.DAT" PROVIDES THE WIND CHARACTERISTICS

5300.000	1320.000	274.0000	8.500000	
0.000000E+00	0.3500000	0.000000E+00	0.000000E+00	0.000000E+00
10.00000	0.3500000	0.1300000	-2.500000E-02	-0.3300000
20.00000	0.2500000	0.2900000	-2.999999E-02	-0.5400000
30.00000	0.2000000	0.4300000	-7.500000E-02	-0.8200000
40.00000	0.2100000	0.5500000	-9.000000E-02	-1.080000
50.00000	0.2600000	0.6300000	-0.1150000	-1.240000
60.00000	0.3000000	0.6800000	-9.000000E-02	-1.350000
70.00000	0.2200000	0.7100000	-2.999999E-02	-1.410000
80.00000	0.1300000	0.7200000	-2.500000E-02	-1.480000
90.00000	0.000000E+00	0.7200000	0.000000E+00	-1.530000
100.0000	-5.000000E-02	0.7100000	1.500000E-02	-1.490000
110.0000	-7.999998E-02	0.6800000	2.999999E-02	-1.400000
120.0000	-0.1000000	0.6400000	5.000000E-02	-1.270000
130.0000	-0.1500000	0.5500000	7.500000E-02	-1.100000
140.0000	-0.2000000	0.4300000	5.000000E-02	-0.9100000
150.0000	-0.2500000	0.3000000	3.999999E-02	-0.6200000
160.0000	-0.3000000	0.1900000	2.999999E-02	-0.3800000
170.0000	-0.3500000	9.000000E-02	1.500000E-02	-0.2200000
180.0000	-0.4000000	0.000000E+00	0.000000E+00	0.000000E+00

SIDE WIND AREA/FRONT WIND AREA/VESSEL LENGTH/HEIGHT OF SIDE WIND AREA
CENTRE OF GRAVITY ABOVE THE WATERLINE PLANE

RELATIVE WIND DIRECTION (FROM 0° TO 180°) /WIND
COEFFICIENTS C_x, C_y, C_n, C_k (SEE NOTE HEREAFTER)

NOTE ON THE WIND FORCES CALCULATION:

THE FOLLOWING FORMULAS ARE USED, RELATIVE TO COORDINATE SYSTEM R2:

SURGE WIND FORCE: $F_{xv} = \frac{1}{2} \rho_a \cdot C_x \cdot A_f \cdot V^2$

SWAY WIND FORCE: $F_{yv} = \frac{1}{2} \rho_a \cdot C_y \cdot A_T \cdot V^2$

YAW WIND MOMENT: $M_{nv} = \frac{1}{2} \rho_a \cdot C_n \cdot A_T \cdot V^2 \cdot L_{pp}$

ROLL WIND MOMENT: $M_{kv} = \frac{1}{2} \rho_a \cdot C_k \cdot A_T \cdot V^2 \cdot H$

WITH:

C_x, C_y, C_n, C_k: WIND COEFFICIENTS VS. RELATIVE DIRECTION

V, WIND SPEED (M/S)

A_T, A_f: SIDE WIND AND FRONT WIND AREAS (M²)

L_{PP}: SHIP LENGTH (M)

H: HEIGHT OF SIDE WIND AREA CENTRE OF GRAVITY ABOVE SHIP COG

ρ_a: AIR DENSITY (KG/M³)

RUNNING THE SIMBAD PROGRAM:

INPUT FILE "COURANT.DAT" PROVIDES THE CURRENT CHARACTERISTICS

180.0000	RELATIVE CURRENT DIRECTION		
0.00	0.0	CURRENT SPEED TIME SERIES (TIME IN S VS. CURRENT SPEED IN M/S). SAME CONVENTION AS FOR THE WIND FILE	
10000.0	0.0		
-1	0	RELATIVE CURRENT DIRECTION (FROM 0° TO 180°) / CURRENT COEFFICIENTS C _x , C _y , C _m (SEE NOTE HEREAFTER)	
0	0.038		
10	0.034		
20	0.023		
30	-0.037		
40	-0.114		
50	-0.114		
60	-0.046		
70	-0.02		
80	-0.015		
90	-0.02		
100	-0.024		
110	-0.01		
120	0.026		
130	0.067		
140	0.068		
150	0.04		
160	-0.009		
170	-0.031		
180	-0.035		

WHEN THERE IS NO CURRENT, SUCH AN INPUT FILE WITH A NIL SPEED IS REQUIRED

NOTE ON THE CURRENT FORCES CALCULATION:

THE FOLLOWING FORMULAS ARE USED, RELATIVE TO COORDINATE SYSTEM R2:

SURGE WIND FORCE: $F = \frac{1}{2} \rho C_F U^2 A_c$

SWAY WIND FORCE: $F = \frac{1}{2} \rho C_F U^2 A_c$

YAW WIND MOMENT: $M = \frac{1}{2} \rho C_M U^2 A_c L_{pp}$

WITH:

$C_F = C_x, C_y$: CURRENT COEFFICIENTS IN SURGE OR SWAY VS. RELATIVE DIRECTION

C_M = CURRENT COEFFICIENTS IN YAW VS. RELATIVE DIRECTION

U , CURRENT SPEED (M/S)

A_c : CURRENT AREA (M²) = $L_{pp} \times T$

L_{pp} : SHIP LENGTH (M)

T : SHIP DRAFT (M)

P : WATER DENSITY (KG/M³)

RUNNING THE SIMBAD PROGRAM: INPUT FILE "AMAR.DAT" DEFINES THE MOORING SYSTEM

```

12]
1      4  336500.0 -188320.0  82873.0 -7786.7
1 0.0000000E+00
-66.000    65.50000    7.50000
-15.0000   5.00000    22.0000
98100.0    0.0000000E+00
1      4  596520.0 -415490.0  186330.0 -18592.0
1 0.0000000E+00
-21.0000   65.50000    7.50000
-6.0000    16.50000    22.0000
147200.0   0.0000000E+00
1      4  394520.0 -272190.0  121920.0 -12132.0
1 0.0000000E+00
25.00000   65.50000    7.50000
1.50000    18.50000    22.0000
123600.0   0.0000000E+00
1      4  358580.0 -219240.0  97027.0 -9332.8
1 0.0000000E+00
93.0000    29.00000    7.50000
25.0000    23.00000    22.0000
129500.0   0.0000000E+00
1      4  354470.0 -213390.0  94326.0 -9034.9
1 0.0000000E+00
151.0000   29.00000    7.50000
221.0000   23.00000    22.0000
68700.0    0.0000000E+00
1      4  375670.0 -244040.0  108590.0 -10621.0
1 0.0000000E+00
221.0000   65.50000    7.50000
252.0000   13.50000    22.0000
88300.0    0.0000000E+00
1      4  580970.0 -391990.0  175120.0 -17314.0
1 0.0000000E+00
263.0000   65.50000    7.50000
262.0000   10.00000    22.0000
132400.0   0.0000000E+00
1      4  352330.0 -210370.0  92935.0 -8882.0

```

TOTAL NUMBER OF MOORING LINES AND FENDERS. MAX.: 22

EACH MOORING LINE OR FENDER DEFINED AS FOLLOWS:

FIRST LINE:

PARAMETER FOR THE TYPE OF CONNECTION: 1 FOR A CLASSIC MOORING LINE, 2 FOR A SPECIFIC CONNECTION, -1 FOR A FENDER

FOR CLASSIC MOORING LINE AND FENDER (PARAMETERS 1 AND -1), THE STIFFNESS MAY BE DEFINED WITH A POLYNOMIAL CURVE UP TO DEGREE 5, DEFINING THE MOORING LOAD AS A FUNCTION OF ELONGATION OR THE REACTION FORCE AS A FUNCTION OF DEFLECTION, SUCH AS:

$A * x + B * x^2 + C * x^3 + D * x^4$ (X BEING THE ELONGATION OR DEFLECTION), THEN FOR A STRONG NON-LINEAR STIFFNESS: INDICATE (DEGREE) 4 (AND COEFFICIENTS:) A (N/M), B(N/M2),C(N/M3),D(N/M4) AND FOR A LINEAR STIFFNESS: (DEGREE) 1 (AND) A(N/M)

A SPECIFIC CONNECTION (PARAMETER 2) IS A UNIT THAT RESPONDS TO THE ERROR IN DISPLACEMENT (X AND Y DIRECTIONS) WITH A REACTION FORCE WITH THE AIM OF GETTING THE UNIT, AND THUS THE SHIP, BACK IN THE NEUTRAL POSITION. THE MODEL OF THE UNITS IS WRITTEN TO CALCULATE THE ANGLE AND MAGNITUDE OF THIS REACTION FORCE. THE ERROR IN DISPLACEMENT IS RUN THROUGH A PID CONTROLLER. THE CONTROL VALUE AND THE ANGLE, DEFINING THE MAXIMUM FORCE, ARE USED TO DETERMINE THE MAXIMUM FORCE. IN ANY CASE, TO PREVENT THE FORCES LARGER THAN THE MAXIMUM FORCE, THE CONTROL VARIABLE HAS A MAXIMUM OF 1. EACH UNIT IS ALLOCATED TO EXERT A SWAY FORCE OF 230 kN AND A SURGE FORCE OF 100 kN. FOR THIS SPECIFIC CONNECTION, THE NUMBER INDICATING THE DEGREE OF THE POLYNOMIAL IS NOW THE NUMBER OF COUPLED UNITS. IT MUST BE FOLLOWED BY AS MANY NIL VALUES AS THERE ARE NUMBER OF UNITS (EXAMPLE: 2 / 0. / 0.)

RUNNING THE SIMBAD PROGRAM:

INPUT FILE “AMAR.DAT” DEFINES THE MOORING SYSTEM (FOLLOWING)

```
12
1      4  336500.0 -188320.0  82873.0 -7786.7
1 0.0000000E+00
-66.000  65.50000  7.50000
-15.0000  5.00000  22.0000
98100.0  0.0000000E+00
1      4  596520.0 -415490.0  186330.0 -18592.0
1 0.0000000E+00
-21.0000  65.50000  7.50000
-6.0000  16.50000  22.0000
147200.0  0.0000000E+00
1      4  394520.0 -272190.0  121920.0 -12132.0
1 0.0000000E+00
25.00000  65.50000  7.50000
1.50000  18.50000  22.0000
123600.0  0.0000000E+00
1      4  358580.0 -219240.0  97027.0 -9332.8
1 0.0000000E+00
93.0000  29.00000  7.50000
25.0000  23.00000  22.0000
129500.0  0.0000000E+00
1      4  354470.0 -213390.0  94326.0 -9034.9
1 0.0000000E+00
151.0000  29.00000  7.50000
221.0000  23.00000  22.0000
68700.0  0.0000000E+00
1      4  375670.0 -244040.0  108590.0 -10621.0
1 0.0000000E+00
221.0000  65.50000  7.50000
252.0000  13.50000  22.0000
88300.0  0.0000000E+00
1      4  580970.0 -391990.0  175120.0 -17314.0
1 0.0000000E+00
263.0000  65.50000  7.50000
262.0000  10.00000  22.0000
132400.0  0.0000000E+00
1      4  352330.0 -210370.0  92935.0 -8882.0
```

EACH MOORING LINE OR FENDER DEFINED AS FOLLOWS:

SECOND LINE:

A DAMPING MAY BE DEFINED WITH A POLYNOMIAL CURVE UP TO DEGREE 5, AS A FUNCTION OF ELONGATION OR DEFLECTION SPEED. CONVENTIONS ARE THE SAME AS FOR THE INTRODUCTION OF STIFFNESS. IF THERE IS NO DAMPING: PUT 1/ 0.

THIRD LINE:

POSITION OF THE BOLLARD AT QUAY (PARAMETER 1) OR OF FENDER SUPPORT (GENERALLY THE QUAY OR WHARF)(PARAMETER -1), IN THE FIRST FIXED COORDINATE SYSTEM (R1). FOR A SPECIFIC CONNECTION (PARAMETER 2), IT IS THE POINT ON THE SHIP'S HULL WHERE THE CONNECTION IS FIXED.

FOURTH LINE:

POSITION OF THE MOORING POINT ON-BOARD THE SHIP (PARAMETER 1). IF THERE IS A LONG MOORING LENGTH ON-BOARD THE SHIP, IT IS PREFERABLE TO POSITION THE POINT AT THE FAIRLEAD AND TO TAKE THIS LENGTH INTO ACCOUNT IN THE CALCULATION OF THE STIFFNESS.

FOR A FENDER (PARAMETER -1), IT IS THE POINT ON THE SHIP'S HULL WHERE THE FENDER IS IN TOUCH. ONLY THE Y COORDINATES ARE DIFFERENT BETWEEN THE TWO POSITIONS.

FOR A SPECIFIC CONNECTION (PARAMETER 2), ONLY THE Y COORDINATE DIFFERS FROM THE PREVIOUS POINT AND IT SHOULD BE PLACED 1 M IN FRONT OF THIS POINT.

FIFTH LINE:

PRETENSION (IN N) FOR THE MOORING LINE AND PRE-DAMPING, IF ANY.

RUNNING THE SIMBAD PROGRAM: INPUT FILE “AMAR.DAT” DEFINES THE MOORING SYSTEM (FOLLOWING)

```
-1      1  8675000.
1  0.0000000E+00
68.0000    26.00000    5.000000
68.0000    23.00000    5.000000
0.0000000E+00  0.0000000E+00
-1      1  8675000.
1  0.0000000E+00
93.0000    26.00000    5.000000
93.0000    23.00000    5.000000
0.0000000E+00  0.0000000E+00
-1      1  8675000.
1  0.0000000E+00
151.0000    26.00000    5.000000
151.0000    23.00000    5.000000
0.0000000E+00  0.0000000E+00
-1      1  8675000.
1  0.0000000E+00
185.0000    26.00000    5.000000
185.0000    23.00000    5.000000
0.0000000E+00  0.0000000E+00
2      2  0.0 0.0
1  0.0000000E+00
72.9000    -15.95000    3.000000
72.9000    -14.95000    3.000000
0.0  0.0000000E+00
2      2  0.0 0.0
1  0.0000000E+00
102.9000    -15.95000    3.000000
102.9000    -14.95000    3.000000
0.0  0.0000000E+00
2      2  0.0 0.0
1  0.0000000E+00
132.9000    -15.95000    3.000000
132.9000    -14.95000    3.000000
0.0  0.0000000E+00
2      2  0.0 0.0
1  0.0000000E+00
162.9000    -15.95000    3.000000
162.9000    -14.95000    3.000000
0.0  0.0000000E+00
```

EXAMPLES OF FENDER SYSTEM DEFINITION

EXAMPLES OF SPECIFIC CONNECTION DEFINITION

RUNNING THE SIMBAD PROGRAM: INPUT FILE “POINT.DAT” FOR PARTICULAR POINTS ABOARD THE SHIP

148.000¹ 23.0000 26.2500

*NUMBER OF PARTICULAR POINTS AND COORDINATES OF EACH POINT IN THE FIRST FIXED
COORDINATE SYSTEM (R1)*

RUNNING THE SIMBAD PROGRAM: INPUT FILE “CHENAL.DAT” FOR A PASSING SHIP

```
0.0      0.0      0.0      0.0
200.0    0.0      0.0      0.0
204.49   4175.07  0.0      0.0
208.97   5365.54  0.0      0.0
213.46   7155.45  422.6    0.0
217.94   8945.37  1056.5    0.0
222.43   9540.61  1687.7    0.0
226.92   14310.91 2110.3    0.0
231.40   17291.29 2427.3    0.0
235.89   20271.68 2532.9    0.0
240.38   22656.83 2744.2    0.0
244.86   28621.82 5065.9    0.0
249.35   31006.97 6333.7    -81054.8
253.83   36372.51 6967.6    -188933.6
258.32   42928.51 9923.2    -350897.5
262.81   52469.12 13090.1   -701940.7
267.29   59624.57 16888.1   -971929.2
271.78   67375.26 23010.5   -1349796.3
276.27   77515.32 28921.6   -1835833.8
280.75   87651.16 36945.8   -2348695.2
285.24   95401.84 49401.9   -2969581.1
289.72   102557.30 62489.1   -3779546.3
294.21   96592.31 80222.4   -4400432.2
298.70   82880.85 97113.3   -5075403.3
303.18   48298.27 111891.0   -5129342.6
307.67   7155.45 122445.4   -4589365.8
312.15   -54854.27 128567.8   -3320624.3
316.64   -115078.29 127514.0   -1619784.7
321.13   -172912.94 118224.7   944813.7
325.61   -232541.73 103024.4   4049534.7
330.10   -292166.30 86344.8    6992146.1
334.59   -345830.10 61224.1    9286901.9
339.07   -390548.53 27445.2    11338639.0
343.56   -414995.28 -12667.4    12958423.7
348.04   -419170.35 -55313.0    14038231.6
352.53   -413205.36 -97113.3    14389274.9
357.02   -392933.68 -143556.8    13714303.8

540.95   -11330.53 0.0 0.0
545.44   -9540.61 0.0 0.0
549.92   -7750.69 0.0 0.0
554.41   -6560.22 0.0 0.0
558.89   -4770.30 0.0 0.0
600.00   0.0 0.0 0.0
-1       0.0 0.0 0.0
```

TIME SERIES OF FORCES INDUCED BY PASSING SHIP RELATIVE TO COORDINATE SYSTEM R2 (SURGE FORCE X , SWAY FORCE Y IN NEWTON AND YAW MOMENT M IN Nm). IT IS MANDATORY TO END WITH A NEGATIVE TIME VALUE. THE NUMBER OF TIME STEPS IS LIMITED TO 1000. AS THERE IS NO RAMP-UP TIME FOR THIS TYPE OF SIMULATION, A “BLANK TIME” OF ABOUT 200s IS TO BE INTRODUCED AT THE BEGINNING OF THE TIME SERIES.

RUNNING THE SIMBAD PROGRAM (SIMBAD_V0.EXE):

```
USED FILES :  
1 Hou1_irr.txt  
2 VENT.DAT  
3 wind_vel.txt  
4 COURANT.DAT  
5 AMAR.DAT  
6 POINT.DAT  
7 CHENAL.DAT
```

RECALL OF THE NAME OF THE FILES. IF ONE NAME OF FILE IS WRONG OR ONE FILE IS NOT EXISTING IN THE DIRECTORY, THE PROGRAM ASKS FOR THE NAME OF THE FILE.

```
MODIFICATION OF FILE? (YES:1 - NO:0)
```

POSSIBLE CHANGE OF ONE NAME OF THE INPUT FILES

```
INITIAL LENGTH:  
1 80.4456329  
INITIAL LENGTH:  
2 53.2564545  
INITIAL LENGTH:  
3 54.5114670  
INITIAL LENGTH:  
4 69.7871780  
INITIAL LENGTH:  
5 71.7373657  
INITIAL LENGTH:  
6 62.2515068  
INITIAL LENGTH:  
7 57.3715973  
INITIAL LENGTH:  
8 72.6945648  
INITIAL LENGTH:  
9 3.0000000  
INITIAL LENGTH:  
10 3.0000000  
INITIAL LENGTH:  
11 3.0000000  
INITIAL LENGTH:  
12 3.0000000
```

WRITING OF THE INITIAL LENGTHS OF MOORING LINES AND FENDERS

```
TITLE ?
```

```
TOTAL SIMULATION TIME (IN SECONDS)?  
14399.50  
TIME STEP (IN SECOND)?  
0.2000  
RAMP-UP TIME (IN SECONDS) ?  
400
```

POSSIBLE WRITING OF A TITLE IN OUTPUT RESULT FILE

*THE TOTAL SIMULATION TIME AND TIME STEP ARE FIXED BY THE HYDRODYNAMIC TIME SERIES
THE RAMP-UP TIME IS TO BE INTRODUCED (GENERALLY 400s)*

RUNNING THE SIMBAD PROGRAM (SIMBAD_V0.EXE):

```
TOTAL SIMULATION TIME (IN SECONDS)?  
14399.5000  
TIME STEP (IN SECOND)?  
0.200000003  
RAMP-UP TIME (IN SECONDS) ?  
400  
*** CALCULATION IN PROGRESS ***
```

```
0 ---> PROGRAM EXIT  
1 ---> WRITING OF RESULTS FILES  
2 ---> ADDITIONAL DURATION  
3 ---> ANALYSIS OF RESULTS
```

CHOICE OF DIFFERENT OPTIONS (0 IS ALWAYS TO EXIT)

```
3  
START OF ANALYSIS (IN SECONDS)?  
400  
END OF ANALYSIS (IN SECONDS)?  
14300
```

```
0 ---> PROGRAM EXIT  
1 ---> ANALYSIS: TABLE OF RESULTS
```

1

	AVERAGE	MIN.	MAX.	MAX-MIN	RMS
WIND (M/S)	1.702E+01	8.710E+00	2.497E+01	1.626E+01	2.643E+00
SURGE (M)	-5.064E-01	-2.709E+00	1.230E+00	3.939E+00	5.872E-01
SWAY (M)	-2.027E-01	-8.676E-01	1.818E-01	1.049E+00	1.734E-01
HEAVE (M)	-2.849E-03	-5.223E-01	5.201E-01	1.042E+00	1.167E-01
ROLL (DEG)	-1.463E-01	-1.471E+00	1.132E+00	2.603E+00	3.491E-01
PITCH (DEG)	-9.075E-04	-7.916E-01	7.733E-01	1.565E+00	1.923E-01

IF OPTION 3 IS CHOSEN ("ANALYSIS OF RESULTS"), THE START AND END TIME OF THE ANALYSIS ARE REQUESTED. FOR THE END TIME, ALWAYS INDICATE A TIME WHICH IS SHORTER (ABOUT 100s) THAN THE REAL END TIME. TO OBTAIN THE RESULTS OF THE ANALYSIS ON THE SCREEN ("RESUL.RES" FILE), TAKE OPTION 1 ("ANALYSIS: TABLE OF RESULTS")

RUNNING THE SIMBAD PROGRAM: OUTPUT FILE “RESUL.RES” FOR ANALYSIS OF SIMBAD RESULTS

	AVERAGE	MIN.	MAX.	MAX-MIN	RMS
WIND (M/S)	0.000E+00	0.000E+00	0.000E+00	0.000E+00	0.000E+00
SURGE (M)	9.676E-03	-4.941E-02	7.246E-02	1.219E-01	1.924E-02
SWAY (M)	-2.753E-01	-2.676E+00	1.120E+00	3.796E+00	5.058E-01
HEAVE (M)	-1.452E-03	-1.281E+00	1.381E+00	2.662E+00	3.387E-01
ROLL (DEG)	-1.201E-01	-3.810E+00	3.443E+00	7.254E+00	9.614E-01
PITCH (DEG)	1.493E-03	-3.463E-02	4.147E-02	7.609E-02	1.025E-02
YAW (DEG)	-4.091E-02	-4.943E-01	3.937E-01	8.880E-01	1.210E-01
POINT 1 :					
SURGE (M)	2.239E-02	-1.376E-01	1.872E-01	3.248E-01	4.344E-02
SWAY (M)	-2.484E-01	-2.801E+00	1.318E+00	4.119E+00	5.355E-01
HEAVE (M)	-3.842E-02	-1.371E+00	1.237E+00	2.608E+00	3.055E-01
TENSION :					
LINE 1 (T)	3.118E+01	0.000E+00	1.121E+02	1.121E+02	1.631E+01
LINE 2 (T)	3.187E+01	0.000E+00	1.184E+02	1.184E+02	1.763E+01
LINE 3 (T)	3.126E+01	0.000E+00	1.138E+02	1.138E+02	1.665E+01
LINE 4 (T)	2.588E+01	1.799E+01	4.229E+01	2.430E+01	2.895E+00
LINE 5 (T)	2.823E+01	1.655E+01	5.038E+01	3.382E+01	3.922E+00

DETERMINATION OF AVERAGE, MINIMUM, MAXIMUM AND STANDARD DEVIATION VALUES FOR MOTIONS, MOORING LINE AND FENDER LOADS. BY CONVENTION, MOORING LINE LOADS ARE POSITIVE AND FENDER LOADS ARE NEGATIVE.

	PERIOD 1 (S)	AMPLITUDE 1	PERIOD 2 (S)	AMPLITUDE 2
WIND (M/S)	0.000E+00	0.000E+00	0.000E+00	0.000E+00
SURGE (M)	8.436E+01	2.660E-02	7.816E+01	2.349E-02
SWAY (M)	2.986E+01	5.954E-01	1.427E+01	5.270E-01
HEAVE (M)	1.518E+01	4.266E-01	1.010E+01	3.629E-01
ROLL (DEG)	1.518E+01	1.639E+00	1.427E+01	1.364E+00
PITCH (DEG)	1.010E+01	1.574E-02	1.034E+01	9.014E-03
YAW (DEG)	2.988E+01	5.421E-01	2.610E+01	2.226E-01
POINT 1 :				
SURGE (M)	2.988E+01	1.821E-01	2.611E+01	7.044E-02
SWAY (M)	1.427E+01	6.347E-01	1.518E+01	5.984E-01
HEAVE (M)	1.518E+01	2.883E-01	1.701E+01	2.803E-01
TENSION :				
LINE 1 (T)	1.518E+01	1.858E+01	1.427E+01	1.445E+01
LINE 2 (T)	1.518E+01	2.042E+01	1.427E+01	1.623E+01

DETERMINATION OF MAIN PERIODS AND AMPLITUDES OF TIME-SERIES FROM A FFT PROCEDURE

OTHER RAW OUTPUT FILES ARE ALSO AVAILABLE FOR LATER ANALYSIS (SEE HEREAFTER): MOTIONS, SPEEDS, ACCELERATIONS OF THE CENTER OF GRAVITY OR OF A SPECIFIC POINT; MOORING LINE AND FENDER LOADS.

RUNNING THE SIMBAD PROGRAM (SIMBAD_V0.EXE):

```
| LINE 11 (T) | 1.867E+01 | 9.845E+00 | 1.291E+01 | 7.933E+00 |
|-----|
| LINE 12 (T) | 1.195E+01 | 1.581E+01 | 1.289E+01 | 1.211E+01 |
|-----|

0 ---> PROGRAM EXIT
1 ---> WRITING OF RESULTS FILES
2 ---> ADDITIONAL DURATION
3 ---> ANALYSIS OF RESULTS

1

0 ---> NO FILE WRITING
1 ---> CENTER OF GRAVITY MOTIONS
2 ---> CENTER OF GRAVITY VELOCITIES
3 ---> CENTER OF GRAVITY ACCELERATIONS
4 ---> MOTIONS OF A SPECIFIC POINT
5 ---> VELOCITIES OF A SPECIFIC POINT
6 ---> ACCELERATION OF A SPECIFIC POINT
7 ---> MOORING LINE AND FENDER LOADS

1

0 ---> NO FILE WRITING
1 ---> CENTER OF GRAVITY MOTIONS
2 ---> CENTER OF GRAVITY VELOCITIES
3 ---> CENTER OF GRAVITY ACCELERATIONS
4 ---> MOTIONS OF A SPECIFIC POINT
5 ---> VELOCITIES OF A SPECIFIC POINT
6 ---> ACCELERATION OF A SPECIFIC POINT
7 ---> MOORING LINE AND FENDER LOADS

7

---> NUMBER OF MOORING LINES AND FENDERS: 12
```

CHOICE OF DIFFERENT OPTIONS (0 IS ALWAYS TO EXIT)

*IF OPTION 1 IS CHOSEN, CHOICE OF WRITING RAW OUTPUT FILES:
LINES.RES FOR MOORING LINE AND FENDER LOADS, MOVCG.RES FOR
CENTER OF GRAVITY MOTIONS, MOVPT 1.RES FOR MOTIONS OF S SPECIFIC
POINT...*

RUNNING THE SIMBAD PROGRAM (SIMBAD_V0.EXE):

```
0 ---> NO FILE WRITING
1 ---> CENTER OF GRAVITY MOTIONS
2 ---> CENTER OF GRAVITY VELOCITIES
3 ---> CENTER OF GRAVITY ACCELERATIONS
4 ---> MOTIONS OF A SPECIFIC POINT
5 ---> VELOCITIES OF A SPECIFIC POINT
6 ---> ACCELERATION OF A SPECIFIC POINT
7 ---> MOORING LINE AND FENDER LOADS
```

4

```
---> SPECIFIC POINT NUMBER: BETWEEN 1 AND 1
```

1

```
0 ---> NO FILE WRITING
1 ---> CENTER OF GRAVITY MOTIONS
2 ---> CENTER OF GRAVITY VELOCITIES
3 ---> CENTER OF GRAVITY ACCELERATIONS
4 ---> MOTIONS OF A SPECIFIC POINT
5 ---> VELOCITIES OF A SPECIFIC POINT
6 ---> ACCELERATION OF A SPECIFIC POINT
7 ---> MOORING LINE AND FENDER LOADS
```

0

```
0 ---> PROGRAM EXIT
1 ---> WRITING OF RESULTS FILES
2 ---> ADDITIONAL DURATION
3 ---> ANALYSIS OF RESULTS
```

0

```
ANOTHER RUN ? (YES:1 - NO:0)
```

0

CHOICE OF DIFFERENT OPTIONS (0 IS ALWAYS TO EXIT)