

EX 2100 and EX 2200 Secure WAN Managers Installation and Setup Guide

Document No.: D-020-01-00-0001

8/5/2010

Headquarters

A10 Networks, Inc.
2309 Bering Dr.
San Jose, CA 95131-1125 USA

Tel: +1-408-325-8668 (main)
Fax: +1-408-325-8666

www.a10networks.com

© A10 Networks, Inc. 8/5/2010 - All Rights Reserved

Information in this document is subject to change without notice.

Trademarks

A10 Networks, the A10 logo, ACOS, aFlex, aXAPI, IDaccess, IDSentry, IP-to-ID, SoftAX, Virtual Chassis, and VirtualN are trademarks or registered trademarks of A10 Networks, Inc. All other trademarks are property of their respective owners.

Patents Protection

A10 Networks products including all EX 1100 products are protected by one or more of the following US patents and patents pending: 7716378, 7675854, 7647635, 7552126, 20090049537, 20080229418, 20080040789, 20070283429, 20070271598, 20070180101

A10 Networks Inc. Software License and End User Agreement

Software for all EX 1100 products contains trade secrets of A10 Networks and its subsidiaries and Customer agrees to treat Software as confidential information.

Anyone who uses the Software does so only in compliance with the terms of this Agreement. Customer shall not:

- 1) reverse engineer, reverse compile, reverse de-assemble or otherwise translate the Software by any means
- 2) sublicense, rent or lease the Software.

Disclaimer

The information presented in this document describes the specific products noted and does not imply nor grant a guarantee of any technical performance nor does it provide cause for any eventual claims resulting from the use or misuse of the products described herein or errors and/or omissions. A10 Networks, Inc. reserves the right to make technical and other changes to their products and documents at any time and without prior notification.

No warranty is expressed or implied; including and not limited to warranties of non-infringement, regarding programs, circuitry, descriptions and illustrations herein.

Environmental Considerations

Some electronic components may possibly contain dangerous substances. For information on specific component types, please contact the manufacturer of that component. Always consult local authorities for regulations regarding proper disposal of electronic components in your area.

Further Information

For additional information about A10 products, terms and conditions of delivery, and pricing, contact your nearest A10 Networks, Inc. location which can be found by visiting www.a10networks.com.

Getting Started

Inspection

Inspect the box carefully **before** opening. If the box is damaged, contact the shipper for instructions on filing a claim. Opening a damaged box before inspection by the shipper will void any potential shipping claims. Do not attempt to install or operate damaged equipment. As with any electrical equipment, **personal injury** or damage to other equipment can result from commissioning damaged electrical equipment.

Regulations

Follow all applicable regulations for installation of electrical equipment; for example, in the United States of America, follow the National Electrical Code.

Unpacking

Carefully unpack the EX 2100 and EX 2200 Secure WAN Managers™ (EX device) and included items from the box.



Check the Contents

Confirm that the following items are included with the EX device:

- EX chassis: EX 2100 **or** EX 2200 (both chassis shown above)
- Cables: two for AC power, two Cat 5E Ethernet, and one RS-232
- Brackets and screws (for rack mounting)
- CD with CLI and GUI User Manuals

Other Requirements

Other equipment needed for installation:

- Notebook or workstation PC (Windows, Linux, Mac)
– Must have compatible Ethernet connectivity
- Web browser (IE 5.5 or later, Mozilla Firefox 1.0.4 or later)
- Terminal Emulation Software (PuTTY, HyperTerminal, or similar)

Installation

Front and Rear Views

FIGURE 1 *Front view 2100 (Ethernet and Console connectors, LEDs)*




FIGURE 2 *Rear view 2100 (AC connections and power switch)*



Rack Mounting

1. Attach the mounting brackets to the EX device with the included small black screws. The left bracket is shown below.

FIGURE 3. Attaching the LEFT rack-mount bracket

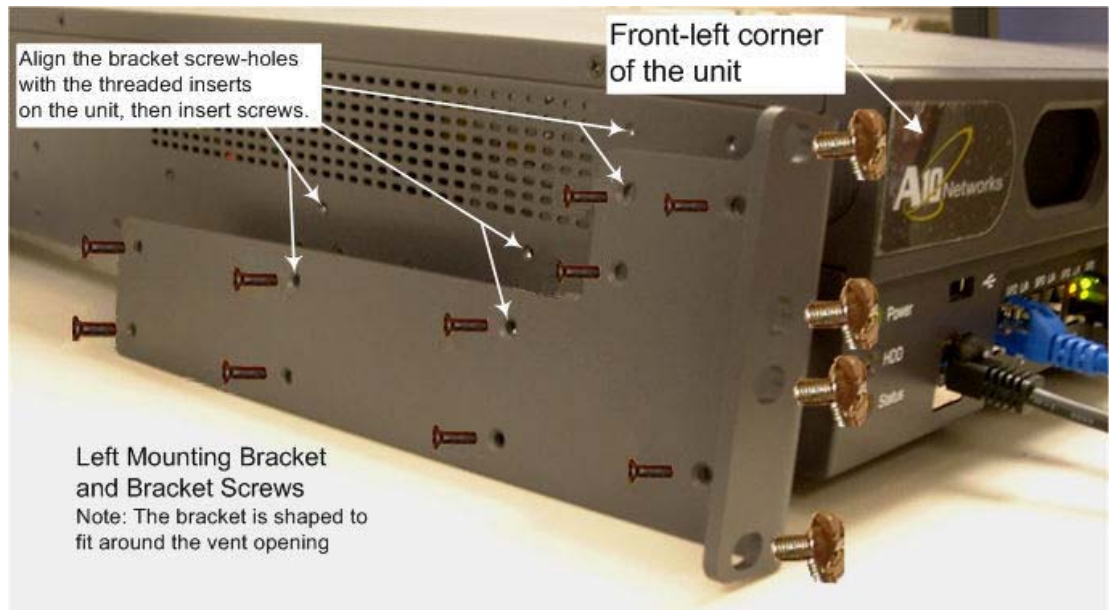

2. Support the EX device in position in the rack.
3. Secure the device to the rack using the large screws provided.

Connections

The EX device requires the following connections:

- AC power cable with ground pin (included with device).
 - Make certain the power switch is OFF before connecting.
- Ethernet connections:
 - Data 1-8
 - Serial ports

The following cables are supplied with the EX device:

- 1 x AC power cable
- 1 x Cat 5E white
- 1 x Cat 5E crossover red

Front Panel Interface Connections

The connectors are shown in [Figure 1](#) and [Figure 4](#).

FIGURE 4 Connecting the EX device



Console
Connect RS-232 to Console or PC with Terminal Emulation. Configure in CLI via IP address.

Ethernet Data (1-8)
Connect Cat-5E to Ethernet Hub/Switch
* Note: only 1-4 shown.

Front Panel Interface and Power Status LEDs

TABLE 1 Front panel LED indications

LED	Color		Status	Description
POWER	Green		On	Power is switched ON
	N/A		Off	No power connected
HDD	Yellow		On	Hard disk under access
	N/A		Off	No Data access
STATUS	Green		On	When system under access
	N/A		Off	No power access
Ethernet Ports	L/A	Orange	On	Ethernet cable connected to RJ-45
			Flash	Link Activity
	SPD		Off	10M
		Green	On	100M
		Orange	On	1G

Power

Power-on Instructions

1. First, verify that all connections have been made according to the instructions on the previous page.

2. Connect the terminal and/or network connections as described below in [“Connection via Console \(USB or Serial Port\)” on page 7](#), Step 1.
3. Only then, switch on power to the EX device.

Initial Configuration

The EX device can be initially configured using the console connection. It is recommended that you read this procedure entirely before starting. Entering a question mark **?** and pressing Enter at the console displays help at the current level. Enter a command or keyword, a “space”, and **?** to display help specific to that command or keyword. This works for commands with sub-commands also.

Connection via Console (USB or Serial Port)

1. Using a USB or serial port cable, connect the EX device to a computer with terminal emulation software (for example, HyperTerminal) using the respective ports on both devices.
2. Power on the computer and the EX device.
3. Set the terminal emulation software for 9600 baud and 8-N-1 (8 bits - no parity - 1 stop bit). Once you are connected, the login prompt will appear on the terminal.

Login via CLI

1. Log into the EX device with the default username (admin) and the default password (a10).

```
login as: admin  
Welcome to EX  
Using keyboard-interactive authentication.  
Password:***  
  
[type ? for help]
```
2. Enable the privileged EXEC level by typing **enable** and pressing Enter. There is no default password.

```
EX>enable  
Password:(press enter only)  
EX#
```
3. Access the configuration mode by typing **config** and pressing Enter.

```
EX#config
```


EX(config)#

How to Configure an IP Address

Note: In the factory default configuration, Ethernet port 4 has IP address 192.168.1.10/24. You can use either a console connection or another PC with IP address 192.168.1.x/24. To connect to 192.168.1.10, connect the PC to Ethernet port 4. You can *not* assign IP address 192.168.1.x/24 to any port other than Ethernet port 4, unless the IP address on Ethernet port 4 is removed or changed to another subnet.

Here is an example of how to configure an IP address on the EX device. In this example, IP address 192.168.2.228/24 is assigned to Ethernet port 1.

1. Access the configuration level for an Ethernet port, and assign an IP address to the port:

```
EX(config)#interface ethernet 1

EX(config-if:ethernet1)#ip address
192.168.2.228 /24
```

2. Verify the interface IP address change:

```
EX(config-if:ethernet1)#show interfaces
ethernet 1

ethernet1 is up, line protocol is up

  Hardware is Ethernet, address is
0013.7217.3C1F

  Internet address is 192.168.2.228/24,
broadcast is 192.168.2.255

...

EX(config-if:ethernet1)#
```


Change the Admin Password

A10 Networks recommends that you change the admin password immediately for security. In the CLI:

```
EX>enable
Password:*****
```

Note: The default enable password is blank. Just press Enter.

```
EX#config
EX(config)#admin admin password newpassword
```


The EX device is now network accessible for configuration under the new IP address and admin password.

Working in Transparent Mode

The EX device can be inserted into an existing network and work in transparent mode, so that you do not need to change the existing network topology.


To deploy the EX device in transparent mode, you must configure a VLAN. The following simple topology is an example. In the existing company topology, the admin uses 192.168.30.1 as the default gateway.

FIGURE 5 Existing company topology without EX device

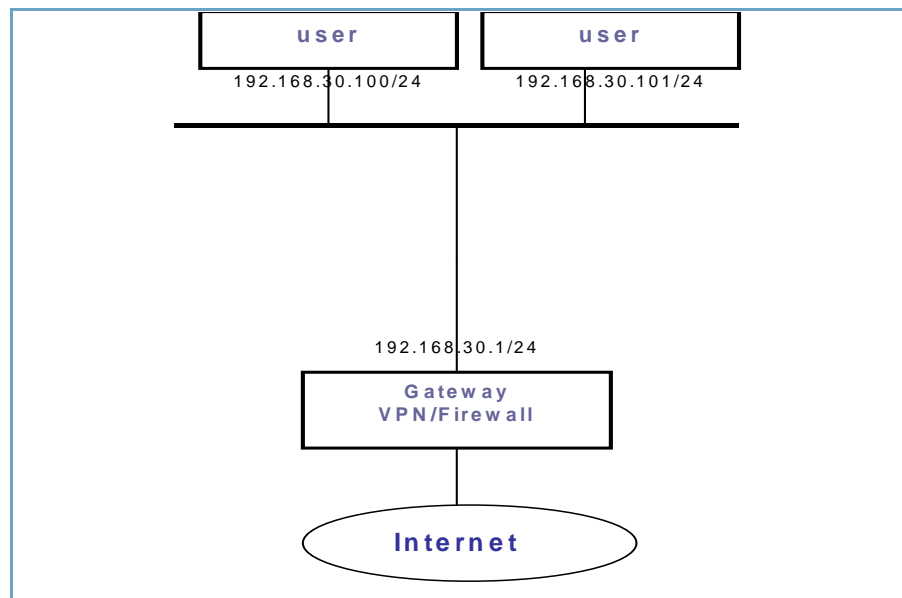

After the EX device is added to the topology, the existing network configuration does not need to be changed.

FIGURE 6 Existing company topology with EX device

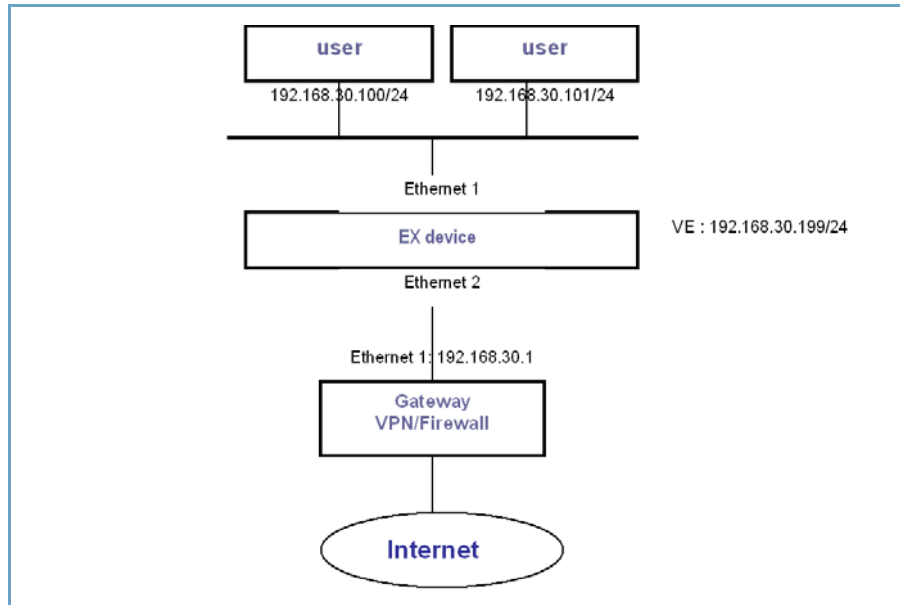

Note: Ethernet ports 1 and 2 on the EX device do not have IP addresses. They are added to untagged VLAN 1. VLAN 1 has IP address 192.168.30.199/24.

Configure the EX device using the CLI

Add the VLAN:

```

EX(config)#vlan 1
EX(config-vlan:1)#untagged ethernet 1
EX(config-vlan:1)#untagged ethernet 2
EX(config-vlan:1)#exit
EX(config)#
  
```

Configure the IP interface:

```


EX(config)#interface ve 1
EX(config-if:ve1)#ip addr 192.168.30.199 /24
EX(config-if:ve1)#exit
  
```

Configure the EX device using the Web GUI

Add the VLAN:

1. Select Configure > Network > VLAN.
2. Click New. The VLAN tab appears. (See [Figure 7](#).)
3. In the VLAN ID field, enter 1.
4. In the Available list, select ethernet1 and ethernet2.
5. Click << to move the selected interfaces to the Untagged list:
6. Click OK. The new VLAN appears in the VLAN table.


FIGURE 7 *Transparent Mode – VLAN Tab*

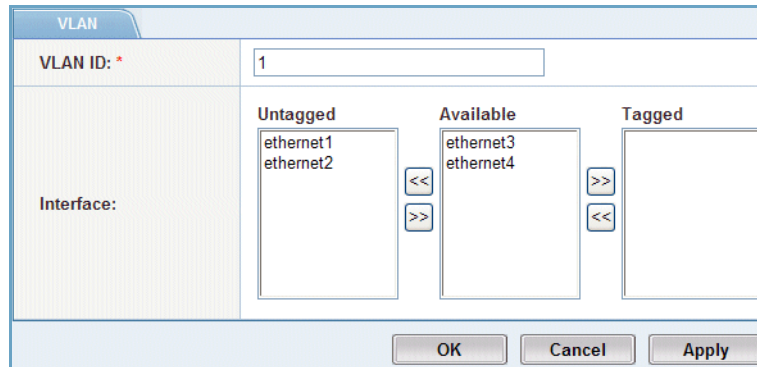

Configure the IP interface:

1. Select Configure > Network > Interface.
2. In the Interface column, click on ve1. (This is the virtual Ethernet interface created by the EX device when you create VLAN 1.) The Interface tab is displayed.
3. Click IP Address to display the tab. (See [Figure 8](#).)
4. In the IP Address field, enter 192.168.30.199.
5. In the Mask field, enter 255.255.255.0.
6. Click Add. The address appears in the list as the primary IP address on ve1.
7. Click OK.

FIGURE 8 *Transparent Mode – IP Address Tab*

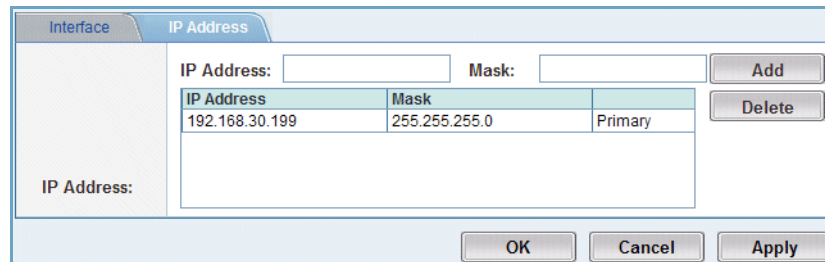


IP Address	Mask	
192.168.30.199	255.255.255.0	Primary

Working in Gateway mode

In gateway mode, the EX device serves as the default gateway. This might require an IP address change for the company's existing gateway.


Here is an example. In the existing company topology, the admin points the default gateway to 192.168.30.1.

FIGURE 9 *Existing topology – default gateway 192.168.30.1*

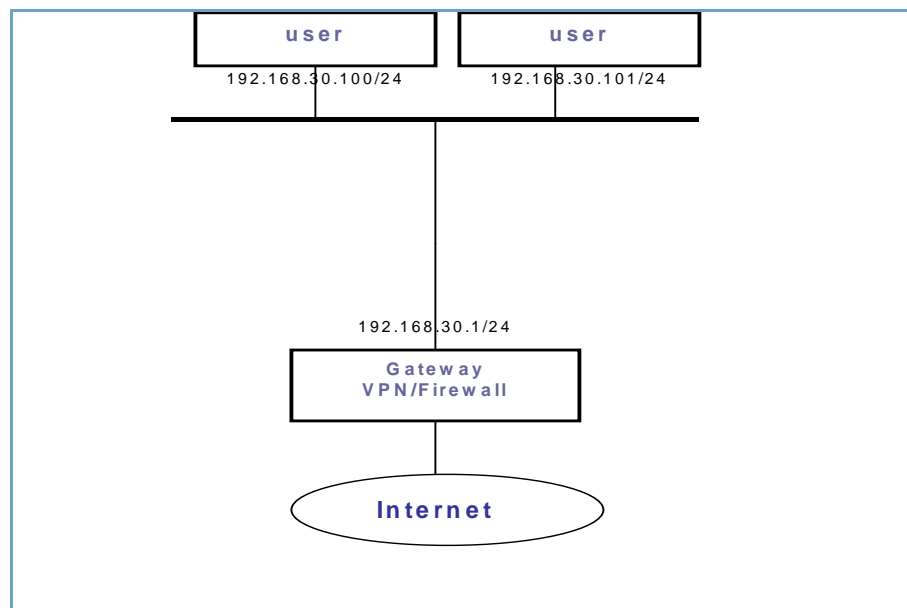

After the EX device is added to the network, the existing network configuration is changed as follows.

FIGURE 10 New topology – after adding EX device as gateway

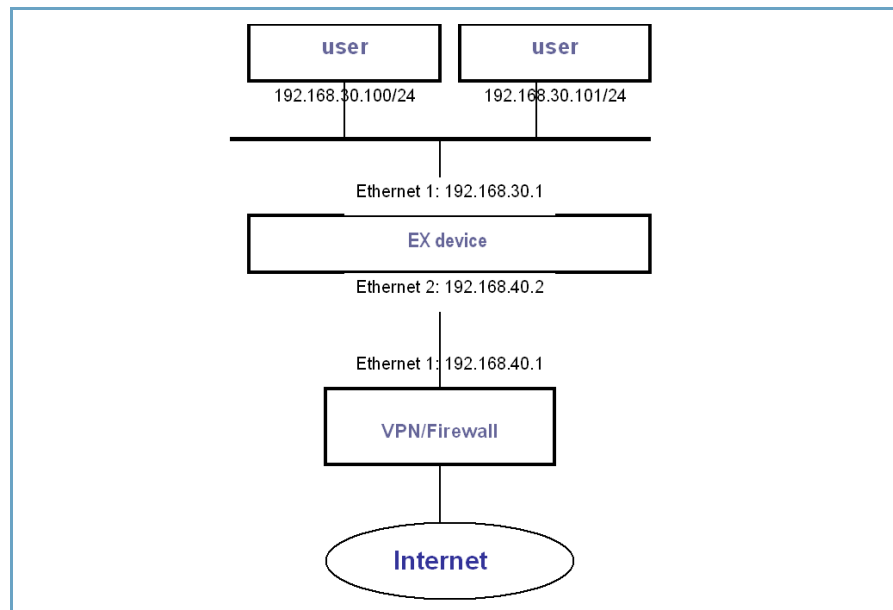

Note: Ethernet ports 1 and 2 need to have IP addresses assigned. The IP address of the original gateway is changed from 192.168.30.1 to 192.168.40.1. IP address 192.168.30.1 is now assigned to port 1 on the EX device. Also on the EX device, the default gateway is set to 192.168.40.1.

Configure the EX device using the CLI

Configure Ethernet port 1:

```

EX(config)#interface ethernet 1
EX(config-if:ethernet1)#ip addr 192.168.30.1/24
EX(config-if:ethernet1)#exit
  
```

Configure Ethernet port 2:

```

EX(config)#interface ethernet 2
EX(config-if:ethernet2)#ip addr 192.168.40.2/24
EX(config-if:ethernet2)#external
EX(config-if:ethernet2)#exit
  
```

Configure the default route:

```

EX(config)#ip route 0.0.0.0 /0 192.168.40.1
  
```


Configure the EX device using the Web GUI

Note: You can *not* use the GUI to configure IP addresses or any other settings until you use the CLI to add at least one IP address to the device. Your Web browser needs the IP address in order to reach the device.

Configure Ethernet port 1:

1. Select Configure > Network > Interface.
2. In the Interface column, click on ethernet1. The Interface tab is displayed.
3. Click IP Address to display the IP Address tab. (See [Figure 11](#).)
4. In the IP Address field, enter 192.168.30.1.
5. In the Mask field, enter 255.255.255.0.
6. Click Add. The address appears in the list as the primary IP address on the interface.
7. Click OK.

FIGURE 11 Gateway Mode – IP Address Tab for ethernet1

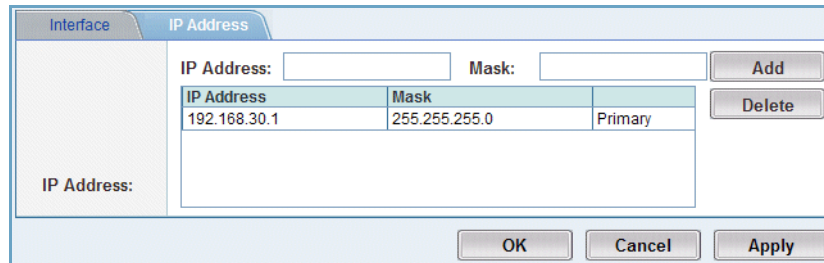

IP Address	Mask	
192.168.30.1	255.255.255.0	Primary

Configure Ethernet port 2:

1. Select Configure > Network > Interface.
2. In the Interface column, click on ethernet2. The Interface tab is displayed. (See [Figure 12](#).)
3. Change the interface location by selecting External.
4. Click IP Address to display the IP Address tab. (See [Figure 13](#).)
5. In the IP Address field, enter 192.168.40.2.
6. In the Mask field, enter 255.255.255.0.
7. Click Add. The address appears in the list as the primary IP address on the interface.
8. Click OK.

FIGURE 12 Gateway Mode – Interface Tab for ethernet2

Interface		IP Address	
Port Number: *	2		
Type:	ethernet		
Shape Interface:	<input type="text"/> Kbps(1-8000000)		
Status:	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled		
Internal/External:	<input type="radio"/> Internal <input checked="" type="radio"/> External		
MTU:	<input type="text" value="1500"/> (100 - 1500)		
MAC Address:	001F.A010.01B4		
Speed:	<input checked="" type="radio"/> Auto <input type="radio"/> Manual <input type="text" value="10Mb/s, Full-Duplex"/>		
Access:	<input checked="" type="checkbox"/> SSH <input type="checkbox"/> Telnet <input checked="" type="checkbox"/> HTTP <input type="checkbox"/> SNMP <input checked="" type="checkbox"/> Ping <input type="checkbox"/> Trust Host		
IP NAT Pool:	<input type="text"/> ▼		
<input type="button" value="OK"/> <input type="button" value="Cancel"/> <input type="button" value="Apply"/>			


FIGURE 13 Gateway Mode – IP Address Tab for ethernet2

Interface		IP Address								
IP Address:	IP Address:	<input type="text"/>	Mask: <input type="text"/>							
			<input type="button" value="Add"/>							
	<table border="1"> <thead> <tr> <th>IP Address</th> <th>Mask</th> <th></th> </tr> </thead> <tbody> <tr> <td>192.168.40.2</td> <td>255.255.255.0</td> <td>Primary</td> </tr> <tr> <td><input type="text"/></td> <td><input type="text"/></td> <td><input type="text"/></td> </tr> </tbody> </table>	IP Address	Mask		192.168.40.2	255.255.255.0	Primary	<input type="text"/>	<input type="text"/>	<input type="text"/>
IP Address	Mask									
192.168.40.2	255.255.255.0	Primary								
<input type="text"/>	<input type="text"/>	<input type="text"/>								
<input type="button" value="OK"/> <input type="button" value="Cancel"/> <input type="button" value="Apply"/>										

Configure the default route:

1. Select Config > Network > Routing.
2. On the menu bar, select Static, if not already selected.
3. Click New. The Static Routing tab is displayed. (See [Figure 14](#).)
4. In the IP Address Prefix and Netmask fields, enter “0.0.0.0” in each field. (The address and mask 0.0.0.0 0.0.0.0 indicates a default route.)
5. In the Gateway field, enter 192.168.40.1.
6. It is not necessary to change the Interface, ve or Distance fields.
7. Click OK. The new static route appears in the list of static routes.

FIGURE 14 Gateway Mode – Static Route Tab

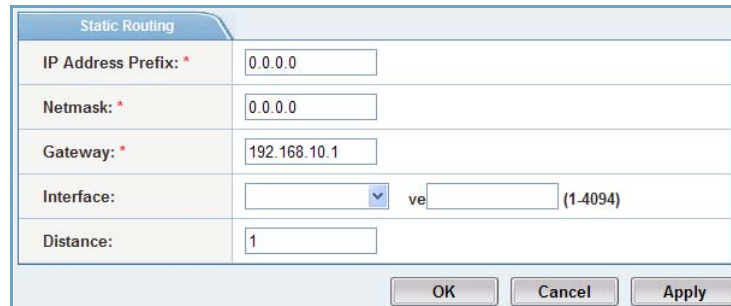

Static Routing	
IP Address Prefix: *	0.0.0.0
Netmask: *	0.0.0.0
Gateway: *	192.168.10.1
Interface:	[Dropdown] ve [Dropdown] (1.4094)
Distance:	1
<input type="button" value="OK"/> <input type="button" value="Cancel"/> <input type="button" value="Apply"/>	

More Information

To configure EX features, see the following documents, located on the documentation CD:

- *EX Series Graphical User Interface User Manual*
- *EX Series Command Line Interface User Manual*
- *EX Series aFlex Scripting Language Reference*

Customer Support

A10 Networks, Inc.

2309 Bering Dr.
San Jose, CA 95131-1125
USA

www.a10networks.com

Tel: +1-408-325-8668 (main)

Tel: +1-408-325-8676 (support)

Fax: +1-408-325-8666

Email: support@a10networks.com

Do you have feedback or comments about this document?

Email: docs@a10networks.com

