

# Airspeed Indicator on a 3.5-inch LCD screen and ESP32 S3 Microcontroller (Implemented as a Mobiflight Community Device)



## 1. Introduction:

This is an Airspeed Indicator (ASI) for use with Flight Simulation displayed on a 3.5-inch LCD screen implemented as a Mobiflight community device for easy integration with flight simulators such as MSFS 2020 and X Plane. It uses an ESP32 S3 N16R8 microcontroller to drive the graphics and the firmware:

The motivations for implementing this device:

- Low cost and easy to build while providing an awesome flight simulator experience
- Minimal mechanical components (low noise)
- Minimal components and skills required (just wiring and uploading of firmware, and maybe 3D printing design if you want to design your own case/panel).
- Can be placed anywhere in the panel without the constraints of a large monitor
- Most of all, to have fun, and... Mobiflight rocks!!


For questions, please join the [Mobiflight Discord](#) server and go to the “custom-devices” channel.

Most important of all, have fun, and.... Mobiflight rocks!!!

## 2. Hardware:

- **ESP32 S3 N16R8 variant**

Note: Other variants have not been tested and may not work. Please get this specific variant

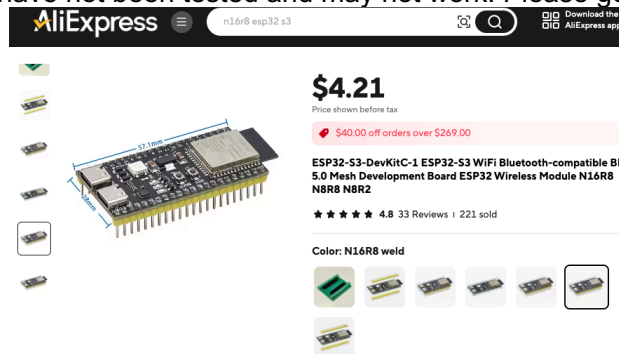

For example, you can order the ESP32 S3 N16R8 variant from the following:

- <https://tinyurl.com/at2ubb9a>
- <https://tinyurl.com/46rwnp9p>


- **3.5-inch LCD screen with the ST7796 or ST7796S driver**

Note: Other LCD screens with a different driver will not work!

For example, you can order the LCD screens from the following:

- <https://tinyurl.com/3z6y7kcu>
- <https://tinyurl.com/3aac2f63>

Currently, this device uses the serial SPI interface, but it is highly recommended to get a 3.5-inch LCD screen that also has a parallel interface option, as this might be implemented in the future. See an example of LCD screen with the parallel interface (encircled in red) below:

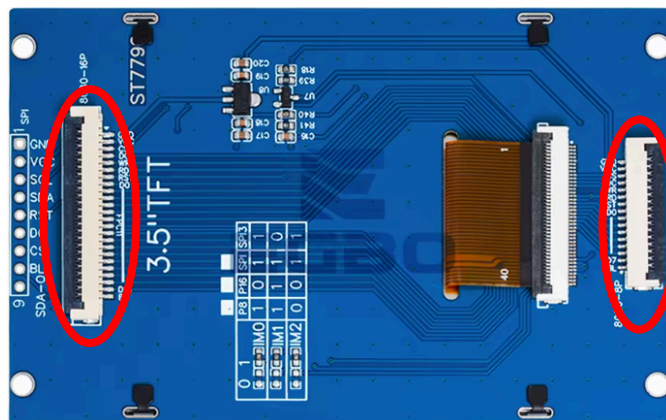

- **Other hardware**

- EC11 Rotary Encoder
- Wires, USB connectors, etc.

- **ESP32 S3 and LCD Screen (ST7796/ST7796S) PIN connections**

Connect the 3.5-inch LCD display pins to the corresponding ESP32 S3 GPIO pins according to the table below:


ESP32 S3 GPIO Pin	3.5-in LCD (ST7796/ST7796S) Pin
3V3	VCC
GND	GND
7	CS
6	RESET
15	DC/RS
17	SDI(MOSI)
18	SCK
13	LED

### 3. Software:

- **Mobiflight**
  - <https://www.mobiflight.com/en/index.html>
- **Mobiflight Airspeed Module custom firmware**
  - See the instructions below for downloading and installing the custom firmware


### 4. Downloading the Mobiflight Airspeed Indicator custom firmware:

- Download the Mobiflight **Airspeed Indicator** custom firmware from the link below:  
[https://github.com/savesabanal01/Mobiflight-Airspeed\\_Indicator-ESP32-S3/tree/Airspeed\\_Indicator](https://github.com/savesabanal01/Mobiflight-Airspeed_Indicator-ESP32-S3/tree/Airspeed_Indicator)  
 Go to the folder “firmware” and download [Airspeed Indicator 2.5.2.zip](#)
- Open you Windows Explorer, using Win+E
- In the file path window, paste %LocalAppData%\MobiFlight\MobiFlight Connector\Community
- Extract the [Airspeed Indicator 2.5.2.zip](#) to this folder. The file structure should look like the one below (make sure that the “Airspeed\_Indicator” folder is directly under “Community”):

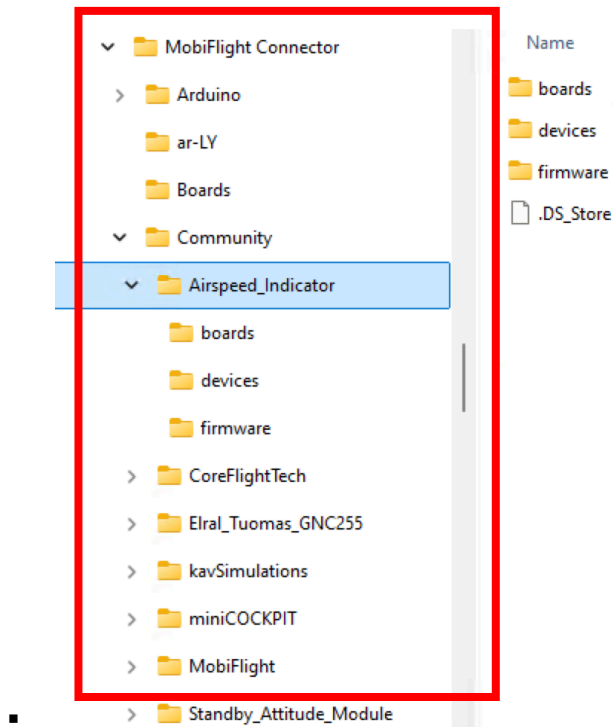


## 5. Flashing the Mobiflight AirspeedIndicator custom firmware to the ESP32 S3:

- *Important Note! Please make sure that Mobiflight is shut down.*
- The easy (and slow) method:  
Connect the ESP32 S3 to your PC using the USB port in (highlighted in red) in the picture below:

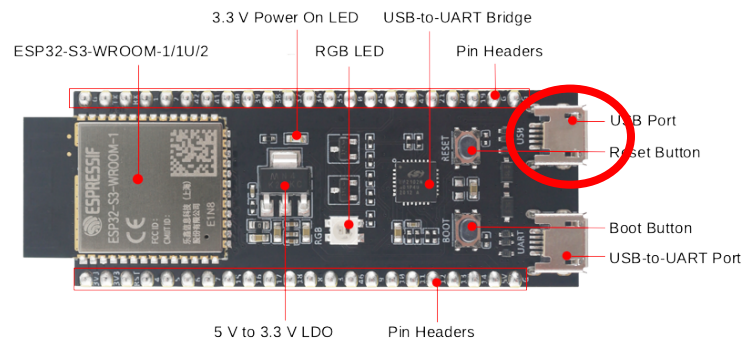


- Open the following URL: [https://adafruit.github.io/Adafruit\\_WebSerial\\_ESPTool/](https://adafruit.github.io/Adafruit_WebSerial_ESPTool/)
- When the webpage is opened, click on the “Connect” button on the upper right-hand side. In the pop-up, check that the correct port (e.g., COM5) is chosen.

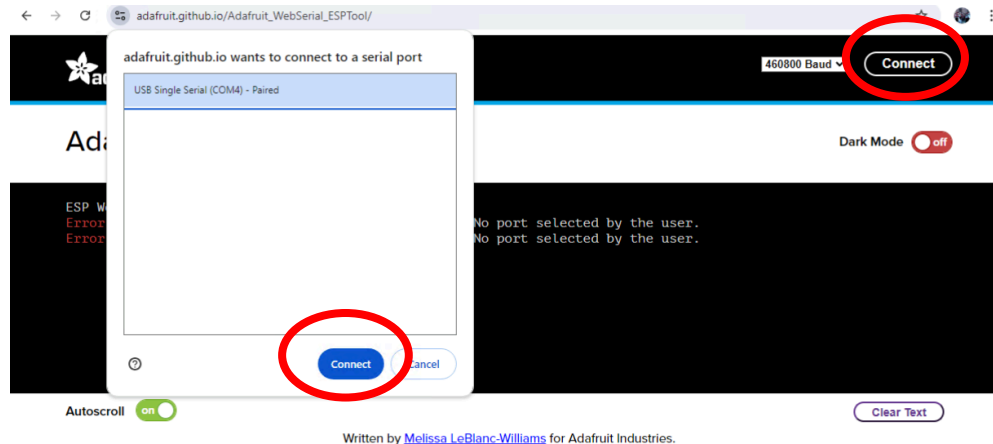

- Click on the correct port and click the “Connect” button in the pop-up
- On the next page, click the first “Choose a file...” button



- When Windows Explorer opens, select the “Airspeed\_Indicator\_esp32s3\_2\_5\_2\_merged.bin” file, which is in the “Airspeed Indicator” -> “firmware” folder that you extracted previously.  
**Hint:** It is under: C:\Users\<username>\AppData\Local\MobiFlight\MobiFlight Connector\Community\Airspeed\_Indicator\firmware
- Click on “Program” and wait for the firmware flashing to complete

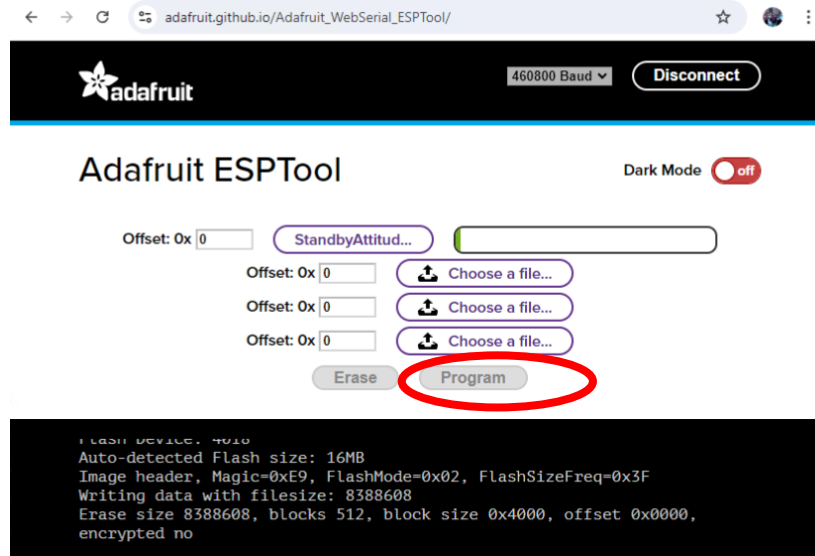

- **For advanced users**, the faster method is to use the esptool.py tool. You need to install Python and the esptool.py tool. Please see this link for details:

<https://github.com/espressif/esptool>


The syntax to use the esptool.py to flash the firmware is:

```
python -m esptool --chip esp32s3 --port=<port No> --baud 460800 --before
default_reset --after hard_reset write_flash -z --flash_mode dio --flash_freq 80m --flash_size
16MB 0x00 <direcoty where firmware is
stored>\Airspeed_Indicator_esp32s3_2_5_2_merged.bin
```

E.g., if the “Airspeed\_Indicator\_esp32s3\_2\_5\_2\_merged.bin” file is in your current folder:


```
python -m esptool --chip esp32s3 --port=COM5 --baud 460800 --before default_reset --after
hard_reset write_flash -z --flash_mode dio --flash_freq 80m --flash_size 16MB
0x00 .\Airspeed_Indicator_esp32s3_2_5_2_merged.bin
```

- **Important!** Once the firmware flashing is completed, reconnect the ESP32 S3 board to your PC using the USB-to-UART port (encircled in red below) and restart Mobiflight.

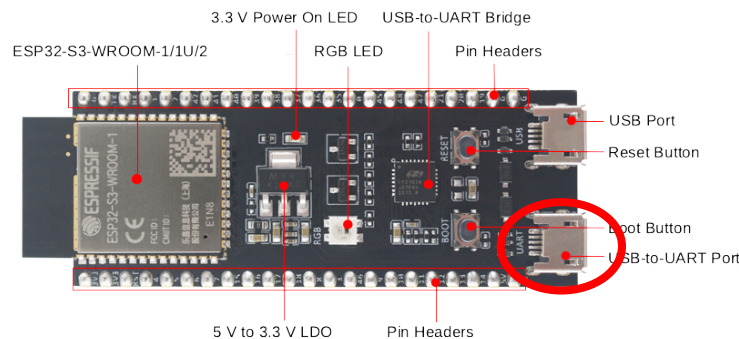


## 6. Uploading the Mobiflight profiles (TO DO)


- Download the Mobiflight profiles and save them to your local PC. The profiles can be downloaded from: [https://github.com/savesabanal01/Mobiflight-Airspeed\\_Indicator-ESP32-S3/tree/Airspeed\\_Indicator/profiles](https://github.com/savesabanal01/Mobiflight-Airspeed_Indicator-ESP32-S3/tree/Airspeed_Indicator/profiles)
- The files are [Airspeed Indicator ESP32-S3 Xplane.mcc](#) and [Airspeed Indicator ESP32-S3.mfmc](#)
- Start Mobiflight, open “Mobiflight Modules”, click “Open” and upload the [Airspeed Indicator ESP32-S3.mfmc](#) file to the “Airspeed Indicator ESP32-S3” device (see below):

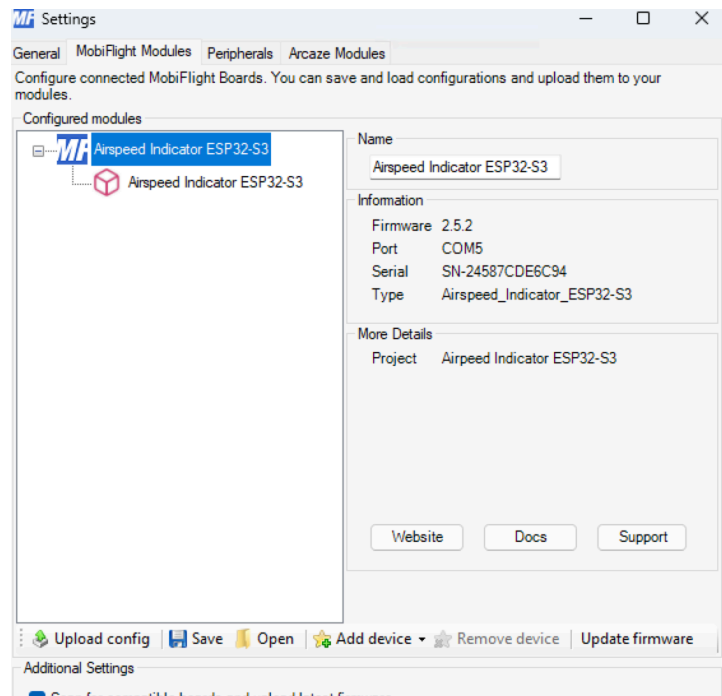


- Now, click “Upload config” and wait for it to finish uploading. You will get an “Upload finished with error” pop-up, but this is fine. Just hit “OK”.

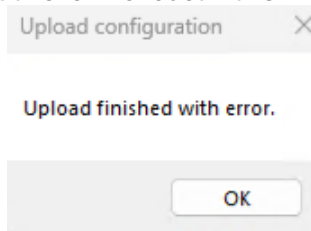

- Now close the Mobiflight Settings pop-up and you will get the error pop-out below, but this is also ok. Just hit “OK”.

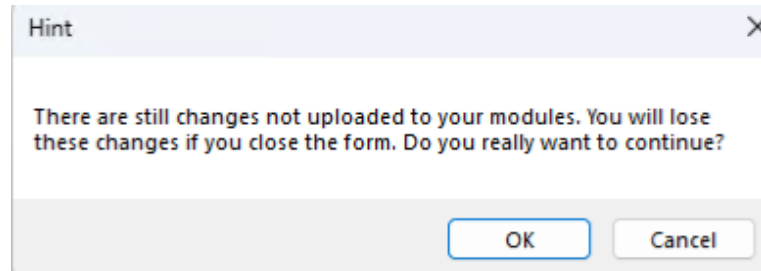

- From the Mobiflight main screen, go to Files -> Open, and open the downloaded [Airspeed Indicator ESP32-S3 Xplane.mcc](#). You should get the settings for X Plane as shown below:

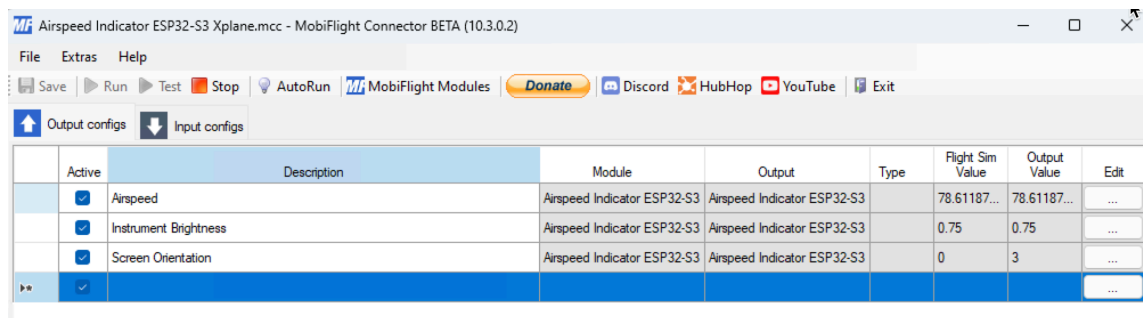


**Important Note:** I only have X Plane, so I have not prepared configurations for MSFS2020, but the X Plane datarefs can be replaced by MSFS 2020 variables that correspond to them. Please try it!

- Now, start your flight simulator, start Mobiflight and have fun!!!

## 7. Important Notes and Future Directions:

- You can use the other open pins in the ESP32 S3 for buttons, encoders, etc. Just make sure not to use pins 19, 20, 35, 36, and 37 (they have some limitations).
- To change the LCD screen orientation, edit the "Screen Orientation" output config got to Modify -> Transformation, and change the value from "3" to "1". This will flip the screen (see below)

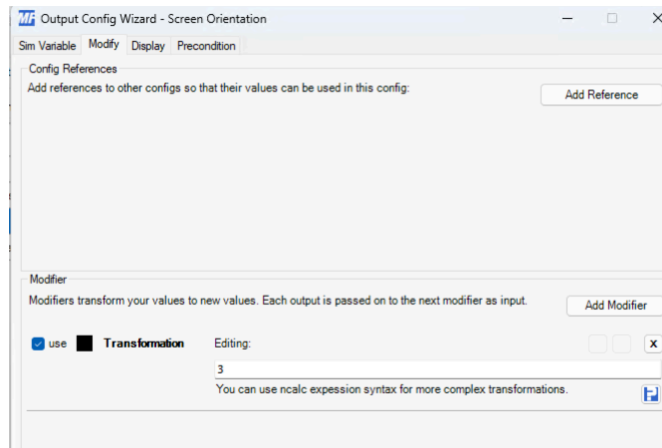



- These are the following improvements I plan in the future:
  - 8-bit parallel interfacing between the ESP32 S3 and the LCD screen