

APPLICATION NOTE: SENDING INVERTER LOGS ON FTP SERVER VIA ETHERNET

SENECA s.r.l.

Via Austria 26, PADOVA – ITALY

Tel. +39.049.8705355 – 8705359 Fax. +39.049.8706287

Website: www.seneca.it

Customer service: supporto@seneca.it (IT), support@seneca.it (Other)

Commercial information: commerciale@seneca.it (IT), sales@seneca.it (Other)



APPLICATION NOTE

Date	Version	Changes
15/12/2016	1.00	First issue

1. PRELIMINARY INFORMATION ON SEAL	5
2. PURPOSE OF THE GUIDE	5
2.1. CONFIGURING THE ETHERNET PORT	5
2.2. CLOCK CONFIGURATION.....	6
2.3. FILE SEND CONFIGURATION ON FTP SERVER	7
2.4. CONFIGURING THE EXTENDED VARIABLES (ON RTU MODBUS) OF THE INVERTER.....	8
2.5. LOGGER SETUP.....	12
3. COMPILING AND SENDING THE PROJECT TO THE RTU	14

ATTENTION!

Contact your telephone provider for information on GSM and GPRS service costs. It is best to quantify log and SMS costs before setting up and installing Z-GPRS3, Z-UMTS, Z-LOGGER3.

The use of Z-GPRS3 and Z-UMTS is in data roaming mode (for example, abroad with an Italian SIM card) may generate unexpected costs. Contact your telephone provider for further information.

IN NO CASE MAY SENECA OR ITS SUPPLIERS BE HELD LIABLE FOR ANY LOSS OF DATA, INCOME OR PROFIT DUE TO INDIRECT, CONSEQUENTIAL OR INCIDENTAL CAUSES (INCLUDING NEGLIGENCE) DERIVING FROM OR CONNECTED WITH THE USE OR INABILITY TO USE Z-GPRS3, Z-UMTS AND Z-LOGGER3, EVEN IF SENECA WAS INFORMED ABOUT THESE POSSIBLE DAMAGES.

SENECA, ITS SUBSIDIARIES OR AFFILIATES OR GROUP PARTNERS OR DISTRIBUTORS AND SENECA DEALERS DO NOT GUARANTEE THAT THE FUNCTIONS FAITHFULLY MEET THE EXPECTATIONS AND THAT Z-GPRS3, Z-UMTS AND Z-LOGGER3, ITS FIRMWARE AND SOFTWARE ARE FREE FROM ERRORS OR FUNCTION UNINTERRUPTEDLY.

SENECA HAS TAKEN THE UTMOST CARE AND CAUTION IN DRAFTING THIS MANUAL. HOWEVER, IT MAY CONTAIN ERRORS OR OMISSIONS. SENECA SRL RESERVES THE RIGHT TO MODIFY AND/OR VARY PARTS OF THIS MANUAL TO CORRECT ERRORS OR TO ADJUST TO PRODUCT FEATURE CHANGES WITHOUT ANY PRIOR NOTICE.

ATTENTION!

-Contact your telephone service provider for GSM and GPRS service costs especially when using Z-GPRS3 or Z-UMTS with a sim card issued by a country other than the one in which it is used (international roaming).

-It is best to estimate telephone costs before setting up Z-GPRS3 and Z-UMTS.

-The cost of each SMS is set by the telephone service provider.

-GPRS send/receive costs can be tied to Kbytes sent/received, a monthly ceiling included in a package or GPRS connection time. Contact your telephone service provider for further information.

-Check the data quantity sent via GPRS and SMS before using Z-GPRS3 and Z-UMTS.

Please remember that mobile phone service providers consider the entire communication that permits file transmission as data traffic (and therefore data transmission overhead, the number of connection attempts, etc. must also be included in the count) and not just the dimensions of each 2G/3G transaction.

1. PRELIMINARY INFORMATION ON SEAL

Further information about SEAL can be found in the SEAL Quick Guide and the SEAL online help; further information on Z-GPRS3, Z-UMTS and Z-LOGGER3 can be found in the user manual.

The sample setting refers to Z-GPRS3 but it is the same for the other RTUs.

2. PURPOSE OF THE GUIDE


The purpose of this guide is to perform a simple setting on SEAL so that the RTU acquires the values of the string seams of an inverter every minute.

The values acquired are sent on a FTP server via ethernet as cvs text files so that they can be consulted with an Excel™-type program or imported with an external tool.

The inverter is connected to the RS485 terminal of the RTU and communicates with the RTU modbus protocol.


2.1. CONFIGURING THE ETHERNET PORT

Now configure the gateway common to the ethernet peripheral:

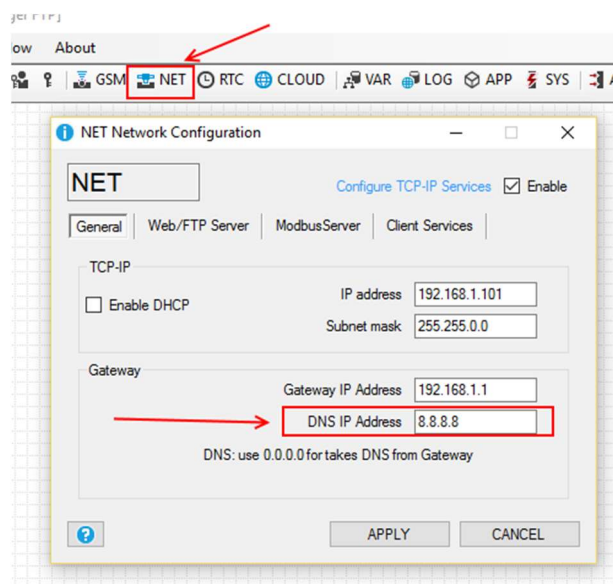

Set the ethernet port and DNS as per the figure.


Configure the client services:

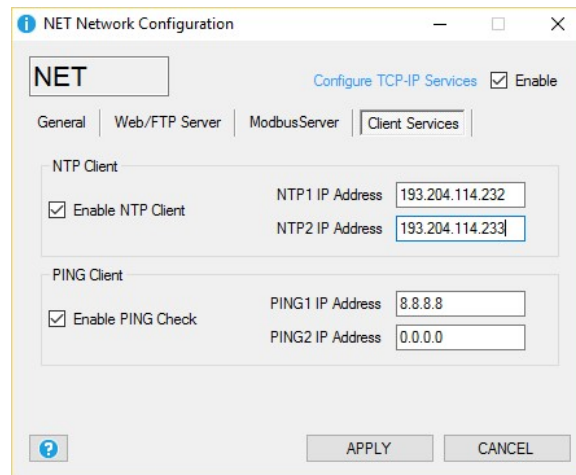


First of all, set the NTP servers (Network Time Protocol) to maintain date/time synchronization.

Set also a PING check that is an IP address used by the RTU to verify that the internet connection is active, for instance set the same server as the previously set DNS (8.8.8.8).


2.2. CLOCK CONFIGURATION

Set the configuration of the clock and calendar with icon .

First of all, configure the time zone and set the automatic move to summer time (Daylight Saving Time):

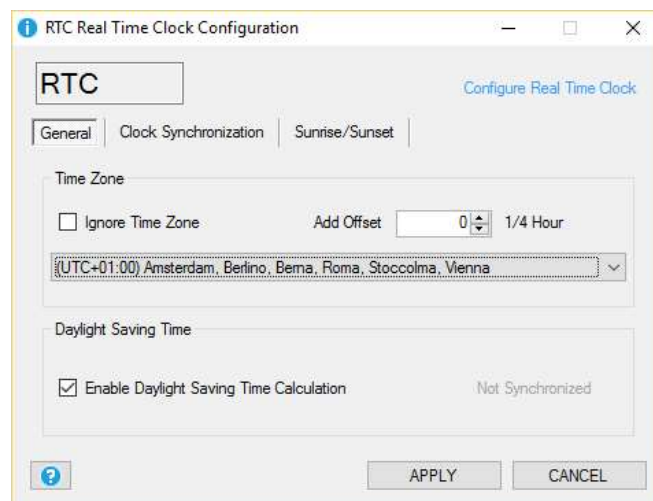

Set date-time synchronization to once a day (Daily):

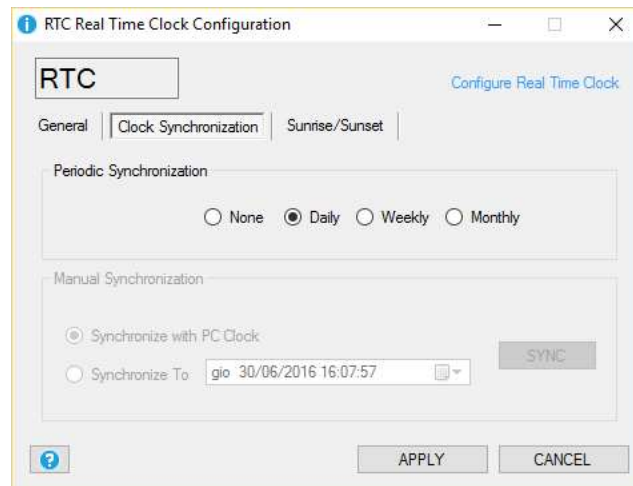


Now select how to send the log files: via EMAIL or via FTP, you cannot select both options.

2.3. FILE SEND CONFIGURATION ON FTP SERVER


Click on icon  CLOUD.

To send the log files via FTP, it is first necessary to define the name of the RTU (it will be the first part of the sent csv file) and tick sending the files to a FTP server:

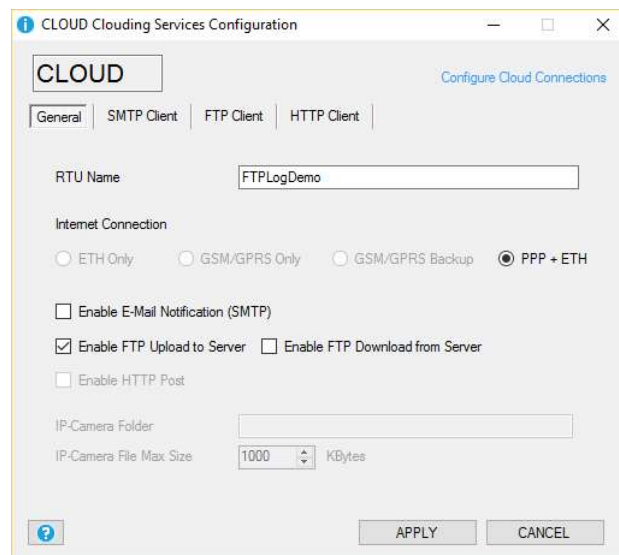

the files will be recognizable in the FTP server because they will be of the
FTPLogDemo_20160704123345.csv type.

Now set up the connection account to the FTP server, it is better to activate the passive mode:

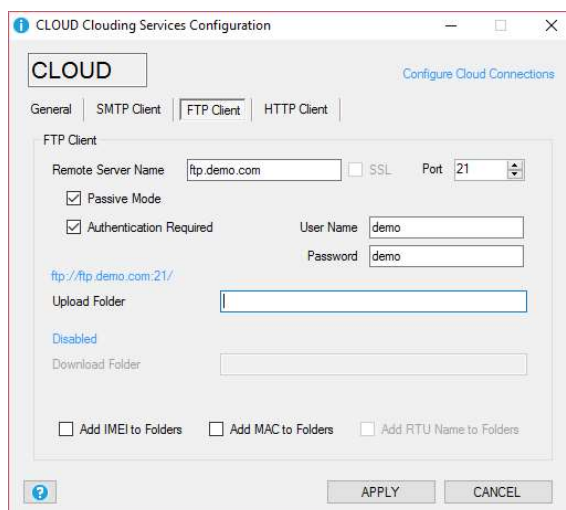

In the example, a FTP server "ftp.demo.com" is set up together with the account with the USER and PASSWORD both set up as "demo".

Set up the address and the user/ password for your system.


"Upload folder" must be used if there are multiple folders in the server, leaving it blank the RTU will write in the main folder.


ATTENTION!

THE FOLDER THE RTU WILL WRITE THE FILES IN MUST ALREADY EXIST!

To install a FTP server on a PC, refer to the Filezilla Server guide available on the Seneca website.

2.4. CONFIGURING THE EXTENDED VARIABLES (ON RTU MODBUS) OF THE INVERTER

Now it is possible to define which variables to add to those already available on the RTU, to do this, click icon  :

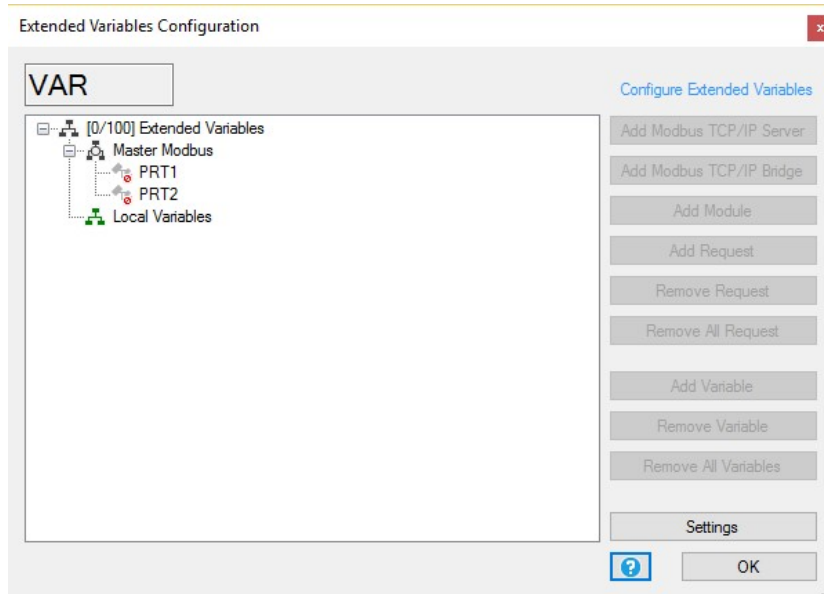


It is possible to extend the variables on board the RTUs using a serial connection with the Modbus RTU protocol or via ethernet with the Modbus TCP-IP protocol (up to a maximum of 100 extended variables).

Further information on Modbus protocol is available from:


<http://modbus.org/specs.php>

As an example, configure the reading of 3 modbus variables of an inverter connected to RS485 port number 1:


Add a new slave module to the RS485 terminal port (PRT2):

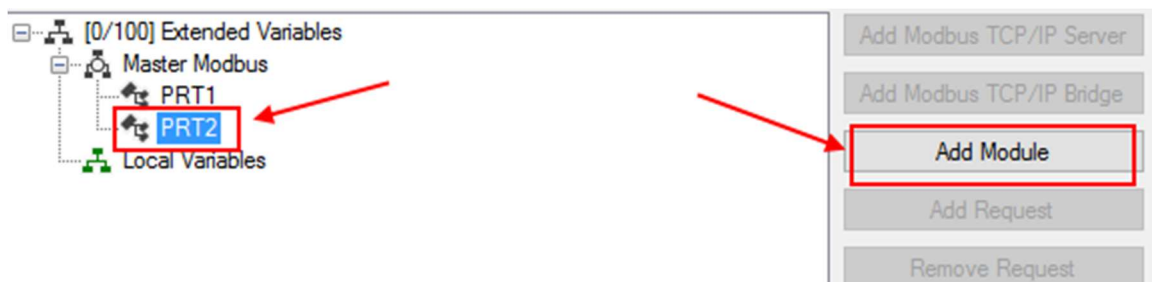

Click on Add Module:

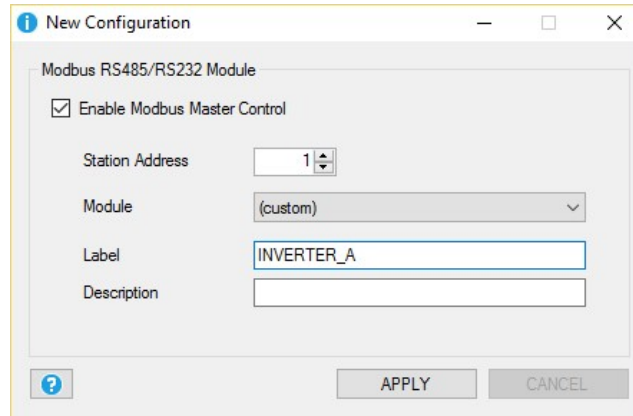

Enter station address 1 and click on APPLY:

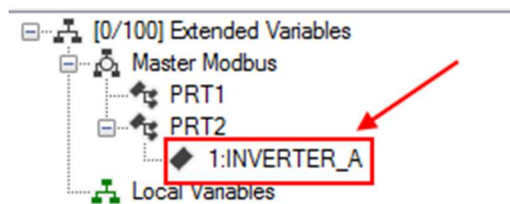

Now the inverter is connected to the PRT2 port.

Now enter the addresses of the variables to log, from the inverter documentation you can get the addresses of the 3 string streams:


ADR (DEC)	Description/Number code	CNT (WORD)	Type	Format	Access
30057	Serial number [Serial Number]	2	U32	RAW	RO
	Operating state [Mode]:				
	309 = Operation				
30241	455 = Warning	2	U32	ENUM	RO
	1392 = Error				
	1470 = Disturbance				
30245	SMU ID [SSMId]	2	U32	FIX0	RO
31793	String current of string 1 of a SMU/SMID (A) [CurCh1]	2	S32	FIX3	RO
31795	String current of string 2 of a SMU/SMID (A) [CurCh2]	2	S32	FIX3	RO
31797	String current of string 3 of a SMU/SMID (A) [CurCh3]	2	S32	FIX3	RO

Unfortunately, there is no unique numbering in the modbus, so it is necessary to understand if the modbus 30001 register is 0-offset or 1-offset.

Reading the documentation, you can see that the first available register is 30001 and therefore 0-offset:

ADR (DEC)	Description/Number code	CNT (WORD)	Type	Format	Access
30001	Version number of the SMA Modbus profile	2	U32	RAW	RO

Enter the addresses you are interested in by selecting the inverter and clicking on Add Request:

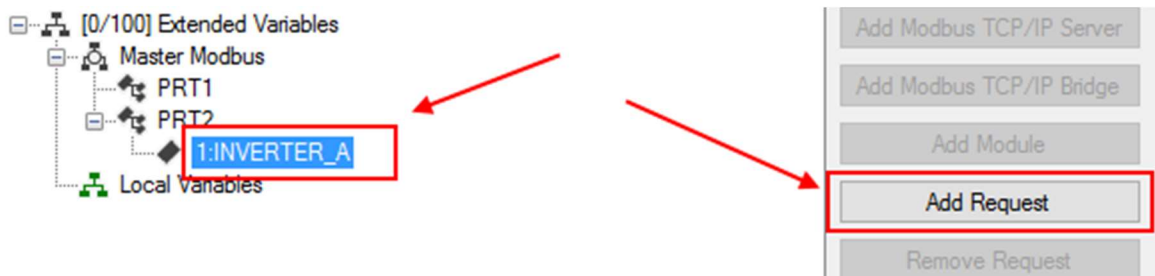

At this point, enter the first variable filling the details according to the inverter documentation, address 31793 (register offset 1792), 2 consecutive modbus registers (32 bit) and Signed 32 data type (integer with 32-bit sign):


Please note how it has been flagged that the most significant part of the register is in the first register:

REGISTER 31793 MOST SIGNIFICANT PART


REGISTER 31794 LEAST SIGNIFICANT PART

The name of the variable (tag) that it will have in the datalogger is "Current String1"

Confirm and you have added the new register:

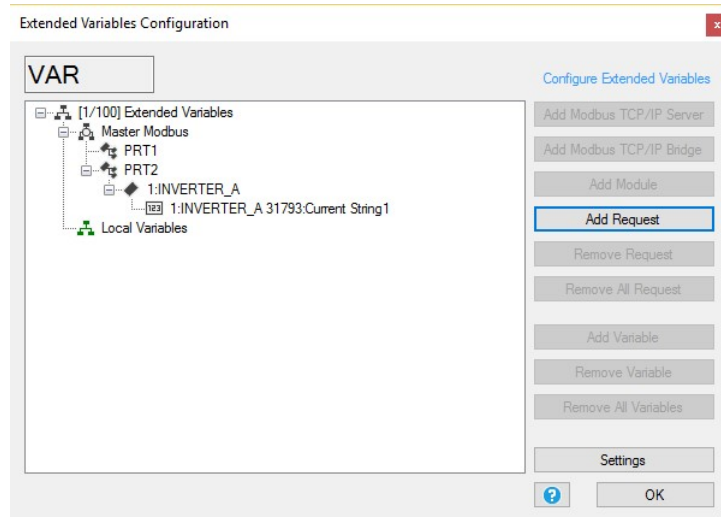

Add the other 2 variables the same way:

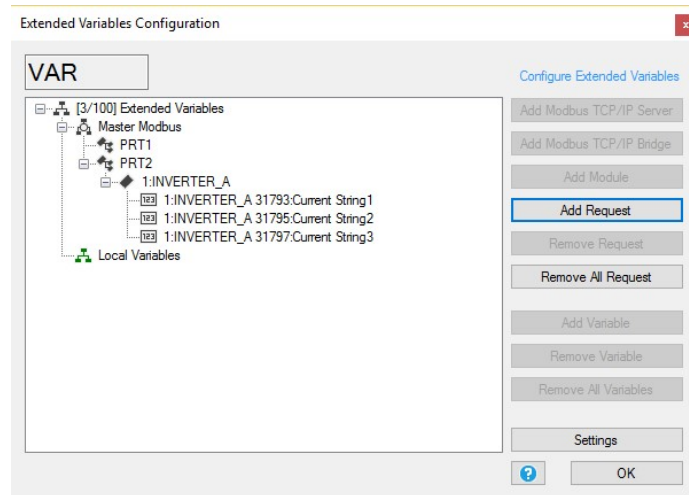


Extended variables are finished.

2.5. **LOGGER SETUP**

Now define the logger parameters clicking on icon  LOG :


Only data are to be logged, so the event log DOES NOT need to be configured:

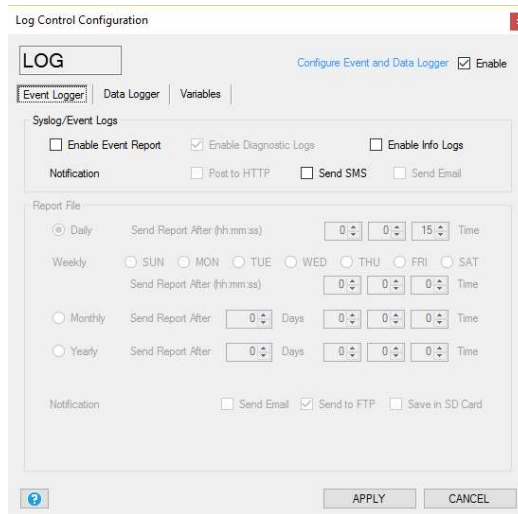

The screenshot shows the 'Log Control Configuration' window with the 'LOG' tab selected. The 'Event Logger' sub-tab is active. Under 'Syslog/Event Logs', 'Enable Diagnostic Logs' is checked, while 'Enable Event Report' and 'Enable Info Logs' are unchecked. In the 'Notification' section, 'Post to HTTP', 'Send SMS', and 'Send Email' are all unchecked. The 'Report File' section has 'Daily' selected, with 'Send Report After' set to 0 hours, 0 minutes, and 15 seconds. The 'Weekly' and 'Monthly' options are also present but not selected. At the bottom, 'Send Email' is unchecked, 'Send to FTP' is checked, and 'Save in SD Card' is unchecked. 'APPLY' and 'CANCEL' buttons are at the bottom right.

Otherwise, configure the Data Logger.

If you want to log the time registers, do not select the log on trigger:

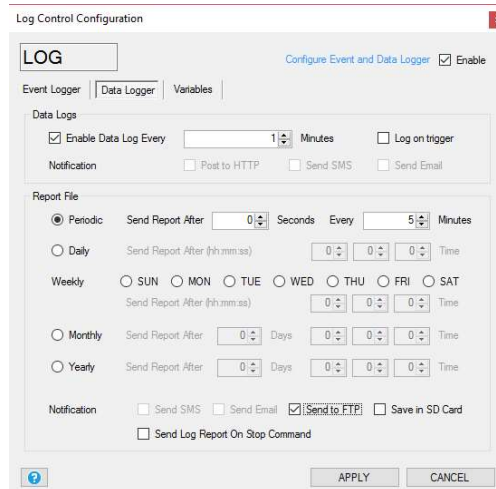

The screenshot shows the 'Log Control Configuration' window with the 'LOG' tab selected. The 'Data Logger' sub-tab is active. Under 'Data Logs', 'Enable Data Log Every' is checked and set to 1 minute, while 'Log on trigger' is unchecked. In the 'Notification' section, 'Post to HTTP', 'Send SMS', and 'Send Email' are all unchecked. The 'Report File' section has 'Periodic' selected, with 'Send Report After' set to 0 seconds and 'Every' set to 5 minutes. The 'Daily', 'Weekly', 'Monthly', and 'Yearly' options are also present but not selected. At the bottom, 'Send SMS', 'Send Email', and 'Save in SD Card' are unchecked, while 'Send to FTP' is checked. 'Send Log Report On Stop Command' is also unchecked. 'APPLY' and 'CANCEL' buttons are at the bottom right.

Acquire variables every 1 minute and send the Notification file with the report every 5 minutes.

Tick the flag with sending via FTP.

Now you can define which variables must end up into the datalogger with the "Variables" section:

Initially, no variable is logged, so tick the 3 inverter variables:

Log Control Configuration

LOG Configure Event and Data Logger ☒ Enable

Event Logger | Data Logger | Variables

#	Variable	Type	Log Label	Unit	Log
23	DIN2 TOT	S32	TOT2	Pulses	<input type="checkbox"/>
24	DIN2 CNT	S32	CNT2	Pulses	<input type="checkbox"/>
25	DIN2 WRK	S32	WRK2	Sec...	<input type="checkbox"/>
26	DIN3 DELTA	S32	DELTA3	Pulses	<input type="checkbox"/>
27	DIN3 TOT	S32	TOT3	Pulses	<input type="checkbox"/>
28	DIN3 CNT	S32	CNT3	Pulses	<input type="checkbox"/>
29	DIN3 WRK	S32	WRK3	Sec...	<input type="checkbox"/>
30	DIN4 DELTA	S32	DELTA4	Pulses	<input type="checkbox"/>
31	DIN4 TOT	S32	TOT4	Pulses	<input type="checkbox"/>
32	DIN4 CNT	S32	CNT4	Pulses	<input type="checkbox"/>
33	DIN4 WRK	S32	WRK4	Sec...	<input type="checkbox"/>
34	PRT2 1:INVERTER_A 31793.Current String1	S32	Current ...	A	<input checked="" type="checkbox"/>
35	PRT2 1:INVERTER_A 31795.Current String2	S32	Current ...	A	<input checked="" type="checkbox"/>
36	PRT2 1:INVERTER_A 31797.Current String3	S32	Current ...	A	<input checked="" type="checkbox"/>

☒ Log All ☐ Log None

? APPLY CANCEL

And some variables inside the RTU, external power supply and the status of the digital inputs.

Configuration is complete.

With this setup, the RTU will send a log file every 5 minutes with the values acquired every 1 minute (a total of 5 lines on the csv file).

3. COMPILING AND SENDING THE PROJECT TO THE RTU

For how to compile and send the project to the RTU, refer to SEAL quick guide.