

## SenNet IoT Easy Meter

### Energy Meter 3PH CT/Rogowski & Gateway for remote nodes

#### General description

SenNet IoT Easy Meter is a device that monitors 3PH energy electrical circuits, with two options of current transformer, 0.33Vac or flexible Rogowski. This device has the possibility to create a local RF Network with remote nodes with different features: Pulse Counter / Temperature-Humidity / CO<sub>2</sub> / Particule Matter etc., and send all these information in one Sigfox message.

The configuration of all these features is possible by two ways:


- Micro-usb connection and console/terminal.
- Trough APPSenNet NFC (IOS or Android).

The end user can select what kind of energy data and remote device wants upload to the cloud, must to select type of message (see in the next section).

#### Power supply

The device uses voltage reference to use like power supply (100-265VAC @ 50HZ), it's important to take care of using Neutral Line Vn and V1. There is an internal fuse to protect the device against surge damages.

|                      |                   |
|----------------------|-------------------|
| Voltage power supply | 100-265VAC @ 50HZ |
| Power                | <1W               |

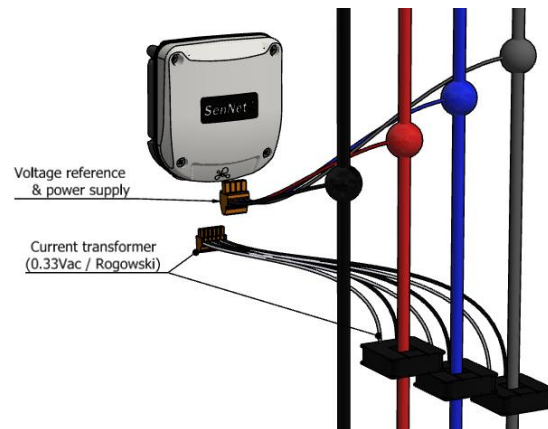

#### Basic steps to install:


1. Set type Current Transformer (50A, 100A, 150A, 400A , 800A, 5000A).
2. Set type of message to use and take note to parch this datas on your prefer platform.
3. Take note ID / PAC to sign the device on Sigfox Cloud.
4. Connect voltage reference (feed internal power supply) and current reference.

#### Extra features:

- Define and install remotes devices that will join to Local Network
- Set an univoque ID at each remote device



#### Sigfox connectivity

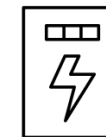

**Power Meter**  
**3 Phase Class 1**  
(CT's 0.33v -Rogowski )



**Local RF Network**  
Remotes Nodes

## Type Message

SenNet IoT Easy Meter is a powerful Energy Meter but the client must be filter and select what kind of data will be upload to the platform. For that reason the devices has been defined by default several types of message what includes the main information from each electricity measurement.

The main interest allways is the total Energy accumulated, if your interest is on other parameter you can contact with our technical departament to ask for it.

| Type message | Information   | Details                                |
|--------------|---|--|
| 1            | <b>Active + Reactive Energy + Remote Node</b><br>-trifasic measure-                                     | Must include some Remote Node          |
| 2            | <b>Active Energy Easy Meter + Active Energy Remote Node</b><br>-trifasic measurement-                   | Must include an Remote Easy Meter Node |
| 3            | <b>Active Energy PH1 + Active Energy PH2 + Active Energy PH3</b><br>-monofasic or trifasic measurement- |  |
| 4            | <b>Active Energy PH1 + Active Energy PH2 + Remote Node Data</b><br>-monofasic or trifasic measurement-  | Must include some Remote Node          |
| 5..15        | <b>To defined -future use-</b>  |  |

A common point in all types of messages is the head (defined with **2 bytes**) that includes important information embeded on the message (type device / type message / errors.. etc). In the next table are defined the mean of these info-fields.

| Info (bytes) |   |   |   |  |   |   |                                   |   |              |   |   |   |  |   |   |
|--------------|---|---|---|--|---|---|-----------------------------------|---|--------------|---|---|---|--|---|---|
| Byte         | Byte 1  |   |   |  |   |   | Byte 2                            |   |              |   |   |   |  |   |   |
|              | <u>Type Master Device</u>   |   |   | <u>Type Message</u>  |   |   | <u>Feedback Error</u>             |   |              | <u>Type Remote Nodes</u>  |   |   | <u>ID Remote Nodes</u>   |   |   |
|              | 01 - Easy Meter<br>02 - PC LongNet<br>03 - TH LongNet<br>04 - CO2 LongNet<br>05 - PM LongNet<br>06 - GW Modbus LN<br>07 - Not defined |   |   | type 0 (info)<br>type 1<br>type 2<br>type 3<br>type 4<br>type 5 (not defined)<br>type 6 (not defined)<br>..<br>type 15 (not defined) |   |   | Error receive downlink<br>message | Overvoltage / SAG /<br>Internal meter error | Wrong reboot | 0x00 – Info Remote<br>0x01 - PC LongNet<br>0x02 - TH LongNet<br>0x03 - CO2 LongNet<br>0x04 - PM LongNet<br>0x05 – GW Modbus LN<br>0x06 – Analog Input<br>0x07 – Not defined |   |   | No Remote = 000<br><br>Remote ID = 010 <sub>h</sub> = 02 <sub>d</sub><br>= 011 <sub>h</sub> = 03 <sub>d</sub><br>= 100 <sub>h</sub> = 04 <sub>d</sub><br>= 101 <sub>h</sub> = 05 <sub>d</sub><br>= 110 <sub>h</sub> = 06 <sub>d</sub><br>= 111 <sub>h</sub> = 07 <sub>d</sub><br><br>(6 remotes nodes) |   |   |
| Bit          | 7   | 6 | 5 | 4  | 3 | 2 |                                   |   |              | 1   | 7 | 6 | 5  | 4 | 3 |
|              | Byte1<br>Bit 7-6-5  |   |   | Byte1<br>Bit 4-3-2-1   |   |   | Byte1<br>Bit 0                    | Byte2<br>Bit 0-1                            |              | Byte2<br>Bit 2-4  |   |   | Byte2<br>Bit 5-7   |   |   |

| Type 1 : Active + Reactive Energy + Remote Node |      |   |                              |   |   |   |                                |   |   |    |                               |    |
|---|------|---|------------------------------|---|---|---|--------------------------------|---|---|----|-------------------------------|----|
| Field   | Info |   | Active Energy<br>PH1+PH2+PH3 |   |   |   | Reactive Energy<br>PH1+PH2+PH3 |   |   |    | Data from Remote node         |    |
| Byte  | 1    | 2 | 3                            | 4 | 5 | 6 | 7                              | 8 | 9 | 10 | 11                            | 12 |
|   |      |   | float 32 bits value          |   |   |   | float 32 bits value            |   |   |    | At depend of Remote node type |    |

| Type 2: Active Energy Easy Meter + Active Energy Remote Node |      |   |                                      |   |   |   |  |   |   |    |                               |    |
|--|------|---|--------------------------------------|---|---|---|--|---|---|----|-------------------------------|----|
| Field  | Info |   | Active Energy Consum.<br>PH1+PH2+PH3 |   |   |   | Active Energy Generation<br>PH1+PH2+PH3<br>Remote Dev. |   |   |    | Data from Remote Node         |    |
|  |      |   | Active Energy                        |   |   |   | Active Energy  |   |   |    |                               |    |
| Byte   | 1    | 2 | 3                                    | 4 | 5 | 6 | 7  | 8 | 9 | 10 | 11                            | 12 |
|  |      |   | float 32 bits value                  |   |   |   | float 32 bits value                                    |   |   |    | At depend of Remote node type |    |

| Type 3: Active Energy PH1 + Active Energy PH2 + Active Energy PH3 |      |   |                               |   |   |                               |   |   |                               |    |    |
|---|------|---|-------------------------------|---|---|-------------------------------|---|---|-------------------------------|----|----|
| Field   | Info |   | Active Energy PH1             |   |   | Active Energy PH2             |   |   | Active Energy PH3             |    |    |
| Byte  | 1    | 2 | 3                             | 4 | 5 | 6                             | 7 | 8 | 9                             | 10 | 11 |
|   |      |   | Max. 16Mwh<br>resolution=1kwh |   |   | Max. 16Mwh<br>resolution=1kwh |   |   | Max. 16Mwh<br>resolution=1kwh |    |    |

| Type 4: Active Energy PH1 + Active Energy PH2 + Remote Node Data |      |   |                      |   |   |   |                      |   |   |    |                               |    |
|--|------|---|----------------------|---|---|---|----------------------|---|---|----|-------------------------------|----|
| Field  | Info |   | Active Energy<br>PH1 |   |   |   | Active Energy<br>PH2 |   |   |    | Data from Remote Node         |    |
| Byte   | 1    | 2 | 3                    | 4 | 5 | 6 | 7                    | 8 | 9 | 10 | 11                            | 12 |
|  |      |   | float 32 bits value  |   |   |   | float 32 bits value  |   |   |    | At depend of Remote node type |    |

#### Remote Node Data:


|                       |  |                             |
|-----------------------|--|-----------------------------|
| Type Remote Node      |  |                             |
| Pulse Counter LongNet | 2 bytes (integer type) Max. value 65535 ,set overflow option on the cloud. |                             |
| TH-LongNet            | 1 byte temperature<br>[-10°C...60°C]                                       | 1 byte humidity<br>[0-100%] |
| CO2 LongNet           | 2 bytes (integer type)   |                             |

#### Downlink Message

It's possible set the device by the cloud without interact with it in local, define this type of downlink message on the sigfox backend or in your platform. That method is optional but it's not necessary.

| Byte  | 1                      | 2 - 5                | 6                               | 7   | 8   |
|-------|------------------------|----------------------|---------------------------------|---|---|
| Field | SenNet Code<br>(1byte) | Set time<br>(4bytes) | Type uplink Message<br>(1 byte) | Debug 1<br>(1 byte)<br>Only for internal use      | Debug 2<br>(1 byte)<br>Only for internal use    |
| Value | 0xAB                   | {Time-Epox}          | 01<br>02<br>03<br>04<br>-       | 00 disable<br>01 version HW/SW<br>02 – future use | 00 disable<br>01 debug meter<br>02 – future use |

An example for sending a message type 1 with 2 remotes devices defined in the local network. The data of each remote device is sent alternatively, with the use of info-field the cloud / platform will be able to patch the data belong to each Remote node.

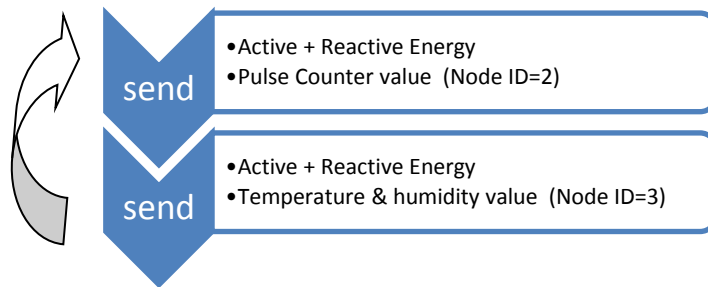

SenNet Easy Meter works as Local Network coordinator and gateway for Remotes Nodes



Easy Meter  
Coordinator ID=1





Pulse Counter  
Node ID=2







Temperature & Humidity  
Node ID=3

Power Meter features


This devices include an advance technology to meter power electricity lines, for that need a current reference and voltage reference. It's possible to use this device like a 3 single phase meter or 1 three-phase meter, it depends on client goal to monitori.
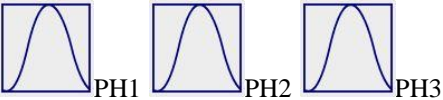
| Type of load to monitorized      |   |
|----------------------------------|---|
| 3 single-phase loads independent |   |
| 1 three-phase load               |  |
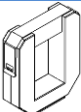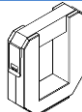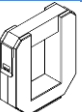
| Led output pulse  | Current Reference   |            |   |            |   |            | Voltage Reference & Power Supply  |            |            |            |
|---|---|------------|---|------------|---|------------|-----------------------------------|------------|------------|------------|
|   | I1+<br>(1)  | I1-<br>(2) | I2+<br>(3)  | I2-<br>(4) | I3+<br>(5)  | I3-<br>(6) | Vn<br>(19)                        | V1<br>(20) | V2<br>(21) | V3<br>(22) |
| Reactive Power<br>Aparent Power<br>Active Power<br>1 pulse/seg = 1kw                          |  |            |  |            |  |            | Power Supply<br>100-265VAC @ 50HZ |            |            |            |
| Type CT current transformer<br>50A, 100A, 150A, 400A , 800A,<br>5000A(only for Rogowski type) |   |            |   |            |   |            |                                   |            |            |            |

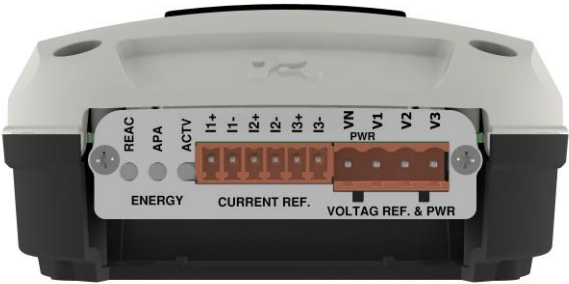

### Voltage reference

|   |   |
|---|---|
| Range   | 110-220/240VAC (CAT III – 400V)                                       |
| Frequency   | 50-60Hz   |
| Electrical isolation  | 2.5Kv @ 60second  |
| Power supply requirement  | 0.1 VA per phase  |
| Accuracy  | Class 0.2 (+/-0.2%)   |
|  | Recommend use electrical protection before to connect this reference. |

### Current reference

Accuracy Class : Class 0.2 (+/-0.2%)

This device can use current transformer (CT) of two types 0.3Vac and flexible type (Rogowski), depending on each type, it has different type of accuracy.

| Types                        | Range of measurement | Output type | Accuracy              |
|------------------------------|----------------------|-------------|-----------------------|
| CT 50 A                      | 1....50 A            | 0.33VAC     | +/-1% (5%....100% In) |
| CT 100 A                     | 1....100 A           | 0.33VAC     | +/-1% (5%....100% In) |
| CT 150 A                     | 1....150 A           | 0.33VAC     | +/-1% (5%....100% In) |
| CT 400 A                     | 1....400 A           | 0.33VAC     | +/-1% (5%....100% In) |
| CT 800 A                     | 1....800 A           | 0.33VAC     | +/-1% (5%....100% In) |
| Flexible 5000 A (7cm Ø) (*)  | 10....5000 A         | Rogowski    | +/-1% (centered)      |
| Flexible 5000 A (12cm Ø) (*) | 10....5000 A         | Rogowski    | +/-1% (centered)      |
| Flexible 5000 A (20cm Ø) (*) | 10....5000 A         | Rogowski    | +/-1% (centered)      |

(\*)Must be use model flexible SenNet Rogowski to certificate Class 1. (Factory Calibrated)

#### Accuracy on current measurement

|                                       |         |                    |
|---------------------------------------|---------|--------------------|
| Easy Meter + SenNet CT 0.33Vac        | Class 1 |                    |
| Easy Meter + Flexible SenNet Rogowski | Class 1 | Factory Calibrated |

#### Electrical isolation

|                          |                         |
|--------------------------|-------------------------|
| SenNet CT 0.33Vac        | 2.5KV / 0.5mA / 3second |
| Flexible SenNet Rogowski | 600V CAT IV             |

#### Holding case

|                            |                   |
|----------------------------|-------------------|
| <b>IP Grade</b>            | IP-60             |
| <b>Temperature details</b> |                   |
| Working temperature        | -20°C...+70°C     |
| Store temperature          | -20°C...+75°C     |
| <b>Holding</b>             |                   |
| Dimensions                 | 119 x 111 x 53 mm |
| Type mount                 | wall or rail din  |
| Plastic Material           | ABS – V0          |

