

## SenNet IoT Easy Meter

### Energy Meter 3PH CT/Rogowski & Gateway for remote nodes

#### General description

SenNet IoT Easy Meter is a device that monitors 3PH energy electrical circuits, with two options of current transformer, 0.33Vac or flexible Rogowski. This device has the possibility to create a local RF Network with remote nodes with different features: Pulse Counter / Temperature-Humidity / CO<sub>2</sub> / Particulate Matter etc., and send all this information in one Sigfox message.

The configuration of all these features is possible by two ways:


- Micro-usb connection and console/terminal.
- Trough APP SenNet NFC (IOS or Android).

The end-user can select what kind of energy data and remote device wants to upload to the cloud, must select the type of message (see in the next section).

#### Power supply

The device uses voltage reference as the power supply (100-265VAC @ 50HZ), it's important just to use Neutral Line Vn and V1. There is an internal fuse to protect the device against surge damages.

Voltage power supply	100-265VAC @ 50HZ
Power	<1W

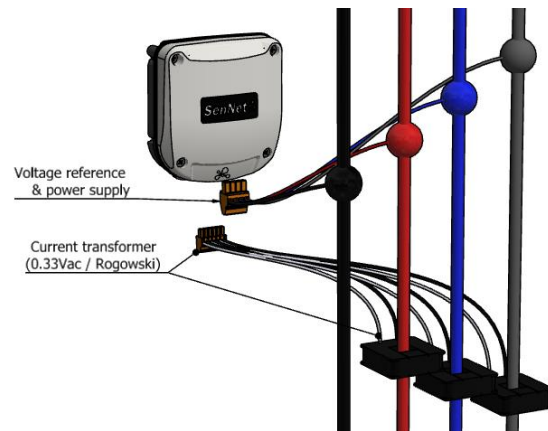

#### Basic steps to install:


1. Set the type Current Transformer (CT-0.33Vac or Flexible-Rogowski) and value (50A, 100A, 150A, 400A, 800A, 5000A).
2. Set the type of message to use and take note to parse this data on your preferred platform.
3. Take note ID / PAC to sign the device on Sigfox Cloud.
4. Connect voltage reference (feed internal power supply) and current reference.

#### Additional steps:

- Define and install remotes devices that will join to Local Network
- Set an univoque ID at each remote device



#### Sigfox connectivity



**Power Meter  
3 Phase Class 1  
(CT's 0.33v -Rogowski )**



**Local RF Network  
Remotes Nodes**

## Type Message

SenNet IoT Easy Meter is a powerful Energy Meter, the client must select what kind of data will be uploaded to the platform. For that reason, the devices have been defined by default several types of message what includes the main information from each electricity measurement.

The main interest always is the total Energy accumulated, if your interest is on another parameter you can contact with our technical department to ask for it.

Type message	Information	Details
1	<b>Active + Reactive Energy + Remote Node</b> -three phase measurement-	May send data from Remote Node
2	<b>Active Energy Easy Meter + Active Energy Remote Node</b> -three phase measurement-	May send data from Remote Node
3	<b>Active Energy PH1 + Active Energy PH2 + Active Energy PH3</b> -single or threephase measurement-	
4	<b>Active Energy PH1 + Active Energy PH2 + Remote Node Data</b> -single or threephase measurement-	May send data from Remote Node
5..15	<b>To defined -future use-</b>	

A common point in all types of messages is the head (defined with 2 bytes) that includes important information embedded in the message (type device/type message/errors.. etc). In the next table are defined the mean of these info-fields.

Info (bytes)															
Byte	Byte 1						Byte 2								
	<u>Type Master Device</u>			<u>Type Message</u>			<u>Feedback Error</u>			<u>Type Remote Nodes</u>			<u>ID Remote Nodes</u>		
	01 - Easy Meter 02 - PC LongNet 03 - TH LongNet 04 - CO2 LongNet 05 - PM LongNet 06 – GW Modbus LN 07 – Not defined			type 0 (info) type 1 type 2 type 3 type 4 type 5 (not defined) type 6 (not defined) .. type 15 (not defined)			Error receive downlink message  Overvoltage / SAG / Internal meter error  Wrong reboot			0x00 – Info Remote 0x01 - PC LongNet 0x02 - TH LongNet 0x03 - CO2 LongNet 0x04 - PM LongNet 0x05 – GW Modbus LN 0x06 – Analog Input 0x07 – Not defined			No Remote = 000  Remote ID = 010 <sub>h</sub> = 02 <sub>d</sub> = 011 <sub>h</sub> = 03 <sub>d</sub> = 100 <sub>h</sub> = 04 <sub>d</sub> = 101 <sub>h</sub> = 05 <sub>d</sub> = 110 <sub>h</sub> = 06 <sub>d</sub> = 111 <sub>h</sub> = 07 <sub>d</sub>  (6 remotes nodes)		
Bit	7	6	5	4	3	2				1	7	6	5	4	3
	Byte1 Bit 7-6-5			Byte1 Bit 4-3-2-1			Byte1 Bit 0	Byte2 Bit 0-1		Byte2 Bit 2-4			Byte2 Bit 5-7		

Type 1 : Active + Reactive Energy + Remote Node												
Field	Info		Active Energy PH1+PH2+PH3				Reactive Energy PH1+PH2+PH3				Data from Remote node	
Byte	1	2	3	4	5	6	7	8	9	10	11	12
			float 32 bits value				float 32 bits value				Depending on Remote node type	

Type 2: Active Energy Easy Meter + Active Energy Remote Node												
Field	Info		Active Energy Consum. PH1+PH2+PH3				Active Energy Generation PH1+PH2+PH3 Remote Dev.				Data from Remote Node	
			Active Energy				Active Energy					
Byte	1	2	3	4	5	6	7	8	9	10	11	12
			float 32 bits value				float 32 bits value				Depending on Remote node type	

Type 3: Active Energy PH1 + Active Energy PH2 + Active Energy PH3											
Field	Info		Active Energy PH1			Active Energy PH2			Active Energy PH3		
Byte	1	2	3	4	5	6	7	8	9	10	11
			Max. 16Mwh resolution=1kwh			Max. 16Mwh resolution=1kwh			Max. 16Mwh resolution=1kwh		

Type 4: Active Energy PH1 + Active Energy PH2 + Remote Node Data												
Field	Info		Active Energy PH1				Active Energy PH2				Data from Remote Node	
Byte	1	2	3	4	5	6	7	8	9	10	11	12
			float 32 bits value				float 32 bits value				Depending on Remote node type	

#### Remote Node Data:


Type Remote Node		
Pulse Counter LongNet	2 bytes (integer type) Max. value 65535.	
TH-LongNet	1 byte temperature [-10°C...60°C]	1 byte humidity [0-100%]
CO2 LongNet	2 bytes (integer type)	

#### Downlink Message

It's possible to set the device in the cloud without interacting with it locally, defining this type of downlink message on the sigfox backend or in your platform. That method is optional but it's not necessary.

Byte	1	2 - 5	6	7	8
Field	SenNet Code (1byte)	Set time (4bytes)	Type uplink Message (1 byte)	Debug 1 (1 byte) Only for internal use	Debug 2 (1 byte) Only for internal use
Value	0xAB	{Time-Epox}	01 02 03 04 -	00 disable 01 version HW/SW 02 – future use	00 disable 01 debug meter 02 – future use

An example for sending a message type 1 with 2 remotes devices defined in the local network. The data of each remote device is sent alternatively. To parse the data from Remote node the client must use the **Info** field (table page-2).

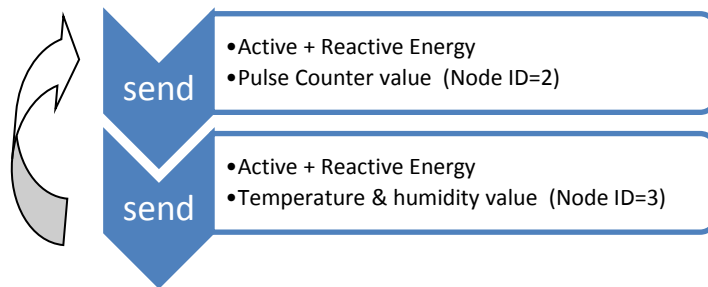

SenNet Easy Meter works as Local Network coordinator and gateway for Remotes Nodes



Easy Meter  
Coordinator ID=1





Pulse Counter  
Node ID=2







Temperature & Humidity  
Node ID=3

Power Meter features


These devices include advanced technology for metering power electricity loads, using a current reference and voltage reference. It's possible to use this device like a 3 single-phase meter or 1 three-phase meter, it depends on the client's goal to monitor.

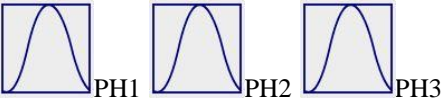Type of load to monitorized	
3 single-phase loads independent	
1 three-phase load	

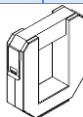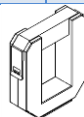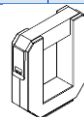Led output pulse	Current Reference						Voltage Reference & Power Supply			
	I1+ (1)	I1- (2)	I2+ (3)	I2- (4)	I3+ (5)	I3- (6)	Vn (19)	V1 (20)	V2 (21)	V3 (22)
Reactive Power Aparent Power Active Power 1 pulse/seg = 1kw	 PH1	 PH2	 PH3	Type CT current transformer (CT – 0.33vac) 50A, 100A, 150A, 400A , 800A, (Rogowski type) 5000A			Power Supply 100-265VAC @ 50HZ			

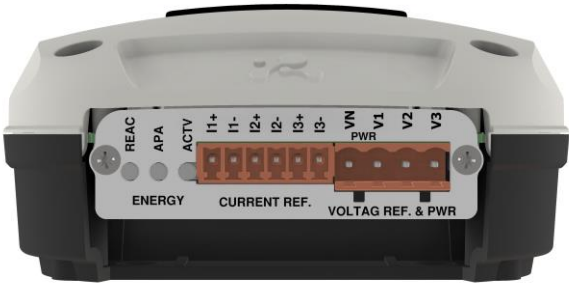

### Voltage reference

Range	110-220/240VAC (CAT III – 400V)
Frequency	50-60Hz
Electrical isolation	2.5Kv @ 60second
Power supply requirement	0.1 VA per phase
Accuracy	Class 0.2 (+/-0.2%)
	Recommend using electrical protection before connecting this reference.

### Current reference

This device can use current transformers (CT) of two types 0.33Vac and flexible type (Rogowski), depending on each type has a different type of accuracy.

Types	Range of measurement	Output type	Accuracy
CT 50 A	1....50 A	0.33VAC	+/-1% (5%....100% In)
CT 100 A	1....100 A	0.33VAC	+/-1% (5%....100% In)
CT 150 A	1....150 A	0.33VAC	+/-1% (5%....100% In)
CT 400 A	1....400 A	0.33VAC	+/-1% (5%....100% In)
CT 800 A	1....800 A	0.33VAC	+/-1% (5%....100% In)
Flexible 5000 A (7cm Ø) (*)	10....5000 A	Rogowski	+/-1% (centered)
Flexible 5000 A (12cm Ø) (*)	10....5000 A	Rogowski	+/-1% (centered)
Flexible 5000 A (20cm Ø) (*)	10....5000 A	Rogowski	+/-1% (centered)

(\*)Must use flexible SenNet Rogowski model to certificate Class 1. (Factory Calibrated)

#### Accuracy on current measurement

Easy Meter + SenNet CT 0.33Vac	Class 1	(Class 0.5 under requirement)
Easy Meter + Flexible SenNet Rogowski	Class 1	Factory Calibrated

#### Electrical isolation

SenNet CT 0.33Vac	2.5KV / 0.5mA / 3second
Flexible SenNet Rogowski	600V CAT IV

### Holding case

IP Grade	IP-60
Temperature details	
Working temperature	-20°C...+70°C
Store temperature	-20°C...+75°C
Holding	
Dimensions	119 x 111 x 53 mm
Type mount	Wall or din rail
Plastic Material	ABS – V0